

HP Photosmart D7300 series



使用手册

User Guide



021 672 280	الجزائر
Argentina (Buenos Aires)	54-11-4708-1600
Argentina	0-800-555-5000
Australia	www.hp.com/support/australia
Österreich	www.hp.com/support
17212049	البحرين
België	www.hp.com/support
Belgique	www.hp.com/support
Brasil (Sao Paulo)	55-11-4004-7751
Brasil	0-800-709-7751
Canada (Mississauga Area)	(905) 206-4663
Canada	1-800-474-6836
Central America & The Caribbean	www.hp.com/support
Chile	800-360-999
中国	www.hp.com/support/china
Colombia (Bogotá)	571-606-9191
Colombia	01-8000-51-4746-8368
Costa Rica	0-800-011-1046
Česká republika	810 222 222
Danmark	www.hp.com/support
Ecuador (Andinatel)	1-999-119 800-711-2884
Ecuador (Pacifitel)	1-800-225-528 800-711-2884
(02) 6910602	مصر
El Salvador	800-6160
España	www.hp.com/support
France	www.hp.com/support
Deutschland	www.hp.com/support
Ελλάδα (από το εξωτερικό)	+ 30 210 6073603
Ελλάδα (εντός Ελλάδας)	801 11 75400
Ελλάδα (από Κύπρο)	800 9 2654
Guatemala	1-800-711-2884
香港特別行政區	www.hp.com/support/hongkong
Magyarország	06 40 200 629
India	www.hp.com/support/india
Indonesia	www.hp.com/support
+971 4 224 9189	العراق
+971 4 224 9189	الكويت
+971 4 224 9189	لبنان
+971 4 224 9189	قطر
+971 4 224 9189	اليمن
Ireland	www.hp.com/support
1-700-503-048	ישראל
Italia	www.hp.com/support
Jamaica	1-800-711-2884

日本	www.hp.com/support/Japan
0800 222 47	الأردن
한국	www.hp.com/support/korea
Luxembourg	www.hp.com/support
Malaysia	www.hp.com/support
Mauritius	(262) 262 210 404
México (Ciudad de México)	55-5258-9922
México	01-800-472-68368
081 005 010	المغرب
Nederland	www.hp.com/support
New Zealand	www.hp.com/support
Nigeria	1 3204 999
Norge	www.hp.com/support
24791773	عمان
Panamá	1-800-711-2884
Paraguay	009 800 54 1 0006
Perú	0-800-10111
Philippines	www.hp.com/support
Polska	22 5666 000
Portugal	www.hp.com/support
Puerto Rico	1-877-232-0589
República Dominicana	1-800-711-2884
Reunion	0820 890 323
România	0801 033 390
Россия (Москва)	095 777 3284
Россия (Санкт-Петербург)	812 332 4240
800 897 1415	السعودية
Singapore	www.hp.com/support/singapore
Slovensko	0850 111 256
South Africa (international)	+ 27 11 2589301
South Africa (RSA)	086 0001030
Rest of West Africa	+ 351 213 17 63 80
Suomi	www.hp.com/support
Sverige	www.hp.com/support
Switzerland	www.hp.com/support
臺灣	www.hp.com/support/taiwan
ไทย	www.hp.com/support
071 891 391	تونس
Trinidad & Tobago	1-800-711-2884
Türkiye	+90 212 444 71 71
Україна	(044) 230-51-06
600 54 47 47	الإمارات العربية المتحدة
United Kingdom	www.hp.com/support
United States	www.hp.com/support
Uruguay	0004-054-177
Venezuela (Caracas)	58-212-278-8666
Venezuela	0-800-474-68368
Việt Nam	www.hp.com/support

HP Photosmart D7300 series 使用手册

简体中文



版权和商标

© 2006 Hewlett-Packard Development Company, L.P.

本文档所含信息如有更改，恕不另行通知。未经事先书面许可，严禁复制、改编或翻译本手册，除非版权法许可。

Hewlett-Packard 公司通告

本文档包含的信息如有更改，恕不另行通知。

保留所有权利。除版权法允许之外，未经惠普公司事先书面许可，不得对本手册进行复制、改编或翻译。

HP 产品与服务的唯一担保已在这些产品与服务随附的书面担保声明中阐明。此处的任何信息将不会构成额外担保的制定。HP 将不会对本文包含的技术或编辑错误或者疏忽负责。

商标

HP、HP 徽标和 Photosmart 为 Hewlett-Packard Development Company, L.P. 所有。

Secure Digital 徽标是 SD Association 的商标。

Microsoft 和 Windows 是 Microsoft Corporation 的注册商标。

CompactFlash、CF 和 CF 徽标是 CompactFlash Association (CFA) 的商标。

Memory Stick、Memory Stick Duo、Memory Stick PRO 和 Memory Stick PRO Duo 是 Sony Corporation 的商标或注册商标。

MultiMediaCard 是德国 Infineon Technologies AG 的商标并许可 MMCA (MultiMediaCard Association) 使用。

Microdrive 是 Hitachi Global Storage Technologies 的商标。

xD-Picture Card 是 Fuji Photo Film Co., Ltd.、Toshiba Corporation 和 Olympus Optical Co., Ltd. 的商标。

Mac、Mac 徽标和 Macintosh 是 Apple Computer, Inc. 的注册商标。

iPod 是 Apple Computer, Inc. 的商标。

Bluetooth 是其所有者所拥有的商标，惠普公司在获得其许可下使用。

PictBridge 和 PictBridge 徽标是 Camera & Imaging Products Association (CIPA) 的商标。

其他品牌及其产品均为其各自拥有者的商标或注册商标。

标准型号

为了便于识别，为产品分配了“标准型号”。本产品的标准型号为 VCVRA-0603。请不要将此标准型号与产品的销售名称（HP Photosmart D7300 series 等）或产品编号（Q7057A 等）相混淆。

有关规范声明的完整列表，请参阅屏幕帮助。

能耗 - Energy Star®

Hewlett-Packard 公司致力于提供高质量的环保产品。有关 HP 环保产品服务计划的信息，请参阅屏幕帮助。

目录

1 欢迎	5
特殊功能	5
访问 HP Photosmart 打印机的屏幕帮助	6
打印机部件	6
可选附件	9
打印机菜单	10
打印	10
保存	10
共享	11
设置	11
2 准备打印	13
装入纸张	13
选择正确的纸张	13
放入纸张	13
插入墨盒	15
购买替换墨盒	15
墨盒提示	16
插入或更换墨盒	16
插入存储卡	18
支持的文件格式	18
插入存储卡	19
存储卡类型	19
取出存储卡	20
3 在不使用计算机的情况下打印照片	21
打印照片	21
从存储卡打印照片	21
从数码相机打印照片	23
从 iPod 打印照片	24
照片布局	24
提高照片质量	26
使用创意	27
4 连接	29
连接到其他设备	29
将照片保存到计算机	31
通过 HP Photosmart 共享连接	31
5 从计算机打印	33
使用打印机软件中的创意选项	33
HP Photosmart Premier	33
HP Photosmart Essential	34
HP Photosmart 共享	34
设置打印首选项	34

	打开电子版帮助.....	35
	HP Real Life 技术功能.....	35
6	保养与维护	37
	清洁和维护打印机.....	37
	清洁打印机外部.....	37
	校准打印机.....	37
	打印样本页.....	37
	自动清洁打印头.....	38
	手动清洁墨盒触点.....	38
	打印自检报告.....	39
	更新软件.....	40
	打印机与墨盒的存放与运输.....	41
	存放和运输打印机.....	41
	存放和运输墨盒.....	41
	维护照片纸质量.....	41
7	疑难排解	43
	打印机硬件问题.....	43
	打印问题.....	44
	错误信息.....	47
	纸张错误.....	48
	墨盒错误.....	49
	存储卡错误.....	52
	计算机和连接打印错误.....	55
8	HP 支持	57
	支持程序.....	57
	HP 电话支持.....	57
	电话支持期.....	57
	致电.....	57
	电话支持期过后.....	57
	额外保修选项.....	58
A	技术规格	59
	系统要求.....	59
	打印机技术规格.....	59
B	HP 保修条款	63
	索引.....	65

1 欢迎

感谢您购买 HP Photosmart D7300 series 打印机！使用该新款照片打印机，您可以打印精美的照片、将照片保存到计算机并创建有趣简捷的项目（使用或不使用计算机均可）。

本手册主要介绍如何在不连接计算机的情况下进行打印。要了解如何从计算机进行打印，请安装打印机软件并查看电子版帮助。有关将计算机与打印机配合使用的概述，请参阅[从计算机打印](#)。有关安装软件的信息，请参阅“快速入门”手册。

家庭用户可以了解如何进行以下操作：

- 从打印机或计算机打印无边界照片
- 选择照片布局
- 将彩色照片转换为黑白照片或应用彩色效果（例如，棕褐色或古董色）

本打印机随附下列文档：

- **快速入门手册：**“快速入门手册”介绍了如何安装打印机和打印机软件并打印首张照片。
- **使用手册：**“使用手册”是您正在阅读的这本手册。该手册说明了此款打印机的基本功能，以及如何在连接计算机的情况下使用打印机，并包含硬件疑难排解信息。
- **屏幕帮助：**HP Photosmart 打印机屏幕帮助说明如何与计算机一起使用打印机，并包含软件疑难排解信息。

特殊功能

新的功能和介质让您比以前更轻松的制作高质量的照片：


- 使用新的 HP 高级照片纸（在有些国家/地区也称为 HP 照片纸）时，打印机中的专用传感器会检测纸张背面的标记，然后自动选择最佳的打印设置。有关新纸张的详细信息，请参阅[选择正确的纸张](#)。
- HP Real Life 技术使您轻而易举地获得更佳的照片。用于增强阴影中细节的自动消除红眼和适应性照明功能，只是它所包含的众多技术中的一部分。您可以从控制面板和打印机软件浏览许多编辑和增强选项。要从控制面板访问这些功能，请参阅[提高照片质量](#)。要了解如何在软件中查找这些功能，请参阅 [HP Real Life 技术功能](#)。

访问 HP Photosmart 打印机的屏幕帮助

在计算机上安装了 HP Photosmart 打印机软件后，就可以查看 HP Photosmart 打印机屏幕帮助：


- **Windows PC:** 在“开始”菜单中，选择“程序”（在 Windows XP 中，选择“所有程序”）> “HP” > “HP Photosmart D7300 series” > “Photosmart 帮助”。
- **Macintosh:** 在 Finder 中选择“帮助” > “Mac 帮助”，然后选择“帮助中心” > “HP Photosmart Premier 帮助” > “HP Photosmart 打印机帮助”。

打印机部件

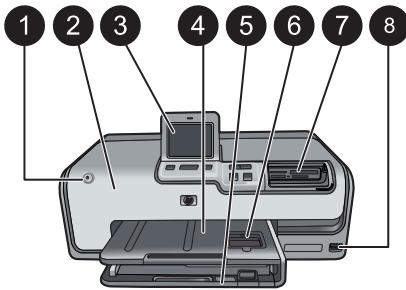


打印机前部

1	开/关机： 按此按钮可打开打印机。
2	顶盖： 提起该顶盖可检修墨盒和清除卡纸。要提起顶盖，请握住 HP 徽标下面的顶盖然后向上拉。
3	触摸屏显示器： 此屏幕可用于查看和打印照片、菜单和信息。
4	出纸盒： 此纸盒用于接住打印件。抬起此纸盒即可使用照片纸盒。
5	主纸盒： 将此纸盒拉出以放入纸张、投影胶片、信封或其他介质，打印面应朝下。
6	照片纸盒： 抬起出纸盒，即可在照片纸盒中装入不超过 10 x 15 厘米（4 x 6 英寸）的小型纸张，打印面应朝下。纸张可以带裁边或不带裁边。
7	存储卡插槽： 在这里插入存储卡。有关支持的存储卡列表，请参阅 插入存储卡 。
8	相机端口： 连接 PictBridge™ 数码相机、可选的 HP Bluetooth® 无线打印机适配器或 iPod。

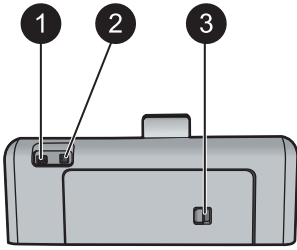


打印机后部

- | | |
|---|--|
| 1 | 电源线接口： 使用此端口连接打印机附带的电源线。 |
| 2 | USB 端口： 使用此端口将打印机连接到计算机。 |
| 3 | 后检修门： 取下此门可清除卡纸，或安装可选的 HP 自动双面打印附件。请参阅 可选附件 。 |

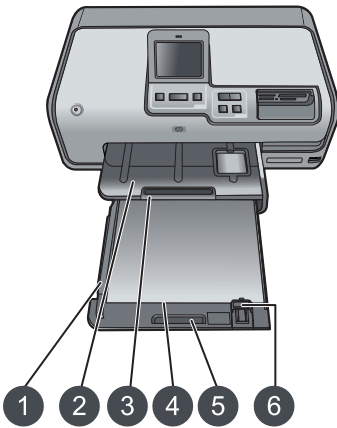


主纸盒和出纸盒

- | | |
|---|---|
| 1 | 纸张宽度导轨： 调整此导轨使其紧靠主纸盒中纸张的边缘。 |
| 2 | 出纸盒： 此纸盒用于接住打印件。抬起此纸盒即可使用照片纸盒。 |
| 3 | 出纸盒延长板： 将其向外拉出展开出纸盒以接住打印件。 |
| 4 | 主纸盒： 将此纸盒拉出以放入普通纸、投影胶片、信封或其他介质，打印面应朝下。 |
| 5 | 主纸盒手柄： 将其向外拉出以展开主纸盒。 |
| 6 | 纸张长度导轨： 调整此导轨，使其紧靠主纸盒中纸张的末端。 |

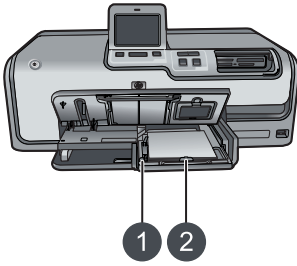


照片纸盒

- | | |
|---|-------------------------------------|
| 1 | 纸张宽度导轨： 调整此导轨使其紧靠照片纸盒中纸张的边缘。 |
| 2 | 纸张长度导板： 调整此导板使其紧靠照片纸盒中纸张的末端。 |

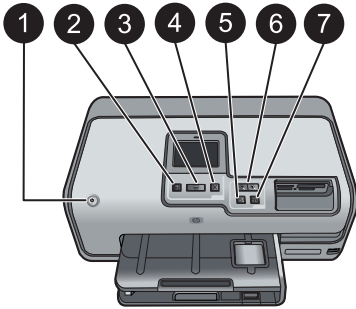

控制面板

- | | |
|---|---|
| 1 | 开/关机： 打开打印机电源或将其置于省电模式。 |
| 2 | 打印预览： 预览选定的照片。 |
| 3 | 打印： 从插入的存储卡，或从连接到前部相机端口的相机打印选定的照片。 |
| 4 | 取消： 取消选择照片、退出菜单或停止请求的操作。 |
| 5 | 旋转： 旋转照片或裁剪框。 |
| 6 | 缩放 (+)(-)： 放大或缩小照片或裁剪框。在正常放大的情况下查看照片时，您也可以按下“缩放”(-)一次查看四张照片。 |
| 7 | 自动更正： 自动增强所有打印的照片并应用亮度、对比度及焦距调节功能和红眼消除功能。 |

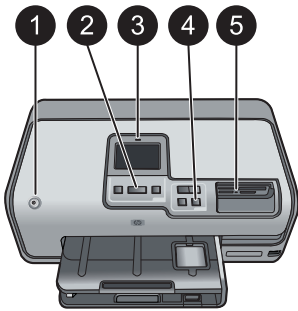

指示灯



1	“开/关机”指示灯： 如果打印机打开，该指示灯持续显示为蓝色，否则该指示灯熄灭。
2	“打印”指示灯： 打印机电源打开和准备好打印时持续显示为蓝色，打印机在打印或自身维护时呈蓝色闪烁。
3	警示灯： 出现错误时闪烁。请查看触摸屏显示器以获取错误的相关说明或信息。有关详细信息，请参阅“ 警示灯 ”亮起。
4	“自动更正”指示灯： 自动更正功能打开时持续显示为蓝色。
5	存储卡指示灯： 插入存储卡后，该指示灯持续显示为蓝色；打印机访问存储卡时，该指示灯闪烁；如果未插入存储卡或插入多个存储卡，则该指示灯熄灭。出现需要用户进行相应操作的问题时亮起。请查看打印机屏幕以获取相关说明。

可选附件

有几种可选附件可增加打印机的便携性，以便您随时随地进行打印。这些附件的外观可能与手册中的图示有所不同。

要购买耗材，请访问：

- www.hpshopping.com（美国）
- www.hp.com/go/supplies（欧洲）
- www.hp.com/jp/supply_inkjet（日本）
- www.hp.com/paper（亚太地区）

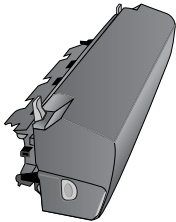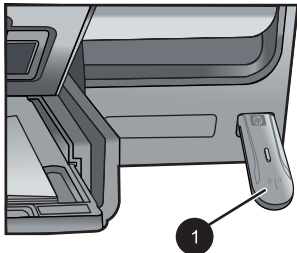附件名称	说明		
 <p data-bbox="240 413 477 440">HP 自动双面打印附件</p>	<p data-bbox="706 170 1139 326">此附件可自动翻转每一页以进行双面打印。因此，可以节省成本（双面打印可减少纸张消耗）和时间（无需取出纸张并重新放回在背面打印），另外它还使大文档更易于管理。</p> <p data-bbox="706 336 1131 364">并非在所有国家/地区都提供该附件。</p>		
 <p data-bbox="240 743 609 770">HP Bluetooth® 无线打印机适配器</p> <table border="1" data-bbox="240 782 685 854"> <tr> <td data-bbox="240 782 287 854">1</td> <td data-bbox="287 782 685 854">将 Bluetooth 适配器插入前部相机端口</td> </tr> </table>	1	将 Bluetooth 适配器插入前部相机端口	<p data-bbox="706 465 1151 621">HP Bluetooth® 无线打印机适配器插入打印机前部的相机端口。通过适配器，您可以使用 Bluetooth 无线技术，从许多启用 Bluetooth 的设备打印，包括数码相机、可拍照手机和 PDA。</p> <p data-bbox="706 631 1139 725">有关使用这些附件进行打印的详细信息，请访问 www.hp.com/go/bluetooth。</p>
1	将 Bluetooth 适配器插入前部相机端口		

打印机菜单

触摸位于左上角的首页图标以进入首页屏幕。您可以从首页屏幕访问所有功能以及设置菜单。

打印

“向导”：按照向导说明来完成打印过程。

“4×6”：用于打印 4×6 英寸（10 × 15 厘米）的照片。

“放大”：使用放大功能打印不同尺寸的照片。

“所有”：选择此项可以打印插入打印机的存储卡上的所有照片。

“其他项目”：使用其他项目可以打印全景照片、HP CD/DVD 盘面、皮夹打印件和护照照片。

- “全景打印件”：选择此项可以“打开”或“关闭”（默认）全景打印。选择“打开”可以使用 3:1 的宽高比打印所有选定的照片；在打印前放入 10 x 30 厘米（4 x 12 英寸）的纸张。
- “HP CD/DVD 盘面”：选择此项可以为 CD/DVD 打印标签。
- “皮夹打印件”：使用此项可以打印皮夹大小的照片。
- “护照照片”：选择此项可以打印护照照片。

保存

触摸“保存”按钮将选定图像保存到已经连接的 PC。

共享

使用“共享”按钮通过 HP Photosmart 共享选择并共享照片。

设置

- **工具：**使用下列工具可以显示墨水标尺、调整打印质量、打印样本页、打印测试页以及清洁和校准墨盒。
 - 显示墨水标尺：用于在首页屏幕启用供墨标尺。
 - “打印质量”：选择“最佳”（默认）或“正常”的打印质量。
 - “打印样本页”：选择此项可以打印样本页，它有助于检查打印机的打印质量。此功能并非在所有打印机型号上都可以使用。
 - “打印测试页”：选择此项可以打印含有打印机相关信息的测试页，这有助于问题的疑难排解。
 - “清洁打印头”：当打印件上出现白色线条或条纹时，选择此项可以清洁打印头。完成清洁后，打印机将打印自检报告。如果报告显示打印质量问题，可以选择重新清洁打印头。
 - “校准打印机”：当打印件上出现白色线条或条纹时，选择此项可以校准打印机。
- **Bluetooth**
 - “设备地址”：有些具有 Bluetooth 无线技术的设备，需要您输入它们要寻找的设备地址。此菜单选项会显示设备地址。
 - “设备名称”：您可以选择一个打印机名称，以便在其他具有 Bluetooth 无线技术的设备寻找打印机时显示。
 - “密钥”：当打印机的 Bluetooth “安全等级”设置为“高”时，您必须输入密钥才可以让其他 Bluetooth 设备使用该打印机。默认密钥为 0000。
 - “可见性”：选择“全部可见”（默认）或“不可见”。将“可见性”设置为“不可见”时，只有那些知道打印机地址的设备才可以在该打印机上打印。
 - “安全等级”：选择“低”（默认）或“高”。如果设置为“低”，则具备 Bluetooth 无线技术的其他设备用户无需输入打印机密钥。设置为“高”则需要具备 Bluetooth 无线技术的其他设备用户输入打印机密钥。
 - “重置 Bluetooth 选项”：选择此项可以将 Bluetooth 菜单中的所有项目重置为默认值。
- **“帮助菜单”：**使用帮助菜单获取使用打印机的相关说明。
 - “墨盒”：选择此项可以查看如何安装墨盒的动画。
 - “为主纸盒放入纸张”：选择此项可以阅读有关为主纸盒放入纸张的说明。
 - “为照片纸盒放入纸张”：选择此项可以阅读有关为照片纸盒放入纸张的说明。

- “卡纸”：选择此项可以查看如何清除卡纸的动画。
- “相机连接”：选择此选项可以阅读有关如何将 PictBridge 相机连接到打印机的说明。
- “首选项”
 - 打印纸张尺寸：触摸“打印之前询问”可以在每次打印时选择纸张类型和尺寸（默认）。
 - “纸张类型”：触摸“自动”（默认），打印机将会在打印时自动检测纸张类型和尺寸。
 - “日期戳”：使用此项可以在打印出来的照片上添加日期和/或时间。
 - 颜色空间：选择一个颜色空间。自动选择的默认设置指定打印机使用 Adobe RGB 颜色空间（如果有）。如果没有 Adobe RGB，则打印机默认为 sRGB。
 - PictBridge 纸盒选择：用于选择通过 PictBridge 连接打印时的默认纸盒。
 - 音频效果：用于在触摸或按下某个按钮时发出声音信号。
 - “视频增强”：选择“打开”（默认）或“关闭”。选择“打开”时，从视频剪辑打印的照片的质量将会获得改进。
 - “恢复厂商默认设置”：除选择语言和选择国家/地区（在“首选项”菜单中的“语言”项下）以及 Bluetooth 设置（在打印机主菜单中的“Bluetooth”项下）外，恢复所有菜单项的厂商默认设置。此设置不影响 HP Instant Share 或网络默认设置。

2 准备打印

本节主要包含以下主题：

- [装入纸张](#)
- [插入墨盒](#)
- [插入存储卡](#)

装入纸张

了解如何为打印作业选择正确的纸张，以及如何将其放入进纸盒以备打印。

选择正确的纸张

使用 HP 高级照片纸。它专门用于打印机上的墨水，可以生成优美的照片。而其他照片纸的打印效果会不尽人意。

要获得可用的 HP 设计的照片纸列表，或是要购买耗材，请访问：

- www.hpshopping.com（美国）
- www.hp.com/eur/hpoptions（欧洲）
- www.hp.com/jp/supply_inkjet（日本）
- www.hp.com/paper（亚太地区）

打印机的默认设置为在 HP 高级照片纸上打印最佳质量的照片。如果用其他类型的纸张打印，请确保在打印机菜单中更改纸张类型。请参阅[打印机菜单](#)。



放入纸张

放入纸张提示：



- 打印面朝下放入纸张。
- 您可以在各种尺寸的纸张上（从 8 x 13 厘米（3 x 5 英寸）到 22 x 61 厘米（8.5 x 24 英寸））打印照片和文档。10 x 15 厘米（4 x 6 英寸）的照片纸可以带或不带裁边。
- 在放入纸张前，请拉出主纸盒并向外滑动纸张宽度导轨和长度导板为纸张留出空间。放入纸张后，调节导轨和导板使其紧靠纸张的边缘，同时使纸张保持平整。放入纸张后，将主纸盒完全推回到位。
- 在同一个纸盒中，一次只能装入同一类型和尺寸的纸张。
- 放入纸张后，展开出纸盒延长板以接住打印的纸张。

参考下表中的说明将常用尺寸的纸张放入打印机。

纸张类型	如何放入纸张	要放入纸张的纸盒
任何支持的图片或普通纸介质	<ol style="list-style-type: none">1. 展开主纸盒。2. 将纸张宽度导轨和长度导板滑至其最外侧。3. 打印面朝下放入纸张。检查纸叠高度不要超过纸张长度导板的顶部。	为主纸盒放入纸张

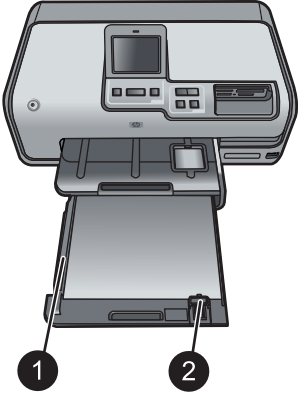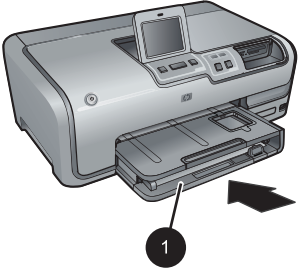纸张类型	如何放入纸张	要放入纸张的纸盒						
	<ol style="list-style-type: none"> 4. 向内调整纸张宽度导轨和长度导板直到其停在纸张的边缘。 5. 将主纸盒完全推入到位。 	 <p>放入纸张并向内调整导板</p> <table border="1" data-bbox="732 621 952 690"> <tr> <td>1</td> <td>纸张宽度导轨</td> </tr> <tr> <td>2</td> <td>纸张长度导板</td> </tr> </table>  <p>推入主纸盒</p> <table border="1" data-bbox="732 1060 1049 1095"> <tr> <td>1</td> <td>将主纸盒完全推入到位</td> </tr> </table>	1	纸张宽度导轨	2	纸张长度导板	1	将主纸盒完全推入到位
1	纸张宽度导轨							
2	纸张长度导板							
1	将主纸盒完全推入到位							
<p>不超过 10 x 15 厘米 (4 x 6 英寸) 带或不带裁边的照片纸、Hagaki 卡、A6 卡、L 尺寸的卡片</p>	<ol style="list-style-type: none"> 1. 抬起出纸盒并展开主纸盒。 2. 向外调节纸张宽度导轨和长度导板为纸张留出空间。 3. 将纸张打印面朝下放入照片纸盒中，最多 20 张。如果使用带裁边的纸张，请在放入纸张时让裁边朝外。 4. 向内调整纸张宽度导轨和长度导板直到其停在纸张的边缘。 	<p>为照片纸盒放入纸张</p>						

(续)

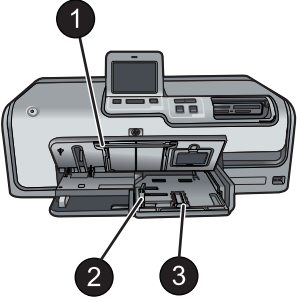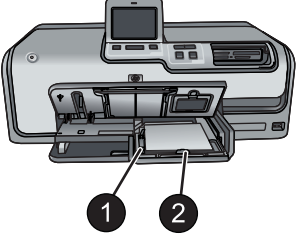纸张类型	如何放入纸张	要放入纸张的纸盒										
	5. 推入照片纸盒。 6. 合上出纸盒。	 <p>抬起出纸盒并向外调整导轨</p> <table border="1" data-bbox="710 526 933 630"><tr><td>1</td><td>出纸盒</td></tr><tr><td>2</td><td>纸张宽度导轨</td></tr><tr><td>3</td><td>纸张长度导轨</td></tr></table>  <p>放入纸张并向内调整导轨</p> <table border="1" data-bbox="710 968 933 1041"><tr><td>1</td><td>纸张宽度导轨</td></tr><tr><td>2</td><td>纸张长度导轨</td></tr></table>	1	出纸盒	2	纸张宽度导轨	3	纸张长度导轨	1	纸张宽度导轨	2	纸张长度导轨
1	出纸盒											
2	纸张宽度导轨											
3	纸张长度导轨											
1	纸张宽度导轨											
2	纸张长度导轨											

插入墨盒

首次安装和使用 HP Photosmart 打印机时，请确保安装打印机随附的墨盒。这些墨盒中的墨水经特别配方研制，可与打印头组件中的墨水混合。

购买替换墨盒

购买替换墨盒时，请参考本手册封底列出的墨盒编号。墨盒编号会因国家/地区而异。



注意 如果您已经使用过几次该打印机，并且已安装了 HP Photosmart 打印机软件，您也可以在打印机软件中找到墨盒编号。**Windows 用户：**右键单击 Windows 任务栏中的“HP Digital Imaging Monitor”图标，然后选择“启动/显示 HP 解决方案中心”。选择“设置”、“打印设置”，然后选择“打印机工具箱”。单击“估计墨水量”选项卡，然后单击“墨盒详细信息”。要订购墨盒，请单击“在线订购”。**Mac 用户：**在 Dock 中点按“HP Photosmart Premier”。从“设置”弹出式菜单中选择“维护打印机”。点按“启动实用程序”，然后从弹出式菜单中选择“耗材状态”。

墨盒提示


HP Vivera 墨水可以保证栩栩如生的照片质量以及出色的防褪色效果，让色彩更加持久！HP Vivera 墨水经特别配方研制，而且使用科学方法对质量、纯度和防褪色功能进行了测试。

为获得最佳打印质量，HP 建议在盒子上标记的安装期限之前安装所有零售墨盒。

为获得最佳打印效果，HP 建议只使用原装 HP 墨盒。原装 HP 墨盒是专门针对 HP 打印机进行设计和测试的，可帮助您随时轻松获得卓越的打印效果。



注意 HP 无法担保非 HP 墨水的质量和可靠性。由于使用非 HP 墨水导致的打印机故障或损坏不在保修范围内。

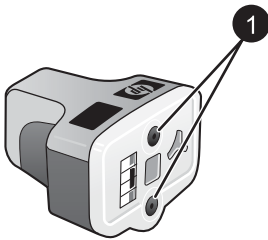

墨盒


- 1 请勿将物件插入这些孔中




小心 防止墨水流失或溢出：运输打印机过程中让墨盒停留在安装位置，并避免将使用过的墨盒放在打印机外太长时间。

插入或更换墨盒

1. 确保电源已打开，然后抬起顶盖。确保已从打印机内部取出所有包装材料。

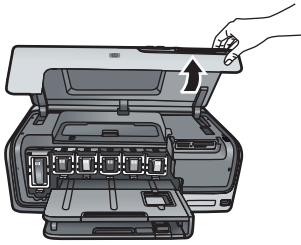


2. 按压墨盒插槽下方的灰色突块，释放打印机内部的灰色卡销，然后提起卡销。
墨盒区采用了颜色编码以便参照。抬起相应颜色下方的卡销以插入或更换墨盒。墨盒的颜色从左到右分别为黑色、黄色、浅青色、青色、浅品红色及品红色。

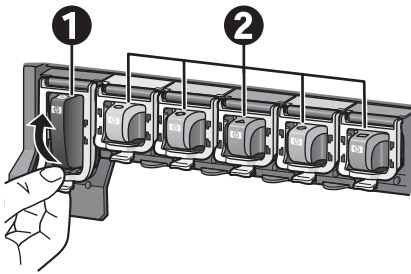

1	黑色墨盒的墨盒卡销
2	彩色墨盒区

3. 如果要更换墨盒，请将旧墨盒向外拉出其插槽。

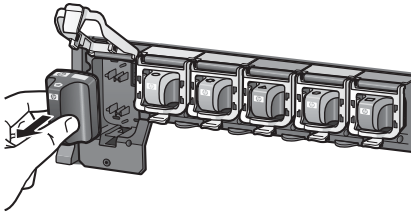


回收旧墨盒。在许多国家/地区都可以利用 HP 喷墨耗材回收计划，让您可以免费回收用过的墨盒。有关详细信息，请访问 www.hp.com/hpinfo/globalcitizenship/environment/recycle/inkjet.html。


4. 从包装盒中取出新墨盒，然后握住其手柄，将墨盒滑入空插槽中。确保插入墨盒的插槽上的图标形状和颜色与新墨盒上的一致。插入墨盒时，铜色触点应该朝向打印机。



注意 首次安装和使用打印机时，请确保安装打印机随附的墨盒。这些墨盒中的墨水经特别配方研制，可与打印头组件中的墨水混合。

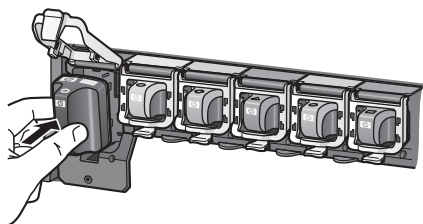

5. 向下按压灰色卡销直到它卡入到位。

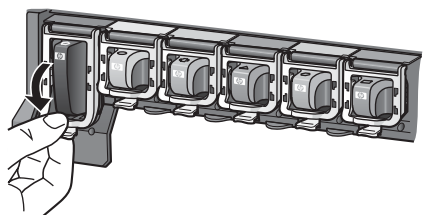

6. 对每个需要更换的墨盒重复步骤 2 至 5。
您必须安装所有六个墨盒。如果缺少一个墨盒，打印机将无法工作。
7. 合上顶盖。
当检测到墨水量过低时，触摸屏会显示六个墨滴图标，指示出每个墨盒的大概墨水量。



注意 如果您使用非 HP 墨水，该墨盒的图标位置将会显示为一个问号而不是墨滴。打印机无法检测到装有非 HP 墨水的墨盒中的剩余墨水量。

插入存储卡

使用数码相机拍完照片后，可以从相机中取出存储卡并将其插入打印机中，以查看并打印照片。打印机可读取下列类型的存储卡：CompactFlash™、Memory Sticks、Microdrive™、MultiMediaCard™、Secure Digital™，以及 xD-Picture Card™。




小心 使用任何其他类型的存储卡可能会损坏存储卡和打印机。

要了解详情将照片从数码相机传输到打印机的其他方法，请参见[连接到其他设备](#)。

支持的文件格式

打印机可直接从存储卡中识别和打印以下格式的文件：JPEG、未压缩 TIFF、Motion JPEG AVI、Motion-JPEG Quicktime 和 MPEG-1。如果数码相机将照片和视频剪辑保存为其他文件格式，请将这些文件保存到计算机并使用软件程序进行打印。有关详细信息，请参阅电子版帮助。

插入存储卡

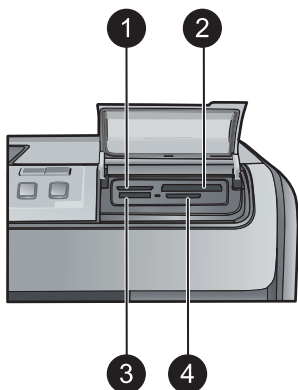

存储卡插槽

1	xD-Picture Card
2	CompactFlash I 型和 II 型、Microdrive
3	Memory Stick
4	Secure Digital、MultiMediaCard (MMC)

存储卡类型

在下表中找到您的存储卡，并按照说明将其插入打印机中。


准则：

- 一次只插入一张存储卡。
- 将存储卡轻轻推入打印机，直到推不动为止。存储卡插槽只允许卡的一部分插入打印机；请勿试图用力将存储卡全部插入打印机。
- 正确插入存储卡后，存储卡指示灯闪烁，然后保持绿色点亮。



小心 1 以其他任何方式插入存储卡都可能会损坏存储卡和打印机。

小心 2 当存储卡指示灯呈绿色闪烁时请勿抽出存储卡。有关详细信息，请参阅[取出存储卡](#)。

存储卡	如何插入存储卡
CompactFlash 	<ul style="list-style-type: none">● 正面标签朝上，如果标签上有箭头，箭头应指向打印机● 将具有金属针孔的一端先插入打印机

存储卡	如何插入存储卡
Memory Stick 	<ul style="list-style-type: none"> ● 斜角位于左侧 ● 金属触点朝下 ● 如果使用 Memory Stick Duo 或 Memory Stick PRO Duo 存储卡，请在将卡插入打印机前先连接存储卡随附的适配器
Microdrive 	<ul style="list-style-type: none"> ● 正面标签朝上，如果标签上有箭头，箭头应指向打印机 ● 将具有金属针孔的一端先插入打印机
MultiMediaCard 	<ul style="list-style-type: none"> ● 斜角位于右侧 ● 金属触点朝下
Secure Digital 	<ul style="list-style-type: none"> ● 斜角位于右侧 ● 金属触点朝下
xD-Picture Card 	<ul style="list-style-type: none"> ● 将存储卡呈弧形的一边向外 ● 金属触点朝下

取出存储卡

等存储卡指示灯停止闪烁后，轻轻将存储卡从打印机中抽出。



小心 请勿在存储卡指示灯闪烁时抽出存储卡。指示灯闪烁表示打印机正在读取存储卡。取出正被读取的存储卡可能会损坏打印机和存储卡，或破坏存储卡上的信息。

3 在不使用计算机的情况下打印照片

通过 HP Photosmart D7300 series 打印机，您可以不用打开计算机就进行照片的选取、增强和打印。使用“快速入门”中的说明安装好打印机后，您就可以在打印机中插入存储卡并使用打印机控制面板上的按钮打印照片。

您还可以直接从数码相机打印照片。有关详细信息，请参阅[从数码相机打印照片](#)。

打印照片

您可以无需计算机而通过下列各种方式打印照片：

- 将存有照片的存储卡插入打印机中的一个存储卡插槽中
- 将 PictBridge 数码相机连接到打印机前部的相机端口
- 安装可选的 HP Bluetooth® 无线打印机适配器，并利用 Bluetooth 无线技术从数码相机打印


从存储卡打印照片

您可以从插入打印机的存储卡打印照片，也可以使用打印机的控制面板查看、选择、增强并打印照片。您还可以从存储卡直接打印相机选定的照片 — 使用数码相机将照片标记为打印。

从存储卡打印方便快捷，而且不会消耗相机电池电量。

如果想要…	请执行下列步骤：
打印一张或多张照片 开始之前，确存储卡已插入打印机中，要使用的纸盒已装入正确的纸张。 检查照片纸盒指示灯以确认是否选择了正确的纸盒 — 主纸盒指示灯应该熄灭而照片纸盒指示灯则应该亮起。	<ol style="list-style-type: none">1. 触摸打印。2. 触摸 4×6 或放大以选择需要的照片尺寸。3. 触摸需要的纸张尺寸。4. 使用左右方向键滚动浏览现有的照片。5. 触摸需要的照片以选择一幅或多幅图像。 注意 按缩放 - 以在触摸屏显示器上同时查看 4 幅图像。6. 按打印以打印选定的照片。
打印存储卡上的所有照片 开始之前，确存储卡已插入打印机中，要使用的纸盒已放入正确的纸张。	<ol style="list-style-type: none">1. 触摸打印。2. 触摸全部。3. 触摸需要的纸张尺寸。4. 触摸需要的照片尺寸。
从存储卡打印相机选定的照片 使用数码相机选择要打印的照片时，相机会创建一个数字打印指令格式（DPOF）文	<ol style="list-style-type: none">1. 使用数码相机选择要打印的照片。有关详细信息，请参阅相机随附的文档。2. 如果用相机选择默认作为照片布局，触摸布局以选择照片布局。

(续)

如果想要…	请执行下列步骤:
<p>件, 标识选定的照片。打印机可以直接从存储卡读取 DPOF 1.0 和 1.1 文件。</p>	<p>如果用相机选择默认之外的其他照片布局, 则会使用相机选定的布局打印照片, 而不管打印机的设置如何。</p> <ol style="list-style-type: none"> 3. 放入需要的纸张。 4. 从数码相机中取出存储卡, 然后将其插入打印机。 5. 当打印机屏幕上显示信息询问是否要打印相机选定的照片时, 请触摸 。 <p>将开始打印用相机选择的照片。</p> <p>如果打印机无法找到或读取存储卡上相机选定的所有照片, 它将打印那些可以读取的照片。</p> <p>完成打印后, 打印机将删除 DPOF 文件并取消照片标记。</p>
<p>使用“向导”进行打印</p> <p>打印向导提供了有关对照片进行选择、尺寸调整、编辑和打印的详细说明。</p>	<ol style="list-style-type: none"> 1. 触摸打印。 2. 触摸向导。 3. 按照提示打印需要的照片。
<p>从视频剪辑打印照片</p> <p>您可以在触摸屏显示器上查看视频剪辑, 并选择打印单独的帧。</p> <p>当首次插入存有视频剪辑的存储卡时, 打印机将在屏幕上用视频剪辑的第一帧来表示该剪辑。</p> <p>打印机可识别以下列格式录制的视频剪辑:</p> <ul style="list-style-type: none"> ● Motion-JPEG AVI ● Motion-JPEG QuickTime ● MPEG-1 <p>打印机将忽略其他格式的视频剪辑。</p> <p>开始之前, 确存储卡已插入打印机中, 要使用的纸盒已放入正确的纸张。</p>	<ol style="list-style-type: none"> 1. 触摸打印。 2. 触摸 4×6 或放大以选择需要的照片尺寸。 3. 使用左右箭头滚动并选择现有的视频。 <p style="text-align: center;">注意 视频会在图像中央显示一个摄像机图标。</p> <ol style="list-style-type: none"> 4. 触摸播放图标以播放该视频。通过触摸前进和后退箭头, 您可以快进或倒退视频。 5. 要选择帧进行打印, 请触摸暂停图标以暂停视频。必须暂停视频以选择要打印的帧。 <p style="text-align: center;">注意 触摸前进或后退图标可以逐帧前进或倒退视频。</p> <ol style="list-style-type: none"> 6. 触摸需要的帧选定它以备打印。 7. 触摸打印以打印选定的帧。
<p>打印照片索引页</p> <p>照片索引页显示存储卡上多达 2000 张照片的缩略视图和</p>	<ol style="list-style-type: none"> 1. 触摸打印。 2. 触摸全部。 3. 选择尺寸为 8.5×11 的纸张。 4. 触摸索引页图标。

(续)

如果想要…	请执行下列步骤:
索引编号。使用普通纸代替照片纸可以降低成本。 照片索引可能有几页长。 开始之前，确存储卡已插入打印机中，要使用的纸盒已放入正确的纸张。	
停止打印	要停止正在进行的打印作业，请按 取消 。

从数码相机打印照片

您可以使用 USB 电缆将 PictBridge 数码相机直接连接到打印机的相机端口来打印照片。如果数码相机具备 Bluetooth 无线技术，则可以将可选的 HP Bluetooth® 无线打印机适配器插入打印机，然后以无线方式将照片发送到打印机。

从数码相机打印时，打印机将使用已在相机上选择的设置。有关详细信息，请参阅相机随附的文档。

要从下列设备打印照片…	请执行下列步骤
具有 Bluetooth 无线技术的数码相机 如果您的数码相机具有 Bluetooth 无线技术，则可以购买可选的 HP Bluetooth® 无线打印机适配器，并使用 Bluetooth 无线连接从相机打印。 注意 您还可从其他具有 Bluetooth 无线技术的设备（如 PDA 和可拍照手机）进行打印。有关详细信息，请参阅 连接到其他设备 和 Bluetooth 适配器随附的文档。	<ol style="list-style-type: none">1. 使用触摸屏显示器上的 Bluetooth 菜单为打印机设置 Bluetooth 选项。有关详细信息，请参阅 Bluetooth。2. 在打印机中放入纸张。3. 将 HP Bluetooth® 无线打印机适配器插入打印机前部的相机端口。 当适配器准备好接收数据时，适配器上的指示灯会闪烁。4. 按照数码相机随附文档中的说明将照片发送到打印机。
具有 PictBridge 技术的数码相机	<ol style="list-style-type: none">1. 打开 PictBridge 数码相机并选择要打印的照片。2. 放入纸张。3. 确保相机处于 PictBridge 模式，然后用相机随附的 USB 电缆将它连接到打印机前部的相机端口。

(续)

要从下列设备打印照片...	请执行下列步骤
	打印机识别出 PictBridge 相机后，就会自动打印选定的照片。

从 iPod 打印照片

如果您有可以存储照片的 iPod，则可以将 iPod 连接到打印机并打印照片。

开始前的准备

检查拷贝到 iPod 的图像是否为 JPEG 格式。



注意 iPod 在您所在的国家/地区可能不可用。

将照片导入 iPod


1. 使用 iPod 的专用 Belkin 媒体阅读器，将照片从存储卡拷贝到 iPod。
2. 在 iPod 菜单上选择“照片导入”，以确定 iPod 上是否有照片。照片将显示为“卷”。

从 iPod 打印照片





1. 用 iPod 随附的 USB 电缆将 iPod 连接到打印机前部的相机端口。在读取照片时，打印机屏幕将会显示“正在读取设备”几分钟。然后打印机屏幕上将显示照片。
2. 选择要打印的照片然后按**打印**。有关选择和打印照片的详细信息，请参阅[打印照片](#)。

照片布局


触摸打印机菜单中的**放大**，然后触摸需要的纸张尺寸为要打印的照片选择布局。

布局	纸张尺寸 (照片尺寸)
每页 1 张，无边界 	4 x 6 英寸 (4 x 6 英寸) 10 x 15 厘米 (10 x 15 厘米) 5 x 7 英寸 (5 x 7 英寸) 8.5 x 11 英寸 (8.5 x 11 英寸)
每页 1 张	3.5 x 5 英寸 (3.25 x 4.75 英寸) 4 x 6 英寸 (3.75 x 5.75 英寸) 10 x 15 厘米 (9.53 x 14.6 厘米) 5 x 7 英寸 (4.75 x 6.75 英寸) 8 x 10 英寸 (7.75 x 9.75 英寸) 8.5 x 11 英寸 (8 x 10 英寸)

(续)

布局	纸张尺寸 (照片尺寸)
	A6 (9.86 x 14.16 厘米) A4 (20 x 25 厘米) Hagaki (9.36 x 14.16 厘米) L (8.25 x 12.06 厘米)
每页 2 张 	3.5 x 5 英寸 (2.25 x 3.25 英寸) 4 x 6 英寸 (2.75 x 3.75 英寸) 5 x 7 英寸 (3.25 x 4.75 英寸) 8 x 10 英寸 (4.75 x 6.5 英寸) 8.5 x 11 英寸 (5 x 7 英寸) A6 (6.92 x 9.86 厘米) A4 (13 x 18 厘米) Hagaki (6.8 x 9.36 厘米) L (5.87 x 8.25 厘米)
每页 3 张 	3.5 x 5 英寸 (1.5 x 2.25 英寸) 4 x 6 英寸 (1.75 x 2.625 英寸) 5 x 7 英寸 (2.25 x 3.375 英寸) 8 x 10 英寸 (3.33 x 5 英寸) 8.5 x 11 英寸 (4 x 6 英寸) A6 (4.77 x 7.15 厘米) A4 (10 x 15 厘米) Hagaki (4.52 x 6.78 厘米) L (3.96 x 5.94 厘米)
每页 4 张 	3.5 x 5 英寸 (1.5 x 2.25 英寸) 4 x 6 英寸 (1.75 x 2.5 英寸) 5 x 7 英寸 (2.2 x 3.25 英寸) 8 x 10 英寸 (3.5 x 4.75 英寸) 8.5 x 11 英寸 (3.5 x 5 英寸) A6 (4.77 x 6.92 厘米) A4 (9 x 13 厘米) Hagaki (4.52 x 6.5 厘米) L (3.96 x 5.7 厘米)
每页 9 张	3.5 x 5 英寸 (1 x 1.375 英寸) 4 x 6 英寸 (1.125 x 1.5 英寸) 5 x 7 英寸 (1.5 x 2 英寸)

 (续)

布局	纸张尺寸 (照片尺寸)
	8 x 10 英寸 (2.25 x 3 英寸) 8.5 x 11 英寸 (2.5 x 3.25 英寸) - 皮夹尺寸 A6 (3.07 x 4.05 厘米) A4 (6.4 x 8.4 厘米) Hagaki (2.9 x 3.86 厘米) L (2.53 x 3.36 厘米)



注意 打印机可能会旋转照片以适合该布局。

提高照片质量

本款打印机提供了多种增强功能，可提高从存储卡打印照片的质量。这些打印设置不会改变原始照片。它们只会影响打印。

故障	纠正方法
亮度不佳的照片	<ol style="list-style-type: none"> 1. 触摸打印。 2. 触摸 4×6 或放大以选择需要的照片尺寸。 3. 触摸需要的照片尺寸。 4. 触摸“编辑”，然后触摸照片亮度。 5. 触摸亮度滑块将照片亮度增加或降低到合适的水平，然后触摸 OK。
存在红眼的照片	<p>打开照片修补功能会启动自动红眼消除功能。启动照片修补功能后可以在选定的照片上应用智能聚焦、适用性照明和红眼消除功能。</p> <p>→ 按下自动更正以启动“照片修补”功能。</p>
质量不佳的视频剪辑 该首选项会影响从视频剪辑打印的照片。 注意 该功能不会提高使用“打印选项”菜单中“ 视频剪辑打印 ”功能打印的照片质量。该功能也不对以每页九张的布局打印的照片起作用。	提高从视频剪辑打印的照片质量 <ol style="list-style-type: none"> 1. 触摸设置。 2. 触摸方向键以滚动并查找首选项。 3. 触摸首选项。 4. 使用方向键找到然后触摸视频增强。 5. 触摸启动，然后触摸 OK。 <p>有关从视频剪辑打印照片的信息，请参阅从存储卡打印照片。</p>

使用创意

本款打印机提供了可使您富有创意地使用照片的多种工具和效果。这些打印设置不会改变原始照片。它们只会影响打印。

要使用下列功能…	请执行下列步骤
<p>添加颜色效果</p> <p>您可以对打印机进行设置，将应用于照片的颜色选项从“彩色”（默认）更改为“黑白”、“棕褐色”或“古董色”。</p> <p>以“棕褐色”打印的照片呈棕色色调，看起来像二十世纪早期拍摄的照片。以“古董色”打印的照片呈现相同的棕色色调，但加入了苍白的色调，给人的感觉像是手工上色的。</p>	<ol style="list-style-type: none">1. 触摸打印。2. 触摸 4×6 或放大以选择需要的照片尺寸。3. 触摸需要的照片尺寸。4. 触摸需要的照片以选择一张或多张图像。5. 从选定的照片触摸编辑。6. 使用方向键查找“颜色特效”功能。触摸颜色特效。7. 触摸需要的颜色特效。
<p>在打印件上添加日期和时间</p> <p>您可以在照片正面打印一个表明照片拍摄时间的标记。该首选项将影响所有打印件。</p>	<ol style="list-style-type: none">1. 触摸设置。2. 触摸首选项，然后触摸日期戳。3. 触摸下面的一个日期/时间标记选项：<ul style="list-style-type: none">– “日期和时间”– “仅日期”– “关闭” <p>如果用计算机修改照片并保存所做的修改，最初的日期和时间信息将丢失。您通过打印机控制面板对照片所作的修改，不会影响日期和时间信息。</p>
<p>更改打印质量</p> <p>您可以更改照片的打印质量。“最佳”质量为默认设置，可生成质量最佳的照片。“正常”质量可节省墨水并加快打印速度。</p>	<p>将某个打印作业的打印质量更改为“正常”：</p> <ol style="list-style-type: none">1. 触摸设置。2. 触摸工具，然后触摸打印质量。3. 触摸正常，然后触摸OK。 <p>执行下一个打印作业之后，打印质量将恢复为“最佳”。</p>
<p>裁剪照片</p> <p>按缩放 + 和 缩放 - 将放大倍数增加或减少 1.25x（1.25倍）。最大放大倍数是 5.0x。</p>	<ol style="list-style-type: none">1. 触摸打印。2. 触摸 4×6 或放大以选择需要的照片尺寸。3. 触摸需要的照片尺寸。4. 触摸需要的照片以选择图像。5. 按缩放 + 将照片放大倍数增加 1.25x。将会显示绿色裁剪框。重复按缩放 + 直到要求的

(续)



要使用下列功能…	请执行下列步骤
	<p>放大倍数。（放大后，您可以按缩放 - 来缩小照片。）</p> <p>注意 如果以选定的放大倍数打印时质量会明显下降，裁剪框会从绿色变为黄色。</p> <ol style="list-style-type: none"> 6. 在任一放大倍数下，可以触摸方向键左、右、上、下移动裁剪框。 7. 当图像的要打印部分位于裁剪框中时，触摸裁剪。 裁剪操作不会改变原始照片。它只会影响打印。
打印全景照片	<ol style="list-style-type: none"> 1. 触摸打印。 2. 触摸其他项目，然后触摸全景打印。 3. 按照提示放入 10 x 30 厘米（4 x 12 英寸）的介质，然后触摸 OK。 4. 触摸照片以选定它。如果需要，请在打印前裁剪照片。请注意裁剪框的长宽比是 3:1。 <p>注意 所有以全景模式打印的照片都是无边界的。</p>

4 连接

您可以使用此打印机与其他设备和人员保持连接。

连接到其他设备

该打印机可以通过多种方法连接到计算机或其他设备。不同的连接类型可以完成不同的工作。

连接类型及需要的准备工作	您可以...
<p>存储卡</p>  <p>存储卡</p> <p>兼容型数码相机存储卡</p> <p>将存储卡插入打印机前部相应的存储卡插槽。</p>	<ul style="list-style-type: none">● 从存储卡直接打印到打印机。● 将已插入打印机的存储卡上的照片保存到计算机，然后可以在计算机上的 HP Photosmart Premier 或其他软件中增强这些照片的效果或进行整理。有关详细信息，请参阅将照片保存到计算机和从存储卡打印照片。
<p>USB</p> <ul style="list-style-type: none">● 长度不超过 3 米（10 英尺）的通用串行总线 (USB) 2.0 全速兼容电缆。有关使用 USB 电缆连接打印机的说明，请参阅“快速入门”。● 一台可以连接到 Internet 的计算机（以备使用 HP Photosmart 共享）。	<ul style="list-style-type: none">● 从计算机打印到打印机。请参阅从计算机打印。● 将已插入打印机的存储卡上的照片保存到计算机，然后可以在计算机上的 HP Photosmart Premier 或其他软件中增强这些照片的效果或进行整理。● 通过 HP Photosmart 共享共享照片。● 从 HP Photosmart 直接打印数码相机直接打印到打印机。有关详细信息，请参阅从数码相机打印照片和相机随附的文档。
<p>PictBridge</p>  <p>PictBridge 符号</p>	<p>从 PictBridge 兼容数码相机直接打印到打印机。</p> <p>有关详细信息，请参阅从数码相机打印照片和相机文档。</p>

(续)

连接类型及需要的准备工作	您可以...
PictBridge 兼容数码相机和 USB 电缆。将相机连接到打印机 前部 的相机端口。	
<p>Bluetooth</p> <p>可选的 HP Bluetooth 无线打印机适配器。</p> <p>如果打印机带有此附件或者您单独购买了此附件，请参阅随附的文档和屏幕帮助以获得相关说明。</p>	<p>从具有 Bluetooth 无线技术的任何设备，例如数码相机、可拍照手机或 PDA 等打印到打印机。</p> <p>如果您通过相机端口将可选的 HP Bluetooth 无线打印机适配器连接到打印机，请确保根据需要设置 Bluetooth 打印机菜单选项。请参阅设置。</p>
<p>HP iPod</p> <p>HP iPod 及其随附的 USB 电缆。将 HP iPod 连接到打印机前部的相机端口。</p>	<p>从 HP iPod（存有照片）直接打印到打印机。有关详细信息，请参阅从 iPod 打印照片。</p>

将照片保存到计算机

您可以将已插入打印机的任何存储卡上的照片保存到计算机，但要先在这两个设备之间建立 USB 连接。

如果使用 Windows 计算机

使用下列任何一种方法将照片保存到计算机。

- 将存储卡插入打印机中。HP Photosmart Premier 传输软件（HP 传输和快速打印）会在计算机屏幕上打开，您可以指定计算机上的一个位置用于保存图像。有关详细信息，请参阅 HP Photosmart 打印机软件屏幕帮助。
- 将存储卡插入打印机中。存储卡将会在 Windows 资源管理器中显示为可移动驱动器。打开可移动驱动器然后将卡上的照片拖动到计算机上的任何位置。

如果使用 Macintosh

1. 将存储卡插入打印机中。
2. 等待 iPhoto 启动并读取存储卡的内容。
3. 点按“导入”将卡上的照片保存到 Macintosh。



注意 存储卡也会在桌面上显示为驱动器图标。您可以将它打开并将卡上的照片拖动到 Macintosh 上的任何位置。

通过 HP Photosmart 共享连接

使用 HP Photosmart 共享，通过电子邮件、在线相册或在线照片处理服务与亲朋好友共享照片。您必须通过 USB 电缆将打印机连接到计算机，该计算机可以访问 Internet 并且已安装了全部 HP 软件。如果要使用“共享”，但没有安装或配置全部所需软件，则会出现一条信息，提示您完成所需操作。

使用“共享” (USB) 发送照片 (Windows 用户)：

1. 插入存储卡并选择照片。
2. 在打印机屏幕上触摸**共享**。
3. 按照计算机上的说明与其他人共享选择的照片。

使用“共享” (USB) 发送照片 (Mac 用户)：

1. 打开“HP Photosmart Premier”并选择要共享的照片。有关 HP Photosmart Premier 的详细信息，请参阅 [HP Photosmart Premier](#)。
2. 在“HP Photosmart Premier”中点按“应用程序”选项卡，然后连接“HP Photosmart 共享”。
3. 按照计算机上的说明与其他人共享选择的照片。

有关使用 HP Photosmart 共享的详细信息，请参阅软件的屏幕帮助。

5 从计算机打印

要从计算机打印，必须安装打印机软件。软件安装过程中，会在计算机上安装 HP Photosmart Premier（Mac 用户和 Windows 完全安装用户）或 HP Photosmart Essential（Windows 快速安装用户），您可以整理、共享、编辑和打印照片。

有关安装软件的详细信息，请参阅“快速入门”手册。定期更新软件以确保您拥有最新的功能和改进；有关说明，请参阅[更新软件](#)。

要对照片进行处理，需要将照片传输到与打印机连接的计算机。请参阅[将照片保存到计算机](#)。



注意 Windows 用户：HP Photosmart Premier 只能在装有 Intel® Pentium® III（或等同）以及更快处理器的计算机上使用。

使用打印机软件中的创意选项

有关如何打开和使用 HP Photosmart Premier、HP Photosmart Essential 和 HP Photosmart 共享的信息，请阅读下列提示。

HP Photosmart Premier

HP Photosmart Premier 是一个易于使用的软件程序，除了基本的照片编辑和打印外，它还提供一切必需功能让您在处理照片时获得无穷乐趣。此软件可以让您访问 HP Photosmart 共享以便轻松共享照片。

打开 HP Photosmart Premier（Windows 用户）

→ 双击桌面上的“HP Photosmart Premier”图标。如果需要帮助，请参阅 HP Photosmart Premier 中的软件帮助。

打开 HP Photosmart Premier（Mac 用户）

→ 点按 Dock 中的“HP Photosmart Premier”图标。如果需要帮助，请从“帮助”菜单选择“HP Photosmart Premier 帮助”。

浏览 HP Photosmart Premier 的众多功能：

- **查看** — 以多种尺寸和方式查看照片。轻松组织和管理照片。
- **编辑** — 裁剪照片和修正有红眼的照片。自动调整和增强不同尺寸和多种布局的照片。
- **打印** — 打印不同尺寸和多种布局的照片。
- **共享** — 使用 HP Photosmart 共享无需大容量的附件，即可轻松与家人好友共享照片，是一种比发送电子邮件更好的方式。
- **创建** — 轻松创建相册页、卡片、日历、全景照片、CD 标签等等。
- **备份** — 备份您的照片以便存放和保存。

HP Photosmart Essential

HP Photosmart Essential 是一个易于使用的软件程序，它为您提供基本的照片编辑和打印功能。此软件也可以让您访问 HP Photosmart 共享，以便轻松共享照片。只有 Windows 用户可以使用 HP Photosmart Essential。

打开 HP Photosmart Essential (Windows 用户)

→ 双击桌面上的“HP Photosmart Essential”图标。如果需要帮助，请参阅 HP Photosmart Essential 中的软件帮助。

浏览 HP Photosmart Essential 的众多功能：

- **查看** — 以多种尺寸和方式查看照片。轻松组织和管理照片。
- **编辑** — 裁剪照片和修正有红眼的照片。自动调整和增强您的照片使它们更臻完美。
- **打印** — 打印不同尺寸和多种布局的照片。
- **共享** — 使用 HP Photosmart 共享无需大容量的附件，即可轻松与家人好友共享照片，是一种比发送电子邮件更好的方式。

HP Photosmart 共享

HP Photosmart 共享可以让您无需大容量的电子邮件附件即可将照片发送给家人和好友。有关详细信息，请参阅[通过 HP Photosmart 共享连接](#)和 HP Photosmart Premier 或 HP Photosmart Essential 帮助。

打开 HP Photosmart 共享 (Windows 用户)

→ 在 HP Photosmart Premier 或 HP Photosmart Essential 中单击“HP Photosmart 共享”。

打开 HP Photosmart 共享 (Mac 用户)

→ 在 HP Photosmart Premier 中点按“应用程序”选项卡，然后连接“HP Photosmart 共享”。

设置打印首选项

打印首选项已有默认设置，但可以根据需要进行更改。您可以在从计算机打印时进行特定的作业设置。如果在打印前更改设置，所作更改只会影响当前的打印作业。在有些 Windows 软件程序中，您需要在“打印”对话框中单击“属性”或“首选项”以访问高级打印功能。有关打印首选项的详细信息，请参阅电子版帮助。

访问打印首选项 (Windows 用户)

1. 通常可从“文件”菜单选择“打印”来打开“打印”对话框。
2. 更改“打印”对话框的选项卡中的打印首选项，或者单击“属性”或“首选项”以访问其他打印首选项。

访问打印首选项 (Mac 用户)

1. 通常可从“文件”菜单选择“打印”来打开“打印”对话框。
2. 通过在“份数和页数”下拉菜单中选择要更改的打印选项，更改“打印”对话框中的打印首选项。

有关更改打印首选项的详细信息，请参阅电子版帮助。

打开电子版帮助

Windows 用户：

- 在键盘上按 F1。
- 要获得字段级的帮助，请单击“打印”对话框中右上角的“？”。

Mac 用户：

1. 从“Finder”菜单，选择“帮助”，然后选择“Mac Help” (Mac 帮助)。
2. 从“库”中选择“HP Photosmart Premier 帮助”，然后选择“HP Photosmart 打印机帮助”。

HP Real Life 技术功能

浏览 HP Real Life 技术软件功能中的众多照片编辑和增强选项。这些功能 - 例如自动红眼消除和适应性照明 - 可以让您轻松打印高质量照片。

访问 Real Life 技术功能 (Windows 用户)

1. 通常可从“文件”菜单选择“打印”来打开“打印”对话框。
2. 单击“纸张/质量”选项卡，然后单击“Real Life 数字摄影”按钮 - 或 - 单击“属性”或“首选项”按钮，然后单击“Real Life 数字摄影”按钮。

访问 Real Life 技术功能 (Mac 用户)

1. 通常可从“文件”菜单选择“打印”来打开“打印”对话框。
2. 从“份数和页数”下拉菜单中选择“Real Life 数字摄影”。

6 保养与维护

本打印机很少需要维护。遵循本章所述的指导原则，可延长打印机及打印耗材的使用寿命，并确保您始终能够打印出高质量的照片。

- [清洁和维护打印机](#)
- [更新软件](#)
- [打印机与墨盒的存放与运输](#)
- [维护照片纸质量](#)

清洁和维护打印机

使用本节所述的简易方法，保持打印机和墨盒的清洁并进行良好的维护。

清洁打印机外部

1. 关闭打印机，然后从打印机后面断开电源线。
2. 用蘸有少量清水的软布擦拭打印机的外部。



小心 请勿使用任何清洁液，家用清洁剂和洗涤剂会损坏打印机的表面涂层；请勿清洁打印机内部，防止液体进入打印机内部；请勿润滑支撑打印头滑动的金属杆，打印头前后移动时发出声响是正常现象。

校准打印机

当自检报告的任何颜色块中显示条纹或白色线条时，请按照以下程序操作。

如果校准打印机后仍然存在打印质量问题，请尝试按照 [保养与维护](#) 所述程序清洁打印头。如果在校准和清洁后，仍然存在打印质量问题，请与 HP 支持联系。

1. 在主纸盒中放入未用过的 letter 或 A4 尺寸的普通白纸。
2. 触摸 **设置**。
3. 触摸 **“工具”** 然后滚动查找 **“校准打印机”**。
4. 触摸 **“校准打印机”**。
打印机将会校准打印头、打印校准页并校准打印机。回收或丢弃校准页。
5. 触摸 **OK**。

打印样本页

您可以打印样本页来测试打印机的照片打印质量，并确保已正确放入纸张。

1. 将纸张放入主纸盒。使用普通纸以节约照片纸。
2. 触摸 **设置**。
3. 触摸 **“工具”**，然后触摸 **打印样本页**。

自动清洁打印头

如果在打印的照片或自检报告的颜色块中发现白色线条或条纹，请按照此程序清洁打印头。请在必要时再清洁打印头，因为这将会浪费墨水并缩短打印头上墨水喷嘴的使用寿命。

1. 将纸张放入主纸盒。使用普通纸以节约照片纸。
2. 触摸**设置**。
3. 触摸“**工具**”，然后滚动到“**清洁打印头**”。
4. 触摸“**清洁打印头**”。

如果在清洁打印头后打印质量仍然不佳，请尝试按照[校准打印机](#)所述的程序校准打印机。如果在清洁和校准后，仍然存在打印质量问题，请与 HP 支持联系。

手动清洁墨盒触点

如果打印机屏幕显示墨盒缺失或损坏信息，请清洁墨盒的铜色触点。

清洁墨盒触点前，请取出墨盒并确认没有物件遮盖墨盒触点或墨盒插槽，然后装回墨盒。如果仍然显示墨盒缺失或损坏信息，请清洁墨盒触点。如果清洁墨盒触点后仍然显示此信息，则需要更换墨盒。取出有问题的墨盒，查看底部的质保截止日期，日期格式为 YYYY/MMM/DD（年/月/日）。如果在保质期之内，请与 HP 支持联系以更换墨盒。

清洁墨盒触点：

1. 准备好清洁触点所需的下列物品：

- 蒸馏水、过滤水或瓶装水（自来水中可能包含会损坏墨盒的杂质）



小心 不要使用滚筒清洁器或酒精来清洁墨盒触点。这些物质会损坏墨盒或 HP Photosmart 打印机。


- 使用干燥的泡沫橡胶拭子、无绒布、或者不会散开或留下纤维的任何柔软材料。

2. 打开打印机的顶盖。
3. 按压墨盒插槽下方的灰色突块，释放打印机内部的灰色卡销，然后提起卡销。



小心 不要同时取出多个墨盒，一次仅取出和清洁一个墨盒，请勿将墨盒放在打印机外面超过 30 分钟。

4. 用水稍微润湿拭子或软布，并挤掉多余的水分。
5. 握住墨盒手柄，然后用拭子或软布只轻轻擦拭铜色触点。

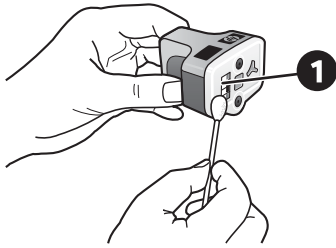

1 | 只轻轻擦拭铜色触点

6. 将墨盒放回空的插槽，然后向下按压灰色卡销直到它卡入到位。
7. 如有必要，请重复此步骤清洁其他墨盒。
8. 合上顶盖。



小心 供墨装置可能增压。将异物插入供墨装置会导致墨水喷出并溅到人员或物品上。


打印自检报告

如果遇到打印问题，请打印自检报告。这份两页式的报告 - 标记为“扩展自检诊断页” - 可以帮助您诊断打印问题，并为您提供在致电 HP 支持时所需的有用信息。您也可以使用此报告来检查墨盒中剩余的估计墨水百分比。

1. 触摸**设置**。
2. 触摸“**工具**”，然后滚动到“打印测试页”。
3. 触摸“**打印测试页**”。

HP Photosmart 打印机会打印包含下列信息的两页式自检报告：

- **产品信息**：包括打印机型号、序列号和其他产品信息。
- **版本信息**：包括固件版本号，以及说明是否安装了 HP 双面打印附件（双面打印机）。
- **供墨系统信息**：显示所安装的每个墨盒的估计墨水量、状态、安装日期以及有效日期。
- **打印头组件信息**：包括需要致电 HP 支持时用于诊断的信息。
- **打印头参数**：包括需要致电 HP 支持时用于诊断的信息。
- **打印质量图案**：显示六个颜色块，分别代表安装的六个墨盒。当颜色块中出现条纹，或缺少颜色块时，请按照**保养与维护**所述的程序清洁打印头。如果清洁打印头后颜色块仍然显示打印质量问题，请按照**校准打印机**所述的程序校准打印机。如果在清洁和校准之后，颜色块仍然显示打印质量问题，请与 HP 支持联系。
- **历史记录**：包括需要致电 HP 支持时用于诊断的信息。

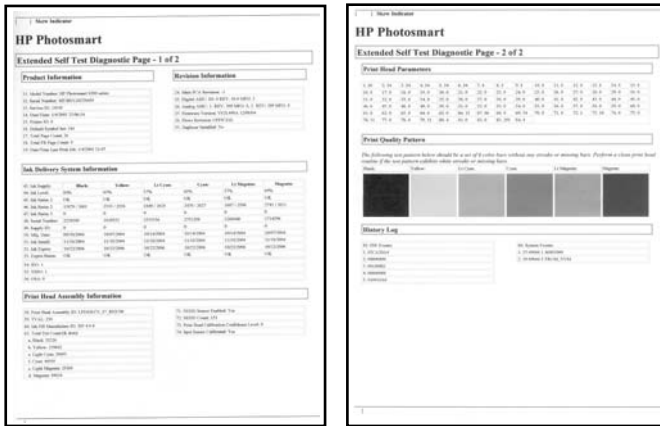

自检报告

更新软件

定期下载最新的打印机软件更新程序，以确保软件拥有最新的功能和改进。您可以访问 www.hp.com/support 或使用“HP 软件更新”来下载打印机软件更新。



注意 从 HP 网站下载的打印机软件更新不能更新 HP Photosmart Premier 软件。

下载软件 (Windows)



注意 在使用“HP 软件更新”前，确保已连接到 Internet。

1. 从 Windows “开始” 菜单中，选择“程序”（在 Windows XP 中，选择“所有程序”）> “Hewlett-Packard” > “HP 软件更新”。将打开“HP 软件更新”窗口。
2. 单击“立即检查”。“HP 软件更新”会搜索 HP 网站查找打印机软件更新。如果计算机没有安装最新版本的打印机软件，“HP 软件更新”窗口中将显示软件更新。



注意 如果计算机安装了最新版本的打印机软件，则“HP 软件更新”窗口中会显示以下信息：“此时没有系统可用的更新”。

3. 如果有软件更新可用，单击软件更新旁边的复选框将其选中。
4. 单击**安装**。
5. 按照屏幕上的说明完成安装。

下载软件 (Mac)



注意 在使用“HP Photosmart 更新工具”前，确保已连接到 Internet。

1. 在 Mac 的 Finder 中，选择“转到” > “应用程序”。
2. 选择“Hewlett-Packard” > “Photosmart” > “HP Photosmart 更新工具”。
3. 按照屏幕上的说明检查软件更新。
如果使用了防火墙，您需要在更新工具中输入代理服务器信息。

打印机与墨盒的存放与运输

为了保护打印机和墨盒，在不使用时应妥善存放。

存放和运输打印机

打印机在设计上可经受长期或短期的闲置。将打印机存放在户内无阳光直射并且温度不会过高或过低的地方。



小心 防止墨水流失或溢出：运输或存放打印机时不要让它侧边着地，并且让墨盒保持在安装位置。

存放和运输墨盒

运输或存放打印机时，请始终将正在使用的墨盒留在打印机中以防止墨水变干。



小心 1 防止墨水流失或溢出：存放或运输打印机时让墨盒保持在安装位置，并避免让用过的墨盒留在打印机外过长时间。

小心 2 在拔下电源线之前，请确保打印机完成了断电操作过程。此过程可使打印机正确放置打印头。

按照该提示进行操作有助于维护 HP 墨盒并确保稳定的打印质量：

将所有不使用的墨盒保存在其原始密封包装中，直到需要时再取出来。请在室温下存放墨盒 (15-35 ° C 或 59-95 ° F)。

维护照片纸质量

要获得照片纸的最佳打印效果，请遵循本节的指导原则。

存放照片纸

- 将照片纸存放在原始包装中，或放入可重新封装的塑料袋中。
- 将包好的照片纸存放在平坦、凉爽、干燥的平面上。
- 将不使用的照片纸放回塑料袋中，纸张留在打印机内或暴露于外界环境中会发生卷曲。

使用照片纸

- 请始终拿取照片纸的边缘以免留下指纹。
- 如果照片纸边缘卷曲，将纸张放在塑料储存袋中并轻轻地朝卷曲的相反方向弯曲，直到纸张恢复平整。

7 疑难排解

HP Photosmart 打印机在设计上具有可靠易用的特点，本章回答了有关使用打印机以及不用计算机进行打印的常见问题，其中包含有关下列主题的信息：

- [打印机硬件问题](#)
- [打印问题](#)
- [错误信息](#)

有关其他疑难排解信息，请参阅：

- **软件安装疑难排解：**打印机随附的“快速入门”手册。
- **打印机软件以及从计算机进行打印的疑难排解：**HP Photosmart 打印机的屏幕帮助。有关查看 HP Photosmart 打印机的屏幕帮助信息，请参阅[欢迎](#)。Mac 用户还应查看 Dock 上的“HP Photosmart 菜单”中的疑难排解和自述选项。

打印机硬件问题

在联系 HP 支持之前，请阅读本节的疑难排解提示或访问网站 www.hp.com/support 的在线支持服务。



注意 如果要用 USB 电缆将打印机连接到计算机，HP 建议使用长度不超过 3 米（10 英寸）的 2.0 高速兼容电缆。

“打印”指示灯呈蓝色闪烁，但打印机不打印

解决方法 打印机正在处理信息；请等待完成。

“警示灯”亮起

解决方法

- 查看打印机屏幕上的说明。如果打印机上连接有数码相机，请查看相机屏幕上的说明。如果打印机上连接有计算机，请查看计算机显示器上的说明。
- 关闭打印机，然后拔下电源线。等待大概 10 秒钟，然后再插上电源线。打开打印机电源。

如果使用上述解决方法后“警示灯”仍然亮起，请访问 www.hp.com/support 或与 HP 支持联系寻求帮助。

打印机未找到保存到存储卡上的照片

解决方法 存储卡可能包含打印机无法直接从存储卡读取的文件类型。

- 将照片保存到计算机，然后从计算机进行打印。有关详细信息，请参阅屏幕上的“HP Photosmart 打印机帮助”以及相机随附的文档。
- 下次拍照时，设置数码相机，使其将照片保存为打印机可直接从存储卡读取的文件类型。有关支持的文件格式列表，请参阅[打印机技术规格](#)。

有关设置数码相机以特定文件格式保存照片的说明，请参阅相机随附的文档。

如果问题仍然存在，则可能需要重新格式化存储卡。

打印机已连接电源，但无法开机

解决方法

- 打印机可能消耗了过多的功率。拔下打印机电源线。等待大概 10 秒钟，然后再将电源线插入。打开打印机电源。
 - 打印机所插入的接线板电源可能已经关闭。打开接线板开关，然后打开打印机电源。
 - 电源线可能损坏。确保电源线上的绿色指示灯亮起。
-

打开打印机时发出声响，或一段时间不使用后发出声响

解决方法 打印机长时间不用（大约 2 星期）或其电源中断然后恢复时，可能发出声响。这是正常现象。打印机正在执行自动维护程序以确保生成最佳质量的输出。

打印机上的所有指示灯闪烁

解决方法 打印机出现硬件错误，可能需要进行维修。拔下打印机电源线。等待大概 10 秒钟，然后再插上电源线。打开打印机电源。如果指示灯仍然闪烁，请访问 www.hp.com/support 或与 HP 支持联系寻求帮助。

打印问题

在联系 HP 支持之前，请阅读本节的疑难排解提示或访问网站 www.hp.com/support 的在线支持服务。

当从控制面板打印时，打印机无法打印无边界照片

解决方法 请确保设置打印作业时选择了正确的布局。当选择照片和纸张尺寸时，图像方框必须用桔色填充成实心，这表示无边界打印。

打印速度非常慢

解决方法 您可能遇到了下列某种情况：1) 您可能正在打印 PDF 文件或包含高分辨率图形或照片的项目，或者 2) 您可能选择了最高分辨率的打印输出。包含图形或照片的大型混合项目打印起来要比文本文档速度慢，尤其是在较高的分辨率下打印。

纸张未从主纸盒正确送入打印机

解决方法

- 纸盒中可能放入了太多的纸张。取出一些纸张并尝试再次打印。
 - 主纸盒可能未完全推入到位。将主纸盒完全推入到位。
 - 可能未正确调整纸张导轨。确保纸张宽度导轨和长度导板紧靠纸张的边缘，同时保持纸张平整。
 - 两张或多张纸张可能粘在一起。从主纸盒取出纸张，呈扇形展开纸叠以将纸张分开，然后重新放入纸张并尝试再次打印。
 - 如果纸张发生褶皱或弯曲，请尝试使用其他纸张。
 - 纸张可能太薄或太厚。为了获得最佳效果，请使用 HP 喷墨纸。有关详细信息，请参阅[选择正确的纸张](#)。
-

打印出的纸张从出纸盒中掉落

解决方法 在打印时要始终展开出纸盒延长板。

打印出的纸张发生褶皱或卷曲

解决方法 正在打印的项目耗墨量超出正常范围。请从计算机上打印项目，并使用打印机软件降低墨水饱和度。有关详细信息，请参阅屏幕上的“HP Photosmart 打印机帮助”。

打印出的文档歪斜或者不居中

解决方法

- 可能未正确放入纸张。重新放入纸张，确保纸张在主纸盒中方向正确，并且纸张宽度导轨和长度导板紧靠纸张边缘。有关放入纸张的说明，请参阅[放入纸张](#)。
 - 如果您使用双面打印附件，请尝试将其卸下，装回后检修门，然后重新打印。
 - 打印机可能需要校准。有关详细信息，请参阅[校准打印机](#)。
-

打印出的颜色不尽人意

解决方法

- 其中一个彩色墨盒可能墨水量太低，导致另一个颜色在打印时被替代。在首页屏幕上触摸墨水图标以检查估计墨水量。如果某墨盒中的墨水不足，请将其更换。有关详细信息，请参阅[插入墨盒](#)。
 - 打印机可能需要校准。有关详细信息，请参阅[校准打印机](#)。
 - 打印头可能需要清洁。有关详细信息，请参阅[保养与维护](#)。
-

在打印时不输出纸张或发生卡纸

解决方法

- 打印机可能需要维护。阅读打印机屏幕上的说明。
 - 电源可能已关闭，或者连接松动。确保电源已开启而且电源线连接牢固。
 - 主纸盒或照片纸盒中可能缺纸。检查是否正确放入了纸张。有关放入纸张的说明，请参阅[放入纸张](#)。
 - 如果在打印时卡纸，请尝试以下操作：
 - 关闭打印机，然后拔下电源插头。清除打印机中任何堵塞纸路的纸张。取下后检修门。轻轻地从打印机中取出被卡住的纸张，然后重新装上后检修门。如果无法从打印机后面取出所有卡住的纸张，请尝试打开位于顶盖内的卡纸门，取出卡在打印机中间的纸张。有关清除卡纸的两个位置之图解，请参阅[纸张错误](#)。清除卡纸后，插上打印机电源线然后打开电源，尝试重新打印。
 - 如果要打印标签，请确保标签在通过打印机时没有从标签纸上脱落。
-

打印机输出空白页

解决方法

- 您可能已经开始打印，然后又取消了该打印作业。如果在开始打印前取消了打印作业，打印机可能已经放入了纸张并准备打印。下次打印时，打印机会在开始新的打印项目前先退出空白页。
 - 可能将具有大量数据的打印作业发送到了打印机。等待打印机维护打印头后，再继续打印。
-

打印机要求打印校准页

解决方法 打印机需要定期执行打印头校准以保持最佳打印质量。出现提示时，请放入 Letter 或 A4 尺寸的普通纸。丢弃或回收校准页。

无法使用默认打印设置打印照片

解决方法 您可能已经更改了选定照片的打印设置。应用于个别照片的打印设置将取代默认打印设置。通过取消选择照片，可以取消应用于该照片的所有打印设置。有关详细信息，请参阅[设置](#)。

准备打印时打印机退出纸张

解决方法 直射日光可能会影响自动纸张传感器的正常工作。将打印机从直射日光下移开。

打印质量差

解决方法

- 其中一个墨盒可能墨水量太低，导致另一个颜色在打印时被替代。在首页屏幕上触摸墨水图标以检查估计墨水量。如果某墨盒中的墨水不足，请将其更换。有关详细信息，请参阅[插入墨盒](#)。
- 使用打印机专用照片纸。为了获得最佳效果，请使用[选择正确的纸张](#)中所建议的纸张。
- 您可能在纸张错误的一面上打印。确保打印面朝下放入纸张。
- 您可能在数码相机上选择了低分辨率设置。缩小图像尺寸并尝试再次打印。为了以后获得更好的效果，请将数码相机的照片分辨率调高。
- 墨盒或打印头可能出现 issue。请尝试以下操作：
 - 将每个墨盒逐个取出再装上，确保它们都安装正确。
 - 执行打印头自动清洁程序。有关详细信息，请参阅[保养与维护](#)。
 - 校准打印机。有关详细信息，请参阅[校准打印机](#)。
 - 如果使用上述所有解决方法后打印质量问题仍然存在，请与 HP 支持联系。

照片未正确打印

解决方法

- 您可能未正确放入照片纸。打印面朝下放入照片纸。
- 照片纸可能没有正确送入打印机。请尝试以下操作：
 - 检查是否出现卡纸。有关详细信息，请参阅[纸张错误](#)。
 - 将照片纸插入照片纸盒尽头。
 - 每次放入一张照片纸。

未打印在数码相机中标记要打印的照片

解决方法 有些数码相机可以让您在相机的内部存储器和存储卡上标记要打印的照片。如果您在内部存储器中标记了照片，然后又将照片从相机内部存储器转移到存储卡上，标记不会随之转移。请将照片从数码相机内部存储器转移到存储卡后，再标记要打印的照片。

错误信息

在联系 HP 支持之前，请阅读本节的疑难排解提示或访问网站 www.hp.com/support 的在线支持服务。

打印机屏幕上出现的错误信息可分为以下几类：


- [纸张错误](#)
- [墨盒错误](#)
- [存储卡错误](#)
- [计算机打印错误](#)

纸张错误

在联系 HP 支持之前，请阅读本节的疑难排解提示或访问网站 www.hp.com/support 的在线支持服务。


错误信息：卡纸。清除卡纸然后按“OK”。

解决方法 关闭打印机，然后拔下电源插头。清除打印机中所有堵塞纸路的纸张。取下后检修门。轻轻地从打印机中取出卡住的纸张，然后重新装上后检修门。

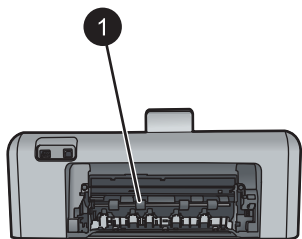

1 取下后检修门以清除卡纸。

如果无法从打印机后面取出所有卡住的纸张，请尝试打开位于顶盖内的卡纸门，取出卡在打印机中间的纸张。

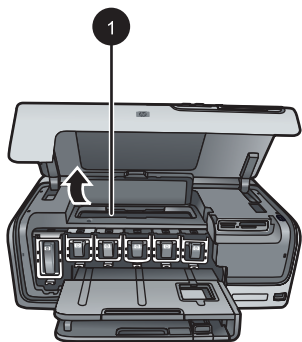

1 打开卡纸门清除卡在打印机中间的纸张。

重新插上打印机的电源插头，然后打开打印机电源。

错误信息： 缺纸。放入纸张然后按 OK。

解决方法 放入纸张，然后触摸 **OK** 以重新打印。有关放入纸张的说明，请参阅[放入纸张](#)。

错误信息： 不支持的介质尺寸。

解决方法 纸盒中装入的纸张尺寸不适用于该打印机。触摸 **OK**，然后放入在尺寸上支持的纸张。有关支持的纸张尺寸列表，请参阅[打印机技术规格](#)。

错误信息： 自动纸张传感器失效。

解决方法 自动纸张传感器被挡住或已损坏。将打印机从直射阳光下移开，然后触摸 **OK** 并尝试重新打印。如果这样做不起作用，请访问 www.hp.com/support 或与 HP 支持联系。

墨盒错误

在联系 HP 支持之前，请阅读本节的疑难排解提示或访问网站 www.hp.com/support 的在线支持服务。

错误信息： 安装了错误的墨盒

解决方法 首次安装和使用 HP Photosmart 打印机时，请确保安装打印机随附的墨盒。这些墨盒中的墨水经特别配方研制，可与打印头组件中的墨水混合。

要排解这个错误，请用 HP Photosmart 打印机随附的墨盒更换有问题的墨盒。

有关更换墨盒的详细信息，请参阅[插入墨盒](#)。

错误信息： 错误墨盒

解决方法 指定的墨盒在设备初始化后无法使用。用 HP Photosmart 打印机的专用墨盒更换该墨盒。可用于该打印机的墨盒编号位于本手册印刷版的封底上。

有关更换墨盒的详细信息，请参阅[插入墨盒](#)。

错误信息： 立即更换墨盒

解决方法 指定的墨盒墨水不足。

您可以使用打印头组件中剩余的墨水继续进行短时间的打印。更换指定的墨盒或触摸 **OK** 以继续。

有关更换墨盒的详细信息，请参阅[插入墨盒](#)。

错误信息：墨盒已空

解决方法 用新的墨盒更换指定的墨盒。

- 如果黑色墨盒空了，您可以选择打印机屏幕上提示选项，使用其他颜色的墨盒继续打印。
- 如果彩色墨盒空了，您可以选择打印机屏幕上的提示选项，使用黑色墨盒继续打印。

根据打印作业的状态，您可以触摸 **OK** 以继续。如果 HP Photosmart 打印机正在处理某个打印作业，按“**取消**”并重新开始打印作业。



注意 文本和照片质量会与使用所有墨盒时的打印效果不一样。如果不尽快更换空的墨盒，所有打印将会停止。

有关更换墨盒的详细信息，请参阅[插入墨盒](#)。

错误信息：无法打印

解决方法 指定的墨盒墨水已用完。

立即更换指定的墨盒以便重新开始打印。

HP Photosmart 打印机无法继续打印，除非更换指定的墨盒。所有打印将会停止。

有关更换墨盒的详细信息，请参阅[插入墨盒](#)。

错误信息：墨盒问题

解决方法 指定的墨盒缺失或损坏。

立即更换指定的墨盒以便重新开始打印。如果 HP Photosmart 打印机中没有缺失任何墨盒，则可能需要清洁墨盒触点。

有关更换墨盒的详细信息，请参阅[插入墨盒](#)。有关清洁墨盒触点的详细信息，请参阅[保养与维护](#)。

如果 HP Photosmart 打印机中没有缺失任何墨盒，而清洁墨盒触点后仍然显示此信息，则可能需要更换墨盒。取出有问题的墨盒，查看底部的质保截止日期，日期格式为 YYYY/MMM/DD（年/月/日）。如果在保修期内，请与 HP 支持联系以更换墨盒。

错误信息：墨水将过期

解决方法 如果已接近其有效期，请考虑更换墨盒以实现最佳打印质量。您可以触摸 **OK** 以继续打印。HP 无法担保过期墨水的质量或可靠性。

有关更换墨盒的详细信息，请参阅[插入墨盒](#)。

错误信息：墨盒已过期

解决方法 如果墨盒已过期，请更换该墨盒以实现最佳打印质量。您可以触摸 **OK** 以继续打印。HP 无法担保过期墨水的质量或可靠性。

有关更换墨盒的详细信息，请参阅[插入墨盒](#)。



注意 每个墨盒都有一个有效期。当显示墨水过期信息时，请取出并更换过期墨盒，然后关闭该信息。您也可以不用更换墨盒，在墨水过期信息上选择“OK”以继续打印。HP 建议更换过期墨盒。HP 无法担保过期墨盒的质量或可靠性。

错误信息：非 HP 墨水

解决方法 更换指定的墨盒或触摸 **OK** 以继续。

HP 建议您使用原装 HP 墨盒。原装 HP 墨盒是专门针对 HP 打印机进行设计和测试的，可帮助您随时轻松获得卓越的打印效果。



注意 HP 无法担保非 HP 墨水的质量和可靠性。由于使用非 HP 墨水导致的打印机故障或损坏不在保修范围内。

如果您确信所购买的是原装 HP 墨盒，请访问：

www.hp.com/go/anticounterfeit

错误信息：原来的 HP 墨水已用完

解决方法 更换指定的墨盒或触摸 **OK** 以继续。

HP 建议您使用原装 HP 墨盒。原装 HP 墨盒是专门针对 HP 打印机进行设计和测试的，可帮助您随时轻松获得卓越的打印效果。



注意 HP 无法担保非 HP 墨水的质量和可靠性。由于使用非 HP 墨水导致的打印机故障或损坏不在保修范围内。

如果您确信所购买的是原装 HP 墨盒，请访问：

www.hp.com/go/anticounterfeit

错误信息：定期维护

解决方法 您必须校准打印机来确保卓越的打印质量。在主纸盒中放入未使用过的 letter 或 A4 尺寸的普通白纸后，触摸 **OK**。HP Photosmart 打印机会校准打印头、校准打印机，然后打印测试页。回收或丢弃测试页。

错误信息：校准错误

解决方法

- 如果您在校准打印机时，主纸盒中装有彩色纸张或照片纸，校准可能会失败。在主纸盒中放入未使用过的 letter 或 A4 尺寸的普通白纸，然后

尝试重新校准。如果校准再次失败，则传感器或墨盒可能有问题；请联系 HP 支持。


- 墨盒或传感器有问题。请联系 HP 支持。

错误信息：墨盒底座被卡住

解决方法 清除卡住打印头组件的所有物件。

清理打印头组件

1. 打开顶盖，然后打开卡纸门。

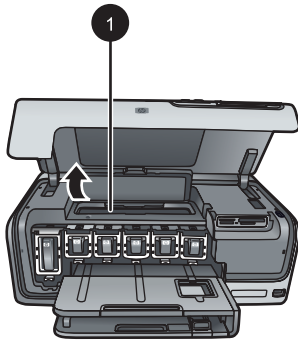

1. 打开卡纸门以清理打印头组件。
2. 清除卡住打印头组件的所有物件，包括纸张和任何包装材料。
3. 关闭打印机电源，然后再将它打开。
4. 关闭卡纸门和顶盖。

错误信息：墨水系统故障

解决方法 打印头组件或供墨系统出现故障，HP Photosmart 打印机不能再进行打印。

关闭打印机，然后拔下电源线。等待大概 10 秒钟，然后再插上电源线。如果此操作无法清除该错误信息，请联系 HP 支持。

存储卡错误

在联系 HP 支持之前，请阅读本节的疑难排解提示或访问网站 www.hp.com/support 的在线支持服务。

错误信息：缺失照片。 - 或 - 缺失一些照片。

解决方法 打印机无法读取存储卡中的文件，或者存储卡中缺失打印作业中所指定的一个或多个文件。尝试使用数码相机而不使用存储卡，将照片保存到计算机。缺失照片可能是因为不小心从卡中将其删除所导致的。

错误信息：存储卡读取错误。作业已被取消。按“OK”。 - 或 - 文件目录结构已损坏。 - 或 - 存储卡可能已经损坏。作业已被取消。触摸“OK”。

解决方法 打印机无法读取存储卡上的数据，进而无法完成当前的任何打印作业。数据可能已损坏或存储卡存在物理问题。

- 将文件保存到计算机，然后从计算机访问。
 - 如果这样做不起作用，请使用新的存储卡或使用数码相机重新格式化存储卡。存储卡上的所有照片都将丢失。
 - 如果这样做不起作用，照片文件可能已损坏或者无法读取。在联系 HP 支持前，请尝试另一张存储卡以确定是否为打印机或存储卡故障。
-

错误信息：无法打印照片。

解决方法 为打印作业指定的照片中，有超过 10 张照片可能已损坏、缺失或为不支持的文件类型。有关支持的文件类型的详细信息，请参阅[打印机技术规格](#)。

- 使用数码相机而不使用存储卡，将照片保存到计算机。
 - 将文件保存到计算机，并从计算机打印。
 - 打印一张照片索引并重新选择照片。有关详细信息，请参阅[打印照片](#)。
-

错误信息：存储卡受密码保护。无法读取存储卡。

解决方法 由于存储卡受密码保护，打印机无法读取存储卡。请执行下列步骤：

1. 从打印机中取出存储卡。
 2. 将存储卡插入最初用来在存储卡上存储密码的设备中。
 3. 清除存储卡上的密码。
 4. 取出存储卡并将其重新插入打印机的存储卡插槽。
 5. 尝试重新打印。
-

错误信息：存储卡被锁定。无法读取存储卡。

解决方法 确保存储卡上的锁定开关位于解锁位置。

错误信息：未完全插入存储卡。将存储卡再推入一点。

解决方法 打印机可以检测到存储卡但无法读取。将存储卡轻轻推入存储卡插槽直到其停住。有关详细信息，请参阅[插入存储卡](#)。

错误信息：每次仅使用 1 张存储卡。请取出一张存储卡。- 或 - 每次仅使用 1 个设备。请卸下/断开一个设备。

解决方法 打印机中同时插入了两种或多种类型的存储卡，或在插入存储卡的同时将数码相机连接到相机端口。取出存储卡或断开相机连接，直到打印机中只插有一张卡或只连接一台相机。

错误信息：存储卡已经取出。作业已被取消。触摸“OK”。

解决方法 您在打印机从存储卡打印文件时将卡取出。请执行下列步骤：

1. 触摸 **OK**。
2. 重新插入存储卡并再次打印选定的照片。完成打印作业之后，才可以将存储卡取出。

为防止将来损坏存储卡，请不要在读取存储卡时将其从打印机存储卡插槽中取出。有关详细信息，请参阅[取出存储卡](#)。

错误信息：相机选择 (DPOF) 文件出错。

解决方法 由于存储卡上的数据已损坏或出现错误，打印机无法读取 DPOF 文件。请使用打印机控制面板重新选择照片。有关详细信息，请参阅[从存储卡打印照片](#)。

错误信息：有些相机选定的照片不在存储卡上。

解决方法 有些相机选定的照片缺失或被删除。请尝试以下操作：

- 确认您没有不小心将该照片从存储卡上删除。
 - 使用数码相机重新选择照片。
 - 打印新的照片索引，查看每张照片对应的索引编号。有关详细信息，请参阅[打印照片](#)。
-

错误信息：无法显示此照片。- 或 - 无法显示所有照片。- 或 - 照片已损坏。

解决方法 存储卡上包含打印机不支持的图像格式，或文件已经损坏。有关支持的图像格式的列表，请参阅[打印机技术规格](#)。使用计算机读取照片。有关通过计算机读取照片的详细信息，请参阅[从计算机打印](#)。

错误信息：不支持的存储卡类型。

解决方法 用相机将照片传输到计算机，然后从计算机打印。

错误信息：有些照片编号不在存储卡上。

解决方法 用相机将照片传输到计算机，然后从计算机打印。如果仍然缺失有些照片，它们可能已从存储卡中删除。

计算机和连接打印错误

在与 HP 支持联系之前，请阅读本节的疑难排解提示或访问网站 www.hp.com/support 的在线支持服务。

错误信息：打印机内存已满。作业已被取消。按“OK”。

解决方法 打印机在打印照片时遇到问题。请尝试以下操作：

- 要清空打印机内存，请关闭打印机，然后重新打开打印机。
 - 一次打印少量照片。
 - 将照片保存到计算机，并从计算机打印。
 - 使用存储卡读卡器将文件保存到计算机并从计算机打印。
-

错误信息：通信错误。检查计算机连接。按“OK”。 - 或 - 未接收到数据。检查计算机连接。按“OK”以继续。 - 或 - 计算机无响应。

解决方法 打印机无法与计算机进行正常通信。可能是打印机软件不工作或者电缆松脱。确保 USB 电缆牢固地连接在计算机上和打印机背面的 USB 端口上。如果电缆连接牢固，确认打印机软件已经安装。

错误信息：打印作业过程中断开了相机连接。

解决方法 将取消该打印作业。将 USB 电缆重新连接到相机和打印机，然后重新发送打印作业。

8 HP 支持

支持程序

如果遇到问题，请按以下步骤操作：

1. 查阅 HP Photosmart 打印机随附的文档。
2. 访问 HP 在线支持网站：www.hp.com/support。所有 HP 客户都可以访问 HP 在线支持。在这里可以最快速地获取最新设备信息和专家帮助，并包含以下功能：
 - 快速访问有资质的在线支持专家
 - HP Photosmart 打印机软件和驱动程序的更新
 - 为常见问题提供有用的 HP Photosmart 打印机和疑难排解信息
 - 注册 HP Photosmart 打印机后可提供主动设备更新、支持提醒以及 HP 新闻简报
3. 仅限于欧洲：与当地的经销商联系。如果 HP Photosmart 打印机出现硬件故障，需要将其送回到当地的购买点。（此服务将在打印机的保修期限内免费提供。保修期过后，将收取服务费。）
4. 联系 HP 支持。可选择的支持种类和可用性随设备、国家/地区以及语言而异。

HP 电话支持

要获取支持电话号码的列表，请参阅前盖内的电话号码表。

电话支持期

北美、亚太地区和拉丁美洲（包括墨西哥）可享有一年电话支持服务。要确定欧洲、中东和非洲的电话支持期，请访问 www.hp.com/support。您需要支付电话公司的标准电话费。

致电

请在计算机和 HP Photosmart 打印机前致电 HP 支持。准备提供以下信息：

- 设备型号（在设备前面的标签上）
- 设备序列号（在设备后部或底部）
- 发生故障时显示的信息
- 回答下列问题：
 - 以前出现过这种情况吗？
 - 能否使之再现？
 - 在出现这种情况前，是否在计算机上添加了新硬件或软件？
 - 在出现这种情况前，是否出现其他情况（例如，雷电和移动设备等）？

电话支持期过后

电话支持期过后，仍可获得 HP 的支持，但需要支付一定的费用。也可以在 HP 在线支持网站获取支持：www.hp.com/support。请与 HP 经销商联系或拨打所在国家/地区的支持电话号码，以了解支持选项详细信息。

额外保修选项

打印机的延长服务计划可以付费取得。请访问 www.hp.com/support，选择您的国家/地区和语言，然后浏览关于延长服务计划的服务和保修信息。

A 技术规格

本节列出了安装 HP Photosmart 打印机软件所需的最低系统要求，并提供了所选打印机的技术规格。

有关完整的打印机技术规格和系统要求的列表，请参阅屏幕上的“HP Photosmart 打印机帮助”。有关查看屏幕上的“HP Photosmart 打印机帮助”的信息，请参阅[欢迎](#)。

系统要求

组件	Windows PC 最低要求	Macintosh 最低要求
操作系统	Microsoft® Windows 98、2000 Professional、Me、XP Home 和 XP Professional	Mac® OS X 10.3、10.4 和更新版本
处理器	Intel® Pentium® II（或等同）和更快	G3 或更高
RAM	64 MB（建议使用 128 MB）	Mac® OS X 10.3、10.4 和更新版本：128 MB
可用磁盘空间	500 MB	150 MB
视频显示器	800 x 600，16 位或更高	800 x 600，16 位或更高
CD-ROM 驱动器	4x	4x
连接	USB: Microsoft Windows 98、2000 Professional、Me、XP Home 和 XP Professional PictBridge: 使用前部的相机端口 Bluetooth: 使用可选的 HP Bluetooth 无线适配器	USB: 前部和后部的端口（Mac OS X 10.3、10.4，以及更新版本） PictBridge: 使用前部的相机端口 Bluetooth: 使用可选的 HP Bluetooth 无线适配器
浏览器	Microsoft Internet Explorer 5.5 或更高版本	—

打印机技术规格

类别	技术规格
连接	USB: Microsoft Windows 98、2000 Professional、Me、XP Home 和 XP Professional； Mac OS X 10.3、10.4 和更新版本
图像文件格式	JPEG 基线

(续)

类别	技术规格
	TIFF 24 位 RGB 未压缩隔行扫描 TIFF 24 位 YCbCr 未压缩隔行扫描 TIFF 24 位 RGB Packbits 隔行扫描 TIFF 8 位灰色未压缩/Packbits TIFF 8 位彩色未压缩/Packbits TIFF 1 位未压缩/Packbits/1D Huffman
视频文件格式	Motion-JPEG AVI Motion-JPEG QuickTime MPEG-1
介质规格	建议的最大长度：61 厘米（24 英寸） 建议的最大纸张厚度：292 微米（11.5 密耳） 建议的最大信封厚度：673 微米（26.5 密耳）
支持的介质尺寸	从计算机打印时支持的尺寸 7.6 x 12.7 厘米至 22 x 61 厘米（3 x 5 英寸至 8.5 x 24 英寸） 从控制面板打印时支持的尺寸 公制：A6、A4、10 x 15 厘米（带或不带裁边）；英制：3.5 x 5 英寸、4 x 6 英寸（带或不带裁边）、4 x 12 英寸、5 x 7 英寸、8 x 10 英寸、8.5 x 11 英寸；其他：Hagaki 卡和 L 尺寸
支持的介质类型	纸张（普通纸、喷墨纸、照片纸和全景照片纸） 信封 投影胶片 标签纸 卡：索引卡、贺卡、Hagaki 卡、A6、L 尺寸 烫印转印纸 Avery C6611 和 C6612 照片标签纸：10 x 15 厘米（4 x 6 英寸），每页有 16 个矩形或椭圆标签
存储卡	CompactFlash I 型和 II 型 Microdrive MultiMediaCard Secure Digital Memory Stick xD-Picture Card
存储卡支持的文件格式	打印：请参阅在此表之前列出的图形文件格式。 保存：所有文件格式
纸盒 - 支持的介质尺寸	主纸盒

(续)

类别	技术规格
	<p>8 x 13 厘米至 22 x 61 厘米 (3 x 5 英寸至 8.5 x 24 英寸)</p> <p>照片纸盒 可达到 10 x 15 厘米 (4 x 6 英寸), 带或不带裁边</p> <p>出纸盒 所有支持的主纸盒和照片纸盒尺寸</p>
纸盒容量	<p>主纸盒 100 张普通纸 14 个信封 20 - 40 张卡片 (视厚度而定) 30 张标签纸 25 张投影胶片、烫印转印纸或照片纸 10 张照片纸</p> <p>照片纸盒 出纸盒 20 张照片纸 50 张普通纸 10 张卡片或信封 25 张标签纸或烫印转印纸</p>
工作环境	<p>建议的温度范围: 15 - 30 ° C (59-86 ° F) 最大温度范围: 5 - 40 ° C (41-104 ° F) 储存温度范围: -40 - 60 ° C (-40-140 ° F) 建议的湿度范围: 20 - 80% RH 最大湿度范围: 10 - 80% RH</p>
物理规格	<p>高度: 16.0 厘米 (6.30 英寸) 长度: 44.7 厘米 (17.6 英寸) 宽度: 38.5 厘米 (15.2 英寸) 重量: 8.5 公斤 (18.7 磅)</p>
耗电量	<p>打印, 平均: 75 W 打印, 最大: 94 W 闲置: 13.3 - 16.6 瓦</p>
电源型号	HP 部件号: 0957-2105
电源要求	100 - 240 VAC (± 10%), 50 - 60 Hz (± 3 Hz)
墨盒	HP 黄色墨盒 HP 青色墨盒 HP 浅青色墨盒

(续)

类别	技术规格
	<p>HP 品红色墨盒 HP 浅品红色墨盒 HP 黑色墨盒</p> <p>注意 可用于该打印机的墨盒编号位于本手册印刷版的封底上。如果您已使用过该打印机，也可以在打印机软件中找到墨盒编号。有关详细信息，请参阅插入墨盒。</p>
打印速度（最大）	<p>黑白打印输出：每分钟 32 页 彩色打印输出：每分钟 31 页 照片：14 秒打印一张 10 x 15 厘米（4 x 6 英寸）的照片</p>
USB 支持	<p>Microsoft Windows 98、2000 Professional、Me、XP Home 和 XP Professional Mac OS X 10.3、10.4 和更新版本 HP 建议使用长度不超过 3 米（10 英尺）的 USB 2.0 全速兼容电缆。</p>

B HP 保修条款

HP 产品	有限保修期限
软件媒体	90 天
打印机	1 年
打印或墨盒	直到 HP 墨水用完，或到达印在墨盒上的“保修结束”日期，视何者为先。本保修不涵盖重新灌注、再加工、整修、误用，或被擅改的 HP 墨水产品。
附件	90 天

A. 有限保修的范围

- 惠普 (HP) 向最终用户保证，在上述指定的保修期内，上述指定的 HP 产品自购买之日起无材料及工艺上的缺陷。
- 对于软件产品，HP 的有限保修仅适用于无法执行编程指令的故障。HP 不保证产品工作时不会中断或无错误。
- HP 的有限保修仅限于由正常使用产品而产生的缺陷，不适用于任何其他问题，包括因以下原因而产生的问题：
 - 不正确的维护或调整；
 - 使用非 HP 提供或支持的软件、介质、部件或耗材；
 - 在产品技术规格以外的条件下操作；
 - 未经授权的调整或误用。
- 对于 HP 打印机产品，使用非 HP 墨盒或重新灌注的墨盒既不影响对客户的保修也不影响与客户签订的任何 HP 支持合同。但是，如果打印机由于使用非 HP 墨盒或重新灌注的墨盒而过期的墨盒而发生故障或损坏，HP 在维修打印机时将根据具体故障或损坏，收取标准工时费和材料费。
- 如果 HP 在适用的保修期内收到符合 HP 保修条件的任何产品的缺陷的通知，HP 将自行决定对有缺陷的产品进行维修或更换。
- 如果 HP 无法适时维修或更换符合 HP 保修条件的有缺陷产品，HP 将在接到缺陷通知后的合理时间内，退回该产品的全额货款。
- 在客户将有缺陷的产品退回 HP 之前，HP 不承担维修、更换或退款的义务。
- 更换的产品可能为全新产品或相当于全新产品，前提是它的功能至少与被更换的产品相当。
- HP 产品可能包含性能等同于新部件的再加工部件、组件或材料。
- HP 的有限保修在任何销售保修范围内的 HP 产品的国家或地区均有效。可与授权的 HP 服务机构签订其他保修服务（如现场服务）合同，这些机构分布在由 HP 或授权进口商销售 HP 产品的国家/地区。

B. 有限保修

在当地法律允许范围内，HP 及其第三方供应商，对有关 HP 的产品，无论是以明示或默示的形式，均没有任何其他保修或条件并特别声明没有任何用于特定目的的适销性、质量满意度以及适用性的默示保修或条件。

C. 责任限制

- 在当地法规允许的范围内，本保修声明中提供的补偿是对用户的唯一补偿。
- 在当地法规允许的范围内，除了本保修声明中特别规定的责任外，在任何情况下，无论是根据合同、民事侵权行为或其他法律准则，无论是否告知产生此类损失的可能性，HP 或其第三方供应商对直接、特殊、偶发、继发的损失概不承担责任。

D. 当地法律

- 此保修声明赋予用户特定的法律权利。用户还可能拥有其他权利，具体情况视州（美国）、省（加拿大）及国家/地区（世界其他地方）而异。
- 如果本保修声明与当地法规发生矛盾，则应视为已修改以便与当地法规保持一致。根据这类当地法规，本保修声明中的某些责任免除和限制可能不适用于用户。例如，美国的某些州及美国以外的某些政府（包括加拿大的某些省），可能会：
 - 排除本保修声明中的责任免除和限制条款对用户法定权利的限制（例如英国）；
 - 限制制造商实施这种责任免除或限制的能力；或者
 - 赋予客户附加的保修权利，指定默示保修的期限（对这种默示保修制造商不得拒绝），或者不允许制造商对默示保修的期限加以限制。
- 除非另有法律许可，本声明中的保修条款不得排除、限制或修改适用于此产品销售的强制性法律权利，而是对该权利的补充。

索引

A

按钮 8

B

Bluetooth

- 菜单设置 10
- 连接到打印机 21, 29
- 无线打印机适配器 10

帮助 43

- 保养与维护 37
- 布局 and 照片尺寸 24

C

CompactFlash 18

彩色效果 27

测试页 39

插入

- 存储卡 19
- 墨盒 16

常见问题 43

存储卡

- 插入 19
- 打印自 21
- 将照片保存到计算机 31
- 取出 20
- 支持的类型 18

存放

- 打印机 41
- 墨盒 41
- 照片纸 41

错误信息 47

D

DPOF 22

打印

- 不使用计算机 21
- 测试页 39
- 从 Bluetooth 设备 21
- 从 PictBridge 相机 21
- 从存储卡 21
- 从计算机 33
- 从相机 23
- 照片 21
- 照片范围 21

打印机

- 保养与维护 37
- 部件 6

存放 41

错误信息 47

附件 9

技术规格 59

连接 21, 29

清洁 37

首页 10

文档 5

打印机软件

更新 40

打印机软件, 更新 33

打印头

故障 52

卡住 52

清洁 38

打印质量

更改 21

灯 9

电话支持 57

电话支持期
支持期 57

E

Energy Star 2

F

范围

打印 21

放入纸张 13

附件 9

附件, 双面打印 10

G

更换墨盒 16

古董色 27

规范声明

标准型号 2

H

Hewlett-Packard 公司通告 2

HP Instant Share 29

HP iPod 30

HP Photosmart Essential 33

HP Photosmart Premier 33

HP Photosmart 共享 31, 34

HP 软件更新 40

HP 直接打印数码相机 23

获得帮助 43

J

JPEG 文件格式 18

计算机

打印自 33

将照片保存到 31

连接到打印机 29

系统要求 59

技术规格 59

校准, 需要 51

校准打印机 37

校准页 37

将照片保存到计算机 29

K

控制面板 8

L

联系 HP 支持 57

M

Memory Stick 18

Microdrive 18

MPEG-1 文件格式 18

MultiMediaCard 18

墨盒

HP 墨水已用完 51

测试 39

插入 16

存放 41

错误 49

打印机校准 51

非 HP 墨水 51

更换 16

过期 50

空 50

立即更换 49

墨水量, 检查 16

缺失 50

损坏 50

墨水

检测线 39

空 50

立即更换 49

墨水量, 检查 16

- N**
 能耗 2
- P**
 Photosmart 共享. 参阅
 HP Photosmart 共享
 PictBridge 相机 23
- Q**
 清洁
 打印机 37
 打印头 38
 铜色触点 38
 取出存储卡 20
 缺失墨盒 50
- R**
 日期和时间标记 27
- S**
 Secure Digital 18
 Sony Memory Stick. 参阅
 Memory Stick
 视频剪辑
 支持的文件格式 18
 首页, 屏幕 10
 数码相机. 参阅 相机
 数字打印指令格式 22
 双面打印 10
 损坏, 墨盒 50
- T**
 TIFF 文件格式 18
 通过电子邮件发送照片 31
- U**
 USB
 端口 6
 技术规格 59
 连接类型 29
- W**
 文档, 打印机 5
 文件格式, 支持的 18, 59
 问题和回答 43
 无边界打印件 27
- X**
 xD-Picture Card 18
 系统要求 59
 相机
 PictBridge 23
 打印自 23
- 端口 6
 连接到打印机 21, 29
 直接打印 23
- Y**
 疑难排解
 错误信息 47
 运输打印机 9
- Z**
 照片
 保存到计算机 29
 裁剪 27
 打印 21
 古董色 27
 加框 27
 日期和时间标记 27
 缩放 27
 提高质量 26
 通过电子邮件发送 31
 支持的文件格式 18
 棕褐色调 27
 支持 57
 支持程序 57
 支持期过后 57
 纸盒, 纸张 6
 纸张
 放入 13
 购买和选择 13
 技术规格 59
 维护 13, 41
 纸盒 6
 装入 13
 质量
 打印测试页 39
 照片 26
 照片纸 41
 致电 57
 装入纸张 13
 棕褐色调 27

HP Photosmart D7300 series User Guide

English



Copyrights and trademarks

© 2006 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

Hewlett-Packard Company notices

The information contained in this document is subject to change without notice.

All rights reserved. Reproduction, adaptation, or translation of this material is prohibited without prior written permission of Hewlett-Packard, except as allowed under copyright laws.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Trademarks

HP, the HP logo, and Photosmart are property of Hewlett-Packard Development Company, L.P.

The Secure Digital logo is a trademark of the SD Association.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

CompactFlash, CF, and the CF logo are trademarks of the CompactFlash Association (CFA).

Memory Stick, Memory Stick Duo, Memory Stick PRO, and Memory Stick PRO Duo are trademarks or registered trademarks of Sony Corporation.

MultiMediaCard is a trademark of Infineon Technologies AG of Germany, and is licensed to the MMCA (MultiMediaCard Association).

Microdrive is a trademark of Hitachi Global Storage Technologies.

xD-Picture Card is a trademark of Fuji Photo Film Co., Ltd., Toshiba Corporation, and Olympus Optical Co., Ltd.

Mac, the Mac logo, and Macintosh are registered trademarks of Apple Computer, Inc.

iPod is a trademark of Apple Computer, Inc.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license.

PictBridge and the PictBridge logo are trademarks of the Camera & Imaging Products Association (CIPA).

Other brands and their products are trademarks or registered trademarks of their respective holders.

Regulatory model identification number

For regulatory identification purposes, your product is assigned a Regulatory Model Number. The Regulatory Model Number for your product is VCVRA-0603. This regulatory number should not be confused with the marketing name (HP Photosmart D7300 series, etc.) or product numbers (Q7057A, etc.).

For complete listing of regulatory notices see your onscreen help.

Energy consumption - Energy Star®

Hewlett-Packard Company is committed to providing quality products in an environmentally sound manner. For information about the HP's environmental product stewardship program see the onscreen help.

Contents

1	Welcome	5
	Special features.....	5
	Accessing the onscreen HP Photosmart printer help.....	5
	Printer parts.....	6
	Optional accessories.....	9
	Printer menu.....	9
	Print.....	10
	Save.....	10
	Share.....	10
	Settings.....	10
2	Get ready to print	13
	Load paper.....	13
	Choose the right paper.....	13
	Load your paper.....	13
	Insert ink cartridges.....	15
	Purchasing replacement ink cartridges.....	15
	Ink cartridge tips.....	16
	Inserting or replacing the ink cartridges.....	16
	Insert memory cards.....	18
	Supported file formats.....	19
	Inserting a memory card.....	19
	Memory card types.....	19
	Removing a memory card.....	20
3	Printing photos without a computer	23
	Printing photos.....	23
	Print photos from a memory card.....	23
	Print photos from a digital camera.....	25
	Print photos from an iPod.....	26
	Photo layouts.....	27
	Improving photo quality.....	28
	Getting creative.....	29
4	Getting connected	33
	Connecting to other devices.....	33
	Saving photos to a computer.....	35
	Connecting through HP Photosmart Share.....	35
5	Printing from a computer	37
	Using creative options in the printer software.....	37
	HP Photosmart Premier.....	37
	HP Photosmart Essential.....	37
	HP Photosmart Share.....	38
	Set print preferences.....	38
	Open the electronic help.....	39
	HP Real Life technologies features.....	39
6	Care and maintenance	41
	Clean and maintain the printer.....	41

	Clean the outside of the printer.....	41
	Aligning the printer.....	41
	Print a sample page.....	41
	Automatically clean the printhead.....	42
	Manually clean the ink cartridge contacts.....	42
	Print a self test report.....	43
	Update the software.....	44
	Store and transport the printer and ink cartridges.....	45
	Store and transport the printer.....	45
	Store and transport the ink cartridges.....	45
	Maintain the quality of photo paper.....	45
7	Troubleshooting	47
	Printer hardware problems.....	47
	Printing problems.....	48
	Error messages.....	52
	Paper errors.....	52
	Ink cartridge errors.....	54
	Memory card errors.....	57
	Computer and connectivity printing errors.....	60
8	HP support	61
	Support process.....	61
	HP support by phone.....	61
	Phone support period.....	61
	Placing a call.....	61
	After the phone support period.....	62
	Additional warranty options.....	62
A	Specifications	63
	System requirements.....	63
	Printer specifications.....	63
B	HP Warranty	67
	Index	69

1 Welcome

Thank you for purchasing an HP Photosmart D7300 series printer! With this new photo printer you can print beautiful photos, save photos to a computer, and create fun and easy projects with or without a computer.

This guide primarily explains how to print without connecting a computer. To learn how to print from a computer, install the printer software and view the electronic Help. For an overview of using a computer and the printer together, see [Printing from a computer](#). For information about installing the software, see the *Quick Start* guide.

Home users can learn how to:

- Print borderless photos from the printer or from a computer
- Choose a photo layout
- Convert a color photo to black and white, or apply a color effect such as Sepia or Antique

The printer comes with the following documentation:

- **Quick Start Guide:** The *Quick Start Guide* explains how to set up the printer, install the printer software, and print your first photo.
- **User Guide:** The *User Guide* is the book you are reading. This guide describes the basic features of the printer, explains how to use the printer without connecting a computer, and contains hardware troubleshooting information.
- **Onscreen help:** The onscreen HP Photosmart printer help describes how to use the printer with a computer and contains software troubleshooting information.

Special features

New features and media make it easier than ever to produce high-quality photos:


- When you use the new HP Advanced Photo Paper (also called HP Photo Paper in some countries/regions), special sensors in the printer detect a mark on the back of the paper and automatically select the optimal print settings. For more information about this new paper, see [Choose the right paper](#).
- HP Real Life technologies make it easy for you to get better photos. Automatic red eye removal and adaptive lighting to enhance detail in shadows are just a few of the many technologies included. You can explore the many editing and enhancing options from both the control panel and from the printer software. To access these features from the control panel, see [Improving photo quality](#). To learn how to find them in the software, see [HP Real Life technologies features](#).

Accessing the onscreen HP Photosmart printer help

After you have installed the HP Photosmart printer software on a computer, you can view the onscreen HP Photosmart printer help:


- **Windows PC:** From the **Start** menu, select **Programs** (in Windows XP, select **All Programs**) > **HP** > **HP Photosmart D7300 series** > **Photosmart Help**.
- **Macintosh:** Select **Help** > **Mac Help** in the Finder, then select **Help Center** > **HP Photosmart Premier help** > **HP Photosmart printer help**.

Printer parts

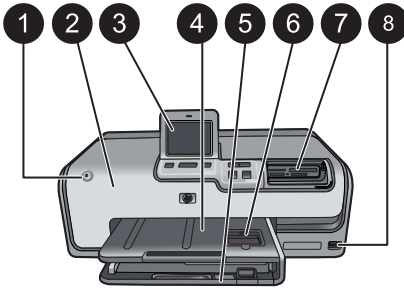


Front of printer

1	On: Press this button to turn on the printer.
2	Top cover: Lift this cover to access the ink cartridges and to clear paper jams. To lift the cover, grasp the top cover below the HP logo and pull upward.
3	Touch Screen Display: Use this screen to view and print photos, menus, and messages.
4	Output tray: Use this tray to catch your printouts. Lift this tray to access the photo tray.
5	Main tray: Pull out this tray and load paper, transparencies, envelopes, or other media with the side to be printed facing down.
6	Photo tray: Lift the output tray and load small-size paper up to 10 x 15 cm (4 x 6 inch) into the photo tray for printing with the side to be printed facing down. The paper may be tabbed or untabbed.
7	Memory card slots: Insert memory cards here. For a list of supported memory cards, see Insert memory cards .
8	Camera port: Connect a PictBridge™ digital camera, the optional HP Bluetooth® wireless printer adapter, or an iPod.

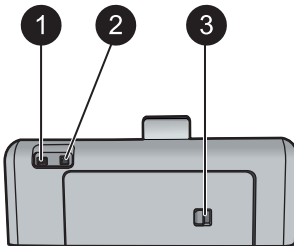

Back of printer

1	Power cord connection: Use this port to connect the power cord included with the printer.
2	USB port: Use this port to connect the printer to a computer.
3	Rear access door: Remove this door to clear paper jams or to install the optional HP Automatic Two-sided Printing Accessory. See Optional accessories .

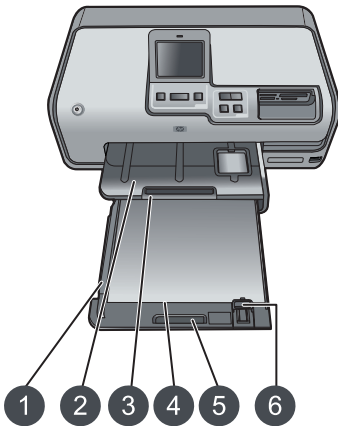

Main and Output trays

1	Paper-width guide: Adjust this guide to fit close to the edge of the paper in the main tray.
2	Output tray: Use this tray to catch your printouts. Lift this tray to access the photo tray.
3	Output tray extender: Pull towards you to extend the output tray to catch your printouts.
4	Main tray: Pull out this tray and load plain paper, transparencies, envelopes, or other media with the side to be printed facing down.
5	Main tray grip: Pull toward you to extend the Main tray.
6	Paper-length guide: Adjust this guide to fit close to the end of the paper in the main tray.


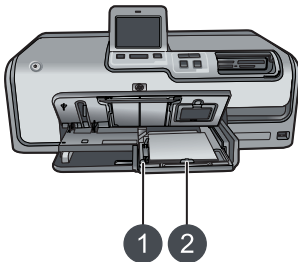



Photo tray

1	Paper-width guide: Adjust this guide to fit close to the edge of the paper in the photo tray.
2	Paper-length guide: Adjust this guide to fit close to the end of the paper in the photo tray.

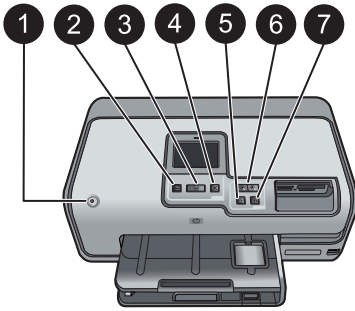

Control panel

1	On: Turn on the printer or put it into power save mode.
2	Print Preview: View a preview of the selected photo or photos.
3	Print: Print the selected photos from the inserted memory card, or from a camera connected to the front camera port.
4	Cancel: Deselect photos, exit a menu, or stop an action you have requested.
5	Rotate: Rotate a photo or a crop box.
6	Zoom (+)(-): Zoom in or out of a photo or crop box. You can also press Zoom (-) to view photos four at a time when viewing a photo at normal magnification.
7	Autocorrect: Automatically enhances and applies lighting, contrast, focus and red eye removal features to all printed photos.

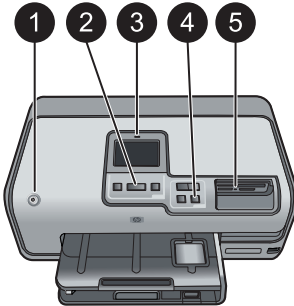

Indicator lights



1	On light: Solid blue if the printer is on, otherwise it is off.
2	Print light: Solid blue when the printer is on and ready to print, flashes blue when the printer is printing or busy with self-maintenance.
3	Attention light: Flashes when there is an error condition. See the touch screen display for instructions or information about the error. For more information, see The Attention light is on.
4	Autocorrect light: Solid blue when the Autocorrect function is turned on.
5	Memory Card light: Solid blue if a memory card is inserted, flashes if the printer is accessing a memory card, off if no memory card is inserted or if more than one card is inserted. Turns on when there is a problem that requires user action. See the printer screen for instructions.

Optional accessories

There are several optional accessories available for the printer that enhance its portability for printing anywhere, anytime. The appearance of the accessories may vary from what is shown.

To purchase supplies, go to:

- www.hpshopping.com (U.S.)
- www.hp.com/go/supplies (Europe)
- www.hp.com/jp/supply_inkjet (Japan)
- www.hp.com/paper (Asia/Pacific)

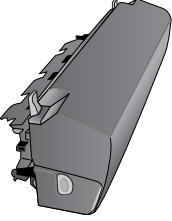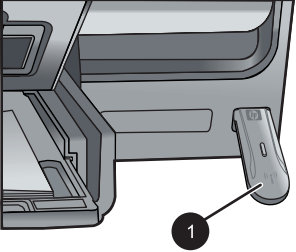Accessory name	Description		
 <p data-bbox="224 743 607 798">HP Automatic Two-sided Printing Accessory</p>	<p data-bbox="690 499 1134 703">This accessory automatically flips each page to print on both sides. You will save money (two-sided printing reduces paper consumption) and time (no need to remove the paper and reinsert it to print on the back), plus you will make bulky documents more manageable.</p> <p data-bbox="690 711 1134 772">This accessory may not be available in all countries/regions.</p>		
 <p data-bbox="224 1102 577 1159">HP Bluetooth® wireless printer adapter</p> <table border="1" data-bbox="224 1171 665 1229"> <tr> <td data-bbox="224 1171 270 1229">1</td> <td data-bbox="270 1171 665 1229">Insert the Bluetooth adapter into the front camera port</td> </tr> </table>	1	Insert the Bluetooth adapter into the front camera port	<p data-bbox="690 824 1134 1024">The HP Bluetooth® wireless printer adapter goes into the camera port on the front of the printer. This adapter lets you use Bluetooth wireless technology for printing from many Bluetooth-enabled devices, including digital cameras, camera phones, and PDAs.</p> <p data-bbox="690 1032 1134 1119">For more information on printing with this accessory, go to www.hp.com/go/bluetooth.</p>
1	Insert the Bluetooth adapter into the front camera port		

Printer menu

Touch the home icon in the upper left-hand corner to access the home screen. You can access all of the functions from the home screen as well as setup menus.

Print

Wizard: Use the wizard to guide you through the printing process.

4×6: Use to print 4×6 inch (10 × 15 cm) photographs.

Enlargement: Use Enlargement to print different photo sizes.

All: Select to print all the photos from the memory card inserted in the printer.

Other Projects: Use Other Projects to print panoramic, HP CD/DVD Tattoos, wallet prints, and passport photos.

- **Panorama Prints:** Select to turn panoramic printing **On** or **Off** (default). Select **On** to print all selected photos with a 3:1 aspect ratio; load 10 x 30 cm (4 x 12 inch) paper before printing.
- **HP CD/DVD Tattoos:** Select to print labels for CD/DVDs.
- **Wallet Prints:** Use to print wallet-sized photos.
- **Passport Photos:** Select to print a passport photo.

Save

Touch the Save button to save selected images to a connected PC.

Share

Use the Share button to select and share photos through HP Photosmart Share.

Settings

- **Tools:** Use tools to display the ink gauge, adjust the print quality, print a sample page, print a test page, and to clean and align cartridges.
 - **Display Ink Gauge:** Use to enable an ink supply gauge on the home screen.
 - **Print quality:** Choose either **Best** (default) or **Normal** print quality.
 - **Print sample page:** Select to print a sample page, which is useful for checking the print quality of the printer. This feature is not available in all printer models.
 - **Print test page:** Select to print a test page containing information about the printer that can help in troubleshooting problems.
 - **Clean Printhead:** Select to clean the print head when white lines or streaks appear in your printouts. After the cleaning finishes, the printer prints a self test report. You have the option to clean the print head again if the report shows print quality problems.
 - **Align printer:** Select to align the printer when white lines or streaks appear in your printouts.
- **Bluetooth**
 - **Device address:** Some devices with Bluetooth wireless technology require you to enter the address of the device they are trying to locate. This menu option shows the printer address.
 - **Device name:** You can select a name for the printer that appears on other devices with Bluetooth wireless technology when they locate the printer.
 - **Passkey:** When the Bluetooth **Security level** of the printer is set to **High**, you must enter a passkey to make the printer available to other Bluetooth devices. The default passkey is 0000.
 - **Visibility:** Select **Visible to all** (default) or **Not visible**. When **Visibility** is set to **Not visible**, only devices that know the printer address can print to it.
 - **Security level:** Select **Low** (default) or **High**. The **Low** setting does not require users of other devices with Bluetooth wireless technology to enter the printer

passkey. **High** requires users of other devices with Bluetooth wireless technology to enter the printer passkey.

- **Reset Bluetooth options:** Select to reset all items in the Bluetooth menu to their default values.
- **Help Menu:** Use the help menu for instructions about using the printer.
 - **Cartridges:** Select to see an animation of how to install an ink cartridge.
 - **Main Tray Loading:** Select to read main tray paper loading instructions.
 - **Photo Tray Loading:** Select to read photo tray paper loading instructions.
 - **Paper jams:** Select to see an animation of how to clear a paper jam.
 - **Camera connect:** Select to read instructions on how to connect a PictBridge camera to the printer.
- **Preferences**
 - **Print paper size:** Touch **Ask before print** to select the paper type and size each time you print (default).
 - **Paper Type:** Touch **Automatic** (default) and the printer will automatically detect the paper type and size when you print.
 - **Date Stamp:** Use this option to include the date and/or time on your printed photos.
 - **Colorspace:** Choose a colorspace. The Auto-select default tells the printer to use the Adobe RGB colorspace, if available. The printer defaults to sRGB if Adobe RGB is not available.
 - **PictBridge Tray Select:** Use to select the default paper tray for printing through the PictBridge connection.
 - **Audio Feedback:** Use to enable an audible tone when a button is touched or pressed.
 - **Video enhancement:** Select **On** (default) or **Off**. When you select **On**, the quality of photos printed from video clips will be improved.
 - **Restore Factory Defaults:** Restores factory settings for all menu items except **Select language** and **Select country/region** (under **Language** in **Preference** menu) and Bluetooth settings (under **Bluetooth** in the main printer menu). This setting does not affect HP Instant Share or Network defaults.

2 Get ready to print

This section includes the following topics:

- [Load paper](#)
- [Insert ink cartridges](#)
- [Insert memory cards](#)

Load paper

Learn how to choose the right paper for your print job and how to load it into the input tray for printing.

Choose the right paper

Use HP Advanced Photo Paper. It is especially designed to work with the inks in your printer to create beautiful photos. Other photo papers will produce inferior results.

For a list of available HP-designed photo paper, or to purchase supplies, go to:

- www.hpshopping.com (U.S.)
- www.hp.com/eur/hpoptions (Europe)
- www.hp.com/jp/supply_inkjet (Japan)
- www.hp.com/paper (Asia/Pacific)

The printer is set by default to print the best quality photos on HP Advanced Photo Paper. If you print on a different type of paper, be sure to change the paper type from the printer menu. See [Printer menu](#).

Load your paper

Paper loading tips:



- Load paper with the side to be printed facing down.
- You can print photos and documents on a wide variety of paper sizes, from 8 x 13 cm (3 x 5 inch) up to 22 x 61 cm (8.5 x 24 inch). The 10 x 15 cm (4 x 6 inch) photo paper is available with and without tabs.
- Before loading paper, pull the out main paper tray and slide out the paper-width and paper-length guides to make room for the paper. After loading paper, adjust the guides to fit close to the edges of the paper without bending the paper. When finished loading paper, push the main tray back in all the way.
- Load only one type and size of paper at a time in the same tray.
- After loading paper, extend the output tray extension to catch your printed pages.

Use the directions in the following table to load the most commonly used paper sizes into the printer.

Paper type	How to load	Tray to load
Any supported photo or plain paper media	<ol style="list-style-type: none">1. Extend the main tray.2. Slide the paper-width and paper-length guides to their outermost positions.	Load the main tray

Paper type	How to load	Tray to load						
	<ol style="list-style-type: none"> 3. Load paper with the side to be printed facing down. Check that the stack of paper is no higher than the top of the paper-length guide. 4. Adjust the paper-width and paper-length guides inward until they stop at the edges of the paper. 5. Push the main tray all the way in. 	<div data-bbox="728 161 1028 552"> </div> <p data-bbox="728 579 1154 609">Load paper and adjust guides inward</p> <table border="1" data-bbox="728 618 990 683"> <tr> <td>1</td> <td>Paper-width guide</td> </tr> <tr> <td>2</td> <td>Paper-length guide</td> </tr> </table> <div data-bbox="728 722 1028 991"> </div> <p data-bbox="728 1017 975 1046">Push in the main tray</p> <table border="1" data-bbox="728 1055 1116 1085"> <tr> <td>1</td> <td>Push in the main tray all the way</td> </tr> </table>	1	Paper-width guide	2	Paper-length guide	1	Push in the main tray all the way
1	Paper-width guide							
2	Paper-length guide							
1	Push in the main tray all the way							
<p>Photo paper up to 10 x 15 cm (4 x 6 inch) with or without tabs, Hagaki cards, A6 cards, L-size cards</p>	<ol style="list-style-type: none"> 1. Lift the output tray and extend the main paper tray. 2. Adjust the paper-width and paper-length guides outward to make room for the paper. 3. Load up to 20 sheets of paper into the photo tray with the print side down. If you are using tabbed paper, insert the paper so the tab is closer to you. 4. Adjust the paper-width and paper-length guides inward until they stop at the edges of the paper. 	<p data-bbox="728 1107 957 1137">Load the photo tray</p>						

(continued)

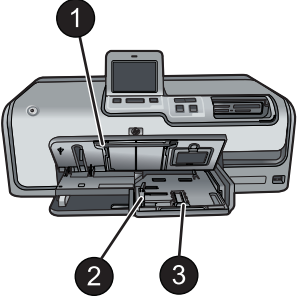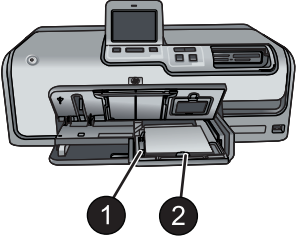Paper type	How to load	Tray to load										
	<p>5. Push in the photo tray. 6. Close the output tray.</p>	 <p>Lift the output tray and adjust guides outward</p> <table border="1" data-bbox="710 548 968 649"><tbody><tr><td>1</td><td>Output tray</td></tr><tr><td>2</td><td>Paper-width guide</td></tr><tr><td>3</td><td>Paper-length guide</td></tr></tbody></table>  <p>Load photo paper and adjust guides inward</p> <table border="1" data-bbox="710 1017 968 1088"><tbody><tr><td>1</td><td>Paper-width guide</td></tr><tr><td>2</td><td>Paper-length guide</td></tr></tbody></table>	1	Output tray	2	Paper-width guide	3	Paper-length guide	1	Paper-width guide	2	Paper-length guide
1	Output tray											
2	Paper-width guide											
3	Paper-length guide											
1	Paper-width guide											
2	Paper-length guide											

Insert ink cartridges

The first time you set up and use your HP Photosmart printer, make sure to install the ink cartridges that were shipped with your printer. The ink in these ink cartridges is specially formulated to mix with the ink in the print head assembly.

Purchasing replacement ink cartridges

When purchasing replacement cartridges, refer to the cartridge numbers that appear on the back cover of this guide. These cartridge numbers may vary by country/region.



Note If you have already used the printer several times and you have installed the HP Photosmart printer software, you can also find the cartridge numbers in the printer software. **Windows users:** Right-click the HP Digital Imaging Monitor icon in the Windows taskbar, and select **Launch/Show HP Solution Center**. Select **Settings**, then **Print Settings**, and then **Printer Toolbox**. Click the **Estimated Ink Levels** tab, and then click **Ink Cartridge Information**. To order ink cartridges, click **Shop Online**. **Mac users:** Click **HP Photosmart Premier** in the Dock. Choose **Maintain Printer** from the **Settings** pop-up menu. Click **Launch Utility**, and then choose **Supplies Status** from the pop-up menu.

Ink cartridge tips


HP Vivera Inks deliver true-to-life photo quality and exceptional fade resistance resulting in vivid colors that last for generations! HP Vivera Inks are specially-formulated and scientifically tested for quality, purity and fade resistance.

For best print quality, HP recommends that you install all retail ink cartridges before the install-by date stamped on the box.

For optimum printing results, HP recommends using only genuine HP ink cartridges. Genuine HP ink cartridges are designed and tested with HP printers to help you easily produce great results, time after time.



Note HP cannot guarantee the quality or reliability of non-HP ink. Printer service or repairs required as a result of printer failure or damage attributable to the use of non-HP ink will not be covered under warranty.

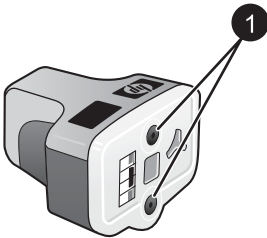

Ink cartridge


1	Do not insert objects into these holes
---	--



Caution To prevent ink loss or spillage: leave the ink cartridges installed while transporting the printer, and avoid leaving used ink cartridge(s) out of the printer for extended lengths of time.


Inserting or replacing the ink cartridges

1. Make sure the power is on, then lift the top cover. Make sure all packing material has been removed from inside the printer.

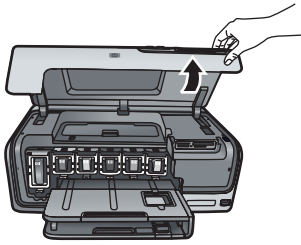


2. Squeeze the gray tab below an ink cartridge slot to release the gray latch inside the printer, then lift the latch.

The ink cartridge areas are color-coded for easy reference. Lift the latch below the appropriate color to insert or replace a cartridge. From left to right, the ink cartridges are black, yellow, light cyan, cyan, light magenta, and magenta.

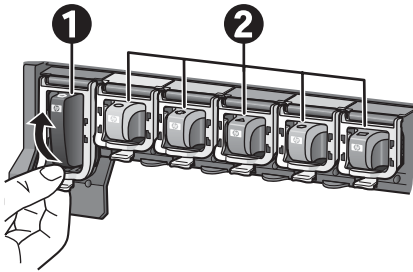

- | | |
|---|---|
| 1 | Ink cartridge latch for the black ink cartridge |
| 2 | Ink cartridge area for the color ink cartridges |

3. If you are replacing a cartridge, remove the old cartridge by pulling it toward you out of its slot.

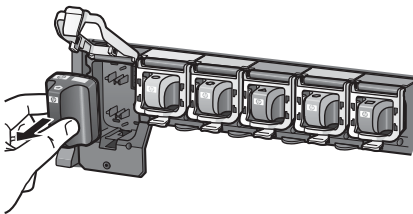


Recycle the old cartridge. The HP Inkjet Supplies Recycling Program is available in many countries/regions and lets you recycle used ink cartridges free of charge. For more information, go to www.hp.com/hpinfo/globalcitizenship/environment/recycle/inkjet.html.

4. Remove the new ink cartridge from its packaging, and while holding it by the handle, slide the ink cartridge into the empty slot.


Make sure you insert the ink cartridge into the slot that has the same shaped icon and color as the new cartridge. The copper-colored contacts should be facing the printer as the ink cartridge is inserted.



Note The first time you set up and use the printer, make sure to install the ink cartridges that were shipped with your printer. The ink in these ink cartridges is specially formulated to mix with the ink in the print head assembly.

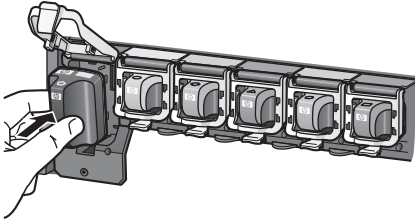

5. Press down on the gray latch until it clicks into place.

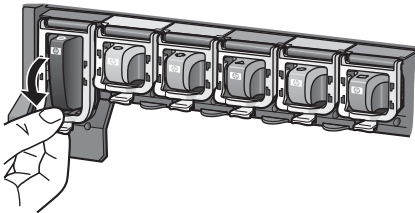

6. Repeat steps 2 through 5 for each ink cartridge you are replacing. You must install all six cartridges. The printer will not work if an ink cartridge is missing.
7. Close the top cover. The touch screen displays six ink drop icons showing the approximate ink level for each cartridge when low ink levels are detected.



Note If you are using non-HP ink, a question mark appears instead of the ink drop in the icon for that cartridge. The printer cannot detect the amount of ink remaining in ink cartridges that contain non-HP ink.

Insert memory cards

After you have taken pictures with a digital camera, you can remove the memory card from the camera and insert it into the printer to view and print your photos. The printer can read the following types of memory cards: CompactFlash™, Memory Sticks, Microdrive™, MultiMediaCard™, Secure Digital™, and xD-Picture Card™.




Caution Using any other type of memory card may damage the memory card and the printer.

To learn about other ways of transferring photos from a digital camera to the printer, see [Connecting to other devices](#).

Supported file formats

The printer can recognize and print the following file formats directly from a memory card: JPEG, uncompressed TIFF, Motion JPEG AVI, Motion-JPEG QuickTime, and MPEG-1. If your digital camera saves photos and video clips in other file formats, save the files to your computer and print them using a software program. For more information, see the electronic Help.

Inserting a memory card

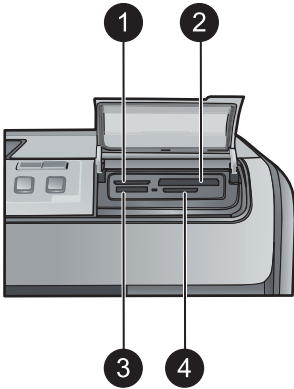

Memory card slots

1	xD-Picture Card
2	Compact Flash I and II, Microdrive
3	Memory Stick
4	Secure Digital, MultiMediaCard (MMC)

Memory card types

Find your memory card in the following table and use the instructions to insert the card into the printer.







Guidelines:

- Insert only one memory card at a time.
- Gently push the memory card into the printer until it stops. The memory card slot allows for only a portion of the card to insert into the printer; do not try to force the memory card all the way into the printer.
- When the memory card is inserted correctly, the memory card light flashes and then remains solid green.



Caution 1 Inserting the memory card any other way may damage the card and the printer.

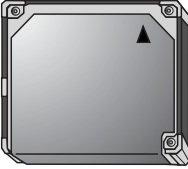Caution 2 Do not pull out a memory card while the memory card light is flashing green. For more information, see [Removing a memory card](#).

Memory card	How to insert the memory card
<p>CompactFlash</p> 	<ul style="list-style-type: none"> • Front label faces up, and if the label has an arrow, the arrow points toward the printer • Edge with metal pinholes goes into the printer first
<p>Memory Stick</p> 	<ul style="list-style-type: none"> • Angled corner is on the left • Metal contacts face down • If you are using a Memory Stick Duo or Memory Stick PRO Duo card, attach the adapter that came with the card before you insert the card into the printer
<p>Microdrive</p> 	<ul style="list-style-type: none"> • Front label faces up, and if the label has an arrow, the arrow points toward the printer • Edge with metal pinholes goes into the printer first
<p>MultiMediaCard</p> 	<ul style="list-style-type: none"> • Angled corner is on the right • Metal contacts face down
<p>Secure Digital</p> 	<ul style="list-style-type: none"> • Angled corner is on the right • Metal contacts face down
<p>xD-Picture Card</p> 	<ul style="list-style-type: none"> • Curved side of card points toward you • Metal contacts face down

Removing a memory card

Wait until the Memory Card light stops flashing, then gently pull the memory card to remove it from the printer.



Caution Do not pull out a memory card while the Memory Card light is flashing. A flashing light means that the printer is accessing the memory card. Removing a memory card while it is being accessed may damage the printer and the memory card or corrupt the information on the memory card.

3 Printing photos without a computer

The HP Photosmart D7300 series printer lets you select, enhance, and print photos without even turning on the computer. Once you've set up the printer using the instructions in the *Quick Start* booklet, you can insert a memory card in the printer and print your photos using the buttons on the printer control panel.

You can also print photos directly from a digital camera. For more information, see [Print photos from a digital camera](#).

Printing photos

You can print photos without a computer in several different ways:

- Insert a memory card with photos on it into one of the memory card slots on the printer
- Connect a PictBridge digital camera to the camera port on the front of the printer
- Install the optional HP Bluetooth® wireless printer adapter and print from a digital camera with Bluetooth wireless technology


Print photos from a memory card

You can print photos from a memory card by inserting the card into the printer and using the printer control panel to view, select, enhance, and print photos. You can also print camera-selected photos—photos you marked for printing using a digital camera—directly from a memory card.

Printing from a memory card is quick and easy, and does not drain the digital camera batteries.

If you want to...	Follow these steps:
<p>Print one or more photos</p> <p>Before you begin, make sure that the memory card is inserted in the printer and the paper tray you want to use is loaded with the correct paper.</p> <p>Check the Photo tray light to verify that the correct tray is selected — the light should be off for the Main tray and on for the Photo tray.</p>	<ol style="list-style-type: none">1. Touch Print.2. Touch 4×6 or Enlargement to select your desired photo size.3. Touch the desired paper size.4. Using the left and right arrow keys, scroll through the available photos.5. Touch the desired photos to select one or more images. Note Press Zoom - to view 4 images on the touch screen display.6. Press Print to print the selected photographs.
<p>Print all photos on the memory card</p> <p>Before you begin, make sure that the memory card is inserted in the printer and the paper tray</p>	<ol style="list-style-type: none">1. Touch Print.2. Touch All.3. Touch the desired paper size.4. Touch the desired photo size.

(continued)

If you want to...	Follow these steps:
<p>you want to use is loaded with the correct paper.</p> <p>Print camera-selected photos from a memory card</p> <p>When you select photos for printing using a digital camera, the camera creates a Digital Print Order Format (DPOF) file that identifies the selected photos. The printer can read DPOF 1.0 and 1.1 files directly from a memory card.</p>	<ol style="list-style-type: none"> 1. Use the digital camera to select the photos you want to print. For more information, see the documentation that came with the camera. 2. If you select default as the photo layout with the camera, touch the Layout to select a photo layout. If you select a photo layout other than default with the camera, photos print in the camera-selected layout regardless of the printer setting. 3. Load the desired paper. 4. Remove the memory card from the digital camera and insert it into the printer. 5. When a message appears on the printer screen asking if you want to print the camera-selected photos, touch . The photos you selected with the camera begin printing. <p>If the printer cannot find or read all of the camera-selected photos on the card, it prints the photos that it can read.</p> <p>After printing, the printer deletes the DPOF file and unmarks the photos.</p>
<p>Print using the Wizard</p> <p>The print wizard provides detailed instructions about selecting, sizing, editing, and printing photographs.</p>	<ol style="list-style-type: none"> 1. Touch Print. 2. Touch Wizard. 3. Follow the prompts to print your desired photo or photos.
<p>Print photos from video clips</p> <p>You can view video clips on the touch screen display, and select and print individual frames.</p> <p>When you first insert a memory card containing a video clip, the printer uses the first frame of the video clip to represent the clip on the printer screen.</p> <p>The printer recognizes video clips recorded in these formats:</p> <ul style="list-style-type: none"> ● Motion-JPEG AVI ● Motion-JPEG QuickTime ● MPEG-1 	<ol style="list-style-type: none"> 1. Touch Print. 2. Touch 4×6 or Enlargement to select your desired photo size. 3. Scroll to select the available videos using the left and right arrows. Note Videos display a video camera icon in the center of the image. 4. Touch the play icon to play the video. You can fast-forward or rewind the video by touching the forward and reverse arrows. 5. To select a frame to print, pause the video by touching the pause icon. The video must be paused to select frames for printing. Note Touch the forward or reverse icons to advance or rewind the video frame-by-frame.

(continued)

If you want to...	Follow these steps:
<p>The printer ignores video clips in any other format.</p> <p>Before you begin, make sure that the memory card is inserted in the printer and the paper tray you want to use is loaded with the correct paper.</p>	<ol style="list-style-type: none">6. Touch the desired frame to select it for printing.7. Touch Print to print the selected frames.
<p>Print a photo index</p> <p>A photo index shows thumbnail views and index numbers for up to 2000 photos on a memory card. Use plain paper instead of photo paper to reduce costs.</p> <p>A photo index may be several pages long.</p> <p>Before you begin, make sure that the memory card is inserted in the printer and the paper tray you want to use is loaded with the correct paper.</p>	<ol style="list-style-type: none">1. Touch Print.2. Touch All.3. Select 8.5×11 paper.4. Touch the index sheet icon.
<p>Stop printing</p>	<p>To stop a print job in progress, press Cancel.</p>

Print photos from a digital camera

You can print photos by connecting a PictBridge digital camera directly to the camera port of the printer with a USB cable. If you have a digital camera with Bluetooth wireless technology, you can insert the optional HP Bluetooth® wireless printer adapter in the printer and send photos to the printer wirelessly.

When you print from a digital camera, the printer uses the settings that you selected on the camera. For more information, see the documentation that came with the camera.

To print photos from a...	Follow these steps
<p>Digital camera with Bluetooth wireless technology</p> <p>If you have a digital camera with Bluetooth wireless technology, you can purchase the optional HP Bluetooth® wireless printer adapter and print from a camera using a Bluetooth wireless connection.</p>	<ol style="list-style-type: none">1. Set the Bluetooth options for the printer using the Bluetooth menu on the touch screen display. For more information, see Bluetooth.2. Load printer paper.3. Insert the HP Bluetooth® wireless printer adapter into the camera port on the front of the printer. The light on the adapter flashes when the adapter is ready to receive data.4. Follow the instructions in the documentation that came with the digital camera to send photos to the printer.

(continued)

To print photos from a...	Follow these steps
<p>Note You can also print from other devices with Bluetooth wireless technology, such as PDAs and camera phones. For more information, see Connecting to other devices and the documentation that came with your Bluetooth adapter.</p>	
<p>Digital camera with PictBridge technology</p>	<ol style="list-style-type: none"> 1. Turn on the PictBridge digital camera and select the photos you want to print. 2. Load paper. 3. Make sure the camera is in PictBridge mode, then connect it to the camera port on the front of the printer using the USB cable that came with the camera. Once the printer recognizes the PictBridge camera, the selected photos print automatically.

Print photos from an iPod

If you have an iPod that can store photos, you can connect your iPod to the printer and print the photos.

Before you begin

Check that the images you copy to the iPod are in JPEG format.



Note iPods might not be available in your country/region.

To import photos to an iPod


 


1. Copy photos from a memory card to your iPod using the Belkin Media Reader for iPod.
2. Verify that photos are on your iPod by selecting **Photo Import** on the iPod menu. Photos appear as **Rolls**.

To print photos from an iPod


 
1. Connect the iPod to the camera port on the **front** of the printer using the USB cable that came with the iPod. The printer screen displays **Reading Device** for several minutes while the photos are read. Then the photos appear on the printer screen.
2. Select the photo(s) you want to print and press **Print**. For more information on selecting and printing photos, see [Printing photos](#).

Photo layouts

Touch **Enlargements** from the printer menu, then touch your desired paper size to select a layout for the photos you want to print.

Layout	Paper size (photo size)
<p>1 per page borderless</p> 	<p>4 x 6 inch (4 x 6 inch) 10 x 15 cm (10 x 15 cm) 5 x 7 inch (5 x 7 inch) 8.5 x 11 inch (8.5 x 11 inch)</p>
<p>1 per page</p> 	<p>3.5 x 5 inch (3.25 x 4.75 inch) 4 x 6 inch (3.75 x 5.75 inch) 10 x 15 cm (9.53 x 14.6 cm) 5 x 7 inch (4.75 x 6.75 inch) 8 x 10 inch (7.75 x 9.75 inch) 8.5 x 11 inch (8 x 10 inch) A6 (9.86 x 14.16 cm) A4 (20 x 25 cm) Hagaki (9.36 x 14.16 cm) L (8.25 x 12.06 cm)</p>
<p>2 per page</p> 	<p>3.5 x 5 inch (2.25 x 3.25 inch) 4 x 6 inch (2.75 x 3.75 inch) 5 x 7 inch (3.25 x 4.75 inch) 8 x 10 inch (4.75 x 6.5 inch) 8.5 x 11 inch (5 x 7 inch) A6 (6.92 x 9.86 cm) A4 (13 x 18 cm) Hagaki (6.8 x 9.36 cm) L (5.87 x 8.25 cm)</p>
<p>3 per page</p> 	<p>3.5 x 5 inch (1.5 x 2.25 inch) 4 x 6 inch (1.75 x 2.625 inch) 5 x 7 inch (2.25 x 3.375 inch) 8 x 10 inch (3.33 x 5 inch) 8.5 x 11 inch (4 x 6 inch) A6 (4.77 x 7.15 cm) A4 (10 x 15 cm) Hagaki (4.52 x 6.78 cm)</p>

(continued)

Layout	Paper size (photo size)
<p>4 per page</p> 	<p>L (3.96 x 5.94 cm)</p> <p>3.5 x 5 inch (1.5 x 2.25 inch) 4 x 6 inch (1.75 x 2.5 inch) 5 x 7 inch (2.2 x 3.25 inch) 8 x 10 inch (3.5 x 4.75 inch) 8.5 x 11 inch (3.5 x 5 inch) A6 (4.77 x 6.92 cm) A4 (9 x 13 cm) Hagaki (4.52 x 6.5 cm) L (3.96 x 5.7 cm)</p>
<p>9 per page</p> 	<p>3.5 x 5 inch (1 x 1.375 inch) 4 x 6 inch (1.125 x 1.5 inch) 5 x 7 inch (1.5 x 2 inch) 8 x 10 inch (2.25 x 3 inch) 8.5 x 11 inch (2.5 x 3.25 inch) – Wallet size A6 (3.07 x 4.05 cm) A4 (6.4 x 8.4 cm) Hagaki (2.9 x 3.86 cm) L (2.53 x 3.36 cm)</p>



Note The printer may rotate the photos to fit the layout.

Improving photo quality

The printer provides a variety of enhancements that can improve the quality of a photo printed from a memory card. These print settings do not change the original photo. They only affect printing.

Problem	How to correct it
<p>Photos with poor brightness</p>	<ol style="list-style-type: none"> 1. Touch Print. 2. Touch 4x6 or Enlargement to select your desired photo size. 3. Touch the desired paper size. 4. Touch Edit, then touch Photo Brightness. 5. Touch the brightness slider to increase or decrease the photo brightness to the desired level, then touch OK.

(continued)

Problem	How to correct it
<p>Photos with red eye</p>	<p>The automatic red eye removal feature is enabled when you turn on the Photo fix function. Enabling the Photo Fix function applies Smart Focus, Adaptive Lighting, and red eye removal features to selected photos.</p> <p>→ Press Autocorrect to enable the Photo Fix function.</p>
<p>Poor-quality video clips</p> <p>This preference affects photos printed from video clips.</p> <p>Note This feature does not improve photos printed using the Video action prints feature in the Print Options menu. This feature also does not work with photos printed in the 9-per-page layout.</p>	<p>Improve the quality of photos printed from video clips</p> <ol style="list-style-type: none">1. Touch Settings.2. Touch the arrows to scroll and locate Preferences.3. Touch Preferences.4. Using the arrows, locate then touch Video Enhancement.5. Touch On, then touch OK. <p>For information about printing photos from video clips, see Print photos from a memory card.</p>

Getting creative

The printer provides a variety of tools and effects that let you use your photos in creative ways. These print settings do not change the original photo. They only affect printing.

To try these features...	Follow these steps
<p>Add a color effect</p> <p>You can set the printer to change the color option applied to a photo from Color (default) to Black & white, Sepia, or Antique.</p> <p>Photos printed in Sepia print in brown tones and look similar to photos produced in the early 1900s. Photos printed in Antique print in the same brown tones, but with some pale colors added to give the appearance that the photos are hand-colored.</p>	<ol style="list-style-type: none">1. Touch Print.2. Touch 4×6 or Enlargements and select your desired photo size.3. Touch the desired paper size.4. Touch the desired photos to select one or more images.5. Touch Edit from a selected photo.6. Use the arrows to locate the Color Effect function. Touch Color Effect.7. Touch the desired color effect.

(continued)

To try these features...	Follow these steps
<p>Add the date and time to your prints</p> <p>You can print a stamp on the front of your photos that shows when the photo was taken. This preference affects all prints.</p>	<ol style="list-style-type: none"> 1. Touch Settings. 2. Touch Preferences, then touch Date Stamp. 3. Touch one of the following date/time stamp options: <ul style="list-style-type: none"> – Date and Time – Date Only – Off <p>If you use a computer to modify the photo and then save your changes, the original date and time information are lost. Changes that you make to the photo using the printer control panel do not affect the date and time information.</p>
<p>Change the print quality</p> <p>You can change the print quality for photos. Best quality is the default and produces the highest quality photos. Normal quality conserves ink and prints faster.</p>	<p>To change the print quality to Normal for one print job:</p> <ol style="list-style-type: none"> 1. Touch Settings. 2. Touch Tools, then touch Print quality. 3. Touch Normal, then touch OK. <p>Print quality will revert to Best after the next print job.</p>
<p>Crop a photo</p> <p>Press Zoom + and Zoom – to increase or decrease the magnification by 1.25×. The maximum level is 5.0×.</p>	<ol style="list-style-type: none"> 1. Touch Print. 2. Touch 4×6 or Enlargement to select your desired photo size. 3. Touch the desired paper size. 4. Touch the desired photo to select the image. 5. Press Zoom + to increase the magnification of the photo by 1.25×. The green crop box appears. Press Zoom + repeatedly until you reach the desired magnification. (After zooming in, you can zoom back out by pressing Zoom –.) <p style="text-align: center;">Note The crop box changes from green to yellow if printing at the selected magnification will noticeably reduce the print quality.</p> <ol style="list-style-type: none"> 6. At any magnification level, touch the arrows to move the crop box left, right, up, or down. 7. Touch Crop when the portion of the image you want to print is in the crop box. Cropping does not change the original photo. It only affects printing.
<p>Print panoramic photos</p>	<ol style="list-style-type: none"> 1. Touch Print. 2. Touch Other Projects, then touch Panorama Prints.

(continued)



To try these features...	Follow these steps
	<ol style="list-style-type: none"><li data-bbox="580 161 1030 213">3. Follow the prompt to load 10 x 30 cm (4 x 12 inch) media, then touch OK.<li data-bbox="580 222 1126 300">4. Touch a photo to select it. If desired, crop the photo before printing. See The crop box has a 3:1 aspect ratio. <p data-bbox="658 326 1135 378">Note All photos printed in panoramic mode are printed borderless.</p>

4 Getting connected

Use the printer to stay connected to other devices and people.

Connecting to other devices

 This printer offers several ways of connecting to computers or other devices. Each connection type lets you do different things.

Connection type and what you need	This lets you...
<p>Memory cards</p>  <p>A memory card</p> <p>A compatible digital camera memory card Insert the memory card into the appropriate memory card slot on the front of the printer.</p>	<ul style="list-style-type: none">• Print directly from a memory card to the printer.• Save photos from a memory card inserted in the printer to a computer where you can enhance or organize them in the HP Photosmart Premier or other software. For more information, see Saving photos to a computer and Print photos from a memory card.
<p>USB</p> <ul style="list-style-type: none">• A Universal Serial Bus (USB) 2.0 full-speed compliant cable 3 meters (10 feet) or less in length. For instructions about connecting the printer with a USB cable, see the <i>Quick Start</i> booklet.• A computer with Internet access (to use HP Photosmart Share).	<ul style="list-style-type: none">• Print from a computer to the printer. See Printing from a computer.• Save photos from a memory card inserted in the printer to a computer where you can enhance or organize them in the HP Photosmart Premier or other software.• Share photos through HP Photosmart Share.• Print directly from an HP Photosmart direct-printing digital camera to the printer. For more information, see Print photos from a digital camera and the camera documentation.
<p>PictBridge</p>  <p>The PictBridge symbol</p>	<p>Print directly from a PictBridge-compatible digital camera to the printer.</p> <p>For more information, see Print photos from a digital camera and the camera documentation.</p>

(continued)

Connection type and what you need	This lets you...
<p>A PictBridge-compatible digital camera and a USB cable.</p> <p>Connect the camera to the camera port on the front of the printer.</p>	
<p>Bluetooth</p> <p>The optional HP Bluetooth wireless printer adapter.</p> <p>If the printer came with this accessory or you have purchased it separately, see the accompanying documentation and the onscreen Help for instructions.</p>	<p>Print from any device with Bluetooth wireless technology—such as a digital camera, a camera phone, or a PDA—to the printer.</p> <p>If you connect the optional HP Bluetooth wireless printer adapter to the printer through the camera port, be sure to set the Bluetooth printer menu options as needed. See Settings.</p>
<p>HP iPod</p> <p>An HP iPod and the USB cable that came with it. Connect the HP iPod to the camera port on the front of the printer.</p>	<p>Print directly from an HP iPod (with photos stored in it) to the printer. For more information, see Print photos from an iPod.</p>

Saving photos to a computer

You can save photos to a computer from any memory card inserted in the printer, if you set up a USB connection between the two devices.

If you are using a Windows computer

Use either of these methods to save photos to your computer.

- Insert a memory card into the printer. The HP Photosmart Premier transfer software (HP Transfer and Quick Print) opens on your computer screen and allows you to designate a location on the computer to save images. For more information, see the onscreen HP Photosmart printer software help.
- Insert a memory card into the printer. The memory card appears in Windows Explorer as a removable drive. Open the removable drive and drag photos from the card to any location on your computer.

If you are using a Macintosh

1. Insert a memory card into the printer.
2. Wait for iPhoto to start and read the contents of the memory card.
3. Click **Import** to save the photos on the card to your Macintosh.



Note The memory card also appears on the desktop as a drive icon. You can open it and drag photos from the card to any location on your Macintosh.

Connecting through HP Photosmart Share

Use HP Photosmart Share to share photos with friends and relatives using e-mail, online albums, or an online photo finishing service. Your printer must be connected through a USB cable to a computer with Internet access and have all the HP software installed. If you try to use Share and do not have all the required software installed or configured, a message prompts you through the required steps.

Use Share (USB) to send photos (Windows users):

1. Insert a memory card and select some photos.
2. Touch **Share** on the printer screen.
3. Follow the instructions on your computer to share the selected photos with others.

Use Share (USB) to send photos (Mac users)

1. Open **HP Photosmart Premier** and select photos to share. For information about HP Photosmart Premier, see [HP Photosmart Premier](#).
2. Click the **Applications** tab in **HP Photosmart Premier**, then double-click **HP Photosmart Share**.
3. Follow the instructions on your computer to share the selected photos with others.

See the onscreen software help for more information about using HP Photosmart Share

5 Printing from a computer

To print from a computer, the printer software must be installed. During software installation, either HP Photosmart Premier (Mac users and Windows Full-install users) or HP Photosmart Essential (Windows Express-install users) is installed on your computer, allowing you to organize, share, edit, and print photos.

For more information on installing the software, see the *Quick Start* Guide. Update the software regularly to ensure you have the latest features and improvements; for instructions, see [Update the software](#).

To work with photos, you need to transfer them to a computer that is connected to the printer. See [Saving photos to a computer](#).



Note Windows users: HP Photosmart Premier can only be used on computers with processors that have Intel® Pentium® III (or equivalent) and higher.

Using creative options in the printer software

Read through these tips on how to open and use HP Photosmart Premier, HP Photosmart Essential, and HP Photosmart Share.

HP Photosmart Premier

HP Photosmart Premier is an easy-to-use software program that gives you everything you need to have fun with your photos, in addition to basic photo editing and printing. This software also gives you access to HP Photosmart Share so that you can easily share your photos.

Open HP Photosmart Premier (Windows users)

→ Double-click the **HP Photosmart Premier** icon on your desktop. If you need help, see the software help within HP Photosmart Premier.

Open HP Photosmart Premier (Mac users)

→ Click the **HP Photosmart Premier** icon in the Dock. If you need help, select **HP Photosmart Premier help** from the **help** menu.

Explore the many features of HP Photosmart Premier:

- **View** — View photos in multiple sizes and ways. Easily organize and manage your photos.
- **Edit** — Crop your photos and fix photos with red eye. Automatically adjust and enhance your photos in different sizes and in multiple layouts.
- **Print** — Print your photos in different sizes and in multiple layouts.
- **Share** — Send photos to family and friends without the bulky attachments using HP Photosmart Share, a better way to send e-mail.
- **Create** — Easily create album pages, cards, calendars, panoramic photos, CD labels, and more.
- **Back-up** — Make back-up copies of your photos to store and save.

HP Photosmart Essential

HP Photosmart Essential is an easy-to-use software program that gives you basic photo editing and printing capabilities. This software also gives you access to HP Photosmart

Share so that you can easily share your photos. HP Photosmart Essential is only available for Windows users.

Open HP Photosmart Essential (Windows users)

→ Double-click the **HP Photosmart Essential** icon on your desktop. If you need help, see the software help within HP Photosmart Essential.

Explore the many features of HP Photosmart Essential:

- **View** — View photos in multiple sizes and ways. Easily organize and manage your photos.
- **Edit** — Crop your photos and fix photos with red eye. Automatically adjust and enhance your photos to make them perfect.
- **Print** — Print your photos in different sizes and in multiple layouts.
- **Share** — Send photos to family and friends without the bulky attachments with HP Photosmart Share, a better way to send e-mail.

HP Photosmart Share

HP Photosmart Share allows you to send photos to family and friends without bulky e-mail attachments. For more information, see [Connecting through HP Photosmart Share](#) and the HP Photosmart Premier or HP Photosmart Essential help.

Open HP Photosmart Share (Windows users)

→ Click the **HP Photosmart Share** tab within HP Photosmart Premier or HP Photosmart Essential.

Open HP Photosmart Share (Mac users)

→ Click the **Applications** tab in HP Photosmart Premier, then double-click **HP Photosmart Share**.

Set print preferences

Print preferences are set by default, but can be altered to suit your needs. You can set specific job settings when you print from the computer. When you change settings before printing, the changes only affect the current print job. In some Windows software programs, you need to click **Properties** or **Preferences** within the **Print** dialog box to access the advanced printing features. See the electronic Help for more information about printing preferences.

Access print preferences (Windows users)

1. Open the **Print** dialog box, usually by selecting **Print** from the **File** menu.
2. Change the printing preferences in the **Print** dialog box tabs, or click **Properties** or **Preferences** to access more printing preferences.

Access print preferences (Mac users)

1. Open the **Print** dialog box, usually by selecting **Print** from the **File** menu.
2. Change the printing preferences in the **Print** dialog box by selecting the print options you want to change in the **Copies & Pages** drop-down menu.

For more information on changing the printing preferences, see the electronic Help.

Open the electronic help

Windows users:

- Press F1 on your keyboard.
- For field-level help, click the ? in the top right corner of the **Print** dialog box.

Mac users:

1. From the **Finder** menu, select **Help**, and then **Mac Help**.
2. Select **HP Photosmart Premier help** from the **Library**, and then select **HP Photosmart printer help**.

HP Real Life technologies features

Explore the many photo editing and enhancing options in the HP Real Life technologies software features. These features—such as automatic red eye removal and adaptive lighting—make it easy for you to print high-quality photos.

Access Real Life technologies features (Windows users)

1. Open the **Print** dialog box, usually by selecting **Print** from the **File** menu.
2. Click the **Paper/Quality** tab, then click the **Real Life Digital Photography** button —OR— Click the **Properties** or **Preferences** button, and then click the **Real Life Digital Photography** button.

Access Real Life technologies features (Mac users)

1. Open the **Print** dialog box, usually by selecting **Print** from the **File** menu.
2. Select **Real Life Digital Photography** from the **Copies & Pages** drop-down menu.

6 Care and maintenance

The printer requires very little maintenance. Follow the guidelines in this section to extend the life span of the printer and printing supplies, and to ensure that the photos you print are always of the highest quality.

- [Clean and maintain the printer](#)
- [Update the software](#)
- [Store and transport the printer and ink cartridges](#)
- [Maintain the quality of photo paper](#)

Clean and maintain the printer

Keep the printer and print cartridge clean and well maintained using the simple procedures in this section.

Clean the outside of the printer

1. Turn off the printer, then disconnect the power cord from the back of the printer.
2. Wipe the outside of the printer with a soft cloth that has been lightly moistened with water.



Caution Do not use any type of cleaning solution. Household cleaners and detergents may damage the printer finish. Do not clean the interior of the printer. Keep all fluids away from the interior. Do not lubricate the metal rod on which the print head slides. Noise is normal when the print head moves back and forth.

Aligning the printer

Use the following procedure when the self test report shows streaking or white lines through any of the blocks of color.

If you still have print quality problems after aligning the printer, try cleaning the print head using the procedure described in [Care and maintenance](#). If print quality problems persist after aligning and cleaning, contact HP Support.

1. Load letter or A4 unused plain white paper into the Main tray.
2. Touch **Settings**.
3. Touch **Tools**, then scroll and find Align printer.
4. Touch **Align printer**.
The printer aligns the print head, prints an alignment page, and calibrates the printer. Recycle or discard the alignment page.
5. Touch **OK**.

Print a sample page

You can print a sample page to test the printer photo printing quality and to make sure the paper is loaded correctly.

1. Load paper in the Main tray. Use plain paper to conserve photo paper.
2. Touch **Settings**.
3. Touch **Tools**, then touch **Print sample page**.

Automatically clean the printhead

If you notice white lines or streaks on the photos you print, or in the color blocks of the self test report, use this procedure to clean the print head. Do not clean the print head unnecessarily, as this wastes ink and shortens the life of the ink nozzles on the print head.

1. Load paper in the Main tray. Use plain paper to conserve photo paper.
2. Touch **Settings**.
3. Touch **Tools**, then scroll to Clean printhead.
4. Touch **Clean printhead**.

If print quality still seems poor after you clean the print head, try aligning the printer using the procedure described in [Aligning the printer](#). If print quality problems persist after cleaning and aligning, contact HP support.

Manually clean the ink cartridge contacts

Clean the copper-colored ink cartridge contacts if a message appears on the printer screen that says a cartridge is missing or damaged.

Before cleaning the ink cartridge contacts, remove the ink cartridge and verify that nothing is covering the ink cartridge contacts or the ink cartridge slot, then reinstall the ink cartridge. If you continue to get a message that says a cartridge is missing or damaged, clean the ink cartridge contacts. If you still get this message after cleaning the contacts, you will need a replacement ink cartridge. Remove the affected ink cartridge and look at the end-of-warranty date on the bottom, in YYYY/MMM/DD format. If it is before the end-of-warranty date, contact HP support to obtain a replacement ink cartridge.

To clean the ink cartridge contacts:

1. Gather the following items to clean the contacts:
 - Distilled, filtered, or bottled water (tap water may contain contaminants that can damage the ink cartridge)




Caution Do not use platen cleaners or alcohol to clean the ink cartridge contacts. These can damage the ink cartridge or the HP Photosmart printer printer.

- Dry foam rubber swabs, lint-free cloth, or any soft material that will not come apart or leave fibers.
2. Open the top cover of the printer.
 3. Squeeze the gray tab below an ink cartridge slot to release the gray latch inside the printer, then lift the latch.



Caution Do not remove multiple ink cartridges at the same time. Remove and clean each ink cartridge one at a time. Do not leave the ink cartridge outside the printer for more than 30 minutes.

4. Lightly moisten a swab or cloth with water and squeeze out any excess water.
5. Hold the ink cartridge by its handle and gently wipe only the copper-colored contacts with the swab or cloth.

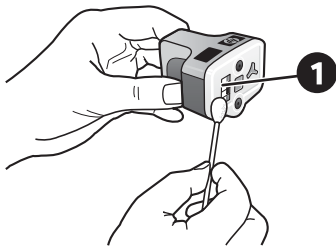

1 Gently wipe only the copper-colored contacts

6. Place the ink cartridge back into the empty slot and press down on the gray latch until it clicks into place.
7. Repeat if necessary for the other ink cartridges.
8. Close the top cover.



Caution The ink supply may become pressurized. Inserting a foreign object into the ink supply could result in ink being expelled and coming in contact with persons or property.


Print a self test report

If you are experiencing problems with printing, print a self test report. This two-page report—labelled the Extended Self Test Diagnostic Page—can help you diagnose printing problems and can provide valuable information if you need to call HP Support. You can also use this report to check on the approximate percentage of ink remaining in the ink cartridges.

1. Touch **Settings**.
2. Touch **Tools**, then scroll to Print test page.
3. Touch **Print test page**.

The HP Photosmart printer prints a two-page self test report that contains the following information:

- **Product information:** Includes the model number, serial number, and other product information.
- **Revision information:** Includes the firmware version number and indicates whether or not you have an HP two-sided printing accessory (duplexer) installed.
- **Ink delivery system information:** Displays the approximate ink level of each installed ink cartridge, the status of each ink cartridge, the date each cartridge was installed, and the expiration date for each cartridge.
- **Print head assembly information:** Contains information that may be used for diagnostic purposes if you need to call HP Support.
- **Print head parameters:** Contains information that may be used for diagnostic purposes if you need to call HP Support.
- **Print quality pattern:** Displays six color blocks, representing each of the six installed cartridges. When streaks appear through the color blocks, or there are missing color blocks, clean the print head using the procedure described in [Care and maintenance](#). If the color blocks still show print quality problems after cleaning the print head, align the printer using the procedure described in [Aligning the printer](#). If the color blocks continue to show print quality problems after cleaning and aligning, contact HP support.
- **History log:** Contains information that may be used for diagnostic purposes if you need to call HP Support.

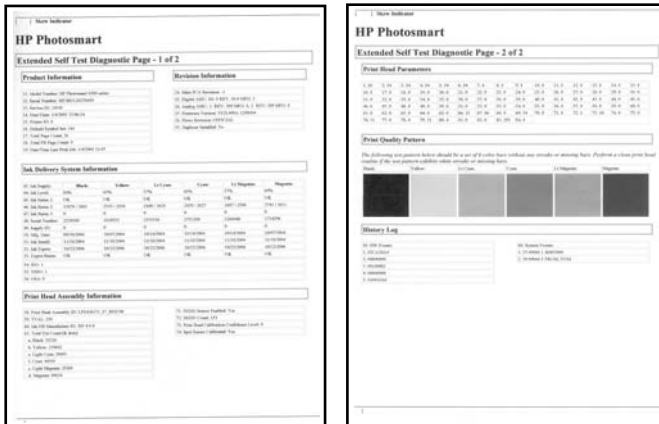

Self test report

Update the software

Download the latest printer software update periodically to ensure you have the latest features and improvements. You can download printer software updates by going to www.hp.com/support or by using HP Software Update.



Note The printer software update that you download from the HP Web site does not update the HP Photosmart Premier software.

Downloading the software (Windows)



Note Make sure you are connected to the Internet before you use HP Software Update.

1. From the Windows **Start** menu, select **Programs** (in Windows XP, select **All Programs**) > **Hewlett-Packard** > **HP Software Update**. The HP Software Update window opens.
2. Click **Check Now**. HP Software Update searches the HP Web site for printer software updates. If the computer does not have the most recent version of the printer software installed, a software update appears in the HP Software Update window.



Note If the computer has the most recent version of the printer software installed, the following message appears in the HP Software Update window: “No updates are available for your system at this time”.

3. If a software update is available, click the checkbox next to the software update to select it.
4. Click **Install**.
5. Follow the onscreen instructions to complete the installation.

Downloading the software (Mac)



Note Make sure you are connected to the Internet before you use HP Photosmart Updater.

1. On your Mac in the Finder, choose **Go > Applications**.
2. Choose **Hewlett-Packard > Photosmart > HP Photosmart Updater**.
3. Follow the onscreen instructions to check for software updates.
If you are behind a firewall, you need to enter the proxy server information in the updater.

Store and transport the printer and ink cartridges

Protect the printer and ink cartridges by storing them properly when you are not using them.

Store and transport the printer

The printer is built to withstand long or short periods of inactivity. Store the printer indoors out of direct sunlight in a place without temperature extremes.



Caution To prevent ink loss or spillage: do not transport or store the printer on its side, and leave the ink cartridges installed while storing and transporting the printer.

Store and transport the ink cartridges

When you transport or store the printer, always leave the active ink cartridge inside the printer to prevent the ink from drying out.



Caution 1 To prevent ink loss or spillage: leave the ink cartridges installed while storing and transporting the printer, and avoid leaving used ink cartridge(s) out of the printer for extended lengths of time.

Caution 2 Make sure the printer completes its power-down cycle before you unplug the power cord. This allows the printer to store the print head properly.

Follow this tip to help maintain your HP ink cartridges and ensure consistent print quality: Keep all unused ink cartridges in their original sealed packages until they are needed. Store ink cartridges at room temperature (15-35 °C or 59-95 °F).

Maintain the quality of photo paper

For best results with photo paper, follow the guidelines in this section.

To store photo paper

- Store the photo paper in its original packaging or in a resealable plastic bag.
- Store the packaged photo paper on a flat, cool, and dry surface.
- Return unused photo paper to the plastic bag. Paper left in the printer or exposed to the elements may curl.

To handle photo paper

- Always hold photo paper by the edges to avoid fingerprints.
- If the photo paper has curled edges, place it in its plastic storage bag and gently bend it in the opposite direction of the curl until the paper lies flat.

7 Troubleshooting

The HP Photosmart printer is designed to be reliable and easy to use. This chapter answers frequently asked questions about using the printer and printing without a computer. It contains information about the following topics:

- [Printer hardware problems](#)
- [Printing problems](#)
- [Error messages](#)

For additional troubleshooting information, see:

- **Software installation troubleshooting:** The *Quick Start* guide that came with the printer.
- **Printer software and printing from a computer troubleshooting:** The onscreen HP Photosmart Printer Help. For information about viewing the onscreen HP Photosmart Printer Help, see [Welcome](#). Mac users should also check for troubleshooting and readme options on the **HP Photosmart Menu** in the Dock.

Printer hardware problems

Before contacting HP support, read this section for troubleshooting tips or go to the online support services at www.hp.com/support.



Note If you want to connect the printer to a computer with a USB cable, HP recommends using a 2.0 high-speed compliant cable 3 meters (10 feet) or less in length.

The Print light is flashing blue but the printer is not printing

Solution The printer is busy processing information; wait for it to finish.

The Attention light is on

Solution

- Check the printer screen for instructions. If a digital camera is connected to the printer, check the camera screen for instructions. If the printer is connected to a computer, check the computer monitor for instructions.
- Turn off the printer, then unplug its power cord. Wait about 10 seconds, then plug it in again. Turn on the printer.

If the Attention light stays on after trying the above solutions, go to www.hp.com/support, or contact HP Support for help.

The printer does not find the photos I stored on my memory card

Solution The memory card may contain file types the printer cannot read directly from the card.

- Save the photos to a computer, then print them from the computer. For more information, see the onscreen HP Photosmart Printer Help and the documentation that came with the camera.
- The next time you take photos, set the digital camera to save them in a file format the printer can read directly from the memory card. For a list of supported file formats, see [Printer specifications](#). For instructions on setting the digital camera to save photos in specific file formats, see the documentation that came with the camera.

The memory card may need to be reformatted if the problem persists.

The printer is plugged in but will not turn on

Solution

- The printer may have drawn too much power. Unplug the printer power cord. Wait about 10 seconds, then plug the cord back in. Turn on the printer.
 - The printer may be plugged into a power strip that is turned off. Turn on the power strip, then turn on the printer.
 - The power cord could be defective. Make sure the green light on the power cord is lit.
-

The printer makes noises when I turn it on, or starts making noises after sitting unused for a while

Solution The printer may make noises after long periods of inactivity (approximately 2 weeks) or when its power supply has been interrupted and then restored. This is normal operation. The printer is performing an automatic maintenance procedure to ensure it produces the best quality output.

All the lights are flashing on the printer

Solution The printer has encountered a hardware error and may need to be serviced. Unplug the power cord to the printer. Wait about 10 seconds, and then plug it in again. Turn on the printer. If the lights are still flashing, please go to www.hp.com/support, or contact HP Support for help.

Printing problems

Before contacting HP support, read this section for troubleshooting tips or go to the online support services at www.hp.com/support.

The printer does not print borderless photos when I print from the control panel

Solution Make sure the correct layout is selected when setting up the print job. When selecting photo and paper size, the image rectangle must be solidly filled with orange to indicate a borderless print.

Printing is very slow

Solution You may have one of the following situations: 1) you may be printing a PDF or a project containing high-resolution graphics or photos or 2) you may have selected the highest resolution for your printout. Large, complex projects containing graphics or photos print slower than text documents, especially at higher resolutions.

Paper does not feed into the printer correctly from the Main tray

Solution

- There may be too much paper loaded in the tray. Remove some paper and try printing again.
 - The Main tray may not be pushed in all the way. Push the Main tray all the way in.
 - The paper guides may not be adjusted correctly. Make sure the paper-width and paper-length guides fit close to the edges of the paper without bending the paper.
 - Two or more pieces of paper may be sticking together. Remove the paper from the Main tray, fan the edges of the stack to separate the sheets of paper, then reload the paper and try printing again.
 - If the paper is wrinkled or bent, try using different paper.
 - The paper may be too thin or too thick. Use HP inkjet paper for best results. For more information, see [Choose the right paper](#).
-

Printed pages are dropping off of the Output tray

Solution Always extend the Output tray extension when you print.

The printout is rippled or curled

Solution The project you are printing uses a larger amount of ink than normal. Print the project from a computer, and use the printer software to lower the ink saturation level. See the onscreen HP Photosmart Printer Help for more information.

The document printed at an angle or is off-center

Solution

- The paper may not be loaded correctly. Reload the paper, making sure it is correctly oriented in the Main tray and that the paper-width and paper-length

guides fit close to the edges of the paper. For paper-loading instructions, see [Load your paper](#).

- If you are using a two-sided printing accessory, try removing it, replacing the rear access door, and printing again.
 - The printer may need to be aligned. For more information, see [Aligning the printer](#).
-

Colors are not printing satisfactorily

Solution

- One of the color ink cartridges may be very low on ink, resulting in another color being substituted during printing. Check the estimated ink levels by touching the ink icons on the home screen. If an ink cartridge is low on ink, replace it. For more information, see [Insert ink cartridges](#).
 - The printer may need to be aligned. For more information, see [Aligning the printer](#).
 - The print head may need to be cleaned. For more information, see [Care and maintenance](#).
-

No page came out of the printer or the paper jammed while printing

Solution

- The printer may need attention. Read the printer screen for instructions.
 - The power may be off or there may be a loose connection. Make sure the power is on and the power cord is securely connected.
 - You may not have any paper in the Main tray or Photo tray. Check that the paper is loaded correctly. For paper-loading instructions, see [Load your paper](#).
 - If the paper jammed while printing, try the following:
 - Turn off the printer, then unplug it from the power source. Clear the printer of any paper obstructing the paper path. Remove the rear access door. Gently remove the jammed paper from the printer, then replace the rear access door. If all jammed paper cannot be removed from the rear area of the printer, try removing paper jammed in the middle of the printer by opening the paper jam door located inside the top cover. For illustrations of the two places to clear a paper jam, see [Paper errors](#). When you are finished clearing the paper jam, plug the printer back in, turn it on, and try printing again.
 - If you were printing labels, make sure a label did not become unglued from the label sheet while going through the printer.
-

A blank page came out of the printer

Solution

- You may have begun printing and then cancelled the print job.

If you cancelled the print job before printing started, the printer may have already loaded paper in preparation for printing. The next time you print, the printer ejects the blank page before starting the new printing project.

- A print job with a large amount of data may have been sent to the printer. Wait for the printer to service the print head before it continues printing.
-

The printer asked me to print an alignment page

Solution Periodically, the printer needs to perform a print head alignment to maintain optimal print quality.

When prompted, load plain letter or A4 paper. Discard or recycle the alignment page.

The photo did not print using the default print settings

Solution You may have changed the print settings for the selected photo. Print settings you apply to an individual photo override the default print settings. Discard all print settings that have been applied to an individual photo by deselecting the photo. For more information, see [Settings](#).

The printer ejects the paper when preparing to print

Solution Direct sunlight could be interfering with the operation of the automatic paper sensor. Move the printer out of direct sunlight.

Print quality is poor

Solution

- One of the ink cartridges may be very low on ink, resulting in another color being substituted during printing. Check the estimated ink levels by touching the ink icons on the home screen. If an ink cartridge is low on ink, replace it. For more information, see [Insert ink cartridges](#).
- Use photo paper designed for the printer. For best results, use the papers recommended in [Choose the right paper](#).
- You may be printing on the wrong side of the paper. Make sure the paper is loaded with the side to be printed facing down.
- You may have selected a low-resolution setting on the digital camera. Reduce the size of the image and try printing again. For better results in the future, set the digital camera to a higher photo resolution.
- There may be a problem with an ink cartridge or with the print head. Try the following:
 - Remove and then reinsert each ink cartridge, one at a time, to make sure they are all properly seated.
 - Run the automatic print head cleaning procedure. For more information, see [Care and maintenance](#).

- Align the printer. For more information, see [Aligning the printer](#).
 - If print quality problems persist after you have tried all of the above solutions, contact HP Support.
-

Photos are not printing correctly

Solution

- You may have loaded the photo paper incorrectly. Load the photo paper with the side to be printed facing down.
 - The photo paper may not have fed into the printer correctly. Try the following:
 - Check for a paper jam. For more information, see [Paper errors](#).
 - Insert the photo paper as far as it will go into the Photo tray.
 - Load one sheet of photo paper at a time.
-

The photos I marked for printing in the digital camera do not print

Solution Some digital cameras let you mark photos for printing in both the camera's internal memory and on the memory card. If you mark photos in the internal memory, and then move photos from the camera's internal memory to the memory card, the marks do not transfer. Mark photos for printing after you transfer them from the digital camera's internal memory to the memory card.

Error messages

Before contacting HP support, read this section for troubleshooting tips or go to the online support services at www.hp.com/support.

Error messages that appear on the printer screen can be divided into the following types:


- [Paper errors](#)
- [Ink cartridge errors](#)
- [Memory card errors](#)
- [Computer printing errors](#)

Paper errors

Before contacting HP support, read this section for troubleshooting tips or go to the online support services at www.hp.com/support.


Error message: Paper jam. Clear jam then press OK.

Solution Turn off the printer, then unplug it from the power source. Clear the printer of any paper that may be obstructing the paper path. Remove the rear access door. Gently remove the jammed paper from the printer, then replace the rear access door.

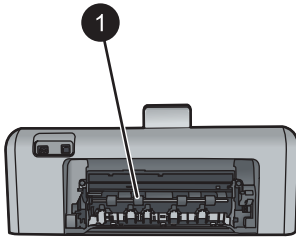

-
- 1 Remove the rear access door to clear paper jams.

If you cannot remove all jammed paper from the rear area of the printer, try removing paper jammed in the middle of the printer by opening the paper jam door located inside the top cover.

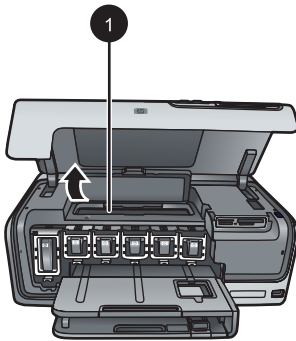

-
- 1 Open the paper jam door to clear paper jams in the middle of the printer.

Plug the printer back in and turn it on.

Error message: Out of paper. Load paper then press OK.

Solution Load paper, then touch **OK** to print again. For paper-loading instructions, see [Load your paper](#).

Error message: Unsupported media size.

Solution The printer cannot use the size of paper loaded in the paper tray. Touch **OK**, then load a supported paper size instead. For a list of supported paper sizes, see [Printer specifications](#).

Error message: Automatic paper sensor failed.

Solution The automatic paper sensor is obstructed or damaged. Try moving the printer out of direct sunlight, then touch **OK** and try printing again. If this does not work, go to www.hp.com/support or contact HP Support.

Ink cartridge errors

Before contacting HP support, read this section for troubleshooting tips or go to the online support services at www.hp.com/support.

Error message: Wrong ink cartridge(s) installed

Solution The first time you set up and use your HP Photosmart printer, make sure to install the ink cartridges that were shipped with your printer. The ink in these ink cartridges is specially formulated to mix with the ink in the print head assembly.

To resolve this error, replace the affected ink cartridge(s) with the ink cartridges that were shipped with your HP Photosmart printer.

For more information on replacing ink cartridges, see [Insert ink cartridges](#).

Error message: Incorrect ink cartridge

Solution The indicated ink cartridge(s) cannot be used after the device has undergone initialization. Replace the ink cartridge(s) with the appropriate ink cartridges for your HP Photosmart printer. The cartridge numbers you can use with this printer appear on the back cover of this printed guide.

For more information on replacing ink cartridges, see [Insert ink cartridges](#).

Error message: Replace cartridges soon

Solution The indicated ink cartridge(s) are low on ink.

You might be able to continue printing for a short period of time with ink remaining in the print head assembly. Replace the indicated ink cartridge(s) or touch **OK** to continue.

For more information on replacing ink cartridges, see [Insert ink cartridges](#).

Error message: Ink cartridge(s) are empty

Solution Replace the indicated ink cartridge(s) with new ink cartridge(s).

- If the black ink cartridge is empty, you can continue printing with the other color ink cartridges by selecting that option in the displayed printer screen prompts.
- If a color ink cartridge is empty, you can continue printing with the black ink cartridge by selecting that option in the displayed printer screen prompts.

Depending on the status of your print job, you can touch **OK** to continue. If the HP Photosmart printer is in the middle of a print job, press **Cancel** and restart your print job.



Note Text and photo quality will differ from those printed when using all ink cartridges. If the empty ink cartridge(s) are not replaced soon, all printing will stop.

For more information on replacing ink cartridges, see [Insert ink cartridges](#).

Error message: Cannot print

Solution The indicated ink cartridge(s) are out of ink.

Replace the indicated ink cartridge(s) immediately so that you can resume printing.

The HP Photosmart printer cannot continue printing until the indicated ink cartridge(s) are replaced. All printing will stop.

For more information on replacing ink cartridges, see [Insert ink cartridges](#).

Error message: Ink cartridge problem

Solution The indicated ink cartridge(s) are missing or damaged.

Replace the indicated ink cartridge(s) immediately so that you can resume printing.

If there are no ink cartridges missing from the HP Photosmart printer, the ink cartridge contacts might need to be cleaned.

For more information on replacing ink cartridges, see [Insert ink cartridges](#). For more information on cleaning the ink cartridge contacts, see [Care and maintenance](#).

If there are no ink cartridges missing from the HP Photosmart printer, and you still receive this message after cleaning the ink cartridge contacts, you will need a replacement ink cartridge. Remove the affected ink cartridge and look at the end-of-warranty date on the bottom, in YYYY/MMM/DD format. If it is before the end-of-warranty date, contact HP Support to obtain a replacement ink cartridge.

Error message: Ink expiration near

Solution If the current date is near the expiration date, consider replacing the ink cartridge(s) to achieve best print quality. You can continue printing by touching **OK**. HP cannot guarantee the quality or reliability of expired ink.

For more information on replacing ink cartridges, see [Insert ink cartridges](#).

Error message: Ink cartridge(s) are expired

Solution If the ink cartridge(s) are expired, replace the ink cartridge(s) to achieve best print quality. You can continue printing by touching **OK**. HP cannot guarantee the quality or reliability of expired ink.

For more information on replacing ink cartridges, see [Insert ink cartridges](#).



Note Each ink cartridge has an expiration date. When you receive an ink expiration message, remove and replace the expired ink cartridge, and then close the message. You can also continue printing without replacing the ink cartridge, by selecting OK on the ink expiration message. HP recommends replacing the expired ink cartridges. HP cannot guarantee the quality or reliability of expired ink cartridges.

Error message: Non-HP ink

Solution Replace the indicated ink cartridge(s) or touch **OK** to continue.

HP recommends that you use genuine HP ink cartridges. Genuine HP ink cartridges are designed and tested with HP printers to help you easily produce great results, time after time.



Note HP cannot guarantee the quality or reliability of non-HP ink. Printer service or repairs required as a result of printer failure or damage attributable to the use of non-HP ink will not be covered under warranty.

If you believe you purchased genuine HP ink cartridge(s), go to:

www.hp.com/go/anticounterfeit

Error message: Original HP ink depleted

Solution Replace the indicated ink cartridge(s) or touch **OK** to continue.

HP recommends that you use genuine HP ink cartridges. Genuine HP ink cartridges are designed and tested with HP printers to help you easily produce great results, time after time.



Note HP cannot guarantee the quality or reliability of non-HP ink. Printer service or repairs required as a result of printer failure or damage attributable to the use of non-HP ink will not be covered under warranty.

If you believe you purchased genuine HP ink cartridge(s), go to:

www.hp.com/go/anticounterfeit

Error message: Scheduled maintenance

Solution You must align the printer to ensure excellent print quality. With letter or A4 unused plain white paper in the Main tray, touch **OK**. The HP Photosmart printer aligns the print head, calibrates the printer, and then prints a test page. Recycle or discard the test page.

Error message: Calibration error

Solution

- If you have color or photo paper loaded in the Main tray when you align the printer, the alignment might fail. Load unused plain white letter or A4 paper into

the Main tray, and then try the alignment again. If the alignment fails again, you might have a defective sensor or ink cartridge; contact HP Support.


- The ink cartridge or sensor is defective. Contact HP support.

Error message: Print cartridge cradle is stuck

Solution Remove any objects that are blocking the print head assembly.

To clear the print head assembly

1. Open the top cover, then open the paper jam door.

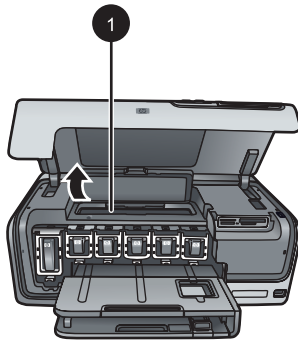

1. Open the paper jam door to clear the print head assembly.
2. Remove any objects that are blocking the print head assembly, including paper and any packing materials.
3. Turn the printer off, then turn it on again.
4. Close the paper jam door and the top cover.

Error message: Ink System Failure

Solution The print head assembly or the ink delivery system has failed and the HP Photosmart printer can no longer print.

Turn off the printer, then unplug its power cord. Wait about 10 seconds, then plug it in again. If this does not clear the error message, please contact HP Support.

Memory card errors

Before contacting HP support, read this section for troubleshooting tips or go to the online support services at www.hp.com/support.

Error message: Photo is missing. —OR— Some photos are missing.

Solution The printer cannot read the file on the memory card, or one or more files specified for the job are missing from the memory card. Try saving the photos to the

computer using the digital camera rather than the memory card. If a photo is missing, you may have accidentally deleted the photo from the card.

Error message: Card access error. Job was cancelled. Press OK.—OR— File directory structure is corrupted. —OR— Card may be damaged. Job was cancelled. Touch OK.

Solution The printer cannot read the data on the memory card and cannot complete any current print jobs. The data may be corrupted or there may be a physical problem with the memory card.

- Save the files to the computer and access them from there.
 - If this does not work, use a new memory card or reformat the memory card using the digital camera. Any photos on the memory card will be lost.
 - If this does not work, the photo files may be damaged or unreadable. Before you contact HP Support, try another memory card to determine if it is the printer or the memory card that is failing.
-

Error message: Cannot print photos.

Solution More than 10 photos specified for a print job may be corrupted, missing, or are an unsupported file type. For information about supported file types, see [Printer specifications](#).

- Save the photos to the computer using the digital camera rather than the memory card.
 - Save the files to the computer and print from the computer.
 - Print a photo index and reselect photos. For more information, see [Printing photos](#).
-

Error message: Card is password protected. Cannot access card.

Solution The printer cannot read the memory card because the card is password-protected. Follow these steps:

1. Remove the memory card from the printer.
 2. Insert the memory card in the device you originally used to store the password on the memory card.
 3. Remove the password from the memory card.
 4. Remove the memory card and reinsert it in the printer memory card slot.
 5. Try printing again.
-

Error message: Card is locked. Cannot access card.

Solution Make sure the lock switch on the card is in the unlocked position.

Error message: Card is not fully inserted. Push card in a little more.

Solution The printer can detect the memory card but cannot read it. Push the memory card gently into the memory card slot until it stops. For more information, see [Insert memory cards](#).

Error message: Use only one (1) card at a time. Please remove a memory card. —OR— Use only one (1) device at a time. Please remove/disconnect a device.

Solution The printer has two or more different types of memory cards inserted simultaneously, or a memory card is inserted and a digital camera is connected to the camera port at the same time. Remove memory cards or disconnect the camera until only one card is in the printer or only a camera is connected.

Error message: Card was removed. Job was cancelled. Touch OK.

Solution You removed a memory card from the printer while it was busy printing a file from the card. Follow these steps:

1. Touch **OK**.
2. Reinsert the memory card and print the selected photos again. The memory card must remain inserted until the print job is complete.

To avoid damage to memory cards in the future, do not remove them from the printer memory card slot while they are being accessed. For more information, see [Removing a memory card](#).

Error message: Camera selections (DPOF) file has error.

Solution The printer is unable to read a DPOF file due to corrupted data or an error on the memory card. Use the printer control panel to reselect the photos. For more information, see [Print photos from a memory card](#).

Error message: Some camera-selected photos are not on card.

Solution Some camera-selected photos are missing or have been deleted. Try the following:

- Confirm that you did not accidentally delete the photo from the memory card.
 - Reselect the photos again using the digital camera.
 - Print a new photo index to see the index numbers associated with each photo. For more information, see [Printing photos](#).
-

Error message: Cannot display this photo. —OR— Cannot display all photos. —OR— Photos are corrupted.

Solution The memory card contains image formats the printer does not support, or the files are corrupted. For a list of supported image formats, see [Printer specifications](#). Access photos using the computer. For information about accessing photos through the computer, see [Printing from a computer](#).

Error message: Unsupported card type.

Solution Use your camera to transfer the photos to your computer, and then print from your computer.

Error message: Some photo numbers are not on card.

Solution Use your camera to transfer the photos to your computer, and then print from your computer. If some photos are still missing, they may have been deleted from the memory card.

Computer and connectivity printing errors

Before contacting HP Support, read this section for troubleshooting tips or go to the online support services at www.hp.com/support.

Error message: Printer memory is full. Job was cancelled. Press OK.

Solution The printer encountered a problem when printing photos. Try the following:

- To clear the printer memory, turn the printer off, then turn it on again.
 - Print fewer photos at a time.
 - Save the photos to the computer and print from there.
 - Save the files to the computer using a memory card reader and then print from the computer.
-

Error message: Communication error. Check computer connection. Press OK. —OR— Data was not received. Check computer connection. Press OK to continue. —OR— No response from computer.

Solution The printer cannot communicate properly with the computer. The printer software may not be working or a cable may be loose. Make sure the USB cable is securely attached to both the computer and to the USB port on the back of the printer. If the cable is secure, verify that the printer software is installed.

Error message: Camera disconnected during print job.

Solution The print job will be cancelled. Reattach the USB cable to the camera and printer and resend the print job.

8 HP support

Support process

If you have a problem, follow these steps:

1. Check the documentation that came with the HP Photosmart printer.
2. Visit the HP online support Web site at www.hp.com/support. HP online support is available to all HP customers. It is the fastest source for up-to-date device information and expert assistance and includes the following features:
 - Fast access to qualified online support specialists
 - Software and driver updates for the HP Photosmart printer
 - Valuable HP Photosmart printer and troubleshooting information for common problems
 - Proactive device updates, support alerts, and HP newsletters that are available when you register the HP Photosmart printer
3. For Europe only: Contact your local point of purchase. If the HP Photosmart printer has a hardware failure, you will be asked to bring it back to your local point of purchase. (Service is provided at no charge during the device limited warranty period. After the warranty period, you will be quoted a service charge.)
4. Call HP support. Support options and availability vary by device, country/region, and language.

HP support by phone

For a list of support phone numbers, see the phone number list on the inside of the front cover.

Phone support period

One year of phone support is available in North America, Asia Pacific, and Latin America (including Mexico). To determine the duration of phone support in Europe, the Middle East, and Africa, go to www.hp.com/support. Standard phone company charges apply.

Placing a call

Call HP support while you are in front of the computer and the HP Photosmart printer. Be prepared to provide the following information:

- Device model number (located on the label on the front of the device)
- Device serial number (located on the back or bottom of the device)
- Messages that appear when the situation occurs
- Answers to these questions:
 - Has this situation happened before?
 - Can you re-create it?
 - Did you add any new hardware or software to your computer at about the time that this situation began?
 - Did anything else occur prior to this situation (such as a thunderstorm, device was moved, etc.)?

After the phone support period

After the phone support period, help is available from HP at an additional cost. Help may also be available at the HP online support Web site: www.hp.com/support. Contact your HP dealer or call the support phone number for your country/region to learn more about support options.

Additional warranty options

Extended service plans are available for the printer at additional costs. Go to www.hp.com/support, select your country/region and language, then explore the services and warranty area for information about the extended service plans.

A Specifications

This section lists the minimum system requirements for installation of the HP Photosmart printer software, and provides selected printer specifications.

For a complete list of printer specifications and system requirements, see the onscreen HP Photosmart Printer Help. For information about viewing the onscreen HP Photosmart Printer Help, see [Welcome](#).

System requirements

Component	Windows PC minimum	Macintosh minimum
Operating system	Microsoft® Windows 98, 2000 Professional, Me, XP Home, and XP Professional	Mac® OS X 10.3, 10.4, and later
Processor	Intel® Pentium® II (or equivalent) and higher	G3 or greater
RAM	64 MB (128 MB recommended)	Mac OS X 10.3, 10.4, and later: 128 MB
Free disk space	500 MB	150 MB
Video display	800 x 600, 16-bit or higher	800 x 600, 16-bit or higher
CD-ROM drive	4x	4x
Connectivity	USB: Microsoft Windows 98, 2000 Professional, Me, XP Home, and XP Professional PictBridge: using front camera port Bluetooth: using optional HP Bluetooth Wireless Adapter	USB: Front and back ports (Mac OS X 10.3, 10.4, and later) PictBridge: using front camera port Bluetooth: using optional HP Bluetooth Wireless Adapter
Browser	Microsoft Internet Explorer 5.5 or later	—

Printer specifications

Category	Specifications
Connectivity	USB: Microsoft Windows 98, 2000 Professional, Me, XP Home, and XP Professional; Mac OS X 10.3, 10.4, and later
Image file formats	JPEG Baseline TIFF 24-bit RGB uncompressed interleaved TIFF 24-bit YCbCr uncompressed interleaved TIFF 24-bit RGB packbits interleaved TIFF 8-bit gray uncompressed/packbits

(continued)

Category	Specifications
	TIFF 8-bit palette color uncompressed/packbits TIFF 1-bit uncompressed/packbits/1D Huffman
Video file formats	Motion-JPEG AVI Motion-JPEG QuickTime MPEG-1
Media specifications	Recommended maximum length: 61 cm (24 inch) Recommended maximum paper thickness: 292 µm (11.5 mil) Recommended maximum envelope thickness: 673 µm (26.5 mil)
Media sizes supported	Supported sizes when printing from a computer 7.6 x 12.7 cm to 22 x 61 cm (3 x 5 inch to 8.5 x 24 inch) Supported sizes when printing from the control panel Metric: A6, A4, 10 x 15 cm (with and without tab); Imperial: 3.5 x 5 inch, 4 x 6 inch (with and without tab), 4 x 12 inch, 5 x 7 inch, 8 x 10 inch, 8.5 x 11 inch; Other: Hagaki and L-size
Media types supported	Paper (plain, inkjet, photo, and panoramic photo) Envelopes Transparencies Labels Cards: index, greeting, Hagaki, A6, L-size Iron-on transfers Avery C6611 and C6612 photo sticker paper: 10 x 15 cm (4 x 6 inch), 16 rectangular or oval stickers per page
Memory cards	CompactFlash Type I and II Microdrive MultiMediaCard Secure Digital Memory Sticks xD-Picture Card
Memory card-supported file formats	Printing: See Image file formats earlier in this table. Saving: All file formats
Paper tray – media sizes supported	Main tray 8 x 13 cm to 22 x 61 cm (3 x 5 inch to 8.5 x 24 inch) Photo tray Up to 10 x 15 cm (4 x 6 inch), with or without tab Output tray All supported Main tray and Photo tray sizes
Paper tray capacity	Main tray

(continued)

Category	Specifications
	100 sheets of plain paper 14 envelopes 20–40 cards (depending on thickness) 30 sheets of labels 25 transparencies, iron-on transfers, or photo paper 10 sheets of photo paper Photo tray Output tray 20 sheets of photo paper 50 sheets of plain paper 10 cards or envelopes 25 sheets of labels or iron-on transfers
Operating environment	Recommended temperature range: 15–30 °C (59–86 °F) Maximum temperature range: 5–40 °C (41–104 °F) Storage temperature range: -40–60 °C (-40–140 °F) Recommended humidity range: 20–80% RH Maximum humidity range: 10–80% RH
Physical specifications	Height: 16.0 cm (6.30 inch). Width: 44.7 cm (17.6 inch) Depth: 38.5 cm (15.2 inch) Weight: 8.5 kg (18.7 lb).
Power consumption	Printing, Average: 75 W Printing, Maximum: 94 W Idle: 13.3–16.6 W
Power supply model number	HP Part # 0957-2105
Power requirement	100–240 VAC (± 10%), 50–60 Hz (± 3 Hz)
Ink cartridges	HP Yellow Ink Cartridge HP Cyan Ink Cartridge HP Light Cyan Ink Cartridge HP Magenta Ink Cartridge HP Light Magenta Ink Cartridge HP Black Ink Cartridge Note The cartridge numbers you can use with this printer appear on the back cover of this printed guide. If you have already used the printer several times, you can also find the cartridge numbers in the printer software. For more information, see Insert ink cartridges .
Print speed (maximum)	Black printouts: 32 pages per minute Color printouts: 31 pages per minute

(continued)

Category	Specifications
	Photos: 14 seconds for each 10 x 15 cm (4 x 6 inch) photo
USB support	Microsoft Windows 98, 2000 Professional, Me, XP Home, and XP Professional Mac OS X 10.3, 10.4, and later HP recommends using a USB 2.0 full-speed compliant cable 3 meters (10 feet) or less in length.

B HP Warranty

HP product	Duration of limited warranty
Software Media	90 days
Printer	1 year
Print or Ink cartridges	Until the HP ink is depleted or the “end of warranty” date printed on the cartridge has been reached, whichever occurs first. This warranty does not cover HP ink products that have been refilled, remanufactured, refurbished, misused, or tampered with.
Accessories	90 days

A. Extent of limited warranty

1. Hewlett-Packard (HP) warrants to the end-user customer that the HP products specified above will be free from defects in materials and workmanship for the duration specified above, which duration begins on the date of purchase by the customer.
2. For software products, HP's limited warranty applies only to a failure to execute programming instructions. HP does not warrant that the operation of any product will be interrupted or error free.
3. HP's limited warranty covers only those defects that arise as a result of normal use of the product, and does not cover any other problems, including those that arise as a result of:
 - a. Improper maintenance or modification;
 - b. Software, media, parts, or supplies not provided or supported by HP;
 - c. Operation outside the product's specifications;
 - d. Unauthorized modification or misuse.
4. For HP printer products, the use of a non-HP cartridge or a refilled cartridge does not affect either the warranty to the customer or any HP support contract with the customer. However, if printer failure or damage is attributable to the use of a non-HP or refilled ink cartridge, HP will charge its standard time and materials charges to service the printer for the particular failure or damage.
5. If HP receives, during the applicable warranty period, notice of a defect in any product which is covered by HP's warranty, HP shall either repair or replace the product, at HP's option.
6. If HP is unable to repair or replace, as applicable, a defective product which is covered by HP's warranty, HP shall, within a reasonable time after being notified of the defect, refund the purchase price for the product.
7. HP shall have no obligation to repair, replace, or refund until the customer returns the defective product to HP.
8. Any replacement product may be either new or like-new, provided that it has functionality at least equal to that of the product being replaced.
9. HP products may contain remanufactured parts, components, or materials equivalent to new in performance.
10. HP's Limited Warranty Statement is valid in any country where the covered HP product is distributed by HP. Contracts for additional warranty services, such as on-site service, may be available from any authorized HP service facility in countries where the product is distributed by HP or by an authorized importer.

B. Limitations of warranty

TO THE EXTENT ALLOWED BY LOCAL LAW, NEITHER HP NOR ITS THIRD PARTY SUPPLIERS MAKES ANY OTHER WARRANTY OR CONDITION OF ANY KIND, WHETHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE.

C. Limitations of liability

1. To the extent allowed by local law, the remedies provided in this Warranty Statement are the customer's sole and exclusive remedies.
2. TO THE EXTENT ALLOWED BY LOCAL LAW, EXCEPT FOR THE OBLIGATIONS SPECIFICALLY SET FORTH IN THIS WARRANTY STATEMENT, IN NO EVENT SHALL HP OR ITS THIRD PARTY SUPPLIERS BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY AND WHETHER ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

D. Local law

1. This Warranty Statement gives the customer specific legal rights. The customer may also have other rights which vary from state to state in the United States, from province to province in Canada, and from country to country elsewhere in the world.
2. To the extent that this Warranty Statement is inconsistent with local law, this Warranty Statement shall be deemed modified to be consistent with such local law. Under such local law, certain disclaimers and limitations of this Warranty Statement may not apply to the customer. For example, some states in the United States, as well as some governments outside the United States (including provinces in Canada), may:
 - a. Preclude the disclaimers and limitations in this Warranty Statement from limiting the statutory rights of a consumer (e.g., the United Kingdom);
 - b. Otherwise restrict the ability of a manufacturer to enforce such disclaimers or limitations; or
 - c. Grant the customer additional warranty rights, specify the duration of implied warranties which the manufacturer

Index

A

- accessories 9
- accessories, two-sided printing 9
- after the support period 62
- aligning the printer 41
- alignment page 41
- alignment, required 56
- antique coloration 29

B

- Bluetooth
 - connecting to printer 23, 33
 - menu settings 9
 - wireless printer adapter 9
- borderless prints 29
- buttons 8

C

- calling HP support 61
- cameras
 - connecting to printer 23, 33
 - direct-printing 25
 - PictBridge 25
 - port 6
 - printing from 25
- care and maintenance 41
- cartridges. *See* ink cartridges
- cleaning
 - copper-colored contacts 42
 - print head 42
 - printer 41
- color effects 29
- CompactFlash 18
- computer
 - connecting to printer 33
 - printing from 37
 - saving photos to 35
 - system requirements 63
- control panel 8

D

- damaged, ink cartridge 55
- date and time stamps 29

- digital cameras. *See* cameras
- Digital Print Order Format 24
- documentation, printer 5
- DPOF 24

E

- e-mailing photos 35
- energy consumption 2
- Energy Star 2
- error messages 52

F

- file formats, supported 19, 63
- Frequently asked questions 47

G

- Getting help 47

H

- Help 47
- Hewlett-Packard Company notices 2
- home, screen 9
- HP direct-printing digital cameras 25
- HP Instant Share 33
- HP iPod 34
- HP Photosmart Essential 37
- HP Photosmart Premier 37
- HP Photosmart Share 35, 38
- HP Software Update 44

I

- ink
 - checking level 43
 - empty 54
 - replace soon 54
- ink cartridges
 - damaged 55
 - empty 54
 - expired 55
 - HP ink depleted 56
 - incorrect 54
 - ink level, checking 16
 - inserting 16
 - missing 55

- non-HP ink 56
- printer alignment 56
- replace soon 54
- replacing 16
- storing 45
- testing 43

- ink level, checking 16
- inserting
 - ink cartridges 16
 - memory cards 19

J

- JPEG file formats 19

L

- layout and photo size 27
- lights 8
- Load paper 13
- loading paper 13

M

- memory cards
 - inserting 19
 - printing from 23
 - removing 20
 - saving photos to a computer 35
 - supported types 18
- Memory Sticks 18
- Microdrive 18
- missing ink cartridge 55
- MPEG-1 file format 19
- MultiMediaCard 18

P

- Paper
 - load 13
- paper
 - buying and choosing 13
 - loading 13
 - maintaining 13, 45
 - specifications 63
 - trays 6
- phone support 61
- phone support period
 - period for support 61
- photos

- antique coloration 29
- cropping 29
- date and time stamp 29
- e-mailing 35
- framing 29
- improving quality 28
- printing 23
- saving to computer 33
- sepia tones 29
- supported file formats 19
- zooming 29

Photosmart Share. *See*
HP Photosmart Share

PictBridge cameras 25

placing a call 61

print head

- cleaning 42
- failure 57
- stalled 57

print quality

- changing 23

Printer

- Specifications 63

printer

- accessories 9
- care and maintenance 41
- cleaning 41
- connecting 23, 33
- documentation 5
- error messages 52
- home 9
- parts 6
- specifications 63
- storing 45

printer software

- updating 44

printer software, updating 37

printing

- from a computer 37
- from BlueTooth device 23
- from cameras 25
- from memory cards 23
- from PictBridge camera 23
- photos 23
- range of photos 23
- test page 43
- without computer 23

Q

quality

- photo paper 45
- photos 28
- printing test page 43

Questions and Answers 47

R

range

- printing 23

regulatory notices

- regulatory model identification number 2

removing memory cards 20

replacing ink cartridges 16

S

saving photos to computer 33

Secure Digital 18

sepia tones 29

Sony Memory Sticks. *See*
Memory Sticks

Specifications 63

storing

- ink cartridges 45
- photo paper 45
- printer 45

support 61

support process 61

system requirements 63

T

test page 43

TIFF file format 19

transporting printer 9

trays, paper 6

Troubleshooting 47

troubleshooting

- error messages 52

two-sided printing 9

U

USB

- connection type 33
- port 6
- specifications 63

V

video clip

- supported file formats 19

X

xD-Picture Card 18