



Q7161-90014

# 快速入门

## HP Photosmart Pro B8800 series

# Quick Start


## HP Photosmart Pro B8800 series



### 拆开打印机包装并插入 CD


Unpack the printer and insert the CD

1

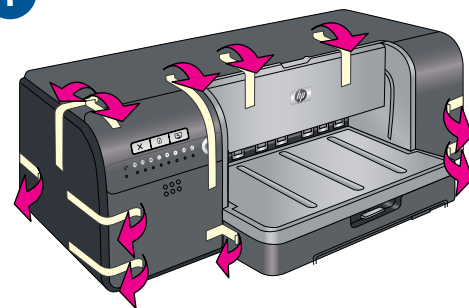

拆开包装并取下胶带和包装材料。  
**重要 - 如果没有随附 USB 线，请单独购买。**

Unpack and remove tape and packaging materials.  
**Important - Purchase a USB cable separately if it is not included.**

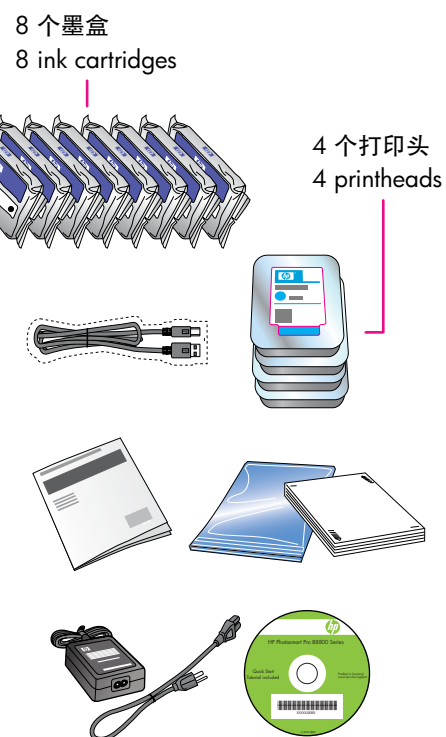

8 个墨盒  
8 ink cartridges

4 个打印头  
4 printheads

2



**Windows 用户：软件安装程序（步骤 17）提示前，请勿连接 USB 线。**将电源线分别连接到打印机 (a) 和电源插座 (b)。打印机即会自动开启。

**Windows users: Do not connect the USB cable until prompted by the software install program (step 17).** Connect the power cord to the printer (a), and then to a power outlet (b). The printer turns on automatically.

3



动画图解《快速入门教程》分步介绍了如何安装打印机。

**Windows:** 插入随附的 CD，然后单击“查看快速入门教程”。  
**Mac:** 插入随附的 CD，依次双击“HP 软件”图标和“HP 安装程序”图标。

**注：步骤 17 说明了如何安装打印机软件。**

**The animated Quick Start Tutorial shows you how to set up the printer step by step.**

**Windows:** Insert included CD and click **View Quick Start Tutorial**.  
**Mac:** Insert included CD, double-click the **HP Software** icon, and then double-click the **HP Installer** icon.

**Note: You will install the printer software in step 17.**



### 插入 8 个墨盒

Insert the 8 ink cartridges


4



打开每个墨盒的包装前要充分进行摇晃，每个墨盒至少摇晃六次。

Shake each ink cartridge well (six times) before unwrapping it.


5

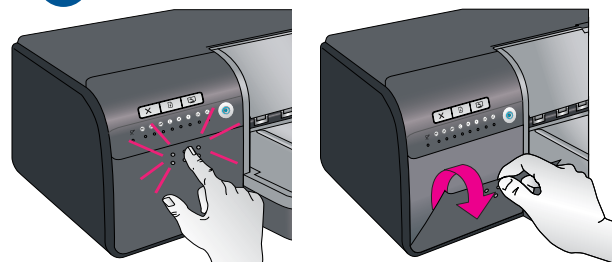

打开墨盒门。

Open the ink cartridge door.


6

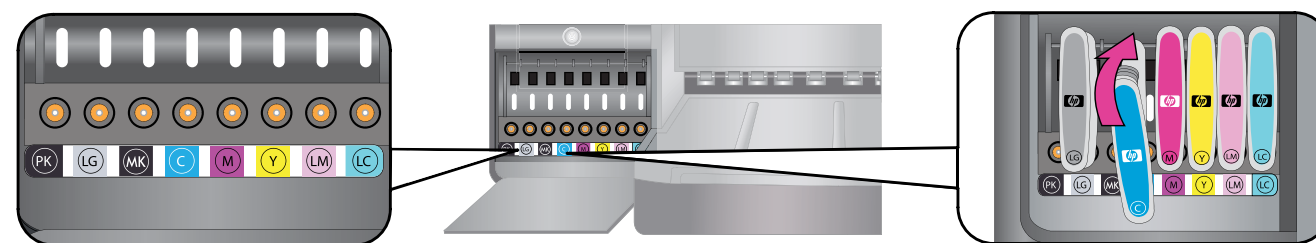

将所有八个墨盒分别插入其对应色彩编码的托架，用力按压每个墨盒，直到其卡入到位。

Insert all eight ink cartridges into their color-coded stalls. Press firmly on each cartridge until it snaps into place.

7

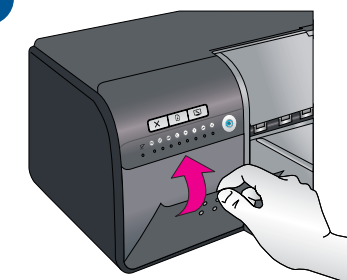

关闭墨盒门。

Close the ink cartridge door.



### 插入 4 个打印头

Insert the 4 printheads


8



打开每个打印头的包装前要充分进行摇晃，每个打印头至少摇晃六次。

Shake each printhead well (six times) before unwrapping it.


9

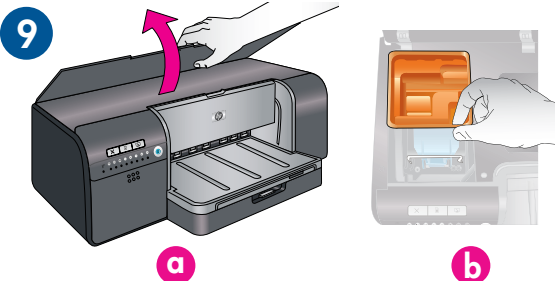

抬起顶盖 (a)。取出橙色的塑料固定装置 (b)。  
**请保留该固定装置以便日后搬运打印机时使用。**

Open the top door (a). Remove orange plastic restraint (b). **Save the restraint for transporting the printer.**


10

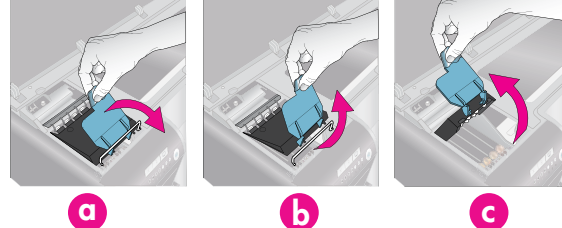

向前拉动蓝色把手 (a)，然后向上提起 (b) 并向后翻 (c)。

Pull the blue handle forward (a), then lift it up (b) and move it back (c).


11

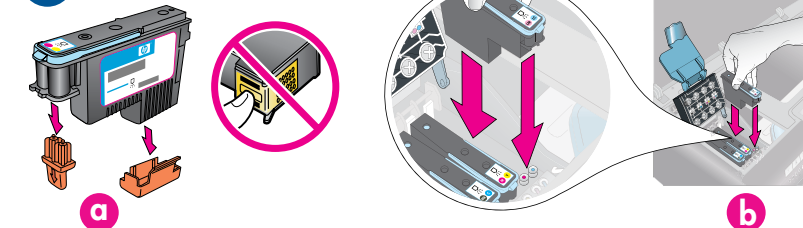

打开每个打印头的包装，取下并丢弃打印头的橙色帽 (a)。请勿触摸金色触点。将所有打印头插入其对应色彩编码的托架，用力按压打印头直至其卡入到位 (b)。

Open each printhead package, and remove and discard the orange caps (a). Do not touch the gold-colored contacts. Insert each printhead into its color-coded stall, pressing firmly until the printhead snaps into place (b).

12

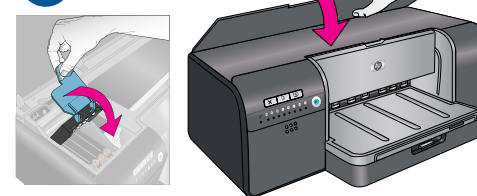


合上蓝色打印头支架盖，然后合上顶盖。

Close the blue cover, and then close the top door.



## 放入纸张并校准打印机

## Load paper and calibrate the printer

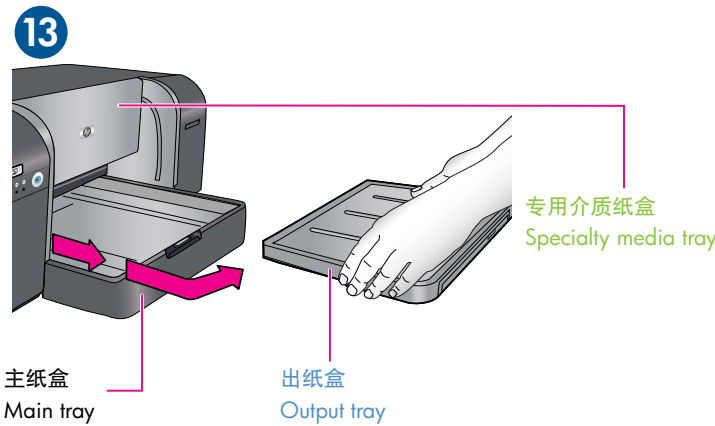


用力直线拉出出纸盒将其取下。出纸盒位于主纸盒的上面，是一个可取下的“盖子”。  
**注：请确保专用介质纸盒已关闭。**

Remove the **output tray** straight out, by pulling it firmly. The output tray is the removable ‘lid’ on top of the main tray.  
**Note:** Make sure the **specialty media tray** is closed.




将随附的 HP 高级照片纸全部纵向放入主纸盒，纸张光面朝下。将纸张与纸盒右侧对齐。

Load **all** of the included HP Advanced Photo paper into the main tray in portrait orientation, **glossy side down**. Align the paper against the right side of the tray.

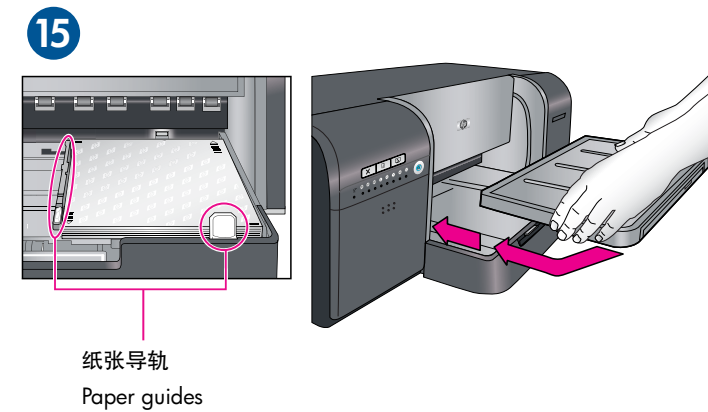


调整纸张导轨。检查纸张是否摆放平整。将出纸盒滑回原位。

Adjust the paper guides. Check that the paper is lying flat. Slide the output tray back into place.

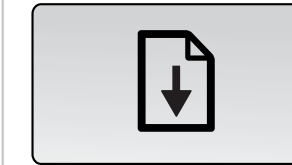

## 开始校准

## Start calibration

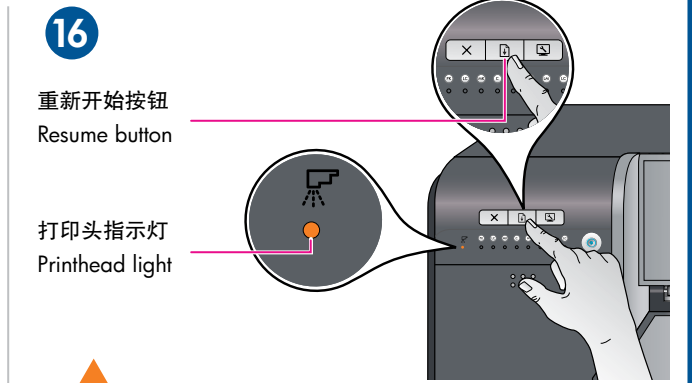

按“重新开始”按钮 [R] 开始打印机校准。校准可能需要 30–40 分钟。用户可利用此时间安装软件（步骤 17）。当“打印头”指示灯 [R] 熄灭时即表示校准完成。

Press the **Resume button** [R] to start printer calibration. Calibration takes 30–40 minutes. Use this time to install the software (step 17). When the **Printhead light** [R] goes off, calibration is complete.



## 安装软件

## Install the software

- 17** 安装打印机软件后打印机才能正常工作。软件安装可在打印机校准期间进行。  
**重要 – Windows 用户：**仅当软件安装程序提示之后，才可使用 USB 线将打印机连接到计算机，提示之前切勿连接。  
**重要 – 如果没有随附 USB 线，请单独购买。**
- ZHCN**  
**USB**
- 如果尚未将随附的 CD 插入计算机中，请将其插入。  
**Windows:** 单击“安装打印机软件”。  
**Macintosh:** 双击桌面上的“HP 软件”图标 (📀)，然后双击“HP Photosmart 安装程序”图标 (📀)。如果已完成所有硬件的安装步骤，请直接进入软件安装步骤。
  - 按照屏幕上的说明完成软件安装。

**在完成打印机校准和软件安装后，打印机就可以正常工作了。**

- 17** You need to install the printer software for the printer to work correctly. You can install the software while the printer is calibrating.  
**Important – Windows users:** Connect the printer to your computer with a USB cable only when prompted by the software install program and not before.  
**Important – Purchase a USB cable separately if it is not included.**
- EN**  
**USB**
- Insert the included CD into your computer if you haven't already.  
**Windows:** Click **Install Printer Software**.  
**Macintosh:** Double-click the **HP Software** icon (📀) on the desktop, and then double-click the **HP Photosmart Installer** icon (📀). If you've completed all the hardware setup steps, skip ahead to the software install step.
  - Follow the onscreen instructions to install the software.

**When the printer finishes calibrating and software installation is complete, your printer is ready to use.**

打印机包装盒随附的墨盒内有一定量的墨水，可用于打印机初始化。这些墨盒中的墨水以及更换墨盒中的墨水也可用于保持打印喷嘴清洁，使墨水流动顺畅。

Ink in the cartridges included in the printer box is used for printer initialization. Ink from these cartridges, as well as from replacement cartridges, is also used to keep print nozzles clear and ink flowing smoothly.

请务必保持打印机处于通电状态，这样打印机便可执行自我维护程序。有关详情，请参阅《使用手册》。

Always leave the printer plugged in so that it can perform self-servicing routines. For more information, see the User Guide.



## 需要更多信息?

## Need more information?

- 查看随附 CD 中动画图解《快速入门教程》(请参阅步骤 3)。单击教程中的“需要帮助?”链接可以查找有关解决安装问题的帮助信息。
- 查阅《使用手册》。
- 联系 HP 支持:  
www.hp.com/support/china 或 10-68687980 或 800-810-3888 (中国)  
www.hp.com/support (所有其他国家/地区)

- View the animated Quick Start Tutorial on the included CD (see step 3). Click the Need help? link in the tutorial for help on solving setup problems.
- Read the User Guide.
- Contact HP support at:  
www.hp.com/support/china or 10-68687980 or 800-810-3888 (China)  
www.hp.com/support (All other countries)



www.hp.com