

Rollei

*d*c3100

User's Guide



www.rollei.de

ENGLISH


CONGRATULATIONS

Congratulations on the purchase of your new camera. Your camera has been carefully engineered and manufactured to give you dependable operation. Read this manual before operating the camera to become more familiar with it.

This manual has been written and formatted with depth and detail so that you can easily follow the instructions to maximize the features of your camera.


CAMERA OVERVIEW

Top/Front

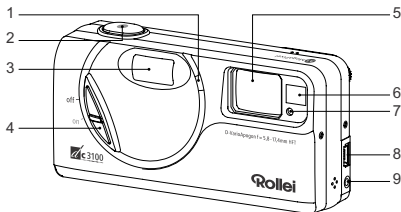

1. Flash Sensor
2. Shutter button
3. Flash
4. On/Off switch
5. Lens/Lens Cover
6. Viewfinder
7. Self-Timer/Red-Eye Reduction LED
8. Mini-USB port
9. TV-Out port

Bottom/Back

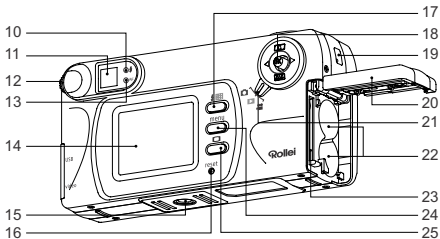

- | | | |
|---------------------|--|-------------------------|
| 10. Flash Ready LED | 16. Reset Button | 21. Mode Switch |
| 11. Viewfinder | 17. Flash/Thumbnail Button | 22. Battery Compartment |
| 12. Diopter wheel | 18. Joystick/OK button/ Zoom button | 23. Memory Card Slot |
| 13. Auto-Focus LED | 19. Wrist Strap Holder | 24. Menu Button |
| 14. LCD | 20. Battery/Memory Card Door | 25. LCD On/Off Button |

LCD ICONS



| | |
|------------------|------------------|
| A. Resolution | G. Image Quality |
| B. Camera Mode | H. Frame Counter |
| C. Memory card | I. Macro |
| D. Flash | J. Self-Timer |
| E. White Balance | K. Zoom Bar |
| F. Battery Level | L. Date / Time |





| |
|---|
|  : Single Shot |
|  : Continuous Shot |
|  : Review |
|  : Video Clips |

Table of Contents

| | |
|---|----|
| CAMERA OVERVIEW | 1 |
| Top/Front | 1 |
| Bottom/Back | 1 |
| LCD ICONS. | 2 |
| GETTING STARTED | 6 |
| Package Contents | 6 |
| Camera Features | 6 |
| Attaching the Wrist Strap. | 7 |
| Loading the Batteries | 7 |
| Checking the Battery Level | 8 |
| Turning the Camera On and Off | 9 |
| Setting the Language, Date and Time | 10 |
| Turning the LCD On and Off | 13 |
| Internal Memory/Inserting the Memory Card | 14 |
| Setting the camera's operational mode | 15 |
| TAKING PICTURES | 16 |
| Taking a Picture with the Viewfinder | 16 |
| Flash Ready LED | 17 |
| Taking a Picture with the LCD | 18 |
| Auto-Focus Lock | 19 |
| Setting the Flash | 20 |
| Optical Zoom | 21 |
| Digital Zoom | 22 |

| | |
|---|-----------|
| Using the main menu in camera mode | 24 |
| Capture mode options | 27 |
| Self Timer | 28 |
| Macro Mode | 29 |
| Continuous shooting | 30 |
| Image Resolution | 31 |
| Image Quality | 32 |
| White Balance | 33 |
| EV Compensation | 34 |
| Scene Selection | 35 |
| TAKING VIDEO CLIPS | 37 |
| REVIEWING YOUR FILES | 39 |
| Using Review Mode | 39 |
| Reviewing Video Clips | 39 |
| Enlarging Stored Pictures | 40 |
| Using the Delete Menu | 41 |
| Deleting Your Files | 42 |
| Using Thumbnail Mode | 44 |
| CUSTOMIZING THE CAMERA SETTINGS | 45 |
| Setup Menu and Features | 49 |
| Setting the Auto Off Time | 50 |
| Setting the Language | 50 |
| Setting the Date | 51 |
| Setting the Time | 51 |
| Setting the LCD Brightness..... | 52 |
| Formatting the internal memory or memory card | 53 |
| RESTORE THE CAMERA TO FACTORY DEFAULT SETTINGS | 54 |

| | |
|--|----|
| INSTALLATION GUIDE | 55 |
| Computer System Requirements | 55 |
| Installation Requirements | 56 |
| Using the installer splash screen | 57 |
| Flow diagram for software installation..... | 58 |
| Identifying your operating system | 60 |
| Installing the driver and DirectX 9 - Windows 98/98SE | 61 |
| Installing DirectX 9 - Windows 2000 | 64 |
| Installing ArcSoft PhotoImpression - all Windows users..... | 66 |
| Installing Adobe Acrobat Reader 5.1 - all Windows users (optional) | 69 |
| CONNECTING THE CAMERA TO THE COMPUTER | 71 |
| Downloading pictures and video clips onto your computer | 72 |
| Using ArcSoft PhotoImpression | 74 |
| Unplugging your camera from the computer | 75 |
| TV MODE | 76 |
| Connecting the camera to the television..... | 77 |
| Using the TV as a Live Viewfinder | 77 |
| Reviewing pictures and video clips on your TV | 77 |
| ERROR MESSAGES | 78 |
| TROUBLESHOOTING | 79 |
| CAMERA SPECIFICATIONS | 84 |
| SAFETY TIPS AND MAINTENANCE | 86 |
| Safety Tips | 86 |
| Precautions for the camera..... | 86 |
| Precautions for batteries | 87 |
| Precautions for SD Memory Cards | 87 |
| REGULATORY INFORMATION | 89 |

GETTING STARTED

Package Contents

 
- Rollei dc3100
- Mini-USB Cable
- TV Out Cable
- Quick Start Guide/Warranty Card
- Camera Case
- Wrist Strap
- 2x AA Alkaline Batteries
- CD-ROM (for Windows users only)
 - USB Mass Storage Driver
 - ArcSoft PhotoImpression 2000
 - Adobe Acrobat Reader 5.1
 - Microsoft DirectX 9
 - View User's Guide (Multilingual)

Camera Features

- 3.1 Megapixels, 2048 x 1536 Resolution
- 1.5" Color LCD
- 3x Optical Zoom
- 4x Digital Zoom
- Video Clips
- Compatible with Secure Digital (SD) memory cards (not included)

Attaching the Wrist Strap

Please attach the wrist strap to prevent dropping the camera.



Loading the Batteries

The camera can use 2x AA alkaline, lithium or rechargeable batteries to operate.

1. Open the Battery/Memory Card door. (fig.1.1)
 - Press the Battery/Memory Card door, slide the door down and lift it open.
2. Insert the batteries according to the polarity indicators on the inner side of the Battery/Memory Card door. (fig.1.2)
3. Shut the Battery/Memory Card door and press it up to close it securely. (fig.1.3)

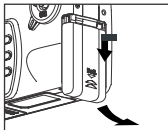


fig.1.1

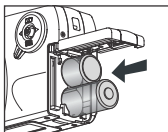


fig.1.2

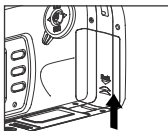


fig.1.3

Checking the Battery Level

The battery level is displayed on the LCD.



FULL
*Batteries are full
and ready to use.*



LOW
*Batteries are low
and need to be
replaced soon.*



EMPTY
*Batteries are
empty blinking red
and need to be
replaced*

Note:

- Remove the batteries from the camera if they will not be used for an extended period of time to prevent corrosion or battery leaks.
- To extend battery life, the camera will automatically power off after 30 seconds of inactivity. To change this setting please refer to p.50.
- For better performance, please use NiMH rechargeable batteries.
- The camera's battery level indicator may not accurately reflect the state of a low current rating alkaline battery.

TURNING THE CAMERA ON AND OFF

The On/Off Switch is located in the front of the camera.

1. Slide the On/Off Switch down to power the camera on. (fig.1.1)
 - The lens cover will open.
 - The LCD will turn on automatically
2. To turn the camera off, slide the On/Off Switch upwards. (fig.1.2)

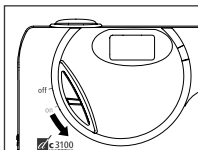


fig.1.1 Camera On

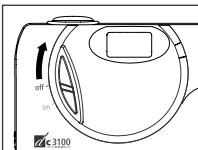



fig.1.2 Camera Off

Note:

The camera will automatically power off after 30 seconds of inactivity even the ON/OFF switch is in the "ON" position. Press the **shutter** button to power the camera back on."

SETTING THE LANGUAGE, DATE AND TIME

When the camera is powered on for the first time, the Language, Date and Time menus will appear.

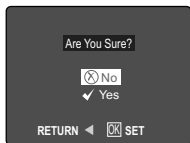




Setting the Language

- Turn the camera on.
 - The Language Setup screen will appear on the LCD.
- Press the joystick \uparrow \downarrow , to highlight the language you would like to use.
- Press \odot to select by pressing the joystick in.
- The next screen will read "Are You Sure?" press the joystick \uparrow \downarrow to select No or Yes.
- Press \odot to select.
 - If you select No, you will return to the Language select screen.
 - If you select Yes, all menu screens will be displayed in the new language.

Each language will set the default setting for date format and TV option. To change these settings, please refer to the Customizing the Camera Settings section on p.45.

| Language(s) | Date Format Setting | TV Option |
|-------------------------------|---------------------|-----------|
| English / Español | MM/DD/YYYY | NTSC |
| Français / Deutsch / Italiano | DD/MM/YYYY | PAL |
| 中文 | YYYY/MM/DD | PAL |
| 日本語 | YYYY/MM/DD | NTSC |

Setting the Date

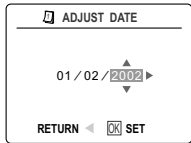
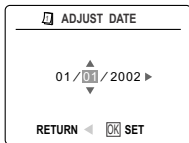
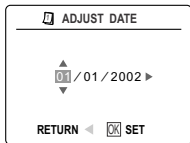


1. Press the joystick \rightarrow to highlight the month, day or year.
 - The selection will blink when it is highlighted.
2. Press the joystick \uparrow \downarrow to change the number in the blinking position until you reach the desired setting.
3. Press OK to set the date.

Note:

- If the battery is removed or dead for more than 4 minutes, the date will return to its default setting.

Setting the Time

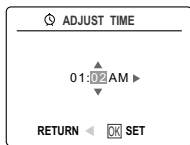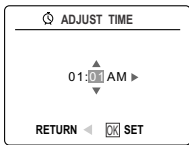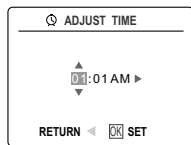

The time is displayed in hour, minute format.

1. Press the joystick → to highlight the hour (HH), minutes (MM) or AM/PM.
 - The selection will blink when it is highlighted.
2. Press the joystick ↑ ↓ to change the selection in the blinking position until you reach the desired setting.
3. Press [OK] to select.




Note:

The time can be displayed in a 12-hour or 24-hour format. Please go to p.49 to change this setting.


If the battery is removed or dead for more than 4 minutes, the time will return to its default setting.

TURNING THE LCD ON AND OFF

The camera has a 1.5" LCD which can frame subjects for image and video clip capture, review stored images and video clips and to display the current camera settings.

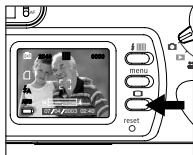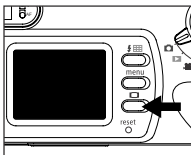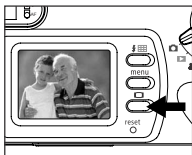

1. Use the () button to toggle the LCD mode. The LCD mode changes each time the button is pressed as follows:

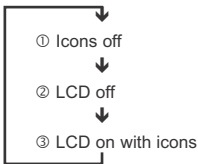

Note: In order to save battery power, you may turn off the LCD display.

Internal Memory/Inserting the Memory Card

Internal Memory

The camera is equipped with 16MB of internal memory, which can be used right away.

| Status | Memory in Use |
|-----------------------------|-----------------|
| Memory card is not inserted | Internal Memory |
| Memory card is inserted | Memory Card |

NOTE! When the memory card is inserted, the images and video clips stored in the internal memory will be transferred automatically onto the memory card. Please insert a memory card with 16MB or greater of available memory.

Inserting the Memory Card

In addition to having a 16MB internal memory, the camera uses Secure Digital (SD) memory cards, to store images and video clips.

1. Open the Battery/Memory Card door.
 - Press the Battery/Memory Card door, slide the door down and lift it open. (fig.1.1)
2. Insert the memory card as indicated by the diagram. (fig.1.2)
 - Please insert the card in straight, not on an angle.
3. Shut the Battery/Memory Card door and press it up to securely shut it. (fig.1.3)

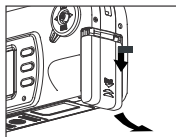


fig.1.1

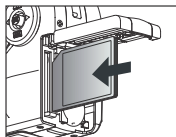


fig.1.2

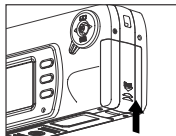


fig.1.3

Note: The camera can support SD cards up to 512 MB.




If the memory card or internal memory is corrupted, the memory needs to be formatted. (p.53)

SETTING THE CAMERA'S OPERATIONAL MODE


The camera has 3 operational modes Camera Mode, Review Mode and Video Clip Mode.

1. To change the camera operational mode, slide the mode dial back and forth.

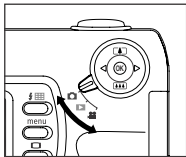


Camera Mode

Use the camera mode setting to take pictures or to customize your camera settings for picture taking.

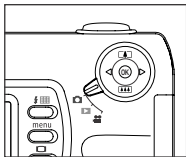


Review Mode

Use the review mode setting to browse through images and video clips or to delete images from the internal memory or memory card.

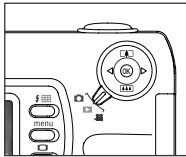


Video Clip Mode

Use video clip mode to capture video clips.

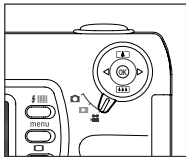

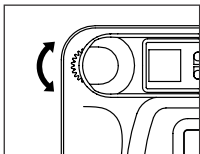

TAKING A PICTURE WITH THE VIEWFINDER



Diopter Adjusting

Taking a picture with the viewfinder:

1. Turn the camera on.
2. Set the camera to () Camera Mode.
 - The LCD can be switched off to conserve battery power by pressing the () button.
3. Frame the subject in the viewfinder.
 - If the subject appears blurry, adjust the viewfinder focus by turning the diopter wheel.
4. Press the **shutter** button half-way to activate the auto-focus until the green AF LED stops blinking. (For information on Focus Lock, please go to p.19) (fig.1.1)
5. Press the **shutter** button fully to capture the image. (fig.1.2)
 - The camera will make a click sound.

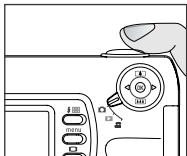


fig.1.1

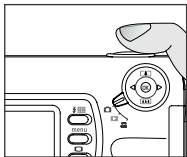


fig.1.2

FLASH READY LED

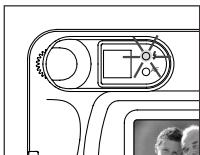


fig.1.1

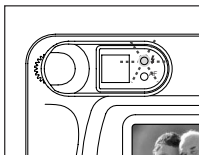
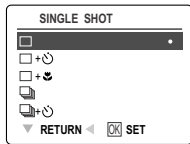
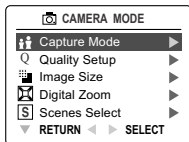



fig.1.2

| Flash Ready LED Status | Description |
|------------------------|--|
| Steady (fig.1.1) | The camera is capturing a video clip. |
| Blinking (fig.1.2) | The flash is recharging. You may move the camera in this mode. |

Note: Do not power the camera off or switch modes while the camera is capturing or storing a picture or video clip to prevent corrupting the picture or video clip being stored.

TAKING A PICTURE WITH THE LCD

***Taking a picture with the LCD:***

1. Set the camera to () camera mode.
2. Frame the subject in the LCD.
3. Press the shutter button half-way to activate the auto-focus lock until the green AF LED stops blinking. (For more information on Focus Lock, please go to p.19) (fig.1.1)
4. Press the shutter button fully to capture the image. (fig.1.2)
 - The camera will make a click sound.
 - A preview of the image will be displayed on the LCD for 1 second and the picture counter number displayed in the LCD will be updated.

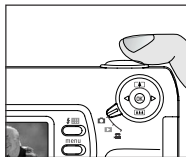


fig.1.1

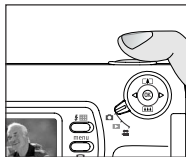


fig.1.2

AUTO-FOCUS LOCK

This feature can be used to freeze the focus when the subject is not located in the center of the picture.

To use the focus lock:

1. Position the subject in the center of the frame located in the viewfinder. (fig.1.1)
2. Press the **shutter** button half-way. (fig.1.2)
 - When the shutter button is pressed half-way, the auto-focus feature will be activated and the Auto Focus (green) LED will display the status of the auto focus lock.

 


fig.1.3

 


fig.1.4

| Auto Focus LED Status | Description |
|-----------------------|----------------------------------|
| Blinking (fig.1.3) | The camera is setting the focus. |
| Steady (fig.1.4) | The subject is in focus. |

3. Recompose your picture. (fig.1.5)
 - Keep the shutter pressed half-way while recomposing the picture.
4. Press the **shutter** button fully to capture the picture. (fig.1.6)



fig.1.1

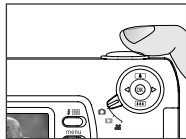


fig.1.2



fig.1.5

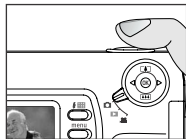
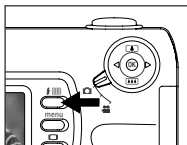







fig.1.6

SETTING THE FLASH

**How to set the flash:**


1. Press the Flash button next to the LCD repeatedly until the desired mode appears on the LCD.

| Flash Mode | Description |
|---|---|
|  Auto Flash | The camera judges if a flash is required. If the environment is too dark, the flash will fire. |
|  Red-Eye Reduction | Use this mode to significantly reduce the occurrence of "red-eye" in flash photography. The camera will automatically detect when the flash is needed and the flash will fire after a short delay. |
|  Fill-in Flash | Flash will fire in any lighting condition. |
|  Flash off | The flash will not fire in this mode. Please use this mode if you want to capture the mood of the ambient lighting or to use the available light in places where flash photography is prohibited, such as museums. <ul style="list-style-type: none"> • To prevent blurry pictures in low light situations, hold the camera steady when pressing the Shutter button or mount the camera on a tripod. |
|  Night Mode | A slow shutter speed is used in this mode to capture the lights in night scenes. <ul style="list-style-type: none"> • To prevent blurry pictures in low light situations, hold the camera steady when pressing the Shutter button or mount the camera on a tripod. |

Note: The flash needs to recharge after it is fired. If the Shutter button is pressed while the flash is charging, the Flash Ready LED will blink. Please wait a few moments and press the Shutter button again to take a picture.

TAKING A PICTURE WITH OPTICAL ZOOM

The camera can use up to 3x optical zoom to take pictures.

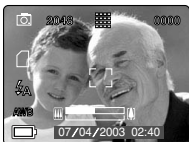

How to use optical zoom:

1. Press the joystick \uparrow towards the (\blacktriangle) tele position.
The zoom bar will display the zoom position on the LCD.
2. Press the joystick \downarrow to zoom towards the ($\blacktriangle\blacktriangle\blacktriangle$) wide-angle position.

Note: The folded optics allows the lens to be compact and contained in the camera. The lens does not extend while using optical zoom.

TAKING A PICTURE WITH DIGITAL ZOOM

The 4x digital zoom combined with the 3x optical zoom can give up to 12x magnification to your pictures.



How to use digital zoom:

1. At the maximum optical zoom level, continue to press the joystick **↑** until the digital zoom is activated.
 - There will be a short delay before the digital zoom is activated.
 - The zoom bar will turn orange when digital zoom is being used.

Photography Hints -



Hold your camera steady while using Digital Zoom to prevent blurriness in the photograph due to camera movement.

Also, please note that the image quality may degrade slightly with digital zoom.

Note: The digital zoom can only be monitored with the LCD and not through the optical viewfinder.

Activating/Deactivating Digital Zoom


The digital zoom feature can be turned off by following the steps below.

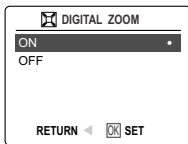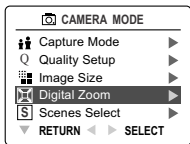


How to activate or deactivate Digital Zoom:

1. In Camera Mode, press **MENU** to display the Main Menu.
2. Press the joystick ↓ until Digital Zoom is highlighted, then press the joystick → to enter its submenu.
3. Press the joystick ↓ to highlight Off or On.
 - The default setting for this is On.
4. Press **OK** to select.

USING THE MAIN MENU IN CAMERA MODE

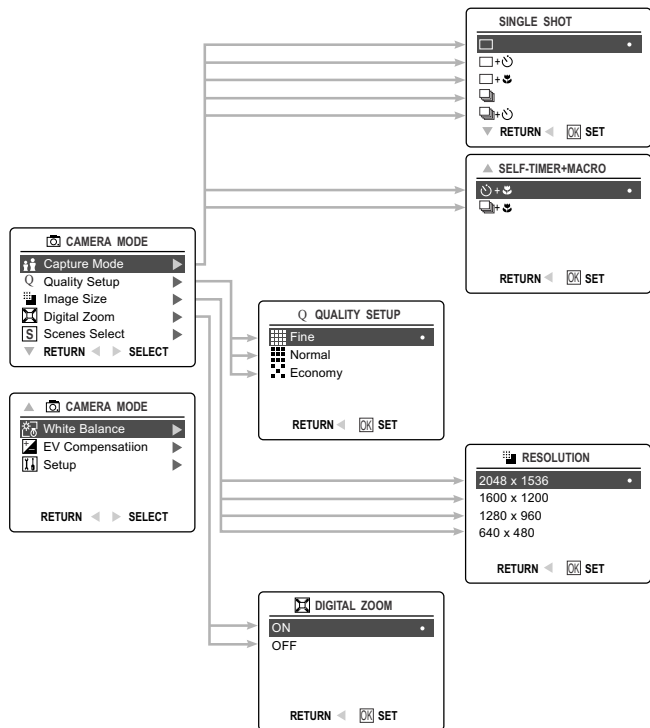



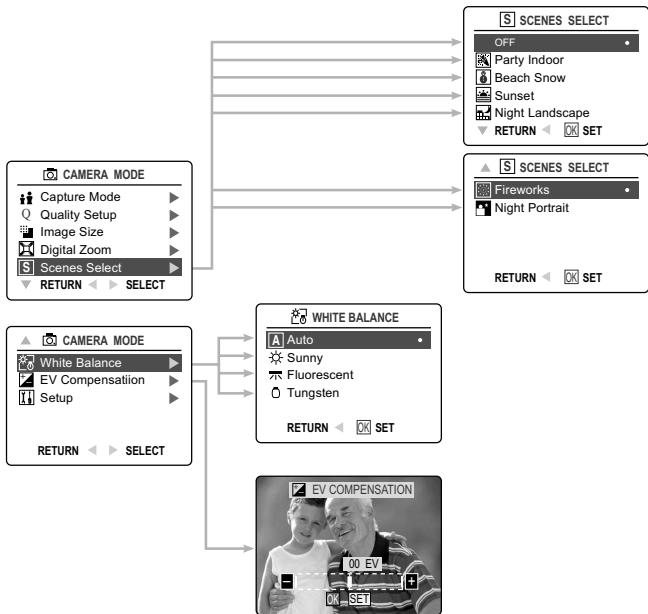





USING THE MAIN MENU IN CAMERA MODE



USING THE MAIN MENU IN CAMERA MODE













Follow the steps below to set the advanced shooting options in the camera through the Main Menu.

Using the () Main Menu:



1. Turn the camera on.
2. Set the mode dial to ().
3. Press **MENU** to display the main menu.
4. Press the joystick   until the desired option is highlighted.
5. Press the joystick  to enter the submenu.
6. Press the joystick   in the submenu to toggle between the options.
7. Press  to make a selection.
 - All selections will be marked by a red dot.
8. To return to the previous menu, press the joystick  .
9. To exit the menu at any time press the **MENU** button.

CAPTURE MODE OPTIONS

The capture mode menu has 7 features to choose from for taking pictures.

| Capture Mode Option | Description |
|---|---|
| () Single shot | The camera will take 1 picture at a time. |
| ( + ) Single shot with Self-timer | The camera will take 1 picture with Self-timer. (p.28) |
| ( + ) Single shot with Macro | The camera will take 1 picture at a time in Macro mode. (p.29) |
| () Continuous Shooting | The camera will take 7 pictures (at 1600 x 1200 pixels) in a row when the shutter button is fully pressed. The flash is disabled in this mode. (p.30) |
| ( + ) Continuous Shooting with Self-timer | The camera will take 7 pictures in a row with Self-timer. (p.28) |
| ( + ) Continuous Shooting with Macro | The camera will take 7 pictures in a row in Macro mode. (p.29) |
| ( + ) Self-timer with Macro | The camera will take 1 picture in Macro mode with Self-timer. (p.28) |

SELF-TIMER

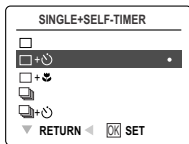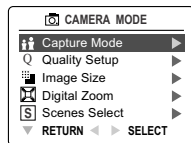

How to use self-timer:

1. In () Camera Mode, press **MENU** to display the main menu.
2. Press the joystick to enter capture mode.
3. Press the joystick to highlight:
 - () Single Shot with Self-timer
 - () Continuous Shot with Self-timer
- OR
 - () Self-timer with Macro
4. Press .
5. Place the camera on a flat surface or tripod.
6. Use the LCD to compose the picture, and then press the **Shutter** button to activate the self-timer.
The Self-timer LED will blink for 10 seconds and then the image will be captured.

Note:



- The self-timer is automatically deactivated once the image is taken.
- To deactivate the self-timer before taking a picture, follow the steps above and highlight another option in the Capture Mode menu.

Photography Hints -

Since the Self-timer LED indicator on the front of the camera flashes, you have time to join in the photograph and know when the camera is done taking a picture when the Self-timer LED light stops blinking.

MACRO MODE

This mode enables the camera to capture pictures in close distances.

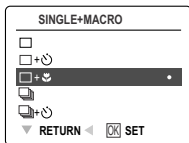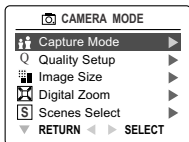

Setting Macro Mode:

- In the () main menu. Press the joystick \rightarrow to enter the capture mode submenu.
- Press the joystick \downarrow to highlight:
 - () Single shot with Macro
 - () Continuous shot with Macro
- OR
 - () Self-timer with Macro
- Press \odot to enter the mode
The Macro icon () will be displayed on the LCD.



Taking a picture in Macro Mode:

- Frame the subject in the LCD.
 - The minimum shooting distance can vary based on the zoom position.
 - In the () wide-angle position, you can get as close as 0.1m.
- Press the **shutter** button half-way to activate the focus until the green AF LED stops blinking.
 - You can monitor the focus range through the LCD.
- Press the **shutter** button fully to take the picture.



CONTINUOUS SHOOTING

This feature enables the camera to capture a continuous series of pictures while the shutter button is pressed down.

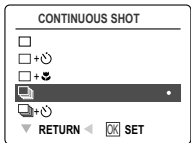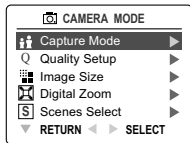

Using Continuous shooting:



1. In the () Main Menu, press the joystick → to enter the Capture Mode submenu.
2. Press the joystick ↓ until Continuous Shot is highlighted, then press joystick → to enter the mode.
3. Frame the subject in the LCD screen and press the **shutter** button half-way to activate the focus until the green AF LED stops blinking.
4. Press the **shutter** button fully to capture the pictures.
 - The camera will capture images at approximately 3 images per second for a maximum of 7 images.

Note:

- In continuous shooting mode the flash is disabled as the recharging time will slow it down.
- The camera will only capture the pictures in the 1600 x 1200 resolution setting in this mode.

IMAGE RESOLUTION

Image Resolution determines the size of a captured image. Higher resolution images contain more details and have larger file sizes.

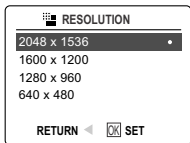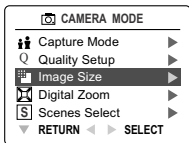

Images Stored on 16MB memory (approx.):



| Resolution Quality | 3MP (2048 x 1536) | 2MP (1600 x 1200) | 1.2MP (1280 x 960) | VGA (640 x 480) |
|-----------------------|----------------------|----------------------|-----------------------|--------------------|
| Fine | 15 images | 24 images | 38 images | 155 images |
| Normal | 30 images | 49 images | 72 images | 311 images |
| Economy | 60 images | 99 images | 155 images | 623 images |

How to change the resolution:

1. When Resolution is highlighted in the () Main Menu, press the joystick → arrow to enter the () Resolution submenu.
2. Press the joystick ↑ or ↓ until the desired setting is highlighted.
3. Press to select the mode.
4. Press **MENU** to return to picture taking mode.

IMAGE QUALITY

The Image Quality setting determines the amount of compression used to reduce the size of the stored image file in order to economize the space in the internal memory or memory card.

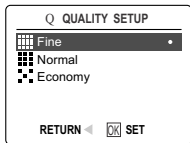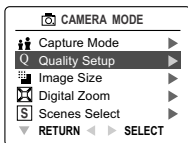



| Quality | JPEG Compression Ratio | Description |
|---------|------------------------|--|
| Fine | 4:1 | Fine image quality can be used to print up to 11" x 14" pictures. |
| Normal | 8:1 | Normal image quality can be used for general purpose pictures. |
| Economy | 16:1 | Economy image quality can be used for pictures that will be sent via e-mail. |





How to change the quality:

 1. When (Q) Quality is highlighted, press the joystick → to enter the (Q) Quality Setup submenu.
2. Press the joystick ↑ or ↓ until the desired setting is highlighted.
3. Press ⊗ to select the Quality mode
4. Press **MENU** to return to picture taking mode.


 


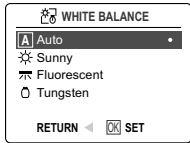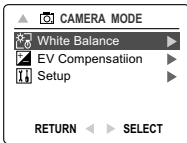WHITE BALANCE

By default the camera uses Auto White Balance to best reproduce colors under different lighting conditions. For mixed lighting conditions you can use the Auto White Balance.




| White Balance Mode | Description |
|--|--|
|  Auto | The camera will automatically choose the white balance setting. Use this setting in variable conditions. |
|  Sunny | Use outdoors with sufficient sunlight. |
|  Fluorescent | Use indoors with fluorescent or ambient light conditions. |
|  Tungsten | Use indoors with tungsten light conditions. |

How to change the White Balance:

1. When White Balance is highlighted, press the joystick  to enter its submenu.
2. Press the joystick  or  until the desired setting is highlighted.
3. Press  to select the White Balance mode
4. Press **MENU** to return to picture taking mode.


EV COMPENSATION

The camera uses Auto Exposure to give you well exposed pictures under most conditions. If the main subject turned out too light or too dark, you can use the EV Compensation feature to improve the result.

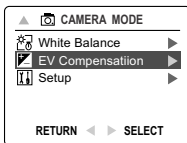



| Exposure Compensation Mode | Description |
|----------------------------|---|
| + | Increasing the Exposure in pictures that are too dark, will make the picture lighter. |
| - | Decreasing the Exposure in pictures that are too light will make the picture darker. |







How to use EV Compensation:

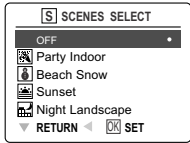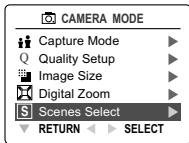1. Press the joystick \downarrow in the Main Menu until () EV Compensation is highlighted.
2. Press the joystick \rightarrow to display the EV Compensation bar on the LCD.
3. Press the joystick $\leftarrow \rightarrow$ to change the EV Compensation between - 1.8 to +1.8.
4. Press \odot to select the desired value.
 - The camera will return to picture taking mode automatically after selecting.


SCENE SELECTION

The default options in the camera can be used in most settings. The scene modes are helpful to quickly optimize the various settings to best capture specific scenes.



| Preset Scene | Description |
|---|--|
| OFF | No Scene Selection (default). |
|  Party/Indoor | Use this mode in to capture the details of candlelit scenes or other indoor background light conditions. |
|  Beach/Snow | Use this mode to capture the details in high glare scenes such as snow or shining water. |
|  Night Landscape | A slow shutter speed is used to capture the lights in night scenes. Photography Tip: With the slow shutter speed there is a possibility of getting blurry images due to camera movement. To reduce blurring, you may do the following: <ol style="list-style-type: none"> 1. Set your camera to Night Landscape mode. 2. Place your camera on a tripod or sturdy surface area. 3. Set the camera to self-timer mode. 4. Press the shutter button. |
|  Sunset | This mode captures the deep hues and color variations in sunsets and sunrises. |
|  Fireworks | Use this mode to capture the burst of light from fireworks with a slower shutter speed. |
|  Night Portrait | Use this mode to capture a subject illuminated with the lights in a night scene with a slow shutter speed. <ul style="list-style-type: none"> - Due to the slow shutter speed, place the camera on a tripod for better picture quality. |




How to set the scene selection:

1. When Scenes Select is highlighted, press the joystick → to enter the its submenu.
2. In the Scenes Select menu, press joystick ↑ ↓ to choose between the options.
3. Press  to select the Scene mode.
4. Press **MENU** to return to picture taking mode.


Note: The scene selection mode will override the flash setting set by the flash button for one picture only.

TAKING VIDEO CLIPS

The camera can capture video clips.

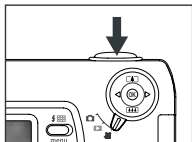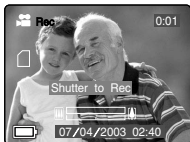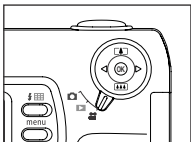

To record a video clip:

1. Slide the Mode Switch to () Video Clip Mode.
2. Position the subject in the viewfinder.
3. Press the **shutter** button half-way to activate the focus until the green AF LED stops blinking.
4. Press the **shutter** button fully to capture a continuous video clip.
 - Internal Memory: The camera can take video clips for 10 seconds only.
 - SD Memory Card: The camera can take video clips until the memory card is full and the recording time remaining will be displayed on the upper right hand corner of the LCD monitor.

To stop recording:

1. Press the **Shutter** button again to stop recording.
- OR
2. The camera will continue recording until the memory limit has been reached.

Video Clip Information

Resolution: QVGA (320 x 240)

Frame rate: 30fps

File Format: AVI (Motion Picture)


Note: [Transferring Files] will be displayed on the LCD monitor when the camera is storing the video clip. Do not open the battery door or turn the camera off while transferring files, or the video clip may not be stored.


Note:

- Higher capacity memory cards can take longer video clips.
- The Flash, Menu and LCD on/off buttons are deactivated in this mode.
- The focus and the zoom cannot change during recording.




REVIEWING YOUR FILES

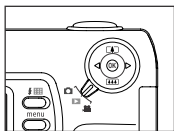Using Review Mode




In () review mode, you can review your stored pictures and video clips through the LCD.

Using **REVIEW** mode:





1. Slide the Mode Switch towards ().
2. Press the joystick  or  to scroll through each file.
3. The file type can be found in the upper left hand corner of the LCD.
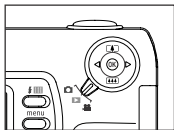
| File Format | File Type |
|-------------|------------|
| JPG | Picture |
| AVI | Video Clip |

Reviewing Video Clips



How to review a video clip:






1. In () Review Mode, press the joystick  and  to scroll through the stored pictures and video clips.
 - Only the first image of the video clip is shown.
2. When a video clip (AVI) is displayed on the LCD, press  to play.


REVIEWING YOUR FILES


Enlarging Stored Pictures



How to enlarge:


1. In () Review Mode, press the joystick  or  to scroll through the stored pictures and video clips.
2. While viewing a stored image (JPG), Press  to use the "Enlargement" feature. Press  again to get different magnifications in the following order

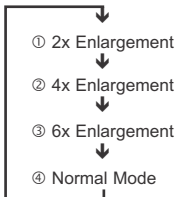

3. In 2x, 4x and 6x mode you may press the joystick  ,  ,  ,  to navigate in the picture.

| Resolution | Maximum Enlargement |
|-------------|---------------------|
| 2048 x 1536 | 6x |
| 1600 x 1200 | 4x |
| 1280 x 960 | 4x |
| 640 x 480 | 2x |

USING THE DELETE MENU

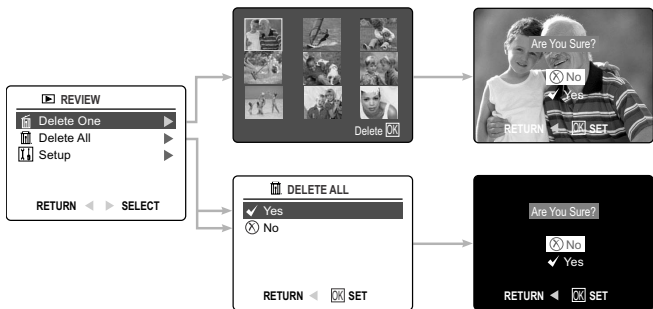

Using the Delete Menu in Review mode:



1. Turn the camera on.
2. Set the mode dial to (**▶**).
3. Press **MENU** to display the main menu.
4. Press the joystick **→** to enter the Delete submenu.
5. To exit the menu, press the joystick **←**.
6. Press the **MENU** button to return to the (**▶**) Main Menu.

DELETING YOUR FILES

Delete One



Once a file is deleted, it cannot be recovered.

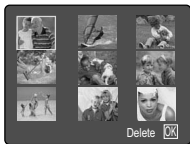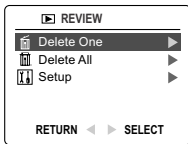



1. Set the Mode Dial to the Review Mode.
2. Press the joystick \rightarrow when Delete One is highlighted.
3. The next screen will display the stored pictures and video clips as thumbnails. Press the joystick \uparrow , \downarrow , \leftarrow , \rightarrow to highlight the file you want to delete.
4. Press OK to select.
5. The next screen will read "Are You Sure?" press the joystick \uparrow or \downarrow to highlight No or Yes.
6. Press OK to select.
 - If No is selected, no change will be made, and you will return to the Delete One thumbnail view.
 - If Yes is selected, the selected file will be deleted.




Delete All





Once all files are deleted, they cannot be recovered.

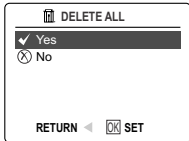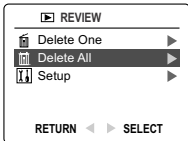**How to delete all files:**

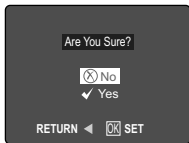



1. Set the Mode Dial to the Review Mode.
2. Press the joystick \downarrow until Delete All is highlighted and press the joystick \rightarrow .
3. The next screen will read "Are You Sure?" press the joystick \uparrow or \downarrow to highlight No or Yes.
4. Press OK to select.
 - If No is selected, no change will be made, and you will return to the Delete File Menu.
 - If Yes is selected, the next screen will read, "Are you sure?"
5. Press the joystick \uparrow \downarrow to select No or Yes.
 - If No is selected, no change will be made, and you will return to the Delete File Menu.
 - If Yes is selected, **ALL FILES** will be deleted.

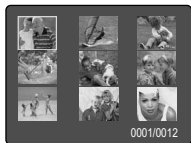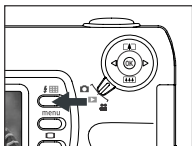


USING THUMBNAIL MODE

 


How to view your files:

1. While in Review Mode, press the () button to have nine thumbnail images or video clips appear at once on the LCD display.
2. Press the joystick   to highlight a picture or video clip.
 - When the joystick is pressed up in the top row of thumbnails, the previous 9 files will be displayed
 - When the joystick is pressed down in the bottom row of thumbnails, the next 9 files will be displayed.
3. Press the  button to view the enlarged picture or video clip.


CUSTOMIZING THE CAMERA SETTINGS

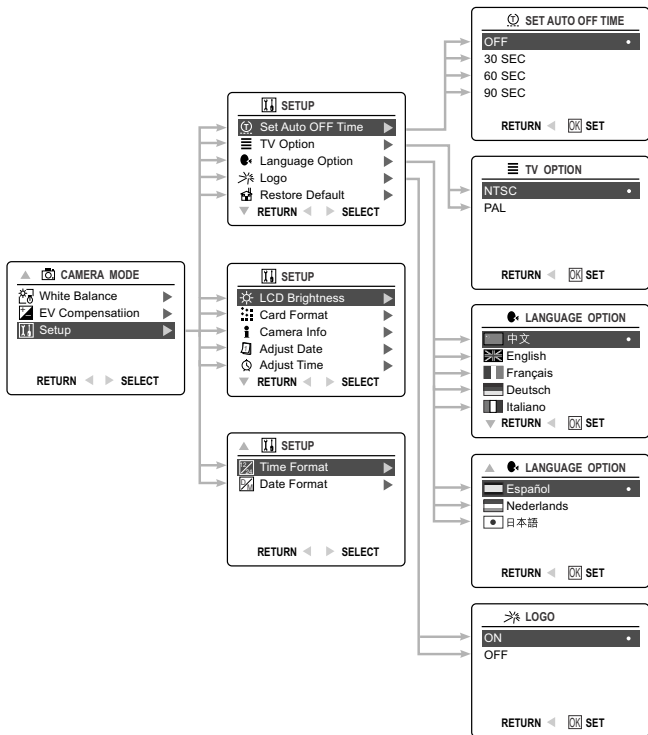



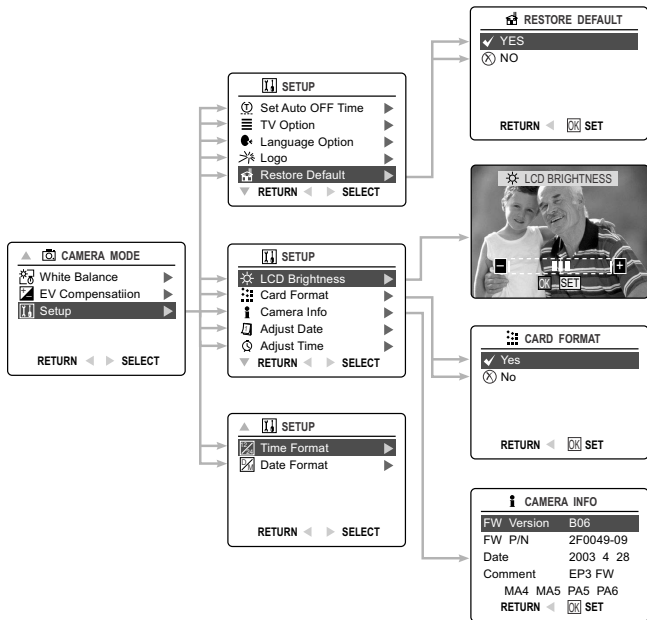



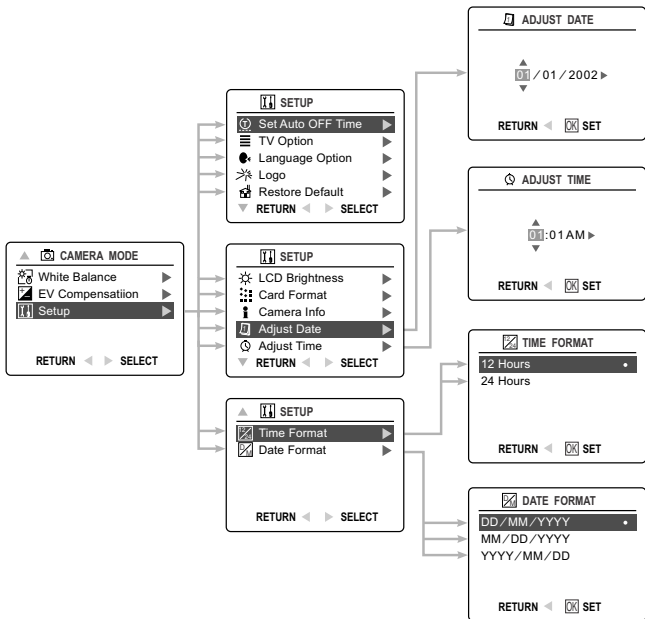


CUSTOMIZING THE CAMERA SETTINGS



CUSTOMIZING THE CAMERA SETTINGS



Using the Setup menu:




1. Turn the camera on.
2. Set the mode dial to () or ().
3. Press **MENU** to display the main menu.
4. Press the joystick  until Setup is highlighted.
5. Press the joystick  to enter the Setup submenu.
6. In the Setup menu, press the joystick   to highlight the option you wish to customize.
7. Press the joystick  to enter the submenu of the highlighted option.
8. Use the joystick to adjust the setting and press  to select.
9. Press the joystick  to return to the previous menu **OR** press **MENU** to exit.

Setup Menu and Features

| Setup Setting | Options | Description |
|---------------------|---|---|
| ⌚ Set Auto Off Time | 30, 60, 90 | This feature enables the camera to automatically turn off when it is idle. |
| | Off | Deactivates the automatic power off option. |
| ☰ TV Option | NTSC, PAL | Sets the mode the camera needs to adapt to your TV. (p.76) |
| ● Language Option | 中文, English, Français, Español, Italiano, Deutsch, Nederlands, 日本語 | Sets the language in your camera. |
| ✳ Logo | On, Off | Turns the start up animation on or off. |
| 🏠 Restore Default | Yes/No | Sets all camera settings to the factory default. |
| ☀ LCD Brightness | | Sets the LCD brightness level. |
| 📄 Card Format | Yes/No | Formats internal memory or the memory card by deleting all files. |
| 📷 Camera Info | FW Version FW Part No. Date Comment | Displays the camera version information. This is for information purposes only. |
| 📅 Adjust Date | Month, Day Year | Changes the date in your camera. |
| 🕒 Adjust Time | Hour, Minute, AM or PM | Changes the time in your camera. |
| 🕒 Time Format | 12 Hours, 24 Hours | Changes the time format. |
| 📅 Date Format | DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD | Changes the date display. |

CUSTOMIZING THE CAMERA SETTINGS



SETTING THE AUTO OFF TIME

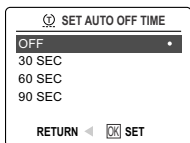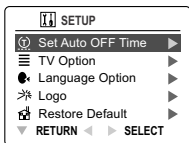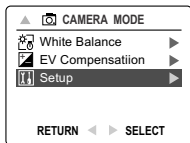

Notes:

- When the camera is in auto off mode, press the **shutter** button to turn the camera back on.
- When the camera automatically turns off, the lens cover will not close automatically. Please turn the camera off manually to close the lens cover.
- The default setting is 30 seconds to conserve battery power.

SETTING THE LANGUAGE

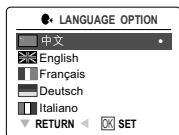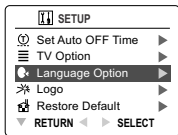


To set the Language:

1. In the Setup menu, press the joystick ↓ until Language is highlighted.
2. Press the joystick → to enter the Language submenu.
3. Press the joystick ↑ ↓ to highlight the desired language.
4. Press [OK] to select the language.
 - All menu screens will be displayed in the new language.
 - To quit the selection, press the **MENU** button or the joystick (left arrow).

SETTING THE DATE

1. In the Setup menu, press the joystick \downarrow until Adjust Date is highlighted.
2. Press the joystick \rightarrow to highlight the month (MM), date (DD) or year (YYYY).
 - The selection will blink when it is highlighted.
3. Press the joystick $\uparrow \downarrow$ to change the data in the blinking position until you reach the desired setting.
4. Press OK to set.

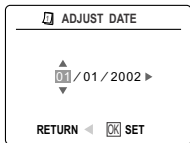


Note:

- The date can be displayed in MM/DD/YYYY; DD/MM/YYYY or YYYY/MM/DD.
- If the battery is removed for more than 4 minutes, the date will return to its default setting.
- Set Date/Time! will appear on the LCD when the camera is turned on. Press the **Shutter** button slightly to turn the reminder off.

SETTING THE TIME



1. In the Setup menu, press the joystick \downarrow until Adjust Time is highlighted.
2. Press the joystick \rightarrow to highlight the hour (HH), minutes (MM) or AM/PM.
 - The selection will blink when it is highlighted.
3. Press the joystick $\uparrow \downarrow$ to change the data in the blinking position until you reach the desired setting.
4. Press OK to set.

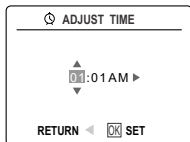

Note:

- The time can be displayed in a 12-hour or 24-hour respectively format.
- If the battery is removed for more than 4 minutes, the time will return to its default setting.
- Set Date/Time! will appear on the LCD when the camera is turned on. Press the **Shutter** button slightly to turn the reminder off.

SETTING THE LCD BRIGHTNESS

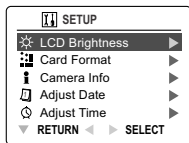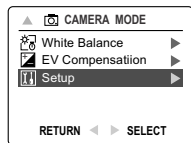***How to set the LCD Brightness:***




1. In the Setup menu, press the joystick ↓ until LCD Brightness is highlighted.
2. Press the joystick → to display the LCD Brightness bar on the LCD.
3. Press the joystick → / ← to adjust the brightness.
4. Press **OK** to set.
 - The camera will return to picture taking mode or review mode.

FORMATTING THE INTERNAL MEMORY OR MEMORY CARD

CAUTION:



1. Formatting deletes all pictures and video clips from the internal memory or memory card.
2. Removing the card during formatting may damage the card.
3. Selecting the formatting feature while there is no memory card in the camera, will cause the internal memory to format. All pictures and video clips on the internal memory will be lost.

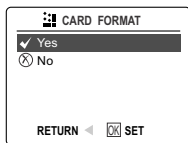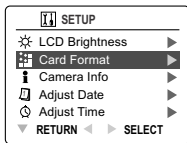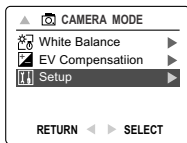

1. In the Setup menu, press the joystick \downarrow until Card Format is highlighted.
2. Press the joystick \rightarrow to enter the Format submenu.
3. Press the joystick \uparrow \downarrow to highlight No or Yes.
4. Press \odot to select.

If No is selected, no change will be made, and you will return to the Main Menu.
If Yes is selected, **ALL FILES** will be deleted.

Note: If MEMORY ERROR! is displayed on the LCD screen, this indicates that the internal memory or the memory card is corrupted. Please format the memory to continue.










RESTORE THE CAMERA TO FACTORY DEFAULT SETTINGS

To restore the default settings in your camera:

1. Press the joystick → when Restore Default is highlighted in the camera.
2. Press the joystick ↑ ↓ to select No or Yes.

When No is selected, no change is made.

When Yes is selected, the Default settings will be restored. Please refer to the table below for the default settings.

| OPTION | DEFAULT STATUS |
|---|----------------|
|  Capture mode | Single Shot |
| Q Quality | Fine |
|  Resolution | 2048 X 1536 |
|  Digital Zoom | ON |
|  Scene Selection | OFF |
|  White Balance | Auto |
|  Exposure Compensation | 0 |
|  Auto Off | 30 SEC |
|  LCD Brightness | Center |
|  Time Format | 12 Hours |

Note: After the camera is set to default, the Language, Date and Time menus will appear when the camera is turned on.

INSTALLATION GUIDE

Computer System Requirements

Windows

- 133MHz Pentium MMX processor or equivalent (300MHz Pentium II or better recommended)
- Microsoft Windows 98/98SE, Windows Me, Windows 2000 Professional, Windows XP Home / Professional / Media Center
- 275MB free hard disk space (extra 30MB for Adobe Acrobat Reader 5 and 65MB for Microsoft DirectX 9.0 if required)
- 64MB of RAM (128MB or more recommended)
- Minimum 800 x 600 display with 16-bit color (1024 x 768 with 24-bit color or better recommended)
- USB Port
- CD-ROM Drive

Macintosh

- Mac OS 9.0, 9.1, 9.2, 9.3 and X or later
- Power PC-based
- 32MB of RAM
- 640 x 480 display with Thousands of colors (Millions of colors recommended)
- Built-In USB Port

Installation Requirements

The installer will automatically detect which software applications need to be installed or if they are not necessary. Please read the installation requirements before proceeding with the installation process.

| System | Windows 98/98SE | Windows Me | Windows 2000 | Windows XP | Macintosh |
|---|------------------------|-------------------|---------------------|-------------------|------------------|
| Install Camera Driver | X | | | | |
| Install DirectX 9 | X | | X | | |
| Install ArcSoft PhotoImpression | X | X | X | X | |
| Install Adobe Acrobat Reader 5.1 | | | | | |
| Camera automatically detected by the computer (no driver installation required) | | X | X | X | X |

USING THE INSTALLER SPLASH SCREEN

The installer will automatically detect which software applications need to be installed or if they are not necessary. This will be indicated by the buttons on the splash screen that appears when the CD-ROM is inserted into the computer:




| Color | Description |
|--------------|--|
| Yellow (●) | Required or highly recommended to install. |
| Gray (●) | Already installed or not necessary |

| Option | Description |
|------------------------------|--|
| Camera Drivers | The USB Mass Storage camera drivers enable the camera to become an external drive on your computer. |
| Microsoft DirectX 9 | DirectX 9 enables the movie playback applications on your computer to playback video clips that are captured with the camera. |
| ArcSoft PhotoImpression 2000 | This photo software enables you to edit and enhance pictures. |
| Adobe Acrobat Reader 5.1 | Adobe Acrobat Reader enables you to view the electronic version of the User's Guide. |
| User's Guide | Direct link to the electronic version of the User's Guide in different languages. (All User's Guides are saved in PDF format.) |

FLOW DIAGRAM FOR SOFTWARE INSTALLATION

To transfer the pictures and video clips from the memory card or the camera internal memory, the camera must be connected to a computer with the provided Mini-USB cable. Additional setup maybe required by some operating systems before connecting the camera to the computer for the first time.

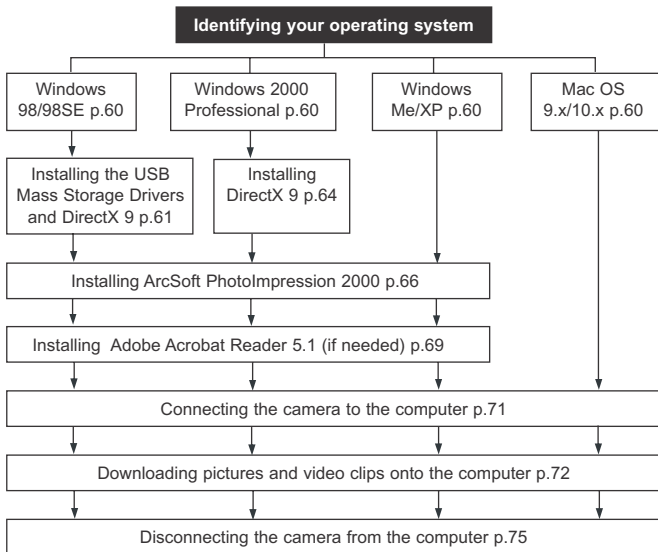

Data transfer may not function correctly if you have one of the operating systems listed below or you are using an add-on USB adapter or USB hub.

- Windows 95
- Windows NT 3.51/4.0
- Mac OS 8.6 or lower
- Home built computer systems or computer systems without a factory installed operating system
- Home installed operating system or upgrade to the operating system.

IDENTIFYING YOUR OPERATING SYSTEM

Windows

1. Right click the **My Computer** icon on your desktop, and go to Properties.
2. The System Properties Box will appear.
The information about your computer is listed under the system area.
3. Confirm that your computer is running one of the following operating systems and proceed to the page in the chart for installation instructions:



| System | Proceed to page |
|--|-----------------|
| Windows 98, Windows 98 Second Edition | Page 61 |
| Windows 2000 | Page 64 |
| Windows Millennium Edition, Windows XP Home Edition, Windows XP Professional Edition, Windows XP Media Center Edition | Page 66 |

4. Press **Ⓚ** to close the window.

If the **My Computer** icon is not on your desktop, click **Control Panel** icon from the Start Menu and double click on the **System** icon to open the System Property Box.


Macintosh




1. In the Apple Menu on the Menu bar, select **About this Computer**.
2. A window will appear with the computers operating system version. Confirm that your computer is version 9 or higher.



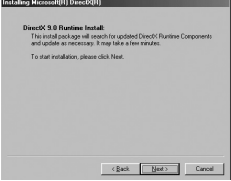
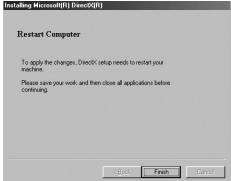
No installation of software is necessary for Macintosh users, please go to Page 73 to connecting your camera to the computer.

INSTALLING THE DRIVER AND DIRECTX 9 – WINDOWS 98/98SE


NOTE: Do not connect the camera to your computer before the camera drivers and Microsoft DirectX 9 installation is completed.



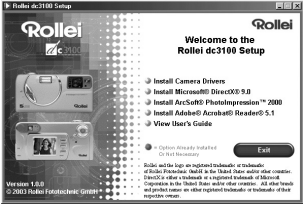
| | |
|----------------------|--|
| <p>Step 1</p> | <p>Make sure your camera is powered off and not connected to the computer.</p> |
| <p>Step 2</p> | <p>Make sure the computer is powered on and Windows 98 or 98SE is running.</p> |
| <p>Step 3</p> | <p>Close any other applications or software you may be running.</p> |
| <p>Step 4</p> | <p>Insert the CD-ROM included in your camera's packaging into your computer's CD-ROM Drive.</p> <p>NOTE: If the installer does not start automatically within 30 seconds after the CD-ROM has been inserted, click on "My Computer" either on the Desktop or in the Start Menu and locate the CD-ROM Drive. Double click on the CD-ROM Drive icon for installation. Double-click on the file named Install and proceed to Step 5.</p> |
| <p>Step 5</p> | <p>The installation screen will appear, Click on Install Camera Drivers</p>  |
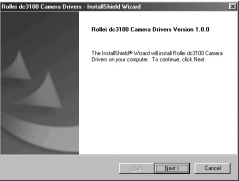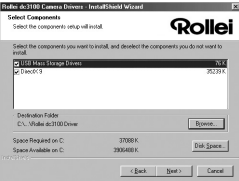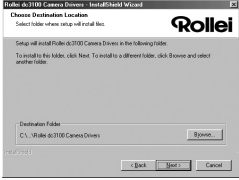
| | | |
|----------------------|--|--|
| <p>Step 6</p> | <p>Click [Next >].</p> |  |
| <p>Step 7</p> | <p>The next dialog will prompt you to select the components that will be installed. USB Mass Storage Driver and DirectX 9 will be preselected.</p> <p>The files will be saved in the Rollei dc3100 directory automatically.</p> <p>OR</p> <p>You may change the default folder by clicking [Browse...] and selecting a different folder in your computer.</p> <p>Click [Next >]</p> |  |
| <p>Step 8</p> | <p>Click [Install]</p> |  |

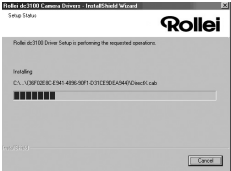
| | | |
|-----------------------|---|---|
| <p>Step 9</p> | <p>Install progress bar</p> |  |
| <p>Step 10</p> | <p>The next screen will begin the DirectX setup. Click [Next >]</p> |  |
| <p>Step 11</p> | <p>Click [Next >]</p> |  |
| <p>Step 12</p> | <p>Click [Finish] Your computer will automatically reboot.</p> |  |


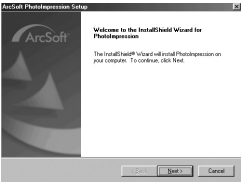

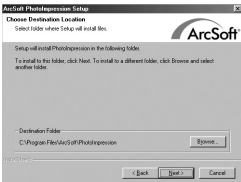
INSTALLING DIRECTX 9– WINDOWS 2000




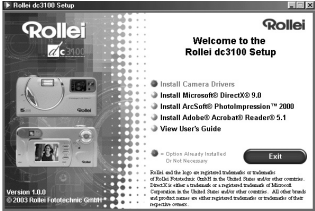
| | |
|---------------|--|
| Step 1 | Make sure your camera is powered off and not connected to the computer. |
| Step 2 | Make sure the computer is powered on and Windows 2000 is running. |
| Step 3 | Close any other applications or software you may be running. |
| Step 4 | <p>Insert the CD-ROM included in your camera's packaging into your computer's CD-ROM Drive.</p> <p>NOTE: If the installer does not start automatically within 30 seconds after the CD-ROM has been inserted, click on "My Computer" either on the Desktop or in the Start Menu and locate the CD-ROM Drive. Double click on the CD-ROM Drive icon for installation. Double-click on the file named Install and proceed to Step 5.</p> |
| Step 5 | <p>The installation screen will appear, click on Install Microsoft DirectX 9.0</p>  |
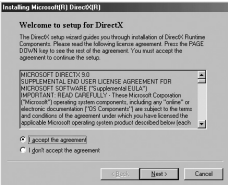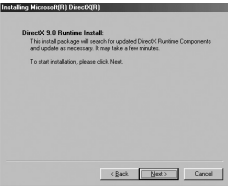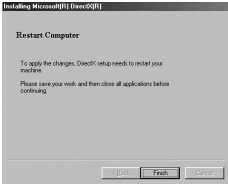
| | | |
|----------------------|---|---|
| <p>Step 6</p> | <p>The next screen will begin the DirectX setup. Click [Next >]</p> |  |
| <p>Step 7</p> | <p>Click [Next >]</p> |  |
| <p>Step 8</p> | <p>Click [Finish]</p> <p>Your computer will automatically reboot.</p> |  |


 
INSTALLING ARCISOFT PHOTOIMPRESSION – ALL WINDOWS USERS

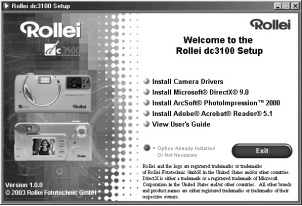
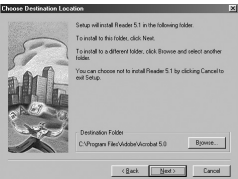

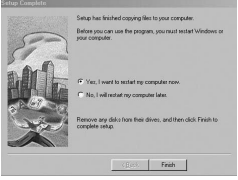
| | |
|---------------|--|
| Step 1 | <p>Make sure your camera is powered off and not connected to the computer.</p> |
| Step 2 | <p>Make sure the computer is powered on and Windows is running.</p> |
| Step 3 | <p>Close any other applications or software you may be running.</p> |
| Step 4 | <p>Insert the CD-ROM included in your camera's packaging into your computer's CD-ROM Drive.</p> <p>NOTE: If the installer does not start automatically within 30 seconds after the CD-ROM has been inserted, click on "My Computer" either on the Desktop or in the Start Menu and locate the CD-ROM Drive. Double click on the CD-ROM Drive icon for installation. Double-click on the file named Install and proceed to Step 5.</p> |
| Step 5 | <p>The installation screen will appear, Click on Install ArcSoft Photolmpression 2000</p>  |

| | | |
|---------------|---|--|
| Step 6 | The Set- Up language window will appear, select the language from the drop down box and click OK . |  |
| Step 7 | Click [Next >] |  |
| Step 8 | Click [Yes] |  |
| Step 9 | Click [Next >] |  |
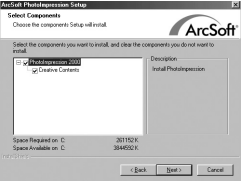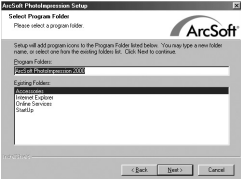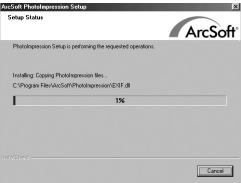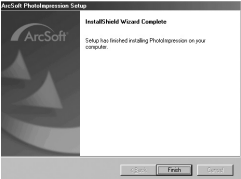
| | | |
|-----------------------|---|--|
| <p>Step 10</p> | <p>Make sure all two applications are checked and then click [Next >]</p> |  |
| <p>Step 11</p> | <p>Click [Next >]</p> |  |
| <p>Step 12</p> | <p>The screen will show the status of the installation</p> |  |
| <p>Step 13</p> | <p>Click [Finish]</p> |  |

INSTALLING ADOBE ACROBAT READER 5.1- ALL WINDOWS USERS (OPTIONAL)

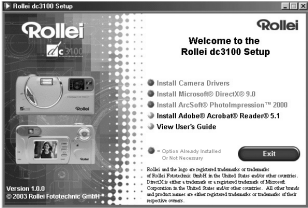
| | |
|---------------|--|
| Step 1 | Make sure your camera is powered off and not connected to the computer. |
| Step 2 | Make sure the computer is powered on and Windows is running. |
| Step 3 | Close any other applications or software you may be running. |
| Step 4 | <p>Insert the CD-ROM included in your camera's packaging into your computer's CD-ROM Drive.</p> <p>NOTE: If the installer does not start automatically within 30 seconds after the CD-ROM has been inserted, click on "My Computer" either on the Desktop or in the Start Menu and locate the CD-ROM Drive. Double click on the CD-ROM Drive icon for installation. Double-click on the file named Install and proceed to Step 5.</p> |
| Step 5 | <p>The installation screen will appear, Click on Install Adobe Acrobat Reader 5.1</p>  |
| Step 6 | <p>Status bar.</p>  |

| | | |
|-----------------------|---|--|
| <p>Step 7</p> | <p>Click [Next >].</p> |  |
| <p>Step 8</p> | <p>The files will be saved into C:\Program Files\Adobe\Acrobat 5.1 automatically. OR You may change the default folder by clicking [Browse...] and selecting a different folder in your computer. Click [Next >]</p> |  |
| <p>Step 9</p> | <p>Installation progress</p> |  |
| <p>Step 10</p> | <p>Select Yes, to restart the computer or No, to restart the computer later. Click [Finish >]</p> |  |

CONNECTING THE CAMERA TO THE COMPUTER

NOTE: Do not connect the camera to your computer before the camera drivers and Microsoft DirectX 9 installation is completed.

1. Power the camera off.
The batteries must be in the camera.
2. Connect the camera to the computer with the Mini-USB cable provided.
 - Plug the larger end of the Mini-USB cable that is included with the camera into your PC's USB port. (Please refer to your computer's documentation for more information on the location of the USB port.)
 - Plug the small end of the Mini-USB cable into the USB port located in the Cable Connection panel on the side of the camera.
3. When the camera is connected to the computer for the first time, the camera USB Mass Storage driver installation will begin. Please follow the on-screen instructions to complete the installation.

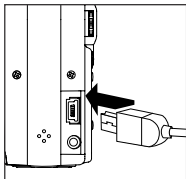

DOWNLOADING PICTURES AND VIDEO CLIPS ONTO YOUR COMPUTER

Note: Windows 98/98SE users must install the camera driver first. Page 61

Note: Windows 2000 users must install DirectX 9 to view video clips on the computer. Page 64

Downloading files from the camera:

- Internal memory: Do not insert the memory card.
- Memory Card: Insert the memory card.

Caution: Do not attempt to open the battery/memory door to insert or remove the memory card and/or batteries when the camera is connected to the computer.

FOR WINDOWS USERS

Downloading Pictures and Video Clips onto your computer:

1. Connect the camera to the computer. (p.71)
2. Double-click on My Computer.
3. Double-click Removable Disk.
4. Double-click DCIM.
5. Double-click 100CD330.
 - The stored pictures (JPG) and video clips (AVI) stored in the internal memory or the memory card will be displayed
6. Click and drag the files into a directory in your computer to save them.
 - To select all files, click Edit > Select all.

FOR MACINTOSH USERS


1. Connect the camera to the computer. (p.71)
 - After a few moments, the external hard drive will appear on the desktop.
2. Double-click the "untitled" removable drive that is on your desktop.
3. Double-click DCIM.
4. Double-click 100CD330.
 - The stored pictures (JPG) and video clips (AVI) stored in the internal memory or the memory card will be displayed.
5. Drag and drop the image you want to save in the computer.
 - To select all files, click Edit > Select all.

Note: You may also transfer the stored pictures and video clips on your memory card onto your computer by using a memory card reader (sold separately.)

USING ARCSOFT PHOTOIMPRESSION

Windows Only

1. Connect the camera to the computer. (p.71)
2. Launch ArcSoft Photolmpression software by clicking on Start-Programs-ArcSoft Camera Suite and choosing Photolmpression from the application list on your screen.
3. When the Application opens.
4. Click on the [Camera/ Scanner] button.(a)
5. Click on the drop-down list under Select Source and choose Rollei Camera.(b)
6. Click on the Camera/ Scanner Icon. (c)
 - A second window will appear showing the contents (pictures) in the internal memory or the memory card, and options on how to handle them. (d)
7. Click on "Get Photos" (e) to retrieve the pictures from your camera.

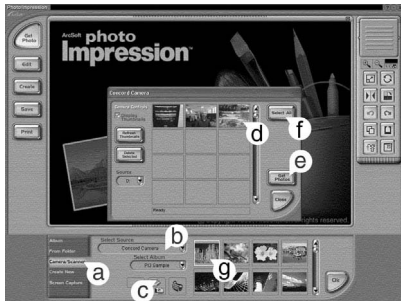

OR

Click on Select All. (f)

Click on Acquire and all picture will be transferred.

OR

Click on Edit-File Transfer.

8. The pictures will then be added to your album at the bottom of the application. (g) To access these, click CLOSE on the Camera Controls windows. Double-click on the thumbnail to open.

You are now ready to print, store or further enhance your pictures. Please refer to ArcSoft's Software help section for a tutorial on all the features Photolmpression offers.

UNPLUGGING YOUR CAMERA FROM THE COMPUTER

Windows 98/98SE:

1. Double-click on My Computer
2. Right-click on Removable Disk to display the menu.
3. Click on Eject in the menu.
4. Unplug the Mini-USB from the camera.

Windows ME/2000/XP:

1. Turn the camera off.
2. Click once on the "Unplug or Eject Hardware" icon on the right hand side of your task bar. (fig.1.1)
3. Select "Stop Rollei dc3100 USB Mass Storage Device"
4. Click [OK] in the "Safe to Remove Hardware" prompt.
5. Unplug the Mini-USB from the camera. (fig.1.2)



fig.1.1

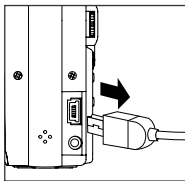





fig.1.2

Macintosh:

1. Drag the "untitled" removable drive icon on the desktop to the Trash.
2. Unplug the Mini-USB cable from the camera.

TV MODE - VIEWING AND DELETING YOUR FILES ON TV

The camera allows you to view individual files and record clips on the television. To begin, check your television documentation to determine what video standard you should set your camera to either NTSC or PAL.

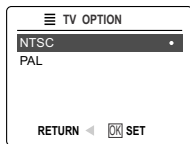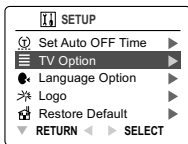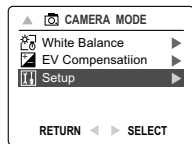

Changing the TV Mode setting:

1. Slide the Mode Switch to ().
2. Press **MENU** to view the () Main Menu.
3. Press the joystick \downarrow until Setup is highlighted.
4. Press the joystick \rightarrow to enter the Setup menu.
5. In the Setup menu press the joystick \downarrow until TV is highlighted.
6. Press the joystick \rightarrow to enter the TV submenu.
7. Press the joystick \uparrow \downarrow to change the setting to NTSC or PAL.
8. Press **MENU** to exit.

Note: If the TV is not properly grounded, the camera may malfunction while it is connected to the TV. Press the shutter button OR press the reset button with a pointed object such as a pen, then turn the camera off then back on with the On/Off switch. Please contact your TV service provider for more information on grounding your TV.

CONNECTING THE CAMERA TO THE TELEVISION

Connecting the camera to the television:

1. Connect the TV-Out cable into the jack marked **VIDEO** or **VIDEO IN** on your television.
2. Turn on your television.
3. Set the television to video mode according to the instructions in the owner's manual. (This is usually channel 3, 4 or AV).
4. Turn the camera on by sliding the On/Off Switch.
5. Connect the other end of the cable into the VIDEO port located in the cable connection panel. (fig.1.1)

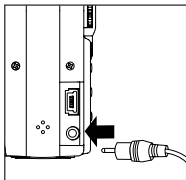






fig.1.1

Using the TV as a Live Viewfinder:

1. Connect the camera to the TV.
2. Turn the camera on.
3. Slide the Mode Switch to ().
4. The TV will become a live viewfinder.

Note: You may record your TV Mode session by using your VCR. Please refer to your VCR documentation to learn more about recording.

Reviewing pictures and video clips on your TV:

1. In TV Mode, slide the Mode Switch to ().
2. Press the joystick   to scroll through the saved pictures and video clips.
3. To customize your camera settings and to view more options, press **MENU** to display the TV Menu on the TV screen.
 - The TV menu will display the same Delete menu and Setup menu used in the camera. Please refer to pages 76 and 77 for further information.

Viewing video clips:

1. When an AVI file is displayed on the TV, press  to view.

ERROR MESSAGES

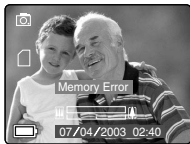


fig.1.1

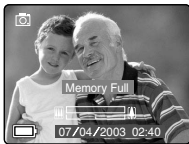


fig.1.2

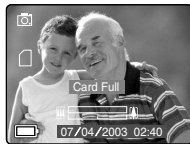


fig.1.3

Error Messages on the LCD indicate if the memory is full or if there is a problem with the memory.

Note: If the internal memory or the memory card is corrupted, the LCD will read ERROR! The memory needs to be formatted. Please format all files to continue. (Page.51)


TROUBLESHOOTING

| SYMPTOM | POSSIBLE CAUSE | POSSIBLE SOLUTION |
|---|---|--|
| CAMERA | | |
| Cannot turn on the camera | Batteries were not installed correctly | Install batteries correctly using the direction indicators on the inside of the battery door. |
| | Batteries are dead or weak | Replace batteries |
| | Battery compartment door was not closed correctly | Close the battery compartment properly. |
| The camera/buttons do not work. | The camera needs to be reset. | Press the reset button on the back of the camera with a pointed object such as a pen, then power the camera on and off. |
| The camera turns off during usage. | The batteries are drained of power. | Replace the batteries with new ones. |
| | The Auto time off setting is too short. | Your camera comes with an Auto Time Off setting, so if the camera is inactive for a certain amount of time, it powers off to conserve battery power. Please refer to the Time-Out section on page.50 to set your time limit. |
| PICTURES/VIDEO CLIPS | | |
| Picture/Video clip has poor image quality | Poor Lighting. | Increase the lighting in the surrounding area when taking picture and video clips. |
| | Lens is dirty. | Clean the lens with a soft cloth. See the Camera Maintenance section. |
| | Subject too close. | Stand at least 3.9 ft. (1.2m) away from the subject. |

| SYMPTOM | POSSIBLE CAUSE | POSSIBLE SOLUTION |
|-----------------------------------|---|---|
| TAKING PICTURES | | |
| Flash picture taken is too light. | Subject is too close. | Move the subject further away from the camera. |
| | The flash is not needed. | Change the camera setting to Auto Flash. See p.20. |
| | Lighting condition is too bright. | Decrease exposure compensation. See p.34. |
| Flash Picture taken is too dark. | The subject is too far away for the flash to be affective. | Move the subject closer to the camera, or move the camera closer to the subject. |
| | Flash is not on. | Turn the flash On. |
| | The subject is in front of a bright light. | Change the subject's position. |
| | Lighting condition is too dark. | Increase the exposure compensation. See p.34. |
| Flash did not work. | There was sufficient flash for the picture and the flash did not fire. This happens when the camera is set to Auto Flash. | This is normal as your cameras electronic light sensor is programmed to only fire the flash when needed. |
| | Camera's flash has been turned off. | Turn the flash to Auto flash. |
| | Flash did not charge. | Verify that the Ready LED has stopped blinking before taking a picture. |
| Picture taken is blurry. | Subject or camera was moved as the picture was taken. | Hold camera steady until picture is taken. |
| | The focus was not locked before taking the picture. | Before taking a picture, press the shutter button half-way to lock the focus, and press the shutter button fully to capture the picture. (p.19) |

| SYMPTOM | POSSIBLE CAUSE | POSSIBLE SOLUTION |
|--|--|--|
| There is something wrong with the color of your photographs. | White balance is not set properly. | Reset the white balance feature to Auto, or for the specific lighting in the surrounding area. |
| Cannot take a picture or a video clip | Memory is full | Delete all pictures and continue shooting. |
| | | Download the stored files to your PC internal memory or and delete the files from the memory card. |
| | | Insert a memory card with sufficient memory available. |
| | Camera is not set in picture/video clip taking mode. | Set the camera to the proper mode for recording video clips, or taking photographs. |
| | Power is off. | Turn the power on. |
| Camera is in Auto Power off mode. | Turn the power on. | |
| Cannot take a picture or a video clip when using an SD memory card | The SD card is locked or write protected. | Remove the SD card from the card slot and slide the lock switch to off. |
| Picture is blurred when looking through the viewfinder. | Viewfinder is dirty. | Clean the viewfinder with a soft cloth or cotton swab. See the Camera maintenance section. |
| | Viewfinder needs to be focused. | Use the diopter wheel next to the viewfinder to adjust the focus. |
| Part of the picture/video clip is missing. | Something was blocking the lens when taking the picture. | Keep hands, fingers, etc. away from the lens when taking a picture. |

TROUBLESHOOTING

| SYMPTOM | POSSIBLE CAUSE | POSSIBLE SOLUTION |
|---|---|--|
| | The picture was not centered correctly in the viewfinder. | Leave space around the subject when centering the picture in the viewfinder. |
| Camera is not responding during picture capture. | The battery level is low and the camera does not have sufficient power to complete picture capture. | Replace batteries. |
| The shutter button does not work. | The camera is not turned on. | Turn the camera on. |
| | The camera is processing a picture; the ready LED light is still blinking. | Wait until the light stops blinking before attempting to take another picture. |
| LCD | | |
| The LCD display is dark. | Protective plastic film still in place on the camera. | Make sure the protective plastic film covering the LCD during shipment, has been removed. |
| | The LCD brightness level is set too low. | Increase the brightness level on your LCD to meet your personal needs. See p.52 for setting the brightness. |
| The LCD screen looks milky and/or scratched. | Protective plastic film still in place on the camera. | Make sure the protective plastic film covering the LCD during shipment, has been removed. |
| The LCD is not displaying anything. | LCD is turned off. | Turn the LCD on, by pressing () |
| | The battery level is low. | Replace the batteries. |
| VIEWING VIDEO CLIPS ON THE COMPUTER (WINDOWS 98/98SE/2000) | | |
| Cannot playback stored video clips on the computer | Video playback files are missing. | Install Microsoft DirectX 9. (p.64) |

| SYMPTOM | POSSIBLE CAUSE | POSSIBLE SOLUTION |
|--|---|--|
| INSTALLING SOFTWARE AND DRIVERS | | |
| Camera is not responding during picture download to the PC. | The operating system may not be allocating adequate resources to download the pictures. | Reset the camera by pressing the reset button with a pointed object such as a pen. Reboot the computer. |
| | The Mini-USB cable is not plugged into the camera. | Check that the Mini-USB cable is plugged into the camera. |
| | The Mini-USB cable is not plugged into the computer. | Check that the USB cable is plugged into the computer. |
| | The computer is not powered on. | Turn your computer on. |
| Cannot transfer pictures to the computer. The New Hardware Wizard cannot locate drivers. (Windows 98/98SE) | The Software is not installed on the computer. | Disconnect the Mini-USB cable from the camera and the computer. Install the camera software and drivers. (p.61) |
| | Software is not fully or correctly installed on the computer. | Disconnect the Mini-USB cable from the camera and the computer. Uninstall the software: Start-Settings-Control Panel-Add/ Remove Programs. Re-install the camera drivers. See p.61 |
| SD CARDS | | |
| The camera does not recognize your SD Card. | The card may not be SD certified. | Purchase a certified SD card. |
| | The card may be corrupted. | Reformat the card. Caution: Formatting erases all pictures on the card. (p.52) |
| | No card is inserted in the camera. | Insert a card into the card slot. See p.14. |

CAMERA SPECIFICATIONS

Sensor

3.1 Megapixels (2048 x 1536 resolution), 1/2.7" CCD sensor

Image Resolution

| | |
|-------------|----------------|
| 2048 x 1536 | 3.1 Megapixels |
| 1600 x 1200 | 2 Megapixels |
| 1280 x 960 | 1.2 Megapixels |
| 640 x 480 | VGA |

Lens

5.8 - 17.4 mm f/2.8 - f/4.3, 3x Optical Zoom with bent light path, 12 elements all glass

Zoom

3x Optical Zoom and 4x Digital Zoom

Focusing Range

Auto focus from 0.5 m to infinity, macro from approx. 10cm

Exposure

Auto exposure and auto white balance with manual presets

Internal Memory

16 MB non-volatile memory

Removable Storage

SD memory card slot

Output Picture File Format

JPG/EXIF

Viewfinder

Optical 3x Zoom viewfinder with 80% coverage

Self-Timer

Approximately 10 seconds with blinking red LED

Storage Capacity (Approx. with 16MB of memory)

| Resolution Quality | 3MP (2048 x 1536) | 2MP (1600 x 1200) | 1.2MP (1280 x 960) | VGA (640 x 480) |
|-----------------------|----------------------|----------------------|-----------------------|--------------------|
| Fine | 15 images | 24 images | 38 images | 155 images |
| Normal | 30 images | 49 images | 77 images | 311 images |
| Economy | 60 images | 99 images | 155 images | 623 images |

| | |
|-----------------------------|--|
| Flash Unit | Flash off, auto flash, fill-in flash, red-eye reduction and night mode |
| Power Source | 2x AA Batteries |
| Connectivity | Mini-USB connection direct to PC or Mac SD connection to SD card reader Video connection direct to TV (NTSC/PAL) |
| System Compatibility | Windows 98, 98SE, 2000, ME, XP and Mac OS 9.0, 9.1, 9.2, 9.3 and X or later |
| Video Clips | QVGA resolution, 30fps, AVI (Motion JPEG) format |
| Dimensions | 113mm x 56mm x 30mm |
| PC Software | ArcSoft PhotoImpression, Adobe Acrobat Reader 5.1 |
| Accessories | CD-ROM for Windows: <ul style="list-style-type: none">– Camera Drivers– Microsoft DirectX 9– ArcSoft PhotoImpression 2000– Adobe Acrobat 5.1– View User's Guide (Multilingual) Multilingual Quick Start Guide Mini-USB Cable TV Cable Wrist Strap Pouch 2x AA Batteries |

SAFETY TIPS AND MAINTENANCE

Cleaning the camera body:

1. Please use a soft dry cloth to clean the camera.

Cleaning the lens, viewfinder and LCD:

1. Blow off dirt or dust with a blower or canned air.
2. Gently wipe the lens, viewfinder and/or LCD with a micro-fiber cloth.
3. To remove dirt or residue, moisten the cloth with lens cleaning fluid and gently wipe the lens, viewfinder and/or LCD.

CAUTION: Do not apply the fluid directly onto the lens, viewfinder or LCD.

Safety Tips

Precautions for the camera:

- Do not attempt to modify this camera in any way. This may cause a fire or electric shock or severe damage to the camera.
- Do not use the flash in close proximity to people or animals. Positioning the flash too close to your subject's eyes may cause eyesight damage.
- When taking photographs, never point the lens of the camera directly into very strong light. This may result in permanent damage to the camera or your eyesight.
- Please do not use this product in close proximity to flammable or explosive gases as this could increase the risk of explosion.
- For safety reasons keep this product and accessories out of reach of children or animals to prevent accidents.
- Do not swallow batteries or small camera accessories.
- Keep the camera away from water and other liquids, and never let it get wet. Do not use outdoors when it is raining or snowing.
- Should any form of liquid enter the camera, do not use it. Switch the camera off, and then remove the batteries. Do not continue to use the camera as this may cause a fire or electric shock.
- Do not insert or drop metallic or inflammable foreign objects into the camera through access points e.g. card slot and battery chamber. This may cause a fire or electric shock.

- Do not operate this camera with wet hands. This could pose a risk of electric shock.
- Under the environment with electrostatic discharge, the camera may malfunction and require the user to reset the camera.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.
- Please avoid using the camera in high or low temperature. Operation temperature range 32°F - 104°F (0°C - 40°C).
- It is normal that the temperature of the camera body rises after being in use for a long period.
- Do not leave this camera in places subject to extremely high temperatures such as in a sealed vehicle, direct sunlight or other places with extreme variances in temperature. Exposure to extreme temperatures may adversely affect the camera's internal components and could cause a fire.
- Always use the camera and its accessories in a well-ventilated area.

Precautions for batteries:

- Use 2x AA batteries only.
- Dispose of the batteries in a manner that complies with applicable laws.
- Leakage, overheating, or burst batteries could result in fire or injury.
- Do not short circuit, heat or dispose of batteries in fire.
- Do not use old batteries with new ones, or mix brands of batteries.
- Ensure the batteries are positioned correctly with regard to polarity (+/-).
- Allowing dust to accumulate in the camera over a long period is hazardous and in extreme circumstances may cause a fire. It is best to clean your camera prior to seasonal periods of high humidity.
- Batteries may lose power if kept inside the camera for a long time without using. Please remove the batteries while the camera is not in use.
- Do not use manganese batteries as they cannot supply sufficient power to support the camera's operations. Batteries may not work normally under 32°F (0°C).

Precautions for SD Memory Cards:

- In the event of malfunction or damage, it is possible that data may be lost. Rollei Camera is not responsible in any way for such data loss.
- Do not touch the terminals with hands or metal objects.
- Keep dust, water and foreign objects away from the terminal section.

- Avoid heat, liquid and direct sunlight when using and for storage.
- Do not open the battery/card cover or remove the SD Memory Card while data is being read or written.
- Do not dismantle or modify.
- The recorded data may be lost if the card is affected by strong static electricity or electrical shock, or during card repair or malfunction.
- When using SD Memory Cards do not change the attributes (read-only, etc.) of the files (pictures (JPEG) or video clips (AVI) on the card. Doing so may prevent the camera from working properly when deleting, etc.
- Do not change the file names or the directory name of the pictures or video clips using a computer or save files other than pictures or video clips taken by this camera onto the SD memory card. Pictures or video clips that have been edited or added to the SD memory card with the computer may not play back and it may cause the camera to malfunction.
- The SD Memory Card includes a write-protect switch. Sliding this switch downward prevents data from being written to the card and pictures and video clips saved on the card are protected.
- Please note that pictures and video clips cannot be taken or deleted when the write-protect switch is on.
- When using a large-capacity card, writing, reading and deletion may take some time.
- Do not store the card in places with high humidity, dusty places or where static electricity or electromagnetic fields are likely to occur.
- Images stored in the memory card may be ruined or damaged if you turn off the camera while it is in process of reading, writing or formatting etc.
- SD cards are delicate electronic devices. Please do not bend or drop them
- Please do not place the SD card in or near to an environment of strong electronic or magnetic fields such as loud speakers or TV receivers.
- Please keep the SD card in its bag or case when not in use.
- It's normal that the SD card is warm after use.
- Please make sure you switch off the camera before you remove the SD card.
- Do not open the battery/memory card door or remove the SD Memory Card while the camera is reading, writing or formatting the card.

REGULATORY INFORMATION

FC FCC INFORMATION

FCC WARNING: This equipment meets the limits for a Class B digital device, pursuant to Part 15 of FCC rules. Only the cable supplied with the camera should be used. Operation with other cables is likely to result in interference to radio and TV reception and could void the user's authorization to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

***Tested to comply
with FCC standards
for HOME OR OFFICE USE***

Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate this equipment.

USER INFORMATION

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 **VCCI INFORMATION**

This is a Class B product, to be used in a domestic environment, based on the Technical Requirement of the Voluntary Control Council for Interference (VCCI) from Information Technology Equipment. If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Please install and use the equipment according to this instruction manual.

 - This product is in conformity with Directive 89/336/EEC.

Rollei and the logo are registered trademarks or trademarks of Rollei Fototechnic GmbH in the United States and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Mac and Macintosh are registered trademarks or trademarks of Apple Computer, Inc. in the U.S. and other countries. All other brands and product names are either registered trademarks or trademarks of their respective owners.

Visit Rollei on the Internet
www.rollei.de

Rollei dc3100 User's Guide
Copyright 2003 Rollei Fototechnic GmbH