


Nintendo 3DS Quick-Start Guide

This guide explains how to configure your system, launch software and connect to the internet.

Items used in this guide:

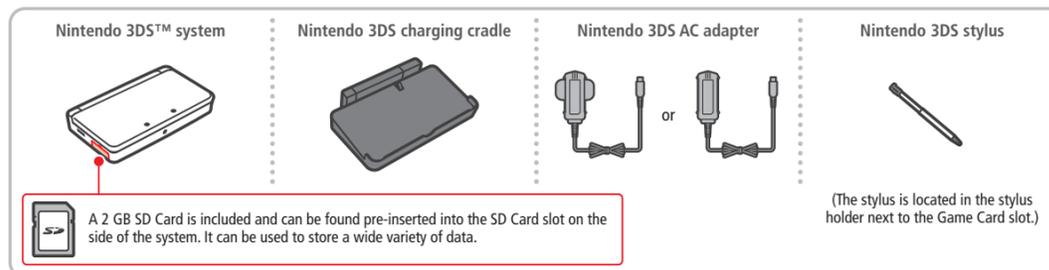

IMPORTANT:

- Due to the importance of the System Settings, an adult should configure them if the system is to be used by children.
- Be sure to read the Health and Safety Information section of the Operations Manual before use, and follow the instructions carefully.


Trademarks are property of their respective owners. Nintendo 3DS is a trademark of Nintendo.
© 2011 Nintendo.

MKA-CTR-S-UKV-C3


1 Charge and turn on the system

1 Charging the system

Connect the items as shown in the illustrations below and charge the system.

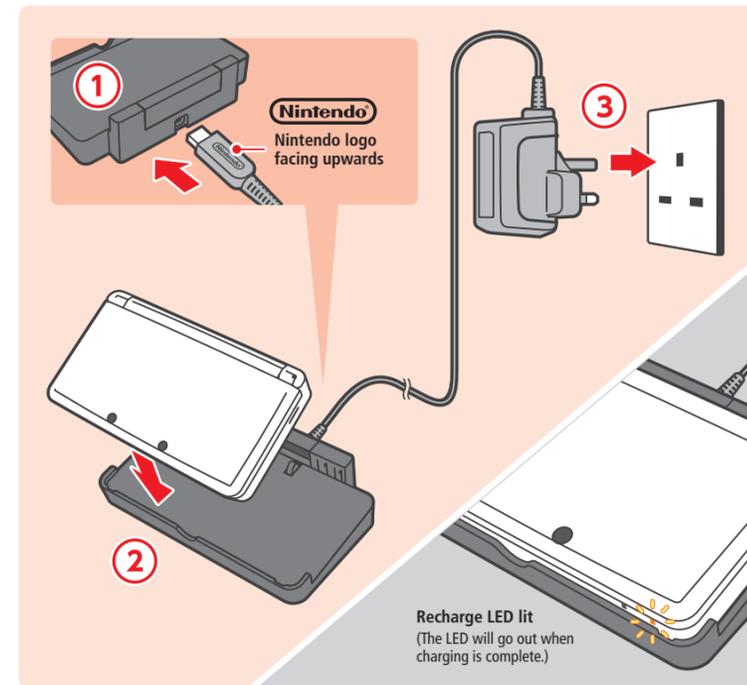


Turn the power on

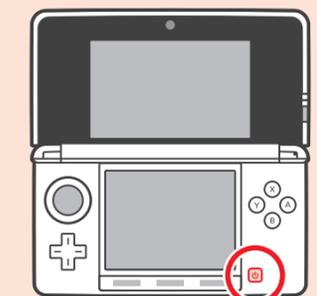

Press the POWER Button


The stylus is used to operate the Touch Screen.

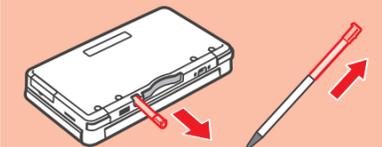

Remove the stylus


2 Configure the system You must configure the system after turning it on for the first time.

1 Select your language

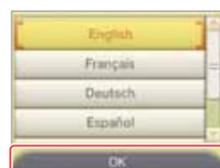


Touch your language, then touch OK.


2 3D Calibration

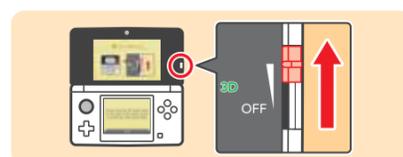

Move the 3D depth slider to the uppermost position, then touch NEXT.

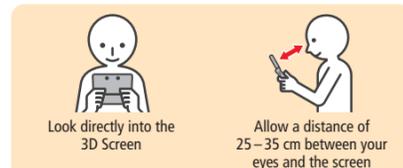


Hold the system as shown in the illustration, then touch NEXT.

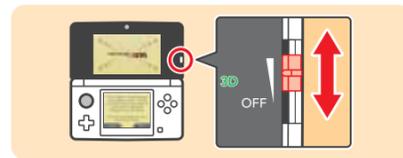

Touch ACTIVATE 3D and the images shown on the upper screen will appear in 3D. Use the 3D depth slider to adjust the 3D effect to a comfortable level, then touch DONE.

3 Set the date and time

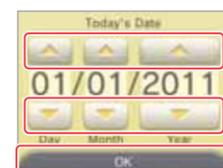

Touch  /  to set the date, then touch OK.



Touch  /  to set the time, then touch OK.

Note: Ensure you enter the correct date and time, as some software titles use this setting.

4 Profile




Enter a user name using the on-screen keyboard, then touch OK.

Note: Never enter any personal data or offensive words or phrases.



Touch  /  to enter your date of birth, then touch OK.

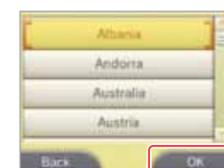


Select your country / region of residence, then touch OK.

5 Internet connection




Read the Nintendo 3DS Service User Agreement and Privacy Policy, then touch I ACCEPT.

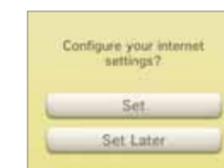

Touch SET and follow the instructions in step ② of "4. Connect to the internet" on the reverse of this guide. If you prefer, this can be configured later instead.

6 Configure Parental Controls

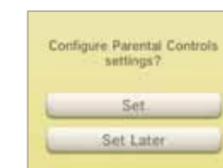

Parental Controls can be configured to restrict access to certain functionality. For details, refer to the Parental Controls section of the Operations Manual.



To complete the setup, press the HOME Button to display the HOME Menu.

What are Parental Controls?



Parental Controls allow parents or legal guardians to limit access to certain Nintendo 3DS features, such as the display of 3D images, which they may deem unsuitable for their children.

3 Load software

1 Insert the Game Card



Check which way the Game Card is facing.

The Nintendo 3DS system can use software designed for Nintendo 3DS and Nintendo DS™/Nintendo DSi™.

Ensure that the power of your Nintendo 3DS system is turned off, or that the HOME Menu is displayed and no software is currently suspended, before inserting or removing a Game Card.

2 Start the software



Touch the icon for the software you want to use, then touch OPEN.


Note:

- For subsequent instructions, refer to the software manual. If the software has an electronic manual, touch MANUAL to open it.
- 3D content will only be displayed on Nintendo 3DS software titles. Nintendo DS/Nintendo DSi software titles cannot display 3D content.

Continued on the back

4 Connect to the internet


A wireless connection is required to connect your Nintendo 3DS system to the internet. A computer is needed to configure the settings on your wireless access point (router).

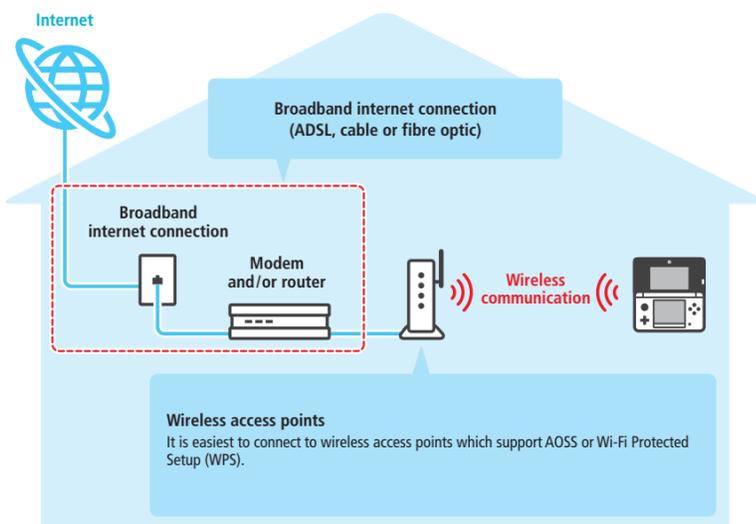

Note: For a list of compatible access points, visit support.nintendo.com.

4 Connect to the internet


1 Start configuration

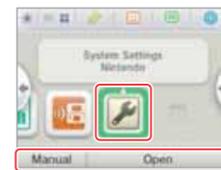

On the HOME Menu, touch , then OPEN.



Touch INTERNET SETTINGS.

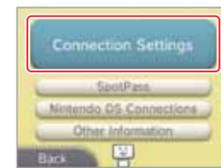


Touch CONNECTION SETTINGS.

2 Select NEW CONNECTION



Touch NEW CONNECTION.


3 Help configuring a connection

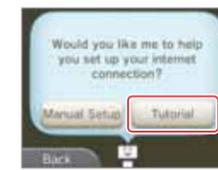

 **Let me help you through the setup process.**

Touch TUTORIAL and I'll help you through the connection setup process. Follow the on-screen instructions, then move on to the next step.

4 Choosing an access point

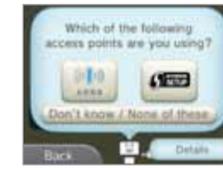

Touch the connection method that corresponds to your wireless access point.



For AOSS, go to step

5-1



For WPS, go to step

5-2

If you're not sure (DON'T KNOW / NONE OF THESE), or have a different access point, go to step


5-3



5-1 AOSS Setup



Steps for the AOSS access point

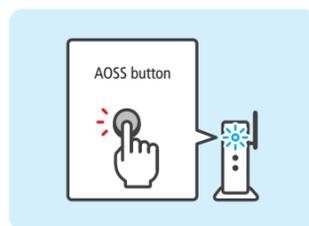

Press and hold the AOSS button on the access point until the AOSS light flashes twice.

When the **Setup Complete Screen** is displayed, touch OK and perform a connection test. If the connection test is successful, the settings are complete.



5-2 WPS Setup



Steps for the Nintendo 3DS system



Touch the connection method that corresponds to your access point.

For details on the connection methods available, refer to the instruction booklet that came with the access point.




Steps for the access point

For PUSH-BUTTON CONNECTION



Press and hold the WPS button on the access point until the LED blinks.

For PIN CONNECTION

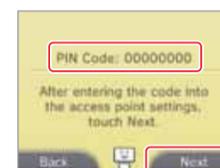

A PIN will be displayed on the Touch Screen. Enter it in your access point's settings, then touch NEXT.

When the **Setup Complete Screen** is displayed, touch OK and perform a connection test. If the connection test is successful, the settings are complete.


5-3

DON'T KNOW / NONE OF THESE

Search for the access point using your Nintendo 3DS system.




Steps for the Nintendo 3DS system

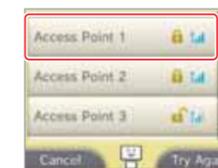

Touch the name of an access point from the list

Touch the name (also known as SSID, ESSID or Network Name) that corresponds to your access point.

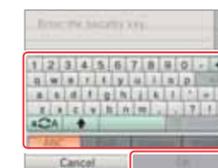

Enter the security key and touch OK
Characters entered will appear as * on screen.

Touch OK to save your settings.

Touch OK and perform a connection test. If the connection test is successful, the settings are complete.