



Elektra plus vibrating egg

PRODUCT MANUAL

7 vibration modes

3 electro-stim impulse modes

**Made from silicone
and ABS plastic**

Waterproof

Charging


- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.






USB
charging port


How To Use

TO ENSURE CONNECTIVITY, PLEASE APPLY WATER-BASED LUBE TO THE AREA OF STIMULATION. IF THE SKIN IS TOO DRY, THE IMPULSE MIGHT NOT PASS.

- Hold the  button on the tail of the toy to turn on/off.

With the remote control

- Hold the  button to activate the vibration.
- Press it quickly to cycle through 7 vibration modes.
- Hold the  button to activate the electro stimulation.
- Press it quickly to cycle through 3 e-stim modes.
- Press the  button to pause any function.

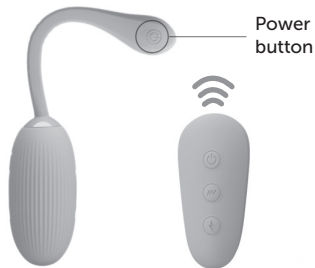

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352