

Lights & Stripes Zebra[™]



91-003610-000 🕼 🖎




513500 lM .indd 1 2018/9/20 15:55:09

INTRODUCTION

 \bigoplus

Thank you for purchasing the **Lights & Stripes Zebra**™. This zippy plush zebra has bold black and white stripes, colorful patterned fabric and a twinkling tummy. The light-up button on the zebra's tummy introduces colors and plays sing-along songs and melodies.

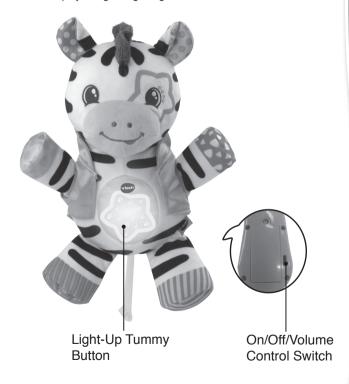

513500 M.indd 2 2018/9/20 15:55:10

INCLUDED IN THIS PACKAGE

- One Lights & Stripes Zebra™

- One parent's quide

WARNING: All packing materials such as tape, plastic

sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's

safety.

NOTE: Please keep this parent's guide as it contains

important information.

ATTENTION: Pour la sécurité de votre enfant, débarrassez-

vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas

partie du jouet.


NOTE: Il est conseillé de conserver ce guide des parents

car il comporte des informations importantes.

GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is turned **OFF**.
- Locate the battery cover on the electronic module inside the zebra. Use a screwdriver to loosen the screw.
- Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure.

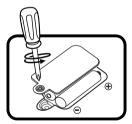

lack



BATTERY NOTICE

 
- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- · Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

513500 IM .indd 4 2018/9/20 15:55:10

PRODUCT FEATURES

1. On/Off/Volume Control Switch

To turn the unit ON, slide the On/Off/
Volume Control Switch to the Low
Volume (◄))) or High Volume (◄)))
position. You will hear a song, a phrase
and a short tune. To turn the unit OFF,
slide the On/Off/Volume Control
Switch to the OFF (●) position.



2. Automatic Shut Off

To preserve battery life, the **Lights & Stripes Zebra™** will automatically power down after approximately 40 seconds without input. The unit can be turned on again by pressing the light-up tummy button.

Note: If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

 \bigoplus

1. Light-Up Tummy Button

Press the Light-Up Tummy Button to hear colors and endearing phrases that spark creativity and imaginative play. You will also hear a variety of songs, playful sounds and melodies. The lights will change color with the sounds



SONG LYRICS

Song 1

See all the colors, Green, red and blue. Bright and shining, Twirling and swirling, All around you!

Song 2

I'm a zebra and there's no one like me. I live in Africa on the Serengeti. I've got stripes, black and white, From my head to tail, I'm quite a sight! Running free over the plains of Africa.

Song 3

I'm a zippy, zippy zebra.
I like to leap and spin all day.
Do you want to come and dance with me?
We'll have great fun, what do you say?
Dance, dance, dance, dance all day with me.

MELODY LIST

- 1. Alphabet Song
- 2. Diddle, Diddle Dumpling
- 3. Did You Ever See a Lassie?
- 4. Lavender's Blue
- 5. Big Rock Candy Mountain
- 6. Oh My Darling, Clementine
- 7. Paper of Pins
- 8. Lazy Mary, Will You Get Up?
- 9. Mary, Mary Quite Contrary

- 10. Little Robin Red Breast
- 11. Sing a Song of Sixpence
- 12. A-Tisket. A-Tasket
- 13. Do You Know the Muffin Man?
- 14 Aiken Drum
- 15. On Top of Old Smokey

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries when the unit is not in use for an extended period of time.
- Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

lack

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit OFF.

 \bigoplus

- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit back ON. The unit will now be ready to play again.
- 5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

(

IMPORTANT NOTE:

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

lack

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- $\hbox{-} {\tt Consult} \hbox{ the dealer or an experienced radio/TV technician for help.}$



THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

Trade Name: VTech®

Model: 5135

Product name: Lights & Stripes Zebra™

Responsible Party: VTech Electronics North America, LLC


Address: 1156 W. Shure Drive, Suite 200,

Arlington Heights, IL 60004

lack

Website: vtechkids.com

 \bigoplus

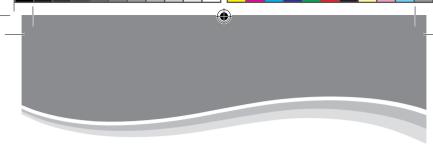

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com

 \bigoplus

•

Read our complete warranty policy online at vtechkids.com/warranty



TM & © 2018 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003610-000 ® ②



513500 IM .indd 10 2018/9/20 15:55:12