 


# User Instruction Manual



**CHEF**top

 
## Dual Vertical Induction Cooktop Hob

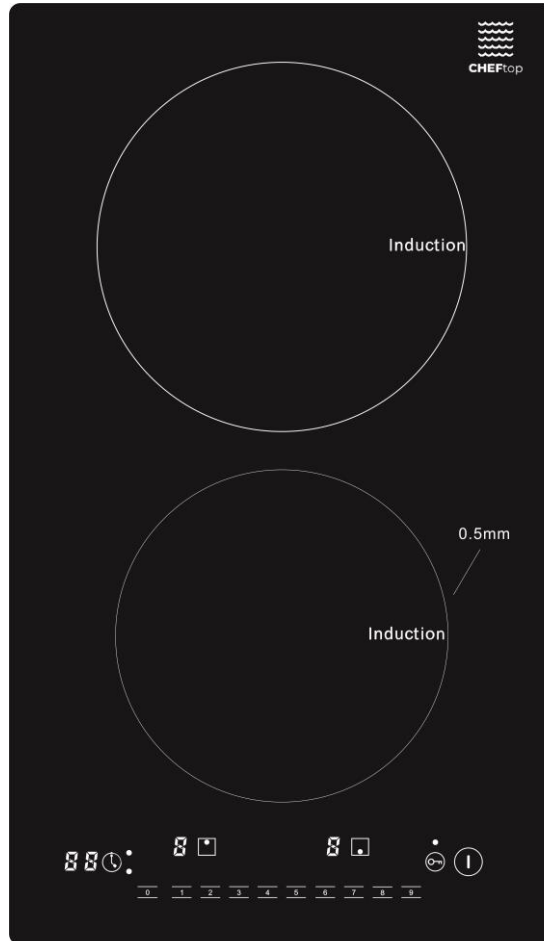

Model: DP-CHEFTOP-2V

Dimensions: 20 "x 11.6 "

POWERED BY

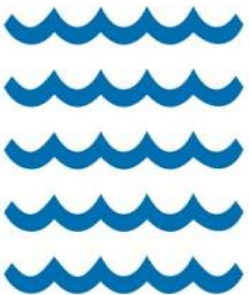

# DRINKPOD

[WWW.DRINKPOD.COM](http://WWW.DRINKPOD.COM)

888-852-7873

# CONTENTS

BEFORE USE .....	<b>Error! Bookmark not defined.</b>
IMPORTANT SAFEGUARDS .....	3
INSTALLATION.....	<b>Error! Bookmark not defined.</b>
ELECTRICAL CONNECTION.....	5
INSTRUCTION FOR USE .....	5
TEMPERATURE LEVEL TABLE .....	8
TECHNICAL INFORMATION .....	9
CLEANING .....	9
TROUBLESHOOTING GUIDE .....	9
NOISES MADE BY THE HOB .....	9
AFTER-SALES SERVICE .....	10

 
**IMPORTANT:** The cooking zones will not switch on if pots are not the right size. Only use pots bearing the symbol “INDUCTION SYSTEM” (Figure below) or enameled pots. Place the pot on the required cooking zone before switching the hob on.



## **EXISTING POTS AND PANS**

Use a magnet to check if the pot is suitable for the induction hob: pots and pans are unsuitable if not magnetically detectable.

- Make sure pots have a smooth bottom, otherwise they could scratch the hob. Check dishes.
- Never place hot pots or pans on the surface of the hob's control panel. This could result in damage.

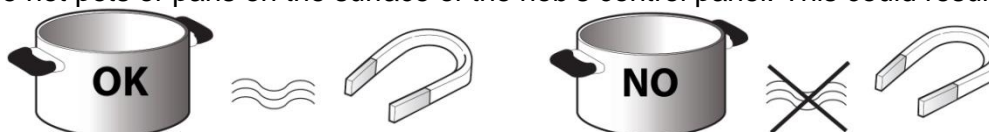

- The bottom diameter of pots or pans should be at least 10cm.

## **IMPORTANT SAFEGUARDS**

### **YOUR SAFETY AND THAT OF OTHERS IS VERY IMPORTANT**

This manual and the appliance itself provide important safety messages, to be read and always observed.



This is the warning / caution-safety symbol, regarding safety, warning of potential risks to users and other

All messages relevant to safety specify the potential risk to which they refer and indicate how to reduce the risk of injury, damage and electric shocks due to incorrect use of the appliance. When using electrical appliance, basic safety precautions should always be followed including the following:

- Read all instructions.
- The appliance must be disconnected from the power supply before carrying out any installation operation.
- Installation and maintenance must be carried out by a specialized technician, in compliance with the manufacturer's instructions and the local safety regulations in force. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- The power cable must be long enough for connecting the appliance, fitted in the cabinet, to the power supply.
- For installation to comply with the current safety regulations, an omnipolar switch with minimum contact gap of 3mm is required.
- Do not pull the appliance's power cable.
- The electrical parts must not be accessible to the user after installation.
- The appliance is designed solely for domestic use for cooking food. No other use is permitted (e.g. heating rooms). The Manufacturer declines any liability for inappropriate use or incorrect setting of the controls.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years old shall be kept away unless continuously supervised.
- The accessible parts can become very hot during use. Children must be kept away from the appliance and watched over to ensure they do not play with it.
- Do not touch the appliance heating elements during and after use. Do not allow the appliance to come into contact with cloths or other flammable materials until all the components have cooled sufficiently.
- Do not place flammable materials on or near the appliance.

- Overheated oils and fats catch fire easily. Pay attention when cooking food products rich in fat and oil.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand hazards involved. Children shall not play with the appliance. Close supervision is necessary when any appliance is used by or near children.
- An air switch or circuit breaker (not supplied) should be installed in the compartment under the appliance.
- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- **WARNING:** Danger of fire: do not store items on the cooking surfaces.
- Do not use steam cleaners.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- After use, switch off the hob element by its control and do not rely on the pan detector.



- **CAUTION!** Surface remains hot after use! Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- Do not touch hot surfaces. Use knobs.
- To protect against electrical shock do not immerse cord, plugs, or the whole unit in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- a) A short power-supply cord should be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- b) Longer extension cords are available and may be used if care is exercised in their use.
- c) If a long extension cord is used:
  - 1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
  - 2) If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord; and
  - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.
- To reduce the risk of fire, do not place any heating or cooking appliance beneath the appliance.
- To reduce the risk of fire, do not mount unit over or near any portion of a heating or cooking appliance.
- To reduce the risk of electric shock, do not mount over a sink.
- Do Not Cook on Broken Cook-Top – If cook-top should break, cleaning solutions and spillovers

- may penetrate the broken cook-top and create a risk of electric shock;
  - Clean Cook-Top with Caution – If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burn, some cleaners can produce noxious fumes if applied to a hot surface
  - To reduce the risk of fire, do not store anything directly on top of the appliance surface when the appliance is in operation.
  - To reduce the risk of fire or electric shock, do not remove top and bottom cover
  - Repair should be done by authorized service personnel only
  - Do not immerse in water
  - Household use only
- 
- In order to ensure the correct operation of the product, do not obstruct the **minimum required** clearance (min. 0.8" mm) on the worktop for air flow out.
  - If an undertop oven is installed, make sure the oven is equipped with a cooling system.
  - Do not install the hob above a dishwasher or washing-machine, so that the electronic circuits do not come into contact with steam or moisture which could damage them.
- Save these instructions**

 
## **ELECTRICAL CONNECTION**



- Disconnect the appliance from the power supply.
  - Installation must be carried out by qualified personnel who know the current safety and installation regulations.
- 
- The manufacturer declines all liability for injury to persons or animals and for damage to property resulting from failure to observe the regulations provided in this chapter.
  - The power cable must be long enough to allow the hob to be removed from the worktop.
  - Make sure the voltage specified on the rating label located on the bottom of the appliance is the same as that of the home.

## **INSTRUCTION FOR USE**

## **GENERAL OVERVIEW**

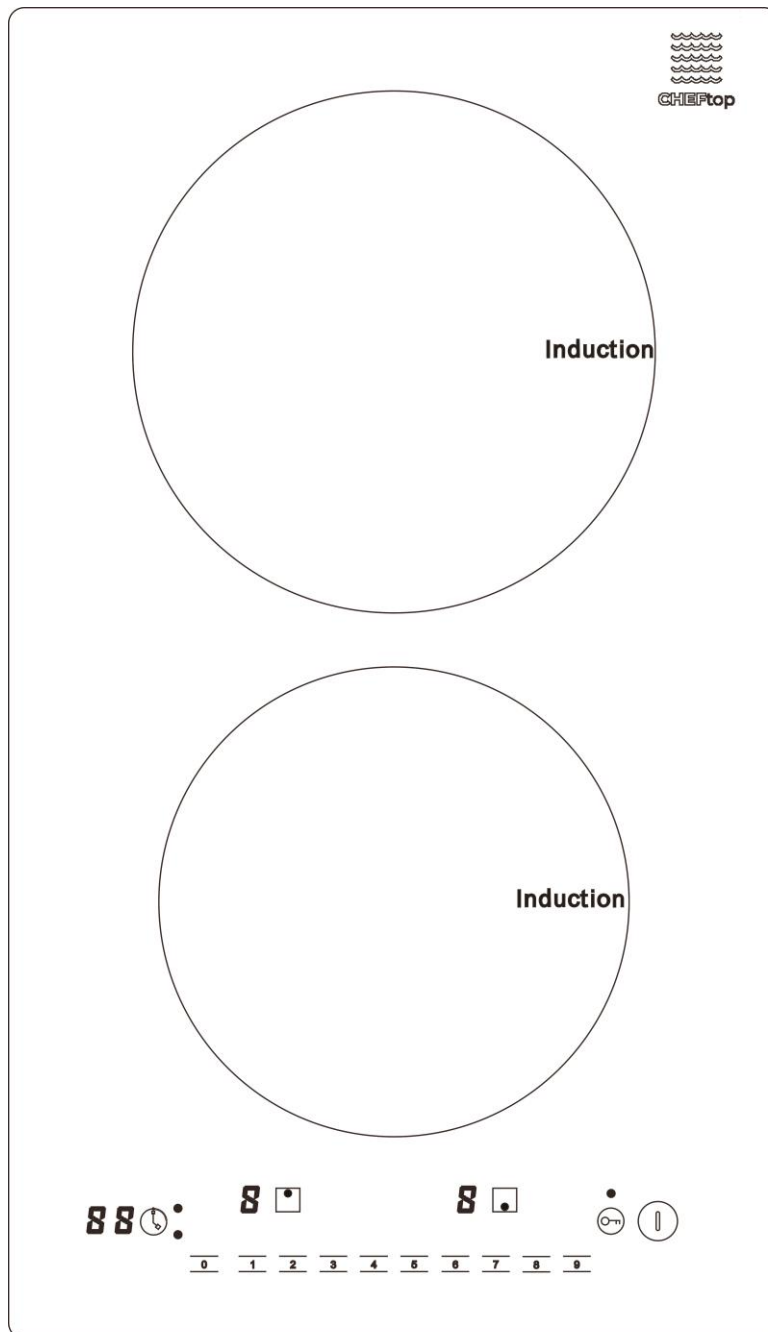

To avoid permanently damaging the glass-ceramic top, do not use:


- Pots with bottoms that are not perfectly flat.
- Metal pots with enameled bottom.

### CONTROL PANEL LAYOUT



## Switching the hob On/Off



To switch the hob on, press the  button and the cooking zone displays light up. To switch off, press the same button until the displays switch off. All the cooking zones are deactivated. If the hob has been in use, the residual heat indicator “H” remains lit until the cooking zones have cooled down.

If within 120 seconds of switching on, no heating zone is selected, the hob switches off automatically.

## Switching on and adjusting cooking zones



Once the hob is switched on and the pan is positioned on the chosen cooking zone, select the zone using the corresponding button: the display shows level 0.

Each cooking zone has various power levels, adjustable with the

1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 buttons, going from “1”: min. level, to “9”: max. level.

## Specifically function



Select the cooking zone you wish, and press the same number level button twice, the point corresponding display shows. The cooking zone will work high level. Push the number level again, Then the cooking zone will recover to previous level.


## Deactivation of cooking zones

Select the cooking zone you wish to switch off. Press the corresponding button.

Press the key “0” to set the level to “0”. The cooking zone switches off and the residual heat indicator “H” lights up.

## Child lock



This function locks the controls to prevent accidental switching on of the hob. To activate the child lock function, switch on the hob and hold button  for three seconds; the timer shows Lo. Then the control panel is locked.


To deactivate the control panel lock, repeat the activation procedure. The Lo goes off and the hob is active again.

## Timer



The timer can be used to set cooking time for a maximum of 99 minutes (1 hour and 39 minutes) for all cooking zones.

Select the cooking zone to be used with the timer, press the button with the **clock symbol**

 then set the desired cooking time using the 0 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 buttons of the timer function (see figure). After a few seconds, the timer begins the countdown. Once the set time has elapsed, an acoustic signal sounds and the hob switches off automatically.

To deactivate the timer, press the “0” button to set the display showing “00” or hold the button with the clock symbol for at least 4 seconds.

## Auto switch off


The hob will automatically switch off in 120 minutes when you did not set cooking time, forgot to switch off the hob, and did not operate the hob at all. The relationship between the power level and default switch off time is shown in below figure.

## CONTROL PANEL WARNINGS



### Residual heat indicator

The hob is fitted with a residual heat indicator for each cooking zone. These indicators alert the user when cooking zones are still hot.

If the display shows , the cooking zone is still hot. If the residual heat indicator of a given cooking zone is lit, that zone can be used, for example, to keep a dish warm or to melt butter.

When the cooking zone cools down, the display goes off.

### Incorrect or missing pot indicator – Error code “E0”



If you are using a pot that is not suitable, not correctly positioned or not of the correct dimensions for your induction hob, the symbol “E0” mean “no pot” will appear in the display (see figure at side). If no pot is detected within 180 seconds, the hob switches off.

## TEMPERATURE LEVEL TABLE

Temperature level		Type of cooking	Level use (indicating cooking experience and habits)
<b>Max level</b>	<b>9</b>	Frying - boiling	Ideal for browning, starting to cook, frying deep frozen products, fast boiling
<b>High level</b>	<b>7-8</b>	Browning - sautéing - boiling - grilling	Ideal for sautéing, maintaining a lively boil, cooking and grilling
	<b>6-7</b>	Browning – cooking – stewing - sautéing - grilling	Ideal for sautéing, maintaining a light boil, cooking and grilling , preheating accessories
<b>Medium level</b>	<b>4-5</b>	Cooking – stewing - sautéing - grilling	Ideal for stewing, maintaining a gentle boil, cooking (for a long period of time). Creaming pasta
	<b>3-4</b>	Cooking – simmering – thickening - creaming	Ideal for long-cooking recipes (rice, sauces, roasts, fish) with liquids (e.g. water, wines, broth, milk), creaming pasta
	<b>2-3</b>		Ideal for long-cooking recipes (less than a liter in volume: rice, sauces, roasts, fish) with liquids (e.g. water, wines, broth, milk)
<b>Low level</b>	<b>1-2</b>	Melting – defrosting – keeping – food warm - creaming	Ideal for softening butter, gently melting chocolate, thawing small products and keeping just-cooked food warm (e.g. sauces, soups, minestrone)
	<b>1</b>		Ideal for keeping just-cooked food warm, for creaming risottos and for keeping serving dishes warm (with induction-suitable accessory)
<b>Power off</b>	<b>0/H</b>	Support surface	Hob in stand-by or off mode (possible end-of-cooking residual heat, indicated by an “H”)



Note: The data in the table is for guidance only. The relation between the heat setting and the cooking zone consumption of power is not linear. When you increase the heat setting it is not proportional to the increase of the cooking zone consumption of power.

The power of the cooking zones can be different in some small range. It changes with the material and dimensions of the cookware.



## TECHNICAL INFORMATION

Voltage: 120V~ 60 Hz

Model: DP-CHEFTOP-2V Max. power: 1800W

## CLEANING



- Do not use steam cleaners.
- Before cleaning, make sure the cooking zones are switched off and that the residual heat indicator (“H”) is not displayed.

**IMPORTANT:** Do not use abrasive sponges or scouring pads. Their use could eventually ruin the glass.

- After each use, clean the hob (when it is cool) to remove any deposits and stains due to food residuals.
- Sugar or foods with a high sugar content damage the hob and must be immediately removed.
- Salt, sugar and sand could scratch the glass surface.
- Use a soft cloth, absorbent kitchen paper or a specific hob cleaner (follow the Manufacturer’s instructions).
- Any other servicing should be performed by an authorized service representative.

## TROUBLESHOOTING GUIDE

- Read and follow the instructions given in the section “Instructions for use”.
- Check that the electricity supply has not been shut off.
- Dry the hob thoroughly after cleaning it.
- If, when the hob is switched on, alphanumeric codes appear on the display, consult the following table for instructions.
- If the hob cannot be switched off after using it, disconnect it from the power supply.

Error code	Possible Cause	Remedy
E0	No Pan or did not detect the pan	Put on the pan
E2	NTC short or open	Call the after-sales service and specify the error code
E3	High voltage	Call the after-sales service and specify the error code
E4	Low voltage	Call the after-sales service and specify the error code

## NOISES MADE BY THE HOB

Induction hobs can make whistling or crackling sounds during normal operation, these come from the pots and pans as a result of the characteristics of the bottoms (for example, bottoms made of several layers of material, or uneven bottoms). These noises vary depending on the pots and pans used and the amount of food they contain, and are not indicative of a defect of any kind.

In addition, the induction hob is equipped with an internal cooling system to control the temperature of

electronic parts; as a result, during operation and for several minutes after the hob has been switched off, the noise of the cooling fan will be audible. This is perfectly normal and indeed essential for proper functioning of the appliance.

## **AFTER-SALES SERVICE**

### **Before contacting the After-sales Service:**

1. See if you can solve the problem yourself with the help of the “Troubleshooting guide”.
2. Switch the appliance off and then on again to see if the problem has been eliminated.

If the problem persists after the above checks, contact the nearest After-Sales Service.

Always specify:

- a brief description of the fault
- the product type and exact model
- your full address
- your telephone number

If any repairs are required, contact an authorized After-Sales Service Centre (to ensure the use of original spare parts and correct repairs). Spare parts are available.

### **Energy saving**

For optimum results, it is advisable to:

- Use pots and pans with bottom width equal to that of the cooking zone.
- Only use flat-bottomed pots and pans.
- When possible, keep pot lids on during cooking.
- Use a pressure cooker to save even more energy and time.
- Place the pot in the middle of the cooking zone marked on the hob.

### **WARRANTY:**

Manufacturer Warranty valid for 1 year of purchase. Proof of Purchase required.