

BOZZ

PDV700US

**Portable DVD Player With
7" LCD Screen**

**User manual
Bruksanvisning
Brukerveiledning
Käyttöopas**

Thank you for choosing our portable DVD player. It includes a 7" wide screen and a DVD player. The unit applies the latest state of art electronics and is designed for use at home, in hotels and in offices etc for relaxation. The compact size makes carrying easier as well as installation. Please read the manual carefully prior to use and keep it well for later consultation.

TABLE OF CONTENTS

Safety Precaution	1
Main Features	2
Unit View	3
The Remote Control	4
The Use of Remote Control	5
The Package	5
Powering and installation	6
Connecting to TV	7
Connecting with external speaker	8
Basic operation	9
System Setup	14
Rechargeable battery use	17
Specification	17
Troubleshooting	18
Carrying bag installation	19

Safety precautions

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO WATER OR MOISTURE. DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

SERVICE MUST BE CARRIED OUT BY QUALIFIED PERSONNEL ONLY, OR THE WARRANTY IS NOT VALID.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of non-insulated dangerous voltage within the product. This may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating procedures and maintenance (service) instructions in the literature accompanying the appliance.

CLASS 1 LASER PRODUCT

Laser product symbol: located on the rear panel of the unit (in some cases at the bottom side), indicates that this player is a class 1 laser product, it uses only weak laser and no hazardous radiation outside of the unit.

GENERAL PRECAUTIONS:

- 1) Read through this instruction manual before installation and use.
- 2) Do not touch the power plug with wet hand.
- 3) Switch off the main power when the unit is not in use. (Disconnect the power plug from the power outlet when you do not intend to use the unit for a longer period of time.)
- 4) Do not open the cover or touch any of the components inside the unit, only for qualified technicians.
- 5) Do not expose the unit to direct sunlight or nearby objects that radiate heat to avoid damage to the unit.
- 6) Do not place the unit in moist and humid environments.
- 7) Please ensure the ventilation holes are not covered to avoid overheating and malfunction.
- 8) Clean the panel and case with soft dry cloth only, do not apply any kind of thinner, alcohol or sprays.
- 9) The apparatus shall not be exposed to dripping or splashing, nor should any objects filled with liquids, such as vases, be placed on the apparatus.

Macrovision:

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

DOLBY PROLOGIC:

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.

Main Features

High brightness color 7" LCD screen

Compatible with disc of DVD+R/RW, DVD-R/RW, CD-DA, CD-R/RW, MP3, JPEG, VCD, SVCD, XVID, MPEG4, etc.

Built-in stereo speaker

 
Built-in rechargeable Lithium polymer battery

Support PAL or NTSC system

Support Multi-language OSD, speed forward/backward, repeat function


Zoom in/out function

Unit view

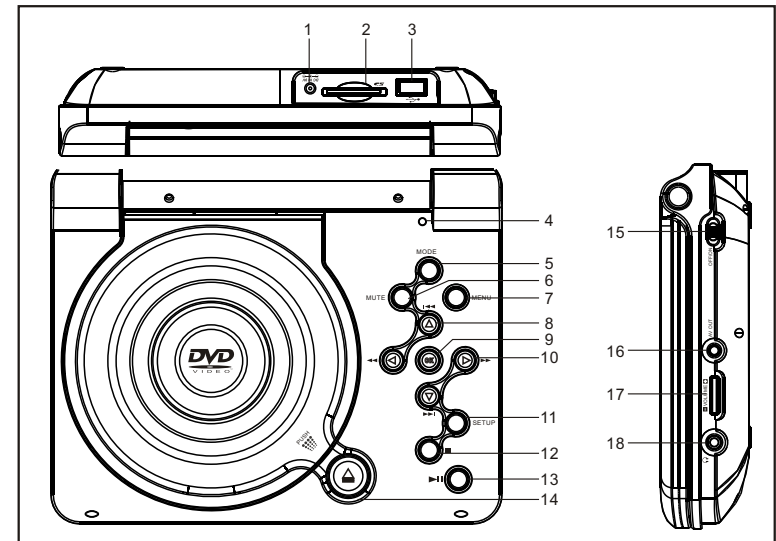

- | | |
|-------------------------|---------------------------|
| 1. DC IN 9V | 2. SD/MMC port |
| 3. USB port | 4. LCD switch |
| 5. MODE button | 6. MUTE button |
| 7. Menu button | 8. Skip forward/backward |
| 9. OK button | 10. Fast forward/backward |
| 11. Setup button | 12. Stop knob ■ |
| 13. Play/Pause | 14. OPEN knob |
| 15. Power ON/OFF switch | 16. AV OUT |
| 17. Volume | 18. Earphone jack |

 
The Remote Control

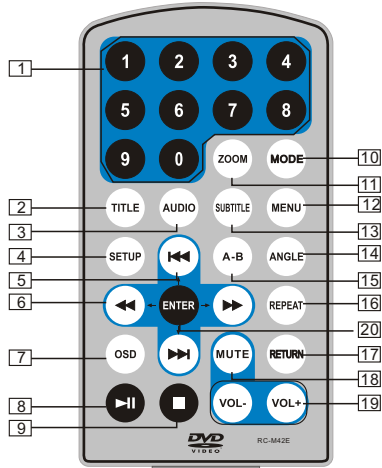


1. Number button
2. TITLE (To display title information)
3. AUDIO (To select audio language)
4. SETUP (To go to or exit setup menu)
5. Previous/Next button (To go to previous/next chapter or scene during playing)
6. Fast forward/backward button (To scan forward/backward at 2, 4, 8, 16, or 32 times)
7. OSD (To display disc information during playing such as elapsed and remaining time)
8. Play/pause
9. Stop (press once to stop playback, then press to resume playback from the point where you stopped; press stop button twice to stop playback completely)
10. **MODE** (To select the source)
11. **ZOOM** (To zoom in/out the image during the playback)
12. Menu (To enter or exit menu root)
13. Subtitle (To select subtitle language when playing DVD disc)
14. Angle (To change viewing angle when playing disc with multi-angle)
15. A-B (Repeat a specific portion from point A to B, press it again to cancel repeat playing)
16. Repeat (To repeat playing title, chapter or track)
17. Return (To return to the main menu)
18. **MUTE** (To turn to mute)
19. VOL +/- (To adjust the volume)
- 20: Enter (To confirm)

The Use of Remote Control

 Please put the battery into the remote control as per below illustration

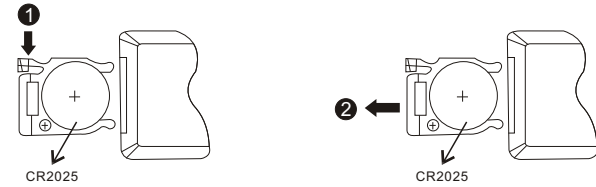

 When using remote control, make sure the infrared window is pointed to infrared receiving window of the machine. The distance between machine and remote control must be within 3 metres. Please refer to the following illustration

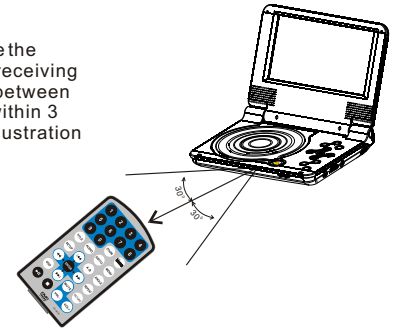

Notice


1. To avoid falling off or place near damp environment.
2. To avoid infrared receiving window of the unit being under direct sunlight
3. Please use a new battery to replace old one if the remote control doesn't work.

The Package


Remote Control with battery	1
Audio/Video Cable	1
AC/DC Power Adapter	1
Cigarette Lighter Adapter	1
Instruction Manual	1
Earphone	1
BS adapter	1
Bag	1

Powering and installation

 Plug one end of the AC/DC power adaptor into the DC IN 9V jack on the right of the machine, then plug the other end into the AC power receptacle. Please refer to the following illustration

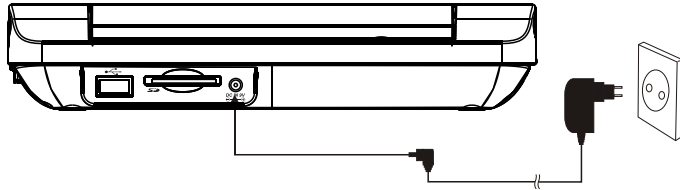

 If using car cigarette lighter adaptor to connect to the power:
Plug one end of the cigarette lighter adaptor into the DC IN 9V jack on the unit, plug the other end into the car cigarette lighter socket. See illustration below.

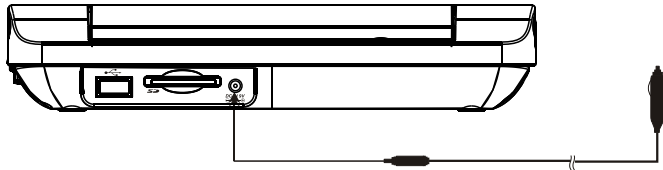


Notice:

1. Car cigarette lighter adaptor can't be used to recharge the battery
2. Car cigarette lighter adaptor is available to use only when the car power supply is 9-12V

Connecting to TV

 
You can also connect the unit to a TV to enjoy high quality picture and stereo sound. Please refer to the following illustration:

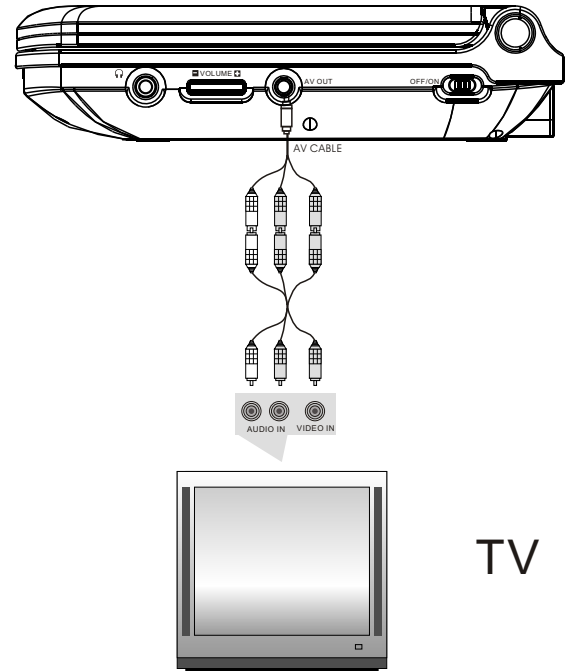

Please use AV cable to connect the machine and the TV. Make sure it is connected correctly.

Connecting with external Speaker

 The unit can be connected with external speaker. Please see the following illustration

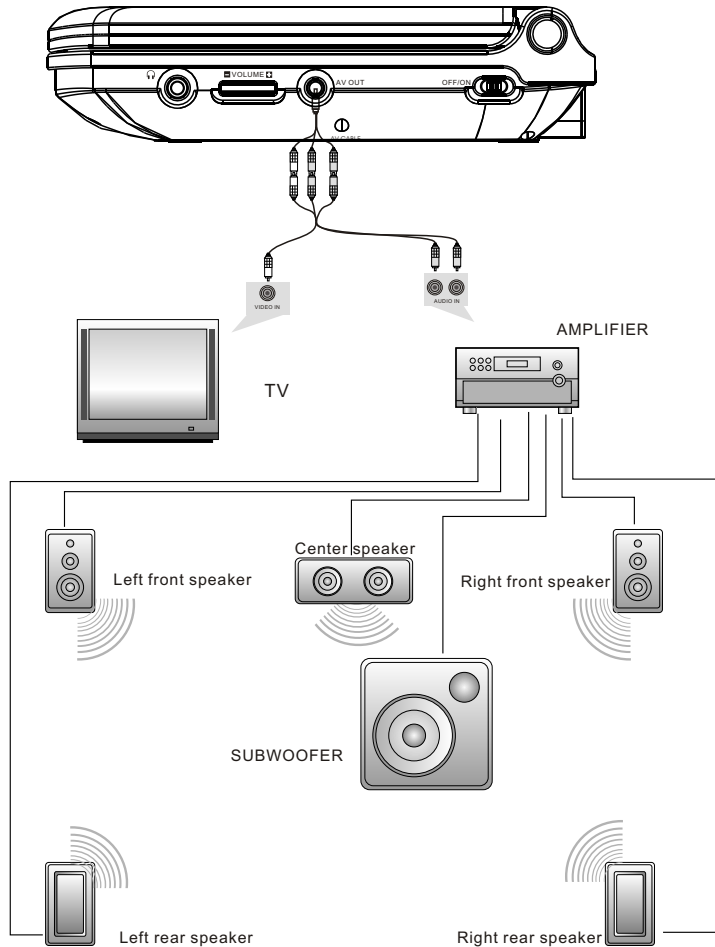

Notice: There is no 5.1 channel in the unit, however, after connecting to APM it is available to output audio in 5.1 channel

Basic Operation




Playing disc of DVD, MPEG4, SVCD, VCD, CD, MP3, Xvid

1. After connecting power to the unit, turn on the unit by sliding the ON/OFF switch to ON, the source menu will be displayed on the screen:



Press **◀▶** to enter DVD mode or Media mode and press OK button to confirm. When selecting "Media", ensure to insert USB or SD/MMC card properly.

2. Open the disc door and insert a disc into the door with the label side facing up.
3. Close the disc door. The unit will load the disc and start playing.
4. Press **■** once to stop playback; then press **▶||** to resume playback from the point where you stopped; press **■** twice to stop playback completely).
5. During playback, press **▶||** to pause; press it again to resume playback.
6. When the playing is finished, please turn off the power by sliding ON/OFF switch to OFF.
7. For some DVD disc with Title or Chapter menu, press "MENU" button to enter menu page, and use **◀▶** to select. Press ENTER to confirm.

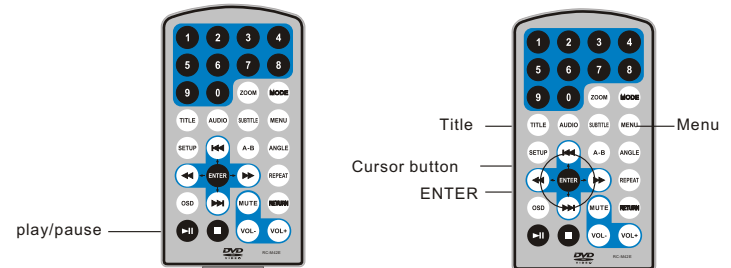 


Fast forward and fast backward




When playing disc of DVD, MPEG4, SVCD, VCD, CD, the unit can search forward or backward.

 1. Press **▶▶**, the unit will search forward. Press it repeatedly, the unit will play at 2, 4, 8, 16, 32 times of speed.

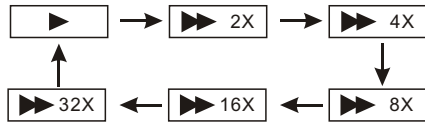

 2. Press **◀◀**, the unit will search backward. Press it repeatedly, the unit will play at 2, 4, 8, 16, 32 times of speed.

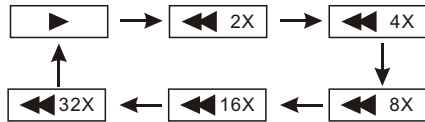


Repeat playing



When playing disc of DVD, MPEG4, SVCD, VCD, CD, user can repeat playing one chapter, title or all the whole disc.

 For DVD disc, press "repeat" button, user can repeat playing one Chapter; press it again to repeat playing Title; press it the third time to repeat playing the whole disc.



For MP3 disc, press "repeat" to repeat playing present file; press it again to repeat playing the folder; press it the third time to cancel repeat playing.



Repeat playing of favorite scene

 


When playing disc of DVD, MPEG4, SVCD, VCD, CD, Mp3, user can repeatedly play a specific section.

During playback, press "A-B" button at a point A, then press this button again in point B, the unit will automatically repeat playing the part between A-B



Press it the third time, the unit will return to normal playback.

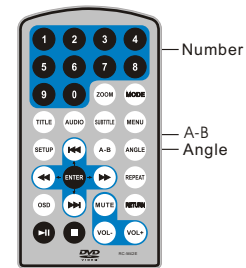

Angle

During playing DVD disc with multi-angle, press "Angle" button, the followings will be displayed on screen:



Press number buttons to select the angle you desire



To return to normal playing, please press "Angle". The unit will play the disc in the default angle.

 


Notice

The function is available only for discs with multi-angle.




Zoom in/ out



When playing disc of DVD, MPEG4, SVCD, VCD, user can zoom in or zoom out the image.

During playback, press "Zoom" button, the image will be enlarged; press it again the image will be enlarged again; press it fourth time, the image will zoom out, press it repeatedly and the image will return to normal status.

 When the image is enlarged, user can press ◀ ▶ to move the image

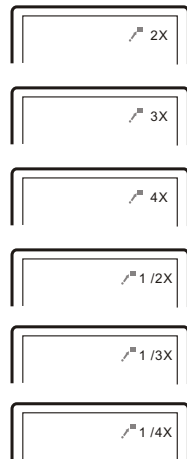


Zoom in/out

Playing JPG file


1. Place a JPG disc into the tray, the unit will start reading and play.
2. Press "MENU" to browse JPG files.
3. Press ▲▼ to select a JPG file and press "OK" button to confirm.
4. To rotate the picture counter-clockwise, press "◀"; Press "▶" to rotate the picture clockwise
5. Press OSD button when viewing pictures, you can select different refresh mode as follows:
 - a. from top to bottom
 - b. from bottom to top
 - c. from left side to right side
 - d. from right side to left side
 - e. from left top to right bottom
 - f. from right top to left bottom
 - g. from left bottom to right top
 - h. from right bottom to left top
 - i. from horizontal center to both sides
 - j. from vertical center to both sides
 - k. from top and bottom to center.
 - l. from right and left to center.
 - m. from four window's top side to bottom side.
 - n. from four window's left side to right side.
 - o. from 4 edges to center.
6. During viewing files, "⊙" may appear when pressing "Angle" or "Subtitle" or "Audio" or "A-B" or "Title" etc; in this situation these options are unavailable to operate.
7. When viewing JPG files, press "■", pictures will be displayed in thumbnail mode, press ▲▼◀▶ or "ENTER" button to select one picture to view

Playing MP3 files





1. Place MP3 disc into the disc door or insert USB disk, SD card to USB port or SD card slot. Press "▲/▼" or "ENTER" button to choose a MP3 file; Press "▶||" or "ENTER" button to play the file selected.

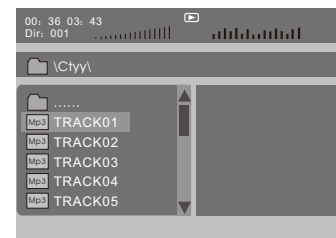 


System Setup

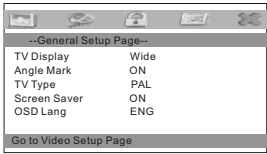 	<p>Press "Setup" button, the main menu will be displayed on the screen In the General Setup Page, Press ◀▶ button to highlight this item. Press OK button to access. Press ▲▼ button to select the setting. Press OK button to confirm your selection. Press ◀ button to exit.</p>
---	---

    
General Setup Page

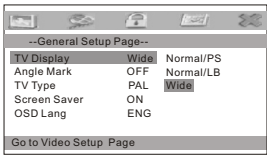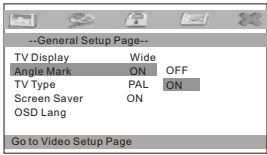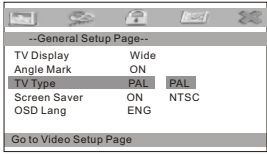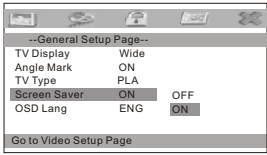	<p>TV display: Enter this option, user can set screen display format (Normal/PS, Normal/LS, Wide) The default is "Wide" Note: ☆ The function depends on the display ratio with which the DVD disc is recorded. ☆ Please choose "Wide(16:9)" when using a 16:9 widescreen TV set</p>
	<p>Angle Mark: Enter this option to set the angle during playback. Optional setting: ON, OFF The default is: ON</p>
	<p>TV Type: Enter this option to select TV type (PAL, NTSC) The default is PAL.</p>
	<p>Screen Saver: Enter this option to set whether to activate the screen saver function. The default is ON.</p>

 
System Setup

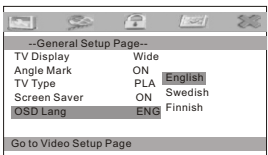	<p>OSD Language: In the option user can set OSD menu language. The default: English</p>
---	--



Video Setup Page

	<p>Enter this option, user can adjust picture quality of video output. There are items available to be adjusted: Brightness, contrast, Hue and Saturation. For all these items the default is 00</p>
---	---




Password Setup Page

	<p>Enter this option, you can set a password (four numbers). All parental Control features are password protected. The default is 8888.</p>
---	---

  Preference Page

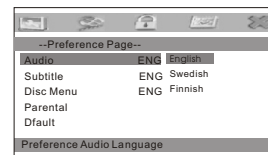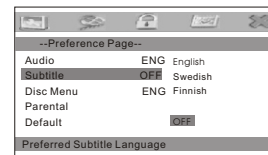	<p>Audio: Enter this option, user can select your preferred audio language for DVDs. The default is English. Note: ☆ The audio language depends on the material on each disc. ☆ User can also change the audio language during playback by pressing the Audio button.</p>
	<p>Subtitle: Select your preferred language to show the subtitles on the screen. The default is OFF The subtitle languages depend on the information available on each disc. You can also change the subtitle language during playback by press the SUBTITLE button.</p>

   System Setup

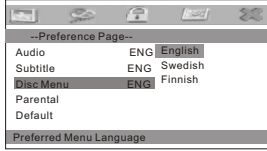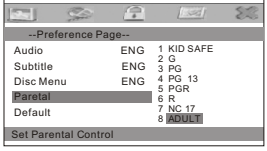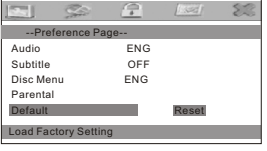	<p>Disc Menu: This function allows you to choose the menu language stored on the disc. The default is English. Note: the disc menu languages depend on the information available on the disc.</p>
	<p>Parental: Enter this option to set the parental control level to some unsuitable disc scenes being watched by the children. Optional parental control levels: KID SAFE, G, PG, PG 13, PGR, R, NC17, ADULT. The default of this option is ADULT.</p>
	<p>Default: Select this item and press OK button to reset all settings to the original factory settings.</p>

The specification and rechargeable battery use

Specification

Compatible disc: DVD+R/RW, DVD-R/RW, CD-DA, CD-R/RW, MP3, JPEG, VCD, SVCD, XVID, MPEG4.
Signal system: PAL/NTSC
Panel size: 7 inch
Picture resolution: 480X234(RGB)
Frequency response: 20 Hz to 20 kHz
Video output: 1Vp-p/75 Ohm, unbalanced
Audio output: 1.4Vrms/10kOhm
Audio S/N: Better than 80 dB
Dynamic range: Better than 85 dB
USB: support USB 1.1
Laser: Semiconductor Laser, Wave Length: 650 nm/795 nm
Power source: DC 9-12V
Power consumption: 10 W
Operating temperature: 5~40°C
Weight: 0.753kg
Dimensions (W x D x H): 206x 158 x 41mm
Battery Type: Li Polymer

Rechargeable battery use


The unit utilizes long-life Li polymer battery for portable power supply. The battery has no "Memory Effect" and thus can be recharged safely regardless of whether the battery is fully or partially discharged. It's enough to recharge no longer than 6H each time, fully recharged battery can last about 2 hours.

Precautions related to Battery Recharge

The battery can be only recharged when turning power to OFF state, and keep continuous power supply, the red light will be on, and the light will turn yellow when it's fully charged.

Using and Maintaining Rechargeable Battery



1. The normal working temperature is: 0°C ~45°C ;
2. Always unplug AC/DC power supply for the unit when not in use;
3. Heat will create during playing, it's normal, while avoid long time playing and unattended;
4. Avoid having the unit collide with any objects, and place away from all possible heat sources or damp areas.

PROBLEM	SOLUTION
No sound or distorted sound	Make sure the machine is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
Can't advance through a movie	You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.
The icon  appears on screen	The feature or action cannot be completed at this time because: 1. The disc's software restricts it. 2. The disc's software doesn't support the feature (e.g., angles) 3. The feature is not available at the moment. 4. You've requested a title or chapter number that is out of range.
Picture is distorted	The disc might be damaged. Try another disc; It is normal for some distortion to appear during forward or reverse scan.
No forward or reverse scan	Some discs have sections that prohibit rapid scanning or chapter skip; If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.



Owing to continuous improvement, no prior notice will be given regarding changes on above feature and spec.

SAFETY WARNING!
 On no account should this unit be used by the driver of a moving motor vehicle, or left unsecured in the vehicle whilst driving. If this unit is being used by a passenger in your vehicle, be sure that it is secured or held safely, and does not obstruct any safety device (i.e. airbag, seat belt etc.) that is fitted.

  1. Insert the unit into bag as shown:
3. Takes the strap and hook up the neck headrest of the driver's seat as shown:

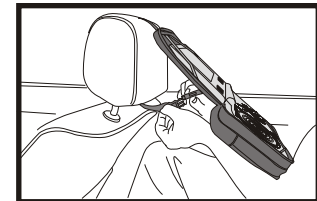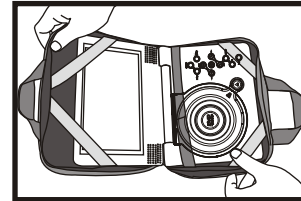

  2. Untie the vertical strap on the back of bag as shown:
4. Adjust the strap tightly so that the unit is secured:

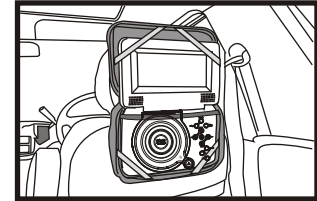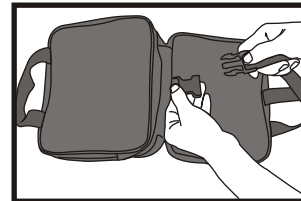

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.