

# MAJORITY

SCHOLARS

---

DVD PLAYER

SCH-DVD-BLK



Instructions Guide

 
# Contents

<b>Controls And Functions</b> .....	1
<b>What's In The Box?</b> .....	6
<b>Support</b> .....	7
<b>Instructions Guide</b> .....	8
Getting Started .....	8
DVD Operation.....	9
USB Operation .....	10
Playing JPEG/Picture CD discs and MP3 discs .....	11
System Set-up .....	13
Menu 1: General Set-up .....	14
Menu 2: Audio Set-up.....	16
Menu 3: Dolby Digital Set-up.....	17
Menu 4: Video Set-up.....	18
Menu 5: Preference Set-up.....	19
<b>Troubleshooting</b> .....	21
<b>Specification</b> .....	22
<b>Warranty</b> .....	22
<b>Safety Information</b> .....	23

**3 YEAR  
WARRANTY**


Watch video tutorials and register  
your product for a FREE 3-year warranty  
at [www.majorityradios.co.uk](http://www.majorityradios.co.uk)

## Front Panel

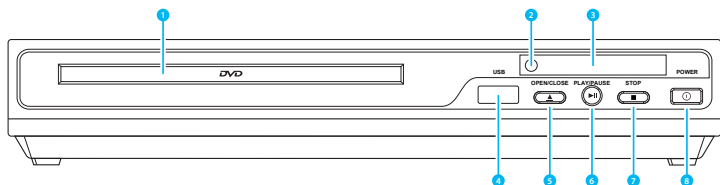

1. DVD Tray
2. Remote Sensor
3. Display
4. USB Port
5. Open/Close
6. Play/Pause
7. Stop
8. Power On/Off


## Rear Panel

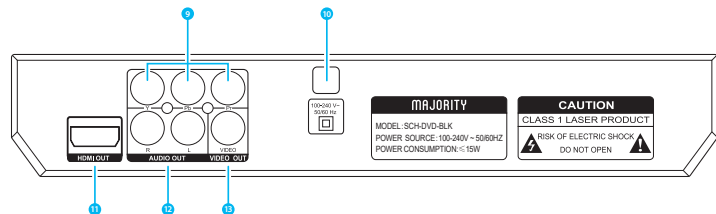 

9. (Y.Pb/Cb.Pr/Cr) Output
10. Power Cable Outlet
11. HDMI Output
12. 2 x Audio Output ports
13. Video Output

# Controls And Functions
 
## Remote Control

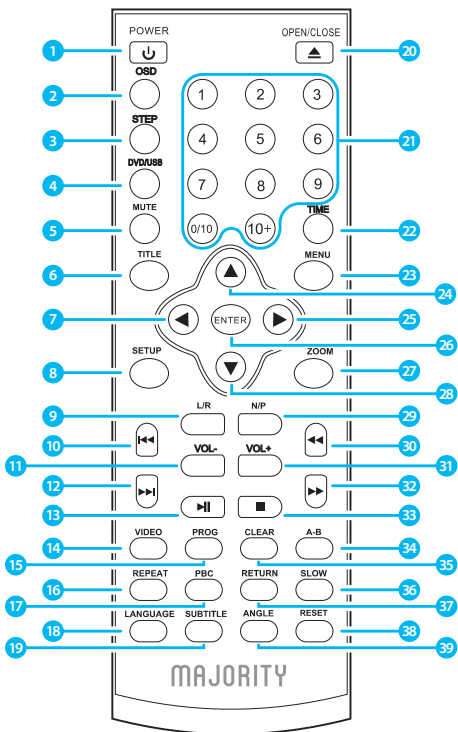

### 1. POWER ON/OFF

Press to Power On, press again for Standby mode.

### 2. OSD

Press for information of the disc to display

### 3. STEP

Press to play picture by picture. Press Play to return to normal playback.

### 4. DVD/USB

Press to switch between DVD and USB play.

### 5. MUTE

Mute sound during playback

### 6. TITLE

When using DVDs, press to return to the title menu.

### 7. LEFT (<)

Left direction within selection menu

### 8. SETUP

Press to get into Set Up menu

### 9. L/R

Use for VCD or CD discs. Press button to select left or right channel, or stereo

### 10. PREVIOUS (I<<)

In DVD mode, press to go to previous chapter. With SVCD, VCD, CD, MP3 discs, press to go to previous track.

### 11. VOLUME DOWN (-)

Decrease volume

### 12. NEXT (>>I)

In DVD mode, press to go to next chapter. With SVCD, VCD, CD, MP3 discs, press to go to next track.

### 13. PLAY/PAUSE

Press once to pause, press again to play

### 14. VIDEO

Switch to video output mode (cvbs. yuv.rgb)

### 15. PROGRAMME

If the disc has two or more tracks, chapters, or titles, set up playing order preference. Press the button to then input the number of the track, title or chapter. If the programmed tracks are over 10, press 'Next' to go on programming. Use the up/down/left/right key to move the cursor to 'Start'. Press 'Enter' to start programmed play.

With MP3 discs, press the button to enter 'Directory-Play' mode. Press 'Programme' again to enter file-list mode.

### 16. REPEAT

Press repeatedly in DVD mode to scroll through: repeat a title, chapter, track or to the beginning. In SVCD, VCD or CD mode: track repeat, all repeat or repeat cancel.

### 17. PBC

VCD mode: Playback control

## Controls And Functions

### 18. LANGUAGE

Press to select on-screen display language options

### 19. SUBTITLE

Press to begin showing subtitles

### 20. OPEN/CLOSE

Press to load and remove discs. Place disc into tray with the title side facing up. Press button again to close.

### 21. NUMBERS 0-9/10+

While playing DVD/VCD/CD/MP3 discs, use key to select desired track/ chapter in menu selection.

### 22. TIME

Press to manually set up the time on the DVD player display unit

### 23. MENU

Enter menu settings in DVD mode

### 24. UP (^)

Up direction within selection menu

### 25. RIGHT (>)

Right direction within selection menu

### 26. ENTER

Confirm your selection

### 27. ZOOM

Press to zoom in, press again to zoom out. Use arrow keys to move picture.

### 28. DOWN

Down direction within selection menu

### 29. N/P

Press to switch the TV system between NTSC and PAL.

### 30. REWIND

Press for rewind search

### 31. VOLUME UP (+)

Increase volume

### 32. FASTFORWARD

Press for quick forward search

### 33. STOP

Press to stop media. Press the Play/Pause button to resume.

### 34. A-B

Press to repeat certain sections. Press button on start point (A) and the end point (B) to select section. Cancel by pressing button a third time.

### 35. CLEAR

Press to clear input selections

### 36. SLOW

Press to select slow speed playing.

### 37. RETURN

Press to return to VCD menu.

### 38. RESET

Press to reset your DVD player settings

### 39. ANGLE

Change angle in DVD mode

### Remote Control Operation

---

Insert the batteries into the battery compartment. 2 x AAA batteries are required.

Point the remote at the remote sensor in front of the player and make sure there are no obstacles in the way between the remote and the player. The distance between the remote and the sensor must not exceed 3m.

To prevent damage to the remote control, please remove the batteries when not in use for long periods of time.

 
 
# What's In The Box?

## Box Contents

---

1. Majority Scholars DVD Player
2. Remote Control
3. RCA AV cable
4. Instruction Manual

### 1. Majority Scholars DVD Player



2. Remote Control



3. RCA AV Cable



4. Instruction Guide



## Support

---

Thank you for your purchase of the Majority Scholars DVD player.

Please follow the guidance of the manual to set up your new purchase and begin enjoying its features.

If you require further assistance with your new DVD player, please contact our support team on the Majority website:

<https://www.majorityradios.co.uk/support>

## Getting Started

---

### Setting Up

Connect the power plug of the DVD player to a wall outlet. The power indicator and clock on the front panel will illuminate.

Follow the below guidance for cable connections to get your DVD player set up:

#### **Cable Connection Options:**

**1a.** Connect a RCA cable between the 2 channel Audio Output port and the RCA input on your TV.

**1b.** Connect a HDMI cable between the HDMI Output on the back panel of the DVD player to the HDMI input on your TV.

**1c.** Connect a (Y Pb /Cb Pr /Cr) cable via the (Y/ Cb/Pb Cr/Pr) Output of the DVD player to your TV (R/L/Video port and cable).

## DVD Operation

---

Once your DVD player has been connected to the TV and to a power source, the product is ready for use.

The following DVD formats can be played: DVD, DVD-R-RW, CD Video, Mpeg4, DivX.

Please complete the following guidance to complete the set up of the DVD player:

1. Ensure that your TV is set to the correct mode for DVD playback.
2. Plug in the DVD player and press the 'Power' button to turn the unit on. You can do this on the unit (**Ref.8**) or via the remote (**Rem.1**).

When the machine is switched on, pressing the POWER button on the remote control will make it go into standby mode. Press the button again and the machine will switch on.

**WARNING:** If the product is not going to be used for a long period of time, it is advisable to unplug it for safety

3. Press the Open/Close button on the front panel (**Ref.5**) or on the remote control (**Rem.20**) and place a DVD disc on the disc tray. Press the Open/Close button again to close the tray.
4. The DVD will read the DVD disc and begin play. You can control the playback and settings via the buttons of the remote control.

## USB Operation

---

This product has a USB port at the DVD front face for MP3/Movies playback.

Insert a USB unit into the USB port on the front panel of the DVD player (**Ref.4**).

Press the DVD/USB button on the remote control (**Rem.4**) to enter the USB source. The DVD player will read and display the file list off the USB unit.

Browse the file list by pressing the ▲/▼/◀/▶ buttons (**Rem. 7, 24, 25, 28**) on the remote control. Select a file by pressing the Enter button (**Ref.26**) of the remote control.

## Playing JPEG/Picture CD discs and MP3 discs

---

### Playing JPEG/Picture CD discs

The following formats can be played: Jpg, Jpeg, CD Photo

Press the STOP button and 12 small pictures will show on the TV screen.

Press the ▲/▼/◀/▶ buttons to select the desired picture to view.  
**(Rem. 7, 24, 25, 28)**

To access instructions menu, use the ▲/▼/◀/▶ buttons to 'Instruction' and then press the ENTER button to confirm. The following options will display:

1. PROG - Select to change picture transform mode
2. STOP - Entering picture preview mode
3. PREV - Previous picture
4. NEXT - Next picture
5. PLAY - Play picture
6. UP - Mirror image in vertical
7. DOWN - Mirror image in horizontal
8. LEFT - Rotate 90 degrees anticlockwise
9. RIGHT - Rotate 90 degrees clockwise
10. ZOOM - Change zoom mode
11. FAST FORWARD - Zoom in the picture
12. FAST REWIND - Zoom out the picture
13. ▲/▼/◀/▶ - Move zoom focus for picture.

### Playing MP3 Discs

The following formats can be played: Mp3, WMA, CD Audio, CD-R-RW, CD

Whilst a MP3 disc is playing, there is a menu screen on the TV. Press the ▲/▼ buttons (**Rem. 24/28**) to scroll through tracks or folders. Press the ENTER button to select the track or folder.

Press the PROG button in files play mode. The screen will then display the total track number and the current playing track. Use the digit buttons (**Ref.21**) to key in and select the track or use the ▲/▼/◀/▶ buttons to shift to the track and press the ENTER button (**Rem.26**) to play the track.

## System Set-up

---

### Menu Operation

Press the SET-UP button (**Rem.8**) on the remote control and the SET-UP menu will display.

There are five different menus in the setup: General, Audio, Dolby, Video and Preference. Follow the instructions in the individual paragraphs for a choice of set up options:

- **Menu 1: General**
- **Menu 2: Audio**
- **Menu 3: Dolby**
- **Menu 4: Video**
- **Menu 5: Preference**

After accessing the SET-UP menu, press the ▲/▼/◀/▶ buttons (**Rem. 7, 24, 25, 28**) to your chosen sub-menu. Follow by pressing the ENTER button to confirm your selection.

To end the set-up, press the SET-UP button again.

Follow the below guidance for General, Audio, Dolby, Video and Preference settings.

## Menu 1: General Set-up

---

1. Press the **▲/▼/◀/▶** buttons on the remote control to open the 'General' menu (**Rem. 7, 24, 25, 28**).
2. Seven submenus will appear that you can select between. Press the **▲/▼** buttons on the remote control to scroll between the sub-menus:

### a) TV Display

Different values will show here depending on your TV set:

- 4:3/PS: When the unit connects to the normal TV set, the wide-screen image shows on the full screen, but some part is cut off.
- 4:3/LB: When the unit connects to the normal TV set, the wide-screen image shows and black bars appear on the top and bottom of screen
- 16:9: Use this item when the unit is connected to the wide-screen TV set

### b) Angle Mark

In DVD mode, use to view DVD from different angles

### c) Osd Lang

Select a language for the on-screen display language (English, French, German, Italian, Spanish or Portuguese).



## **d) Captions**

The default set-up is Caption off. You can display closed captions (if available).

## **e) Screen saver**

Select a screen saver for when the TV display goes into standby or a disc is not played for several minutes. Press any remote on the remote control to wake it up.

## **f) HDCD**

Select a output audio signal. You can select the digital filter to be 1 x (44.1 KHz) or 2 x (88.2 KHz).

## **g) Last Memory**

If the last memory is set when the unit is on and the unit is switched off, the last position on the DVD player will be memorised.

**3.** When you enter a sub-menu, a number of options will appear for the entered sub-menu.

## Menu 2: Audio Set-up

---

1. Press the ▲/▼/◀/▶ buttons on the remote control to open the 'Audio' menu (**Rem. 7, 24, 25, 28**).
2. Two different submenus will appear on the menu. Press the ▲/▼ buttons on the remote control to scroll to browse between the sub-menus to select the stereo output:

### a) LT/RT:

The audio output is Left and Right channels format. Switch between left/right audio channels.

### b) Stereo:

Select to play the audio via the two front speakers of the TV.

## Menu 3: Dolby Digital Set-up

---

1. Press the ▲/▼/◀/▶ buttons on the remote control to open the 'Dolby' menu (**Rem. 7, 24, 25, 28**).
2. Two different submenus will appear on the menu. Press the ▲/▼ buttons on the remote control to scroll to browse between the sub-menus:

### a) Dual Mono

- Stereo: sets audio output to the stereo output
- L-Mono: sets audio output to the mono-left channel
- R-Mono: sets audio output to the mono-right channel
- Mix-Mono: sets audio output to the Mix mono channel

### b) Dynamic

Select to reduce the bass and treble, and to create a fine detailed sound. This mode is recommended for reduced sound to avoid disturbance for night time viewing.

## Menu 4: Video Set-up

---

1. Press the **▲/▼/◀/▶** buttons on the remote control to open the 'Video' menu (**Rem. 7, 24, 25, 28**).
2. Three different submenus will appear on the menu. Press the **▲/▼** buttons on the remote control to scroll to browse between the sub-menus:

### a) Component

Adjust the video output when connecting to video terminals.

YUV: set video output in analogue component video format when connecting to Y/U/V terminals.

### b) Resolution (HDMI output)

You can choose the following resolution levels from the HDMI output: 480i/576i/720P50/720P60/1080i50/1080i60/1080P (50Hz)/1080P (60Hz)

This DVD can make up to 576i video resolution output. It will depend on the video source and the TV set.

### c) Quality

You can set the sharpness, brightness and contrast according to your preference.

## Menu 5: Preference Set-up

---

1. Press the ▲/▼/◀/▶ buttons on the remote control to open the 'Preference' menu (**Rem. 7, 24, 25, 28**).
2. Seven different submenus will appear on the menu. Press the ▲/▼ buttons on the remote control to scroll to browse between the sub-menus to select the stereo output:

### a) TV Type

This unit is suitable for all makes for TV's. You can select PAL or NTSC if necessary. PAL needs to be selected for use in Europe.

### b) Audio

These are the initial settings for your preference. If a setting is supported by disc content, it will alter audio settings.

### c) Subtitle

These are the initial settings for your preference. If a setting is supported by disc content, it will alter subtitles. Alternatively, press the SUBTITLE button.

### d) Disc Menu

These are the initial settings for your preference. If a setting is supported by disc content, it will alter the disc menu.

### e) Parental

Select to control parental control settings. Any disc with the parental level higher than the set level will not be played.

### **f) Password Set-up**

The initial factory password is 0000. You can change the password here.

### **g) Default Set-up**

Select to revert to original factory set up on this unit.

## Troubleshooting

<b>Malfunction</b>	<b>Possible causes/measures</b>
No power / function	<p>Check whether the power is switched on or off at the wall.</p> <p>Check whether the power adaptor is properly connected to power outlet or not.</p>
No video	<p>Make sure that the video cables are connected correctly.</p> <p>Reset the setups of the DVD player.</p> <p>Check that the input selection on the TV is correct.</p>
No audio	<p>Make sure that the audio cables are connected correctly.</p> <p>Make sure that the coaxial connected stereo is powered on.</p> <p>Reset the setups of the DVD player.</p>
Distorted video	<p>Clean DVD disc from dust/dirt</p> <p>The playback is fast winding backward/forward.</p>
Unable to play	<p>Place a DVD disc in the disc tray.</p> <p>Place the disc in on the correct side up</p> <p>Clean DVD disc from dust/dirt</p> <p>Close the setup of the DVD player.</p> <p>Check that the file is compatible with the unit.</p>
Remote Control does not work	<p>Aim the Remote Control towards the front panel of the DVD player.</p> <p>Use the Remote Control closer to the DVD player.</p> <p>Check the battery level of the batteries</p>

# Specifications

## Specification

Power Supply	AC 100-240V 0.5A
Frequency Response	~ <b>50/60</b> Hz
Power Consumption	<15W
Compatible Connections	HDMI A/V RCA Output USB Input (Y Pb/Cb Pr/Cr) R/L/Video
Compatible Formats	<b>DVD:</b> DVD, DVD-R-RW, CD Video, Mpeg4, DivX <b>AUDIO:</b> Mp3, WMA, CD Audio, CD-R-RW, CD <b>PHOTO:</b> Jpg, Jpeg, CD Photo
Dimension (WxHxD)	22.5 x 19 x 4.5 cm 742g

## Warranty

All products come with a standard 12 month warranty. All items must be registered on [www.majorityradios.co.uk](http://www.majorityradios.co.uk) for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.



## 1. Read these instructions.

- Keep these instructions. Instructions are also available for download at [www.majorityradios.co.uk](http://www.majorityradios.co.uk)
- Heed all Warnings
- Follow all instructions
- Do not clean the apparatus near or with water
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during light storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.  
Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
- No naked flame sources, such as lit candles, should be placed on the apparatus.
- Dispose of used electrical products and batteries safely according to your local authority and regulations.

## ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.  
Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.  
Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

## RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

**IMPORTANT:** Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.  
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



**CAUTION**

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**ATTENTION**

RISQUE D'ELECTROCUTION  
NE PAS OUVRIR



**IMPORTANT:** Please read all instructions carefully before use and keep for future reference



**MAJORITY**

[www.majorityradios.co.uk](http://www.majorityradios.co.uk)