Quick start guide



PHILIPS

Getting started

Overview of the main menu

Men	u Mode	То
13	Music	Play your digital music tracks
4	Recordings	Create or listen to recordings
	Folder view	View files in folders
₩.	Settings	Customize the settings of your player

Connect and charge

The GoGear SA011 has a built-in battery that can be charged through the USB port of a computer.

Connect the Player to a computer

1 Pull off the USB cap.

2 Connect the USB plug to a spare USB port on your computer.

>The GoGear SA011 charges.



Install software

The player contains the following software:

Philips Device Manager (helps you get firmware updates for the Digital Audio Player)

When you connect the Digital Audio Player to the PC for the first time, a pop-up window appears:

1 Select Install Philips Device Manager.

2 Follow the on-screen instructions to complete the installation.

If the pop-up window is not displayed automatically:

1 Select My Computer (Windows XP / Windows 2000) / Computer (Windows Vista).

2 Right click on Philips GoGear SA011.

3 Select Install Philips Device Manager.

4Follow the on-screen instructions to complete the installation.

Turn the GoGear SA011 on and off

To turn on, press () II until the display shows the Philips logo. To turn off, press and hold OPH until the display shows 'Bye'.

The Player has a lock switch to prevent accidental operation.

To lock the buttons when you play. move the slider to position >All buttons except the volume keys are locked and the display shows a lock icon.

Music

Listen to music

1 From the main menu, select ... 2 Navigate the sub-menus to select your

music. 3 Press ►II to play.

 Press ►II to toggle between pause and play.

Recordings

Record audio/voices

This is how you can record audio/ voices with the built-in microphone.



[Start voice recording] Press >II to toggle between pause and record

2 Press to stop.

3 Press | II to save the recording or press to cancel.

> Recordings are saved on the blaver. (Filename format: VOICEXXX.MP3. where XXX is the recording number that is generated automatically.)

You can find your recordings under [Recordings Library] > [Voice].

Need help?

Hear Manual

See the user manual stored on this player. Online Go to www.philips.com/welcome

Register your product

Since it is possible for you to upgrade your product. we recommend that you register your product on www.philips.com/welcome so we can inform you as soon as new free upgrades become available.

Recycling the product and the built-in battery

All our products are designed and manufactured with high quality materials and components. which can be recycled and reused.



The crossed-out wheel bin symbol on a product means that the product is subject to the European Directive 2002/96/EC. This symbol can also be used in combination with a chemical symbol, which means that the product complies with the environmental directive for that chemical

Never dispose of your product with other household waste. Inform yourself or ask your dealer about local environmentally safe recycling regulations. The correct disposal of your old product helps prevent potentially negative consequences for the environment and human health



Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

To safeguard the functionality and safety of your product, always bring your product to an official collection point or service centre where a professional can remove / replace the battery as shown:













Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.





Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners © 2009 Koninkliike Philips Electronics N.V. All rights reserved. www.philips.com

