

Quick Start Guide

M-Vision Cine1080p Displays

Symbols used in this guide

Warnings



ELECTRICAL WARNING: this symbol indicates that there is a danger of electrical shock unless the instructions are closely followed.



WARNING: this symbol indicates that there is a danger of physical injury to yourself and/or damage to the equipment unless the instructions are closely followed.



NOTE: this symbol indicates that there is some important information that you should read.



DIGITAL  **PROJECTION**

Atlanta, GA USA • Manchester, UK • Beijing, China • Singapore
770.420.1365 • www.digitalprojection.com

DIGITAL  **PROJECTION**

Atlanta, GA USA • Manchester, UK • Beijing, China • Singapore
770.420.1365 • www.digitalprojection.com

Quick Start Guide

M-Vision Cine 1080p Displays

1

Getting Started

This Quick Start Guide has been designed to aid in quickly getting started with your new projector. If you require further help, or have further questions on how to operate this unit, please refer to our website in order to download full product documentation (Home Cinema dealers visit www.digitalprojection.com/mvisionHC -- Commercial dealers visit www.digitalprojection.com/mvisionCAV). You can also access FAQs and view articles to get to know more specific product features and benefits.

Packaging Contents:



Projector

 


Remote lens shift wrench cable kit

2

Get to Know the Connector Panel


The connector panel at the back features a wide range of connectors for all sorts of source connections. Decide which one(s) that meet(s) your requirement(s).

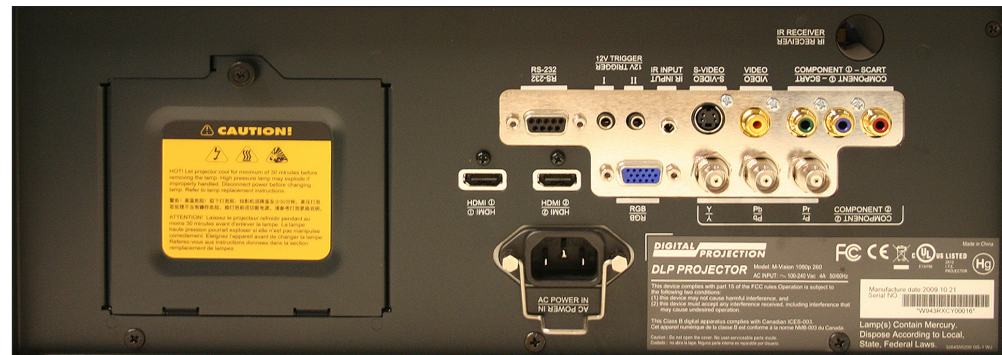

3

Connect Sources, Connect Power, Power On

 Make sure the projector is switched off, and not connected to power when connecting to sources. Connect video and computer sources, then insert the power cable. Power up sources, including computers and video playback devices. Power up the projector by pressing the power key. A steady, bright indicator light will indicate it is in operation.

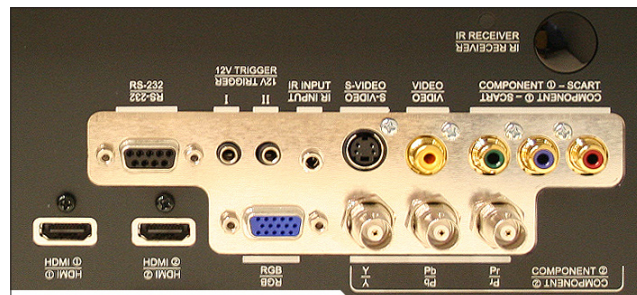

4

Adjusting the Lens Zoom, Focus, Horizontal and Vertical Shift

 
Adjust zoom to set correct image size, shift to correct position, focus for clarity, and any other desired setting. Adjust image level with the front feet, and tilt with the rear foot. For projectors equipped with a zoom lens, adjust zoom to set the correct image size and focus by manually adjusting the zoom and focus trim rings on the lens. Manually adjust the horizontal and vertical shift by accessing the shift points, located under the Digital Projection logo plate on the top of the projector. The logo should be gently lifted and rotated to gain access to the adjustment points.



5

Adjust Image and System Settings

Change and adjust settings such as brightness and contrast, ceiling mount and rear projection display, as well as color calibration and other system settings by using the remote control or through the menu system that is accessible from the on-board keypad.

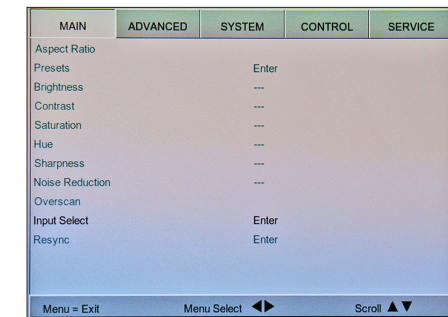

6

Power Off and Allow to Cool Down

To power off, press the Power key once, and confirm by pressing again. Allow to cool down until all fans have stopped (a minimum of 30 seconds), and steady amber indicator lights indicate the projector has been safely turned off. Disconnect any cables, sources and power cables before uninstalling the projector.

