

**SAMSUNG**



# REFRIGERATOR

 
**RTS2AS/RT2AS/RTS24AS/RT24AS  
RTS2BS/RT2BS/RTS27BS/RT27AS  
RT25S/RT28S**

ENGLISH

---

## OWNER`S INSTRUCTIONS

Before operating the unit, please read this manual thoroughly, and retain for future reference.

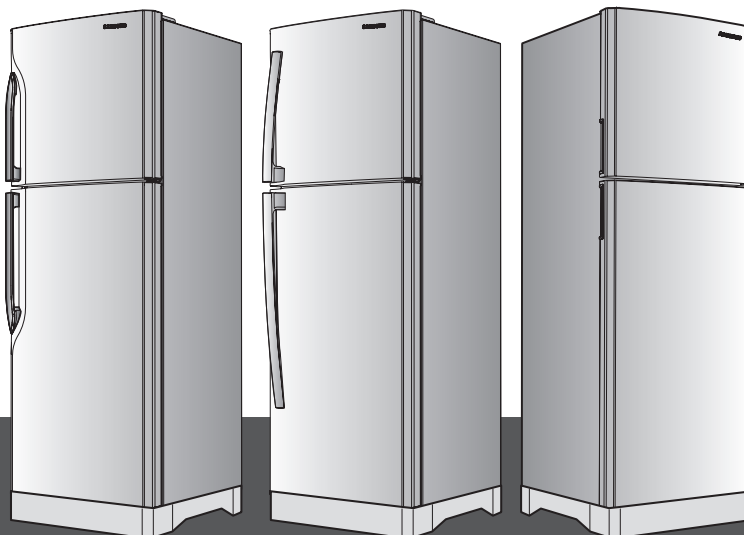

## FEATURES



### **Silver Plus Deodorizer.**

- Powerful deodorizer through catalyst.

### **Twist Ice Cube Tray (option).**

- Easy to make and dispense ice.

### **Big Vegetable Box.**

- Large space for vegetable.

### **Big Guard-egg.**

- Store 20ea eggs in large guard.

### **High-Energy Efficiency.**

- Optimized power consumption.

### **Mr. Cool pack (option).**

- Keep the stored items cool for more time after power cut off.

### **Moist Fresh Zone (option).**

- Optimized humidity control (option) keeps vegetable & fresh longer.



### **REMARK**

There is not some option according to the model and country.

# Safety precautions

## Read Instructions

Please read all safety and operating instructions before operating this appliance.

## Retain Instructions

Please keep this Owner's Manual for future reference.

## Heed Warnings

All warnings, Cautions and Notes on this refrigerator are important ; please pay attention to them.

## Follow Instructions

For best results, follow all instructions given in this manual.

## Model and Serial Numbers

Include both the model number and the serial number when corresponding with your Dealer concerning this product. Because these following operating instructions cover various models, the characteristics of your refrigerator may differ slightly from those described in this manual.

This manual is made on the basis of model RT2BS

Date of Purchase: \_\_\_\_\_

Model No: \_\_\_\_\_

Serial No: \_\_\_\_\_

# Contents

- FEATURES..... 1
- SAFETY INSTRUCTIONS.....3
- CAUTIONS WHILE USING .....7
- FIXER ASSEMBLY(option).....8
- INSTALLATION .....9
- LEVELLING THE APPLIANCE ..... 10
- BASIC PREPARATION ..... 10
  - Before using ..... 10
  - Storing food..... 11
- PARTS ..... 12~13
- HOW TO USE ..... 14
  - Temperature control ..... 14~15
  - Making ice cubes ..... 16
  - Chiller Compartment ..... 16
  - Vegetable Bin ..... 16
  - Cool Pack(option)..... 17
  - Moist Fresh Zone(option) ..... 17
- REPLACING THE LED LAMP ..... 17
- REMOVING ACCESSORIES ..... 18
- CLEANING THE REFRIGERATOR ... 19
- BEFORE CALLING SERVICE .....20
- Additional tips for proper usage .....21
- Ambient room temperature limits ....22

# SAFETY INSTRUCTIONS

## IMPORTANT SAFETY INFORMATION. READ ALL INSTRUCTIONS BEFORE USING.



WARNING

- Use this appliance only for its intended purpose as described in this Owner's Instruction. We strongly recommend that any servicing be performed by a qualified individual!

## SAFETY PRECAUTIONS

- When using electrical appliances, basic safety precautions should be followed, including the following:

### CAUTION/WARNING

 <b>WARNING</b>	Indicates that a danger of death or serious injury exists.
 <b>CAUTION</b>	Indicates that a risk of personal injury or material damage exists.

### OTHER SYMBOLS USED

	Represents something you must NOT.
	Represents something you must NOT disassemble.
	Represents something you must NOT touch.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.
	Represents a ground is needed to prevent electric shock.
	It is recommended that this symbol be handled by service man.

- This refrigerator must be properly installed and located in accordance with the Installation Instructions before it is used.



**Do not install the refrigerator in a damp place or a place where it may come in contact with water.**

- Deteriorated insulation of electrical parts may cause an electric shock or fire.
- Do not allow children to climb, stand or hang on the shelves or doors in the refrigerator. They could damage the refrigerator and seriously injure themselves.



- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- In the event of a power failure, call the local office of your Electricity Company and ask how long it is going to last.



**If the refrigerator is not to be used for vacation or a long period of time, make refrigerator empty and unplug the power cord.**

- Most power failures that are corrected in an hour or two will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. Remove all frozen food if the power failure last more than 24 hours.
- Allow sufficient space to install the refrigerator on a flat surface.

**If your refrigerator is not level, the internal cooling system may not work correctly.**

**Do not disassemble or repair the refrigerator by yourself. You may run the risk of causing a fire, malfunctions and/or personal injury.**

**The appliance must be positioned so that the plug is accessible after installation.**

**Do not place this refrigerator in direct sunlight or expose to the heat from stoves, room heaters or other appliance.**

**If you smell pharmaceutical or smoke, unplug the power plug immediately and contact your Samsung Electronics service center.**

**R600a or R134a is used as a refrigerant. Check the Compressor label on the rear of the appliance and the rating label inside the fridge to see which refrigerant is used for your refrigerator.**



**The appliance with the symbol contains a small amount of isobutane refrigerant (R600a), a natural gas with high environmental compatibility as well as combustibility. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.**

**Refrigerant leakage out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and ventilate the room in which the appliance is located for several minutes.**

- In order to avoid the creation of flammable gas-air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used.

The room must be 1m<sup>3</sup> in size for every 8g of R600a refrigerant in your particular appliance is shown on the identification plate inside the appliance.

- Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.



# SAFETY INSTRUCTIONS



## WARNING

### **DANGER! RISK OF CHILD ENTRAPMENT**

- Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators are still dangerous... even if they will sit for "just a few days."
- If you are getting rid of your old refrigerator, please follow the instructions below to help prevent accidents.

*Do so in a way, that it is not possible for a child to remain trapped inside.*

*keep fingers out of the "pinch point" areas; Clearances between the doors and cabinet are necessarily small. Be careful while closing the doors when children are in the area.*

## **PROPER DISPOSAL OF THE REFRIGERATOR** **Before you throw away your old refrigerator or freezer**

- When disposing of this or other refrigerators, remove the door/door seals, door latch so that small children or animals cannot get trapped inside.
- Leave the shelves in place so that children may not easily climb inside.
- R600a or R134a is used as a refrigerant. Check the compressor label on the rear of the appliance or the rating label inside the fridge to see which refrigerant is used for your refrigerator. When this product contains flammable gas (Refrigerant R600a) contact your local authority in regard to safe disposal of this product.
- Cyclo Pentane used as a insulation blowing gas. **The gases in the insulation material require special disposal procedure. Please dispose of the packing material for this product in an environmentally friendly manner. Please contact your local authorities in regard to the environmentally safe disposal of this product. This product contains flammable insulation blowing gas.**
- **Ensure that none of the pipes on the back of the appliances are damaged prior to disposal. The pipes shall be broke in the open space.**
- Please dispose of the packaging material for this product in on environmentally friendly.



## CAUTIONS

- The refrigerant used in the refrigerator/freezer and the gases in the insulation material require special disposal procedures. Ensure that none of the pipes on the back of the appliance are damaged prior to disposal.



## WARNING

### **HOW TO CONNECT ELECTRICITY**

- Do not plug several appliances into the same multiple power board. The refrigerator should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate. **This provides the best performance and also prevents overloading house wiring circuits, which could cause a fire hazard from overheated wires.**
- Never unplug your refrigerator by pulling the power cord. Always grip plug firmly and pull straight out from the outlet. Damage to the cord may cause a short-circuit, fire and/or electric shock.
- When moving the refrigerator, be careful not to roll over or damage the power cord.
- Do not insert the power cord with wet hands.
- Unplug the refrigerator before cleaning and making repairs. **Do not use a wet or damp cloth when cleaning the plug. Remove any foreign matter or dust from the power plug pins.**
  - Otherwise there is a risk of fire. If the refrigerator is disconnected from the power supply, you should wait for at least five minutes before plugging it back.

# SAFETY INSTRUCTIONS

- Make sure that the power plug is not squashed or damaged by the back of the refrigerator. Do not bend the power cord excessively or place heavy articles on it.  
**Have the power cord repaired or replaced immediately by the manufacturer or its service agent if the power cord has become frayed. Do not use a cord that shows cracks or abrasion damage along its length or at either end. If the power cord is damaged, have it replaced immediately by the manufacturer or its service agent.**
- Unplug the appliance from the power supply before changing the interior light of the refrigerator.  
**Otherwise, there is a risk of electric shock. If you experience difficulty when changing the light contact your service center. In case of LED lamp, don't change the interior light of the refrigerator at your own risk, ask its service agent** If you experience difficulty when changing the light, contact your service center.
- If the wall socket is loose, do not insert the power plug.  
**There is a risk of electric shock or fire.**
- The appliance must be located where the plug is easily accessible.

## FOOD KEEPING & TREATMENT CAUTION



### Do not overfill the refrigerator with food.

- When you open the door, an item may fall out and cause personal injury or material damage.

### Do not put bottles or glass containers in the freezer.

- When the contents freeze, the glass may break and cause personal injury.
- Bottle should be stored tightly together in the refrigerator so that they do not fall out.

### Do not spray inflammable gas near the refrigerator.

- There is a risk of explosion or fire.

### Do not directly spray water inside or outside the refrigerator.

- There is a risk of fire or electric shock.

### Do not touch the inside walls of the freezer with wet hands.

- This may cause frostbite.

### Do not store volatile or flammable substances in the refrigerator.

- The storage of benzene, thinner, alcohol, ether, LP gas and other such products may cause explosions.

### Do not refreeze frozen foods that have thawed completely.

### Do not store pharmaceuticals products, scientific materials or temperature-sensitive products in the refrigerator.

- Products that require strict temperature controls must not be stored in the refrigerator.

### Do not put a container filled with water on the refrigerator.

- If spilled, there is a risk of fire or electric shock.

**This product is intended only for the storage of food in a domestic environment.**

## INSTALLATION CAUTION



### Do not store articles on the top of the appliance.

- When you open or close the door, the articles may fall and cause personal injury and/or material damage.

## GROUNDING CAUTION



### The refrigerator must be grounded.

- You must ground the refrigerator to prevent any power leakage or electric shocks caused by current leakage from the refrigerator.

### Never use gas pipes, telephone lines or other potential lightning rods as ground.

- Improper use of the ground plug can result in electric shock.



## WARNING

- keep ventilation openings in the appliance enclosure or mounting structure clear of obstruction.
- Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not place or use electrical appliances inside the refrigerator/ freezer, unless they are of a type recommended by the manufacturer.

# SAFETY INSTRUCTIONS

## CLEANING CAUTION



**Do not insert your hands into the bottom area under the appliance.**

- Any sharp edges may cause personal injury.

**Never put fingers or other objects into the dispenser hole. It may cause personal injury or material damage.**

**Do not use a wet or damp cloth when cleaning the plug, remove any foreign material or dust from the power cord pins.**

- Otherwise there is a risk a risk of fire.

*Before operating the appliance, please read this manual thoroughly and retain it for your reference.*



## REMARK

This refrigerator use CycloPentance as insulation blowing gas.

Contains fluorinated greenhouse gases covered by the Kyoto Protocol.

Hermetically sealed system.

Do not vent gases into the atmosphere.

Refrigerant type : R-134a      Quantity : 0.13 kg

Global Warming Potential (GWP) = 1300

# CAUTIONS WHILE USING



## WARNING

Do not place carbonated or fizzy drinks in the freezer compartment.

This product is intended only for the storage of food in a domestic environment.



## CAUTION

 
- Manufacturer's recommended storage times should be adhered to. Refer to relevant instructions.
- Please observe maximum storage times and expiry dates of frozen goods.
- The appliance might not operate consistently (possibility of defrosting of contents or temperature becoming too warm in the frozen food compartment) when sited for an extended period of time below the cold end of the range of temperatures for which the refrigerating appliance is designed.
- Do not store food which goes bad easily at low temperature, such as bananas.
- Your appliance is frost free, which means there is no need to manually defrost your appliance, as this will be carried out automatically.
- Temperature rising during the defrost can comply with ISO requirement, But If you want to prevent an undue rise in the temperature of the frozen food while defrosting the appliance, please wrap the frozen food in several layers of newspaper.



## NOTE

Any increase in temperature of frozen food during defrosting can shorten its storage life.

## CAUTIONS WHILE USING

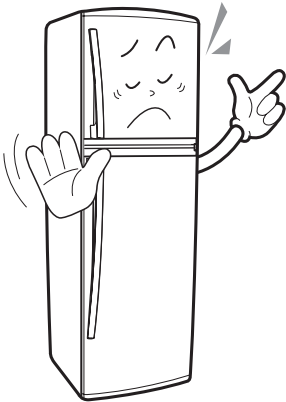


- 1 - Do not allow water to splash onto the back of the refrigerator.  
- Water impairs the insulation of electric parts and may cause an electrical short or a shock hazard.




- 2 - Do not use flammable sprays such as lacquer and paint near the refrigerator.  
- Heat from the refrigeration unit may ignite flammable aerosols.



 
- 3 - Do not allow unattended children to play in or around refrigerators and other large appliances, The child may get hurt or they could damage the appliance.  
- To avoid damage to the refrigerator or injury to the child, do not allow children to hang on the refrigerator door.



 
- 4 - For optimum operation, do not leave the door open for any longer than necessary.  
- Leaving the door open allows warmer air to enter the refrigerator and causes the refrigeration unit to use more energy to maintain the cool temperature.

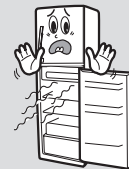

 - 5 - Do not store volatile chemicals such as ether and benzene in the refrigerator.  
- The fumes, besides damaging food, can build up and cause an explosion.

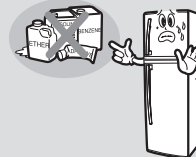

 - 6 - Do not use the refrigerator if it is not operating correctly or has been damaged. Disconnect it from the power supply and call your local service center.  
- If the power cord is damaged, avoid a hazard by replacing it through the manufacturer or its service agent or a similarly qualified person.

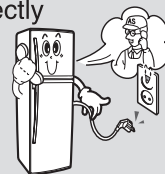


# FIXER ASSEMBLY (OPTION)



## REMARK

 
Your refrigerator may have no this option, depend on the option of each model and the country.

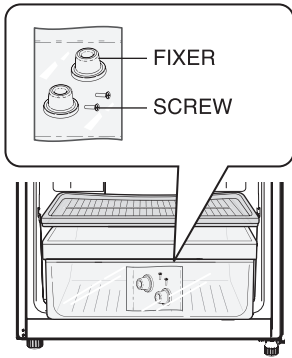

Assemble FIXER for improving energy efficiency to secure space behind Refrigerator.


## Assembly method

 - 1 Take out packed FIXER from the Vegetable Box.
- 2 Check assembly location at the rear of Refrigerator.
- 3 Locate FIXER assembly location and tighten screw like picture.
- 4 Assemble another side with same process.

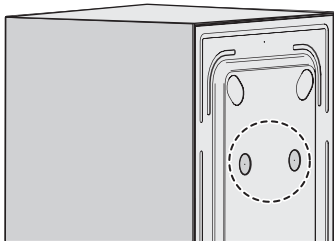


### CAUTION

 Disconnect power to the Refrigerator before assembly.  
Be careful not to drop, damage or scratch the Refrigerator.

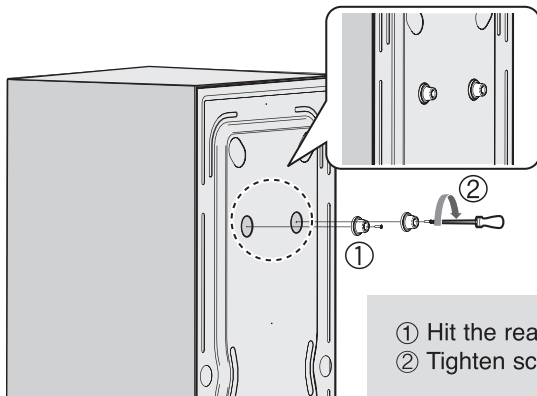


- ① Hit the rear of driver for easy assemble.
- ② Tighten screws.(Do not over tighten when fixing)

# INSTALLATION

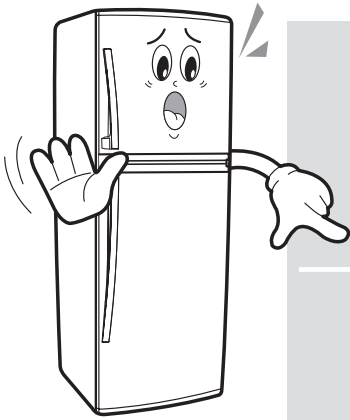 

 
- 1** Install this refrigerator on a firm, flat surface.

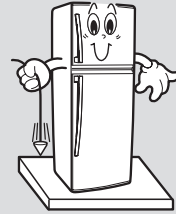


- 2** For optimum operation, normal room temperature is recommended. Avoid locations affected by draughts or dampness.



 
- 3** For optimum operation, normal room temperature is recommended. Avoid locations in direct sunlight, near heaters, radiators, stoves or ovens.

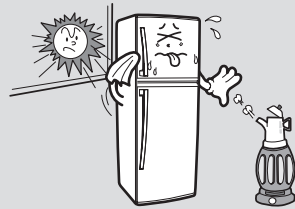

 
- 4** Allow a 50mm space between the refrigerator and the wall. If your refrigerator is going into a recessed area, allow at least 300mm clearance above the refrigerator.

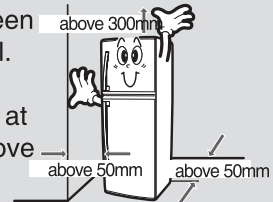

 - 5** For personal safety, properly ground this appliance. Do not ground this refrigerator with a telephone line, gas pipe, etc.

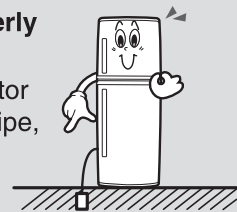

## LEVELING THE APPLIANCE

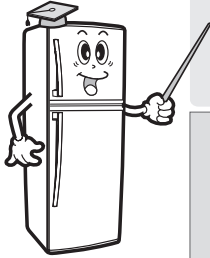 

To compensate for any floor unevenness, adjust the height of the appliance by turning the adjustable feet clockwise or counterclockwise. The adjustable feet are at the front along the lower edge of the refrigerator chassis,

When the refrigerator leans to the left, turn the left front foot counterclockwise.


When the refrigerator leans to the right, turn the left front foot clockwise.




## BASIC PREPARATION
 
### Before using

- 1 Wipe the appliance inside and outside using a cloth dampened with warm water and a small amount of detergent.

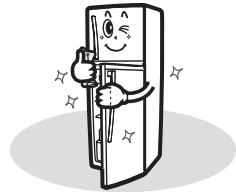

 - 2 Before plugging in for the first time, allow the refrigerator to stabilize for at least one hour. Allow the freezer compartment to cool for 2 to 3 hours before storing food.

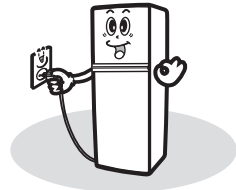


WARNING

- Keep ventilation opening in the appliance enclosure or mounting structure clear of obstruction.
- Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- DO NOT damage the refrigerant circuit.
- Do not place or use electrical appliance inside the refrigerator/freezer, unless they are of a type recommended by the manufacturer.
- When disposing the refrigerators; should be followed the disposal law of your country.

# Storing food

 Store food in small portions.




Seal food in containers with lids, in plastic wrap or in plastic bags to prevent drying and the mingling of odors.



Allow hot food and drinks to cool to room temperature before placing them in the refrigerator or freezer.



 
Allow sufficient room between food to help the circulation of cool air.



Place liquid the refrigerator to avoid freezing.



 Dry fruits and vegetables after washing before placing them in the refrigerator.


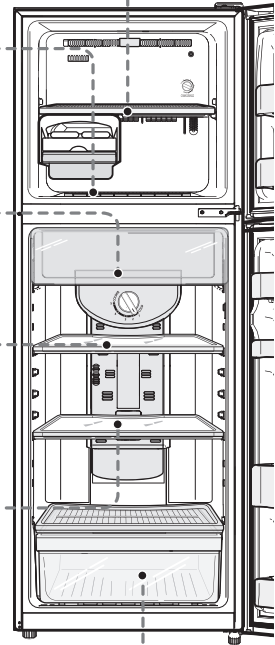


## Remark


Some parts in picture may differ from your refrigerator due to option, you can see part list in page 12~13.


  
# PARTS

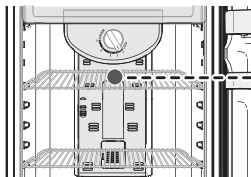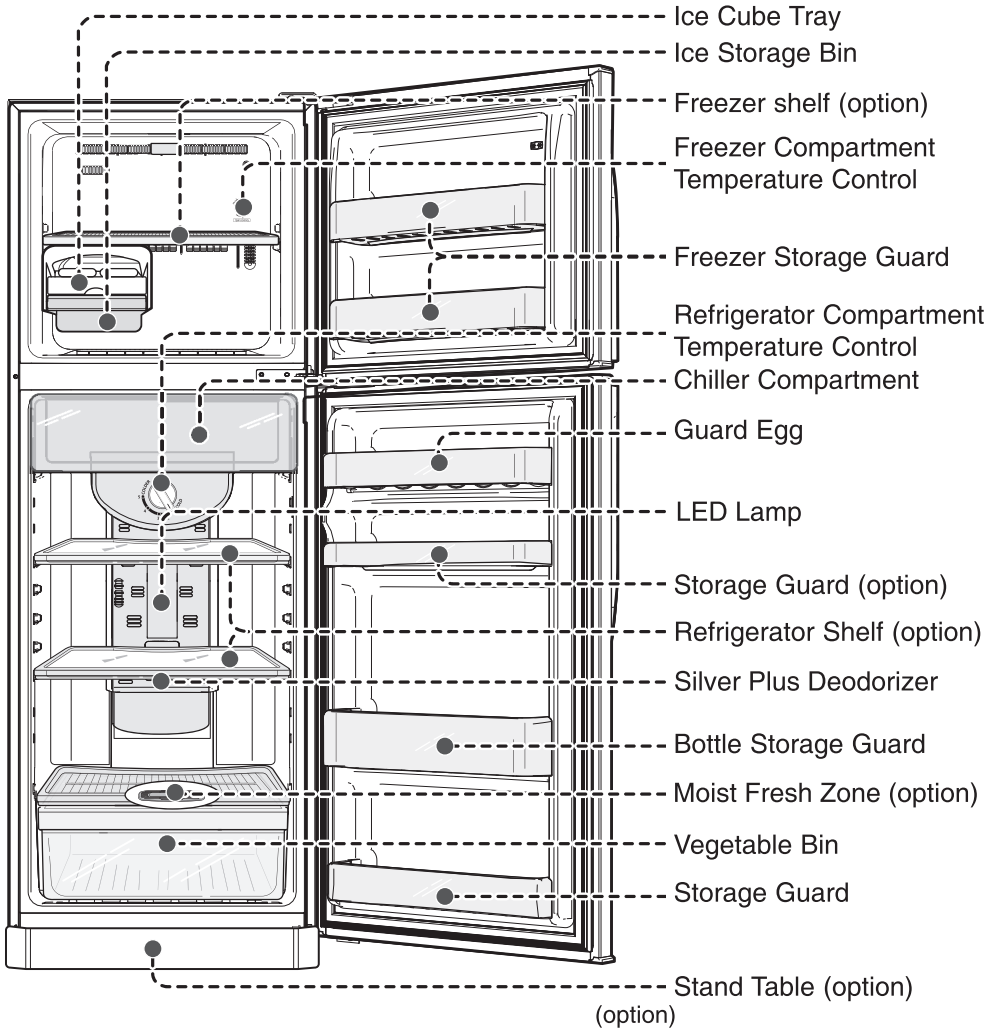

Refrigerator shelf (option)

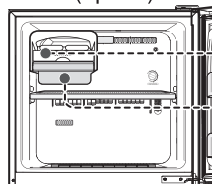 

Ice Cube Tray  
Ice Storage Bin





## REMARK

  
Some parts in the picture may differ from your refrigerator, depend on model and option.

To get the best energy efficiency of this product, please leave all shelves, drawers and baskets on their original position like as above illustration.

# PARTS

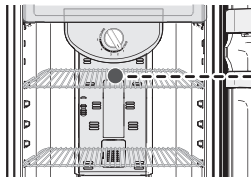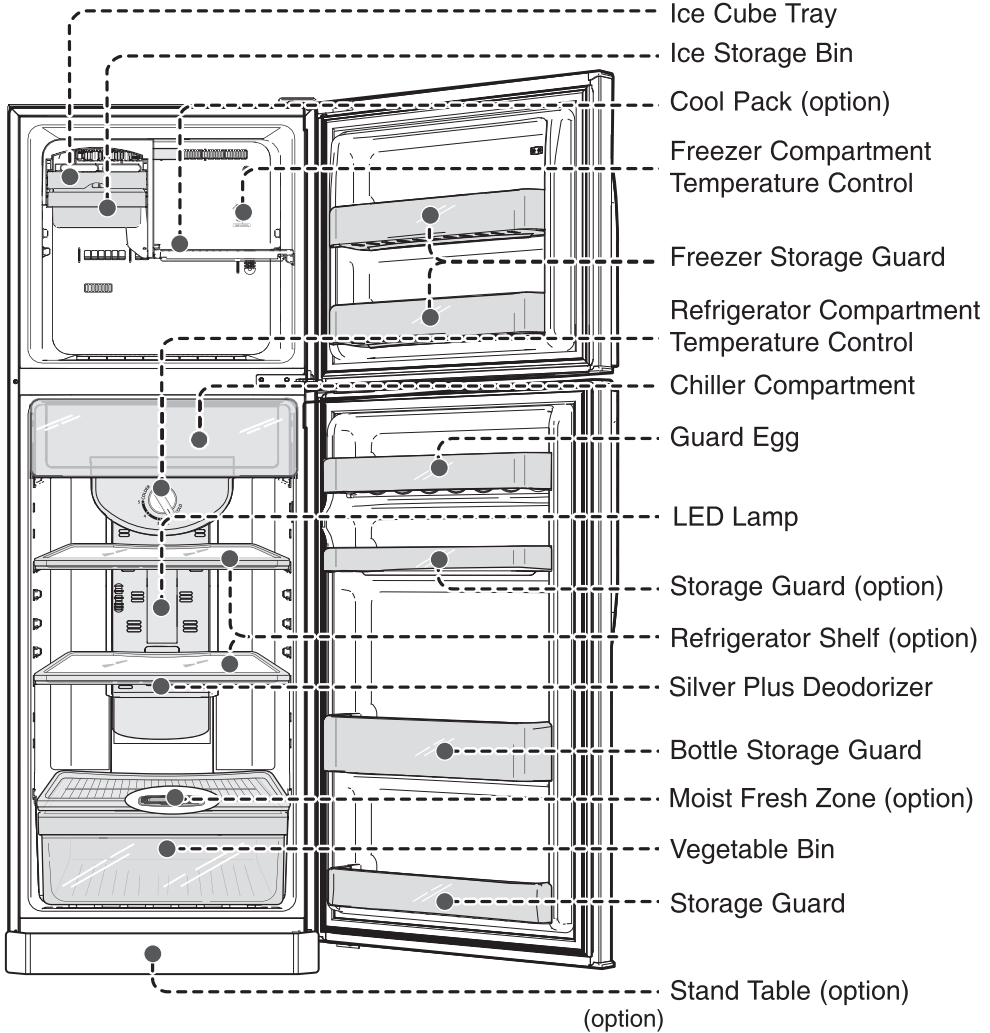

Refrigerator shelf (option)

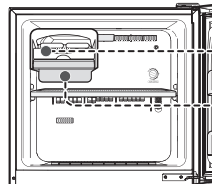 

Ice Cube Tray  
Ice Storage Bin



## REMARK

Some parts in the picture may differ from your refrigerator, depend on model and option.

To get the best energy efficiency of this product, please leave all shelves, drawers and baskets on their original position like as above illustration.

## HOW TO USE

# Temperature control

### Number 6 (COLDER)

Turn the Temperature Control to “COLDER” if you:

- Want to make ice(freezer)
- Require fast freezer(freezer)

### Number 5

Turn the Temperature Control to number 5 if you:

 
- Have a lot of food to store (refrigerator or freezer)

### Number 3

Turn the Temperature Control to number 3 for normal refrigerating or freezing mode.

### Number 1

Turn the Temperature Control to number 1 if you want to store only a small amount of food in the refrigerator or freezer.

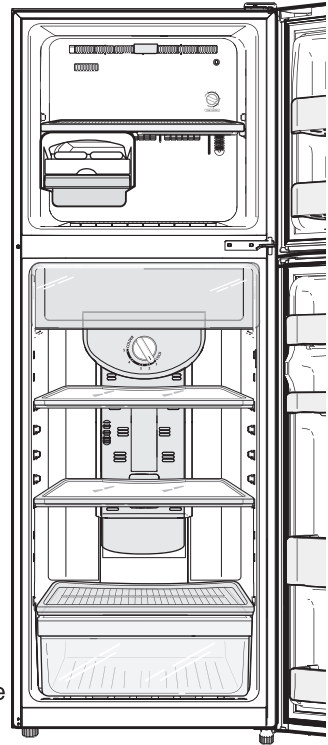

### NOTE

 
When the room air surrounding the refrigerator is below 5°C turn the Temperature Control to “COLD” to avoid freezing. When on vacation for a long period consider emptying the refrigerator of food & disconnecting from the power to conserve power.

If you need to freeze large amount of food stuff, set the temperature of freezer compartment to the coldest temperature at least 24 hours before.

# HOW TO USE

## Freeze Room



Freezer : Adjust the proper temperature by turning the temperature control dial to "COLD" or "COLDER"

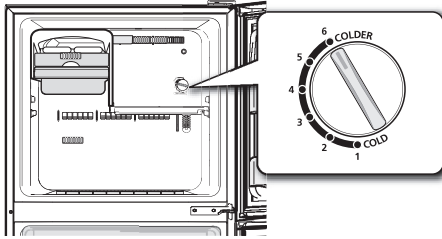



## Refrigerator Room

Refrigerator : Adjust the proper temperature by turning the temperature control dial to "COLD" or "COLDER"

  
### Glass/Plastic shelf model

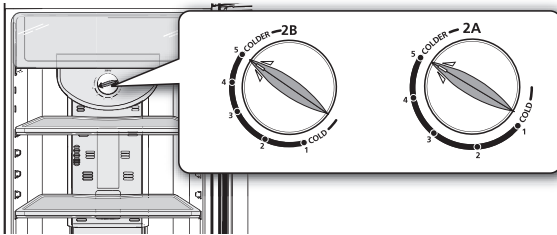


### Wire shelf model

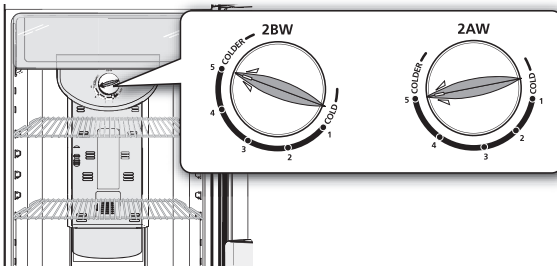  


# Making ice cubes

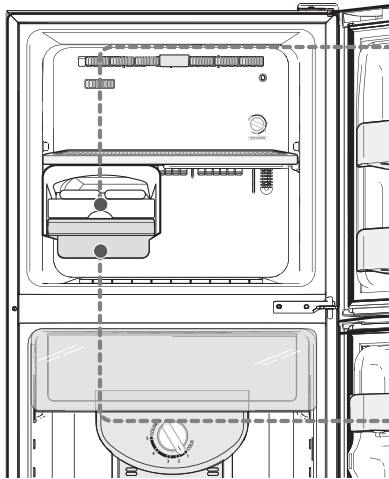 

 **1** Fill the ice cube tray with taking care not to overfill.




 **2** Slide the tray onto the cube shelf.



## Removing Ice cubes

 
Remove the ice cubes from the ice cube tray by twisting the ice tray levers. Make sure the ice storage bin is beneath the ice cube tray (see diagram below)

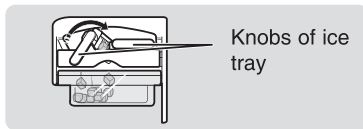

- Place the ice tray at the originally provided position by manufacturer in the order to achieve optimal ice-freezing.
- To get more space, you can remove the Ice tray and ice storage bin since it does not affect thermal and characteristics. A declared storage volume of frozen food storage compartment is calculated with these Ice tray and ice storage bin removed.

# Chiller Compartment

 This compartment helps preserve the taste of food and prolongs its freshness by freezing the surface of the food only. Use the chiller for storing cheese, meat, snacks, fish or any food to be used soon.



The vegetable bin is not suitable for storing tropical fruits such as bananas, pineapples, etc.


# Vegetable Bin

 This compartment maintains the moisture and freshness of vegetables. The vegetable bin is enclosed to protect the vegetables from direct draughts of cold air and to help maintain the humidity which prevents drying.



## Cool Pack(option)

Cool pack maintain low temperature when the power out.

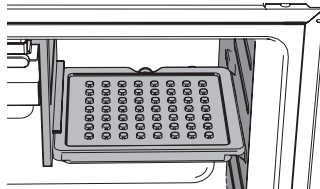


**CAUTION**

Though it's not toxic to human body do not eat or drink.

## Moist Fresh Zone (option)

 
Used to preserve the freshness of your stored vegetables and fruits. It has been specifically designed to control the level of humidity within the drawer.

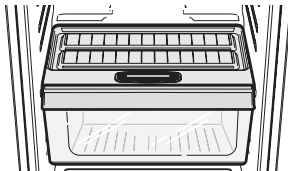

**REMARK**


There is not some option according to the model and country.
 
## REPLACING THE LED LAMP

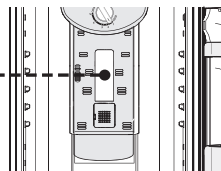


When the interior or exterior LED Lamp has gone out, please contact your service agents.

# REMOVING ACCESSORIES

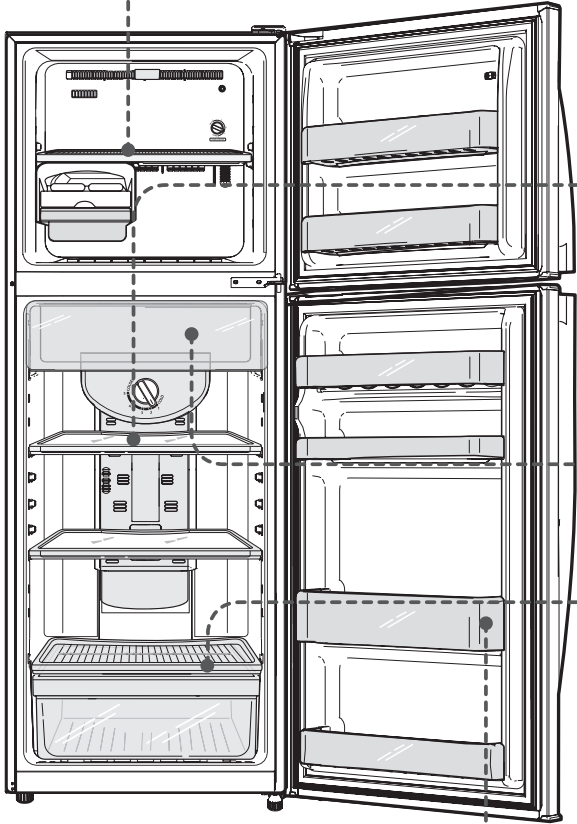 


## Freezer Shelf

 - Pull the ice cube tray unit forward and of the freezer compartment.
- Lift the front of the freezer shelf upward to release the hooks and pull the shelf out of the freezer.

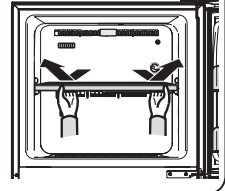

## Refrigerator Shelves

 - Pull the shelves towards you until it meets the stopper.
- Tilt the front of the shelves up and continue pulling the shelves out.

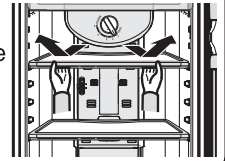


## Chiller Compartment

- Pull the chiller compartment towards you until it meets the stopper.
- Tilt the front upward and continue pulling the compartment out.




## Vegetable Bin and Cover

 - Pull the vegetable bin towards you and out of the refrigerator.
- Lift the cover up and pull it out of the refrigerator.

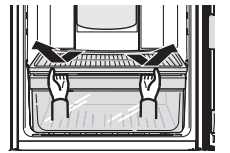


## Mr. Cool pack (option).

 Push the support tray ice to the left and pull Mr. Cool pack out of freezer.

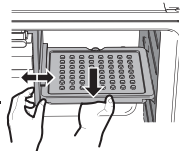


## Bottle Storage Guards

 Lift straight upwards to release the tabs, then pull it out of the refrigerator. (This bottle storage guard is not adjustable; it fits in only one position.)

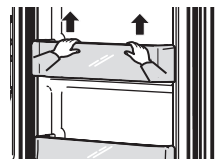

# CLEANING THE REFRIGERATOR

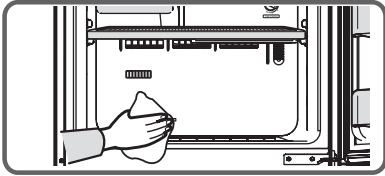 


## Evaporation Slot in Freezer

Wipe the slot area with a clean, dry, soft cloth.




**CAUTION**

 Do not allow any foreign substance or particles to clog these openings.

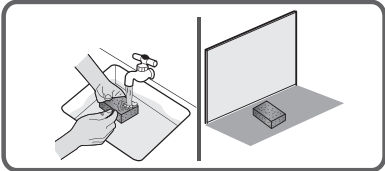



## The Silver Plus Deodorizer

 After removing the deodorizer, lightly wash that with flowing water under the faucet and dry that in the shade.

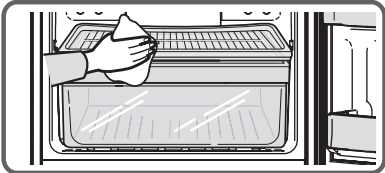

## Interior Parts

  After removing all the shelves, wipe the appliance clean using a clean, soft cloth dampened with warm water and a mild detergent.

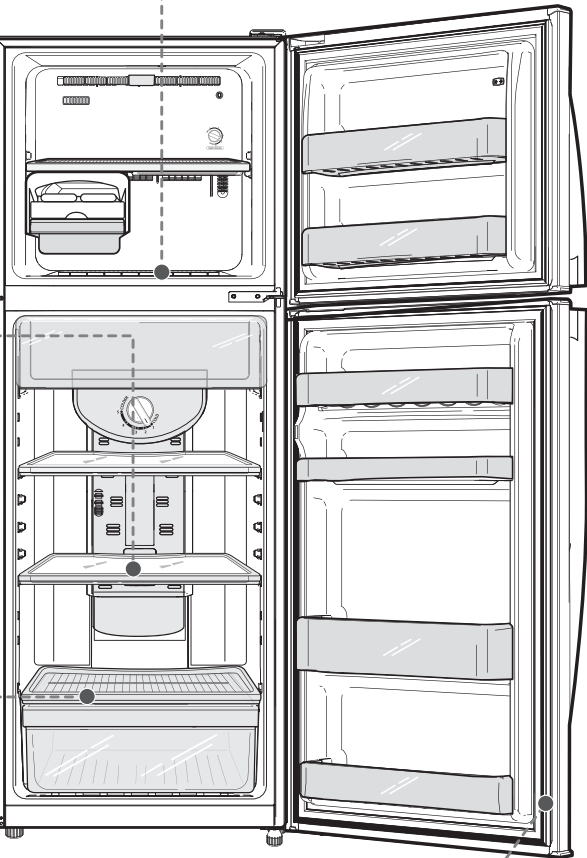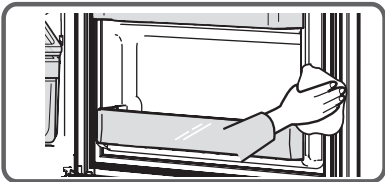

## Door Seals

Clean the door seals often using a clean, soft cloth dampened with warm water and a mild detergent. Be careful not to damage the seals.

 


**CAUTION**

Dirt encrusted door seals prevent the doors from closing properly. Poorly closed doors waste energy and add unnecessary cost to your electricity bills.




## BEFORE CALLING SERVICE

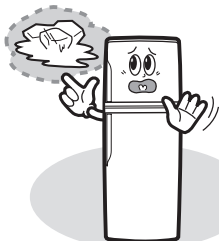

### when the Refrigerator / Freezer is not operating or the food does not freeze sufficiently:

 - Is the plug properly connected?
- Is the power fuse blown?
- Are the temperature controls set properly (not set to "COLDER")?
- Is the appliance exposed to direct sunlight or installed near a heater?
- Does the appliance have enough clearance from the wall in all directions?

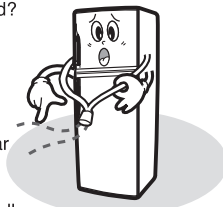


### when you hear a sound like water flowing:


- This sound is generated by movement of the refrigerant and is not a malfunction.



 - Are the temperature controls set properly (not set to "COLDER")?
- If the food is juicy or very moist, is the temperature control set to "COLDER"?
- Is the ambient temperature too low?

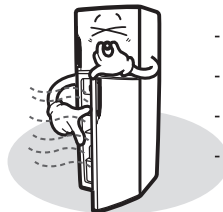


 - Do you have spoiled food in the refrigerator?
- Is all food stored in sealed containers?
- Has fluid collected in the bottom of the vegetable bin?
- Are the freezer evaporation slots clogged?
- Has the evaporation tray at the back of the appliance become foul?

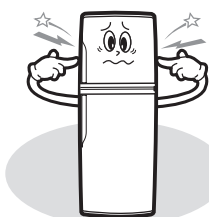


### When there is noise from the unit:

 - Is the refrigerator installed on a flat, stable surface?
- Is the appliance positioned too close to a wall?
- Are there any objects behind or under the refrigerator?
- Is the sound coming from the compressor?

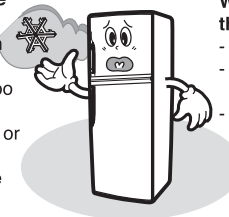

### When frost develops inside the freezer:

 - Does the door seal tightly?
- Are the evaporation slots clogged?
- Is there enough room for efficient air circulation?

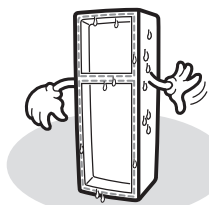

- Is a radiation (air ventilator/cooler) pipe installed?
- Is the ambient temperature high?
- How dew formed on the outside of the appliance because of high humidity?




- Does the door seal tightly?
- Have you left the door open for a long time?
- Is liquid stored without a cover?

## Additional tips for proper usage

 a) Overall space required in use.

Refer to drawing and dimension as bellowed.

Model	Depth(mm)	Width(mm)
RTS2AS/RTS2BS RT2AS/RT2BS RTS24AS/RTS27BS RT24AS/RT27AS RT25S/RT28S	1068	887

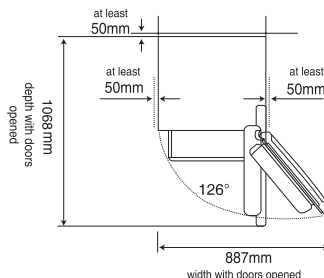

b) Allow the appliance to stand for 2 hours after installation.

c) To get best performance from this product,

- 1) Do not place foods too closely in front of the vents at the rear of appliance as it can obstruct free air circulation in the freezer compartment.
- 2) Wrap the food up properly or place it in airtight containers before placing it into the fridge freezer
- 3) Do not put any newly introduced food for freezing near to already frozen food.

d) Do not place carbonated or fizzy drinks in the freezer compartment.

e) Please observe maximum storage times and expiry dates of frozen goods.

f) There is no need to disconnect the refrigerator from the power supply if you will be away for less than three weeks. But, Remove all the food if you are going away for the three weeks or more. Unplug the refrigerator and clean it, rinse and dry.

g) Most power failures that are corrected in an hour or two will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. Remove all frozen food if the power failure last more then 24 hours.

h) If the key is provided with refrigerator, the key should be kept out of the reach of children and not in the vicinity of the appliance.

i) The appliance might not operate consistently (possibility of defrosting of contents or temperature becoming too warm in the frozen food compartment) when sited for an extended period of time below the cold end of the range of temperatures for which the refrigerating appliance is designed.

j) Do not store food which spoils easily at low temperature, such as bananas, melons.

k) Place the ice tray at the originally provided position by manufacturer in order to achieve optimal ice-freezing.

l) In " No-Frost" appliance, defrosting of freezer is completely automatic. No manual defrost by user is required.

In other appliance, please refer to defrosting procedure as described in each user's manual.

m) Temperature rising during the defrost can comply with ISO requirement. But If you want to prevent an undue rise in the temperature of the frozen food while defrosting the appliance, please wrap the frozen food in several layers of newspaper.

n) Any increase in temperature of frozen food during defrosting can shorten its storage life.

## Ambient Room Temperature Limits

This fridge/freezer is designed to operate in ambient temperatures specified by its temperature class marked on the rating plate.

Temperature Class	Symbol	Ambient Temperature	
		Maximum	Minimum
Extended Temperate	SN	32°C(90°F)	10°C(50°F)
Temperate	N	32°C(90°F)	16°C(61°F)
Subtropical	ST	38°C(100°F)	16°C(61°F)
Tropical	T	43°C(109°F)	16°C(61°F)

**NOTE:** Internal temperatures may be affected by such factors as the location of the fridge/freezer, ambient temperature and the frequency with which you open the door. Adjust the temperature as required to compensate for these factors.

## Energy Saving Tips

- Install the appliance in a cool, dry room with adequate ventilation. Ensure that it is not exposed to direct sunlight and never put it near a direct source of heat (radiator, for example).
- Never block any vents or grilles on the appliance.
- Allow warm food to cool down before placing it in the appliance.
- Put frozen food in the refrigerator to thaw.  
Then you can use the low temperatures of the frozen products to cool food in the refrigerator.
- Do not keep the door of the appliance open for too long when putting food in or taking food out.  
The shorter time for which the door is open, the less ice will form in the freezer.
- Allow clearance to the right, left, back and top when installing. This will help reduce power consumption and keep your energy bills lower.

## Energy- Related Product

- The installation or any service of this appliance is recommended by a qualified technician or service company.
    - Failing to do so may result in electric shock, fire, an explosion, problems with the product, or injury.
  - Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).
  - Do not pull the power cord, when unplugging the power plug.
    - Unplug the power plug by holding the plug firmly and pull straight out from the outlet.
    - Failing to do so may result in electric shock or fire.
  - Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.
    - If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.
  - Do not pull or excessively bend the power cord.
  - Do not twist or tie the power cord.
  - Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.
    - This may result in electric shock or fire.
  - Plug the power plug into the wall socket firmly. Do not use a damaged power plug, damaged power cord or loose wall socket.
    - This may result in electric shock or fire.
  - Do not insert the power plug with wet hands.
    - This may result in electric shock.
  - This appliance must be properly grounded.
  - Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.
    - This may result in electric shock, fire, an explosion, or problems with the product.
    - Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.
  - Do not attempt to repair, disassemble, or modify the appliance yourself.
    - Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.
    - When repairing or reinstalling the appliance is required, contact your nearest service center.
    - Failing to do so may result in electric shock, fire, problems with the product, or injury.
  - If the appliance generates a strange noise, a burning or smell or smoke, unplug the power plug immediately and contact your nearest service centre.
    - Failing to do so may result in electric or fire hazards. Keep ventilation opening in the appliance enclosure or mounting structure clear of mounting structure clear of obstruction.
  - Do not touch the inside walls of the freezer or products stored in the freezer with wet hands.
  - If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service center.
    - Failing to do so may result in electric shock or fire.
  - Do not use a hair dryer to dry the inside of the refrigerator. Do not place a lighted candle in the refrigerator for removing bad odors.
    - This may result in electric shock or fire.
    - Do not use a ventilating fan.
    - A spark may result in an explosion or fire.
  - Do not place food inside the refrigerator in a haphazard way.
    - The food will not cool properly.
- CE Notice (European Union)
- This product has been determined to be in compliance with the Low Voltage Directive (2006/95/EC), the Electromagnetic Compatibility Directive (2004/108/EC) and the ECO-Design Directive (2009/125/EC) implemented by Regulation (EC) No 643/2009 of the European Union.

## Warning for Safety

- Do not bend the power cord excessively or place heavy articles on it.
  - This constitutes a fire hazard.
- Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- Remove any foreign matter or dust from the power plug pins.
  - Otherwise there is a risk of fire.
- The appliance must be positioned so that the plug is accessible after installation.
- Before changing the interior light, unplug the appliance from the power supply.  
If you experience difficulty when changing the light, contact your service center.
- The appliance is not intended for use by children or infirm persons without supervision.  
Children should be supervised to ensure that they do not play with the appliance.
- Do not let children hang on the door. If not, a serious injury may occur.  
If the refrigerator is not to be used for a long period of time, pull out the power plug.
- Do not put a container filled with water on the refrigerator.  
-If spilled, there is a risk of fire or electric shock.

**English**

**Correct Disposal of this Product( Waste Electrical & Electronic Equipment)**  
**(Applicable in the European Union and other European countries with separate collection systems)**

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

### Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Country	Customer Care Center ☎	Web Site
AUSTRALIA	1300 362 603	www.samsung.com
CHILE	800-SAMSUNG(726-7864)	www.samsung.com
CZECH	800 - SAMSUNG (800-726786)	www.samsung.com
FRANCE	01 48 63 00 00	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk www.samsung.com/hk_en/
HUNGARY	06-80-SAMSUNG(726-7864)	www.samsung.com
ITALIA	800-SAMSUNG(726-7864)	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com
MEXICO	01-800-SAMSUNG(726-7864)	www.samsung.com
PHILIPPINES	1-800-10-SAMSUNG(726-7864) 1-800-3-SAMSUNG(726-7864) 1-800-8-SAMSUNG(726-7864) 02-5805777	www.samsung.com
POLAND	0 801 1SAMSUNG(172678) 022-607-93-33	www.samsung.com
RUSSIA	8-800-555-55-55	www.samsung.com
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com
SLOVAKIA	0800 - SAMSUNG(0800-726 786)	www.samsung.com/sk
SOUTH AFRICA	0860-SAMSUNG(726-7864 )	www.samsung.com
SPAIN	902 - 1 - SAMSUNG (902 172 678)	www.samsung.com
TAIWAN	0800-329-999	www.samsung.com
TRINIDAD & TOBAGO	1-800-SAMSUNG(726-7864)	www.samsung.com
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
VENEZUELA	0-800-100-5303	www.samsung.com
GREECE	Household Appliances From mobile and fixed 2106293100	www.samsung.com
NIGERIA	0800 - SAMSUNG (726-7864)	www.samsung.com

In an effort to promote recycling this user manual is printed on recycled paper. DA68-02368Q REV(0.0)

©Samsung Electronics Co., Ltd. All rights reserved.