 


This **Quick Start Guide** is only for quick reference. For more details on advanced functions, you can refer to your user's manual which you will find as pdf document on the CD-ROM. Before you can read the file, please download the free software Acrobat Reader from our website www.rollei.de, English, Service, download.

GETTING TO KNOW YOUR CAMERA

Front View

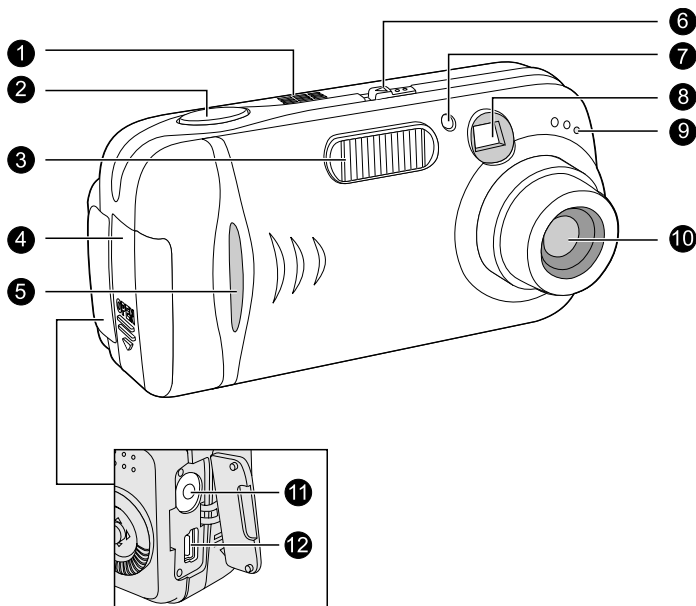

EN

1. Speaker

2. Shutter button

3. Flash

4. Battery cover

5. Function indicator

6. Power switch

7. Self-timer LED

8. Viewfinder window

 
9. Microphone


10. Lens

 
11. DC-in connector

12. USB connector

 
Rear View

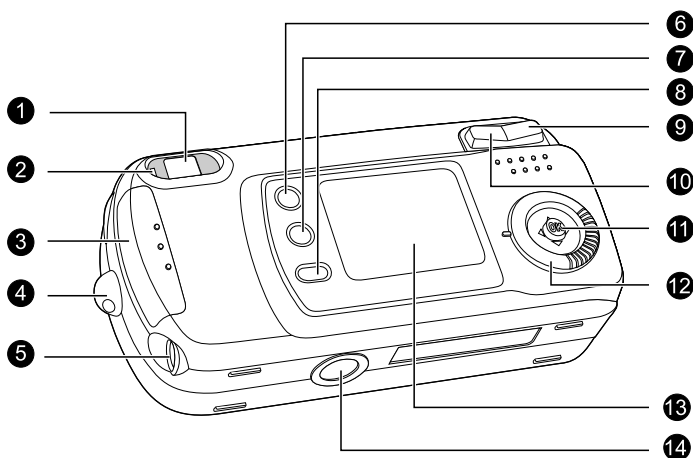





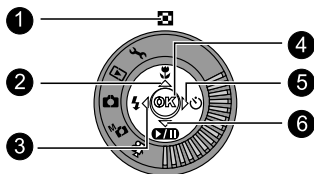

1. Viewfinder
2. LED indicator
3. SD card cover
4. Strap eyelet
5. A/V OUT (Audio/Video Out) terminal
6.  Menu button

 
7.  Delete button
8.  Display button
9.  Zoom in button
10.  Zoom out button
11. Control panel
12. Mode dial
13. LCD monitor
14. Tripod socket

Control Panel



1.  Thumbnail button
 2.  Arrow button (Up)
 3.  Arrow button (Left)
 4. **OK** OK button
 5.  Arrow button (Right)
 6.  Arrow button (Down)
-  Pause button

Mode Dial

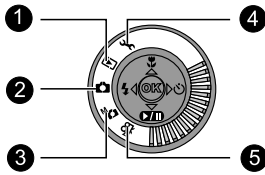






1. Playback Mode

2. Record Mode

3. Manual Record Mode

4. Setup Mode

5. Movie Mode



Mode	Description
1.  Playback Mode	Select this mode to play back your images and video clips.
2.  Record Mode	Select this mode to capture still images.
3.  Manual Record Mode	Select this mode to take still images using manual adjustments.
4.  Setup Mode	Select this mode to choose your preferences on the camera's settings.
5.  Movie Mode	Select this mode to record video (movie) clips

EN

GETTING STARTED

Installing the Batteries

  1. Make sure the camera is turned off.
2. Slide the battery cover.
3. Insert the batteries, noting correct polarity (+ or -).
4. Close the battery cover firmly.

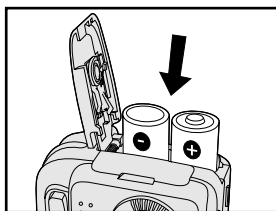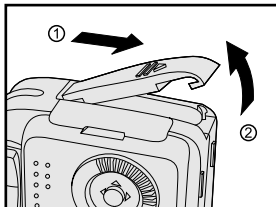


Attaching the Camera Strap

To prevent accidental dropping of the camera, always use the camera strap.


Attach the camera strap as follows:

 1. Thread the small loop of the lens strap through the strap eyelet on the camera.
2. Pull the large loop through the small loop until the strap is firmly secured.

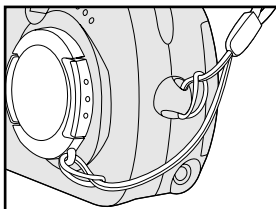


Inserting an SD Memory Card (optional accessory)

 
1. Make sure the camera is turned off.
2. Slide the SD memory card cover open.
3. Insert the SD memory card.
 - The front side of the memory card (printed arrow) should face towards the side with the LCD display.
 - If the card cannot be inserted, check the orientation.
4. Close the SD card cover.

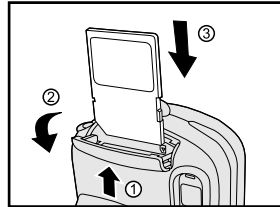

EN


Setting the Date and Time

 1. Slide the **POWER** switch and power on the camera.
2. Set the mode dial to the  Setup mode.
3. Select to the **DATE SETUP** by using the **▲** or **▼** button, and press the **▶** button.
 - To increase the value for each option, press the **▲** button.
 - To decrease the value for each option, press the **▼** button.
 - Press the **▶** button to move to the next item field.
4. When all options are set, press the **OK** button.

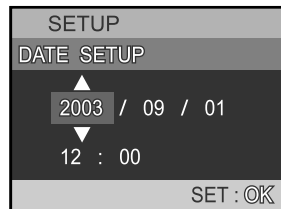

Choosing the Language

 The provided languages are [ENGLISH], [FRANÇAIS], [DEUTSCH], [ESPAÑOL], [ITALIANO], [日本語], [繁體中文], [简体中文]

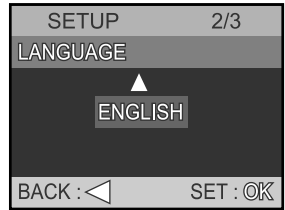


Taking Pictures

EN


Using the LCD Monitor

  1. Turn the camera on by sliding the **POWER** switch.
2. Set the mode dial to the Record mode or the Manual Record mode.
 - By default, the LCD monitor is on.
3. Compose your picture on the display screen.
4. Press the shutter button.

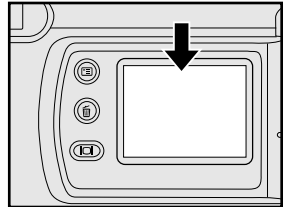





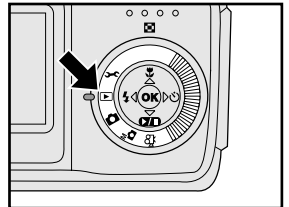






 

Viewing Images



1. Slide the **POWER** switch and power on the camera.
2. Set the mode dial to the Playback mode.
 - The last recorded image appears on the LCD monitor.
3. View and select your recorded images by using the button.
 - To view the previous image, press the button.
 - To view the next image, press the button.



Deleting Images/ Video Clips

To delete one image/video clip at a time:

  1. Set the mode dial to the  Record mode, the  Manual Record mode or the  Playback mode.
 - In the  Record mode or the  Manual Record mode, only the last recorded image can be erased.
 - In the  Playback mode, select the image that you want to view by using the  or  button.
2. Press the  delete button.
3. Select **1 FRAME** by using the  or  button, and then press the **OK** button.
4. “DELETE THIS?” message appears on the image.
 - Use the  or  button to select [YES], and press the **OK** button.
 - If you want to cancel the deletion, select [NO].
5. Repeat the above steps to delete further images if necessary.
 - If all images are deleted, [**i NO IMAGE!**] pops up.

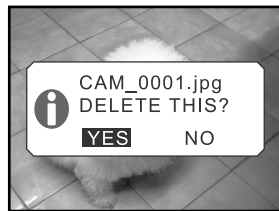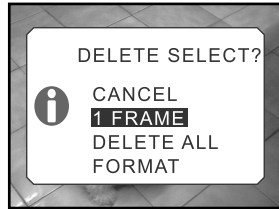

EN

TRANSFERRING RECORDED IMAGES/ VIDEO CLIPS TO YOUR COMPUTER

To transfer images/video clips from the camera to your computer, follow the steps below:

Step 1: Installing the USB driver (only for Windows 98)

Step 2: Connecting the camera to your computer

Step 3: Downloading images/video clips

Step 1: Installing the USB Driver on a Windows PC

EN

The USB driver on the supplied CD-ROM is exclusively for Windows 98. Installing the USB driver on computers running Windows 2000/Me/XP is not necessary.

1. Insert the CD-ROM packaged with the camera into the CD-ROM drive. The welcome screen appears.
2. Click "Install USB Driver". Follow the on-screen instructions to complete the installation. After the USB driver installation is complete, restart your computer.



 
Installing the USB Driver on a Macintosh Computer

Mac OS 8.6 users must install a USB driver. For Mac OS 9.0 or higher, the computer will automatically recognize the camera and load its own USB drivers.

1. Insert the CD-ROM that came with the camera into the CD-ROM drive.
2. Select and double-click "Digital Camera Driver Installer".
3. Select "Install Location" and click "Install".
4. Follow the on-screen instructions to complete the installation and restart your computer.

Step 2: Connecting the Camera to Your Computer

1. Connect one end of the USB cable to an available USB port on your computer.
2. Connect the other end of the USB cable to the USB connector on the camera.
3. Turn the camera on.
4. Look for a new "Removable Disk" icon appearing in the "My Computer" window. Your recorded images/video clips will be in a folder on this "removable disk". (For Mac users, double-click the "untitled" disk on the desktop.)

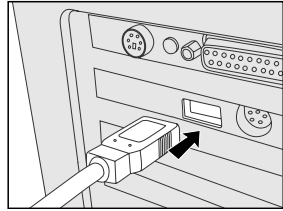

Step 3: Downloading Images/Video Clips

EN

When the camera is turned on and connected to your computer, it is considered to be a disk drive, just like a floppy disk or CD. You can download (transfer) images by copying them from the "removable disk" ("untitled" disk on a Macintosh) to your computer hard drive.

For Computers Running Windows

Open the "removable disk" by double clicking on it. Double click on the folder that contains your recorded images/video clips. Select the images/video clips that you prefer and then choose "Copy" from the "Edit" menu. After that, open the destination location and choose "Paste" from the "Edit" menu.

 
For Computers Running Mac OS

Open the "untitled" disk window and the hard disk or the destination location. Drag and drop from the camera disk to the desired destination.

INSTALLING PHOTOSUITE

To Install PhotoSuite:

1. Insert the CD-ROM packaged with the camera into the CD-ROM drive. The welcome screen appears.
2. Click "Install PhotoSuite". Follow the on-screen instructions to complete the installation.

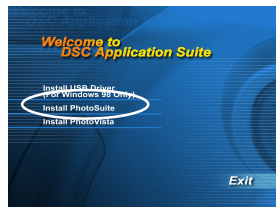

EN

INSTALLING PHOTOVISTA

To Install PhotoVista:

1. Insert the CD-ROM packaged with the camera into the CD-ROM drive. The welcome screen appears.
2. Click "Install PhotoVista". Follow the on-screen instructions to complete the installation.

