



HT-Z120  
HT-TZ122

# Digital Home Theater System

Imagine the possibilities

Thank you for purchasing this Samsung product.

To receive more complete service,  
please register your product at

[www.samsung.com/global/register](http://www.samsung.com/global/register)



# Features

---

## Playback of many disc types

This Home Cinema System allows you to play back various discs, including DVD-VIDEO, CD, MP3-CD, WMA-CD, DivX, CD-R/RW, and DVD±R/RW.

## USB Host support

You can enjoy media files such as pictures, movies and music saved on an MP3 player, digital camera or USB memory stick by connecting the storage device to the USB port of the Home Theatre.

## Dolby Pro Logic II

Dolby Pro Logic II is a form of multi-channel audio signal decoding technology that improves upon existing Dolby Pro Logic.

## TV Screen Saver Function

If the main unit remains in Stop mode for 5 minutes, the Samsung logo appears on the TV screen.

The HT-Z120/TZ122 will automatically switch to the Power Saving mode after 20 minutes in the Screen Saver mode.

## Power Saving Function

The HT-Z120/TZ122 will automatically shut off after 20 minutes in Stop mode.

## Customized TV Screen Display

The HT-Z120/TZ122 allows you to select your favourite image during JPEG or DVD playback and set it as your background wallpaper.

## AV SYNC Function


Video may lag behind the audio if the unit is connected to a digital TV.

To compensate for this, you can adjust the audio delay time to sync up with the video.

## WHAT'S INCLUDED

---

Check for the supplied accessories below.

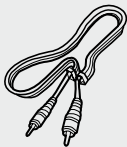


Video Cable



FM Antenna



User's Manual

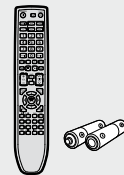

Remote Control  
/ Batteries (AAA size)

# Safety information

## SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK).

NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

**CLASS 1 LASER PRODUCT**  
**KLASSE 1 LASER PRODUKT**  
**LUOKAN 1 LASER LAITE**  
**KLASS 1 LASER APPARAT**  
**PRODUCTO LASER CLASE 1**

### CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**CAUTION** : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

**WARNING** : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**CAUTION** : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.



- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

### CAUTION


- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.

# Safety information


## PRECAUTIONS

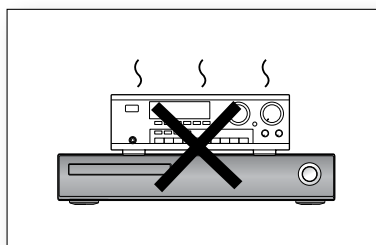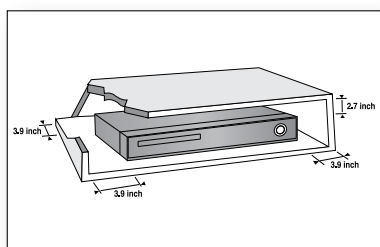


Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (7.5~10 cm). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the disc tray is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

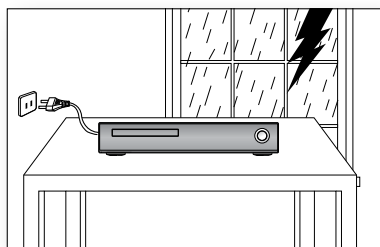

During thunderstorms, disconnect the AC main plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

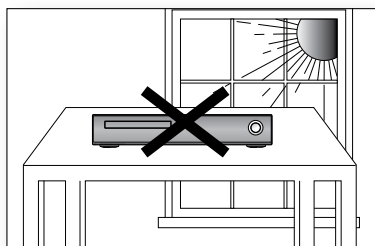


Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and malfunction of the unit.

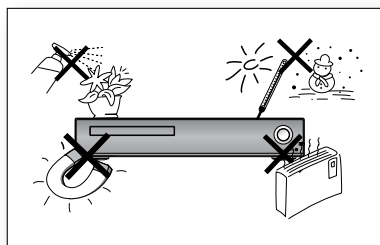

Protect the player from moisture (i.e. vases) , and excess heat (e.g.fireplace) or equipment creating strong magnetic or electric fields (i.e.speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use. Use of this product is for personal use only.

Condensation may occur if your player or disc has been stored in cold temperatures. If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

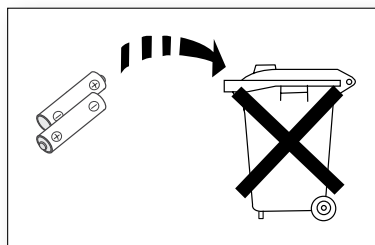

The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash.

|                                       |    |  |
|---------------------------------------|----|--|
| <b>FEATURES</b>                       | 2  | What's included                                |
| <b>2</b>                              |    |  |
| <b>SAFETY INFORMATION</b>             | 3  | Safety Warnings                                |
| <b>3</b>                              | 4  | Precautions                                    |
| <b>GETTING STARTED</b>                | 7  | Before Reading the User's Manual               |
| <b>7</b>                              | 8  | Playable Discs                                 |
|                                       | 8  | Do not use the following types of disc!        |
|                                       | 8  | Copy Protection                                |
|                                       | 9  | Disc Type and Characteristics                  |
| <b>DESCRIPTION</b>                    | 10 | Front Panel                                    |
| <b>10</b>                             | 10 | Display  |
|                                       | 11 | Rear Panel                                     |
| <b>REMOTE CONTROL</b>                 | 12 | Tour of the Remote Control                     |
| <b>12</b>                             | 14 | Setting the Remote Control                     |
| <b>CONNECTIONS</b>                    | 16 | Connecting the Speakers                        |
| <b>16</b>                             | 19 | Connecting the Video Out to your TV            |
|                                       | 20 | P.Scan Function                                |
|                                       | 21 | Connecting Audio from External Components      |
|                                       | 22 | Connecting the FM Antenna                      |
|                                       | 22 | Cooling Fan                                    |
| <b>BEFORE USING YOUR HOME THEATER</b> | 23 | Before using your home theater                 |
| <b>23</b>                             |    |  |
| <b>PLAYBACK</b>                       | 24 | Disc Playback                                  |
| <b>24</b>                             | 25 | MP3/WMA-CD playback                            |
|                                       | 26 | JPEG File Playback                             |
|                                       | 27 | Divx Playback                                  |
|                                       | 29 | Using The Playback Function                    |
|                                       | 37 | Playing Media Files Using The Usb Host Feature |








|                            |    |   |
|----------------------------|----|---|
| <b>SYSTEM SETUP</b>        | 39 | Setting the Language                                  |
| 39                         | 40 | Setting TV Screen Type                                |
|                            | 41 | Setting Parental Controls (Rating Level)              |
|                            | 41 | Setting the Password                                  |
|                            | 42 | Setting The Wallpaper                                 |
|                            | 42 | To Select one of the 3 Wallpaper Settings You've Made |
|                            | 43 | Setting the Speaker Mode                              |
|                            | 43 | Setting the Delay Time                                |
|                            | 45 | Setting the Test Tone                                 |
|                            | 45 | Setting the Audio                                     |
|                            | 46 | Setting the DRC (Dynamic Range Compression)           |
|                            | 47 | Setting the AV SYNC                                   |
|                            | 48 | Sound field (DSP)/EQ Function                         |
|                            | 48 | Dolby Pro Logic II Mode                               |
|                            | 49 | Dolby Pro Logic II Effect                             |
|                            | 49 | P.BASS  |
|                            | 49 | Connecting Microphone                                 |
| <b>RADIO</b>               | 50 | Listening To Radio                                    |
| 50                         | 50 | Presetting Stations                                   |
| <b>CONVENIENT FUNCTION</b> | 51 | Sleep Timer Function                                  |
| 51                         | 51 | Adjusting Display Brightness                          |
|                            | 51 | Mute Function   |
|                            | 52 | CD Ripping  |
| <b>TROUBLESHOOTING</b>     | 53 | Troubleshooting                                       |
| 53                         |    |   |
| <b>LANGUAGE CODE LIST</b>  | 55 | Language Code List                                    |
| 55                         |    |   |
| <b>APPENDIX</b>            | 56 | Cautions on Handling and Storing Discs                |
| 56                         | 57 | Specifications  |
| 56                         |    |   |

# Getting Started


## BEFORE READING THE USER'S MANUAL

Make sure to check the following terms before reading the user manual.

### Icons that will be used in manual

| Icon  | Term    | Definition   |
|---|---------|--|
|  | DVD     | This involves a function available with DVD or DVD-R/DVD-RW discs that have been recorded and finalised in Video Mode. |
|  | CD      | This involves a function available with a data CD (CD-R or CD-RW).   |
|  | MP3     | This involves a function available with CD-R/-RW discs.  |
|  | JPEG    | This involves a function available with CD-R/-RW discs.  |
|  | DivX    | This involves a function available with MPEG4 discs. (DVD±R/RW, CD-R or CD-RW)   |
|  | Caution | This involves a case where a function does not operate or settings may be cancelled.                                   |
|  | Note    | This involves tips or instructions on the page that help each function operate.  |



- In this manual, the instructions marked with "DVD (  )" are applicable to DVD-VIDEO and DVD-R/-RW discs that have been recorded in Video Mode and then finalised. Where a particular DVD type is mentioned, it is indicated separately.
- If a DVD-R/-RW disc has not been recorded properly in DVD Video format, it will not be playable.

### About the use of this user's manual

- 1) Be sure to be familiar with Safety Instructions before using this product. (See pages 3~4)
- 2) If a problem occurs, check the Troubleshooting. (See pages 53~54)

### Copyright

©2008 Samsung Electronics Co.,Ltd.

All rights reserved; No part or whole of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.



# Getting started



**DVD (Digital Versatile Disc)** offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie cinema or concert hall.



DVD players and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is given on the rear panel of the player.

(Your DVD player will only play DVDs that are labelled with identical region codes.)

## PLAYABLE DISCS

| Disc Type | Mark (Logo) | Recorded Signals | Disc Size | Max. Playing Time               |
|-----------|-------------|------------------|-----------|---------------------------------|
| DVD-VIDEO |             | VIDEO            | 12 cm     | Approx. 240 min. (single-sided) |
|           |             |                  |           | Approx. 480 min. (double-sided) |
|           |             |                  | 8 cm      | Approx. 80 min. (single-sided)  |
|           |             |                  |           | Approx. 160 min. (double-sided) |
| AUDIO-CD  |             | AUDIO            | 12 cm     | 74 min.                         |
|           |             |                  | 8 cm      | 20 min.                         |
| DivX      |             | AUDIO + VIDEO    | 12 cm     | —                               |
|           |             |                  | 8 cm      | —                               |

## DO NOT USE THE FOLLOWING TYPES OF DISC!

- CD-G, CD-I, CD-ROM, DVD-ROM and DVD-RAM discs cannot be played on this player. If such discs are played, a <WRONG DISC FORMAT> message appears on the TV screen.
- DVD discs purchased abroad may not play on this player. If such discs are played, a <CAN'T PLAY THIS DISC PLEASE, CHECK REGION CODE> message appears on the TV screen.

## COPY PROTECTION

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

## DISC TYPE AND CHARACTERISTICS

---

This product does not support Secure (DRM) Media files.

### ❖ CD-R Discs

- Some CD-R discs may not be playable depending on the disc recording device (CD-Recorder or PC) and the condition of the disc.
- Use a 650MB/74 minute CD-R disc.  
Do not use CD-R discs over 700MB/80 minutes as they may not be played back.
- Some CD-RW (Rewritable) media, may not be playable.
- Only CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

### ❖ CD-R MP3 Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the ".mp3" and ".MP3" extensions can be played.
- Only a consecutively written multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- A maximum of 500 tracks can be played per CD.
- A maximum of 300 folders can be played per CD.

### ❖ CD-R JPEG Discs

- Only files with the ".jpg" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- JPEG file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 9,999 images can be stored on a single CD.
- When playing a Kodak/Fuji Picture CD, only the JPEG files in the picture folder can be played.
- Picture discs other than Kodak/Fuji Picture CDs may take longer to start playing or may not play at all.

### ❖ DVD±R/RW, CD-R/RW DivX Discs


- Software updates for incompatible formats are not supported.  
(Example : QPEL, GMC, resolution higher than 800 x 600 pixels, etc.)
- Sections with a high frame rate might not be played while playing a DivX file.
- DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified or DivX Ultra Certified device that plays DivX video.

---

 ■ DTS Audio is not supported.


# Description

## FRONT PANEL

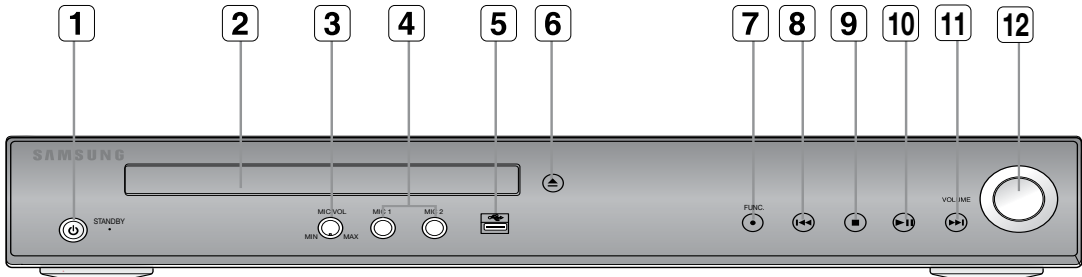


|   |                    |   |                                |    |                              |
|---|--------------------|---|--------------------------------|----|------------------------------|
| 1 | POWER(⏻) BUTTON    | 5 | USB CONNECTOR                  | 9  | STOP (■) BUTTON              |
| 2 | DISC TRAY          | 6 | OPEN/CLOSE BUTTON              | 10 | PLAY/PAUSE (▶  ) BUTTON      |
| 3 | MIC VOLUME CONTROL | 7 | FUNCTION BUTTON                | 11 | TUNING UP & SKIP (▶▶) BUTTON |
| 4 | MIC 1, MIC 2       | 8 | TUNING DOWN & SKIP (◀◀) BUTTON | 12 | VOLUME CONTROL               |

## DISPLAY

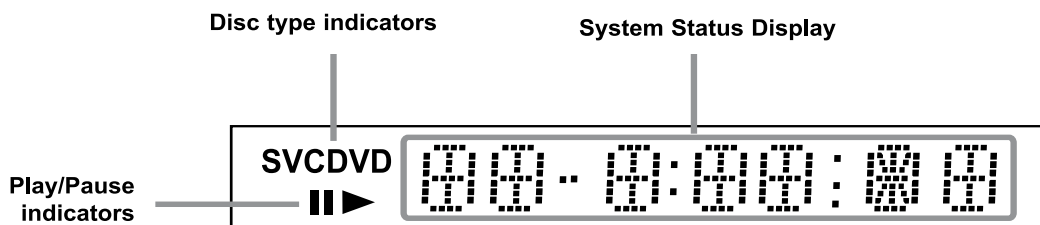


## REAR PANEL

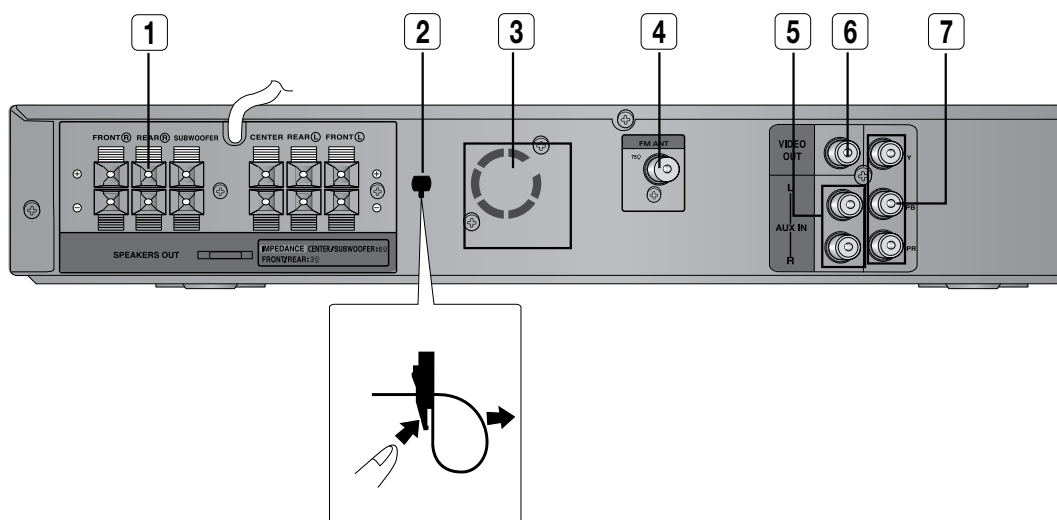




|          |                                     |  |
|----------|-------------------------------------|--|
| <b>1</b> | <b>SPEAKER OUTPUT CONNECTORS</b>    | Connect the front, centre, rear speakers and subwoofer.  |
| <b>2</b> | <b>CLAMP-WIRE</b>                   | Fasten the speaker wires.  |
| <b>3</b> | <b>COOLING FAN</b>                  | The fan always revolves when the power is on. Ensure a minimum of 4 inches of clear space on all sides of the fan when installing the product. |
| <b>4</b> | <b>FM 75Ω COAXIAL JACK</b>          | Connect the FM antenna.  |
| <b>5</b> | <b>AUX IN JACKS</b>                 | Connect to the 2CH analogue output of an external device (such as a VCR)   |
| <b>6</b> | <b>VIDEO OUTPUT JACK</b>            | Connect your TV's Video Input jack (VIDEO IN) to the VIDEO OUT jack.   |
| <b>7</b> | <b>COMPONENT VIDEO OUTPUT JACKS</b> | Connect a TV with Component video inputs to these jacks.   |



# Remote control
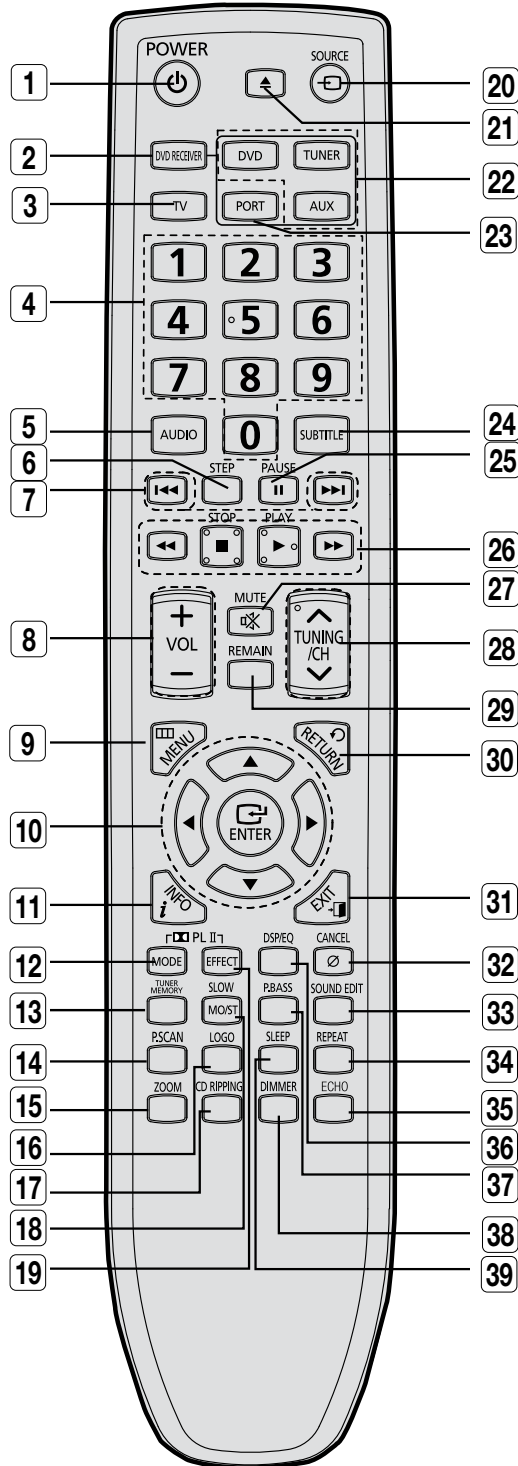
## TOUR OF THE REMOTE CONTROL



|    |   |    |  |
|----|---|----|--|
| 1  | POWER button  | 21 | ⏏ OPEN/CLOSE button  |
| 2  | DVD RECEIVER button   |    |  DVD button     |
| 3  | TV button   | 22 |  TUNER button   |
| 4  | Number (0~9) buttons  |    |  AUX button     |
| 5  | AUDIO   | 23 | PORT button  |
| 6  | STEP button   | 24 | SUBTITLE   |
| 7  | Tuning Preset/CD Skip buttons   | 25 | PAUSE button   |
| 8  | VOLUME button   | 26 |  PLAY button    |
| 9  | MENU button   |    |  STOP button    |
| 10 | Cursor/ENTER button   |    |  SEARCH buttons |
| 11 | INFO button   | 27 | MUTE button  |
| 12 |  PL II MODE button     | 28 | TUNING/CH button   |
| 13 | TUNER MEMORY  | 29 | REMAIN button  |
| 14 | P.SCAN button   | 30 | RETURN button  |
| 15 | ZOOM button   | 31 | EXIT button  |
| 16 | LOGO button   | 32 | CANCEL button  |
| 17 | CD RIPPING button   | 33 | SOUND EDIT button  |
| 18 | SLOW ,MO/ST button  | 34 | REPEAT button  |
| 19 |  PL II EFFECT button | 35 | ECHO button  |
| 20 | SOURCE button   | 36 | DSP/EQ button  |
|    |   | 37 | P.BASS button  |
|    |   | 38 | DIMMER button  |
|    |   | 39 | SLEEP button   |

### Insert Remote Batteries

 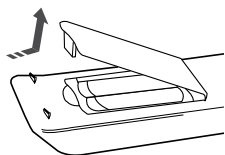

1. Remove the battery cover in the direction of the arrow.

2. Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and -).

3. Replace the battery cover.



#### Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity : (+) to (+) and (-) to (-).
- Use the correct type of batteries. Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose the batteries to heat or a flame.

# Remote control

## SETTING THE REMOTE CONTROL


You can control certain functions of your TV with this remote control.

### When operating a TV with the remote control

1. Press the **TV** button to set the remote to TV mode.
2. Press the **POWER** button to turn on the TV.
3. While holding down the **POWER** button, enter the code corresponding to your brand of TV.
  - If there is more than one code listed for your TV in the table, enter one at a time to determine which code works.

#### Example : For a Samsung TV

While holding down the **POWER** button, use the **number** buttons to enter 00, 15, 16, 17 or 40.

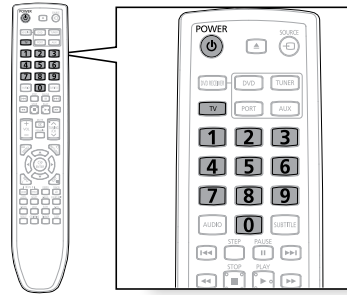

4. If the TV turns off, the setting is complete.
  - You can use the TV POWER, VOLUME, CHANNEL, and Numeric buttons (0-9).




- The remote control may not work on some brands of TV's. Also, some operations may not be possible depending on your brand of TV.
- If you do not set the remote control with the code for your brand of TV, the remote control will work on a Samsung TV by default.

### Operation Range of the Remote Control

The remote control can be used up to approximately 7 meters in a straight line.

It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

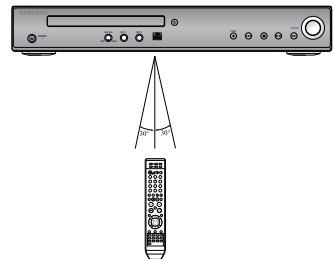

## TV Brand Code List

| No. | Brand                   | Code  | No. | Brand                    | Code  |
|-----|-------------------------|---|-----|--------------------------|---|
| 1   | Admiral (M.Wards)       | 56, 57, 58  | 44  | MTC                      | 18  |
| 2   | A Mark                  | 01, 15  | 45  | NEC                      | 18, 19, 20, 40, 59, 60                                |
| 3   | Anam                    | 01, 02, 03, 04, 05, 06, 07, 08, 09, 10, 11,<br>12, 13, 14   | 46  | Nikei                    | 03  |
|     |                         |   | 47  | Onking                   | 03  |
| 4   | AOC                     | 01, 18, 40, 48  | 48  | Onwa                     | 03  |
| 5   | Bell & Howell (M.Wards) | 57, 58, 81  | 49  | Panasonic                | 06, 07, 08, 09, 54, 66, 67, 73, 74                    |
| 6   | Brocsonic               | 59, 60  | 50  | Penney                   | 18  |
| 7   | Candle                  | 18  | 51  | Philco                   | 03, 15, 17, 18, 48, 54, 59, 62, 69, 90                |
| 8   | Cetronic                | 03  | 52  | Philips                  | 15, 17, 18, 40, 48, 54, 62, 72                        |
| 9   | Citizen                 | 03, 18, 25  | 53  | Pioneer                  | 63, 66, 80, 91  |
| 10  | Cinema                  | 97  | 54  | Portland                 | 15, 18, 59  |
| 11  | Classic                 | 03  | 55  | Proton                   | 40  |
| 12  | Concerto                | 18  | 56  | Quasar                   | 06, 66, 67  |
| 13  | Contec                  | 46  | 57  | Radio Shack              | 17, 48, 56, 60, 61, 75                                |
| 14  | Coronado                | 15  | 58  | RCA/Proscan              | 18, 59, 67, 76, 77, 78, 92, 93, 94                    |
| 15  | Craig                   | 03, 05, 61, 82, 83, 84  | 59  | Realistic                | 03, 19  |
| 16  | Croslex                 | 62  | 60  | Sampo                    | 40  |
| 17  | Crown                   | 03  | 61  | Samsung                  | 00, 15, 16, 17, 40, 43, 46, 47, 48, 49,<br>59, 60, 98 |
| 18  | Curtis Mates            | 59, 61, 63  |     |                          |   |
| 19  | CXC                     | 03  | 62  | Sanyo                    | 19, 61, 65  |
| 20  | Daewoo                  | 02, 03, 04, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24,<br>25, 26, 27, 28, 29, 30, 32, 34, 35, 36, 48, 59, 90 | 63  | Scott                    | 03, 40, 60, 61  |
|     |                         |   | 64  | Sears                    | 15, 18, 19  |
| 21  | Daytron                 | 40  | 65  | Sharp                    | 15, 57, 64  |
| 22  | Dynasty                 | 03  | 66  | Signature 2000 (M.Wards) | 57, 58  |
| 23  | Emerson                 | 03, 15, 40, 46, 59, 61, 64, 82, 83, 84, 85  | 67  | Sony                     | 50, 51, 52, 53, 55                                    |
| 24  | Fisher                  | 19, 65  | 68  | Soundesign               | 03, 40  |
| 25  | Funai                   | 03  | 69  | Spectricon               | 01  |
| 26  | Futuretech              | 03  | 70  | SSS                      | 18  |
| 27  | General Electric (GE)   | 06, 40, 56, 59, 66, 67, 68  | 71  | Sylvania                 | 18, 40, 48, 54, 59, 60, 62                            |
| 28  | Hall Mark               | 40  | 72  | Symphonic                | 61, 95, 96  |
| 29  | Hitachi                 | 15, 18, 50, 59, 69  | 73  | Tatung                   | 06  |
| 30  | Inkel                   | 45  | 74  | Techwood                 | 18  |
| 31  | JC Penny                | 56, 59, 67, 86  | 75  | Teknika                  | 03, 15, 18, 25  |
| 32  | JVC                     | 70  | 76  | TMK                      | 18, 40  |
| 33  | KTV                     | 59, 61, 87, 88  | 77  | Toshiba                  | 19, 57, 63, 71  |
| 34  | KEC                     | 03, 15, 40  | 78  | Vidtech                  | 18  |
| 35  | KMC                     | 15  | 79  | Videch                   | 59, 60, 69  |
| 36  | LG (Goldstar)           | 01, 15, 16, 17, 37, 38, 39, 40, 41, 42, 43, 44  | 80  | Wards                    | 15, 17, 18, 40, 48, 54, 60, 64                        |
| 37  | Luxman                  | 18  | 81  | Yamaha                   | 18  |
| 38  | LXI (Sears)             | 19, 54, 56, 59, 60, 62, 63, 65, 71  | 82  | York                     | 40  |
| 39  | Magnavox                | 15, 17, 18, 48, 54, 59, 60, 62, 72, 89  | 83  | Yupiteru                 | 03  |
| 40  | Marantz                 | 40, 54  | 84  | Zenith                   | 58, 79  |
| 41  | Matsui                  | 54  | 85  | Zonda                    | 01  |
| 42  | MGA                     | 18, 40  | 86  | Dongyang                 | 03, 54  |
| 43  | Mitsubishi/MGA          | 18, 40, 59, 60, 75  |     |                          |   |




# Connections

---

This section involves various methods of connecting the Digital Home Cinema to other external components. Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

## CONNECTING THE SPEAKERS

---

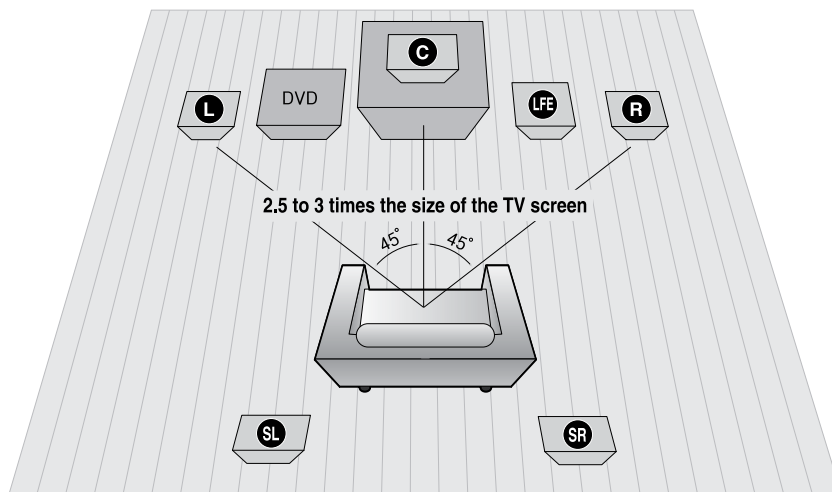

### Position of the DVD Player

Place it on a stand or cabinet shelf.

### Selecting the Listening Position

The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV.

Example : For 32" TV's 2~2.4m (6~8feet)

For 55" TV's 3.5~4m (11~13feet)

### Front Speakers **L** **R**

Place these speakers in front of your listening position, facing inwards (about 45°) toward you.

Place the speakers so that their tweeters will be at the same height as your ear.

Align the front face of the front speakers with the front face of the Centre speaker or place them slightly in front of the Centre speakers.

### Centre Speaker **C**

It is best to install it at the same height as the front speakers. You can also install it directly over or under the TV.

### Rear Speakers **SL** **SR**

Place these speakers behind your listening position. If there isn't enough room, place these speakers so they face each other. Place them about 60 to 90cm (2 to 3feet) above your ear, facing slightly downward.




\* Unlike the front and Centre speakers, the rear speakers are used to handle mainly sound effects and sound will not come from them all the time.

### Subwoofer **LFE**

The position of the subwoofer is not so critical. Place it anywhere you like.

## Connecting the Front, Rear, Centre and Subwoofer Speakers

1. Press down the terminal tab on the back of the speaker.
2. Insert the black wire into the black terminal (-) and the red wire into the red terminal(+), and then release the tab.
3. Connect the other end of the speaker cable to the connecting jacks on the back of the Home Theatre.
  - Make sure the colors of the speaker terminals match the speaker wire.

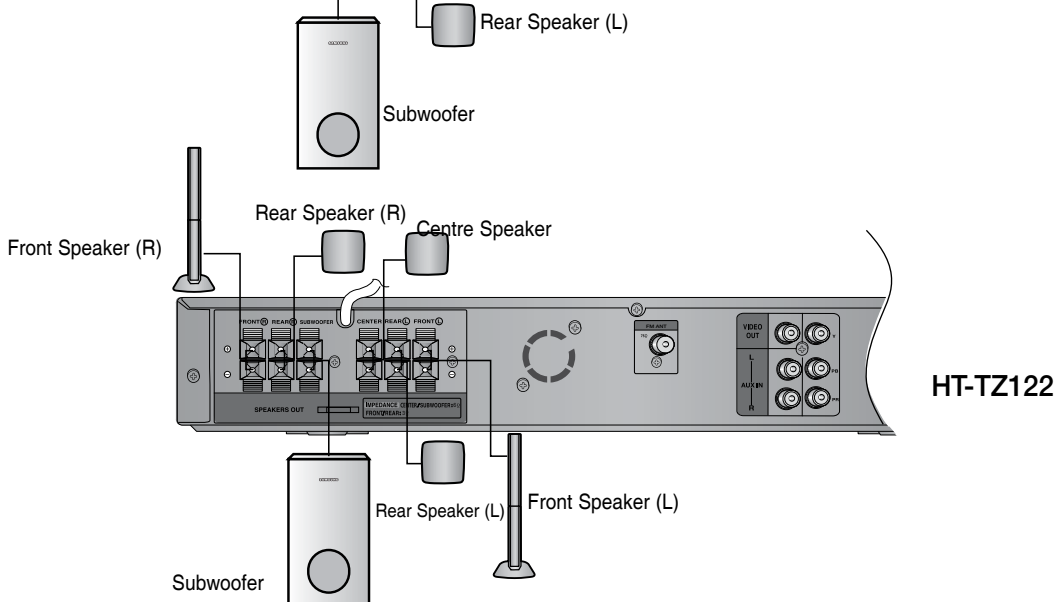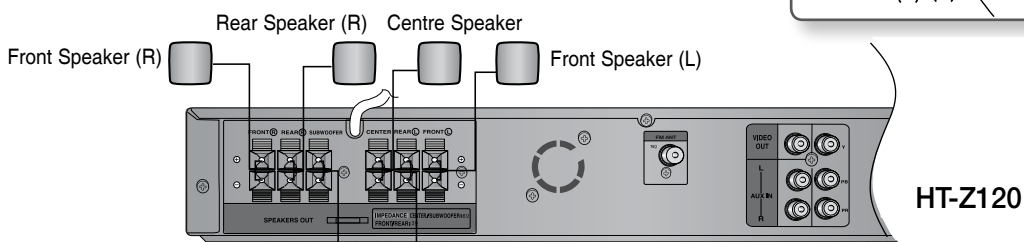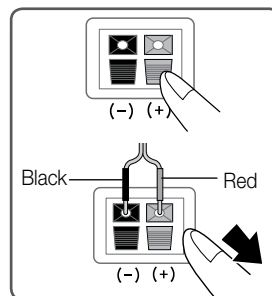

- ! Do not let children play with or near the speakers. They could get hurt if a speaker falls.
- When connecting the speaker wires to the speakers, make sure that the polarity (+/-) is correct.
- Keep the subwoofer speaker out of reach of children so as to prevent them from inserting their hands or alien substances into the duct (hole) of the subwoofer speaker.
- Do not hang the subwoofer on a wall through the duct (hole).

- ✍ If you place a speaker near your TV set, screen colour may be distorted because of the magnetic field generated by the speaker. If this occurs, place the speaker away from your TV set.





# Connections

## Front/Rear Tallboy Stand

### How to Install the Speaker on the Stand


HT-TZ122 - Front Speakers

1. Turn the **STAND** upside-down and connect it to the **STAND BASE**.
2. Insert five small **SCREWS** into the five holes marked with arrows using a screwdriver as shown in the illustration.
3. Connect upper **SPEAKER** to the assembled **STAND**.
4. Insert another large **SCREW** into the hole on the rear of the speaker marked with arrow using a screwdriver.

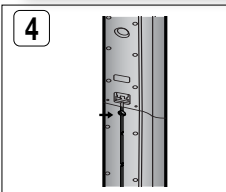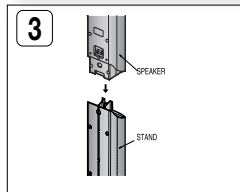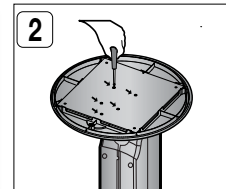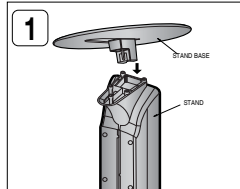

## CONNECTING THE VIDEO OUT TO YOUR TV

Choose one of the two methods for connecting to a TV.

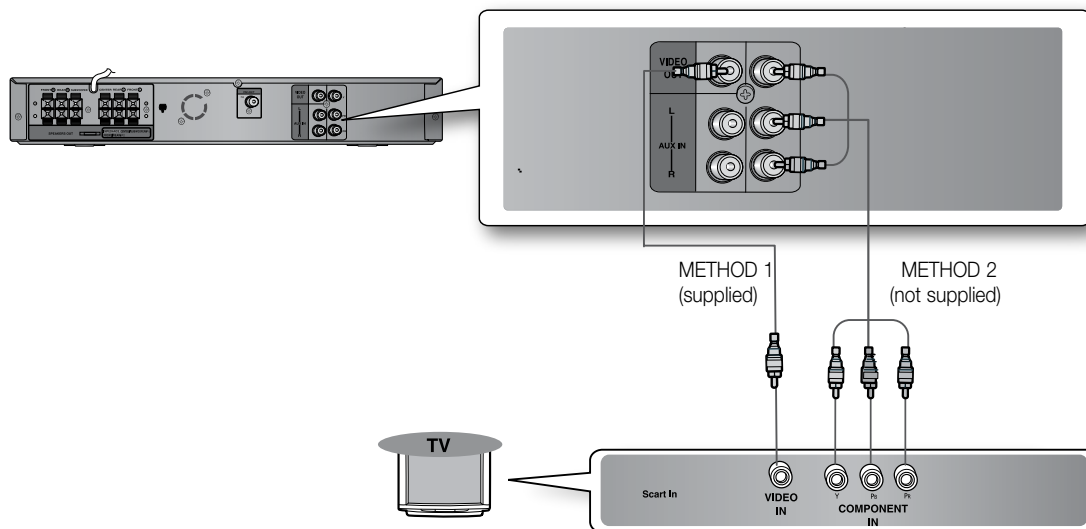

### METHOD 1 : Composite Video

Connect the supplied video cable from the VIDEO OUT jack on the back panel of the system to the VIDEO IN jack on your television.

### METHOD 2 : Component (Progressive Scan)Video

If your television is equipped with Component Video inputs, connect a component video cable (not supplied) from the Pr, Pb and Y jacks on the back panel of the system to the corresponding jacks on your television.



▪ When the Progressive scan mode is selected, the VIDEO output does not feed any signals.



# Connections

## P.SCAN(PROGRESSIVE SCAN) FUNCTION

Unlike regular Interlace Scan, in which two fields of picture information alternate to create the entire picture (odd scan lines, then even scan lines), Progressive Scan uses one field of information (all lines displayed in one pass) to create a clear and detailed picture without visible scan lines.

1. Press STOP button.
  - If playing a disc, press the **STOP** button twice so that "**STOP**", appears on the display.
2. Press and hold P.SCAN button on the remote control for over 5 seconds.
  - Pressing and holding the button for over 5 seconds will select "**P.SCAN**" and "**I.SCAN**" alternately.
  - When you select P.SCAN, "**P.SCAN**" will appear on the display.
  - To set P.Scan mode for DivX discs, press the **P.SCAN** button on the remote control for more than 5 seconds with no disc in the unit ("NO DISC" on the display), then load the DivX disc and play.

### What is Progressive (or Non-Interlaced) Scanning?

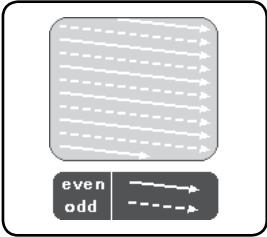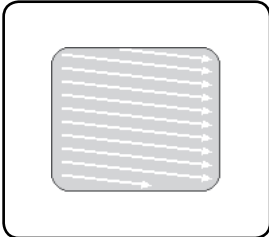
| Interlaced Scan (1 FRAME = 2 FIELDS)  | Progressive Scan (FULL FRAME)  |
|---|--|
|  <p>In interlaced-scan video, a frame consists of two interlaced fields (odd and even), where each field contains every other horizontal line in the frame. The odd field of alternating lines is displayed first, and then the even field is displayed to fill in the alternating gaps left by the odd field to form a single frame. One frame, displayed every 1/30th of a second, contains two interlaced fields, thus a total of 60 fields are displayed every 1/60th of a second. The interlaced scanning method is intended for capturing a still object.</p> |  <p>The progressive scanning method scans one full frame of video consecutively down the screen, line by line. An entire image is drawn at one time, as opposed to the interlaced scanning process by which a video image is drawn in a series of passes. The progressive scanning method is desirable for dealing with moving objects.</p> |

- Depending on the capabilities of your TV, this function may not work.

## CONNECTING EXTERNAL COMPONENTS

### Connecting an External Analogue Component

Analogue signal components such as a VCR.

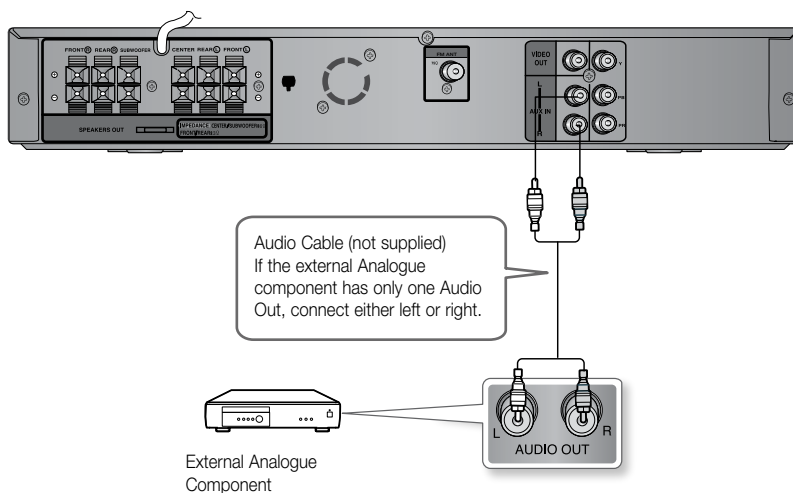

1. Connect AUX IN (Audio) on the Home Cinema to the Audio Out of the external Analogue component.
  - Be sure to match connector colours.
2. Press the **AUX** button on the remote control to select **AUX** input.
  - You can also use the **FUNCTION** button on the main unit.  
The mode switches as follows :  
**USB→FM→DVD/CD → AUX**





- You can connect the Video Output jack of your VCR to the TV, and connect the Audio Output jacks of the VCR to this product.

# Connections

## CONNECTING THE FM ANTENNA

1. Connect the FM antenna supplied to the FM 75Ω COAXIAL Jack.
2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.

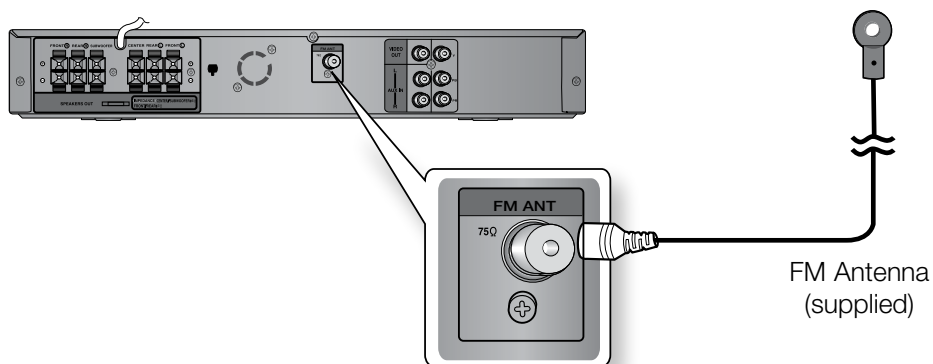


-  This unit does not receive AM broadcasts.

## Cooling Fan

The cooling fan supplies cool air to the unit to prevent overheating. Please observe the following cautions for your safety.


- Make sure the unit is well-ventilated. If the unit has poor ventilation, the temperature inside the unit may rise and may damage it.
- Do not obstruct the cooling fan or ventilation holes. (If the cooling fan or ventilation holes are covered with a newspaper or cloth, heat may build up inside the unit and fire may result.)

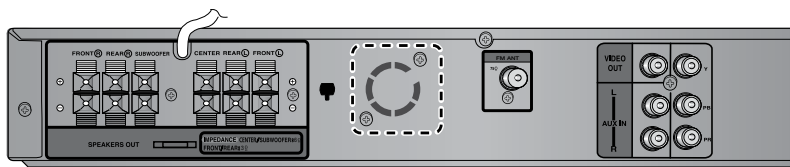

# Before using your home theater

The DVD Home Theater's remote can be used to control Samsung TV's.

1. Plug the main unit's power cord into the AC power supply.

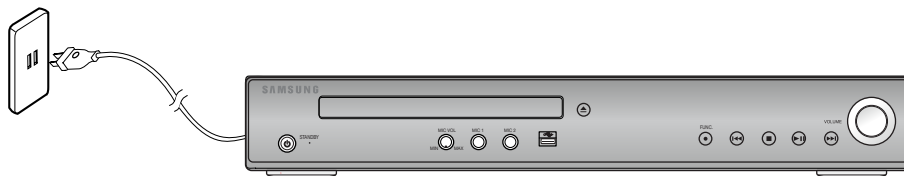


2. Press the **DVD RECEIVER** button to operate the DVD Home Theater.

3. Press the **FUNCTION** button on the main unit or **DVD** button on the remote to enable DVD/CD playback.

4. Press the **TV** button to set the remote to TV mode.

5. Press the **POWER** button to turn on your Samsung TV with this remote.

6. Press the **SOURCEs** button to select VIDEO mode on your TV.

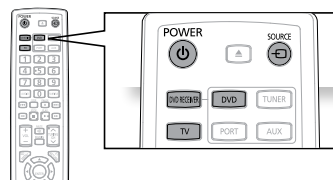





# Playback

## DISC PLAYBACK



 1. Press the **OPEN/CLOSE** (▲) button to open the disc tray.
2. Load a disc.
  - Place a disc gently into the tray with the disc's label facing up.
3. Close the compartment by pressing the **OPEN/CLOSE** (▲) button again.
  - Playback starts automatically.

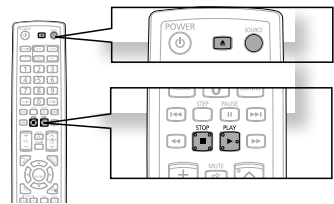

### To stop playback, press the **STOP** (⏏) button during playback.

- If pressed once, **PRESS PLAY** is displayed and the stop position will be stored in memory. If the **PLAY** (⏪) button or **ENTER** button is pressed, playback resumes from the stop position. (This function works only with DVDs.)
- If pressed twice, **STOP** is displayed, and if the **PLAY** (⏪) button is pressed, playback starts from the beginning.

### To temporarily pause playback, press the **PAUSE** (⏏) button during playback.

- To resume playback, press the **PLAY** (⏪) button.




- The initial screen may appear different, depending on the content of the disc.
- Pirated discs will not run in this player because it violates the CSS (Content Scrambling System : a copy protection system) recommendations.

## MP3/WMA-CD PLAYBACK

Data CDs (CD-R, CD-RW) encoded in MP3/WMA format can be played.




1. Place the MP3/WMA disc on the disc tray.
  - The MP3/WMA menu screen will appear and playback will start.
  - The appearance of the menu depends on the MP3/WMA disc.
  - WMA-DRM files cannot be played.
2. In Stop mode, use the Cursor ▲,▼,◀,▶ button to select the album, and then press the **ENTER** button.
  - Use the Cursor ▲,▼ button to select the track.
3. To change the album, use the Cursor ▲,▼,◀,▶ button to select another album in Stop mode, and then press the **ENTER** button.
4. Press the **STOP** (■) button to stop playback.

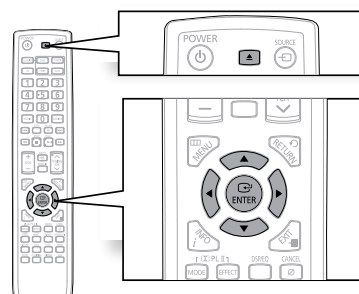

- Some MP3/WMA-CDs may not play, depending on the recording mode.
- Table of contents of a MP3-CD varies depending on the MP3/WMA track format recorded on the disc.

### To play a file icon in the screen,

- Press the Cursor ▲,▼,◀,▶ button when it is in Stop mode and select a desired icon from the top part of the menu.

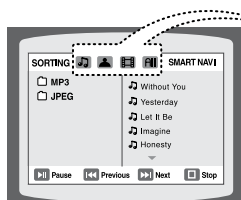

**Music File Icon** : To play music files only, select the icon.



**Image File Icon** : To view image files only, select the icon.



**Movie File Icon** : To view movie files only, select the icon.



**All File Icon** : To view all files select the icon.

# Playback

## JPEG FILE PLAYBACK

Images captured with a digital camera or camcorder, or JPEG files on a PC can be stored on a CD and then played back with this Home Theater.

### Slide Mode



Place the JPEG disc on the disc tray.

- Playback starts automatically. Each image is displayed for 5 seconds and then the next image is displayed.



Press the **◀◀,▶▶** button to skip to the next slide.

- Each time the button is pressed, the slide moves backward or forward.

### Rotate/Flip Function



Press the Cursor **▲,▼,◀,▶** button during playback.

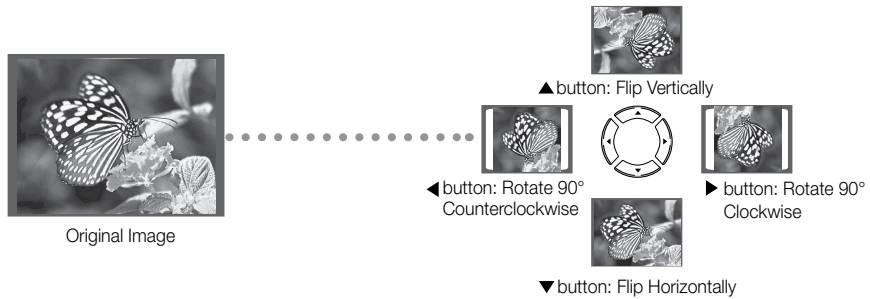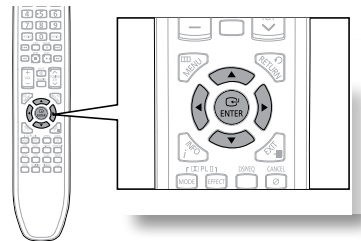

- The maximum resolutions supported by this product are 5120 x 3480 (or 19.0 MPixel) for standard JPEG files and 2048 x 1536 (or 3.0 MPixel) for progressive image files.

## DIVX PLAYBACK


The functions on this page apply to DivX disc playback.

### Skip Forward/Back



During playback, press the **◀▶** button.

- Goes to the next file whenever you press the **▶▶** button, if there are over 2 files in the disc.
- Goes to the previous file whenever you press the **◀◀** button, if there are over 2 files in the disc.

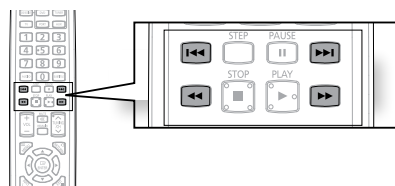

### Fast Playback



During playback, press the **◀▶** button.

To play back the disc at a faster speed, press the **◀◀** or **▶▶** button during playback.


- Each time you press either button, the playback speed will change as follows:  
**2x → 4x → 8x → 32x → Normal.**



### 5 Minute Skip function

During playback, press the Cursor **◀▶** button.

- Playback skips 5 minutes forward whenever you press the Cursor **▶** button.
- Playback skips 5 minutes back whenever you press the Cursor **◀** button.

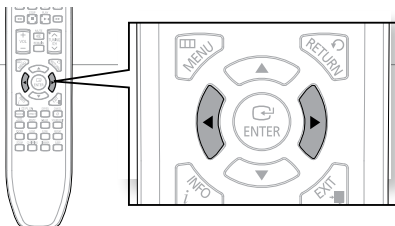


### Audio Display



Press the **AUDIO** button.

- If there are multiple audio languages on a disc, you can toggle between them.
- Each time you press the button, your selection will toggle between **AUDIO (1/N, 2/N ...)** and .

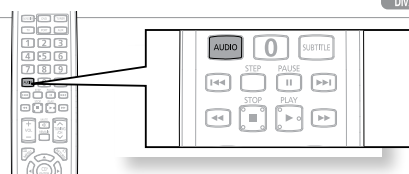


▪ is displayed when there is one supported language in the disc.

### Subtitle Display



Press the **SUBTITLE** button.

- Each time you press the button, your selection will toggle between **SUBTITLE (1/N, 2/N ...)** and **SUBTITLE OFF**.
- If the disc has only one subtitle file, it will be played automatically.
- See number 2 (Caption Function) on the next page for more details concerning Subtitle usage with DivX discs.

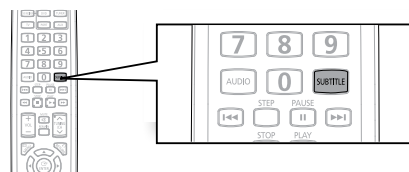


# Playback



## If the Disc has more than One Subtitle File

If the disc has more than one subtitle file, the default subtitle may not match the movie and you will have to select your subtitle language as follows:

1. In Stop mode, press the Cursor ▲, ▼ button, select the desired subtitle ( ) from the TV screen, and then press the ENTER button.
2. When you select the desired DivX file from the TV screen, the movie will be played normally.

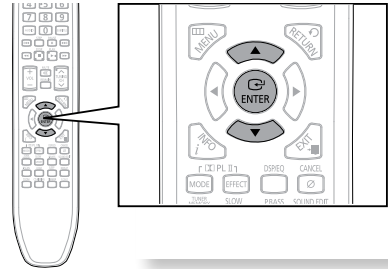

## DivX(Digital internet video eXpress)

DivX is a video file format developed by Microsoft and is based on MPEG4 compression technology to provide audio and video data over the Internet in real-time.

MPEG4 is used for video encoding and MP3 for audio encoding so that the users can watch a movie at near DVD-quality video and audio.

### 1. Supported Formats

This product only supports the following media formats. If both video and audio formats are not supported, you may experience problems such as broken images or no sound.

#### Supported Video Formats

| Format             | AVI                    | WMV         |
|--------------------|------------------------|-------------|
| Supported Versions | DivX3.11~DivX5.1, XviD | V1/V2/V3/V7 |

#### Supported Audio Formats

| Format             | MP3        | WMA        | AC3         |
|--------------------|------------|------------|-------------|
| Bit Rate           | 80~384kbps | 56~128kbps | 128~384kbps |
| Sampling Frequency | 44.1khz    |            | 44.1/48khz  |

- DivX files, including audio and video files, created in the DTS format can only support up to 6Mbps.
- Aspect Ratio : Although the default DivX resolution is 640x480 pixels, this product supports up to 800x600 pixels . TV screen resolutions higher than 800 will not be supported.
- When you play a disc whose sampling frequency is higher than 48khz or 320kbps, you may experience shaking on the screen during playback.

### 2. Caption Function

- You must have some experience with video extraction and editing in order to use this feature properly.
- To use the caption function, save the caption file (\*.smi) in the same file name as that of the DivX media file (\*.avi) within the same folder.  
Example. Root        Samsung\_007CD1.avi  
                             Samsung\_007CD1.smi
- Up to 60 alphanumeric characters or 30 East Asian characters (2 byte characters such as Korean and Chinese) for the file name.

## USING THE PLAYBACK FUNCTION

### Displaying Disc Information




You can view disc playback information on the TV screen.

Press the **INFO** button.



- Depending on the disc, the disc information display may appear different.
- Depending on the disc, you can also select DOLBY DIGITAL, or PRO LOGIC.

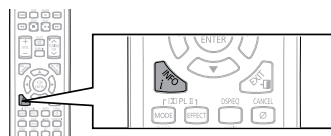

appears on the TV screen!

If this symbol appears on the TV screen when pressing a button, that operation is not possible with the disc currently being played.




### Checking the Remaining Time



Press the **REMAIN** button.

- For checking the total and remaining time of a title or chapter being played.

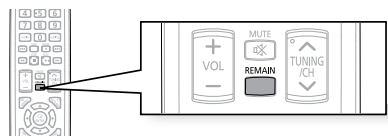

Each time the Remain button is pressed



**TITLE ELAPSED** → **TITLE REMAIN** → **CHAPTER ELAPSED** → **CHAPTER REMAIN**



**TRACK ELAPSED** → **TRACK REMAIN** → **TOTAL ELAPSED** → **TOTAL REMAIN**



**TRACK REMAIN** → **TRACK ELAPSED**


# Playback

## Fast Playback



Press the **◀▶** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

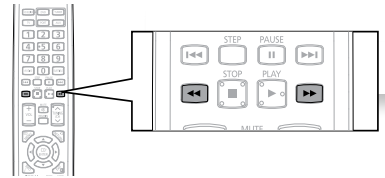



- During fast playback of a CD or MP3-CD, sound is heard only at 2x speed, and not at 4x, 8x, and 32x speeds.

## Slow Playback



Press the **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

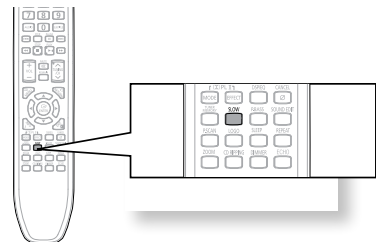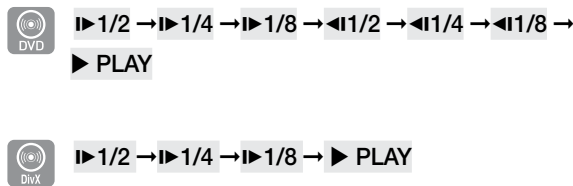


- No sound is heard during slow playback.
- Reverse slow playback does not work with CD.

## Skipping Scenes/Songs



Press the **◀▶** button.

- Each time the button is pressed during playback, the previous or next chapter, track or directory (file) will be played.
- You cannot skip chapters consecutively.

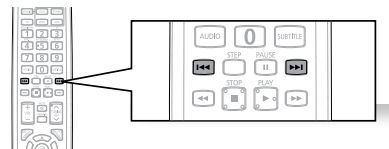


## USING THE PLAYBACK FUNCTION (CON'T)

### Repeat Playback

Repeat playback allows you to repeatedly play a chapter, title, track (song), or directory (MP3 file).

Press the **REPEAT** button.

- Each time the button is pressed during playback, the repeat playback mode changes as follows:

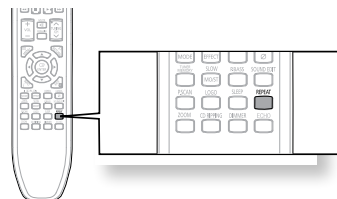

**REPEAT : CHAPTER → REPEAT : TITLE → REPEAT : OFF**



**REPEAT : TRACK → REPEAT : DISC → REPEAT : OFF**



**REPEAT : RANDOM → REPEAT : TRACK → REPEAT : DIR → REPEAT : DISC  
→ REPEAT : OFF**

### Repeat Playback Options

**CHAPTER** : Repeatedly plays the selected chapter.

**TITLE** : Repeatedly plays the selected title.

**RANDOM** : Plays tracks in random order. (A track that has already been played may be played again.)

**TRACK** : Repeatedly plays the selected track.

**DIR** : Repeatedly plays all tracks in the selected folder.


**DISC** : Repeatedly plays the entire disc.

**OFF** : Cancels Repeat Playback.

### To Select a Repeat Playback Mode in the Disc Information Screen



1. Press the **INFO** button twice.
2. Press the Cursor **▶** button to move to REPEAT PLAYBACK (⏮) display.
3. Press the Cursor **▼** button to select the desired Repeat Playback mode.
  - To select another album and track, repeat Steps 2 and 3 above.
4. Press the **ENTER** button.

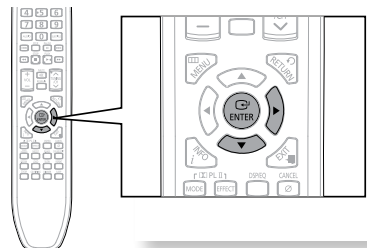

**OFF → A- → CHAP → TITLE → OFF**



**OFF → A- → TRACK → DISC → OFF**



- For DivX, MP3 and JPEG discs, you cannot select Repeat Play from the information display screen.




# Playback

## A-B Repeat Playback



You can repeatedly play back a designated section of a DVD or CD.

1. Press the **INFO** button twice.
2. Press the Cursor **▶** button to move to REPEAT PLAYBACK (↻) display.
3. Press the Cursor **▲, ▼** button to select **A-** and then press the **ENTER** button.
  - When the **ENTER** button is pressed, the selected position will be stored in memory.
4. Press the **ENTER** button at the end of the desired segment.
  - The specified segment will be played repeatedly.

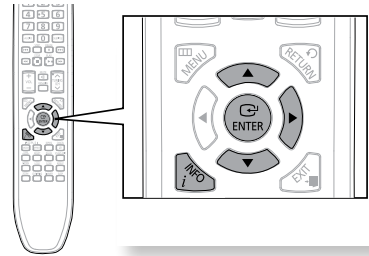

➤ To return to normal playback, press the Cursor **▲, ▼** button to select **↻ OFF**.



- ✎ The A-B Repeat function does not operate with DivX, MP3 or JPEG discs.

## Step Function



Press the **STEP** button.

- The picture moves forward one frame each time the button is pressed during playback.

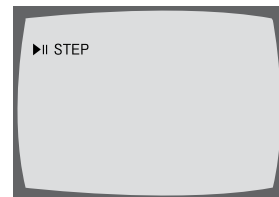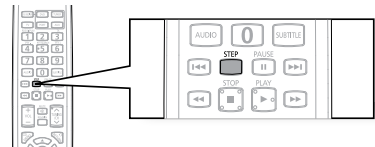


- ✎ No sound is heard during step motion playback.





## USING THE PLAYBACK FUNCTION (CON'T)

 
### Angle Function



This function allows you to view the same scene in different angles.

1. Press the **INFO** button.
2. Press the Cursor **▶** button to move to ANGLE (  ) display.
3. Press the Cursor **▲, ▼** button or numeric buttons to select the desired angle.
  - Each time the button is pressed, the angle changes as follows:

 1/3 →  2/3 →  3/3 →  1/3

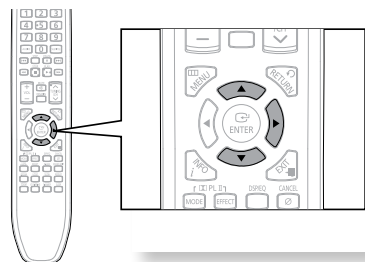

- The Angle function works only with discs on which multiple angles have been recorded.


### Zoom (Screen Enlarge) Function



This function allows you to enlarge a particular area of the displayed image.

1. Press the **ZOOM** button.
2. Press the Cursor **▲, ▼, ◀, ▶** button to move to the area you want to enlarge.
3. Press the **ENTER** button.
  - Each time the button is pressed, the zoom level changes as follows:

**ZOOM X 1.5** → **ZOOM X 2** → **ZOOM X 3**  
→ **ZOOM OFF**

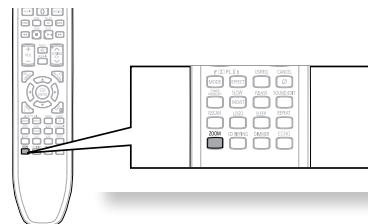


# Playback

## Audio Language Selection Function



1. Press the **INFO** button twice.
2. Press the Cursor **▲, ▼** button or numeric buttons to select the desired audio language.
  - Depending on the number of languages on a DVD disc, a different audio language (ENGLISH, SPANISH, FRENCH, etc.) is selected each time the button is pressed.

EN 1/3 → SP 2/3 → FR 3/3 → EN 1/3

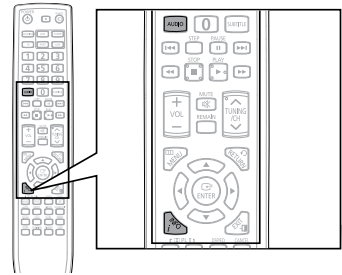


## Subtitle Language Selection Function



1. Press the **INFO** button twice.
2. Press the Cursor **▶** button to move to **SUBTITLE** (📄) display.
3. Press the Cursor **▼** button or numeric buttons to select the desired subtitle.

EN 01/03 → SP 02/03 → FR 03/03 → OFF/03 → EN 01/03

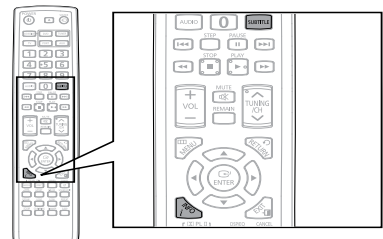


- To operate this function, you can also press the **AUDIO** or **SUBTITLE** buttons on the remote control.
- Depending on the disc, the Subtitle and Audio Language functions may not be available.

## Moving Directly to a Scene/Song



1. Press the **INFO** button.
2. Press the Cursor **▲, ▼** button or numeric buttons to select the desired title/track (🎵) and then press the **ENTER** button.
3. Press the Cursor **◀, ▶** button to move to the Chapter (📄) display.
4. Press the Cursor **▲, ▼** button or numeric buttons to select the desired chapter and then press the **ENTER** button.
5. Press the Cursor **◀, ▶** button to move to time (🕒) display.
6. Press the numeric buttons to select the desired time and then press the **ENTER** button.

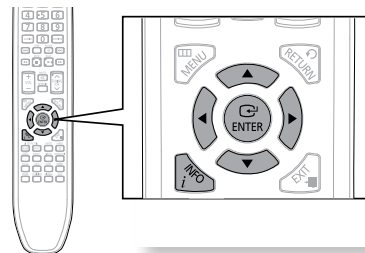


## USING THE PLAYBACK FUNCTION (CON'T)

### Moving Directly to a Scene/Song



Press the **numeric** buttons.

- The selected file will be played.
- When playing an MP3 or JPEG disc, you cannot use the Cursor ▲,▼ button to move to a folder.  
To move a folder, press the **STOP** (■) and then press the Cursor ▲,▼ button.

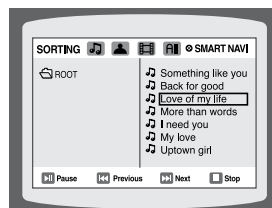

- You can press the ◀◀,▶▶ button on the remote control to move directly to the desired title, chapter, or track.
- Depending on the disc, you may not be able to move to the selected title or time.


### Using the Disc Menu



You can use the menus for the audio language, subtitle language, profile, etc.

DVD menu contents differ from disc to disc.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor ▲,▼ button to move to **Disc Menu** and then press the **ENTER** button.
  - When you select Disc Menu and it is not supported by the disc, the "**This menu is not supported**" message appears on the screen.
3. Press the Cursor ▲,▼,◀,▶ button to select the desired item.
4. Press the **ENTER** button.

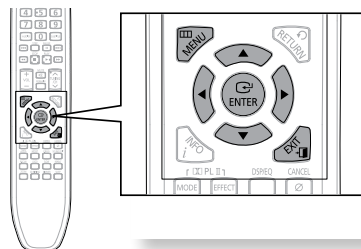

➤ Press the **EXIT** button to exit the setup screen.



- The disc menu display may be different depending on the disc.

# Playback


## Using the Title Menu



For DVDs containing multiple titles, you can view the title of each movie. Depending on the disc, the availability of this feature may vary.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▲**, **▼** button to move to **Title Menu**.
3. Press the **ENTER** button.
  - The title menu appears.

➤ Press the **EXIT** button to exit the setup screen.


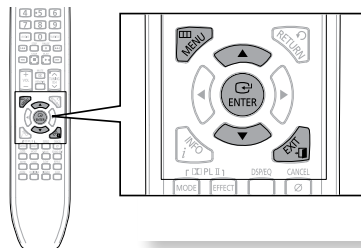


- The Title menu display may be different depending on the disc.

## PLAYING MEDIA FILES USING THE USB HOST FEATURE

You can enjoy media files such as pictures, movies and music saved on an MP3 player, USB memory stick or digital camera in high quality video with 5.1 channel Home Theater sound by connecting the storage device to the USB port of the Home Theater.


1. Connect the USB device to the USB port on the front of the unit.
2. Press the **FUNCTION** button on the DVD Player or the **PORT** button on the remote control to select the USB mode.
  - **USB** appears on the display screen and then disappears.
  - The USB MENU screen appears on the TV screen and the saved file is played.
3. To stop playback, press the **STOP** (■) button.

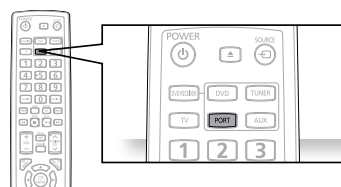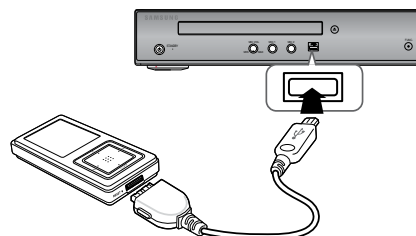

### Safe PORT Removal

To prevent damage to the memory stored in the USB device, perform safe removal before disconnecting the USB cable.

- Press the **STOP** (■) button twice in a row. The display will show **REMOVE USB**.
- Remove the USB cable.

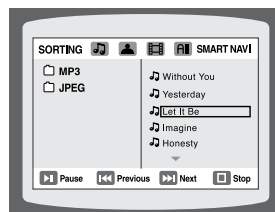


- To listen to your music files with 5.1 channel home theater sound, you must set the Dolby Pro Logic II mode to Matrix. (See page 48)
- In USB mode, you are not able to change the resolution or use the SETUP menu if there is no USB device connected to the USB port.

### Skip Forward/Back

During playback, press the **⏮, ⏭** button.

- When there is more than one file and you press the **⏭** button, the next file is selected.
- When there is more than one file and you press the **⏮** button, the previous file is selected.

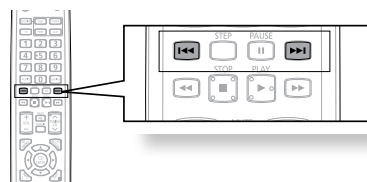


### Fast playback

During playback, press the **⏪, ⏩** button.

- Each time you press either button, the playback speed will change as follows:

**2x → 4x → 8x → 32x → Normal.**

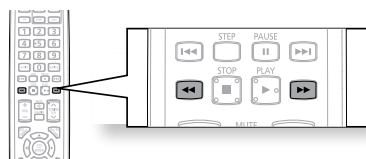

# Playback

## USB Host Specifications

|                                |   |
|--------------------------------|---|
| <b>USB Host Specification</b>  | <ul style="list-style-type: none"> <li>• Supports USB 1.1 or USB 2.0 compliant devices.</li> <li>• Supports devices connected using the USB A type cable.</li> <li>• Supports UMS (USB Mass Storage Device) V1.0 compliant devices.</li> <li>• Supports the device of which the connected drive is formatted in the FAT(FAT, FAT16, FAT32) file system.</li> </ul>  |
| <b>Non-compliance</b>          | <ul style="list-style-type: none"> <li>• Does not support a device that requires installing a separate driver on the PC (Windows).</li> <li>• Does not support connection to a USB hub.</li> <li>• A USB device that is connected using the USB extension cable may not be recognized.</li> <li>• A USB device requiring a separate power source needs to be connected to the player with the separate power connection.</li> </ul> |
| <b>Operational Limitations</b> | <ul style="list-style-type: none"> <li>• If the connected device has multiple drives (or partitions) installed, only one drive (or partition) can be connected.</li> <li>• A device supporting USB 1.1 alone may cause a difference in the picture quality, depending on the device.</li> </ul>   |

## USB Devices that can be used with the Home Theatre

1. USB Storage Device
2. MP3 Player
3. Digital Camera
4. Removable HDD
  - Removable HDDs equipped with less than 160 Gbytes are supported. Removable HDDs equipped with 160Gbytes or more may not be recognized, depending on the device.
  - If the connected device does not work due to insufficient power supply, you can use a separate power cable to supply power so that it can work properly. The connector of the USB cable may differ, depending on the manufacturer of the USB device.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader.
  - Depending on the manufacturer. the USB card reader may not be supported.
  - If you install multiple memory devices into a multi card reader, you may experience problems.

## Compliant File Formats

| Format               | File name | File extension | Bit rate   | Version                    | Pixel   | Sampling Frequency |
|----------------------|-----------|----------------|------------|----------------------------|---------|--------------------|
| <b>Still Picture</b> | JPG       | JPG .JPEG      | –          | –                          | 640x480 | –                  |
| <b>Music</b>         | MP3       | .MP3           | 80~384kbps | –                          | –       | 44.1kHz            |
|                      | WMA       | .WMA           | 56~128kbps | V8                         | –       | 44.1kHz            |
| <b>Movie</b>         | WMV       | .WMV           | 4Mbps      | V1,V2,V3,V7                | 720x480 | 44.1KHz~48KHz      |
|                      | DivX      | .AVI, .ASF     | 4Mbps      | DivX3.11~<br>DivX5.1, XviD | 720x480 | 44.1KHz~48KHz      |

- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.
- A device using NTFS file system is not supported. (Only FAT 16/32 (File Allocation Table 16/32) file system is supported.)
- Does not operate with Janus enabled MTP (Media Transfer Protocol) devices.

# System setup

For your convenience, you can set this DVD Home Cinema's features for the best use in your home environment.

## SETTING THE LANGUAGE



OSD(On-Screen Display) language is set to English by default.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▼** button to move to **Setup** and then press the **ENTER** button.
3. Select **Language** and then press the **ENTER** button.
4. Press the Cursor **▲,▼** button to select **OSD Language** and then press the **ENTER** button.
5. Press the Cursor **▲,▼** button to select the desired language and then press the **ENTER** button.
  - Once the setup is complete, the OSD will be English if English has been selected as language.

- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.

- **OSD LANGUAGE** : Selecting the OSD Language
- **AUDIO** : Selecting the Audio Language (recorded on the disc)
- **SUBTITLE** : Selecting the Subtitle Language (recorded on the disc)
- **DISC MENU** : Selecting the Disc Menu Language (recorded on the disc)
- ※ If the language you selected is not recorded on the disc, the menu language will not change even if you set it to your desired language.

**OTHERS** : To select another language, select OTHERS and enter the language code of your country (see page 55).  
AUDIO, SUBTITLE and DISC MENU languages can be selected.

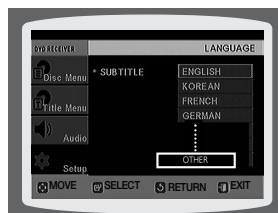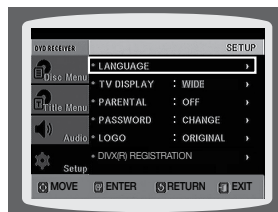





# System setup

## SETTING THE TV SCREEN TYPE

Depending on your TV type (Widescreen or conventional 4:3), you can select the TV's aspect ratio.

1. In Stop mode, press the **MENU** button.
  2. Press the Cursor **▼** button to move to **Setup** and then press the **ENTER** button.
  3. Press the Cursor **▼** button to move to **TV DISPLAY** and then press the **ENTER** button.
  4. Press the Cursor **▲, ▼** button to select the desired item and then press the **ENTER** button.
    - Once the setup is complete, you will be taken to the previous screen.
- Press the **RETURN** button to return to the previous level.  
➤ Press the **EXIT** button to exit the setup screen.

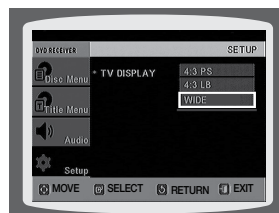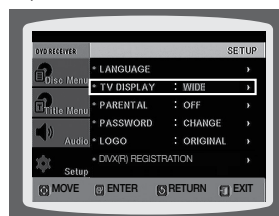

## Adjusting the TV Aspect Ratio (Screen Size)

The horizontal to vertical screen size ratio of conventional TV's is 4:3, while that of widescreen and high definition TV's is 16:9. This ratio is called the aspect ratio. When playing DVDs recorded in different screen sizes, you should adjust the aspect ratio to fit your TV or monitor.

For a standard TV, select either **4:3PS** or **4:3LB** option according to personal preference. Select **WIDE/HDTV** if you have a widescreen TV.

### 4:3PS (4:3 Pan&Scan)

Select this to play a 16:9 picture in the pan & scan mode on a conventional TV.


- You can see the central portion of the screen only (with the sides of the 16:9 picture cut off).



### 4:3LB (4:3 Letterbox)

Select this to play a 16:9 picture in the letter box mode on a conventional TV.

- Black bars will appear at the top and bottom of the screen.

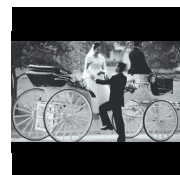

### WIDE/HDTV

Select this to view a 16:9 picture in the full-screen mode on your widescreen TV.

- You can enjoy the widescreen aspect.





- If a DVD is in the 4:3 ratio, you cannot view it in widescreen.
- Since DVD discs are recorded in various image formats, they will look different depending on the software, the type of TV, and the TV aspect ratio setting.

## SETTING PARENTAL CONTROLS (RATING LEVEL)

Use this to restrict playback of adult or violent DVDs you do not want children to view.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▼** button to move to **Setup** and then press the **ENTER** button.
3. Press the Cursor **▼** button to move to **PARENTAL** and then press the **ENTER** button.
4. Press the Cursor **▲,▼** button to select the desired rating level and then press the **ENTER** button.
  - If you have selected Level 6, you cannot view DVDs with Level 7 or higher.
  - The higher the level, the closer the content is to violent or adult material.
5. Enter the password and then press the **ENTER** button.
  - The password is set to "7890" by default.
  - Once the setup is complete, you will be taken to the previous screen.

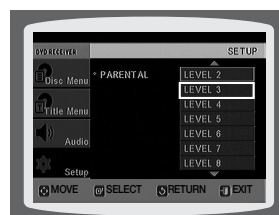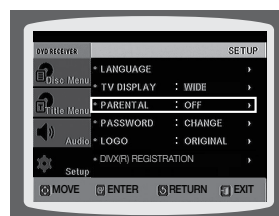

- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.




▪ This function works only if a DVD disc contains the rating level information.

## SETTING THE PASSWORD

You can set the password for the Parental (rating level) setting.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▼** button to move to **Setup** and then press the **ENTER** button.
3. Press the Cursor **▼** button to move to **PASSWORD** and then press the **ENTER** button.
4. Press the **ENTER** button.
5. Enter the password and then press the **ENTER** button.
  - Enter the old password, a new password, and confirm new password.
  - The setting is complete.

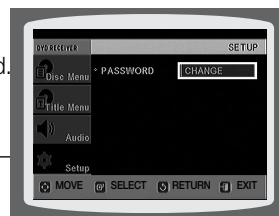

▪ The password is set to "7890" by default.

### If you have forgotten the rating level password, do the following

- While the player is in No Disc mode, hold the main unit's **STOP** (■) button for longer than 5 seconds. **INITIAL** appears on the display and all settings will return to the default values.
- Press the **POWER** button.

Using the **RESET** function will erase all stored settings.  
Do not use this unless necessary.


# System setup

## SETTING THE WALLPAPER



While watching a DVD or JPEG CD, you can set the image you like as background wallpaper.

1. During playback, press the **PAUSE** button when an image you like appears.
2. Press the **LOGO** button.
  - **COPY LOGO DATA** will be displayed on the TV screen.
3. The power will turn off and then back on.
  - The selected wallpaper will be displayed.
  - You can select up to 3 wallpaper settings.

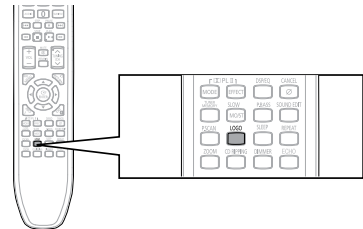


## TO SELECT ONE OF THE 3 WALLPAPER SETTINGS YOU'VE MADE

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▼** button to move to **Setup** and then press the **ENTER** button.
3. Press the Cursor **▼** button to move to **LOGO** and then press the **ENTER** button.
4. Press the Cursor **▲, ▼** button to select the desired **USER**, and then press the **ENTER** button.
  - This selects one of the 3 wallpaper screens.
5. Press the **EXIT** button to exit the setup screen.

- **ORIGINAL** : Select this to set the Samsung Logo image as your wallpaper.
- **USER** : Select this to set the desired image as your wallpaper.

- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.

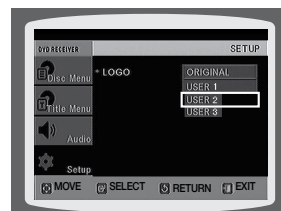

## DivX (R) Registration

Please use the Registration code to register this player with the DivX (R) video on demand format.

To learn more, go to [www.divx.com/vod](http://www.divx.com/vod).

## SETTING THE SPEAKER MODE

Signal outputs and frequency responses from the speakers will automatically be adjusted according to your speaker configuration and whether certain speakers are used or not.


1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▼** button to move to **Audio** and then press the **ENTER** button.
3. In the **SPEAKER SETUP**, press the **ENTER** button again.
4. Press the Cursor **▲, ▼, ◀, ▶** button to move to the desired speaker and then press the **ENTER** button.
  - For C, SL, and SR, each time the button is pressed, the mode switches alternately as follows : SMALL → NONE.
  - For L and R, the mode is set to SMALL.

- **SMALL** : Select this when using the speakers.
- **NONE** : Select this when no speaker is connected.

- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.



- Depending on PRO LOGIC and STEREO settings, the speaker mode may vary (see page 51).

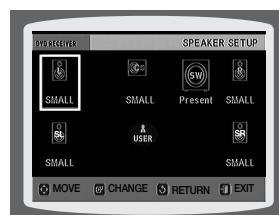

## SETTING THE DELAY TIME

If the speakers cannot be placed at equal distances from the listening position, you can adjust the delay time of the audio signals from the centre and rear speakers.

1. In Stop mode, press the **MENU** button.
  2. Press the Cursor **▼** button to move to **Audio** and then press the **ENTER** button.
  3. Press the Cursor **▼** button to move to **DELAY TIME** and then press the **ENTER** button.
  4. Press the Cursor **▲, ▼, ◀, ▶** button to move to the desired speaker and then press the **ENTER** button.
  5. Press the Cursor **◀, ▶** to set the Delay time.
    - You can set the delay time for C between 00 and 05mSEC and for SL and SR between 00 and 15mSEC.
- Press the **RETURN** button to return to the previous level.
  - Press the **EXIT** button to exit the setup screen.

# System setup

## Setting up the Speaker Delay Time

When 5.1CH Surround Sound is played, you can enjoy the best sound if the distance between you and each speaker is the same.

Since the sounds arrive at the listening position at different times depending on the placement of speakers, you can adjust this difference by adding a delay effect to the sound of the Centre and Rear Speakers.

### Setting Centre SPEAKER


If the distance of  $D_c$  is equal to or longer than the distance of  $D_f$  in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.

|                                  |        |        |        |        |        |        |
|----------------------------------|--------|--------|--------|--------|--------|--------|
| Distance between $D_f$ and $D_c$ | 0.00 m | 0.34 m | 0.68 m | 1.06 m | 1.40 m | 1.76 m |
| Delay Time                       | 0 ms   | 1 ms   | 2 ms   | 3 ms   | 4 ms   | 5 ms   |

### Setting REAR SPEAKER

If the distance of  $D_c$  is equal to or longer than the distance of  $D_r$  in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.

|                                  |        |        |        |        |        |        |
|----------------------------------|--------|--------|--------|--------|--------|--------|
| Distance between $D_f$ and $D_c$ | 0.00 m | 1.06 m | 2.11 m | 3.16 m | 3.62 m | 5.29 m |
| Delay Time                       | 0 ms   | 3 ms   | 6 ms   | 9 ms   | 12 ms  | 15 ms  |

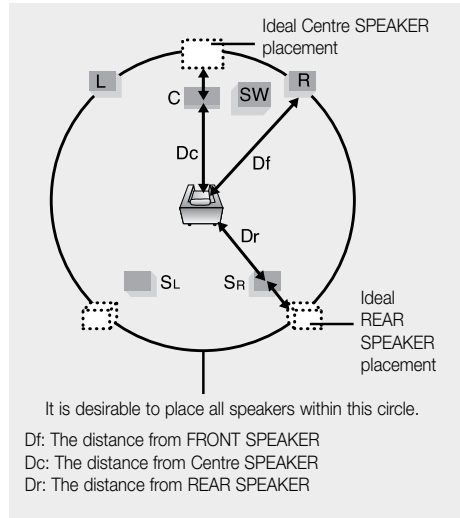


- With **PL II** (Dolby Pro Logic II), the delay time may be different for each mode.
- With AC-3, the delay time can be set between 00 and 15mSEC.
- The Centre channel is only adjustable on 5.1 channel discs.

## SETTING THE TEST TONE

Use the Test Tone feature to check the speaker connections.

1. In Stop mode, press the **MENU** button.
  2. Press the Cursor **▼** button to move to **Audio** and then press the **ENTER** button.
  3. Press the Cursor **▼** button to move to **TEST TONE** and then press the **ENTER** button.
    - The test tone will be sent to **L → C → R → SR → SL → SW** in order.  
If the **ENTER** button is pressed again at this time, the test tone will stop.
- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.

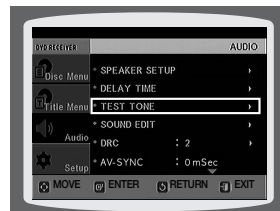

## SETTING THE AUDIO

You can adjust the balance and level for each speaker.

1. In Stop mode, press the **MENU** button.
  2. Press the Cursor **▼** button to move to **Audio** and then press the **ENTER** button.
  3. Press the Cursor **▼** button to move to **SOUND EDIT** and then press the **ENTER** button.
  4. Press the Cursor **▲,▼** button to select and adjust the desired item. Press the Cursor **◀,▶** button to adjust the settings.
- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.




# System setup

## SETTING THE AUDIO

### Manually Adjusting the Speaker Volume and Balance with the SOUND EDIT Button.

Press the **SOUND EDIT** button and then press the Cursor ◀▶ button.

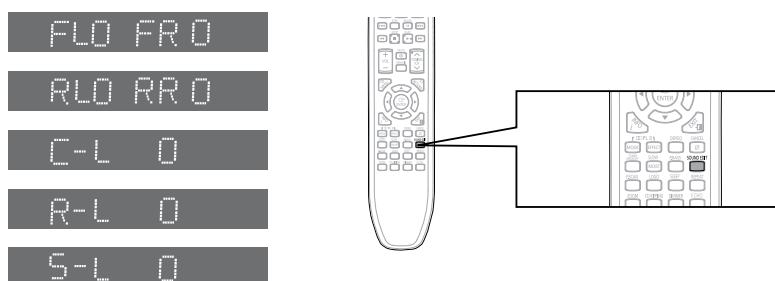

#### Adjusting Front/Rear Speaker Balance

- You can select between 0, -6, and OFF.
- The volume decreases as you move closer to -6.



#### Adjusting Centre/Rear/Subwoofer Speaker Level

- The volume level can be adjusted in steps from +6dB to -6dB.
- The sound gets louder as you move closer to +6dB and quieter as you get closer to -6dB.

## SETTING THE DRC (DYNAMIC RANGE COMPRESSION)

This feature balances the range between the loudest and quietest sounds. You can use this function to enjoy Dolby Digital sound when watching movies at low volume at night.


1. In Stop mode, press the **MENU** button.
  2. Press the Cursor ▼ button to move to **Audio** and then press the **ENTER** button.
  3. Press the Cursor ▼ button to move to **DRC** and then press the **ENTER** button.
  4. Press the Cursor ▲,▼ to adjust the **DRC**.
    - When the Cursor ▲ button is pressed, the effect is greater, and when the Cursor ▼ button is pressed, the effect is smaller.
- Press the **RETURN** button to return to the previous level.  
➤ Press the **EXIT** button to exit the setup screen.

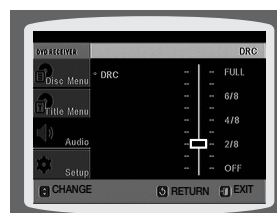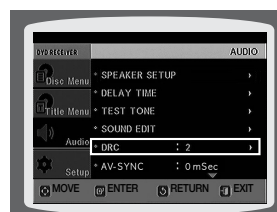

## SETTING THE AV SYNC

Video may look slower than the audio if it is connected to a digital TV. If this occurs, adjust the audio delay time to match the video.

1. In Stop mode, press the **MENU** button.
  2. Press the Cursor **▼** button to move to **Audio** and then press the **ENTER** button.
  3. Press the Cursor **▼** button to move to **AV-SYNC** and then press the **ENTER** button.
  4. Press the Cursor **▲,▼** button to select the AV-SYNC Delay Time and then press the **ENTER** button.
    - You can set the audio delay time between 0 ms and 300 ms. Set it to the optimal status.
- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.

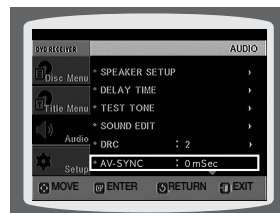



# System setup

## SOUND FIELD (DSP)/EQ FUNCTION

DSP(Digital Signal Processor) : DSP modes have been designed to simulate different acoustic environments.

EQ : You can select ROCK, POPS to optimize the sound for the genre of music you are playing


Press the DSP/EQ button.

- **DSP** appears on the display panel.

Each time the button is pressed, the selection changes as follows:

**POPS → JAZZ → ROCK → STUDIO → CLUB → HALL → MOVIE → CHURCH → PASS**

- **POPS, JAZZ, ROCK** : Depending on the genre of music, you can select POPS, JAZZ, and ROCK.
- **STUDIO** : Provides a sense of presence as if in a studio.
- **CLUB** : Simulates the sound of a dance club with a throbbing bass beat.
- **HALL** : Provides a clear vocal as if listening in a concert hall.
- **MOVIE** : Provides the feeling of a movie theater.
- **CHURCH** : Gives the feel of being in a grand church.
- **PASS** : Select this for normal listening.

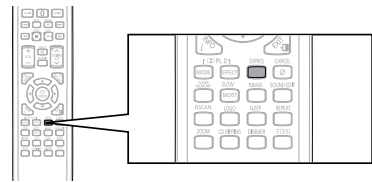

- The DSP/EQ function is only available in STEREO mode. Press the **PL II mode** button to show STEREO on the display.
- This feature works with CDs, MP3-CDs, DivX, tuner and Dolby Digital discs.
- When playing a DVD disc encoded with two or more channels, multi-channel mode will be selected automatically and DSP/EQ function does not work.

## DOLBY PRO LOGIC II MODE

You can select the desired Dolby Pro Logic II audio mode.

Press the **PL II MODE** button.


- Each time the button is pressed, the mode changes as follows.

**MUSIC → CINEMA → PRO LOGIC → MATRIX →**

**STEREO → MUSIC**

### PRO LOGIC II

- **MUSIC** : When listening to music, you can experience sound effects as if you are listening to the actual performance.
- **CINEMA** : Adds realism to the movie soundtrack.
- **PRO LOGIC** : You will experience a realistic multi-channel effect, as if using five speakers, while using just the front left and right speakers.
- **MATRIX** : You will hear 5.1 channel surround sound.
- **STEREO** : Select this to listen to sound from the front left and right speakers and the subwoofer only.

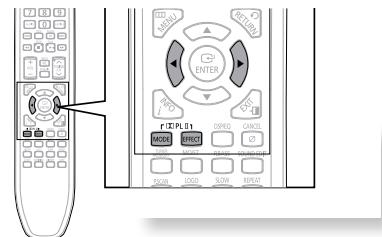


- When selecting Pro Logic II mode, connect your external device to the AUDIO INPUT jacks (L and R) on the player. If you connect to only one of the inputs (L or R), you cannot listen to surround sound.
- PRO LOGIC II function is only available in STEREO mode.

## DOLBY PRO LOGIC II EFFECT

This function works only in Dolby Pro Logic MUSIC mode.


1. Press the **PL II MODE** button to select **MUSIC** mode.
2. Press the **PL II EFFECT** button.
3. Press the **◀▶** buttons to select the desired effect setting.
  - PANORAMA : You can select either 0 or 1.
  - C- WIDTH : You can select between 0 and 7.
  - DIMENS : You can select between 0 and 6.

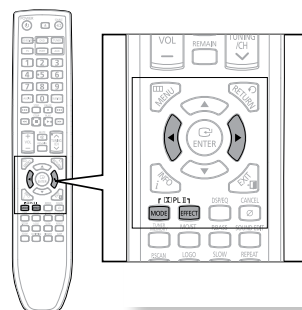

## P.BASS

The P.BASS function provides a bass boost to reinforce the low frequencies.

1. Press the **P.BASS** button to select **P.BASS** mode.
2. Press the P.Bass button again to turn off the P.Bass mode.

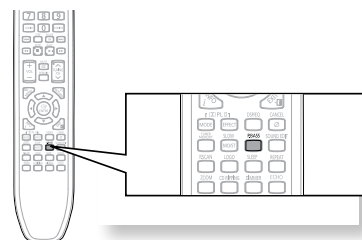


- The P.BASS function is only available with 2 channel LPCM sources such as mp3, Divx, cd and wma. Press P.BASS button and "POWER BASS ON" will be displayed on the screen.
- The P.bass does not work with DSP/EQ or DOLBY PRO LOGIC II modes. If you press P.BASS in the DSP/EQ mode, the DSP/EQ mode is automatically shut off and the P. BASS function comes on.

## CONNECTING MICROPHONE

You can enjoy the feeling of a karaoke bar in the comfort of your home.

Watch the video and sing along the lyrics displayed on the TV screen against the accompaniment.

1. Connect the microphone to the MIC jack on the front panel.
  - You can connect up to two microphones.

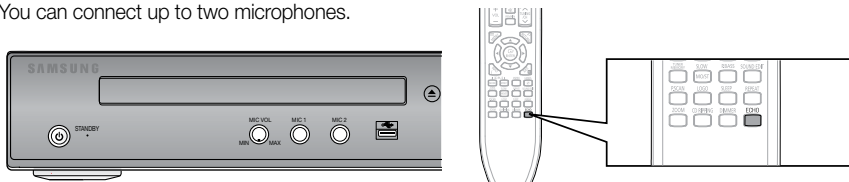


2. Press the **MIC VOL** button to adjust the voice volume of the microphone.
3. Press the **ECHO** button to adjust the echo level of the microphone.

# Radio

## LISTENING TO RADIO

### Remote Control

1. Press the **TUNER** button to select the FM band.
2. Tune in to the desired station.
  - **Automatic Tuning 1** : When the **◀▶** button is pressed, a preset broadcast station is selected.
  - **Automatic Tuning 2** : Press and hold the **▲, ▼** button to automatically search for active broadcasting stations.
  - **Manual Tuning** : Briefly press the **▲, ▼** button to increase or decrease the frequency incrementally.

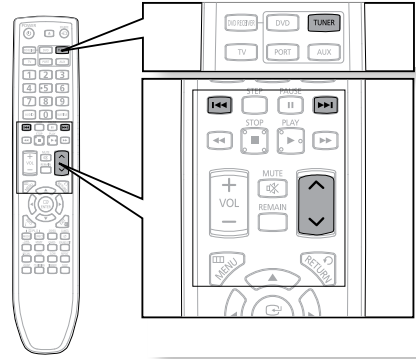

### Main Unit

1. Press the **FUNCTION** button to select the FM band.
2. Select a broadcast station.
  - **Automatic Tuning 1** : Press the **STOP (■)** button to select **PRESET** and then press the **◀▶** button to select the preset station.
  - **Automatic Tuning 2** : Press the **STOP (■)** button to select **MANUAL** and then press and hold the **◀▶** button to automatically search the band.
  - **Manual Tuning** : Press the **STOP (■)** button to select **MANUAL** and then briefly press the **◀▶** button to tune in to a lower or higher frequency.


Press the **MO/ST** button to listen in Mono/Stereo.

- Each time the button is pressed, the sound switches between **STEREO** and **MONO**.
- In a poor reception area, select **MONO** for a clear, interference-free broadcast.

## PRESETTING STATIONS

Example : Presetting FM 89.10 in the memory

1. Press the **TUNER** button to select the FM band.
2. Press the **▲, ▼** button to select **89.10**.
3. Press the **TUNER MEMORY** button.
4. Press the **◀▶** button to select preset number.
  - You can select between 1 and 15 presets.
5. Press the **TUNER MEMORY** button again.
6. To preset another station, repeat steps 2 to 5.
  - To tune in to a preset station, press the **◀▶** button on the remote control to select a channel.

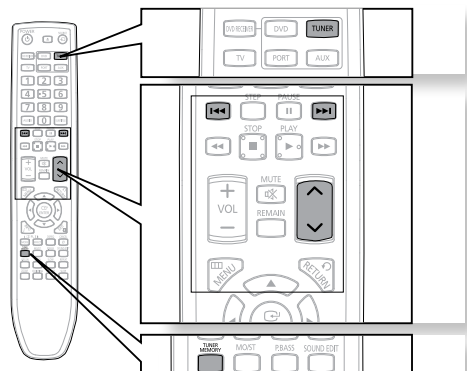

# Convenient function

## SLEEP TIMER FUNCTION


You can set the time that the Home Theater will shut itself off.

Press the **SLEEP** button.

- **SLEEP** will be displayed. Each time the button is pressed, the preset time in minutes changes as follows :  
10 → 20 → 30 → 60 → 90 → 120 → 150 → OFF.

To confirm the sleep timer setting, press the **SLEEP** button.

- The remaining time before the Home Theater will shut itself off is displayed.
- Pressing the button again changes the sleep time from what you have set earlier.

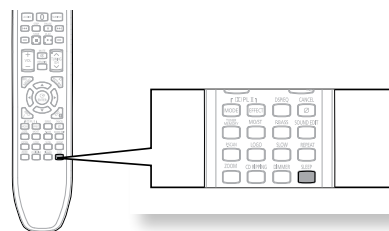


To cancel the sleep timer, press the **SLEEP** button until **OFF** appears on the display.

## ADJUSTING DISPLAY BRIGHTNESS

You can adjust the brightness of the display on the main unit so it won't interfere with your movie viewing.

Press the **DIMMER** button.

- Each time the button is pressed, the brightness of front display will be adjusted.

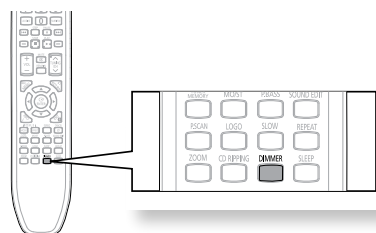


## MUTE FUNCTION

This is useful when answering a doorbell or telephone call.

Press the **MUTE** button.

- **MUTE** appears in the display.
- To restore the sound, press the **MUTE** button again.

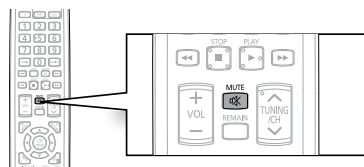



# Convenient function

## CD RIPPING

Converts audio sound of the CD into a MP3 file format before sending to a USB storage device.




1. Connect the USB device.
2. Insert the audio CD into the CD tray.
3. Press the **CD RIPPING** button.
  - To start ripping the current track, press the **CD RIPPING** button on the remote control while the system is playing a track or stopped temporarily.
  - To rip the entire CD, press and hold the **CD RIPPING** button on the remote control.  
-"FULL CD RIPPING" appears on the display and ripping starts.
4. Press the **STOP** (■) button to stop ripping.
  - When the CD ripping is done, a directory named "RIPPING" will be created in the USB device and the ripped file will be saved in a format of "SAM-XXXX".mp3".

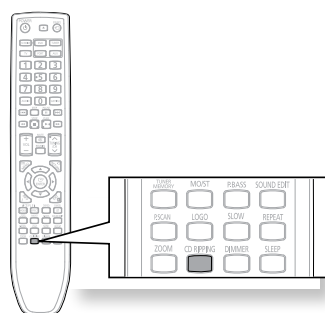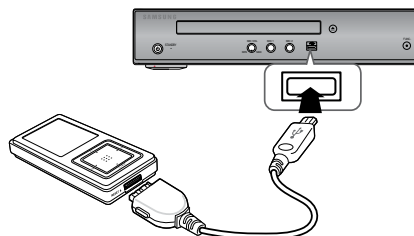

- Do not disconnect the USB connection or the power cable during the CD ripping. Otherwise, it may cause damage to the data. To stop CD ripping, press the **STOP** button and disconnect the USB device after the system stops playing the CD completely.
- If you disconnect the USB connection during the CD ripping, the system will turn off and you will not be able to delete the ripped file.
- If you connect the USB device to the system while it is playing a CD, the system stops playing and will resume playing when the USB connection initialization is completed. (The initialization time may differ depending on the type of the USB device.)
- If the ripping duration is less than 5 seconds, a ripping file may not be created.
- CD ripping works only if the USB device or the HDD is formatted in the FAT file system. (The NTFS file system is not supported.) For a list of compliant devices, refer to the specification of the USB host.
- Ripping is performed at a normal speed of x1. The ripping time may be longer with some USB devices.
- While the system is ripping a CD, the audio sound will not be output.
- Do not put touch or move the system while it is ripping a CD.

# Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Centre.

| SYMPTOM   | Check/Remedy   |
|---|--|
| <b>Disc tray does not open.</b>   | <ul style="list-style-type: none"> <li>• Is the power cord plugged securely into the outlet?</li> <li>• Turn off the power and then turn it back on.</li> </ul>  |
| <b>Playback does not start immediately when the Play/Pause button is pressed.</b>   | <ul style="list-style-type: none"> <li>• Are you using a deformed disc or a disc with scratches on the surface?</li> <li>• Wipe the disc clean.</li> </ul>   |
| <b>Sound is not produced.</b>   | <ul style="list-style-type: none"> <li>• No sound is heard during fast playback, slow playback, and step motion playback.</li> <li>• Are the speakers connected properly? Is the speaker setup correctly customized?</li> <li>• Is the disc severely damaged?</li> </ul>   |
| <b>Sound can be heard only from a few speakers and not all six.</b>   | <ul style="list-style-type: none"> <li>• When listening to a CD or radio, sound is output to the front speakers (L/R) only. Select "PRO LOGIC II" by pressing  PL II (Dolby Pro Logic II) on the remote control to use all six speakers.</li> <li>• Make sure that the DVD disc is 5.1-CH compatible.</li> <li>• If you set C, SL, and SR to NONE in the speaker mode in the audio setup of the setup screen, no sound is heard from the centre speaker and the front left and right speakers. Set C, SL, and SR to SMALL.</li> </ul> |
| <b>Dolby Digital 5.1 CH Surround Sound is not produced.</b>   | <ul style="list-style-type: none"> <li>• Is there "Dolby Digital 5.1 CH" mark on the disc? Dolby Digital 5.1 CH Surround Sound is produced only if the disc is recorded with 5.1 channel sound.</li> <li>• Is the audio language correctly set to DOLBY DIGITAL 5.1-CH in the information display?</li> </ul>  |
| <b>The remote control does not work.</b>  | <ul style="list-style-type: none"> <li>• Is the remote control being operated within its operation range of angle and distance?</li> <li>• Are the batteries exhausted?</li> <li>• Have you selected the mode(TV/DVD) functions of the remote control (TV or DVD) correctly?</li> </ul>  |
| <ul style="list-style-type: none"> <li>• <b>Disc is rotating but no picture is produced.</b></li> <li>• <b>Picture quality is poor and picture is shaking.</b></li> </ul> | <ul style="list-style-type: none"> <li>• Is the TV power on?</li> <li>• Are the video cables connected properly?</li> <li>• Is the disc dirty or damaged?</li> <li>• A poorly manufactured disc may not be playable.</li> </ul>  |

# Troubleshooting

| SYMPTOM   | Check/Remedy   |
|---|--|
| <p>Audio language and subtitles do not work.</p>  | <ul style="list-style-type: none"> <li>• Audio language and subtitles will not work if the disc does not contain them.</li> </ul>  |
| <p>Menu screen does not appear even when the menu function is selected.</p>   | <ul style="list-style-type: none"> <li>• Are you using a disc that does not contain menus?</li> </ul>  |
| <p>Aspect ratio cannot be changed.</p>  | <ul style="list-style-type: none"> <li>• You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode, but 4:3 DVDs can be seen in 4:3 ratio only. Refer to the DVD disc jacket and then select the appropriate function.</li> </ul>  |
| <ul style="list-style-type: none"> <li>• The main unit is not working. (Example: The power goes out or a strange noise is heard.)</li> <li>• The DVD player is not working normally.</li> </ul> | <ul style="list-style-type: none"> <li>• Turn off the power and hold the <b>STOP</b> ( ■ ) button on the main unit for longer than 5 seconds (reset function).</li> </ul> <p><b>Using the RESET function will erase all stored settings. Do not use this unless necessary.</b></p>   |
| <p>The rating level password has been forgotten.</p>  | <ul style="list-style-type: none"> <li>• While “NO DISC” message appears on the display of the main unit, hold the main unit's <b>STOP</b> ( ■ ) button for longer than 5 seconds. “INITIAL” appears on the display and all settings will return to the default values.</li> <li>• Press the POWER button.</li> </ul> <p><b>Using the RESET function will erase all stored settings. Do not use this unless necessary.</b></p> |
| <p>Can't receive radio broadcast.</p>   | <ul style="list-style-type: none"> <li>• Is the antenna connected properly?</li> <li>• If the antenna's input signal is weak, install an external FM antenna in an area with good reception.</li> </ul>  |

# Language code list

Enter the appropriate code number for the initial settings “Disc Audio”, “Disc Subtitle” and/or “Disc Menu” (See page 39).

| Code | Language        | Code | Language     | Code | Language         | Code | Language   |
|------|-----------------|------|--------------|------|------------------|------|------------|
| 1027 | Afar            | 1181 | Frisian      | 1334 | Latvian, Lettish | 1506 | Slovenian  |
| 1028 | Abkhazian       | 1183 | Irish        | 1345 | Malagasy         | 1507 | Samoan     |
| 1032 | Afrikaans       | 1186 | Scots Gaelic | 1347 | Maori            | 1508 | Shona      |
| 1039 | Amharic         | 1194 | Galician     | 1349 | Macedonian       | 1509 | Somali     |
| 1044 | Arabic          | 1196 | Guarani      | 1350 | Malayalam        | 1511 | Albanian   |
| 1045 | Assamese        | 1203 | Gujarati     | 1352 | Mongolian        | 1512 | Serbian    |
| 1051 | Aymara          | 1209 | Hausa        | 1353 | Moldavian        | 1513 | Siswati    |
| 1052 | Azerbaijani     | 1217 | Hindi        | 1356 | Marathi          | 1514 | Sesotho    |
| 1053 | Bashkir         | 1226 | Croatian     | 1357 | Malay            | 1515 | Sundanese  |
| 1057 | Byelorussian    | 1229 | Hungarian    | 1358 | Maltese          | 1516 | Swedish    |
| 1059 | Bulgarian       | 1233 | Armenian     | 1363 | Burmese          | 1517 | Swahili    |
| 1060 | Bihari          | 1235 | Interlingua  | 1365 | Nauru            | 1521 | Tamil      |
| 1069 | Bislama         | 1239 | Interlingue  | 1369 | Nepali           | 1525 | Tegulu     |
| 1066 | Bengali; Bangla | 1245 | Inupiak      | 1376 | Dutch            | 1527 | Tajik      |
| 1067 | Tibetan         | 1248 | Indonesian   | 1379 | Norwegian        | 1528 | Thai       |
| 1070 | Breton          | 1253 | Icelandic    | 1393 | Occitan          | 1529 | Tigrinya   |
| 1079 | Catalan         | 1254 | Italian      | 1403 | (Afan) Oromo     | 1531 | Turkmen    |
| 1093 | Corsican        | 1257 | Hebrew       | 1408 | Oriya            | 1532 | Tagalog    |
| 1097 | Czech           | 1261 | Japanese     | 1417 | Punjabi          | 1534 | Setswana   |
| 1103 | Welsh           | 1269 | Yiddish      | 1428 | Polish           | 1535 | Tonga      |
| 1105 | Danish          | 1283 | Javanese     | 1435 | Pashto, Pushto   | 1538 | Turkish    |
| 1109 | German          | 1287 | Georgian     | 1436 | Portuguese       | 1539 | Tsonga     |
| 1130 | Bhutani         | 1297 | Kazakh       | 1463 | Quechua          | 1540 | Tatar      |
| 1142 | Greek           | 1298 | Greenlandic  | 1481 | Rhaeto-Romance   | 1543 | Twi        |
| 1144 | English         | 1299 | Cambodian    | 1482 | Kirundi          | 1557 | Ukrainian  |
| 1145 | Esperanto       | 1300 | Kannada      | 1483 | Romanian         | 1564 | Urdu       |
| 1149 | Spanish         | 1301 | Korean       | 1489 | Russian          | 1572 | Uzbek      |
| 1150 | Estonian        | 1305 | Kashmiri     | 1491 | Kinyarwanda      | 1581 | Vietnamese |
| 1151 | Basque          | 1307 | Kurdish      | 1495 | Sanskrit         | 1587 | Volapuk    |
| 1157 | Persian         | 1311 | Kirghiz      | 1498 | Sindhi           | 1613 | Wolof      |
| 1165 | Finnish         | 1313 | Latin        | 1501 | Sangro           | 1632 | Xhosa      |
| 1166 | Fiji            | 1326 | Lingala      | 1502 | Serbo-Croatian   | 1665 | Yoruba     |
| 1171 | Faeroese        | 1327 | Laothian     | 1503 | Singhalese       | 1684 | Chinese    |
| 1174 | French          | 1332 | Lithuanian   | 1505 | Slovak           | 1697 | Zulu       |



# Appendix

 
 

## CAUTIONS ON HANDLING AND STORING DISCS

Small scratches on the disc may reduce sound and picture quality or cause skipping.  
Be especially careful not to scratch discs when handling them.

### Handling discs

Do not touch the playback side of the disc.  
Hold the disc by the edges so that fingerprints will not get on the surface.  
Do not stick paper or tape on the disc.

### Disc Storage

| Do not keep in direct sunlight  | Keep in a cool ventilated area  | Keep in a clean Protection jacket.<br>Store vertically.                            |
|---|---|--|
|  |  |  |

- ☑ Do not allow the discs to become contaminated with dirt.
- Do not load cracked or scratched discs.

### Handling and Storing Discs

When you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.

- When cleaning, wipe gently from the inside to the outside of the disc

- ☑ Condensation may form if warm air comes into contact with cold parts inside the player. When condensation forms inside the player, the player may not operate correctly. If this occurs, remove the disc and let the player stand for 1 or 2 hours with the power on.

## SPECIFICATIONS

|         |                              |   |
|---------|------------------------------|---|
| General | Power Consumption            | 40 W  |
|         | Weight                       | 2.5 Kg  |
|         | Dimensions                   | 430 (W) x 70 (H) x 255 (D) mm   |
|         | Operating Temperature Range  | +5°C~+35°C  |
|         | Operating Humidity Range     | 10 % to 75 %  |
| Disc    | DVD (Digital Versatile Disc) | Reading Speed : 3.49 ~ 4.06 m/sec.<br>Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.  |
|         | CD : 12 cm (COMPACT DISC)    | Reading Speed : 4.8 ~ 5.6 m/sec.<br>Maximum Play Time : 74 min.   |
|         | CD : 8cm (COMPACT DISC)      | Reading Speed : 4.8 ~ 5.6 m/sec.<br>Maximum Play Time : 20 min.   |
|         | Video Output                 | Composite Video<br>1 channel : 1.0 Vp-p (75 Ω load)<br>Y : 1.0 Vp-p (75 Ω load)<br>Pr : 0.70 Vp-p (75 Ω load)<br>Pb : 0.70 Vp-p (75 Ω load) |

|           |                          |             |
|-----------|--------------------------|-------------|
| Amplifier | Front speaker output     | 45W x 2(3Ω) |
|           | Centre speaker output    | 75W(6Ω)     |
|           | Rear speaker output      | 45W x 2(3Ω) |
|           | Subwoofer speaker output | 75W(6Ω)     |
|           | Frequency range          | 20Hz~20KHz  |
|           | S/N Ratio                | 70dB        |
|           | Channel separation       | 60dB        |
|           | Input sensitivity        | (AUX)400mV  |

## HT-Z120

| Speaker | Speaker system   | 5.1ch speaker system  |             |            |
|---------|--|---|-------------|------------|
|         |  | Front/Rear  | Centre      | Subwoofer  |
|         | Impedance  | 3 Ω   | 6 Ω         | 6 Ω        |
|         | Frequency range  | 140Hz~20KHz   | 140Hz~20KHz | 45Hz~160Hz |
|         | Output sound pressure level  | 86dB/W/M  | 86dB/W/M    | 86dB/W/M   |
|         | Rated input  | 45W   | 75W         | 75W        |
|         | Maximum input  | 90W   | 150W        | 150W       |
|         | Dimensions (W x H x D)   | Front/Rear: 100 x 100 x 93 mm<br>Centre : 100 x 100 x 93 mm<br>Subwoofer : 139 x 320 x 250 mm |             |            |
| Weights | Front : 0.6 kg, Centre : 0.3 kg<br>Rear : 0.6 kg, Subwoofer : 2.9 kg |   |             |            |

## HT-TZ122

| Speaker | Speaker system   | 5.1ch speaker system   |             |            |
|---------|--|--|-------------|------------|
|         |  | Front/Rear   | Centre      | Subwoofer  |
|         | Impedance  | 3 Ω  | 6 Ω         | 6 Ω        |
|         | Frequency range  | 140Hz~20KHz  | 140Hz~20KHz | 45Hz~160Hz |
|         | Output sound pressure level  | 86dB/W/M   | 86dB/W/M    | 86dB/W/M   |
|         | Rated input  | 45W  | 75W         | 75W        |
|         | Maximum input  | 90W  | 150W        | 150W       |
|         | Dimensions (W x H x D)   | Front : 240 x 1020 x 240 mm (stand base : 240 x 240)<br>Rear: 100 x 100 x 93 mm<br>Centre : 300 x 59 x 50 mm<br>Subwoofer : 139 x 320 x 250 mm |             |            |
| Weights | Front : 3.6 kg, Centre : 0.3 kg<br>Rear : 0.5 kg, Subwoofer : 2.9 kg |  |             |            |

\*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.

## Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care Centre.

| Region               | Country           | Customer Care Centre ☎                                    | Web Site              |
|----------------------|-------------------|---|-----------------------|
| North America        | CANADA            | 1-800-SAMSUNG(726-7864)                                   | www.samsung.com/ca    |
|                      | MEXICO            | 01-800-SAMSUNG(726-7864)                                  | www.samsung.com/mx    |
|                      | U.S.A             | 1-800-SAMSUNG(726-7864)                                   | www.samsung.com/us    |
| Latin America        | ARGENTINE         | 0800-333-3733   | www.samsung.com/ar    |
|                      | BRAZIL            | 0800-124-421 , 4004-0000                                  | www.samsung.com/br    |
|                      | CHILE             | 800-SAMSUNG(726-7864)                                     | www.samsung.com/cl    |
|                      | NICARAGUA         | 00-1800-5077267   | www.samsung.com/latin |
|                      | HONDURAS          | 800-7919267   | www.samsung.com/latin |
|                      | COSTA RICA        | 0-800-507-7267  | www.samsung.com/latin |
|                      | ECUADOR           | 1-800-10-7267   | www.samsung.com/latin |
|                      | EL SALVADOR       | 800-6225  | www.samsung.com/latin |
|                      | GUATEMALA         | 1-800-299-0013  | www.samsung.com/latin |
|                      | JAMAICA           | 1-800-234-7267  | www.samsung.com/latin |
|                      | PANAMA            | 800-7267  | www.samsung.com/latin |
|                      | PUERTO RICO       | 1-800-682-3180  | www.samsung.com/latin |
|                      | REP. DOMINICA     | 1-800-751-2676  | www.samsung.com/latin |
|                      | TRINIDAD & TOBAGO | 1-800-SAMSUNG(726-7864)                                   | www.samsung.com/latin |
| VENEZUELA            | 0-800-100-5303    | www.samsung.com/latin                                     |                       |
| COLOMBIA             | 01-8000112112     | www.samsung.com.co  |                       |
| Europe               | BELGIUM           | 02 201 2418   | www.samsung.com/be    |
|                      | CZECH REPUBLIC    | 800-726-786 (800 - SAMSUNG)                               | www.samsung.com/cz    |
|                      | DENMARK           | 70 70 19 70   | www.samsung.com/dk    |
|                      | FINLAND           | 030-6227 515  | www.samsung.com/fi    |
|                      | FRANCE            | 3260 SAMSUNG (€ 0,15/Min),<br>08 25 08 65 65 (€ 0,15/Min) | www.samsung.com/fr    |
|                      | GERMANY           | 01805 - SAMSUNG(726-7864) (€ 0,14/Min)                    | www.samsung.de        |
|                      | HUNGARY           | 06-80-SAMSUNG(726-7864)                                   | www.samsung.com/hu    |
|                      | ITALIA            | 800-SAMSUNG(726-7864)                                     | www.samsung.com/it    |
|                      | LUXEMBURG         | 02 261 03 710   | www.samsung.com/lu    |
|                      | NETHERLANDS       | 0900-SAMSUNG(726-7864) (€ 0,10/Min)                       | www.samsung.com/nl    |
|                      | NORWAY            | 815-56 480  | www.samsung.com/no    |
|                      | POLAND            | 0 801 801 881, 022-607-93-33                              | www.samsung.com/pl    |
|                      | PORTUGAL          | 80820-SAMSUNG(726-7864)                                   | www.samsung.com/pt    |
|                      | SLOVAKIA          | 0800-SAMSUNG(726-7864)                                    | www.samsung.com/sk    |
|                      | SPAIN             | 902-1-SAMSU(72678)  | www.samsung.com/es    |
|                      | SWEDEN            | 0771-400 200  | www.samsung.com/se    |
|                      | U.K               | 0845 SAMSUNG (7267864)                                    | www.samsung.com/uk    |
|                      | EIRE              | 0818 717 100  | www.samsung.com/ie    |
|                      | AUSTRIA           | 0800-SAMSUNG(726-7864)                                    | www.samsung.com/at    |
|                      | SWITZERLAND       | 0800-SAMSUNG(726-7864)                                    | www.samsung.com/ch    |
| CIS                  | RUSSIA            | 8-800-555-55-55   | www.samsung.ru        |
|                      | KAZAHSTAN         | 8-10-800-500-55-500                                       | www.samsung.com/kz_ru |
|                      | UZBEKISTAN        | 8-10-800-500-55-500                                       | www.samsung.com/kz_ru |
|                      | KYRGYZSTAN        | 00-800-500-55-500   |                       |
|                      | TADJIKISTAN       | 8-10-800-500-55-500                                       |                       |
|                      | UKRAINE           | 8-800-502-0000  | www.samsung.ua        |
|                      | LITHUANIA         | 8-800-77777   | www.samsung.lt        |
|                      | LATVIA            | 8000-7267   | www.samsung.com/lv    |
|                      | ESTONIA           | 800-7267  | www.samsung.ee        |
|                      | Asia Pacific      | AUSTRALIA   | 1300 362 603          |
| NEW ZEALAND          |                   | 0800 SAMSUNG (0800 726 786)                               | www.samsung.com/nz    |
| CHINA                |                   | 800-810-5858, 400-810-5858, 010-6475 1880                 | www.samsung.com/cn    |
| HONG KONG            |                   | 3698-4698   | www.samsung.com/hk    |
| INDIA                |                   | 3030 8282, 1800 110011, 1-800-3000-8282                   | www.samsung.com/in    |
| INDONESIA            |                   | 0800-112-8888   | www.samsung.com/id    |
| JAPAN                |                   | 0120-327-527  | www.samsung.com/jp    |
| MALAYSIA             |                   | 1800-88-9999  | www.samsung.com/my    |
| PHILIPPINES          |                   | 1800-10-SAMSUNG(726-7864)                                 | www.samsung.com/ph    |
| SINGAPORE            |                   | 1800-SAMSUNG(726-7864)                                    | www.samsung.com/sg    |
| THAILAND             |                   | 1800-29-3232, 02-689-3232                                 | www.samsung.com/th    |
| TAIWAN               |                   | 0800-329-999  | www.samsung.com/tw    |
| VIETNAM              |                   | 1 800 588 889   | www.samsung.com/vn    |
| Middle East & Africa | TURKEY            | 444 77 11   | www.samsung.com/tr    |
|                      | SOUTH AFRICA      | 0860-SAMSUNG(726-7864 )                                   | www.samsung.com/za    |
|                      | U.A.E             | 800-SAMSUNG (726-7864), 8000-4726                         | www.samsung.com/ae    |