



MedZense LG20/LG20-e



User manual English

Version:	Releasedate:	Description:
V2.0	11-06-2020	Fixed chapter references in Troubleshooting. Updated Manufacturer address.
V2.1	28-09-2021	Updated images, added OTS section, added EndoEye section, added MedZense IQM section, updated languages.

Contents

1	Important	2
	Important notice	2
2	Your LG20 / LG20-e	3
	Feature highlights	3
	Product overview LG20	4
	Product overview PT10	5
3	Connect	6
	Connect power & probe	6
4	Getting started	7
	Using the settings menu	7
	Interface settings	7
	Display settings	8
	Language setting	9
	Calibration information	9
5	Testing fiber optic cables	10
	Connecting the cable	10
	Simple mode	11
	Advanced mode	12
	OTS - Optical Throughput Score	13
6	Testing scopes	14
	Test cable	14
	Testing the scope	15
7	Testing EndoEye videoscopes	16
	EndoEye feature	16
	Testing EndoEye videoscopes	17
8	Compatibility MedZense IQM	18
	MedZense Instrument Quality Management	18
9	Maintenance	19
	Cleaning instructions	19
10	Tips for reliable measurements	20
	Tips	20
11	Trouble shooting	21
	Common issues & solutions	21
12	Additional information	22
	Technical specifications	22

1 Important

Important Notice

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



This product may not be used for any other purpose than described in this manual. This product may not be modified in any way without consensus of the manufacturer. Never apply power extension cords. The mains adapter may only be inserted in a suitably protected (e.g. by circuit breaker) mains outlet. The adapter must be installed in a readily accessible position.



Read instructions prior to use.



This product complies with the radio interference requirements of the European Community.



This product complies with the radio interference requirements of the Federal Communications Commission.

This product complies with the following harmonized standards following the provisions of 2006/95/EC LV product safety directive:

- EN62233 (Human exposure)
- EN61180 (Pulse tests)

This device should be maintained and cleaned on a regular base. It is advised to have this device checked and calibrated once per year. Poor maintenance and wrongful use could lead to unwanted rejection of fiber optic cables and instruments. Therefore, only trained personnel should use this device.

2 Your LG20 / LG20-e

Feature highlights

LG20


- Fiber optic cable light throughput measurement
- Color spectrum measurement
- Simple & Advanced mode
- Multi-language interface
- Custom fail/pass threshold settings
- Supports all major types of cable fittings

LG20-e

- Light throughput measurement for scopes
- Color spectrum measurement
- Test scopes up to Ø10mm

Product overview LG20

Main unit

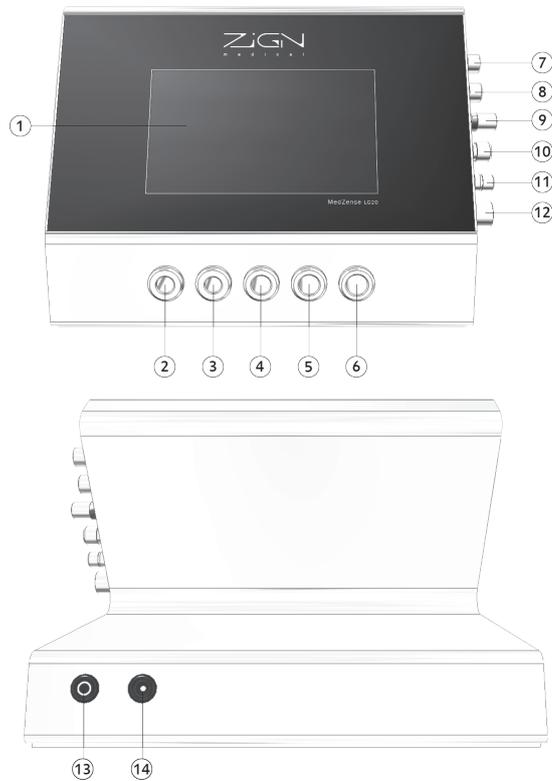

- 1 Touch screen
- 2 Storz light source
- 3 NCS light source
- 4 Olympus light source
- 5 Wolf light source
- 6 Stryker light source
- 7 Storz /Olympus instrument fitting
- 8 Olympus WA instrument fitting
- 9 Universal instrument fitting
- 10 Wolf instrument fitting
- 11 ACM instrument fitting
- 12 Stryker instrument fitting
- 13 Probe connector
- 14 Power entry connector

Product overview PT10

Probe




- 1 Scope insertion socket
- 2 Main unit connector

3 Connect

Connect power & probe

Connect the LG20, power adapter and probe* as shown in this diagram.

*The probe is only available in the model LG20-e

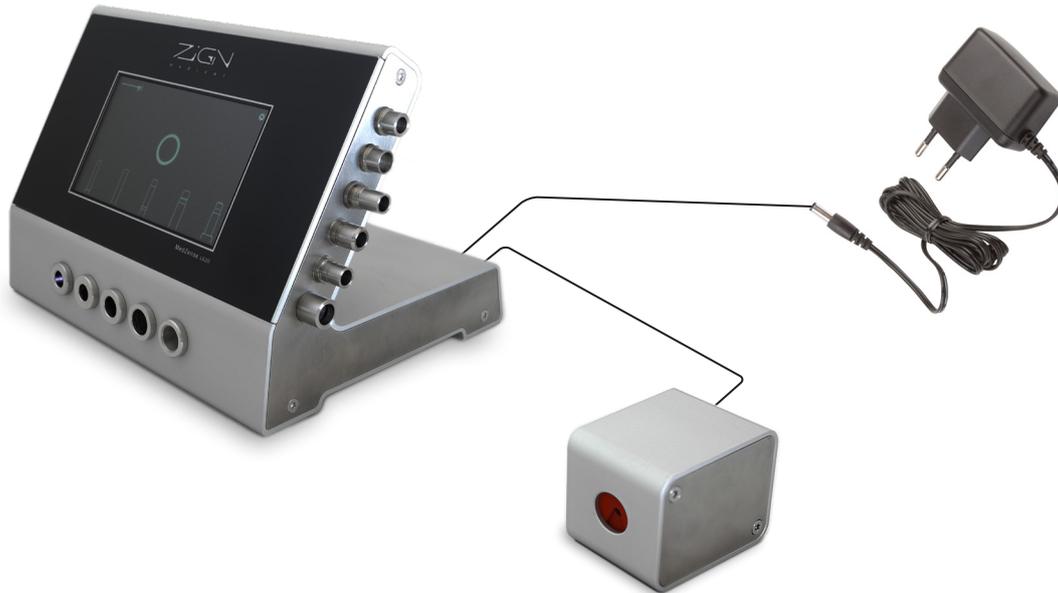

4 Getting started


Using the settings menu

To access the settings menu, press the gear icon (⚙️) in the upper right corner on the main screen. Use pincode 2648 to access the settings menu. Use the tabs on the left to select the topic of interest.

Interface settings

The first tab shows the interface settings. Here you can adjust the following settings:

- Sound on / off
- Measurement modes
- Rejection levels for fiber optic cables

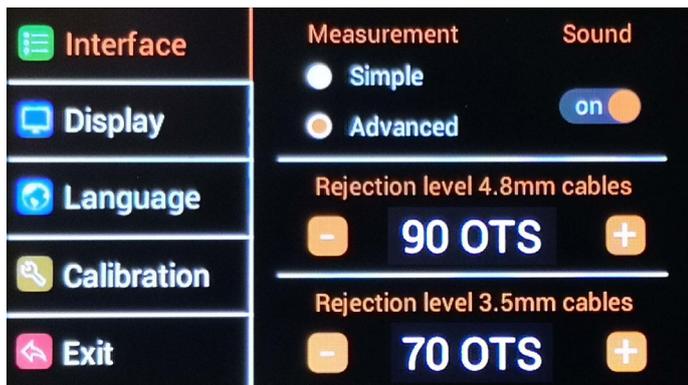

Sound

Use the slider button on the right to enable or disable system sounds. This includes ticks when the touch screen is pressed and notification sounds.

Measurement modes

You can choose between simple and advanced measurement modes. Each mode has a different effect on how the measurement results are displayed.

Simple mode:

- There is one rejection threshold level for all fiber optic cables.
- During fiber optic cable measurement, the displayed results are kept simple.
- Light throughput measurements will be limited to the 100 OTS value.
- Color spectrum measurement results are displayed using a score only. Relative percentages are not shown.

Advanced mode (recommended):

- There are separate rejection levels for both thin (3.5mm) and thick (4.8mm or more) fiber optic cables.
- Light throughput measurements are not limited to the 100 OTS value.
- Color spectrum measurements are displayed in more detail. Relative percentages are shown.

Rejection level


Use the '-' and '+' buttons to decrease or increase the rejection levels for fiber optic cables. Cables with a light throughput equal or less than the rejection level will be rejected.

In advanced mode the rejection level needs to be set for both thin (3.5mm) and thick (4.8mm or more) cables.

Display settings

The second tab shows the display settings. Here you can adjust the following settings:

- Touch screen calibration
- Display brightness
- Screen saver time out

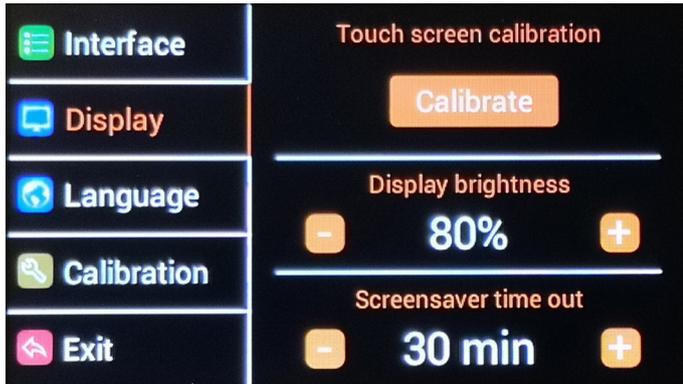

Touch screen calibration

The touch screen calibration feature can be used to improve the touch precision if needed. After pressing the "Calibrate" button, follow the steps shown on the screen to accurately calibrate the touch sensor.

Caution: Please perform this calibration with precision. When the touch sensor is not accurately calibrated it can become very difficult to regain control over the interface.

Display brightness

Use the '-' and '+' buttons to adjust the brightness of the display between 25 and 100%.


Screen saver time out

Use the '-' and '+' buttons to adjust the time out setting for the screen saver. When the device is not used for the specified time, the display will dim and the light sources will be shut down completely. The screen saver time out can be set between 5 and 180 minutes.

When the screen saver is activated you can wake up the device by simply pressing the touch screen.


Language setting

The third tab shows the language settings. Here you can set the interface language to German, English, Spanish, French, Italian, Dutch or Portuguese.

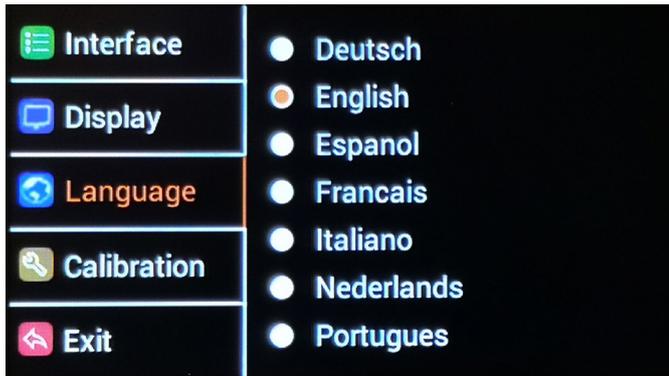

Calibration information

The fourth tab shows the calibration information. This information may be useful to expert users who want to gain a better understanding of the measurement results.

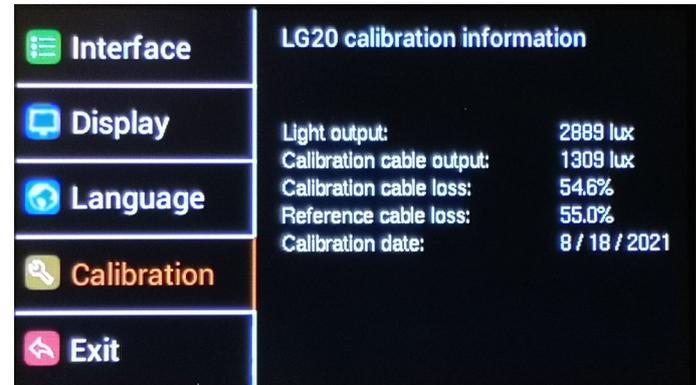

Light output:

The light output of the far most left light source, which is used as the reference in the calibration procedure. In case of this example the light output is 2889 lux.

Calibration cable output:

The light output of the fiber optic cable that was used for calibration. In case of this example the light output was 1309 lux when supplied with the 2889 lux light source.

Calibration cable loss:

The used calibration cable has a loss of 54.6%

Reference cable loss:

The calibration reference is a loss of 55%. This number is based on the average quality of brand new cables, which represent how much loss would be acceptable for new cables. If a fiber optic cable has a loss of 55%, it will be displayed as 100 OTS on the measurement result, as it performs equal to the reference.


Calibration date:

The date on which the device was last calibrated (Month / Day / Year).

5 Testing fiber optic cables

Connecting the cable

Fiber optic cables can be tested when the device is in normal operating mode, showing the main screen. In the center of the screen a breathing circle should be visible and the light sources on the front side should blink periodically from left to right.

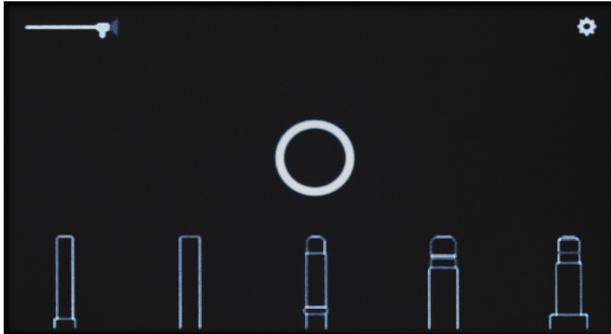

The five drawings on the bottom of the screen represent the five different types of fittings which are supported by the corresponding light sources at the front of the device. If you are uncertain which source matches your fitting, you can press the image on the screen and a photograph of the actual fitting will be shown.

First connect the instrument adapter to the correct fitting on the right side of the device. The adapter should connect firmly to the fitting, either by using the thread or the snap system, depending on the type of fitting.



Now the light source adapter can be inserted in the matching light source. Please make sure you select the correct light source. The on-screen images should guide you in the right direction. If you have selected the correct light source, the adapter should have a snug fit which allows for very little room to wiggle inside the light source. Make sure you insert the adapter fully into the light source.

Caution: Fitting the adapter in the wrong light source will lead to unreliable measurements!

Caution: The adapter should fit in the light source without applying force. Do not apply force when connecting an adapter, this can damage the device and your fiber optic cable!

The device will detect the presence of the cable in the specific light source. An animation will show that the cable is detected. The detection will be confirmed visually and with a sound notification. The detection animation will continue as long as the cable is not held still.

After the detection is confirmed the measurement procedure will start automatically. The cable should be held still during the measurement procedure to prevent measurement errors.

Simple mode

When the test starts, two kinds of measurements are performed.

1. Light throughput

The light throughput is measured using white light. During this measurement the gauge on the left will show the strength of the received light.

The displayed percentage is based on the calibration reference. 100 OTS means the cable is at least as good as the reference, meaning the quality is comparable to a new cable. If the light throughput is better than the reference, in simple mode the result will still display 100 OTS.

See chapter 4, section "Calibration information" for a detailed explanation of this reference, and chapter 5, section "OTS - Optical Throughput Score" for a detailed explanation of OTS.

2. Color spectrum

Next the light throughput is measured through the visible color spectrum from red to blue. The test results are displayed for the three primary colors: red, green and blue. A bar is shown for each color, visualizing the difference in light throughput between the colors and an overall score is displayed.

Test results

After the test is completed the screen will show the results of the measurement. The left side of the screen will show an "OK" or "FAIL" result based on the light throughput. When the result is "OK", a green circle with a check mark will appear at the top center of the screen. In case of a "FAIL" test result, a red circle with a cross will appear.

The light throughput test result depends on the selected threshold for the rejection level. For more details about this rejection level, see chapter 4, sections "measurement" and "rejection level".

The color spectrum test result is displayed as a score from 1 to 10. A score of 10 indicates that the colors red, green and blue have similar performance. For every 10% difference between red and one of the other colors a point is deducted from the score. The minimum score is 1.

For example: When green performs 10% lower than red and blue performs 20% lower than red, the loss is considered 30% and the score will be 7 out of 10. Similarly, when green performs 30% lower than red and blue performs 50% lower than red, the score will be 2 out of 10.

Important note:

The test results as displayed on the device are an advice to the end user. It is the responsibility of the user / owner to set the rejection threshold to the required level and to make sure the device is regularly cleaned and maintained.



Advanced mode

In advanced mode, more details of the test result are shown and a test result for two types of cables is supported.

1. Light throughput

The light throughput is measured using white light. During this measurement the gauge on the left will show the strength of the received light.

The displayed percentage is based on the calibration reference percentage. 100 OTS means the cable is at least as good as the reference, meaning the quality is comparable to a new cable. If the light throughput is better than the reference, the test result will display a value above 100 OTS. See chapter 4, section “Calibration information” for a detailed explanation of the reference, and chapter 5, section “OTS - Optical Throughput Score” for a detailed explanation of OTS.

In the light throughput gauge there are two dials: The thick dial displays the scale for thick (4.8 mm or more) cables and the thin one for thin (3.5 mm) cables. The color of the dial corresponds with the threshold rejection level. Where the dial color is red, it specifies the levels where the cable would be rejected. Where it is green it specifies the acceptable level.

2. Color spectrum

Next, the light throughput is measured through the visible color spectrum from red to blue. The test results are displayed for the three primary light colors: red, green and blue. A bar is shown for each color, visualizing the difference in light throughput between the colors and an overall score is displayed. Under each bar, the relative percentages of the color throughput are shown, where the best performing color is always shown as 100%.

Test results

After the test is completed the screen will show the results of the measurement. The left side of the screen will show an “OK” or “FAIL” result for both thin (3.5mm) and thick (4.8mm or more) cables, based on the light throughput.

When the result is “OK” for both cable types, a green circle with a check mark will appear at the top center of the screen.

When the result is “FAIL” for both cable types, a red circle with a cross will appear.

When the result is OK for only one of the cable types, a blue circle with a question mark will appear. In this case the user will have to verify whether the cable is thin or thick and reject or accept the cable based on this information.

The light throughput test result depends on the selected threshold for the rejection level. For more details about this rejection level, see chapter 4, sections “measurement” and “rejection level”.

The color spectrum test result is displayed as a score from 1 to 10. A score of 10 indicates that the colors red, green and blue have similar performance. For every 10% difference between red and one of the other colors, a point is deducted from the score. The minimum score is 1.

For example: When green performs 10% lower than red and blue performs 20% lower than red, the loss is considered 30% and the score will be 7 out of 10. Similarly, when green performs 30% lower than red and green performs 50% lower than red, the score will be 2 out of 10. Furthermore, the relative percentages of the color throughput are shown. The percentage shows the relative performance of the specific color against the performance of red. Consequently, the color spectrum performance of the best performing color is always shown as 100%.

Important note:

The test results as displayed on the device are an advice to the end user. It is the responsibility of the user / owner to set the rejection threshold to the required level and to make sure the device is regularly cleaned and maintained.



OTS - Optical Throughput Score

100% Light Transmission does not exist

Due to the physical nature of light, there is always a loss of light when transmitting light through a medium. Therefore, actual light transmission through any medium can never reach 100%.

A brand-new, high-quality 3.5mm diameter fiberoptic cable has a light loss of 55% on average. A measurement result of 45% actual light transmission is often displayed as '100%' measurement score. This is the industry standard for light transmission testing of fiberoptic cables.



Industry standard: limited to '100%'

Fiberoptic cables with a light transmission higher than 45% are all displayed with a maximum measurement score of '100%', while the actual measurement score should be higher.

Fiberoptic cables are all different; values higher than '100%' possible

No two light cables are identical, even if they have the same model number and are manufactured by the same manufacturer. With the MedZense LG20, a 3.5mm diameter cable can score higher than '100%'. A 4.8mm diameter cable transmit more light compared to a 3,5mm diameter cable, and can have a measurement score of up to '180%'.

Changing the unit [%] of the measurement score to avoid confusion

The unit percentage [%] is used to describe the *actual light transmission*, the percentage of light able to travel through fiberoptic medical instruments. This value can never reach or exceed 100%.

The *calculated measurement score* with the MedZense LG20(-e) for light transmission as determined by the industry standard for 3,5mm diameter fiberoptic cables is calculated by dividing the actual measured light transmission [%] by a factor 0,45.

The calculated measurement score describes light transmission on a range from 0 to 222 and should not be described with the unit percentage [%], as this measurement result is a calculated score and not a percentage.

Since the release of firmware V2.0 on 1 December 2020, the MedZense LG20 does not display the measurement score in the unit percentage [%] anymore. The unit [%] has changed, however the calculation method to determine quality of light transmission in fiberoptic medical instruments **did not change**.

$$\frac{45\%}{0,45} = '100\%' \rightarrow 100\ ?$$

Introducing OTS, or Optical Throughput Score

Zign Medical introduces OTS, or Optical Throughput Score. The MedZense LG20(-e) calculates the actual light transmission as a percentage [%], and divides this percentage by a factor 0.45 to display the measurement result.

Instead of displaying the measurement result as a percentage [%], the outcome is now displayed as the Optical Throughput Score, or OTS.

OTS in MedZense LG20(-e) Simple and Advanced mode

The MedZense LG20(-e) can be set to the Simple mode and to the Advanced mode in the Settings menu on the device.

Simple mode: measurement results are shown with a maximum of 100 OTS (directly comparable to '100%' from the Industry Standard).

Advanced mode: measurement results higher than 100 OTS are displayed with their actual score.

Actual Light Transmission (%)	LG20 results Simple mode	LG20 results Advanced mode
10%	22 OTS	22 OTS
20%	44 OTS	44 OTS
30%	67 OTS	67 OTS
40%	89 OTS	89 OTS
45%	100 OTS	100 OTS
50%	100 OTS	111 OTS
60%	100 OTS	133 OTS
70%	100 OTS	156 OTS
80%	100 OTS	178 OTS
90%	100 OTS	200 OTS
100%	100 OTS	222 OTS


6 Testing scopes

Test cable

Note:

Scope testing is only available for model LG20-e, or in other words: when the probe is included and connected to the LG20. See chapter 3 for connecting the probe.

To enter scope testing mode, press the endoscope icon (🔍) in the upper left corner of the main screen. Now the following screen should be visible:

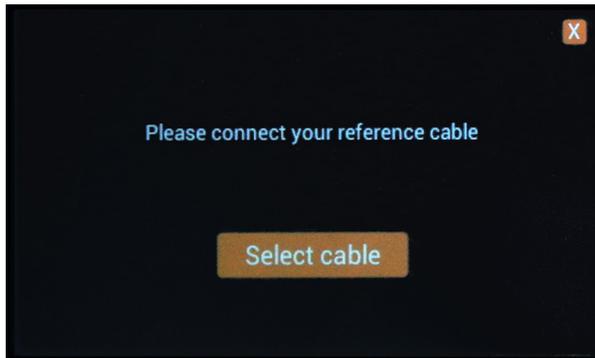

Select two good quality (preferably new) test cables you wish to use for testing your scopes, one 3.5mm diameter cable and one 4.8mm diameter cable. 4.8mm diameter light cables are used in combination with 10mm diameter rigid endoscopes. 3.5mm diameter light cables are used in combination with all smaller diameter rigid endoscopes. It is advised to always use the same test cable to minimize differences between measurements. The selected test cables should have a light throughput measurement of at least 75 OTS.

Connect both sides of the test cable to the matching fittings, as you would for a normal fiber optic cable measurement as described in chapter 5.

Make sure the test cable is fully inserted and kept still. Next, press the “Select cable” button. Now the device will detect the cable and perform a reference measurement. If the light throughput is less than 75 OTS the cable is not accepted as reference cable.

Both the light throughput and color deviations are stored and used for compensation when the scope is tested. This means that any loss or color deviation of your reference cable is not visible in the test results of the scope. Only the actual performance of the scope will be shown.

Testing the scope

Once the reference cable is accepted you are ready to test scopes. Leave the adapter of the reference cable in the light source connected to the LG20 and connect the instrument side of the cable to the scope.

Carefully insert the scope into the probe until it cannot go further. Do not apply force in order not to damage the scope or the inside of the PT10 scope testing probe.

Once the scope is detected the measurement will start. Always make sure the reference cable is still fully inserted into the light source and the scope and probe are held still. It is advised to leave them laying on the table during measurement.



Note:

Since ambient light can enter through the eyepiece and enter the probe, the eyepiece should be covered during the measurement. This can be done by hand or with an eyepiece cap.

When the test starts, two kinds of measurements are performed.

1. Light throughput

The light throughput is measured using white light. During this measurement the gauge on the left will show the strength of the received light.

The displayed result is based on a reference light level. The 100 OTS reference level is based on a light loss of 50% when using a 4.8mm diameter light cable and a 10mm diameter endoscope. All other types of endoscopes are then scaled accordingly.

2. Color spectrum

Next the light throughput is measured through the visible color spectrum from red to blue. The test results are displayed for the three primary colors: red, green and blue. A bar is shown for each color, visualizing the difference light throughput between the colors and an overall score is displayed. Under each bar, the relative percentage for the color is shown, where the best performing color is always shown as 100%.

Test results

After the test is completed, the screen will show the resulting throughput of white light on the left side gauge and the corresponding OTS result. The right side of the screen shows the results of the color spectrum measurement with its corresponding percentages.

Important note: There is no "PASS" or "FAIL" result in the scope testing mode. There is a significant difference in light throughput between different kinds of scopes. Some have lots of light fibers, some have only few. To determine the light throughput quality of the scope, we advice the user to maintain a list of the light throughput score for each type of scope. By performing a reference measurement when the scope is new, a reference throughput can be set. Based on this reference, the user can assess the quality of the scope and the deterioration over time.

Please visit our website for a list of recommended thresholds for common types of endoscopes:

<https://www.zignmedical.com/products/lg20-ots-measurements-explained/>

7 Testing EndoEye videoscopes


Optional EndoEye testing feature

The optional EndoEye testing feature enables the option to test the light transmission of your EndoEye video laparoscopes.


Note:

EndoEye testing is only available for model LG20-e, or in other words: when the probe is included and connected to the LG20. See chapter 3 for connecting the probe.

- » Please contact your local distributor to acquire this feature and have it installed on your MedZense LG20-e device.

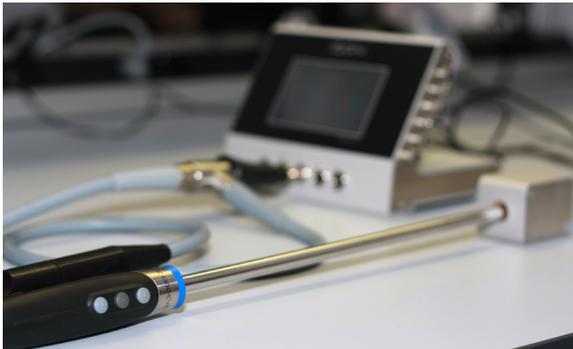

After the EndoEye feature has been installed on your LG20-e, the main screen shows an additional icon, next to the Endoscope test mode icon, to access the EndoEye test mode.

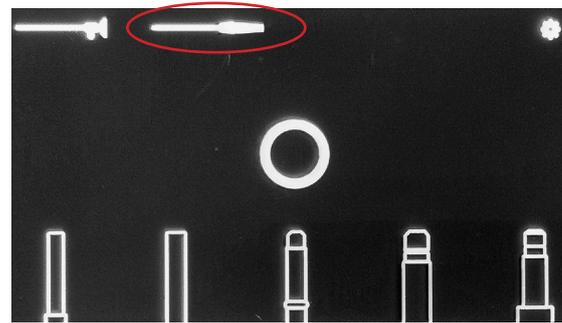


To access the EndoEye configuration settings in the LG20-e settings menu, press the gear icon (...) in the upper right corner on the main screen. Use pincode 2648 to access the settings menu. Select the EndoEye tab in the settings menu to access the EndoEye configuration settings.

Use the '-' and '+' buttons to decrease or increase the rejection level for EndoEye videoscopes. EndoEye videoscopes with a light throughput equal or less than the rejection level will be rejected.



Testing the EndoEye videoscope

To enter the EndoEye testing mode, press the EndoEye test icon on the main screen. The following screen should be visible:

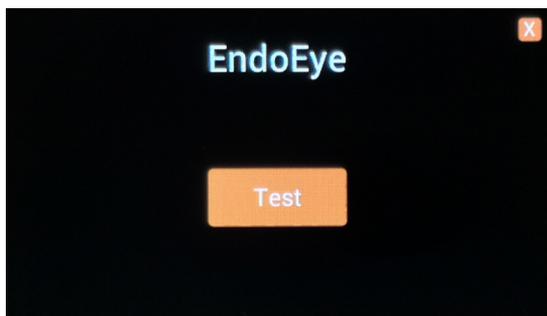

Connect the cable fitting of the EndoEye to the middle light source port on the front of the LG20-e. Make sure the cable fitting is inserted into the LG20 until it cannot go further.

Carefully insert the EndoEye into the probe until it cannot go further. Do not apply force in order not to damage the EndoEye or the inside of the PT10 scope testing probe.

For consistent measurement results, please keep lightly pressing the cable fitting into the LG20-e to ensure a stable and consistent connection during the test procedure. Make sure the EndoEye and probe are held still. It is advised to leave them laying on the table during measurement.

Press the 'Test' button to start the test procedure.

When the test starts, two kinds of measurements are performed.

1. Light throughput

The light throughput is measured using white light. During this measurement the gauge on the left will show the strength of the received light, expressed in OTS, or Optical Throughput Score. Our current recommended rejection level for EndoEye videoscopes is 50 OTS. This value can be adjusted if necessary in the Settings menu (page 16).

2. Color spectrum

Next the light throughput is measured through the visible color spectrum from red to blue. The test results are displayed for the three primary colors: red, green and blue. A bar is shown for each color, visualizing the difference light throughput between the colors and an overall score is displayed. Under each bar, the relative percentage for the color is shown, where the best performing color is always shown as 100%.

Test results

After the test is completed, the screen will show the resulting throughput of white light on the left side gauge and the corresponding OTS result. The right side of the screen shows the results of the color spectrum measurement with its corresponding percentages.

Important note:

The test results as displayed on the device are an advice to the end user. It is the responsibility of the user / owner to set the rejection threshold to the required level and to make sure the device is regularly cleaned and maintained.

8 Compatibility MedZense IQM

Instrument Quality Management

The MedZense LG20(-e) can be connected via USB to the MedZense IQM (Instrument Quality Management) Platform to collect and analyze the test results on instrument level.

The MedZense IQM Platform consists of:

MedZense IQM software, including a Web Application & Test Client
Connects to up to two testing devices
More devices can be connected upon request

Devices integrated in the MedZense IQM Platform:

MedZense LG20-e
Datamatrix Scanner
Diateg Professional (coming soon)

Please contact your local distributor for more information.



Zign Medical introduces MedZense IQM Platform

The WORLD'S FIRST integrated platform for Instrument Quality Management of MIS instruments such as:

- Cold light cables
- Rigid and flexible endoscopes
- Diathermy instruments

9 Maintenance

Cleaning instructions



- 1 Clean the light sources using a non pilling, dry cotton swab
- 2 Clean the instrument adapters using a non pilling, dry cotton swab
- 3 The electrical connections cannot be cleaned and should be kept dry
- 4 The inside of the probe cannot be cleaned and should be kept dry
- 5 The outside surface of the device and the touch screen may be cleaned using a moist towel. Do not use a wet towel. Make sure no moist enters any openings of the device!



10 Tips for reliable measurements

Tips

1 **Always make sure your device is clean**

Fiber optic cables may not always be 100% clean and will leave dirt in the fittings. Cleaning the fittings on a regular basis will make sure the measurements will ensure reliable test results. Refer to chapter 7 for detailed cleaning instructions.

2 **Check your adapters**

If you are using special adapters to connect fiber optic cables to a scope, always check the optical quality of this adapter. Often such adapters are of bad quality or do not directly connect the fibers from the cable to the scope. If there is a big gap between the two fiber bundles, a lot of light will be lost. Keep this in mind before you discard good cables which are fitted with bad adapters.

We advice to always test your cables without adapters to assess the cable quality. When you want to measure the performance of the system including adapter, off course you should test with the adapter.

3 **Consistent methods**

A fiber optic cable may have several broken fibers. This can result in deviations in the outcome when performing consecutive measurements with the same cable. Specifically, the position of the cable can be of significant influence. In a rolled-up fashion, the cable might pass through less light compared to when the cable is fully unrolled. Therefore, be consistent when choosing to unroll or not to unroll the fiber optic cable before testing. If you want to know the maximum performance of your cables unroll your cables first. If you want to know the worst-case performance of your cables roll up the cables before testing. Be careful not to roll up your cables too tight or you may damage the fibers.

4 **Keep your instruments clean**

More than often, dirt and calcic residue accumulates inside the light guide adapter on scopes. This will result in lower light throughput and it can strongly affect the color balance. Although the LG20-e will correctly display the worsened condition, this result might be caused by dirt rather than material damage. Make sure to thoroughly clean the scope before testing it. This will prevent unneeded rejection and repair of your scopes.

11 Trouble shooting

Common issues & solutions

1 **My fiber optic cable is brand new, but the test results shows a very low light throughput**

Possible cause: Bad adapter

Solution:

If you are using a special adapter on you fiber optic cable, check the quality of this adapter. Many cheap adapters do not directly connect the light fibers between cable and scope, which result in a great loss of light. Please remove the adapter and verify the quality of the light guide cable by connecting it without special adapter.

Possible cause: Cable is inserted in the wrong fitting.

Solution:

Please refer to chapter 5 on how to correctly connect your fiber optic cable to the LG20.

2 **My fiber optic cable looks really bad, but the test results show the light throughput is OK**

Possible cause: Unevenly polished fibers

Solution:

Sometimes the end surface of a fiber optic cable can have dark patches when you look at it. These dark patches are usually caused by unevenly polished fibers. You will see that when you move the other end of the cable in other directions, the dark patches will become lighter, while the lighter patches will become darker. This is the result of light exiting the cable in slightly different angles. This does mean the quality of the cable is not excellent, but as the measurement shows, the light throughput can be perfectly acceptable.

Possible cause: Cable is inserted in wrong fitting.

Solution:

Please refer to chapter 5 on how to correctly connect your fiber optic cable to the LG20.

3 **When I measure the same fiber optic cable multiple times, I get different results**

Possible cause: broken fibers

Solution:

A fiber optic cable may have several broken fibers. Broken fibers can cause inconsistencies in measurements because each time the cable moves, more or less fibers may be lined-up properly or not. Nothing can be done to improve such a measurement, since the source is unstable. However, since this inconsistency in measurement indicates a significant number of broken fibers you may consider to reject the cable.

Possible cause: The cable is not inserted fully and it is moved during measurement

Solution:

Please refer to chapter 5 on how to correctly connect your fiber optic cable to the LG20.

12 Additional information

Technical specifications

Power supply:

Type:	External AC-DC adapter
Construction:	Class II
Supply voltage rating:	110 - 240 VAC
Input frequency:	50 - 60 Hz
Input current:	0.3 A
No load input power:	< 0.1 W
Input protection:	Internal T1.0A / 250 VAC fuse
Output voltage:	9 V
Short circuit protection:	Continuous, trip and restart (hiccup mode) with auto recovery

Main unit:

Model number:	LG20
Power consumption:	1.8 W
Input protection:	Internal T0.75A 63VDC fuse
Output protection:	Internal 0.2A self recovering fuse
Dimensions (w x h x d):	190 x 133 x 147 mm
Net weight:	1.6 kg
Installation class:	II
Safety class:	II
Operating temperature range:	5 - 35 °C
Operating humidity range:	5 - 95% non condensing humidity
Maximum usage height:	2000 meter above sea level
IP class:	IP41

Probe:

Model number:	PT10
Power consumption:	0.13 W
Dimensions (w x h x d):	40 x 44 x 64mm
Net weight:	0.16 kg
IP class:	IP21

Manufacturer:

Name:	Entrhal Medical NL B.V.
Address:	Spikweien 25 5943 AC Lomm The Netherlands
Phone:	+49 2834 94 24 80
Email:	support@zignmedical.com
Website:	www.zignmedical.com

Contact Sales & Support:

Sales:	+49 2834 94 24 80
Support:	+49 2834 94 24 818



m e d i c a l

EC Declaration of Conformity (Doc)

Document Version: 0002

We:

Company Name: ZiGN Medical
Postal Address: Colbaan 1
Postcode: 3439 NG
City: Nieuwegein
Telephone Number: +31 (0) 85 273 67 53
E-Mail address: sales@zignmedical.com

Declare that the Doc is issued under the sole responsibility and belongs to the following product:

Apparatus model/Product: Fiber Optic Cable & Scope Tester
Type: LG20 / LG20-e

The object of the declaration described above is in conformity with the relevant Union harmonization legislation:

- EMC Directive 2014/30/EU
- Low Voltage Directive (LVD) 2014/35/EU

The following harmonized standards and technical specifications have been applied:

- EN 55011:2016, A1:2017
- EN 55016-2-3:2017, A1:2019
- EN 61000-3-2:2019
- EN 61000-3-3:2013, A1:2019
- EN 61000-4-2:2009
- EN 61000-4-3:2006, A1:2008, A2: 2010
- EN 61000-4-4:2012
- EN 61000-4-5:2014, A1:2018
- EN 61000-4-5:2014
- EN 61000-4-8:2010
- EN 61000-4-11:2004, A1: 2017
- EN 61010-1:2010

Signed for and on behalf of:

Nieuwegein, 08-01-2020
Place of issue Date of issue

Erik Bockweg, Managing Director
Name, function, signature

A handwritten signature in blue ink, appearing to read 'Erik Bockweg', written over a dotted line.