



I'm not robot



Continue

Toto washlet c200 instruction manual

Toto c200 installation manual. Toto c200 installation.


User Manuals, Guides and Specifications for your Toto Washlet C200 Connect+ Series Toilets. Database contains 1 Toto Washlet C200 Connect+ Series Manuals (available for free online viewing or downloading in PDF): Manual . Instruction Manual WASHLET C200 SW2044 (TCF6531U) SW2043 (TCF6530U) A200 SW2024 (TCF6501U) ■ Thank you for your recent purchase of the product. Please read the enclosed information to ensure the safe use of your product. ■ Be sure to read this Instruction Manual before using your product and keep it in a safe place for future reference. The available functions vary according to the model. Check your model name and write a check mark in this field as needed. Product name (Model) Part No. Functions Cleansing Basic Changing the washing Functions method Drying Convenient SW2024 Ref.Safety Precautions 4 Operational Precautions..... 11 Parts Names 12 Preparation..... 14 DEODORIZER, PRE-MIST Product name, Part No. Temperature Adjustment..... 22 Energy Saver Feature 24 Maintenance Power Plug 26 Main unit 27 Deodorizing Filter 27 Gap between the Main Unit and the Toilet Bowl Safety Precautions These precautions are important for safe usage. Be sure to follow them and use the product correctly.



Symbols and Meanings WARNING May result in death or serious injury. CAUTION May result in injury or property damage. The following symbols are used to indicate important safety instructions for the use of the product. Symbol Meaning This symbol indicates a prohibited use of the product. This symbol is used to indicate a required step in the use of this product. Do not use the Washlet if a malfunction occurs. Always unplug the plug from the outlet. Close the water shutoff valve to stop water supply. Introduction WARNING Possible malfunctions: Water is leaking from a pipe or the main unit. The product is cracked or broken. The product makes a strange noise or emits a strange odor. The product emits smoke. The product is abnormally hot. The toilet seat cushion is out of place. Safety Precautions (Continued) WARNING Beware of irritation or burn. Improper use of the toilet seat may cause irritation or burn. When sitting for a long time on the toilet seat, switch the toilet seat temperature adjustment to "OFF". When any of the following persons use a heated seat or warm air drying, someone should switch the toilet seat temperature adjustment to "OFF" and switch the drying air temperature to "Low". Preliminary studies in females suggest that overuse of continuous spraying can increase the possibility of vaginal mucosa drying and potential reduction in desirable microbial organisms. Although these studies have not been validated, please consult your healthcare provider for concerns regarding whether these circumstances may apply to you. Safety Precautions (Continued) CAUTION To prevent a sudden water leak, do not remove the water filter drain valve when the shutoff valve is open. Doing so will cause water to spurt out. (Refer to Page 31 for instructions on cleaning the water filter drain valve.) Do not fold or crush the water supply hose; do not damage by cutting with a sharp object. Doing so may cause water leaks. Do not install the base plate, which is not attached. Doing so could cause a fire or damage. 1. Do not use while bathing. 2. Do not place or store the product where it can fall or be pulled into a tub or sink. Introduction DANGER To reduce the risk of electrocution: 3. Do not place in or drop into water or other liquid. 4. Do not reach for the product when it has fallen into water. Unplug it immediately. WARNING To reduce the risk of burns, electrocution, fire or injury to persons: 1. Close supervision is necessary when this product is used by, on, or near children or invalids. 2. Safety Precautions (Continued) Grounding Instructions This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electrical current. The plug must be plugged into an outlet that is properly installed and grounded.

DANGER - Improper use of the grounding plug can result in a risk of electric shock. Operational Precautions ■ For prevention of damage ● Do not block the remote control transmitter or receiver. ● Wipe plastic areas such as the main unit and remote control with a soft, wet cloth. ● Do not lean against the toilet lid. < About the seat switch > ● When you sit on the toilet seat, the seat switch turns ON, enabling you to use various features. (A click sound is heard when the seat switch is ACTIVATED. Parts Names To Toilet lid cushion Product name, part no., etc. Toilet lid To Seat switch Se (Built-in) (Bu Water supply hose Warm air a outlet cover * Wand cover Power plug Wand (Page.15) Heated seat Shutoff valve (Page.Right side of main unit Deodorizer outlet * ENERGY SAVER LED WATER LED Main unit removal button (Page.28) SEAT LED POWER LED Introduction Main display Deodorizing filter * (Page.27) Remote control receiver Left side of main unit Toilet seat cushions SW2043 Water filter drain valve (Page 31) Cover * Except SW2024 Water drain plug (Page 40) The toilet seat and lid shape varies by model. Descriptions in this manual are based on the illustrations of SW2044. Preparation Using the Product for the First Time 1. Insert the battery 1 Remove the remote control from the hanger. Remote control If the remote control is secured (for anti theft) 1 Remove the screw from the remote control fixture. (View from side) Remote control Wall Hanger Hanger Screw 2 Open the battery cover and insert two AA batteries. Phillips screwdriver 2 Remove the remote control from the hanger. ■ To secure the remote control again Tighten the screw. 1 2 Insert the power plug. The wand extends and then retracts. 3. Open the shutoff valve 1 Fully open the shutoff valve.

Introduction 2. Turn on the power Check that the POWER LED on the main display is lit up. Basic Operations Press a button on the remote control; a beep sounds when the main unit receives the signal. Stopping [STOP] Stops the operation. Cleansing [REAR] Cleanses your rear. [SOFT] Washes your rear with mild water pressure. *The mode changes between [SOFT] (Flickering) and [REAR] (Lit) each time the button is pressed. [FRONT] Serves as a bidet for ladies. (The drawing is SW2044.) Drying (SW2044, SW2043 only) [DRYER] Dries your rear. ● Functions that operate when a button is pressed during "REAR", "SOFT", or "FRONT" cleansing. [OSCILLATING] Wash your rear thoroughly. The setting changes between "ON" and "OFF" each time the button is pressed. ● [POSITION] Operation ● The wand moves back and forth to ● The wand position can be adjusted to the front or rear. (▲: Moves to the front, ▼: Moves to the rear) [PULSATING] ● Washes with the water pressure pulsating between soft and strong. Basic Operations About the Menu Screen This section is an overview of the settings that can be configured with the remote control. See the corresponding pages for the detailed descriptions.

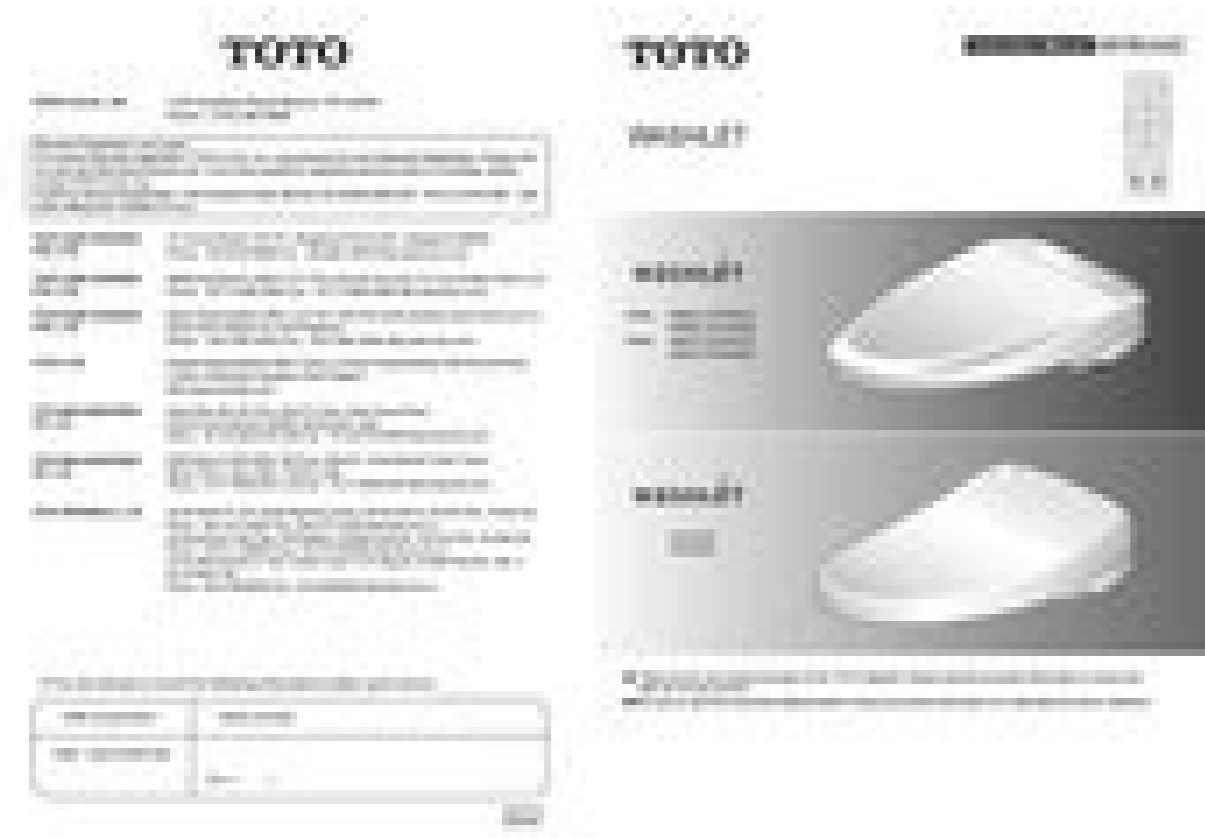

The setting items and numbers vary according to the model. Remote control back side TEMPERATURE SETTING WATER Remote controller display SEAT DRYER DIRECTIONAL Select keys :Select an item :Select a setting Press [MENU] to display the menu screen. Level 1 Level 2 CLEANING Level 3 1/1 ENERGY SAVER Menu Screen MENU Operation WAND CLEANING MODE ON/OFF 1/1 1. AUTO ENERGY SAVER OFF 1/4 1. CLEANING 2. ENERGY SAVER AUTO FUNCTIONS 3.



AUTO FUNCTIONS 1. CLEANING 1/1 1/2 1. PRE-MIST ON 2. DEODORIZER ON 4. OTHER SETTINGS OTHER SETTINGS CLEANING 1/3 1. BEEP ON 2. SETTING LOCK OFF 3. PERSONAL SETTING LOCK ON * Will not be displayed on SW2024 remote control. Automatic Functions Cleaning Features As you approach As you sit DEODORIZER As you stand up* Deodorizer stops -It stops after about 2 minutes (SW2044, SW2043 only) Starts the deodorizer A mist is sprayed inside the toilet bowl to make it more difficult for dirt to adhere PRE-MIST (SW2044, SW2043 only) A mist is sprayed inside the toilet bowl * To sanitize the toilet bowl every time it is used, water remaining in the wand is drained after you stand up from the toilet seat. Operation Note Changing settings If dirt adheres... ■ If dirt adheres to the wand during use, you can extend the wand to clean it. DEODORIZER ON/OFF ● Cleaning the wand (Page 30) (Page 34) • The pre-mist will not spray for about 90 seconds after you stand up from the toilet seat. Temperature Adjustment Warm Water / Toilet Seat / Drying * You can adjust the temperature levels or turn the settings to "OFF". 1 Press [TEMP]. TEMPERATURE SETTING WATER SEAT DRYER 2 Use to select the item you want to set. 3 Use to select the temperature level.



TEMPERATURE SETTING Operation WATER SEAT DRYER Warm water temperature OFF Low High Press until "OFF" appears. When "OFF" is set, the WATER LED will go off. Toilet seat temperature OFF Low High Press until "OFF" appears. When "OFF" is set, the SEAT LED will go off. Drying air temperature* Low High * Will not be displayed on SW2024 remote control. Energy Saver Feature You can save energy by turning the toilet seat heater to a low temperature (or turning the heater "OFF") during periods when the toilet will be used infrequently. It takes about 10 days for the product to determine the periods when it is used relatively less frequently. AM When energy saver is in operation Toilet seat Warm water 0 heater heater PM 6 8 5 0 Set temperature*1 Lit Lit (Orange) Low Set temperature*1 Set temperature*1 Low temperature*2 Operation Example) Time period with infrequent use (from 9:00PM to 6:00AM); Low Time period the toilet is never used (8:00AM to 5:00PM); OFF Time period with infrequent use OFF 9 Low temperature*2 Time period the toilet is never used OFF *3 OFF Lit (Orange) OFF OFF *1 The temperature set on Page 22. Maintenance Power plug (Perform monthly) WARNING Always disconnect the power plug from the outlet before cleaning, maintenance or inspection. (see left) (Failure to do so may cause electric shock or malfunction, resulting in a breakdown.) Dry cloth 1 Wet cloth Disconnect the power plug and wipe it with a dry cloth. *For safety, disconnect the power plug before cleaning or maintenance. 2 Insert the power plug. The POWER LED lights up. Main Unit (Perform daily) Deodorizing filter (Perform monthly) (SW2044, SW2043 only) Soft cloth soaked in water 1 2 • Toilet paper • Dry cloth • Nylon scrubbing pads (May cause damage.) 1 Unplug the power plug. 2 Remove the deodorizing filter. Hold the knob and pull outward. Do not pull with undue force. (May cause damage or malfunctions) Unplug the power plug. Wipe with a soft cloth that has been soaked in water and wrung-out thoroughly. Maintenance Gap between the Main Unit and Toilet Bowl (Perform monthly) You can remove the main unit to clean the top of the toilet bowl and the bottom of the main unit. Soft cloth soaked in water 1 Unplug the power plug. 2 Remove the main unit. Toilet paper, etc. (May cause damage.) If the power is not unplugged, the unit may malfunction or cause a failure or electric shock. • Do not pull the unit with undue force (because the water supply hose and power cord are attached). Gap between the Main Unit and the Toilet Lid (Perform monthly) The toilet lid can be removed for thorough cleaning. Soft cloth soaked in water 1 Unplug the power plug. 2 Remove the toilet lid.



Toilet paper, etc. (May cause damage.) Removing and Reinstalling Hold with both hands :Pull the left side outward. B :Disconnect the right side. 3 Wipe with a soft cloth that has been soaked in water and wrung-out thoroughly. 4 Reinstall the toilet lid.Maintenance Wand (Perform monthly) If you notice dirt Soft cloth soaked in water 1 Toilet paper, etc. (May cause damage.) Extend the wand. Operate with the buttons on the back side of the remote control. (1) Press [MENU]. (2) Use to select "CLEANING". Press [ENTER]. (3) Use to select "WAND CLEANING MODE ON/OFF". Press [ENTER]. The wand extends and water sprays out for cleaning. The wand automatically retracts after about 5 minutes.Water filter drain valve (Perform once every 6 months) 1 Close the shutoff valve. The water supply stops. 4 Remove the cover and water filter drain valve. Loosen with a flat-head screwdriver and then pull. CAUTION Do not remove the water filter drain valve while the shutoff valve is open. Cover (Otherwise, water may leak out) 2 Extend the wand.

Operate with the buttons on the back side of the remote control. Press [MENU].Changing Settings Setting List Setting Types PRE-MIST AUTO FUNCTIONS CLEANING DEODORIZER BEEP OTHER SETTINGS SETTING LOCK PERSONAL SETTING LOCK 32Available Settings* Applicable Models Set whether or not to spray mist automatically after sitting on the toilet seat ON/OFF SW2044 SW2043 Set whether or not to deodorize automatically after sitting on the toilet seat Set whether or not to make a beep sound Set whether or not to use the setting lock Set whether or not to use the personal setting lock Setting Ref.Changing Settings CLEANING 1 2 3 Press [MENU]. Use to select "AUTO FUNCTION" and then press [ENTER]. Use to select "CLEANING" and then press [ENTER].

Remote controller display MENU 3/4 1. CLEANING 2. ENERGY SAVER PRE-MIST 3. AUTO FUNCTIONS (SW2044, SW2043 only) 4. OTHER SETTING AUTO FUNCTIONS Set whether or not to spray mist automatically after sitting on the toilet seat 1/1 1.4 Use to select "PRE-MIST". CLEANING 1/2 1. PRE-MIST ON 2. DEODORIZER ON 5 Use to select "ON/OFF" and then press [ENTER]. CLEANING 1/2 PRE-MIST 1. PRE-MIST OFF OFF 2. DEODORIZER ON (To return → 4 Use to select "DEODORIZER". CLEANING) 2/2 1. PRE-MIST ON 2. DEODORIZER ON 5 Use to select "ON/OFF" and then press [ENTER]. CLEANING 1. PRE-MIST ON 2/2 DEODORIZER OFF 2.Changing Settings OTHER SETTINGS 1 2 Press [MENU]. Use to select "OTHER SETTING" and then press [ENTER]. MENU 1. CLEANING 4/4 Set whether or not to make a beep sound BEEP 2. ENERGY SAVER 3. AUTO FUNCTIONS 4. OTHER SETTINGS Set whether or not to use the setting lock SETTING LOCK Remote controller display Select keys :Select an item :Select a setting [ENTER] [MENU] Items set on this display 1.BEEP 2.SETTING LOCK 3.3 4 Use to select "BEEP". OTHER SETTINGS 1/3 1. BEEP ON Use to select "ON/OFF" and then press [ENTER]. OTHER SETTINGS 1/3 BEEP 1. BEEP OFF OFF (To return → 3 to select Use "SETTING LOCK".

4 Use to select "ON/OFF" and then press [ENTER]. 5 OTHER SETTINGS) 2/3 1. BEEP ON 2. SETTING LOCK OFF OTHER SETTINGS 2/3 SETTING LOCK 1. BEEP ON 2. SETTING LOCK ON PRESS ENTER FOR 2 SEC TO RESET Check the displayed screen. Cancellation method: Press [ENTER] for 2 seconds or longer.What to Do? If you cannot operate with the remote control The batteries may have worn out. Replace the batteries. ■ Replacing the batteries 1 2 3 Unplug the power plug. 4 5 Mount the remote control in the hanger. The POWER LED goes off. Remove the remote control from the hanger.

(Page14) Open the battery cover and replace the AA batteries. (Page14) Insert the power plug. Lit The POWER LED lights up.Freeze damage prevention (continued) Drain the pipe. 3 (4) Drain the water from the water supply hose. (1) Extend the wand. Operate with the buttons on the back Water supply hose side of the remote control. Horizontally 1. Press [MENU]. 2. Use to select "CLEANING". Press [ENTER]. (5) After draining the water, install the water filter drain valve and cover.

3. Use to select "WAND CLEANING MODE ON/OFF".What to Do? Long Periods of Disuse If the toilet is in a location you will not visit for a long time, drain the water. (The water in the tank may become contaminated and cause skin irritation or other problems.) How to drain the water 1 Drain the water from the toilet tank. (Procedures and in "Freeze damage prevention" on page 38) 2 Drain the pipe. (Step 3 (1) to (5) on Page 39) *After draining water, keep the cover removed. 3 Remove the water drain plug.Troubleshooting First, try the actions described on pages 41 to 44.If the problem persists, consult the installer, seller or the contact listed on the back cover of this manual. CAUTION If a water leak occurs, close the shutoff valve. Please check first Is the POWER LED lit? ■ SW2044-SW2043 Is the POWER LED flickering? →The main unit is not mounted properly. Mount the main unit again.Troubleshooting Rear and Rear soft, front cleansing, wand Please check Ref. Page ● When the temperature is low, it takes time for the wand to come out after the remote control button is pressed because the water must be warmed up first. ● Did you sit on the toilet continuously for 2 hours or longer? (If so, operation is stopped for safety purposes.) →Stand up from the seat and then use again.Warm air drying (SW2044, SW2043 only) Trouble Please check The dryer temperature is low ● Is the remote control preset temperature set to a low level?

Stops in the middle of use ● The feature stops automatically after 10 minutes of continuous use. ● Does the seat switch have difficulty detecting? → Sit back on the toilet seat. If you get up slightly from the seat, or sit forward on the seat, the seating switch may temporarily stop detecting your presence. Ref.Troubleshooting Deodorizer (SW2044, SW2043 only) Trouble The deodorizer seems to be not working A strange odor is emitted Ref. Page Please check ● Is "DEODORIZER" set to "OFF"? →Set to "ON". ● Even after sitting down, you do not hear operation sounds. →Sit back on the toilet seat. ● If you hear an operation sound when you sit on the toilet seat. →Clean the deodorizing filter.Specifications SW2044 Item Rated power supply AC 120 V 60 Hz Rated power consumption 406 W Type of water heater 1.2 m (3.93 ft) Water protection level Rear cleansing Spray volume Rear soft cleansing Front cleansing Water temperature Toilet tank capacity Heater capacity Safety device Backflow prevention device Warm air temperature* Functions Warm air dryer Airflow volume Heater capacity Safety device Heated seat Surface temperature Heater capacity IPX4 Approx. 0.27 to 0.43 L/min. (Approx. 0.Limited Warranty 1.

TOTO warrants its washlet series ("Washlet") to be free from defects in materials and workmanship during normal use when properly installed and serviced, for a period of one (1) year from date of purchase.

This limited warranty is extended only to the ORIGINAL PURCHASER of the Product and is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product.Reference 47TOTO U.S.A., Inc. 1155 Southern Road, Morrow, GA 30260 Phone : (770) 282 8686 Warranty Registration and Inquiry For product warranty registration, TOTO U.S.A. Inc. recommends On-Line Warranty Registration. Please visit our web site. If you have questions regarding warranty policy or coverage, please contact TOTO U.S.A. Inc., Customer Service Department, 1155 Southern Road, Morrow, GA 30260 (888) 295 - 8134 or (678) 466 - 1300 when calling from outside of U.S.A.Page 23Safety Precautions 4Operational Precautions 11Parts Names 14Changing Settings 32What to Do? 38●If you cannot operate with the remote control 38●Freeze Damage Prevention ... 38●Long Periods of Disuse 40Troubleshooting 41Specifi cations 45Warranty 46Basic Operations 16Automatic Functions 20DEODORIZER, PRE-MISTTemperature Adjustment..... 22 Energy Saver Feature 24Power Plug 26Main unit 27Deodorizing Filter 27Gap between the Main Unit and the Toilet Bowl 28Gap between the Main Unit and the Toilet Lid 29Wand 30Wand cleaningWater Filter Drain Valve 31 As you sitA mist is automatically sprayed in the toilet bowl to create a water cushion, which prevents dirt from adhering to the surface.Product name,Part No.Table of ContentsThe self-cleaning functions operate automatically.(See pages 20 for details.)A mist is sprayed in the toilet bowl.The deodorizer operates.ReferenceMaintenanceOperationIntroductionPage 32The available functions vary according to the model.FunctionsC200 A200Ref.PageSW2044SW2043 SW2024BasicFunctionsCleansingRear cleansing●●●16Rear soft cleansing●●●16Front cleansing●●●16Water pressure adjustment●●●16, 17Water pressure adjustment●●●Oscillating cleansing●●●Pulsating cleansing●●●Personal setting lock●●●DryingWarm air drying●●●16Changing the temperatureTemperature adjustment●●●22, 23SanitaryFunctionsRemoving odorsDeodorizer●●●20, 21Bowl pre-cleaningPre-mist●●●ConvenientFunctionsHeating the toilet seatHeated seat●●●Saving energyEnergy Saver●●●24, 25MaintenanceMain Unit One-touch removal●●●28Removable toilet lid●●●29Wand cleaning●●●30Your ModelProduct name (Model)Part No.Check your model name and write a check mark in this field as needed.Page 44These precautions are important for safe usage. Be sure to follow them and use the product correctly.Symbols and MeaningsWARNINGMay result in death or serious injury.CAUTIONMay result in injury or property damage.The following symbols are used to indicate important safety instructions for the use of the product.Symbol MeaningThis symbol indicates a prohibited use of the product.This symbol is used to indicate a required step in the use of this product.This product is classified as Class 1 Equipment and must be grounded.Install this equipment where the electrical outlet is accessible.This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.Children should be supervised to ensure that they do not play with the appliance.Use the new hose set included with this equipment.

Do not reuse an old hose set.WARNINGDo not plug or unplug the power plug with wet hands.Doing so may cause electrical shock.Do not get any water or cleaning solution on the main unit or power plug.Doing so may cause fire, electrical shock, heat or short circuit.Doing so may cause the product to crack resulting in injury or water damage.Never disassemble, repair or alter.Doing so may cause fire, electric shock, short circuit or malfunction.The toilet seat, toilet lid, main unit or other parts may come loose and fall off, resulting in injury.Safety PrecautionsPage 52014.10.10D0885TOTO U.S.A., Inc. 1155 Southern Road Morrow, GA 30260 Phone : (770) 282 8686* You are advised to record the following information to allow quick service.Date of purchase : Name of shop :Tel : (/Date : year month dayWarranty Registration and InquiryFor product warranty registration, TOTO U.S.A. Inc. recommends On-Line Warranty Registration. Please visit our web site. If you have questions regarding warranty policy or coverage, please contact TOTO U.S.A. Inc.,Customer Service Department, 1155 Southern Road, Morrow, GA 30260 (888) 295 - 8134 or (678) 466 - 1300 when calling from outside of U.S.A. To offer the best possible service, this website uses cookies. By using our site you agree to using cookies. More information in our Privacy Policy!I understand