

## CODE 25566 FROG DIGITAL THERMOMETER – USER MANUAL


Please read the instructions carefully to ensure accurate temperatures and safe operation.

Electronic digital thermometer can quickly measure body temperature accurately. Compared with the traditional glass mercury thermometer, it has advantages of easy reading, quick response, secure and accurate measurement, memory and buzzer's alarm, etc. Particularly, it does no harm to the environment as well as user's body because no mercury is used. It suits to be used in family, hospital and so on.

### Features

- ◆ Temperature Range: 32°C~ 42.9°C
- ◆ Accuracy: ±0.1°C
- ◆ Digital LCD display
- ◆ Flexible tip for comfort and safety
- ◆ Beeps when reaching highest temperature
- ◆ Auto-off in approximately 10 minutes
- ◆ Last measurement memory
- ◆ Low battery indicator "▼"

### How to Take Temperature

- ◆ Clean the thermometer using isopropyl alcohol or soap and water before use.
- ◆ Press On/Off button you will hear a beep and screen will display  for about 2 seconds, then the screen will display the last measured temperature or L°C, the symbol °C starts flashing and temperature measuring begins when exposed to body heat.
- ◆ The °C symbol will continuously flash until completion of the temperature taking process. A series of 2 short beeps will sound 5 times when measuring is finished. The measured temperature is as shown on the LCD. If the temperature ≥37.8°C, a series of "BI-BI-BI...BI-BI-BI" will sound for 10 seconds. If the temperature <32.0°C, the display show "L°C"
- ◆ Push the On/Off button to turn the unit off. If you do not turn off the unit, it will shut off automatically in approximately 10 minutes.

### Cautions

- ◆ Store the unit in the protective case while not in use.
- ◆ Do not store or keep in direct sunlight, or in high temperatures.
- ◆ Keep battery away from children.
- ◆ Do not open the thermometer except to replace battery.
- ◆ Do not drop the unit, as this may ruin the unit.

### Battery Replacement

Battery must be replaced if "▼" symbol appears during measurement. Make sure a battery of the same type is on hand and proceed as follows: Remove battery compartment lid and change with a button battery (L736C: 1.5V DC). Ensure battery is correctly positioned with "+" facing up. Carefully close the battery compartment lid. Properly dispose of the batteries, keeping them away from small children and heat.

**Warning: Keep battery Out of Children's Reach. Swallowing Battery Could Be Fatal. Battery Should Not Be Charged or Placed Into Extreme Heat As It May Explode.**



Disposal: The product must not be disposed of along with other domestic waste. The users must dispose of this equipment by bringing it to a specific recycling point for electric and electronic equipment. For further information on recycling points contact the local authorities, the local recycling center or the shop where the product was purchased. If the equipment is not disposed of correctly, fines or penalties may be applied in accordance with the national legislation and regulations.

### GIMA WARRANTY CONDITIONS

Congratulations for purchasing a GIMA product.

This product meets high qualitative standards both as regards the material and the production.

The warranty is valid for 12 months from the date of supply of GIMA.

During the period of validity of the warranty, GIMA will repair and/or replace free of charge all the defected parts due to production reasons. Labor costs and personnel traveling expenses and packaging not included.

All components subject to wear are not included in the warranty.

The repair or replacement performed during the warranty period shall not extend the warranty.

The warranty is void in the following cases: repairs performed by unauthorized personnel or with non-original spare parts, defects caused by negligence or incorrect use.

GIMA cannot be held responsible for malfunctioning on electronic devices or software due to outside agents such as: voltage changes, electro-magnetic fields, radio interferences, etc.

The warranty is void if the above regulations are not observed and if the serial code (if available) has been removed, cancelled or changed.

The defected products must be returned only to the dealer the product was purchased from.

Products sent to GIMA will be rejected.



Fabbricante/Manufacturer:  
Gima S.p.A. - Gessate (MI) - Italy