 


# Panasonic®

## 使用说明书 Operating Instructions 蒸汽电熨斗 Electric Steam Iron

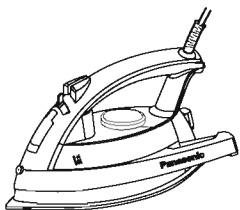

NI-W650CS

型号/Model No. NI-W650CS/W310TS

### 安全信息

电熨斗的安全使用	2
重要安全警示	2-3
特别提示	3

### 功能

各部位的名称及功能	4
功能表	4
防水垢功能	5
防漏水功能	5

### 操作

蒸汽电熨斗的使用方法	5-7
干式电熨斗的使用方法	7
喷水(喷雾)功能的使用	8
衣物纤维及熨衣方式	8

### 规格

规格	8
----	---

### 保养方法

保养方法	9
------	---

### 常见故障及处理方法一览表

常见故障及处理方法一览表	9
--------------	---

### 售后服务

售后服务	9
------	---

### SAFETY PRECAUTION

SAFE USE OF THE IRON	10
IMPORTANT SAFETY INSTRUCTIONS	10-11
SPECIAL INSTRUCTIONS	11

### FUNCTIONS

COMPONENTS IDENTIFICATION	4
FUNCTIONS	4
ANTI CALCUM FUNCTION	12
AUTOMATIC WATER SEAL	12

### OPERATION

HOW TO USE AS A STEAM IRON	12-14
HOW TO USE AS A DRY IRON	14
HOW TO USE THE SPRAY FEATURE	15
FABRIC AND IRONING RECOMMENDATIONS	15

### SPECIFICATIONS

SPECIFICATIONS	15
----------------	----

### MAINTENANCE

MAINTENANCE	16
-------------	----

### GENERALLY MALFUNCTION AND TACKLING METHOD

GENERALLY MALFUNCTION AND TACKLING METHOD	16
---	----

### AFTER SERVICE

AFTER SERVICE	16
---------------	----

衷心感谢您使用 Panasonic 蒸汽电熨斗!

为了保证您能正确使用产品, 请仔细阅读使用说明书并妥善保管本使用说明书。

Sincerely thanks for using a Panasonic Iron.

Before operating this unit, please read these instructions completely and save these instructions carefully.

## 松下·万宝(广州)电熨斗有限公司

Panasonic Wanbao Home Appliances Electric Iron (Guangzhou) Co., Ltd.

广东省广州市番禺区钟村镇万宝基地 原产地: 中国 电话: (020) 84770888

Wanbao Base Zhongcun Town Panyu District Guangzhou City Guangdong Province China

Panasonic客户咨询服务中心: 400-810-0781; 800-810-0781(固定电话)

Panasonic customer and service center: 400-810-0781; 800-810-0781(Fixed Tel)

### 感谢您购买 Panasonic 蒸汽电熨斗!

本产品仅限于家庭使用。请在熨衣板上使用您的电熨斗熨烫衣物。

## 电熨斗的安全使用

您和他人的安全是最重要的!

我们在产品和说明书上提供了重要的安全资讯, 请认真阅读并遵守相关条款:



这是安全警告符号, 它警告您潜在的危險, 有可能使您和他人受伤甚至死亡。相关安全条款附在文字“警告”或“注意”之后, 它们的含义是:



### 警告

如果阁下没有遵照此指示操作, 阁下可能会受到严重的伤害甚至死亡。



### 注意

阁下必须注意, 否则潜在的危險可能使阁下受到轻度或中度的伤害。

安全条款告诉您哪些潜在的危險, 怎样减少被伤害的几率和阁下未按照此指示操作时可能会导致的后果。

## 重要安全警示



### 警告

为减少烫伤、电击、火灾或伤害到身体, 请您使用此熨斗时, 必须遵守相关的安全预防措施, 包括:

使用此电熨斗前请认真阅读此说明书中所有的条款。

在使用前请认真阅读以下内容

1. 在电熨斗接通电源期间, 使用者不能离开, 并避免让小孩接触熨斗。(会造成烫伤、触电、砸伤)
2. 不允许用电源线缠绕熨斗底板。(会损坏电源线)
3. 本产品的电源线有任何损坏时, 为了确保安全, 请勿擅自更换电源线, 务必委托本公司的维修站更换。请勿将本产品的电源线用于其它电器产品。(会造成火灾、触电, 异常会造成受伤)
4. 使用过程中, 应避免底板和隔热板等高温部位接触身体、不耐热物体和金属钮扣等金属物体。(会造成烫伤、损坏物品或损坏底板涂层)
5. 给水箱加水或倒水时必须拔出插头, 切断电源。(会造成触电)
6. 本熨斗必须插入带地线连接的电源插座中。(会造成触电、火灾)
7. 发生异常时(有烧焦、冒烟等)须立即停止使用并拔出插头, 然后向本然后向本公司的维修站咨询。(会造成触电、火灾)
8. 电熨斗损坏或曾经掉落并能看到明显损坏的痕迹或漏水, 用户请不要自行拆机维修, 应送指定维修中心修理, 否则后果自负。(会造成触电、火灾)

- 电熨斗必须放在稳固的台面，当竖立放在台面时，保证下面支撑面是稳固的。(会造成底板刮花，熨斗倒下会造成身体受伤或烫伤)
- 不要在电源线缠绕的状态下使用电熨斗。(会很快损坏电源线)
- 使用本产品时，在插上电源前，请先将调温旋钮调到“0”位置。(以免烫伤衣物)
- 本产品不适合以下人士(包括小孩)使用：身体官能或心智慧力退化者，或是经验与使用知识缺乏者。他们需要有负责其安全的人员在旁监督，或指示产品的使用方法，方可使用。
- 请勿让小孩将本产品当成玩具。

## 警告

不要用手接触高温部(底板表面、隔热板、水箱下面)。



 
(会造成烫伤。)



不要让热的蒸汽碰到手或身体其它部位。



(会造成烫伤。)

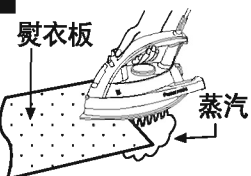


在熨衣板上熨衣：  
当底板有部分离开熨衣板范围时，不要使用蒸汽或喷射蒸汽。

不要反方向握熨斗把手，以免不小心按到喷射按钮。



 (会造成烫伤。)

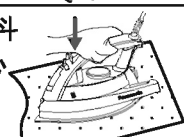

使用蒸汽时不要倾斜、晃动太厉害！



(会造成热水飞出而造成烫伤。)



(会造成烫伤。)



禁止此类情况发生。

## 特别提示

### 警告

触电或火灾的危害

请不要在同一个电路回路中使用其它高功率的电器。

### 注意

为减少个人伤害或损伤电熨斗：

- 不要使用清洁类产品清洗电熨斗，这样可能会导致损害电熨斗的工作部位。
- 在蒸汽电熨斗里请不要使用水添加剂或其它像柠檬、香水等代替品，它们会沾污衣物。
- 如果在使用后未将蒸汽旋钮设在干式(关)位置，残留的水可能流到底板而导致在下次使用时造成烫伤。
- 用户应小心使用产品并避免产品掉落。(可能会造成水箱漏水)

 
## 各部位的名称及功能 COMPONENTS IDENTIFICATION

### NI-W650CS

喷水(喷雾)按钮 Spray Mist Button

蒸汽旋钮 Steam/Dry Selector

每拨一次可切换 Switch as the following

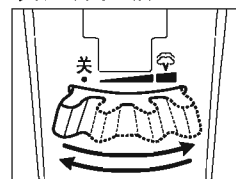

干式(关)  
Dry  
(Close)

低档蒸汽  
Low  
Steam

中档蒸汽  
Medium  
Steam

高档蒸汽  
High  
Steam

注水口盖  
Water Fill Cover

喷水(喷雾)嘴  
Spray Nozzle

底板  
Soleplate

水量指示  
Water Level Indication

防水垢装置(水箱内)  
Anti Calcium Cassette

### NI-W310TS

喷水(喷雾)按钮  
Spray Mist Button

蒸汽喷射按钮/垂直喷射按钮

Jet of Steam Button/Vertical Steam Button

调温刻度对照位置 Temperature Select Scale Position

把手  
Handle

交流电源线  
AC Power Cord

指示灯调温指示  
Temperature  
Select Indicator

竖立底座  
Heel Rest

隔热板  
Heat-insulated Plate

水箱  
Water Reservoir (Water Window)

调温旋钮  
Temperature Selector Dial

插头  
Plug

 
本产品符合 GB4706.1-2005, GB4706.2-2007, GB4343.1-2003, GB17625.1-2003 国家标准。  
This product conforms to GB4706.1-2005, GB4706.2-2007, GB4343.1-2003, GB17625.1-2003 Standard.

## 功能表 FUNCTIONS

功能	Functions	NI-W650CS	NI-W310TS
三档蒸汽	Three Level Steam	是 Yes	是 Yes
喷水(喷雾)装置	Spray	是 Yes	是 Yes
防水垢装置	Anti Calcium Cassette	是 Yes	是 Yes
喷射蒸汽	Jet of Steam	是 Yes	
垂直熨烫	Vertical Steam	是 Yes	
防漏水装置	Automatic Water Seal	是 Yes	
球面陶瓷涂层底板	Ceramic Coating Curved Soleplate	是 Yes	
球面钛金涂层底板	Titanium Coating Curved Soleplate		是 Yes

## 防水垢功能

- 在水箱里装有防水垢装置，能软化水质，降低水中矿物质含量；使水垢不会积聚在熨斗中，延长熨斗的使用寿命。
- 一般自来水也能长期使用，而不降低蒸汽性能。

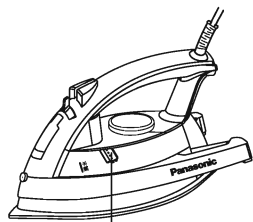


防水垢装置(水箱内)

## 防漏水功能 (仅NI-W650CS)

 在底板上面装有防漏水装置，在使用时，底板温度低于约 115℃ 时，防漏水装置就会动作，将蒸汽水槽封闭，避免因水滴漏出底板沾污衣物。

此外，使用后不用通电底板也会自动干燥，防止底板腐蚀；电熨斗冷却后即可保存。

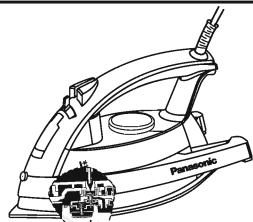

防漏水装置

## 蒸汽电熨斗的使用方法

对于低温，中温及热敏感的布料，可在衣服不易看到的地方试熨，必要时垫布熨烫。

 
- 1 a) 插上电源前，请先将调温旋钮调至“0”位置。  
(确认插头不能与电源插座相连)

- b) 将电熨斗水平放置。
- c) 将蒸汽旋钮拨至“关”位置。
- d) 用水杯加水。

**注意：**① 要使用干净的自来水。


② 给水箱加水时，插头不能插入电源插座。

③ 加水时，注意竖立熨斗观察水量。加水不要超过“满水”刻度，否则竖立放置电熨斗时会有蒸汽冒出。

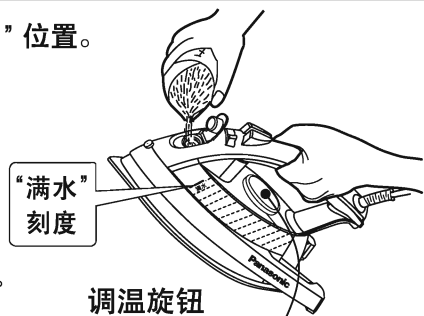

- 2 将插头插入电源插座，旋转调温旋钮接通电源。

 **注意：**在电熨斗接通电源期间，使用者不能离开。

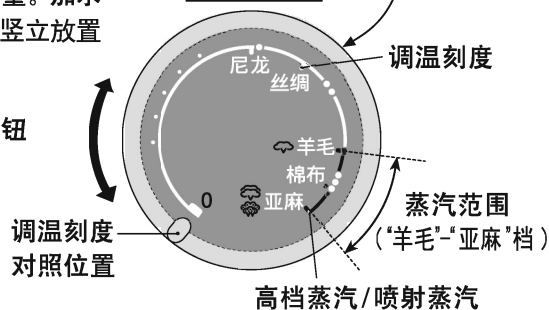

- 3 应选择“蒸汽范围”内的温度(“羊毛”-“亚麻”档)。


**注意：**使用高档蒸汽或喷射蒸汽时，应选择调温刻度的“亚麻”位置，低档温度会漏水。

温度区域	蒸汽旋钮位置	推荐
“羊毛”到“亚麻”	低档蒸汽	薄的或轻的衣物时推荐使用。
●●● 到“亚麻”	中档蒸汽	这个温度足以产生一般的蒸汽量。处于这个温度时，你可以根据衣物选择低档蒸汽、中档蒸汽。
“亚麻”	高档蒸汽	你可以在这区域选择所有档次的蒸汽，包括适用于要求大量蒸汽的衣物的高档蒸汽(例如厚布料，顽固的皱折部位)。


- 4 a) 待电熨斗升温至指示灯自动熄灭。  
b) 拨动蒸汽旋钮，选择所需的蒸汽量，即可开始熨衣。

**注意：**此蒸汽功能只适宜于水平使用，使用蒸汽时不要突然竖起熨斗。

### 蒸汽旋钮(每拨一次如下图切换)

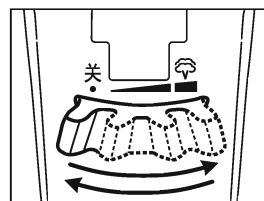 


干式(关) | 低档蒸汽 | 中档蒸汽 | 高档蒸汽

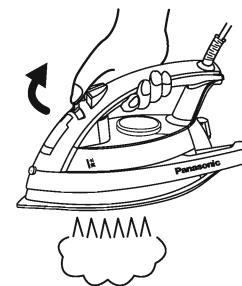 

- 5 喷射蒸汽的使用(仅NI-W650CS)

 
- a) 适用于特厚布料及难于消除皱折的布料，在使用的同时清洗蒸汽孔。
- b) 开始使用时可能不出蒸汽，空打喷射按钮几次直到蒸汽出来。
- c) 为了防止热水从底板滴出，按动喷射按钮的间隔不能小于 2-5 秒。
- d) 使用垂直喷射蒸汽时，可将衣物挂在衣架上。将熨斗离开身体远一些，使其靠近衣物但不接触它。熨烫多皱纹的衣物时，用空的手拉紧衣物并隔 2-5 秒按动喷射按钮。

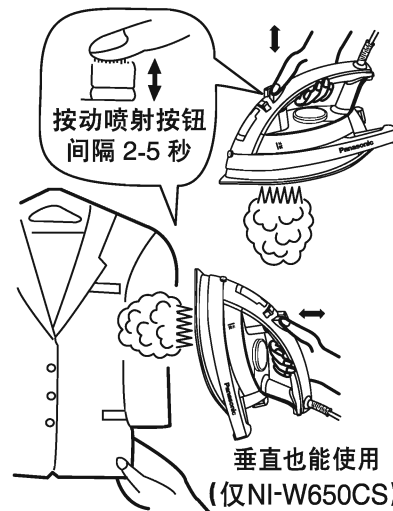


**注意：**

- ① 使用喷射蒸汽功能时，应将蒸汽旋钮切换至“关”位置，并将调温旋钮调至“亚麻”档，否则可能有水滴出。
- ② 不要对人身部分和穿在身上的衣服使用喷射蒸汽。

 - ⑥ 无论电熨斗水平或竖立都能清楚观察水量。当水量较少时，请拔出插头，重新加水，其操作按①-②步骤进行。

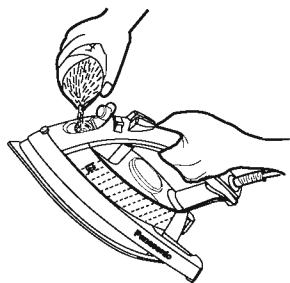


 - ⑦ a) 熨衣完毕，请立即拔出插头。  
b) 拨动蒸汽旋钮至“关”位置。  
c) 将电熨斗底板向上，摇晃直至将水倒空。

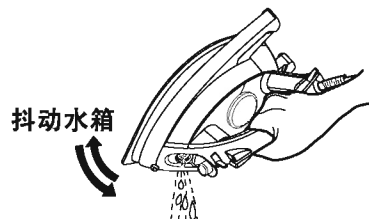

- ⑧ 将插头插入电源座，重新通电5分钟，切断电源待冷却后再将电熨斗放在纸箱内，置于安全处保管。

 
注意：在冷却和保管时，应将蒸汽旋钮保持在“关”位置。

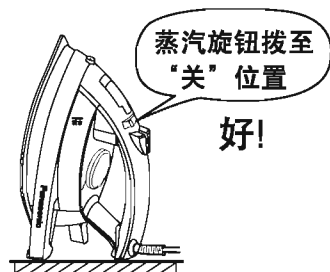


## 干式电熨斗的使用方法

1. 将蒸汽旋钮拨至“关”位置。
2. 将调温旋钮调至“0”位置后，将插头插入电源插座，接通电源。
3. 根据“调温刻度”，将调温旋钮调至适当的温度位置。
4. 待电熨斗加热致指示灯自动熄灭，即可开始熨衣。
5. 熨衣完毕，请拔出插头，冷却后放入纸箱内，置于安全处保管。

 调温旋钮(NI-W650CS)

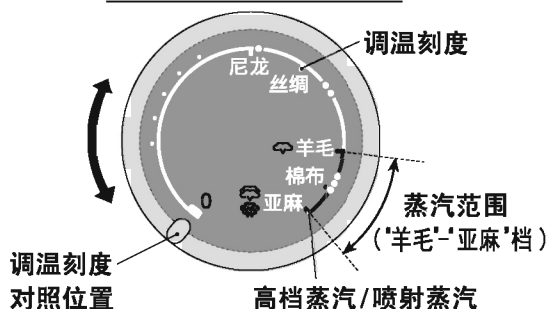


(NI-W310TS)

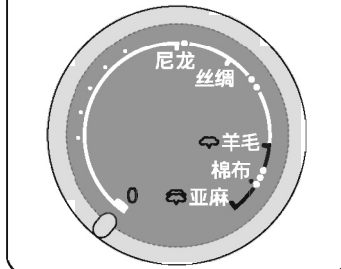 

## 喷水(喷雾)功能的使用

 重复按喷水(喷雾)按钮，直至喷雾产生，即可使用。喷水(喷雾)功能主要用于熨烫较厚的棉、麻布料。

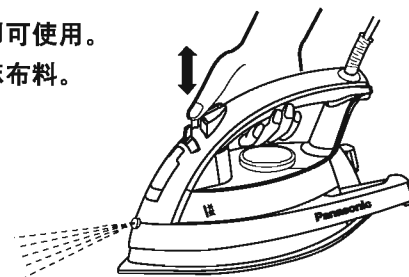

## 衣物纤维及熨衣方式

注意：1. 对于热敏感的布料，应垫布在衣物上熨烫，以免变形或损坏。  
2. 熨混纺衣物时，应根据耐热性较差的纤维来选择温度。  
3. 熨不同布料的衣物时，先熨烫耐热性较差的衣物。

衣物纤维	温度设定	较好的熨衣方式
尼 龙	尼 龙	干熨衣物里面。
丝 绸	丝 绸	干熨衣物背面；熨衣领、衣袖、口袋时，可轻轻地熨烫衣物正面。
羊 毛	羊 毛	轻轻地熨烫衣物正面。
棉 布	棉 布	宜采用蒸汽熨烫，可根据衣物的厚薄和皱折程度进行喷雾，对黑色衣物应熨背面，以免出现“镜面”现象。
亚 麻	亚 麻	

 
## 规格

额定电源	220V~ 50Hz	功 能	蒸汽/干式熨烫
额定功率	1850W	蒸汽产生方式	滴下方式
插头/电源线	单相三极插头/1.8 m活动式	自动温控器	调温范围： (约85°C-200°C)
产品尺寸	长约270mm, 宽约120mm, 高约150mm	熨烫面积	220 cm <sup>2</sup>
产品重量	约1.4kg	贮水量	200 ml
放置方式	自立式	指示灯	指示灯调温指示

## 保养方法


拔出插头，待电熨斗充分冷却后

- 用软布擦拭电熨斗底板及其他部份。
- 出现较严重的污渍时，可用软布沾中性洗涤剂擦拭。

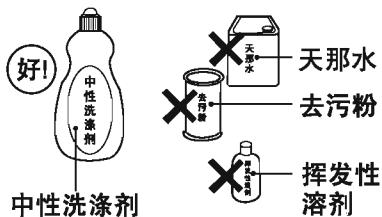

## 自动清洗

 - 首先检查水量达到满量一半以上。不要接通电源，拨动蒸汽旋钮，让水滴入底板(约30秒)；关闭蒸汽旋钮，在空中水平拿着熨斗，然后接通电源，将调温旋钮调至蒸汽范围，让水和蒸汽从底板喷出来，直到无蒸汽喷出。
- 利用喷射蒸汽清洗底板汽化室和蒸汽孔。参照第6页的《喷射蒸汽的使用》，多次按动蒸汽喷射按钮直到无蒸汽喷出。(仅NI-W650CS)

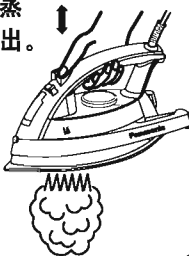

## 常见故障及处理方法一览表 (请参照本表格进行检查)

故障	检查部位	插头	调温旋钮	蒸汽旋钮	蒸汽喷射按钮 (仅NI-W650CS)	蒸汽孔	排水方法	调温刻度 (调温旋钮)
不出蒸汽		○	○	○		○		
蒸汽量太小			○	○		○		
蒸汽孔漏水		○	○		○			
熨烫表面腐蚀				○			○	
不发热		○	○					
布料烧焦萎缩			○					○
处理方法 (不能处理时与销售店联系)	是否插好?	确认位置是否正确?	来回2-3次拨蒸汽旋钮恢复到蒸汽位置。保管时拨至干式(关)位置。	按动按钮的间隔为2-5秒。	参考<保养方法>进行清洁处理。	冷却前要进行排水。	根据指示适当设定温度。垫布在衣物上熨烫。	

## 售后服务

关于售后服务等，如有不明白之处，请向销售店或致电 800-810-0781 咨询。

### ① 保修证 (另附)

在购买本产品时从销售店领取，阅读完后，妥善保管。必须确认保修证上是否记载了 [ 购买日期、销售店名 ] 等。

### ② 需要修理时

按上述表格自我检查后仍然不能处理时，请与维修店联系。

#### 保修期内

向维修店要求修理，按保修证规定，向维修店提交需修电熨斗、保修证及购机发票。

#### 超过保修期内

向维修店要求修理，按规定进行收费修理。

## Thank you for buying a Panasonic Iron

This appliance is intended for household use only. Please use your iron on an ironing board.

## SAFE USE OF THE IRON

### Your safety and the safety of others are very important

We have provided important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. It is used to alert you to potential hazards that can kill or injure you and others. The safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION". These words mean:

**! WARNING**

**This describes issues which could cause death or serious injury.**

**! CAUTION**

**This describes issues which could cause injury or damage your belongings.**

The safety messages will tell you what the potential hazard is, how to reduce the chance of injury, and what can happen if the instructions are not followed.

## IMPORTANT SAFETY INSTRUCTIONS

**! WARNING**

**To reduce the risk of burns, electric shock, fire, or injury to persons:**

basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING THE IRON

1. Do not leave the iron unattended while it is connected to the electrical source. Keep it away from children.
2. Do not loop Cord around iron Soleplate.
3. If the supply Cord is damaged it must be replaced by our service agent in order to avoid a hazard.
4. During operating, should prevent such high-temperature parts as the Soleplate or Heat-insulated Plate etc., from contacting body, thermo-labile objects and metal buttons and other metal objects so as not to scald or damage of objects.
5. Should unplug and cut off the power supply before you add in or empty out water from Water Reservoir.
6. Must use the electrical outlet with earth connection.
7. Should stop using and pull out the Plug immediately while abnormal occurs (such as scorch, smoke etc.) to avoid fire or electric shock, then contact with our service agent.
8. If the iron was damaged or has been dropped and there are visible signs of damage or if it is leaking, do not repair the iron by yourself, it should be repaired by the designated service center; otherwise the user should take all responsibilities of damage.

9. The iron must be used and rested on a stable surface. When placing the iron on its Heel Rest, ensure that the surface under the Heel Rest is stable.
10. Do not use the appliance with the Cord entangled. The supply Cord might be damaged as a result.
11. **Please set the Temperature Selector Dial to " 0 " before connecting to the electrical outlet.**
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.

## ⚠️ WARNING

Don't touch the high temperature parts (such as Soleplate surface, Heat-insulated Plate, underside of the Water Reservoir).



 
(May be scalded.)



Don't touch the hot steam with your hands or other parts of your body.



(May be scalded.)

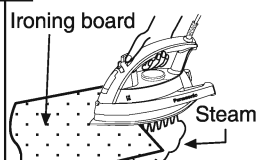

While ironing on an ironing board, don't use the Steam or Jet of Steam when the soleplate is out of the ironing board.

 


(May be scalded.)

Don't grip the handle in the opposite direction, avoid pressing the Jet of Steam Button unawares.



(May be scalded.)

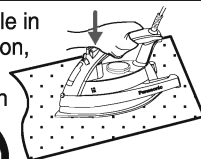

Don't slant or shake the iron too much.



(May be scalded by hot water.)



Prohibit such accident occurring.

## SPECIAL INSTRUCTIONS

### ⚠️ WARNING

To reduce the risk of electric shock or fire:

Do not operate another high wattage appliance in the same circuit, to avoid a circuit overload.

 
### ⚠️ CAUTION

To reduce the risk of personal injury and damage to your iron:

1. Never use steam iron cleaning products in the iron, as they may damage working parts of the iron.
2. Do not use water additives or substitute water such as linen or scented water in the steam iron. They can stain fabrics.
3. If the Steam/Dry Selector is not at Dry(关) position after using, remaining water will move into the Soleplate and can result in burns at the next use of the iron.

## ANTI CALCIUM FUNCTION

- The built-in Anti Calcium Cassette in the Water Reservoir, softens water; continuously reduces mineral content in the water. Reduce scale buildup in the vaporizing chamber of the iron, making it possible to use steam function for a long period of time.
- Ordinary water can be used in this iron for a long time, and steam function doesn't weaken.

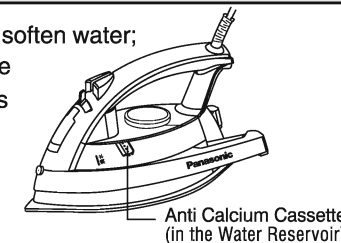


Anti Calcium Cassette (in the Water Reservoir)

## AUTOMATIC WATER SEAL (NI-W650CS Only)

 Auto-Valve System built-in the Soleplate, when the temperature of the Soleplate drops below 115°C, the valve for the vaporizing chamber in the iron automatically closes and stops the water from going in further. This prevents water from spitting out the Soleplate, staining the clothes.

Besides it is unnecessary for you to heat the Soleplate again and it will automatically dry, store the iron when it cooled.

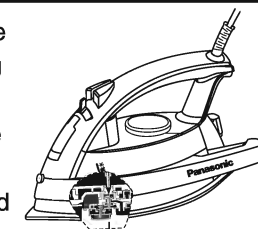

Auto-Valve System

## HOW TO USE AS A STEAM IRON

(For low, medium temperature and heat-sensitive fabric, try to iron invisible place of fabric; if necessary use a press cloth on top of fabric.)

- 1 a) Before using the iron, please set the Temperature Selector Dial to " 0 " and confirm the Plug don't connect to the electrical outlet.  
b) Place the iron horizontal.  
c) Move the Steam/Dry Selector to the Dry(关) position.  
d) Fill the iron with water.

Notice:

- ① Using pure tap water.
- ② While fill Water Reservoir with water, don't plug the AC Power Cord into electrical outlet.
- ③ Observe the volume of water at upright position, do not overfill above "MAX(满水)" indication, otherwise the steam will come out through the vents when the iron is positioned vertically.

 
- 2 Plug the AC Power Cord into electrical outlet. Dial the Temperature Selector Dial to connect with power supply.

Notice: Do not leave the iron unattended while it is connected to the electrical source.

- 3 Choose temperature within the Steam scale ["羊毛 (Wool)" to "亚麻 (Linen)" scale].


Notice:

When use Regular steam or Jet of Steam, please set the Temperature Selector Dial to "亚麻 (Linen)" zone. Low temperature will lead to water leakage.

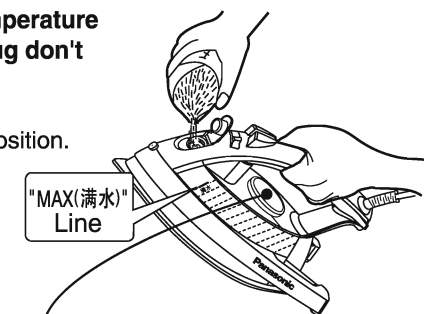

"MAX(满水)" Line

 Temperature Selector Dial

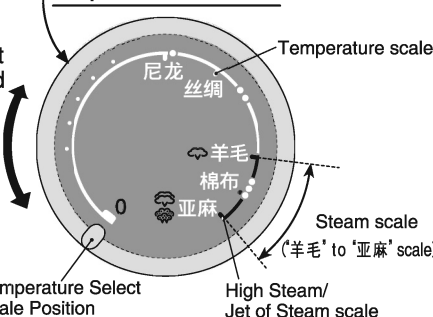

Temperature scale

尼龙 丝绸




羊毛 棉布

亚麻

Steam scale ("羊毛" to "亚麻" scale)

Temperature Select Scale Position

High Steam/ Jet of Steam scale



Temperature Zone	Steam/Dry Selector Position	Recommendations
羊毛 (Wool) to 亚麻 (Linen)	 Low Steam	This is recommended for thin or delicate fabrics.
●●● to 亚麻 (Linen)	 Medium Steam	The Temperature is enough for normal steam generation. From this temperature you can select Low Steam, Medium Steam according to the fabric.
亚麻 (Linen)	 High Steam	There you can select any amount of steam, including High Steam, for fabrics requiring a lot of steam (i.e. thick materials, items with stubborn wrinkles).

- 4** a) Preheat the iron until the Indicator Light goes out.  
b) Move Steam/Dry Selector, select steam quantity; and start ironing.

**Notice:**

  
The Steam function can be only used in horizontal situation. Do not suddenly make the iron upright when the Steam function is being used.

**Steam/Dry Selector** ( switch as the following )

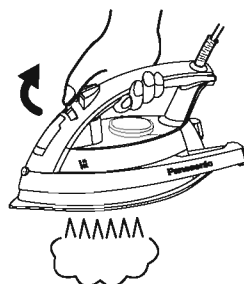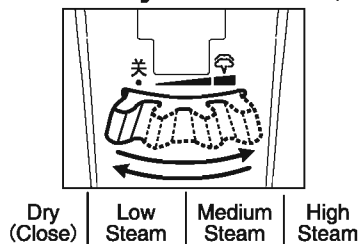

**5 How to use the Jet of Steam feature (NI-W650CS Only)**

 - a) For fabrics of thick materials and with stubborn wrinkles, and cleaning the steam vents at the same time.  
b) Pump the Jet of Steam Button several times before using for the first at each ironing session.  
c) The interval should not less than 2-5 seconds when using the Jet of Steam, to avoid the hot water dripped from the Soleplate.  
d) When using Vertical Steam, hang the garment on a clothes hanger. Hold the iron away from your body close to but not touching the fabric. Pull the fabric tight with your free hand and after 2-5 seconds press the Jet of Steam Button.

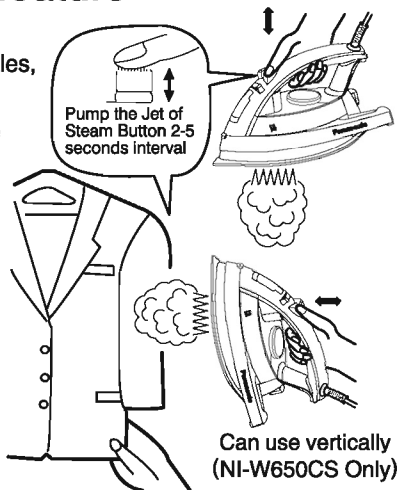


**Notice:**

- ① When using Jet of Steam, keep the Steam/Dry Selector on the Dry(关) position, and set the Temperature Selector Dial to "亚麻 (Linen)" zone, or some water will drop from iron.  
② Never iron clothes on the body or point your iron at anyone when steaming.

- 6** The water volume can be observed very clearly whatever in vertical or horizontal position. Please pull out the Plug when the volume of water is low, and refill the iron according to the step ①-②.




 - 7** a) Pull the Plug out after ironing finished.  
b) Move the Steam/Dry Selector to the Dry(关) position.  
c) Turn over electric iron and let Soleplate up, shake it until empty water from iron.

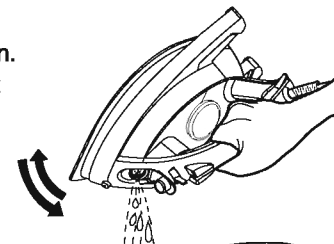

- 8** Plug the AC Power Cord into electrical outlet, supplying power for 5 minutes one more times, then pullout Plug, store the iron inside the box to a safe place after the iron is cold.

 
**Notice:** While cooling and keeping, should keep Steam/Dry Selector on the Dry(关) position.

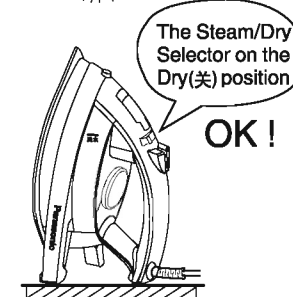


**HOW TO USE AS A DRY IRON**

1. Move the Steam/Dry Selector to Dry(关) position.
2. Set Temperature Selector Dial to "0", plug the AC Power Cord into electrical outlet.
3. According to "Temperature scale" set the Temperature Selector Dial to the desired position.
4. Preheat the iron until the Indicator Light goes out, and start ironing.
5. After complete ironing, pullout Plug, store the iron inside the box to a safe place after the iron is cold.

 Temperature Selector Dial(NI-W650CS)

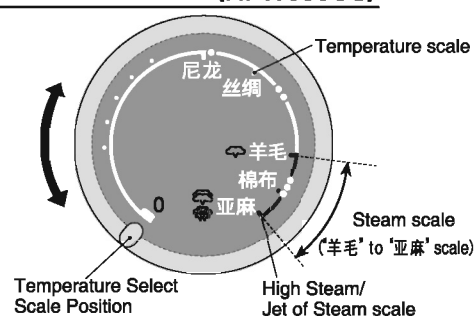


(NI-W310TS)

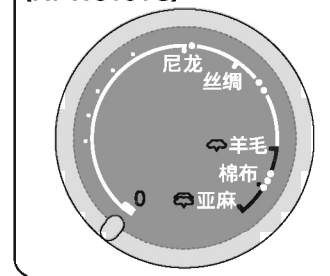 

## HOW TO USE THE SPRAY FEATURE

Repeat to pump the Spray Mist Button till it works.

 
The spray feature is particularly helpful for ironing thick materials such as cotton, linen fabric.

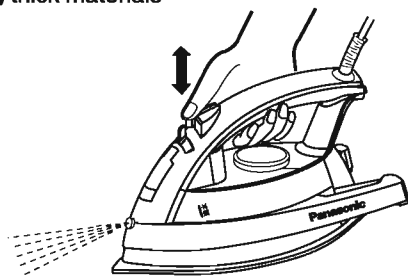

## MAINTENANCE


Unplug iron, wait until iron cools completely.

 - Wipe off iron Soleplate and other part with a damp and soft cloth.
- For serious stain, use a neutral detergent.

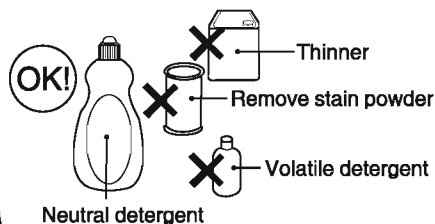

Self-cleaning (NI-W650CS Only)

 - Check water level. Water level should be over 1/2 full. Don't connect to supply, move the Steam/Dry Selector to the steam position; let water drip into Soleplate (about 30 seconds). Move the Steam/Dry Selector to the Dry(关) position, hold the iron horizontally in the air, plug the AC Cord into electrical outlet. Set the Temperature Selector Dial to the steam zone, water and steam will be spouted out Soleplate; wait until steam is invisible.
- Cleaning the steam chamber of Soleplate and steam vents with Jet of Steam, according to 《How to use the Jet of Steam feature》(P13), pump the Jet of Steam Button several times until steam is invisible.

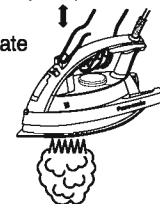

## FABRIC AND IRONING RECOMMENDATIONS

Notes : 1. For heat-sensitive fabric, try to iron using a press cloth on top of fabric, otherwise it will ruin or damage.

2. Iron belended fabrics, setting temperature for lower-temperature fiber.

3. Iron clothes with worse heat resistance first while ironing the different kinds of cloth.

Fabric	Temperature setting	Ironing recommendations
NYLON	尼 龙	Dry iron on reverse side.
SILK	丝 绸	Dry iron on reverse side. To touch-up collars, cuffs, pockets, etc., iron lightly on right side.
WOOL	羊 毛	Iron lightly on right side.
COTTON	棉 布	Steam ironing is suggested. Sprinkle water on the fabric, depending on its thickness or stubborn wrinkles; iron dark fabrics on reverse side to avoid unwanted sheen.
LINEN	亚 麻	

## SPECIFICATIONS

Rated voltage	220V~ 50Hz	Function	Steam/Dry iron
Rated power	1850W	Steam generation way	drop
Plug/Cords	single-phase three pole plug(1.8m long)	Thermostat	temperature range: (about 85°C-200°C)
Dimensions	270mm long,120mm width,150mm height	Iron surface	220 cm <sup>2</sup>
Weight	about 1.4 kg	Reservoir capacity	200 ml
Stand mode	self stand	Lamp	Temperature Select Indicator

## GENERALLY MALFUNCTION AND TACKLING METHOD (please check with this table)

Check / Malfunction	Plug	Temperature Selector Dial	Steam/Dry Selector	Jet of Steam Button (NI-W650CS Only)	Steam hold	The way of drainage	Temperature scale (Temperature Selector Dial)
No steam	○	○	○		○		
Too small steam		○	○		○		
Dripping	○	○		○			
Corroding			○			○	
No heat	○	○					
Scorch		○					○
Dealing method (Contact with sales agent if can't deal with)	Connect well?	Position is correct?	Move Steam/Dry Selector 2 - 3 times, reset to steam position, keep on Dry(关) position while storing.	The interval time of pressing Button should be 2-5 seconds.	Cleaning according to "MAINTENANCE."	Drainage before the iron cooling.	Select temperature according to indication or use a press cloth.

## AFTER SERVICE

For after service, if there are any questions, please inquiry to shop or telephone 800-810-0781.

① Warranty card (append)	Get the warranty card from shop when purchases this product. Read completely and store carefully, confirm the warranty card have been recorded [ purchased date, name of the shop etc. ].
② Require repairing	Contact with service agent if can't deal according to above table.
Warranty period	According to the warranty card, provide the service agent with the electric iron and warranty card and invoice.
Exceed Warranty period	Repair by service agent, it will be charged according to regulations.

中国印刷 发行:2009年8月 i82006-6N77B

© 2009 松下·万宝(广州)电熨斗有限公司版权所有, 未经许可不得复制和散发, 否则违法必究。  
© 2009 Panasonic Wanbao Home Appliances Electric Iron (Guangzhou) Co., Ltd. All Rights Reserved.