

# Quick Start Guide

DVP6600, DVP6620, DVP6688  
DVD Video Player




### What's in the box?


- Detachable stand
- DVD Video Player
- Composite Video Cable
- Remote Control and 2 AAA batteries
- User Manual

## I Connect


Basic Audio/Video Connections

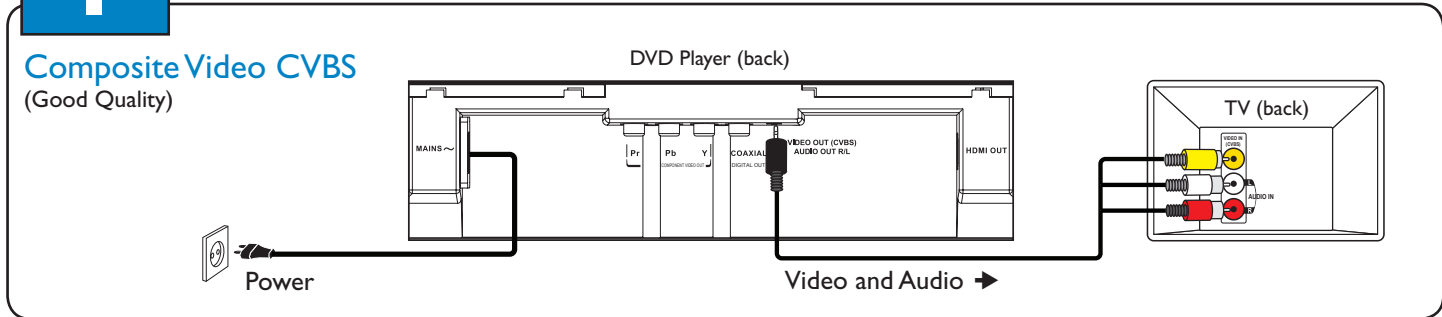

OR

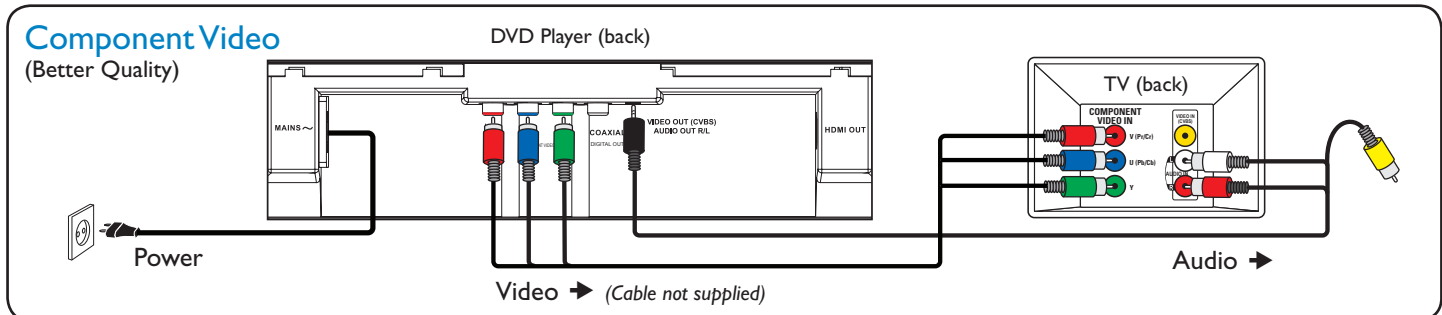

OR

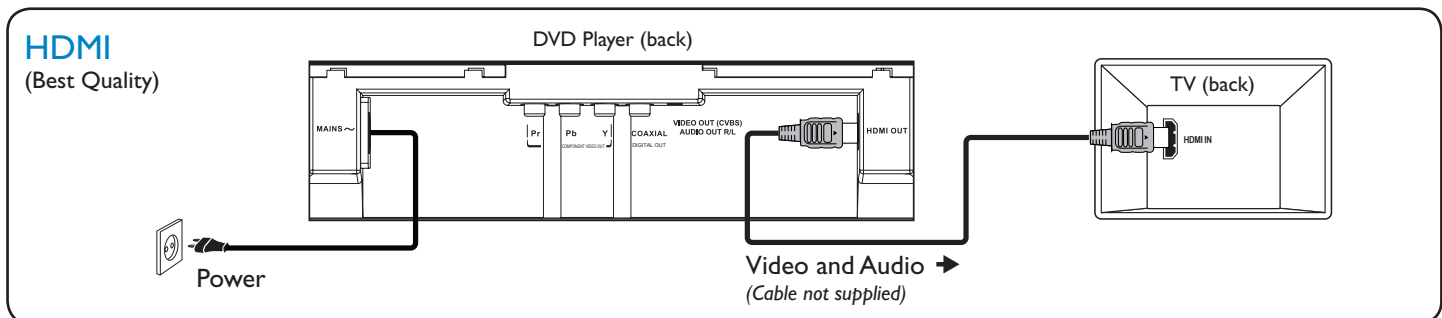

## Attach the Stand


- Place this unit on a flat surface with the front panel facing down.
- Place the stand on the rear panel and slide to the left to lock into position.

**Note** To prevent this unit from being scratched, always covers its front surface with a cloth before you place it flat on any surface.


## 2 Set up

### A Finding the viewing channel

- 1 Press  (STANDBY ON) on this unit to turn it on.

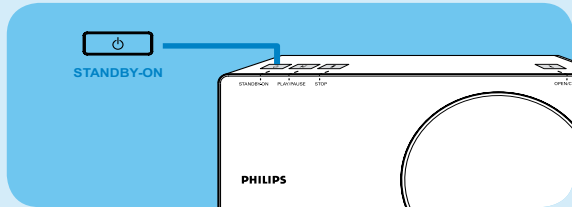






- 2 Turn on the TV. Use the TV's remote control to select the correct viewing channel.

**Note** To search for the correct viewing channel, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT,  button) until you see the Video In channel.

### B Select the display language on the screen

    - 1 Press **SETUP**.  
The { General Setup Page } appears.

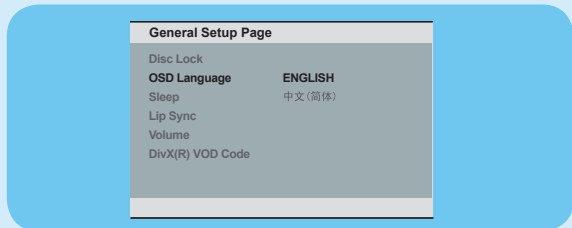

- 2 Press  to select { OSD Language } and press .
- 3 Use   keys to select a language option in the menu and press **OK** to confirm.
- 4 Press **SETUP** to exit.

**Note** The language set here is only for the menus that are shown on the TV while operating this unit, not for the DVD disc menu.

There are various setup options (Audio Setup, Video Setup, Preference Setup) available on this unit. Refer to the user manual for more information.

### Need help?

#### User Manual

See the user manual that came with your Philips DVD Player.

#### Online



Register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome).




## 3 Enjoy


### A Start disc playback

- 1 Playback may start automatically when a disc has been loaded in the disc tray.

**Note** If a disc menu appears on the TV, use   keys to navigate in the DVD menu.

- 2 Press **PLAY/PAUSE**  to start playback.

- 3 To stop playback, press **STOP** .

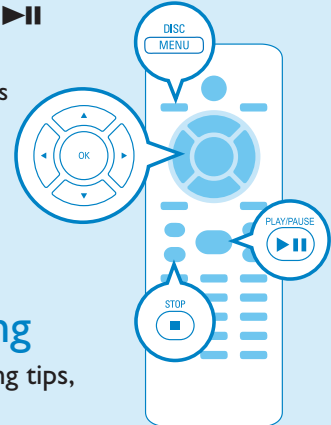

### Troubleshooting

For more troubleshooting tips, see the user manual.

#### No power

- Check if the AC power cord is properly connected.
- Press the STANDBY-ON on the top panel of this unit to turn on the power.

#### No picture

- Check connection to TV and ensure the plugs are firmly in place.

#### No sound or distorted sound

- Check audio connections and make sure that the connected audio device is turned on.
- For HDMI connection, check if your TV's HDMI or Digital setting is set to ON. Contact your TV manufacturer for detailed information.

#### Remote control does not work

- Check the batteries are loaded correctly or replace the batteries with new ones.
- Reduce the distance between the remote control and this unit.
- Point the remote control directly toward the IR sensor.



2008 © Koninklijke Philips N.V.  
All rights reserved.  
[www.philips.com](http://www.philips.com)  
sgpjy-0813/93\_02