

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

*QuickTouch*

GC526,GC525,GC515



User manual

用户手册

**PHILIPS**



3



4



6



7



8



8

---



9



10



11



13



14

 


 
 
 
 
 
 
15

 
---

 
 
 
 
 
 
 
 


GC526 / GC525

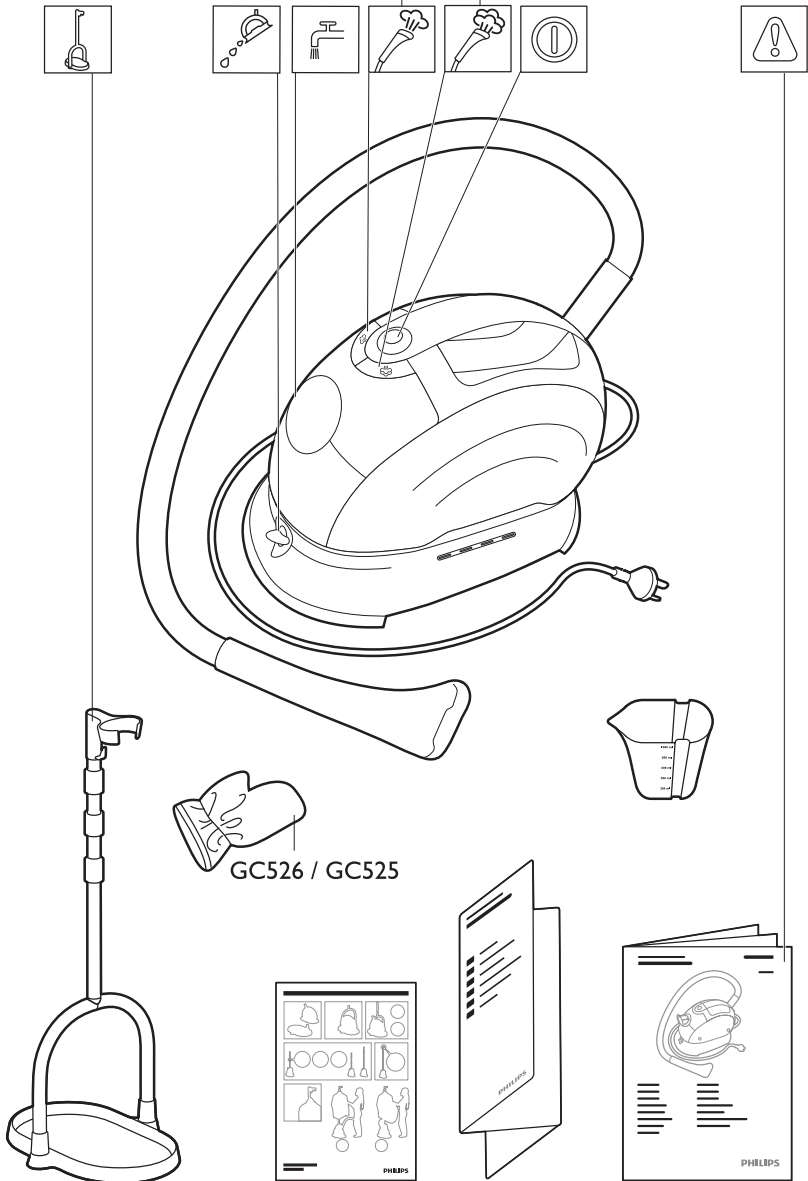

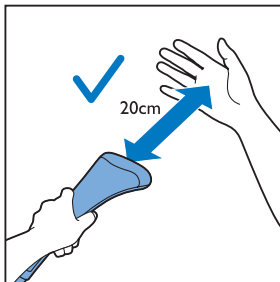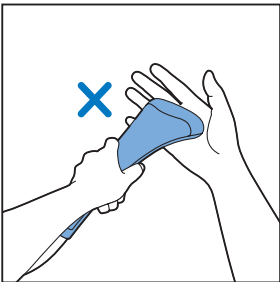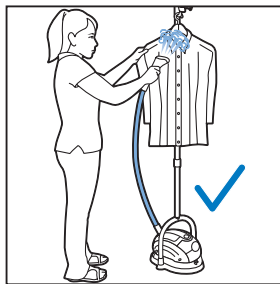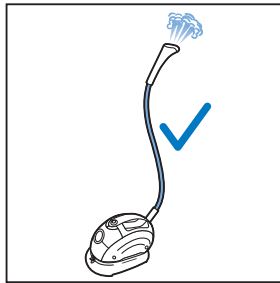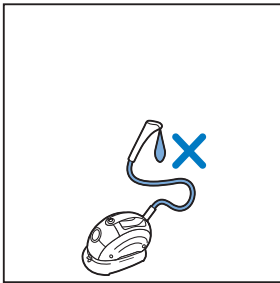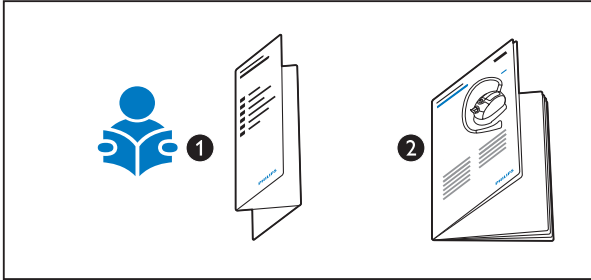





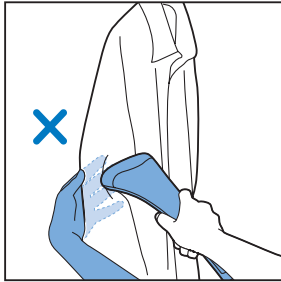


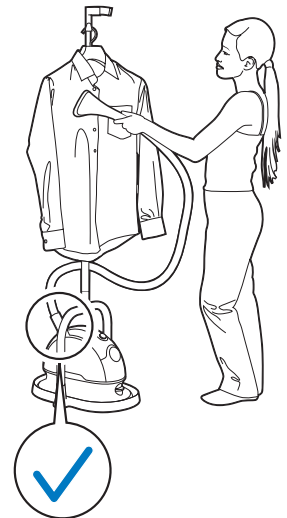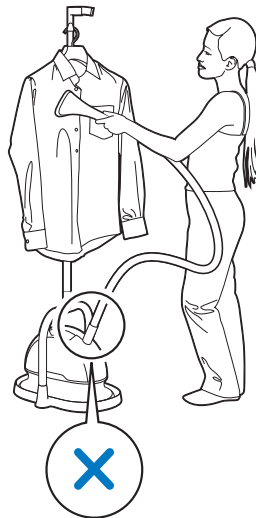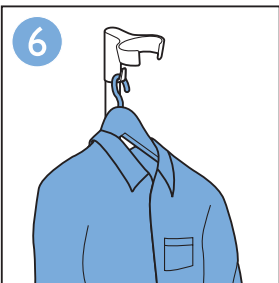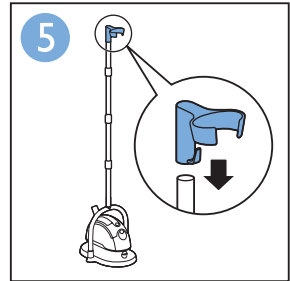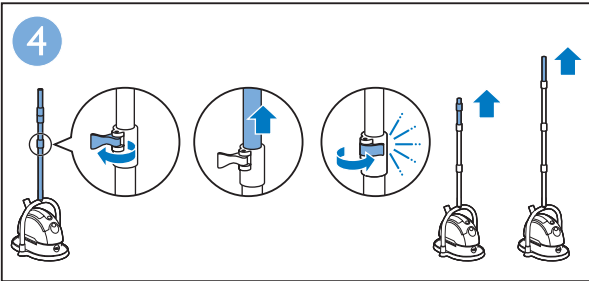
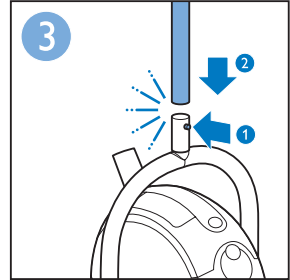
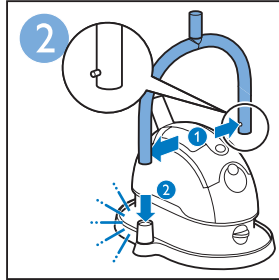
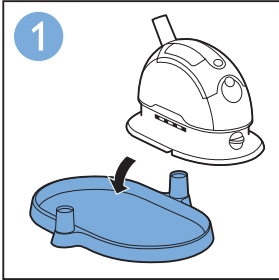




EN Note: Fill the water tank with tap water only. Do not add perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank

         ZH 注意：仅为水箱注入自来水。请勿将香水、醋、淀粉、除垢剂、熨烫助剂或其他化学药品加入水箱中。

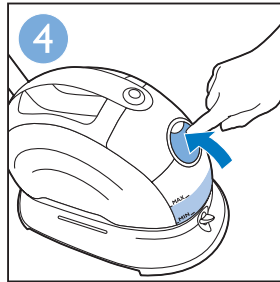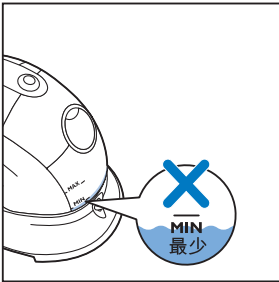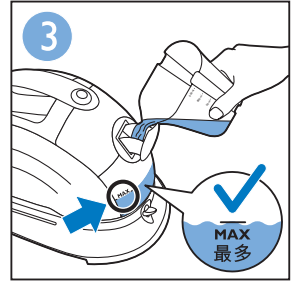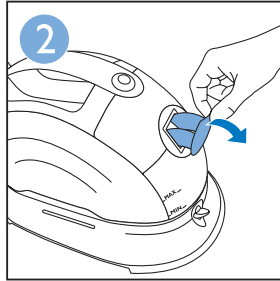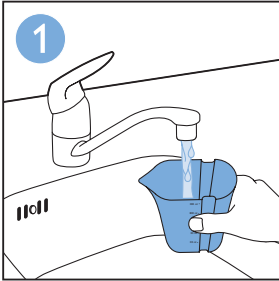



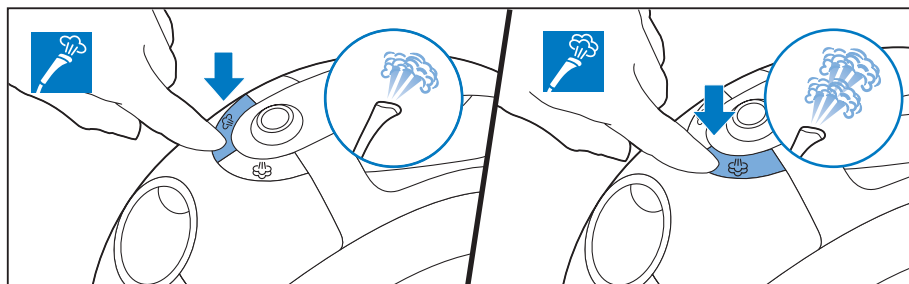
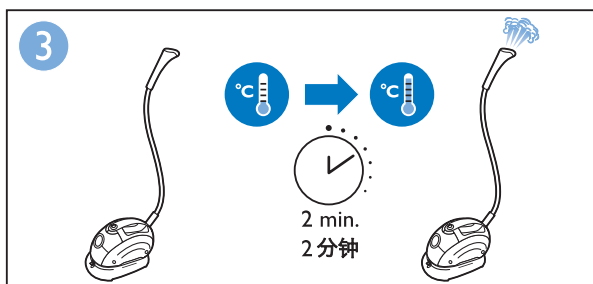
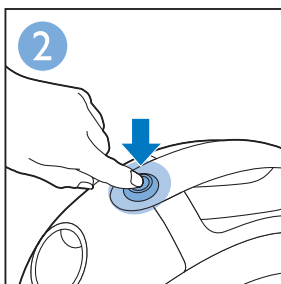
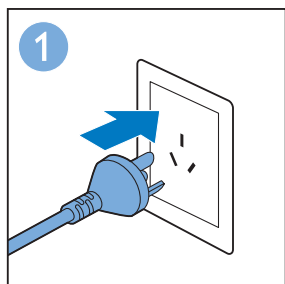






EN Note: The steam supply hose becomes warm during steaming. This is normal.



 
 
 
 
 
 
ZH 注意：蒸汽熨烫期间，蒸汽输送管会变热。这是正常现象。

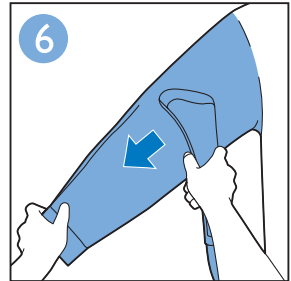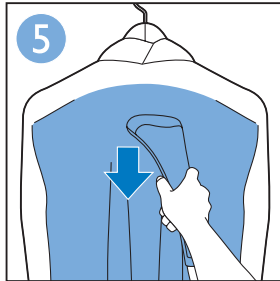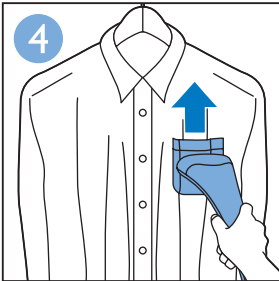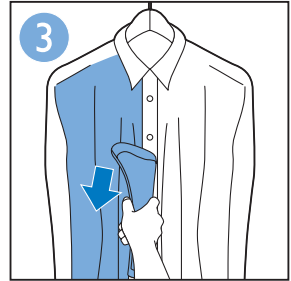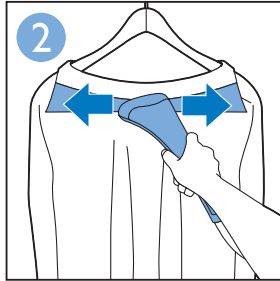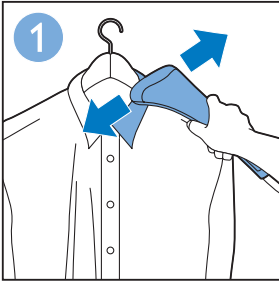



EN Note: Always empty the water tank after use.

      
 
 
ZH 注意：使用后，始终倒空水箱。

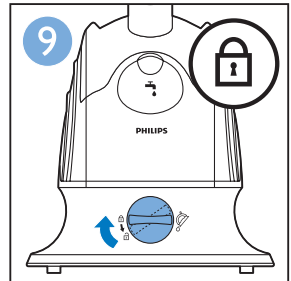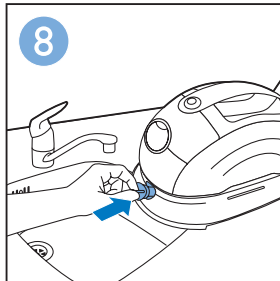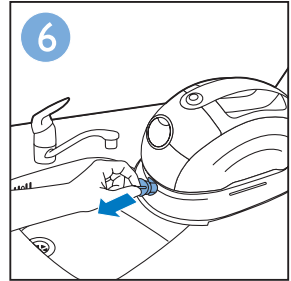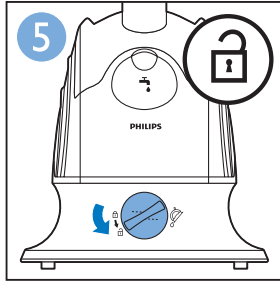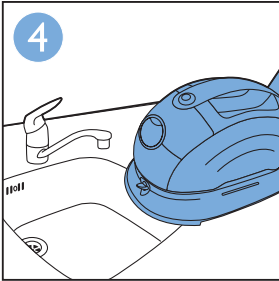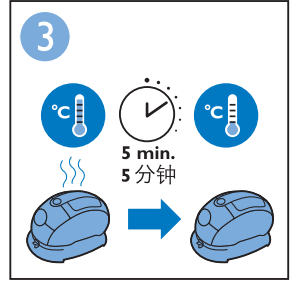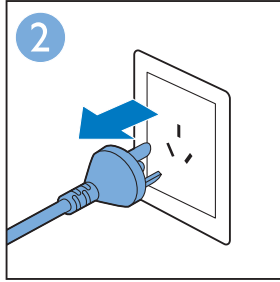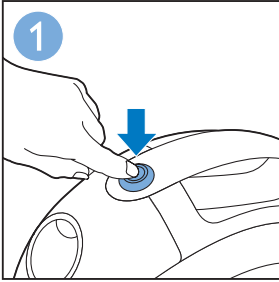












EN Note: Never use scouring pads, abrasive cleaning agents or aggressive liquids such as alcohol, petrol or acetone to clean the appliance. Clean the appliance and wipe any deposits off the steamer head with a damp cloth and a non-abrasive liquid cleaning agent.



 
 
 
ZH 注意：切勿使用钢丝绒、研磨性清洁剂或腐蚀性液体（例如酒精、汽油或丙酮）来清洁本产品。用湿布和非腐蚀性液体清洁剂清洁本产品，并擦去蒸汽喷头中的沉积物。

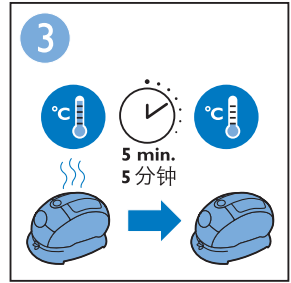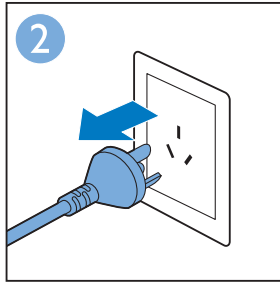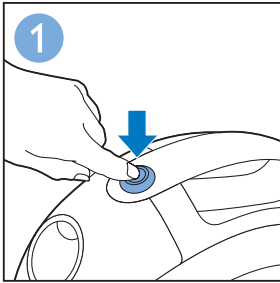

EN Note: To maintain optimal performance, regularly perform the calc-clean process. We advise you to rinse the steam tank twice after 5 times of use.

              ZH 注意：为保证最佳性能，请定期除垢。建议您在使用 5 次后冲洗蒸汽箱 2 次。

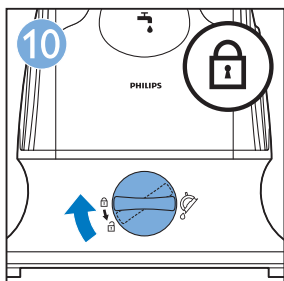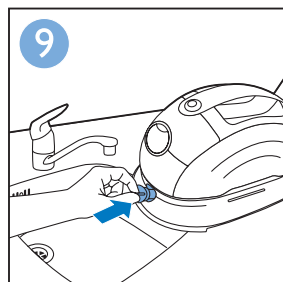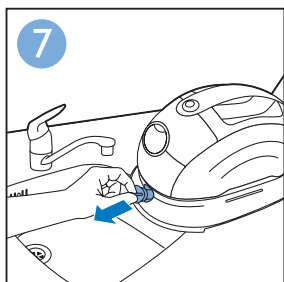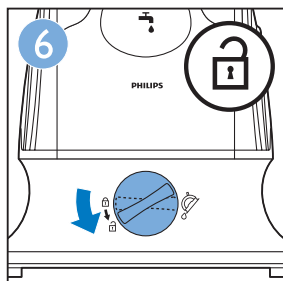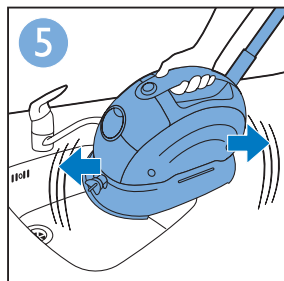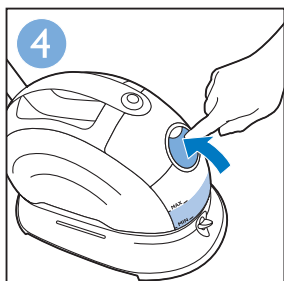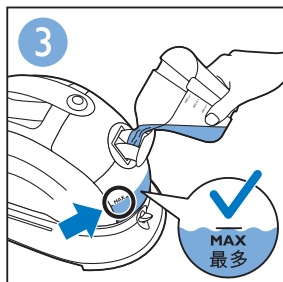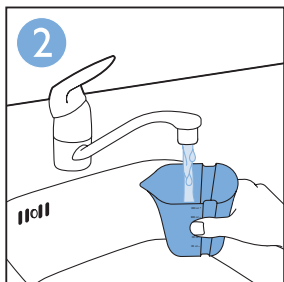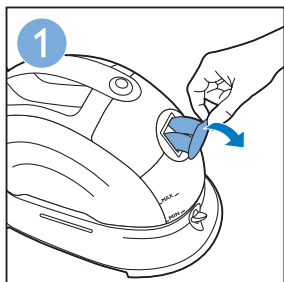

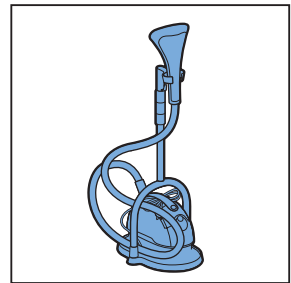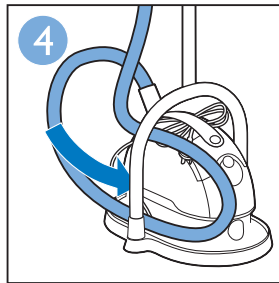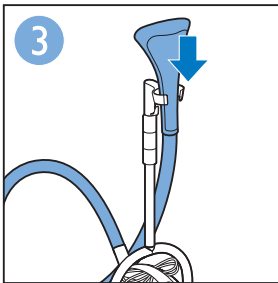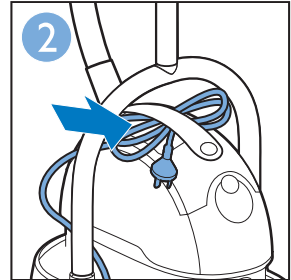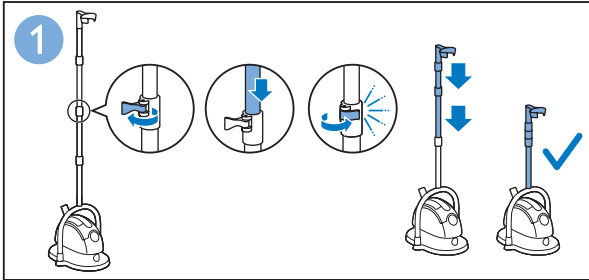

## PHILIPS

产品 : 飞利浦蒸汽挂烫机  
型号 : GC525  
额定电压 : 220V ~  
额定频率 : 50Hz  
额定输入功率 : 1500 W  
生产日期 : 请见产品底部  
产地 : 中国

珠海经济特区飞利浦家庭电器有限公司  
中国珠海市三灶镇琴石工业区  
邮政编码: 519040  
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.84-2007制造


## PHILIPS

产品 : 飞利浦蒸汽挂烫机  
型号 : GC515  
额定电压 : 220V ~  
额定频率 : 50Hz  
额定输入功率 : 1500 W  
生产日期 : 请见产品底部  
产地 : 中国

珠海经济特区飞利浦家庭电器有限公司  
中国珠海市三灶镇琴石工业区  
邮政编码: 519040  
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.84-2007制造



Problem	Possible cause	Solution
EN The appliance does not heat up.	There is a connection problem	Check the mains plug and the wall socket.
	You have not switched on the appliance.	Press the on/off button to switch on the appliance.
The appliance does not produce any steam.	The steamer has not heated up sufficiently.	Let the appliance heat up for approx. 2 minutes.
	Steam has condensed in the hose.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back into the water tank.
	The water level is below the MIN level indication.	Fill water tank to the MAX level indication.
The steam output is irregular.	You have placed the steamer on a table or chair instead of on the floor.	Place the steamer on the floor.
	Steam has condensed in the hose or in the steamer head.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back into the water tank.
Water droplets drip from the steamer head.	You have placed the steamer on a table or chair instead of on the floor.	Place the steamer on the floor.
	Steam has condensed in the hose.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back into the water tank.
The appliance produces a croaking sound.	You have left the steamer head and/or the steam supply hose in horizontal position for a long time.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back into the water tank.
	You have placed the steamer on a table or chair instead of on the floor.	Place the steamer on the floor.
	When the hose forms a U-shape, condensation present in the hose cannot flow back into the water tank.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back into the water tank.
Water spills out of the filling opening when the cap is closed.	You have left the steamer head and/or the steam supply hose in horizontal position for a long time.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back into the water tank.
	You have put too much water in the water tank	Do not fill the water tank above the MAX level indication.
An excessive amount of water drips out of the steamer head when the appliance is heating up.	The water in the appliance is dirty or has been left inside the appliance for a long time.	Remove all water from the water tank and rinse it with clean water; see 

问题	原因	解决方法
ZH 产品不能加热。	接触不良 您没有打开产品电源。	检查电源插头和电源插座。 按开/关按钮启动产品。
蒸汽挂烫机不能产生蒸汽	蒸汽挂烫机未充分加热。 有蒸汽凝结在输送管内。	让产品预热约 2 分钟。 提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。
蒸汽输出不连贯。	水位低于最低 (MIN) 水位标示。 您将蒸汽挂烫机放在了桌子或椅子上，而不是地板上。	向水箱内注水至最高 (MAX) 水位标示。 将蒸汽挂烫机置于地板上。
有水滴从蒸汽喷头中滴出。	输送管或蒸汽喷头内有蒸汽冷凝。 您将蒸汽挂烫机放在了桌子或椅子上，而不是地板上。	提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。 将蒸汽挂烫机置于地板上。
产品发出咕噜声。	有蒸汽凝结在输送管内。 蒸汽喷头和/或蒸汽输送管水平摆放了较长时间。 您将蒸汽挂烫机放在了桌子或椅子上，而不是地板上。	提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。 提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。 将蒸汽挂烫机置于地板上。
盖上注水口的盖子时，注水口水溢出。	当蒸汽输送管处于 U 形状态时，输送管内的冷凝水不能流回水箱中。 蒸汽喷头和/或蒸汽输送管水平摆放了较长时间。	提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。 提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。
产品加热时有过多的水从蒸汽喷头中滴出。	水箱中盛放了过多的水 产品中的水变脏或留在产品很长时间。	请勿让水位超过最高 (MAX) 水位标示。 倒掉水箱中的所有水并用清水进行冲洗，请参阅 





Specifications are subject to change without notice.  
©2011 Koninklijke Philips Electronics N.V.  
All rights reserved.

Document order number: 4239.000.8050.1

