

Philips GoGear MP3 player

GoGear

SA02802

Quick start guide

快速入门指南

快速入門指南

Quick start guide

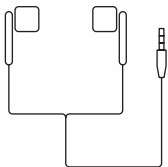
Register your product and get support at

www.philips.com/welcome

PHILIPS

Unpack

打开包装
打開包裝



 XP (SP3) / Vista / 7

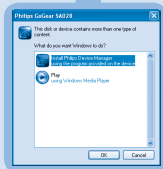
 
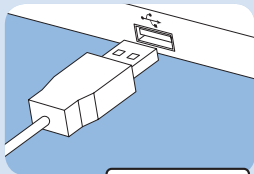
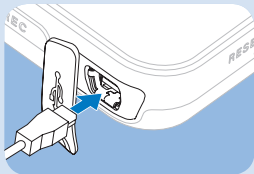


USB 

 500Mb


1

Install

安装
安装



2 Transfer

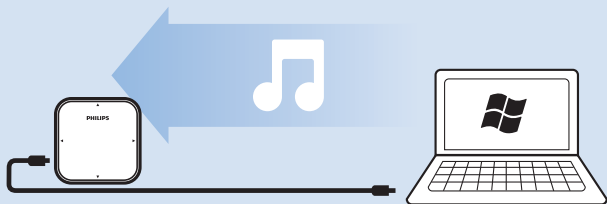传输
傳輸



3

 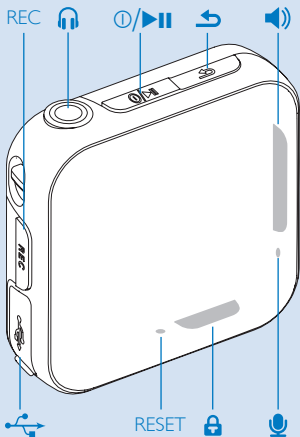Use

使用
使用

Press and hold to turn on/off |
按住打开/关闭 |
按住以開啟/關閉



Scroll up/down | 向上/向下
滚动 | 向上/向下捲動



Confirm selection | 确认选择
| 確定選擇



Back one level; press and
hold to return to Home
screen | 返回一级; 按住返
回主屏幕 | 返回上一级; 按
住以返回主螢幕



Repeatedly press to select a song; press and hold to rewind or fast forward | 反复按下选择歌曲; 按住快退或快进 | 重複按下以選擇歌曲; 按住以倒帶或快速前進



Press to pause or resume play | 按下暫停或繼續播放 | 按下以暫停或恢復播放



Back one level; press and hold to return to Home screen | 返回一級; 按住返回主屏幕 | 返回上一級; 按住以返回主熒幕



The first time you tune to the radio, select **[Auto tune]** to search for available stations. Up to 20 stations are saved to **[Presets]**. | 首次调谐收音机时, 选择 **[自动调谐]** 搜索可用的电台。[预设电台] 最多可存储 20 个电台。| 首次調諧收音機時, 請選擇**[自動調頻]** 以搜尋可用的電台。最多可將 20 個電台儲存至 **[預設]**。



Press to select a preset station | 按下选择预设电台 | 按下以選取預設電台



Press to start play (if necessary) | 按下开始播放 (如有必要) | 按下以播放 (如有需要)



Back one level; press and hold to return to Home screen | 返回一級; 按住返回主屏幕 | 返回上一級; 按住以返回主熒幕



REC

Press and hold to start recording | 按住开始录音 | 按住以開始錄音



Press to pause or resume recording | 按下暫停或繼續錄音 | 按下以暫停或恢復錄音



Press to stop recording | 按下停止录音 | 按下以停止錄音

After you stop recording, press to save the recording file to ; press to cancel. | 停止录音之后, 按 将录音文件保存到 ; 按 取消。| 停止錄音後, 按 將錄音檔案儲存至 ; 按 取消。

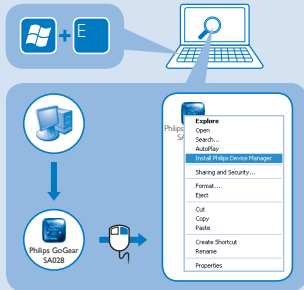
Device does not power on

设备未启动
裝置尚未啟動



Software installation does not happen

软件安装未启动
軟件安裝尚未啟動



See **support information** in the user manual for more

詳情請參閱用戶手冊中的支持信息

請參閱用戶手冊中的支援資訊以了解更多



Be responsible
Respect copyrights

All rights reserved.

www.philips.com

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

© 2010 Koninklijke Philips Electronics N.V.



Printed in China
SA028_93_QSG_V1.0
wk10195