



# ZTE BLADE A6 MAX

## User Manual

ZTE Australia provides dedicated support with a local call centre and social media outreach. Search 'ZTE Australia' on Facebook, Google+ and Twitter to keep in touch.

© ZTE 2018 Ver 1.0 July 2018



[www.ztemobiles.com.au](http://www.ztemobiles.com.au)

## About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

### Copyright

**Copyright © 2018 ZTE CORPORATION**

**All rights reserved.**

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

### Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to [For Your Safety](#) to be sure to use your phone properly and safely.

### Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software. Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

## Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Android is a trademark of Google LLC.

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by ZTE Corporation is under license.



microSDXC Logo is a trademark of SD-3C, LLC.

## Qualcomm snapdragon

Qualcomm<sup>®</sup> Snapdragon<sup>™</sup> processors are products of Qualcomm Technologies, Inc.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

Other trademarks and trade names are those of their respective owners.

**Version No.:** R1.0

**Edition Time:** July 21, 2018

## IMPORTANT NOTE

This phone is designed for exclusive use on the Optus network. If you unlock and use this phone on alternate networks it might not have network coverage.

# Contents

<b>Getting Started</b> .....	<b>9</b>
Getting to Know Your Phone .....	9
Knowing the Keys.....	11
Installing the nano-SIM Card and the microSDXC™ Card (Optional).....	12
Charging the Phone.....	14
Powering On/Off.....	16
Setting Up for the First Time .....	16
Locking/Unlocking the Screen and Keys .....	16
Getting to Know the Home Screen .....	17
<b>Personalizing</b> .....	<b>19</b>
Applying New Wallpapers.....	19
Using Do Not Disturb Mode.....	20
Protecting Your Phone With Screen Locks .....	22
<b>Knowing the Basics</b> .....	<b>24</b>
Status and Notification Icons .....	24
Opening and Switching Apps.....	25
Using Two Apps in Split-Screen Mode.....	25
<b>Connecting to Networks and Devices</b> .....	<b>27</b>
Connecting to Mobile Networks .....	27
Connecting to Wi-Fi .....	28
Connecting to Bluetooth Devices .....	28

Sharing Your Mobile Data Connection .....	29
<b>Phone Calls .....</b>	<b>32</b>
Placing Calls .....	32
Answering or Rejecting Calls .....	33
Using Options During a Call.....	34
<b>Contacts .....</b>	<b>35</b>
Adding a New Contact .....	35
Searching for a Contact .....	35
<b>Messaging .....</b>	<b>36</b>
Sending a Message .....	36
Changing Message Settings .....	37
<b>Web Browser.....</b>	<b>38</b>
Opening the Browser .....	38
Using Multiple Browser Windows.....	38
Changing Browser Settings .....	39
<b>Camera .....</b>	<b>40</b>
Capturing a Photo.....	40
Recording a Video .....	40
Using BEAUTIFY Mode .....	41
Using Other Camera Modes .....	41
<b>Gallery .....</b>	<b>43</b>
Opening Gallery.....	43
Working With Albums.....	43

<b>Music</b> .....	<b>45</b>
Viewing Your Music Library .....	45
Playing Music .....	45
<b>FM Radio</b> .....	<b>46</b>
Scanning and Saving Channels .....	46
Listening to FM Radio.....	46
<b>Recorder</b> .....	<b>47</b>
Recording a Voice Memo .....	47
Playing a Voice Memo .....	47
<b>Settings</b> .....	<b>48</b>
Wi-Fi.....	48
Bluetooth .....	48
Wi-Fi Hotspot.....	48
Mobile Networks.....	48
Flight Mode.....	49
Data Usage .....	49
VPN.....	49
USB Tethering .....	49
Bluetooth Tethering.....	49
Network Settings Reset.....	50
Display.....	50
Sound .....	50
Notifications.....	50
Navigation Keys .....	51


Apps .....	51
Default Apps .....	51
Power Manager .....	51
Security.....	52
Accounts.....	52
Languages and Input.....	52
Date and Time .....	52
Backup and Reset .....	53
Memory.....	53
Storage .....	53
Connect to PC .....	53
Scheduled Power On/Off .....	54
Location .....	54
Accessibility .....	54
Printing .....	54
System Update .....	55
Google .....	55
About Phone.....	55
<b>For Your Safety .....</b>	<b>56</b>
General Safety.....	56
Radio Frequency (RF) Energy .....	57
Distraction.....	60
Product Handling .....	60
Electrical Safety.....	64
Radio Frequency Interference .....	65
Explosive Environments.....	67


<b>Technical Specifications .....</b>	<b>68</b>
<b>Disposal of your old phone - Australia .....</b>	<b>72</b>






# Getting Started
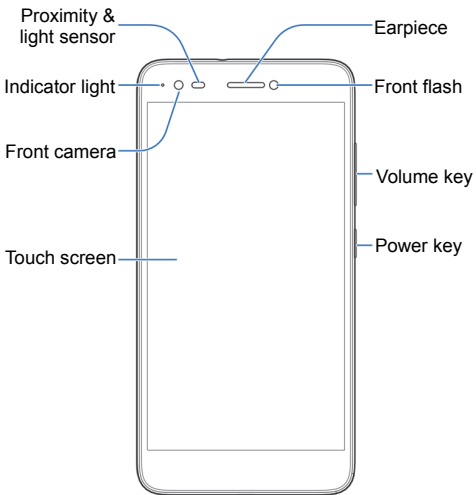
## Getting to Know Your Phone

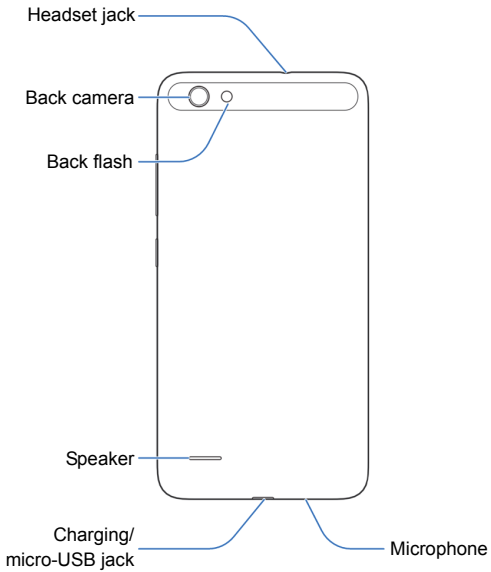




## Knowing the Keys

Key	Function
Power key	<ul style="list-style-type: none"><li>• Press and hold to turn on or off flight mode, restart, turn on or off vibration, silent or ring, or power off.</li><li>• Press to turn off or on the screen display.</li></ul>
Home key 	<ul style="list-style-type: none"><li>• Touch to return to the home screen from any application or screen.</li><li>• Touch and hold to open <b>Google Assistant</b>.</li></ul>
Back key 	Touch to go to the previous screen.
Recent apps key 	Touch to see recently used apps.
Volume key	Press or hold either end of the key to turn the volume up or down.



### NOTE:

Touch  to hide the **Home** key, the **Back** key and the **Recent apps** key. Swipe from the bottom of the screen to show the keys again. The positions of the **Back** key and the **Recent apps** key are interchangeable through **Settings > Features > Navigation keys**.

## Installing the nano-SIM Card and the microSDXC™ Card (Optional)


A microSDXC card can be installed or removed while the phone is turned on. You need to unmount the microSDXC card before removing it.




### **WARNING!**

To avoid damage to the phone, do not use any other kind of SIM cards, or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.


1. Place your finger in the slot at the bottom of the back cover to lift and remove the cover.

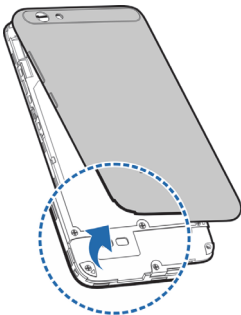

2. Hold the nano-SIM card with its cut corner oriented as shown and slip it into the card holder.

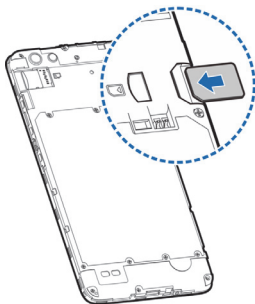

3. Hold your microSDXC card with the metal contacts facing down and slide it into the microSDXC card slot.

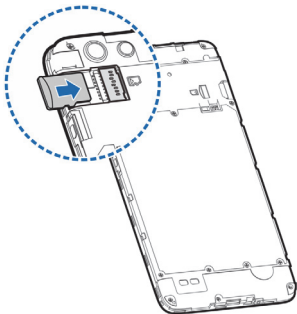

4. Replace the back cover.

## Charging the Phone

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.



### **WARNING!**


Use only ZTE-approved chargers and **USB** cables. The use of unapproved accessories could damage your phone or cause the battery to explode.





### **WARNING!**

**The battery is not removable. Removal may cause fire or explosion.**

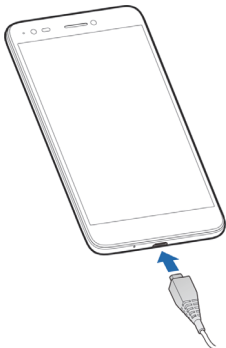1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.



2. Connect the charger to a standard AC power outlet. If the phone is on, you'll see a charging icon, such as  or , appear on the status bar.
3. Disconnect the charger when the battery is fully charged.

 **NOTE:**

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes. Contact the customer service if you still cannot power on the phone after

prolonged charging.

## Powering On/Off

- Press and hold the **Power** key to turn on your phone.
- To power off, press and hold the **Power** key to open the options menu and touch **Power off**.

### **NOTE:**

If the phone freezes or takes too long to respond, you can press and hold the **Power** key for about 10 seconds to restart the phone.

## Setting Up for the First Time

When you first power on your phone after you purchase it or reset it to factory settings, you need to do some settings before using it.

Touch the language field to select the language. Then follow the prompts to set up Wi-Fi, name, protection, Google services, and other options.

## Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone to sleep mode) when not in use and to turn the screen back on and unlock it when you need it.



## To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power** key.

### **NOTE:**

To save battery power, the phone automatically turns off the screen after some time of inactivity. You will still be able to receive messages and calls while the phone screen is off.

## To unlock the screen and keys:

1. Press the **Power** key to turn the screen on.
2. Swipe up on the screen.

- or -

Swipe from  to open the **Phone** app, or swipe from  to open the camera.

- or -

Touch a notification twice consecutively to open the related app.


### **NOTE:**

If you have set an unlock pattern, a PIN or a password for your phone (see [Protecting Your Phone With Screen Locks](#)), you'll need to draw the pattern or enter the PIN/password to unlock your screen.

## Getting to Know the Home Screen

The home screen is the starting point for your phone's

applications, functions, and menus. You can customize your home screen by adding folders, widgets, and more.

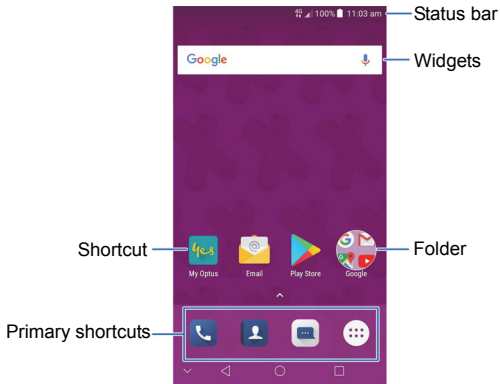

## Extended Home Screen Panels

Your home screen is extendable, providing more space for app icons, widgets, and more. Simply swipe left or right on the home screen to see the extended panels. You can add or remove home screen panels, or adjust their order.

### To add an application shortcut to a home screen panel:

1. Touch the **Home** key and slide up on the screen.

2. Touch and hold an application icon and drag it to the current home screen, or drag it to the right edge of the screen to create a new home screen panel. And then put the icon on it.

**NOTE:**

No empty home screen panel is allowed to exist. If the icon, widget or folder is the only item on the current home screen panel, the panel will be deleted as you remove the item.

**To add a widget to a home screen panel:**

1. Touch and hold an empty area of the home screen and select **WIDGETS**.
2. Touch and hold a widget and drag it to the current home screen or drag it to the right edge of the screen to create a new home screen panel. And then put the widget on it.

**To adjust the order of a home screen panel:**

1. Pinch on the home screen or touch and hold an empty area of the home screen, and then slide left or right to view the home screen thumbnails.
2. Touch and hold a thumbnail and drag it left or right to the place you need (the position of the main home screen cannot be changed).

## Personalizing

### Applying New Wallpapers

You can set the wallpaper for the home screen and lock screen.

1. Touch and hold an empty area on the home screen and then

touch the **WALLPAPERS**.

2. Slide left or right to select an image as the wallpaper. You can also touch **My photos** to choose a picture as the wallpaper.
3. Touch **Set wallpaper**.

## Using Do Not Disturb Mode



You can limit interruptions with Do not disturb mode. This mode silences your phone so that it doesn't make sounds or vibrate when you don't want it to.

**To turn on Do not disturb mode:**

1. Touch the **Home** key and slide up on the screen.
2. Touch **Settings > Sound > Do not disturb**.
3. Switch on **Do not disturb**.
4. Touch **Do not disturb mode** and select **Priority only**, **Alarms only**, or **Total silence** depending on whether you want to allow exceptions. You can customize the exceptions when **Priority only** is selected.



### NOTES:

- Press and hold the **Power** key and touch  to turn on **Alarms only** quickly, or touch  to turn on vibration.
- Press the **Volume** key when no media application is active to show the volume bar. Drag the slider to the left or keep pressing the **Volume down** key to turn on vibration. Press the key again to turn on **Alarms only**.

### To set exceptions for Do not disturb mode (Priority only):

You can set reminders, events, and callers that you specify as exceptions when Do not disturb mode is set to **Priority only**.

1. Touch the **Home** key and slide up on the screen.
2. Touch **Settings > Sound > Do not disturb**, and switch on **Do not disturb**. Touch **Do not disturb mode** and select **Priority only**.
3. Touch **Sound allowed**.
4. Turn on the switch next to the items you want to allow. Touch **Messages** or **Incoming call** and set who can alert you of their messages or calls.



#### **NOTE:**

When **Repeat callers** is switched on, you'll receive a notification if someone calls you a second time within a 15 minute period, regardless of whether notifications from that person receive priority status.

### To block visual disturbances:

You can set to prevent notifications silenced by Do not disturb mode from visually interrupting you by "peeking" onto your screen.

1. Touch the **Home** key and slide up on the screen.
2. Touch **Settings > Sound > Do not disturb**.
3. Touch **Block visual disturbances**.
4. Touch the on/off switches to choose whether to block visual notifications when the screen is on or off.

### To set a Do not disturb rule:

If you want to allow all notification alerts through most of the time, but want to limit alerts during certain times (like at night or on the weekends), you can set a rule for Do not disturb mode.

1. Touch the **Home** key and slide up on the screen.
2. Touch **Settings > Sound > Do not disturb**.
3. Touch **Add rule** and select **Event rule** or **Time rule**.
4. Enter the rule name and touch **OK**.
5. For a time rule, set the days, the start and end times, and set **Do not disturb mode**. You can also choose whether to allow the rule to stop at either the rule end time or by the next alarm you've set in the Clock app.

For an event rule, select a Calendar account you want to make the rule for, select the type of reply you want to use, and set Do not disturb mode.



#### **NOTE:**

To turn on or off a rule, touch it to open its details screen and then touch the on/off switch.



























## Protecting Your Phone With Screen Locks

You can protect your phone by creating a screen lock. When it is enabled, you need to swipe up on the screen, draw a pattern or enter a numeric PIN or password to unlock the phone's screen and keys.

1. Touch the **Home** key and slide up on the screen.
1. Touch **Settings > Security > Screen lock**.
2. Touch **Swipe, Pattern, PIN or Complex password**.
  - ▶ Touch **Swipe** to enable screen lock and allow unlocking with a 'swipe' gesture.
  - ▶ Touch **Pattern** to draw and redraw a pattern that you must draw to unlock the screen.
  - ▶ Touch **PIN or Complex password** to set a numeric PIN or a password that you must enter to unlock the screen.
3. For Pattern, PIN, or password lock, select whether to protect your phone by requiring your pattern, PIN or password before it starts up.

# Knowing the Basics

## Status and Notification Icons

	4G connected		HSPA+ connected
	3G connected		Do not disturb mode (alarms only)
	Do not disturb mode (total silence)		No signal
	Do not disturb mode (priority only)		Signal strength
	Vibration on		Flight mode
	Battery low		Bluetooth® on
	Battery full		Connected to a Wi-Fi® network
	Battery charging		Speaker on
	Alarm set		Phone microphone off
	Call in progress		USB tethering on
	Missed call		Portable Wi-Fi hotspot on
	New SMS/MMS		Wired headset connected
	Song playing		GPS on



# Opening and Switching Apps

## Open an App

1. Touch the **Home** key to access the home screen.
2. Slide left or right on the screen and touch an app to open it.

## Switch Between Recently Opened Apps

1. Touch the **Recent apps** key. The apps you've used recently are displayed in a series of tabs. Slide up and down to see all the tabs.
2. Touch a tab to open that app.

### **NOTE:**

Double-tap the **Recent apps** key to quickly switch between two most recently opened apps.

## Using Two Apps in Split-Screen Mode


You can work with two apps at the same time in split-screen mode.

### **NOTE:**

Some apps may not support split-screen mode.

1. Touch the **Recent apps** key to view your recently used apps. Touch and hold the tab of the app you want to use and drag it to the **Drag here to use split screen** area.
2. You can do one of the following.

- ▶ If the app you need is in the recent apps list, touch it to set it as the second app.
- ▶ Touch the **Home** key to find the app you need and open it as the second app.

To turn off split-screen mode, touch and hold the **Recent apps** key, or drag the handle  on the screen to the edge of the screen.

# Connecting to Networks and Devices



## Connecting to Mobile Networks

### Control Mobile Data Use


1. Touch the **Home** key and slide up on the screen. Touch **Settings > Mobile networks**.
2. Touch the **Data enabled** switch to enable or disable mobile data use.

### Set Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

1. Touch the **Home** key and slide up on the screen. Touch **Settings > Mobile networks**.
2. Touch **Access point names** and then touch .
3. Touch each item to enter the information you get from your service provider.
4. Touch  > **Save** to complete.

 **NOTE:**

To set the APN to default settings, touch  > **Reset to default**.

## Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

1. Touch the **Home** key and slide up on the screen. Touch **Settings > Wi-Fi**.
2. Switch on **Wi-Fi**.
3. Touch a network name to connect to it.
4. If the network is secured, enter the password and touch **Connect**.



### **NOTE:**

Your phone automatically connects to previously used Wi-Fi networks when they are in range.

## Connecting to Bluetooth Devices

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters (32.8 feet). The Bluetooth devices must be paired before the communication is performed.

1. Touch the **Home** key and slide up on the screen. Touch **Settings > Bluetooth**.
2. Switch on **Bluetooth**.

Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range.

3. Touch the device you want to pair with.
4. Confirm that the Bluetooth passkeys are the same between the two devices and touch **Pair**. Alternatively, enter a Bluetooth passkey and touch **Pair**.

Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.



#### **NOTE:**

The Bluetooth passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys), or refer to the documents for that device.

## Sharing Your Mobile Data Connection

You can share your phone's data capabilities through tethering or by activating the Wi-Fi hotspot feature to create a mobile hotspot.

### Share Your Mobile Data Connection via USB

You can access the Internet on your computer via the USB tethering feature of your phone. The feature needs data connection on a mobile network and may result in data charges.



#### **NOTE:**

You cannot transfer files between your phone and your computer when the phone is USB tethered.

1. Connect your phone to your computer with a USB cable.

2. Touch the **Home** key and slide up on the screen. Touch **Settings > More**.
3. Switch on **USB tethering**. A new network connection will be created on your computer.

**NOTE:**

To stop sharing your data connection, switch off **USB tethering** or disconnect the USB cable.

## Share Your Mobile Data Connection via Bluetooth

If your computer can obtain an Internet connection via Bluetooth, you can configure your phone to share its mobile data connection with your computer.

1. Pair your phone with your computer via Bluetooth.
2. Configure your computer to obtain its network connection via Bluetooth. For more information, please see your computer's documentation.
3. Touch the **Home** key and slide up on the screen. Touch **Settings > More**.
4. Switch on **Bluetooth tethering**. Your computer is now sharing your phone's data connection.

**NOTE:**

To stop sharing your data connection, switch off **Bluetooth tethering**.

## Share Your Mobile Data Connection as a Wi-Fi Hotspot

You can share your phone's data connection with other devices by turning your phone into a portable Wi-Fi hotspot. The feature needs data connection on a mobile network and may result in data charges.



### NOTE:

When the portable Wi-Fi hotspot feature is enabled, you cannot use your phone's Wi-Fi capability to access the Internet. You still remain connected to the Internet via your mobile data network.

1. Touch the **Home** key and slide up on the screen. Touch **Settings > Wi-Fi hotspot**.
2. Switch on **Wi-Fi hotspot**.  
After a moment, the phone starts broadcasting its Wi-Fi network name (SSID). Your hotspot password is shown below.
3. On another device, locate your phone via Wi-Fi and connect with it to start using the phone's mobile data.





### NOTE:

To stop sharing your data connection, switch off **Wi-Fi hotspot**.

# Phone Calls

## Placing Calls

### Place a Call by Dialing

1. Touch the **Home** key > **Phone** and touch the **Phone** tab.
2. Touch  to open the dialer and enter the phone number or the contact name with the dialpad. Touch  to delete incorrect digits.



#### **NOTE:**

As you enter the phone number or the contact name, your phone searches for matching information in your contacts. If you see the number and contact you want to call, touch it to place the call immediately.

3. Touch  below the keypad to dial.



#### **NOTE:**

To make an international call, touch and hold the 0 key to enter the plus (+) symbol. Next, enter the country code, followed by the city/area code and then the phone number.


### Call From the Call History

The call history is a list of all the calls you've placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to your contacts.




1. Touch the **Home** key > **Phone** and you can find the call history below the **Phone** tab.
2. Touch a listing to call back.

## Call Your Contacts


1. Touch the **Home** key > **Phone** and touch the **Contacts** tab to view all your contacts.
2. Touch  behind a contact to make a call.

## Answering or Rejecting Calls

### Answer a Call

When you receive a phone call, slide  down to answer the call.

- or -



If the screen is unlocked, touch  to answer the call.

#### **NOTE:**



To silence the ringer before answering the call, press either end of the **Volume** key.

### Reject a Call

When you receive a phone call, you can:







Slide  up to reject the call. You can touch  to decline the call with a preset text message or touch **Write your own...** to edit one and send to the caller.

- or -

If the screen is unlocked, touch  to reject the call. You can touch  to reject the call and select a preset text message or touch **Write your own...** to edit one and send to the caller.

## Using Options During a Call

During a call, you will see a number of onscreen options. Touch an option to select it.

- Touch  to turn on or off the speaker.
- Touch  to mute or unmute your microphone.
- Touch  to switch to the keypad when you need to enter a code (for example, the PIN for your voicemail or bank account) during the call.
- Touch  to put the call on hold.
- Touch  to make another call separately from the first call, which is put on hold.
- Touch  to end the current call.

### **WARNING!**


Because of higher volume levels, do not place the phone near your ear during speakerphone use.

# Contacts


You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, touch the **Home** key > **Contacts**.

## Adding a New Contact

1. Touch the **Home** key > **Contacts**.
2. Touch  to add a new contact.
3. Touch **Phone contact** to choose where to save the contact. If a sync account is selected, the contacts will be synced automatically with your account online.
4. Enter the contact name, phone numbers, email addresses, and other information.
5. Touch **Save**.




## Searching for a Contact

1. Touch the **Home** key > **Contacts** and touch the **Contacts** tab.
2. Touch  at the top of the contact list.
3. Input the contact name or any information the contact has to search for it. The contacts matched will be listed.

# Messaging

You can use **Messaging** to exchange text messages (SMS) and multimedia messages (MMS).

## Sending a Message

1. Touch the **Home** key > **Messaging**.
2. Touch  at the bottom right corner.
3. Add recipients by one of the following ways.
  - ▶ Touch the **To** field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, touch the one you want to add.
  - ▶ Slide up and down to select recipients from your contacts.
4. Touch the **Type message** field and enter the message text.
5. If you want to send a multimedia message, touch  to add a pictures, audios, videos or other files to the message.
6. Touch .

 **NOTE:**

You can also include email addresses as recipients for a multimedia message.

 **NOTE:**

Do not add any attachment if you want to send a text message.

Otherwise you may be charged for a multimedia message.

## Changing Message Settings


Touch  > **Settings** in the **Messaging** screen to change the message settings.

# Web Browser

## Opening the Browser

Touch the **Home** key and slide up on the screen. Touch **Chrome** to launch the web browser.


The browser also opens when you touch a web link - for example, in an email or a text message.

1. Open the **Chrome** app.
2. Touch the address box at the top of the web page.
3. Enter the address (URL) of a web page or enter terms you want to search for.
4. Touch a URL or search suggestion or touch  to open the web page or search results.

## Using Multiple Browser Windows

You can open several web pages at the same time (one page in each window) and switch between them freely.

### To open a new browser window:

Touch  at the top of the screen and then touch **New tab**. A new browser window opens and the homepage is loaded.

### To switch between browser windows:



1. Touch the icon  at the top of the screen. The number in

the icon indicates the number of currently active browser windows.

2. Swipe vertically to scroll through the list of opened web pages.
3. Touch the one you want to open.




**NOTE:**

Swipe a web page horizontally or touch its  to close the browser window. Touch  at the top of the screen and then touch **Close all tabs** to close all windows.

## Changing Browser Settings

You can configure a number of settings to customize the way you browse the web, including several that you can use to control your privacy.

To open the Browser settings screen, touch  > **Settings** in the browser screen.


# Camera

## Capturing a Photo


1. Touch the **Home** key and slide up on the screen. Touch **Camera**.
2. Aim the camera at the subject and make any necessary adjustment.

 **WARNING!**

Keep a safe distance when using the flash. Do not point the flash towards the eyes of people or animals.



3. Touch the area where you want the camera to focus, or leave the camera to autofocus on the centre of the image.
4. Lightly touch .


## Recording a Video

1. Touch the **Home** key and slide up on the screen. Touch **Camera > VIDEO**.
2. Aim the camera at the subject. You can touch any area on the screen that you want the camcorder to focus on before and during recording.
3. Touch  to start recording a video clip.

 **NOTE:**




While the recording is in progress, touch  to pause the recording or touch  to save the frame as a separate photo.


4. Touch  to stop recording.

## Using BEAUTIFY Mode

Use BEAUTIFY mode to take a beautified selfie or portrait. BEAUTIFY mode is available for both the front camera and the back camera.

1. Open **Camera**. Touch **BEAUTIFY**.
2. Switch to the front camera to take a beautified selfie. Or switch to the back camera to take a beautified portrait. Slide left or right to make adjustments on the slider at the bottom of the viewfinder as you desire.
3. Touch .

## Using Other Camera Modes

Besides capturing photos and videos in the traditional way, your camera app offers other powerful and interesting camera modes. Touch  in the viewfinder screen to find them all.

- **MULTI EXPOSURE:** Capture two pictures for collage.
- **TIME-LAPSE:** Set the time interval between each frame when you shot time lapse videos with the back camera.

- **MANUAL:** Use manual camera mode to adjust more camera options for your photo such as ISO, white balance, exposure, etc.

# Gallery

## Opening Gallery

Touch the **Home** key and slide up on the screen. Touch **Gallery** to view albums of your pictures and videos.


## Working With Albums

When you open the Gallery, all pictures and videos on your phone are displayed in a number of albums. Touch **Camera/Others** or slide left or right to switch between the Camera album and other albums.

### To view album contents:

Touch an album to view the pictures and videos it contains.

### To share albums, pictures, or videos:

1. Touch and hold an album to select it or touch and hold an item after you open an album to select a picture or a video.
2. Touch more items that you want to share.
3. Touch  and select how you want to share the items.

### To delete albums, pictures, or videos:

1. Touch and hold an album to select it or touch and hold an item after you open an album to select a picture or a video.
2. Touch more items that you want to delete.

3. Touch  > **OK**.

# Music

Touch the **Home** key and slide up on the screen. Touch **Music** to play audio files stored on your phone. **Music** supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and so on.

## Viewing Your Music Library

Open **Music**. There you can touch **All songs** to view all your audio files or by categorized lists of artists, albums, and genres. You can also touch **Favorites**, **Recently played** or **Folders** to find songs, or view all your playlists in **My playlist** section.



### NOTE:


If an audio file is being played, its name and player controls are displayed at the bottom of the screen. Touch the area to open the playback screen.

## Playing Music


Touch a song in the music library to listen to it. Touch the bottom of the screen to open the playback screen and control the playing.



# FM Radio

## Scanning and Saving Channels



1. Plug in a wired headset.
2. Touch the **Home** key and slide up on the screen. Touch **FM Radio**.
3. Your phone automatically scans for all available channels and saves them to the **All channels** list for the first time you use it. Or you can touch  > **Scan** in the FM Radio screen to scan for the channels again.

## Listening to FM Radio

1. Open **FM Radio** while the headset is connected.
2. Touch  > **All channels** and select a channel.





You can also drag the red line along the frequency panel or touch  or  to switch to other channels.

### **NOTES:**

- Touch  to add the channel to favorites.
- Touch  to listen to the radio through the phone speaker.


# Recorder

## Recording a Voice Memo

1. Touch the **Home** key and slide up on the screen. Touch **Recorder**.
2. Touch  to start recording. During recording, you can do the following:
  - ▶ Touch / to pause or continue the recording.
  - ▶ Touch  to add time tags to the recording.
3. Touch **Done** to stop recording.
4. Edit the file name and touch **Done** to save the recording.

If you don't want to save the memo after recording it, touch **Delete > OK** to delete it.

## Playing a Voice Memo

1. Touch  at the top right of the screen to see all recordings.
2. Touch the title of a memo to play it.

# Settings

Touch the **Home** key and slide up on the screen. Touch **Settings**. The **Settings** app contains most of the tools for customizing and configuring your phone.

## Wi-Fi

Open **Settings** and touch **Wi-Fi**. You can turn Wi-Fi on or off and configure your Wi-Fi connections.

## Bluetooth

Open **Settings** and touch **Bluetooth**. You can turn Bluetooth on or off and configure your Bluetooth connections.

## Wi-Fi Hotspot

Open **Settings** and touch **Wi-Fi hotspot** to share your phone's mobile data connection with PCs or other devices via Wi-Fi.

## Mobile Networks

Open **Settings** and touch **Mobile networks** to control mobile data use, set access point names, or select mobile network or network types.



## Flight Mode

Open **Settings** and touch **More** and slide the switch beside **Flight mode** to turn it on or off. All the phone's radios that transmit voice or data are turned off when flight mode is on.

## Data Usage

Open **Settings** and touch **More > Data usage** to check and manage mobile data use. You can view and restrict Wi-Fi data usage as well.

### **NOTE:**

The data usage is measured by your phone, and your carrier's data usage accounting may differ.

## VPN

Open **Settings** and touch **More > VPN** to set up and connect to virtual private networks.

## USB Tethering

While the phone is connected to a computer via the USB cable, you can open **Settings** and touch **More > USB tethering** to share your phone's mobile data with the computer.

## Bluetooth Tethering

Open **Settings** and touch **More > Bluetooth tethering** to

share your phone's mobile data with the connected Bluetooth device.

## Network Settings Reset

Open **Settings** and touch **More > Network settings reset > Reset settings** to reset all network settings, including Wi-Fi, mobile networks, and Bluetooth.

## Display

Open **Settings** and touch **Display** to configure the display options, including font size, screen sleep time, brightness level, auto-rotate screen and more.

## Sound

Open **Settings** and touch **Sound**. You can adjust different types of volume, set sound mode, set Do not disturb options, set up ringtone and notification sound and select system sounds.

## Notifications

Open **Settings** and touch **Notifications**. You can set the common notification options and different options for individual apps. Touch an app to block or mute its notifications, select its notification content to display on the lock screen, or let its notifications override your **Do No Disturb** settings.

## Navigation Keys

Open **Settings** and touch **Features > Navigation keys** to swap the positions of the **Back** key and the **Recent apps** key. Select an option to make the switch.

## Apps

Open **Settings** and touch **Apps** to see apps installed on your phone and manage them. Touch an app to see its information and options.

## Default Apps

Open **Settings** and touch **Default apps** to set the default application for certain operation. For example, you can set Email or Gmail as the default email app.

## Power Manager

Open **Settings** and touch **Power manager**. You can view the battery level, make a comprehensive power usage detection, enable different battery saving modes, configure power management for apps, check the battery usage and the apps that consume battery power improperly, and cool down the battery by disabling running apps.

## Security

Open **Settings** and touch **Security** to configure options that help keep your phone and data safe. You can lock the screen with pattern, PIN, or password, activate the PIN lock for the nano-SIM card, or set the device administration, credential storage, and other advanced options.

## Accounts

Open **Settings** and touch **Accounts** to manage your web accounts and synchronisation. Touch **Add account** to sign in to or create accounts on your phone.

Touch an account type to see that type of accounts you have added and adjust the accounts settings.

## Languages and Input

Open **Settings** and touch **Advanced settings > Languages & input** to configure options related to system language, keyboard and input methods, speech input and output as well as mouse/trackpad input.

## Date and Time

Open **Settings** and touch **Advanced settings > Date & time** to set date, time, time zone, and the time format, or display dual clocks on the lock screen.

## Backup and Reset

Open **Settings** and touch **Advanced settings > Backup & reset** to manage data backup and restoration options, and to reset the phone to factory status.

## Memory

Open **Settings** and touch **Advanced settings > Memory** to monitor the average memory use and performance of your phone. You can also check which apps use the most memory.

## Storage

Open **Settings** and touch **Advanced settings > Storage** to view the memory information of the internal phone storage and the microSDXC card.

You can choose the default location for new data, such as photos captured and voice recorded. Touch **Saving location setting** and select to store items in the phone storage or the installed microSDXC card.

## Connect to PC

Open **Settings** and touch **Advanced settings > Connect to PC** to select your USB connection type between your phone and PC.

## Scheduled Power On/Off

Open **Settings** and touch **Advanced settings > Scheduled power on/off** to set the day and time when the phone automatically powers on or off. You can also touch the switches on the right to turn the features on or off.

## Location

Open **Settings** and touch **Advanced settings > Location** to manage location mode and services, which help your phone and apps determine your location. To use location-related applications, such as finding your location on Google Maps, you must have location services enabled on your phone.

## Accessibility

Open **Settings** and touch **Advanced settings > Accessibility** to configure the system accessibility options and accessibility plug-ins on your phone.

## Printing

Open **Settings** and touch **Advanced settings > Printing** to manage Google Cloud Print service or other printer plug-ins installed from the Google Play Store or your printer manufacturer.

## System Update

Open **Settings** and touch **System Update** to check, download and install system updates.

## Google









Open **Settings** and touch **Google** to manage settings for Google apps and services that are installed on your device.

## About Phone











Open **Settings** and touch **About phone** to view the phone status and other information.

# For Your Safety

## General Safety

	Don't make or receive handheld calls while driving. Never text while driving.		Don't use at gas stations.
	Keep your phone at least 5 mm away from your body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your phone near your ear while the speaker is in use.



	Avoid contact with anything magnetic.		Avoid extreme temperatures.
	Keep away from pacemakers and other electronic medical devices.		Avoid contact with liquids. Keep your phone dry.
	Turn off when asked to in hospitals and medical facilities.		Do not attempt to disassemble your phone.
	Turn off when told to in aircrafts and airports.		Only use approved accessories.
	Turn off when near explosive materials or liquids.		Don't rely on your phone as a primary device for emergency communications.

## Radio Frequency (RF) Energy

### General Statement on RF Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you

communicate with your phone, the system handling your call controls the power level at which your phone transmits.

## **Specific Absorption Rate (SAR)**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the head was 0.506 W/kg\*, and when tested at the body was 1.574 W/kg\* with 5 mm distance. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in the user manual\*\*.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

\* The tests are carried out in accordance with EN 50360, EN 50566, EN 62479, EN 62209-1 and EN 62209-2.

\*\* Please see body worn operation in the user manual.

## **Body Worn Operation**

Important safety information regarding radio frequency radiation (RF) exposure:

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 5 mm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

## **Limiting Exposure to Radio Frequency (RF) Fields**

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> (WHO Fact sheet 193: June 2000).

## Distraction

### Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

## Product Handling

### General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of the use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep them in a clean place.
- Keep the screen and camera lens clean. Unclean screen or camera lens may slow down the phone's reaction to your operations or lower image quality.

- Clean your phone and its accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose or use your phone or its accessories in an environment with or that can reach extreme temperatures, minimum 23°F (-5°C) and maximum 122°F (+50°C).
- Do not place your phone inside or near heating equipment or high pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.
- Please check local regulations for disposal of electronic products.

- Do not carry your phone in your back pocket as it could break when you sit down.

## **Small Children**

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

## **Demagnetization**

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

## **Electrostatic Discharge (ESD)**

Do not touch the metallic connectors of the nano-SIM card.

## **Antenna**

Do not touch the antenna unnecessarily.

## **Normal Use Position**

When placing or receiving a phone call, hold your phone to your ear, with the bottom toward your mouth.

## **Air Bags**

Do not place your phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could occur.

Place your phone safely before driving your vehicle.

## **Seizures/Blackouts**

Your phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching videos. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician. To reduce the risk of blackouts or seizures, you can use your phone in a well-lit room and take frequent breaks.

## **Repetitive Strain Injuries**

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take frequent breaks to stretch and relax.

## **Emergency Calls**

This phone, like any other wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you should not rely solely on any wireless phone for emergency communications.

## **Loud Noise**

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth headsets or other audio devices.

## **Phone Heating**

Your phone may become warm during charging and normal use.

## **Electrical Safety**

### **Accessories**

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch metallic objects, such as coins or key rings, or allow them to contact or short-circuit the charging jack.

Never puncture the surface of the phone with sharp objects.



## **Connection to a Car**

Seek professional advice when connecting a phone interface to the vehicle electrical system.

## **Faulty and Damaged Products**

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel can service or repair the phone or its accessories.

If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

## **Radio Frequency Interference**

### **General Statement on Interference**

Care must be taken when using your phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Please consult your doctor and the device manufacturers to determine if the operation of your phone may interfere with the operation of your medical devices.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker.

To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

## **Hearing Aids**

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference depends on the type of the hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

## **Medical Equipment**

Switch off your wireless device when you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## **Aircraft**

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft and enable flight mode of your phone when boarding an aircraft.

## **Interference in Vehicles**

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

## **Explosive Environments**

### **Gas Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **Blasting Caps and Areas**

Power off your mobile phone or wireless device when in a blasting area or in areas where signs are posted to power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

# Technical Specifications

---

Size and Weight      152 × 75.8 × 8.3 mm.  
161.5 g with battery

---

Networks              4G LTE Bands 1, 3, 7, 8, 28, 40  
LTE Data Rates: 150 M Down / 50 M Up  
3G UMTS 900, 2100 MHz, HSPA+ 42  
Mbps data  
2G 900, 1800 MHz.

---

Display                IPS 5.5", HD 2.5D Capacitive touch.

---

Camera                8.0 MP Rear, 5.0 MP Front

---

CPU & Memory      Quad core 1.1 GHz Qualcomm  
MSM8909 CPU with 1GB RAM.  
16 GB ROM with approximately 10 GB  
user space.  
Expandable external storage  
microSD(HC)<sup>™</sup> up to 128 GB

---

Operating system    Android 7

---

Battery    Capacity    4000 mAh Li-ion user replaceable

---

---

Charge Time	3-4 hrs with AC Charger
Standby time	Up to 320 hours (subject to network)
Voice talk time	Up to 9 hours (subject to network)
Connectivity	Bluetooth 4.1 , Wi-Fi 802.11b/g/n, 3.5 mm jack NAHJ with Hi-Fi mode, micro USB
SIM Card	NANO SIM, 4FF format. This handset is locked to the Optus network and is only suitable for use on that network.

---

<b>Troubleshooting</b>	<b>Solution</b>
How do I check the software version?	Settings > About phone > Build number
How do I reset to factory defaults?	Settings > Backup & reset > Factory data reset
How do I check the SMS service centre number?	Messages > Options > Settings
How do I configure the MMS Settings?	Messages > Options > Settings
How do I configure Email settings?	Apps > Email, or Menu > Settings > Accounts
How do I copy Contacts to or from my SIM card?	Contacts > Options > Import/Export > Follow the directions on screen
How do I select Network mode?	Settings > More > Mobile Networks > Preferred network type

---

<b>Error Messages</b>	<b>Solution</b>
No SIM Card	Check a valid SIM card is inserted. See the <i>Getting Started</i> section
Enter PIN code	You have set a SIM PIN. Please enter your SIM PIN code.
Enter PUK code	Contact your Service Provider to get the PUK code
Enter Unlock Code	Contact your Service Provider to obtain the network unlocking code (fees may apply to unlock your device)

---

# Disposal of your old phone - Australia

Please return your old device to any Mobile Muster collection point or use the Mobile Muster freepost bag provided with your new handset. Mobile Muster diverts all returned devices from landfill and recycles the component materials.

