


FC9239-FC9220



PHILIPS



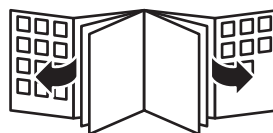

ENGLISH 8

한국어 15

繁體中文 22

FC9239-FC9220

6 ENGLISH

General description (Fig. 1)

- 1 Filter cylinder
- 2 Filter cylinder case
- 3 Dust bucket release button
- 4 Dust bucket
- 5 Hose connection opening
- 6 Suction power buttons (MIN and MAX)
- 7 Suction power lights
- 8 Filter-Clean button
- 9 On/off button
- 10 Cover
- 11 Motor Protection Filter
- 12 Wheel
- 13 Cord rewind button
- 14 Hose connector
- 15 Hose release button
- 16 Remote control (specific types only)
- 17 Handgrip
- 18 Accessory holder
- 19 Telescopic tube
- 20 Small brush
- 21 Small nozzle
- 22 Crevice tool
- 23 Tri-Active nozzle
- 24 Side brush
- 25 Parking/storage ridge
- 26 Super Clean Air HEPA Filter or Ultra Clean Air HEPA Filter
- 27 Filter grille
- 28 Mains cord
- 29 Parking slot
- 30 Swivel wheel
- 31 Storage slot
- 32 Type plate

Important

Read these instructions for use carefully before using the appliance and save them for future reference.

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the cord or the appliance itself is damaged.
- If the mains cord is damaged, it must be replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Keep the appliance out of the reach of children.
- Never suck up water or any other liquid. Never suck up flammable substances and do not suck up ashes until they are cold.
- Do not point the hose, the tube or any other accessory at the eyes or ears nor put it in your mouth when it is connected to the vacuum cleaner and the vacuum cleaner is switched on.
- Sucking up large objects may cause the air passage in the tube or hose to become obstructed. If this happens, the obstruction needs to be removed.
- Never use the appliance without the Motor Protection Filter. This could damage the motor and shorten the life of the appliance.
- Only use the Philips filter cylinder supplied with the appliance.

- The filter cylinder is not waterproof and cannot be cleaned with water or cleaning agents. Only clean the filter with the Filter-Clean system.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and in accordance with the instructions in this instruction manual, the appliance is safe to use according to scientific evidence available today.

Preparing for use

Connecting accessories

Hose

- 1 To connect the hose, push it firmly into the appliance ('click'). (Fig. 2)
- 2 To disconnect the hose, press the release button (1) and pull the hose out of the appliance (2). (Fig. 3)

Telescopic tube

- 1 Connect the tube to the handgrip of the hose by pressing the spring-loaded lock button on the handgrip and inserting the handgrip into the tube. Fit the spring-loaded lock button into the opening in the tube ('click'). (Fig. 4)
- 2 To disconnect the tube from the handgrip, press the spring-loaded lock button and pull the handgrip out of the tube.

Use the same method to connect and disconnect the nozzles.

- 3 Adjust the tube to the length you find most comfortable during vacuum cleaning. (Fig. 5)

Tri-Active nozzle

- The Tri-Active nozzle is a multi-purpose nozzle for carpets and hard floors. (Fig. 6)
The side brushes catch more dust and dirt at the sides of the nozzle and allow you to clean better along furniture and other obstacles.
- The opening at the front of the nozzle allows you to suck up larger particles. (Fig. 7)
- 1 To clean hard floors, push the rocker switch on top of the nozzle with your foot to make the brush strip come out of the housing. At the same time the wheel will be lifted to prevent scratching and to increase manoeuvrability. (Fig. 8)
- 2 To clean carpets, push the rocker switch again to make the brush strip disappear into the nozzle housing. The wheel will be lowered automatically. (Fig. 9)

Crevice tool, small nozzle and small brush

- 1 Connect the crevice tool (1), the small nozzle (2) or the small brush (3) directly to the handgrip or to the tube. (Fig. 10)

Accessory holder

- The accessory holder can simply be snapped onto the handgrip. (Fig. 11)
The accessories can be stored in the accessory holder by pushing them into the holder. To detach the accessories, pull them out of the holder.
You can store two accessories at a time in the accessory holder:
- Crevice tool and small nozzle. (Fig. 12)
Please note the way in which the small nozzle must be placed in the accessory holder.
- Crevice tool and small brush. (Fig. 13)

8 ENGLISH

Infrared remote control (specific types only)

- 1 Remove the lid of the battery compartment (1) and insert two AAA 1.5-volt batteries (2). Reattach the lid of the battery compartment (3). (Fig. 14)

Make sure that the - and + poles point in the right direction.

Using the appliance

- 1 Pull the cord out of the appliance and put the mains plug in the wall socket.
- 2 Press the on/off button on top of the appliance to switch on the appliance. (Fig. 15)

Adjusting suction power

- During vacuum cleaning, you can adjust the suction power to one of 5 different settings with the MIN and MAX buttons on top of the appliance. (Fig. 16)
- If your appliance is equipped with an infrared remote control (specific types only) you can set the suction power to one of 5 different settings with the – and + buttons on the infrared remote control. (Fig. 17)
 - The blue suction power lights show the selected suction power level.
 - Use maximum suction power to vacuum very dirty carpets and hard floors.
 - Use minimum suction power to vacuum curtains, table carpets, etc.
- When you switch on the appliance, it starts running at the last selected suction power setting. If your appliance is equipped with an infrared remote control (specific types only) it starts running at the highest suction power. (Fig. 15)

Pausing during use

- 1 If you want to pause for a moment, park the tube in a convenient position by inserting the ridge on the nozzle into the parking slot. (Fig. 18)
- 2 If your appliance is equipped with an infrared remote control (specific types only), press the standby button to temporarily switch the vacuum cleaner off, for instance when you have to move some furniture. (Fig. 19)
 - The middle suction power light starts burning to indicate that the vacuum cleaner is in standby mode.
- 3 To continue vacuum cleaning, simply press the standby button, - or + button.

Using the Filter-Clean button

A clean filter cylinder helps maintain high suction power.

Always press the Filter-Clean button when you have finished vacuum cleaning.

The filter-cleaning process only needs to be performed once to guarantee proper cleaning of the filter.

- 1 Switch off the appliance and leave the mains plug in the wall socket during the filter-cleaning process.
- 2 Keep the appliance in horizontal position, with all wheels touching the floor.

Always leave the hose connected to the appliance during the filter-cleaning process to prevent dust from being blown out of the appliance.

- 3 Press the Filter-Clean button. (Fig. 20)
 - The light in the Filter-Clean button goes on and you hear a beep before the filter-cleaning process starts.

- ▶ During the filter-cleaning process the appliance produces a rattling noise. This is completely normal.
- ▶ When the filter-cleaning process is finished, you hear a beep and the light in the Filter-Clean button goes out.
- 4 You can also press the Filter-Clean button during vacuum cleaning.
- ▶ When you do this, the motor stops running and the filter cleaning-process starts. During the filter-cleaning process, the appliance does not suck up dirt. When the filter-cleaning process is finished, the motor automatically starts running again and you can continue vacuum cleaning.
- ▶ If you fail to press the Filter-Clean button after vacuuming several times, the light in the Filter-Clean button starts blinking. This tells you that you need to press the Filter-Clean button to prevent the filter from becoming clogged.
- ▶ The light stops blinking after you have cleaned the filter by pressing the Filter-Clean button.

Cleaning and maintenance

Always press the Filter-Clean button when you have finished vacuum cleaning.

Cleaning the dust bucket and filter cylinder case

Always unplug the appliance before you empty the dust bucket.

The dust bucket is not dishwasher-proof.

- 1 Empty the dust bucket as soon as the dust level has reached the round disc of the filter cylinder case. (Fig. 21)
- 2 Switch off the appliance, remove the mains plug from the wall socket and disconnect the hose from the appliance.
- 3 Unlock the cover by pressing the release button on top of the handle of the dust bucket (1). Swing the cover open (2). (Fig. 22)
- 4 Remove the dust bucket by lifting it out of the appliance. (Fig. 23)
- 5 Hold the dust bucket over a dustbin and lift the filter cylinder case out of the bucket. Empty the bucket. (Fig. 24)
- 6 Gently tap the filter cylinder case against the dustbin to release all fine dust from the case. (Fig. 25)
- 7 If you want to clean the filter cylinder case more thoroughly, first remove the filter cylinder from the case. To remove the filter cylinder, turn the handle on top of the filter cylinder anticlockwise (1) and lift the filter cylinder out of the case (2). (Fig. 26)
- 8 Then clean the filter cylinder case with a dry cloth or with cold tap water and some washing-up liquid. (Fig. 27)
- ▶ Do not clean the filter cylinder case with the filter cylinder in it under the tap. (Fig. 28)
- 9 Put the filter cylinder back into the filter cylinder case.

Make sure that the filter cylinder case is dry before you reinsert the filter cylinder into it.

- 10 Clean the dust bucket with cold tap water and some washing-up liquid.

- 11 Put the filter cylinder case back into the dust bucket.

Make sure that the dust bucket is dry before you reinsert the filter cylinder case.

If you have not reinserted the filter cylinder case, the suction power lights start blinking and the appliance cannot be switched on.

10 ENGLISH

- 12** Close the cover firmly ('click').

Cleaning the filter cylinder

If you persistently fail to press the Filter-Clean button when the light in the Filter-Clean button blinks, the filter cylinder will clog up with dirt and the suction power will become insufficient. If this has happened, you can unclog the filter cylinder in the following way:

- 1** Switch off the appliance and remove the mains plug from the wall socket.
- 2** Unlock the cover by pressing the release button on top of the handle of the dust bucket (1). Swing the cover open (2). (Fig. 22)
- 3** Remove the dust bucket by lifting it out of the appliance. (Fig. 23)
- 4** Hold the dust bucket over a dustbin and lift the cylinder case out of the bucket. (Fig. 24)
- 5** Turn the handle on top of the filter cylinder anticlockwise (1) and lift the filter cylinder out of the case (2). (Fig. 26)
- 6** Hold the filter cylinder over a dustbin and clean it with the small brush. Gently brush from the top of the filter downwards along the ribs of the filter. (Fig. 29)

Only use the small brush that comes as an accessory with the appliance. Other brushes may damage the filter cylinder.

- 7** The filter cylinder is not waterproof and cannot be cleaned with water or cleaning agents. (Fig. 27)

- 7** Put the filter cylinder back into the case and turn the handle clockwise until the filter cylinder locks into position.

Make sure the filter cylinder is securely fixed in the case ('click').

- 8** Put the case with the filter cylinder in it back into the dust bucket and put the dust bucket back into the appliance.
- 9** Close the cover firmly ('click').
- 10** Put the plug in the wall socket. Make sure the appliance is in horizontal position, with all wheels touching the floor, and the hose is connected to the appliance.
- 11** Press the Filter-Clean button. (Fig. 20)
- 12** For the best result, empty the dust bucket when the filter-cleaning process is finished (see section 'Cleaning the dust bucket and filter cylinder case').

Cleaning the Motor Protection Filter

Clean the permanent Motor Protection Filter every two months.

- 1** Unplug the appliance.
- 2** Take the Motor Protection Filter out of the appliance and clean the filter by tapping the dust out of it over a dustbin. (Fig. 30)

If you want to clean the Motor Protection Filter more thoroughly, you can rinse it under a cold tap.

Do not use washing-up liquid or any other cleaning agent to clean the Motor Protection Filter!

- 3** Press the clean filter firmly back into the filter compartment to ensure that it is properly placed.

Make sure that the Motor Protection Filter is completely dry before you put it back into the filter compartment.

Replacement

Super or Ultra Clean Air HEPA Filter

This appliance is equipped with either the Super Clean Air HEPA Filter or the Ultra Clean Air HEPA Filter. These filters are located in the back of the appliance and are able to remove 99.5% and 99.9%, respectively, of all particles down to 0.0003 mm in size from the outlet air. This not only includes normal house dust, but also harmful microscopic vermin such as dust mites and their excrements, which are well-known causes of respiratory allergies. Replace the HEPA Filter every six months.

- 1** Unplug the appliance.
- 2** Remove the filter grille. (Fig. 31)
- 3** Remove the old filter. (Fig. 32)
- 4** Insert the new filter into the appliance.
- 5** Reattach the top of the filter grille and push the bottom corners until they snap home ('click'). (Fig. 33)

Batteries of remote control (specific types only)

- 1** Remove the lid of the battery compartment (1) and insert two AAA 1.5-volt batteries (2). Reattach the lid (3). (Fig. 14)

Make sure that the - and + poles point in the right direction.

Storage

Before you store the appliance, always make sure you have cleaned the filter cylinder by pressing the Filter-Clean button (see section 'Using the Filter-Clean button' in chapter 'Using the appliance').

- 1** Switch off the appliance and remove the mains plug from the wall socket.
- 2** Rewind the mains cord by pressing the cord rewind button. (Fig. 34)
- 3** Put the appliance in upright position and attach the nozzle to the appliance by inserting the ridge on the nozzle into the storage slot. (Fig. 35)
- 4** Always put the Tri-Active nozzle in the carpet setting (brush strip retracted into the nozzle) when you store it and prevent the side brushes from becoming bent (Fig. 9)

Ordering accessories and filters

If you have any difficulties obtaining filters or other accessories for this appliance, please contact the Philips Customer Care Centre in your country or consult the worldwide guarantee leaflet.

- Super clean air HEPA Filters are available under type number FC8031
- Ultra Clean Air HEPA Filters are available under service number 4322 004 92990

Environment

- The batteries of the remote control (specific types only) contain substances that may pollute the environment. Do not throw batteries away with the normal household waste, but dispose of them at an official collection point for batteries. Always remove the battery of the remote control before you discard and hand in the appliance at an official collection point.
- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment. (Fig. 36)

12 ENGLISH

Guarantee & service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, turn to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

Troubleshooting

- 1** The light in the Filter-Clean button blinks.
 - The filter cylinder needs to be cleaned. Press the Filter-Clean button to clean the filter cylinder.
- 2** The appliance cannot be switched on and the suction power lights blink.
 - The filter cylinder case with the filter cylinder in it has not been inserted into the dust bucket. Insert the filter cylinder case with the filter cylinder.
- 3** The suction power is insufficient.
 - Perhaps you have selected a low suction power setting. Select a higher suction power setting.
 - Perhaps the filter cylinder is filled with dirt. If necessary, clean this filter.
 - Perhaps the Motor Protection Filter and/or the Ultra or Super Clean Air HEPA Filter are dirty. Clean or replace the filters.
 - Check if the nozzle or the hose is blocked up. To remove the obstruction, disconnect the blocked-up item and connect it (as far as possible) the other way around. Switch the vacuum cleaner on to force the air through the blocked-up item in opposite direction (Fig. 37)
- 4** The infrared remote control (specific types only) does not function.
 - Perhaps the batteries have not been inserted properly or are empty. Insert the batteries properly or replace them.
 - Remove the lid of the battery compartment (1) and insert two new AAA 1.5-volt batteries batteries (2). Make sure that the - and + poles point in the right direction. Reattach the lid of the battery compartment (3). (Fig. 14)

각 부의 명칭 (그림 1)

- 1 필터 실린더
- 2 필터 실린더 케이스
- 3 먼지통 릴리스 버튼
- 4 먼지통
- 5 호스 연결 구멍
- 6 흡입력 버튼(MIN, MAX)
- 7 흡입력 표시등
- 8 필터 청소 버튼
- 9 전원 버튼
- 10 덮개
- 11 모터 보호 필터
- 12 바퀴
- 13 코드 되감기 버튼
- 14 호스 연결부
- 15 호스 릴리스 버튼
- 16 리모콘(특정 모델만 해당)
- 17 손잡이
- 18 액세서리 홀더
- 19 길이 조절이 가능한 연장관
- 20 소형 브러시
- 21 소형 노즐
- 22 틈새 청소 도구
- 23 Tri-Active 노즐
- 24 측면 브러시
- 25 부착/보관 걸이
- 26 수퍼 클린 에어 HEPA 필터 또는 울트라 클린 에어 HEPA 필터
- 27 필터 그릴
- 28 전원 코드
- 29 부착 흡
- 30 회전식 바퀴
- 31 보관 흡
- 32 명판

주의 사항

본 제품을 사용하기 전에 이 설명서를 주의 깊게 읽고, 나중에 참조할 수 있도록 잘 보관하십시오.

- ▶ 제품에 전원을 연결하기 전에, 제품에 표시된 전압과 사용 지역의 전압이 일치하는지 확인하십시오.
- ▶ 만약 플러그나 코드 또는 제품이 손상되었을 경우에는 제품을 사용하지 마십시오.
- ▶ 전원 코드가 손상된 경우, 안전을 위해 필립스 서비스 센터나 서비스 지정점 또는 전문 기술자에게 의뢰하여 교체하십시오.
- ▶ 제품은 어린이의 손이 닿지 않는 장소에 보관하십시오.
- ▶ 물, 다른 용액 또는 가연성 물질은 절대 흡입하지 마십시오. 타고 남은 재는 완전히 꺼지기 전까지 절대 흡입하지 마십시오.
- ▶ 호스, 튜브 또는 기타 액세서리가 진공 청소기가 연결되어 있고 진공 청소기의 전원이 켜져 있을 때 이를 눈, 귀에 갖다 대거나 입에 넣지 마십시오.
- ▶ 큰 물체를 흡입하면 튜브나 호스의 공기 통로가 막힐 수 있습니다. 이러한 일이 발생하면 이물질을 제거해야 합니다.
- ▶ 모터 보호 필터 없이 제품을 사용하지 마십시오. 모터가 손상되고 제품의 수명이 단축될 수 있습니다.
- ▶ 반드시 제품과 함께 제공된 필립스 필터 실린더만 사용하십시오.

14 한국어

- ▶ 본 필터 실린더는 방수되지 않으므로 물이나 세제로 세척할 수 없습니다. 반드시 필터 청소 시스템을 사용하여 필터를 청소하십시오.

EMF(전자기장)

이 필립스 제품은 EMF(전자기장)과 관련된 모든 기준을 준수합니다. 이 사용 설명서의 지침에 따라 적절하게 취급할 경우 이 제품은 안전하게 사용할 수 있으며 이는 현재까지의 과학적 증거에 근거하고 있습니다.

사용 전 준비

액세서리 연결

호스

- 1 호스를 연결하려면 ‘찰칵’ 소리가 날 때까지 제품 안으로 밀어 넣으십시오. (그림 2)
- 2 호스를 분리하려면 릴리스 버튼을 누르고(1) 제품에서 호스를 잡아당겨 빼십시오. (2). (그림 3)

길이 조절이 가능한 연장관

- 1 손잡이의 스프링식 잠금 버튼을 누르고 손잡이를 튜브에 장착한 다음 튜브를 호스 손잡이에 연결하십시오. 스프링식 잠금 버튼이 ‘찰칵’ 소리가 날 때까지 튜브 구멍에 맞추십시오. (그림 4)
- 2 손잡이 튜브를 분리하려면 스프링식 잠금 버튼을 누르고 튜브의 손잡이를 잡아당기십시오.
노즐을 연결하고 분리할 때에도 같은 방법을 사용하십시오.
- 3 진공 청소기를 사용하는 동안 튜브를 사용하기 편한 길이로 조절하십시오. (그림 5)

Tri-Active 노즐

- ▶ Tri-Active 노즐은 카페트 및 딱딱한 바닥에서 사용할 수 있는 다용도 노즐입니다. (그림 6)
노즐 옆 부분의 측면 브러시는 먼지와 더러움을 더 잘 잡아주며, 가구 및 기타 장애물의 가장자리를 따라 효과적으로 청소합니다.
- ▶ 노즐 앞 부분의 구멍은 더 큰 입자를 흡입할 수 있습니다. (그림 7)
- 1 딱딱한 바닥을 청소하려면 노즐 상단의 로커 스위치를 발로 눌러서 브러시의 솔 부분이 외장 바깥으로 돌출되도록 하십시오. 이렇게 하면 동시에 바퀴도 올라가서 굽힘을 방지하고 더 잘 움직이게 됩니다. (그림 8)
- 2 카페트를 청소하려면 브러시의 솔 부분이 노즐 외장 안으로 들어가도록 로커 스위치를 다시 누르십시오. 바퀴가 자동으로 내려옵니다. (그림 9)

틈새 청소 도구, 소형 노즐 및 소형 브러시

- 1 틈새 청소 도구(1), 소형 노즐(2) 및 소형 브러시(2)는 튜브나 손잡이에 직접 연결하십시오. (그림 10)

액세서리 홀더

- ▶ 액세서리 홀더는 손잡이 위에 간단히 끼울 수 있습니다. (그림 11)
액세서리를 홀더 안으로 밀어 액세서리 홀더에 보관할 수 있습니다. 액세서리를 분리하려면 홀더에서 잡아당기십시오.
한 번에 두 개의 액세서리를 액세서리 홀더에 보관할 수 있습니다.
- ▶ 틈새 청소 도구 및 소형 노즐 (그림 12)
소형 노즐을 액세서리 홀더에 장착하는 방법을 참조하십시오.
- ▶ 틈새 청소 도구 및 소형 브러시 (그림 13)

적외선 리모콘(특정 모델만 해당)

- 1 배터리함 뚜껑을 열고(1) AAA 1.5V 배터리 2개를 넣으십시오(2). 배터리함 뚜껑을 다시 부착하십시오(3). (그림 14)

배터리의 극성(+/-)에 맞게 끼우십시오.

제품 사용

- 1 제품에서 코드를 꺼내고 벽면 콘센트에 전원 플러그를 꽂으십시오.
- 2 제품 상단의 전원 버튼을 눌러서 전원을 켜십시오. (그림 15)

흡입력 조절

- ▶ 진공 청소기를 사용하는 동안 제품 상단의 MIN(최저) 및 MAX(최대) 버튼을 사용하여 흡입력을 5가지 설정으로 조절할 수 있습니다. (그림 16)
- ▶ 제품에 적외선 리모콘(특정 모델만 해당)이 장착되어 있는 경우, 적외선 리모콘의 +/- 버튼을 사용하여 흡입력을 5가지 설정으로 조절할 수 있습니다. (그림 17)
- 청색의 흡입력 표시등에서 선택된 흡입력 레벨이 표시됩니다.
- 매우 더러운 카페트 및 딱딱한 바닥을 청소할 때는 흡입력을 최대로 하여 사용하십시오.
- 커튼, 식탁보 등을 청소할 때는 흡입력을 최저로 하여 사용하십시오.
- ▶ 전원을 켜면 마지막으로 선택된 흡입력 설정에서 작동을 시작합니다. 사용하는 제품에 적외선 리모콘(특정 모델만 해당)이 장착되어 있으면 최대 흡입력에서 작동을 시작합니다. (그림 15)

사용 중 잠시 중단

- 1 청소를 잠시 중단하려면 노즐 걸이를 장착 홈에 끼워서 튜브를 편안하게 세워두십시오. (그림 18)
- 2 제품에 적외선 리모콘(특정 모델만 해당)이 장착되어 있으면 가구를 옮겨야 하는 경우와 같이 일시적으로 진공 청소기 스위치를 꺼야 할 때 대기 버튼을 누르십시오. (그림 19)
- ▶ 중간 흡입력 표시등이 켜지면서 진공 청소기가 대기 모드 상태로 되었음을 알려줍니다.
- 3 다시 진공 청소기를 작동시키려면 대기 버튼, - 버튼 또는 + 버튼을 누르십시오.

필터 청소 버튼 사용 방법

필터 실린더를 청소하면 강력한 흡입력을 유지할 수 있습니다.

청소를 마치면 항상 필터 청소 버튼을 누르십시오.

필터 청소는 필터 청소 과정을 1회만 실행하면 충분합니다.

- 1 필터를 청소하는 동안에는 제품 전원은 끄고 전원 플러그는 벽면 콘센트에 꽂아 두십시오.
- 2 모든 바퀴가 바닥에 닿도록 하여 제품을 수평 상태로 두십시오.

필터를 청소하는 동안에는 제품에서 먼지가 뿜어져 나오지 않도록 호스를 제품에 연결하여 두십시오.

- 3 필터 청소 버튼을 누르십시오. (그림 20)
- ▶ 필터 청소 버튼의 표시등이 켜지고 신호음이 들리면서 필터 청소가 시작됩니다.
- ▶ 필터를 청소하는 동안에는 제품에서 과도한 소음이 발생합니다. 이것은 매우 일반적인 현상입니다.
- ▶ 필터 청소가 끝나면 신호음이 들리고 필터 청소 버튼의 표시등이 꺼집니다.

16 한국어

- 4 진공 청소기를 사용하는 도중에도 필터 청소 버튼을 누를 수 있습니다.
- ▶ 이렇게 하면, 모터가 작동을 멈추고 필터 청소가 시작됩니다. 필터를 청소하는 도중에는 제품이 먼지를 흡입하지 않습니다. 필터 청소가 끝나면 모터가 다시 자동으로 작동되기 시작하고 청소를 계속할 수 있습니다.
- ▶ 진공 청소기를 여러 차례 사용한 후에 필터 청소 버튼을 누르지 않으면, 필터 청소 버튼의 표시등이 깜박이기 시작합니다. 이것은 필터가 막히는 것을 방지하기 위하여 필터 청소 버튼을 눌러야 됨을 알려주는 것입니다.
- ▶ 필터 청소 버튼을 눌러서 필터를 청소하고 나면 표시등이 깜박임을 멈춥니다.

청소 및 유지관리

청소를 마치면 항상 필터 청소 버튼을 누르십시오.

먼지통 및 필터 실린더 케이스 청소

먼지통을 비우기 전에 항상 제품의 전원 코드를 뽑으십시오.

먼지통은 식기 세척기에서 세척할 수 없습니다.

- 1 먼지 용량이 필터 실린더 케이스의 원형 디스크에 이르면 먼지통을 비우십시오. (그림 21)
- 2 제품 전원을 끄고 벽면 콘센트에서 전원 플러그를 뽑은 다음 제품에서 호스를 분리하십시오.
- 3 먼지통 손잡이의 상단에 있는 릴리스 버튼을 눌러 덮개 잠금을 해제하십시오(1). 덮개를 돌려 여십시오(2). (그림 22)
- 4 제품에서 먼지통을 들어내어 분리하십시오. (그림 23)
- 5 먼지통을 휴지통 위에 놓고 먼지통의 필터 실린더 케이스를 들어내십시오. 통을 비우십시오. (그림 24)
- 6 필터 실린더 케이스를 휴지통에 대고 가볍게 두드려서 미세 먼지를 모두 털어내십시오. (그림 25)
- 7 필터 실린더 케이스를 더 깨끗하게 청소하려면 우선 필터 실린더를 케이스에서 분리하십시오. 필터 실린더를 분리하려면, 필터 실린더 상단의 손잡이를 시계 반대 방향으로 돌린 다음(1) 케이스에서 필터 실린더를 들어내십시오(2). (그림 26)
- 8 그런 다음 필터 실린더 케이스를 마른 천으로 닦거나 소량의 세제를 푼 찬 수돗물로 세척하십시오. (그림 27)
- ▶ 필터 실린더 케이스를 필터 실린더가 들어있는 상태에서 수돗물로 세척하지 마십시오. (그림 28)
- 9 필터 실린더를 필터 실린더 케이스에 다시 넣으십시오.

필터 실린더를 다시 넣기 전에 필터 실린더 케이스가 말랐는지 확인하십시오.

- 10 먼지통을 소량의 세제를 푼 찬 수돗물로 세척하십시오.

- 11 필터 실린더 케이스를 다시 먼지통에 넣으십시오.

필터 실린더 케이스를 다시 넣기 전에 먼지통이 말랐는지 확인하십시오.

필터 실린더 케이스를 다시 넣지 않으면 흡입력 표시등이 깜박이기 시작하고 제품이 꺼지지 않습니다.

- 12 '찰칵' 소리가 나도록 덮개를 꼭 닫으십시오.

필터 실린더 청소

필터 청소 버튼의 표시등이 깜박여도 필터 청소 버튼을 누르지 않으면 필터 실린더가 먼지로 막히게 되며 흡입력이 약해집니다.

이와 같은 경우에는 다음과 같은 방법으로 필터 실린더의 막힌 부분을 청소할 수 있습니다.

- 1 제품 전원을 끄고 벽면 콘센트에서 전원 플러그를 뽑으십시오.
- 2 먼지통 손잡이의 상단에 있는 릴리스 버튼을 눌러 덮개 잠금을 해제하십시오(1). 덮개를 돌려 여십시오(2). (그림 22)
- 3 제품에서 먼지통을 들어내어 분리하십시오. (그림 23)
- 4 먼지통을 휴지통 위에 놓고 통에서 실린더 케이스를 들어내십시오. (그림 24)
- 5 필터 실린더 상단의 손잡이를 시계 반대 방향으로 돌리고(1) 케이스에서 필터 실린더를 들어내십시오(2). (그림 26)
- 6 필터 실린더를 휴지통 위에 놓고 소형 브러시로 닦으십시오. 필터의 틀을 따라 필터 상단에서 아래쪽 방향으로 부드럽게 닦으십시오. (그림 29)

제품과 함께 액세서리로 제공되는 소형 브러지만 사용하십시오. 기타 다른 브러시는 필터 실린더를 손상시킬 수 있습니다.

- ▶ 필터 실린더는 방수되지 않으며 물이나 세제를 사용하여 세척할 수 없습니다. (그림 27)
- 7 필터 실린더를 다시 케이스에 넣고 필터 실린더가 제자리에 꼭 맞을 때까지 손잡이를 시계 방향으로 돌리십시오.
필터 실린더가 케이스에 단단하게 고정되었는지 확인하십시오(‘찰칵’ 소리가 남).
- 8 필터 실린더가 들어있는 케이스를 먼지통에 다시 넣고 먼지통을 제품 안에 넣으십시오.
- 9 ‘찰칵’ 소리가 나도록 덮개를 꼭 닫으십시오.
- 10 벽면 콘센트에 플러그를 꽂으십시오. 제품이 모든 바퀴가 바닥에 닿은 수평 상태로 놓여있고 호스가 제품에 연결되어 있는지 확인하십시오.
- 11 필터 청소 버튼을 누르십시오. (그림 20)
- 12 최상의 효과를 얻으려면, 필터 청소 과정이 끝난 후 먼지통을 비우십시오(‘먼지통 및 필터 실린더 케이스 청소’란 참고).

모터 보호 필터 청소

매 2개월마다 영구 모터 보호 필터를 청소하십시오.

- 1 제품의 전원 코드를 뽑으십시오.
- 2 제품에서 모터 보호 필터를 꺼내고, 휴지통 위에서 필터의 먼지를 깨끗하게 털어내십시오. (그림 30)
모터 보호 필터를 더 깨끗하게 청소하려면 찬 수돗물로 헹구십시오.
모터 보호 필터를 청소할 때 세제나 기타 다른 세척액을 사용하지 마십시오.
- 3 청소한 필터를 필터통 안으로 완전히 밀어서 제대로 끼워지도록 하십시오.
필터통 안으로 다시 넣기 전에 모터 보호 필터가 완전히 말랐는지 확인하십시오.

18 한국어

교체

수퍼 울트라 클린 에어 HEPA 필터

본 제품에는 수퍼 클린 에어 HEPA 필터 또는 울트라 클린 에어 HEPA 필터가 장착되어 있습니다. 이 필터는 제품 뒷편에 있으며, 배출 공기에서 나오는 0.0003 mm 크기의 미립자를 각각 99.5% 및 99.9%까지 제거할 수 있습니다. 여기에는 일반 가정 먼지 뿐 아니라 호흡기 알레르기를 유발하는 먼지 진드기 및 진드기 배설물과 같은 해로운 미세 해충도 포함됩니다.

HEPA 필터를 매 6개월마다 교체하십시오.

- 1 제품의 전원 코드를 뽑으십시오.
- 2 필터 그릴을 분리하십시오. (그림 31)
- 3 오래된 필터를 빼내십시오. (그림 32)
- 4 제품에 새 필터를 끼우십시오.
- 5 필터 그릴의 상단을 다시 부착하고 하단 모서리를 밀어서 ‘찰칵’ 소리가 나도록 제 자리에 끼우십시오. (그림 33)

리모콘 배터리(특정 모델만 해당)

- 1 배터리함의 뚜껑을 열고(1) 2개의 AAA 1.5V 배터리로 교체하십시오(2). 뚜껑을 다시 부착하십시오(3). (그림 14)

배터리의 극성(+/-)에 맞게 끼우십시오.

보관

제품을 보관하기 전에 항상 필터 청소 버튼을 눌러 필터 실린더를 청소하십시오(‘제품 사용’란의 ‘필터 청소 버튼 사용’ 참고).

- 1 제품 전원을 끄고 벽면 콘센트에서 전원 플러그를 뽑으십시오.
- 2 코드 되감기 버튼을 눌러서 전원 코드를 되감으십시오. (그림 34)
- 3 제품을 똑바로 세워놓고 노즐 걸이를 보관 홈에 끼워서 노즐을 제품에 부착하십시오. (그림 35)
- 4 Tri-Active 노즐을 보관할 때는 항상 카펫 설정(브러시 솔 부분이 노즐 속으로 들어간 상태)으로 두어서 측면 브러시가 휘어지지 않도록 하십시오. (그림 9)

액세서리 및 필터 주문

본 제품의 필터나 기타 액세서를 구하기 어려운 경우에는 필립스 고객 상담실로 문의하거나 제품 보증서를 참조하십시오.

- 수퍼 클린 에어 HEPA 필터의 유형 번호는 FC8031입니다.
- 울트라 클린 에어 HEPA 필터의 서비스 번호는 4322 004 92990 입니다.

환경

- ▶ 리모콘(특정 모델만 해당) 배터리는 환경을 오염시키는 물질을 포함하고 있습니다. 배터리는 일반 가정용 쓰레기와 함께 버리지 마시고 지정된 배터리 분리 수거함에 버리십시오. 제품을 버리기 전에 항상 리모콘에서 배터리를 분리하여 지정된 수거함에 버려 주십시오.
- ▶ 수명이 다 된 제품은 일반 가정용 쓰레기와 함께 버리지 마시고 지정된 재활용 수거 장소에 버리십시오. 이런 방법으로 환경 보호에 동참하실 수 있습니다. (그림 36)

품질 보증 및 서비스

보다 자세한 정보가 필요하시거나, 사용상의 문제가 있을 경우에는 필립스전자 홈페이지(www.philips.co.kr)를 방문하시거나 필립스 고객 상담실로 문의하십시오. 전국 서비스 센터 안내는 제품 보증서를 참조하십시오. *(주)필립스전자:(02)709-1200 * 고객 상담실:(080)600-6600(수신자부담)

문제 해결

- 1 필터 청소 버튼의 표시등이 깜박입니다.
 - ▶ 필터 실린더를 청소해야 합니다. 필터 청소 버튼을 눌러서 필터 실린더를 청소하십시오.
- 2 제품 전원이 켜지지 않고 흡입력 표시등이 깜박입니다.
 - ▶ 필터 실린더 케이스에 필터 실린더를 넣지 않은 상태로 필터 실린더 케이스를 먼지통에 넣었습니다. 필터 실린더 케이스를 필터 실린더가 들어 있는 상태에서 넣으십시오.
- 3 흡입력이 약합니다.
 - ▶ 흡입력이 낮게 설정되어있을 수 있습니다. 흡입력 설정을 더 강하게 하십시오.
 - ▶ 필터 실린더에 먼지가 가득 찬 것일 수 있습니다. 필요한 경우 이 필터를 청소하십시오.
 - ▶ 모터 보호 필터 및/또는 울트라 또는 수퍼 클린 에어 HEPA 필터가 더러워진 것일 수 있습니다. 필터를 청소하거나 교체하십시오.
 - ▶ 노즐이나 호스가 막혔는지 확인하십시오. 이물질 제거하려면 막힌 부분을 분리하여 반대 방향으로 하여 가능한 멀리 연결하십시오. 진공 청소기의 전원을 켜서 막힌 부분에 공기가 반대 방향으로 통하도록 하십시오. (그림 37)
- 4 적외선 리모콘(특정 모델만 해당)이 작동하지 않습니다.
 - ▶ 배터리가 제대로 삽입되지 않았거나 방전된 것일 수 있습니다. 배터리를 제대로 삽입하거나 교체하십시오.
 - ▶ 배터리함 뚜껑을 열고(1) 새 AAA 1.5V 배터리 2개로 교체하십시오(2). 배터리의 극성(+/-)에 맞게 끼워졌는지 확인하십시오. 배터리함 뚜껑을 다시 부착하십시오(3). (그림 14)

제조번호 부여기준 : 필립스전자 제품의 제조번호는 모두 4자리로 되어 있습니다. 앞의 두 자리는 연도를 의미합니다. 나머지 뒤의 두 자리는 생산된 주를 의미합니다. 주는 1년을 52주로 나누어 순차적으로 구분합니다.

(예 : 0512 → 2005년 12번째 주에 생산
0504 → 2005년 4번째 주에 생산)

一般說明 (圖 1)

- 1 濾網筒
- 2 濾網筒盒
- 3 集塵桶鬆開按鈕
- 4 集塵桶
- 5 軟管接口開口
- 6 吸力按鈕 (MIN 及 MAX)
- 7 吸力指示燈
- 8 濾網清理按鈕
- 9 開/關按鈕
- 10 蓋子
- 11 馬達防護濾網
- 12 輪子
- 13 收線鈕
- 14 軟管接口
- 15 軟管鬆開按鈕
- 16 遙控裝置 (僅限於特定機型)
- 17 握把
- 18 配件置放架
- 19 伸縮軟管
- 20 小刷子
- 21 小吸頭
- 22 除縫工具
- 23 全方位三效吸頭
- 24 側刷毛
- 25 安置/收藏突起部位
- 26 超級空氣潔淨 HEPA 濾網或特級空氣潔淨 HEPA 濾網
- 27 濾網柵口
- 28 電線
- 29 安置槽
- 30 轉輪
- 31 收藏槽
- 32 機型標籤

重要事項

在使用本產品前，請先仔細閱讀說明並保留說明書，以供日後參考。

- 在您連接電源之前，請檢查本地的電源電壓是否與產品所標示的電源電壓相符。
- 當電線或產品本身受損時，請勿使用產品。
- 如果電線損壞，必須交由飛利浦、飛利浦授權之服務中心，或是具備相同資格的技師更換，以免發生危險。
- 請勿讓孩童接觸本產品。
- 請勿用來吸水或任何其它液體。請勿吸取易燃性物質，且請勿吸取尚未完全冷卻的灰燼。
- 請勿將軟管、吸塵管或其他配件指向眼睛或耳朵，連接至使用中的吸塵器時，也不可將其放入口中。
- 吸除大型物體可能會造成吸塵管或軟管內的通風阻塞。若發生此情形，則必須清除阻塞物體。
- 請勿在未安裝馬達防護濾網的時候使用本產品，否則可能會損壞馬達並縮短產品壽命。
- 請只使用本產品隨附的飛利浦濾網筒。
- 該濾網筒並不防水，因此無法用水或清潔劑清理，只能以濾網清理系統清理該濾網。

電磁場 (EMF)

本飛利浦產品符合電磁場 (electromagnetic fields, EMF) 所有相關標準。若正確處理及依照本使用手冊之說明進行操作，根據現有之科學文獻來看，使用本產品並無安全顧慮。

使用前準備

連接配件

軟管

- 1 若要連接軟管，將軟管用力推入產品固定 (要聽到「喀搭聲」)。(圖 2)
- 2 若要卸除軟管，按下鬆開按鈕 (1) 並將軟管從產品拉出 (2)。(圖 3)

伸縮軟管

- 1 按下握把上的彈簧鎖定按鈕，將握把插入吸塵管，即可連接吸塵管與軟管握把。將彈簧鎖定按鈕卡入吸塵管小孔中 (要聽到「喀搭聲」)。(圖 4)
- 2 若要從握把移除吸塵管，按下彈簧鎖定按鈕，然後將握把由吸塵管拉出即可。可使用相同方法連接、移除吸頭。
- 3 將吸塵管調整至使用起來最舒適的長度。(圖 5)

全方位三效吸頭

- 全方位三效吸頭是地毯及硬質地板專用的多用途吸頭。(圖 6)
兩側吸頭的側刷可吸除更多灰塵及髒污，讓您將家具和其他不易移動的物品清理得更乾淨。
- 吸頭前端開口可吸除更大碎屑。(圖 7)
- 1 若要清理硬質地板，請以腳推壓吸頭頂端的翹板開關，使刷毛從吸頭罩露出。此時，輪子將會提起以避免刮傷地板，亦更好操作。(圖 8)
- 2 若要清理地毯，再次推壓翹板開關使刷子收進吸頭罩。輪子會自動放下。(圖 9)

細隙吸頭、小吸頭及小刷子

- 1 直接將細隙吸頭 (1) 小吸頭 (2) 或小刷子 (3) 連接至握把或吸塵管。(圖 10)

配件置放架

- 配件置放架可輕易固定在握把上。(圖 11)
輕推配件至配件置放架，即可將配件收藏在置放架上。若要拆開配件，只要從置放架拉出。
- 您可一次收藏兩樣配件在配件置放架中：
- 細隙吸頭與小吸頭。(圖 12)
請注意小吸頭置放在配件置放架上的方式。
- 細隙吸頭與小刷子。(圖 13)

紅外線遙控裝置 (僅限於特定機型)

- 1 打開電池盒蓋 (1) 並插入兩顆四號 (AAA) 1.5 伏特電池 (2) 重新蓋上電池盒蓋 (3)。(圖 14)

請確定正 (+) 負 (-) 極放置無誤。

使用此電器

- 1 請將電線由產品拉出，並將插頭插入牆上插座。
- 2 按下產品頂端的開關 (on/off) 按鈕，以開啟產品電源。(圖 15)

22 繁體中文

調整吸力

- 在吸塵的時候，可使用產品頂端 MIN (最小) 及 MAX (最大) 按鈕在 5 段不同設定中調整吸力。(圖 16)
- 若產品具備紅外線遙控裝置 (僅限於特定機型)，則可使用 - (減弱) 與 + (增強) 按鈕在 5 段不同設定中調整吸力。(圖 17)
 - 藍色吸力指示燈顯示所選擇的吸力程度。
 - 使用最大吸力清潔非常骯髒的地毯與硬質地板。
 - 使用最小吸力清潔窗簾、桌墊等。
- 開啟產品電源時，吸塵器會依照上次所選擇的吸力設定開始運轉。如果您的產品具備紅外線遙控裝置 (僅限於特定機型)，會以最大吸力運轉。(圖 15)

使用中暫停

- 1** 如果想暫停一會兒，將吸頭的突起部位插入安置槽，便可將吸塵管放置在方便的位置。(圖 18)
- 2** 如果產品具備紅外線遙控裝置 (僅限於特定機型)，可按下待命按鈕暫時關閉吸塵器 (例如正好要搬動某些家具時)。(圖 19)
 - 中間的吸力指示燈亮起，代表吸塵器正處於待命模式。
- 3** 若要繼續吸塵，只需按下待命按鈕，- 或 + 按鈕。

使用濾網清理按鈕

清理濾網筒有助於維持高吸力。

結束吸塵時，務必按下濾網清理按鈕。

濾網清理過程只需執行一次，即可確保濾網清理無誤。

- 1** 關閉產品電源，並在濾網清理過程中將插頭留在牆上插座。
- 2** 將產品放於水平位置，所有輪子皆要觸及地面。
濾網清理過程中，務必將軟管連接至產品，以避免灰塵從產品中吹出。
- 3** 按下濾網清理按鈕。(圖 20)
 - 濾網清理按鈕上的指示燈會亮起，而在濾網清理過程開始之前，您會聽到嗶聲。
 - 濾網清理過程中，產品會發出吵雜聲，這是正常現象。
 - 濾網清理過程結束時，您會聽到嗶聲；濾網清理按鈕指示燈則會熄滅。
- 4** 您在吸塵的時候，也可按下濾網清理按鈕。
 - 進行此步驟時，馬達會停止運轉，並開始濾網清理程序。濾網清理過程中，產品不會吸除髒污。濾網清理程序結束時，馬達會自動再次開始運轉，然後可繼續吸塵。
 - 如果您吸塵數次後，都沒有按下濾網清理按鈕，濾網清理按鈕指示燈便會開始閃爍。這是提示您需要按下濾網清理按鈕以防濾網塞住。
 - 按下濾網清理按鈕，清理濾網後，燈光會停止閃爍。

清潔與維護

結束吸塵時，務必按下濾網清理按鈕。

清理集塵桶及濾網筒盒

清空集塵桶前，請務必拔下產品電源線。

集塵桶不可放入洗碗機清洗。

- 1** 當灰塵量滿到濾網筒盒的圓盤位置時，便要清空集塵桶。(圖 21)

- 2 關閉產品電源，並將插頭從牆上插座拔下，移除產品上的軟管。
- 3 按下集塵桶把手頂端上的鬆開按鈕，即可打開蓋子 (1)。掀開蓋子 (2)。 (圖 22)
- 4 將集塵桶從產品上提起移除。 (圖 23)
- 5 將集塵桶放置於垃圾筒上方，並將濾網筒盒向上移出集塵桶。清空集塵桶。 (圖 24)
- 6 輕拍濾網筒盒，以去除所有盒子上的細微灰塵。 (圖 25)
- 7 如果想更徹底清理濾網筒盒，請先由盒中移除濾網筒。若要移除濾網筒，將濾網筒頂端的把手以逆時針方向旋轉 (1) 並將濾網筒提高，移出盒子 (2)。 (圖 26)
- 8 然後使用乾布或冷水加上洗碗精清理濾網筒盒。 (圖 27)
- 9 當濾網筒還置於濾網筒盒內時，請勿在水龍頭下清理。 (圖 28)

- 9 將濾網筒放回濾網筒盒。

重新插入濾網筒之前，請確認濾網筒盒是乾的。

- 10 使用冷水加上洗碗精清理集塵桶。

- 11 將濾網筒盒放回集塵桶。

要重新插入濾網筒盒前，請確認集塵桶是乾的。

如果您還沒重新插入濾網筒盒，吸力 指示燈 會開始閃爍，且無法開啟產品電源。

- 12 用力關閉蓋子 (要聽到「喀搭聲」)。

清理濾網筒

如果濾網清理按鈕指示燈閃爍時，一直沒有按下濾網清理按鈕的話，髒污會阻塞濾網筒，而吸力也會減弱。

如果已發生此情形，可使用以下方法排除濾網筒阻塞：

- 1 使用完畢後，請將產品關閉，並將插頭從牆上插座拔下。
- 2 按下集塵桶把手頂端上的鬆開按鈕，即可打開蓋子 (1)。掀開蓋子 (2)。 (圖 22)
- 3 將集塵桶從產品上提起移除。 (圖 23)
- 4 將集塵桶放置於垃圾筒上方，並將濾網筒盒向上移出集塵桶。 (圖 24)
- 5 將濾網筒頂端的把手以逆時針方向旋轉 (1) 並將濾網筒提高移出盒子 (2)。 (圖 26)
- 6 將濾網筒放置於垃圾筒上方，並使用小刷子加以清理。從濾網頂部由上往下並沿著濾網周圍輕輕刷拭。 (圖 29)

只使用產品隨附配件的小刷子。其他刷子可能會損壞濾網筒。

- 7 濾網筒並不防水，也無法以水或清潔劑清理。 (圖 27)
- 7 將濾網筒放回盒子，並以順時針方向轉動把手，直到濾網筒卡回原位。確定濾網筒牢牢固定在盒內 (要聽到「喀搭聲」)。
- 8 將濾網筒放回集塵桶，並將集塵桶放回產品中。
- 9 用力關閉蓋子 (要聽到「喀搭聲」)。
- 10 將插頭插入電源插座。請確認產品保持水平位置，所有輪子皆要觸及地面，同時軟管連接至產品。
- 11 按下濾網清理按鈕。 (圖 20)

24 繁體中文

12 如要達到最佳效果，請在濾網清理過程結束時，將集塵桶清空 (請參閱「清理集塵筒及濾網筒盒」一節)。

清理馬達防護濾網

每隔兩個月清理一次永久馬達防護濾網。

- 1** 將本產品的插頭拔掉。
- 2** 將馬達防護濾網從產品移除，並在垃圾桶上輕拍灰塵清理濾網。(圖 30)
如果想更徹底清理馬達防護濾網，可在水龍頭冷水下清洗。
請勿使用洗碗精或其他清潔劑清理馬達防護濾網！

- 3** 用力將清理濾網壓回濾網室，確定已放置妥當。
要將馬達防護濾網放回濾網室時，請確認馬達防護濾網全乾。

拋棄式

超級或特級空氣潔淨 HEPA 濾網

此產品具備超級空氣潔淨 HEPA 濾網或特級空氣潔淨 HEPA 濾網。這些濾網位於產品背面，分別可移除外部空氣中 99.5% 或 99.9% 小至 0.0003 公釐的所有粒子。這不只包括一般住家灰塵，還有微小的寄生蟲，如塵 及其糞便 (常見的呼吸道疾病過敏原)。每隔六個月更換 HEPA 濾網。

- 1** 將本產品的插頭拔掉。
- 2** 移除濾網柵口。(圖 31)
- 3** 移除舊濾網。(圖 32)
- 4** 將新濾網插入產品中。
- 5** 重新裝上濾網柵口，並輕推底部，直到裝好為止 (要聽到「喀搭聲」)。(圖 33)

遙控裝置電池 (僅限於特定機型)

- 1** 打開電池盒蓋 (1) 並插入 兩顆四號 (AAA) 1.5 伏特電池 (2) 重新蓋上電池盒蓋 (3)。(圖 14)

請確定正 (+) 負 (-) 極放置無誤。

收藏

收藏產品前，務必確認已按下濾網清理按鈕，清理濾網筒 (請參閱「使用產品」中的「使用濾網清理按鈕」一節)。

- 1** 使用完畢後，請將產品關閉，並將插頭從牆上插座拔下。
- 2** 按下收線鈕收進電線。(圖 34)
- 3** 將產品直立放置，並將吸頭突出部分插入儲存槽，以便使吸頭產品相連。(圖 35)
- 4** 收藏時，務必將全方位三效吸頭設定為地毯模式 (刷子收回至吸頭中)，可防止側刷彎曲 (圖 9)

訂購配件與濾網

如果您無法取得產品濾網或其他配件，請洽當地飛利浦客戶中心或參閱全球保證書。
- 超級空氣潔淨 HEPA 濾網為型號 FC8031

- 特級空氣清淨 HEPA 濾網為服務編號 4322 004 92990

環境保護


- ▶ 遙控裝置電池 (僅限於特定機型) 內含會污染環境的物質。電池不可與家用一般垃圾一起丟棄，應交給正式的資源回收站處理。丟棄電器時請先取出電池並將該電器放置於政府指定的回收站前，再將電池拿至政府指定的回收站丟棄。
- ▶ 本產品壽命結束時請勿與一般家庭廢棄物一併丟棄。請將該產品放置於政府指定的回收站，此舉能為環保盡一份心力。(圖 36)
















保固與服務

若您需要相關資訊或有任何問題，請瀏覽飛利浦網站 www.philips.com，或連絡您當地的飛利浦客戶服務中心 (您可以在全球保證書上找到連絡電話)。如果您當地沒有客戶服務中心，請洽詢當地飛利浦經銷商，或與飛利浦小家電服務部門聯繫。

故障排除

- 1 濾網清理按鈕指示燈閃爍**
 - ▶ 濾網筒需要清理。按下濾網清理按鈕清理濾網筒。
- 2 無法開啟產品電源，吸力指示燈閃爍。**
 - ▶ 濾網筒還在濾網筒盒內，濾網筒盒尚未插入集塵桶中。插入有濾網筒的濾網筒盒。
- 3 吸力不足。**
 - ▶ 可能您已選擇低吸力設定。可選取更高的吸力設定。
 - ▶ 濾網筒可能充滿髒污，如有需要，請清理該濾網。
 - ▶ 馬達防護濾網及 (或) 特級或超級空氣清淨 HEPA 濾網可能很髒。請清理或更換濾網。
 - ▶ 檢查吸頭和軟管是否堵塞。若要取出阻塞物體，請移除堵塞部位，然後以相反方向接回吸塵器 (愈遠愈好)。啟動吸塵器電源，讓氣流以反向通過該部位 (圖 37)
- 4 紅外線遙控裝置 (僅限於特定機型) 無法正常運轉。**
 - ▶ 電池可能未放置或放置不當。正確放入電池或進行更換。
 - ▶ 移除電池盒蓋 (1) 並插入兩顆全新 1.5 伏特四號 (AAA) 電池 (2)。請確定正 (+) 負 (-) 極放置無誤。重新蓋上電池盒蓋 (3)。(圖 14)

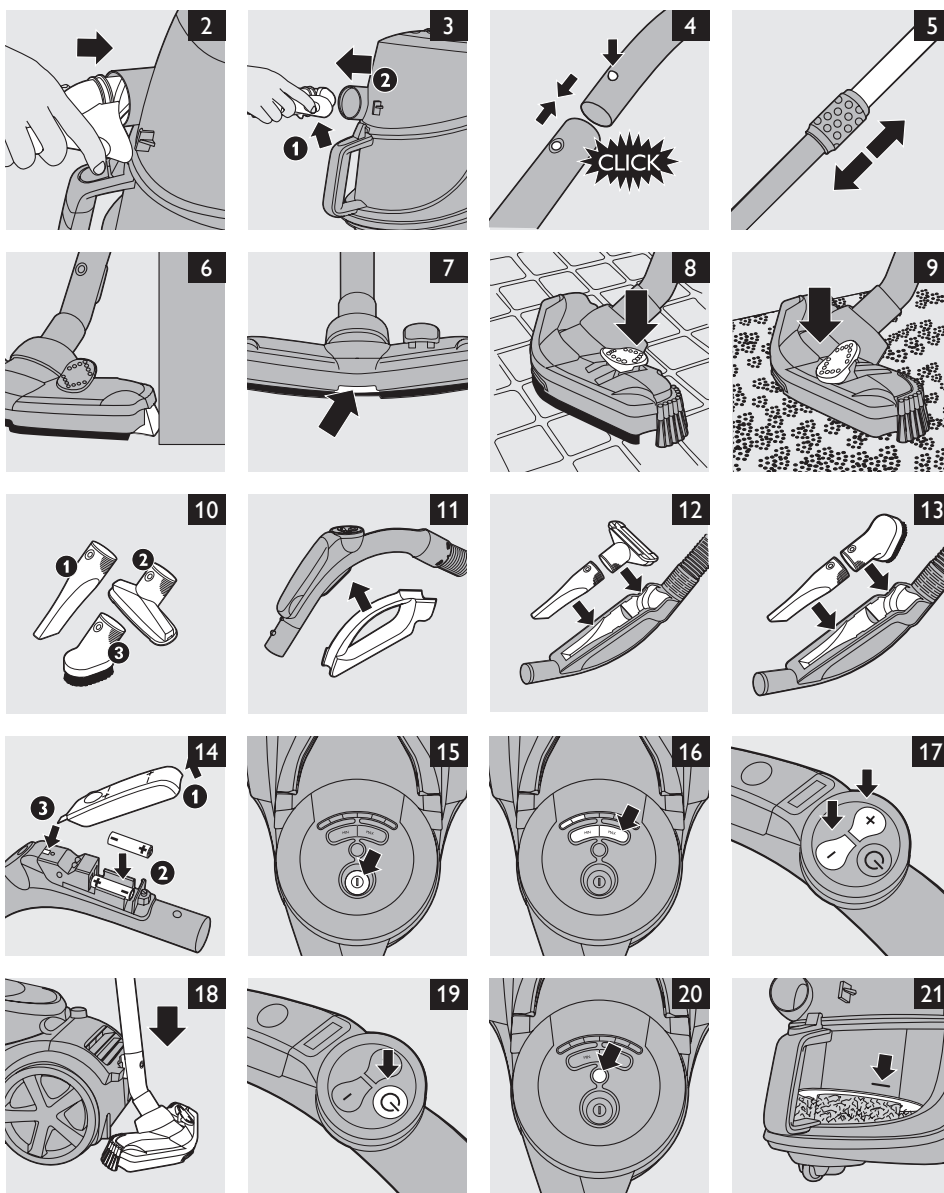

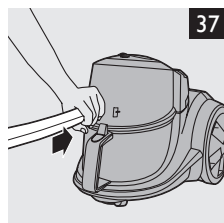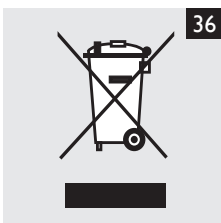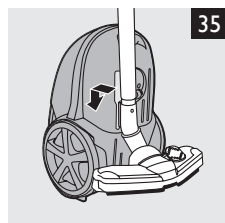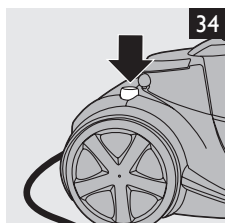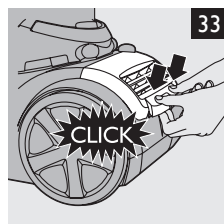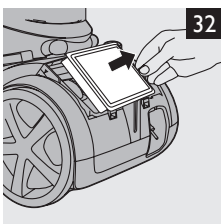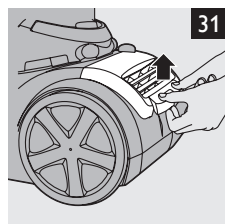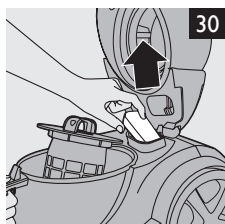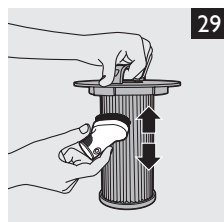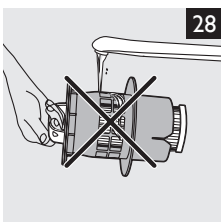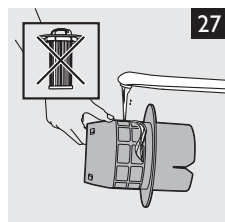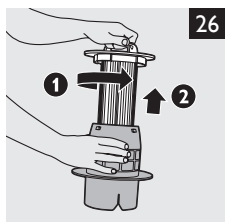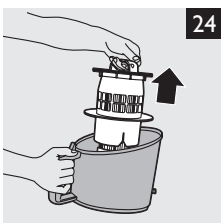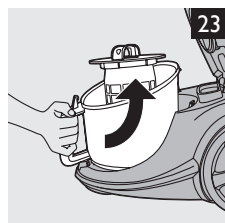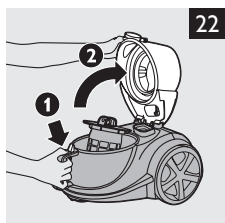



www.philips.com



4222.003.3335.1