



KS360 使用手册



CE 0168

www.lgmobile.com

P/N : MMBB0317101 (1.1) G

LG ELECTRONICS INC.

KS360

繁體中文  
簡體中文  
ENGLISH



使用手機前, 請務必詳細閱讀本手冊。並小心保存本手冊, 以備日後參考之用。

## KS360 使用手冊 | 繁體中文

恭喜您買了 LG 先進輕巧的 KS360 手機，本手機專為利用最新的數碼流動通訊科技而設計。

設定 01

備用屏幕 02

基本功能 03

自製功能 04

管理功能 05

網絡功能 06

設定 07

配件 08

# 內容

<b>01 設定</b>		<b>通訊錄.....</b>	<b>20</b>
了解您的手機.....	7	搜尋通訊錄.....	20
手機視圖.....	8	新增通訊錄.....	20
插入智能咭和電池.....	10	通訊錄選項.....	20
記憶咭.....	13	新增通訊錄至群組.....	21
安裝記憶咭.....	13	重新命名群組.....	21
取出記憶咭.....	13	新增圖片至通訊錄.....	21
格式化記憶咭.....	13	將通訊錄複製到智能咭.....	22
<b>功能總覽.....</b>	<b>14</b>	刪除所有通訊錄.....	22
		檢視資訊.....	22
<b>02 備用屏幕</b>		<b>訊息.....</b>	<b>23</b>
<b>備用屏幕.....</b>	<b>15</b>	訊息.....	23
狀態列.....	15	發送訊息.....	23
		輸入文字.....	24
<b>03 基本功能</b>		使用鍵盤的文字輸入模式.....	24
<b>通話功能.....</b>	<b>16</b>	設定電子郵件.....	24
撥打電話.....	16	使用新帳戶發送電郵.....	24
透過通訊錄撥打電話.....	16	訊息資料夾.....	25
接聽來電和拒接來電.....	16	管理訊息.....	25
調節通話音量.....	17	使用範本.....	26
快速撥號.....	17	變更文字訊息設定.....	26
檢視通話記錄.....	17	變更多媒體訊息設定.....	27
使用來電轉駁.....	18	變更電子郵件設定.....	27
使用通話限制.....	18	變更其他設定.....	27
變更通話設定.....	19		

<b>04 自製功能</b>	
<b>多媒體</b> .....	<b>28</b>
快速拍照.....	28
拍照前.....	28
拍攝照片後.....	29
使用快速設定.....	29
變更圖片大小.....	30
檢視已儲存照片.....	30
將相片設為牆紙或來電顯示圖片..	30
拍攝快速影片.....	30
錄製影片後.....	31
了解取景器.....	31
使用快速設定.....	31
觀看已儲存影片.....	32
檢視影片時調節音量.....	32
MP3 播放器.....	32
將音樂傳送至手機.....	32
播放歌曲.....	33
播放音樂時使用選項.....	33
建立播放列表.....	33
播放播放列表.....	33
編輯播放列表.....	34
刪除播放列表.....	34
使用 FM 收音機.....	35
搜尋電台.....	35
重設頻道.....	35
收聽收音機.....	35
使用語音備忘錄.....	36
錄製語音備忘錄.....	36
發送錄音.....	36
<b>我的檔案</b> .....	<b>37</b>
圖像.....	37
圖像選項功能表.....	37
發送照片.....	38
管理圖像.....	38
刪除圖像.....	38
刪除多個圖像.....	38
建立投影片播放.....	39
聲音.....	39
使用聲音.....	39
影片.....	39
觀看影片.....	39
在暫停影片時使用選項.....	40
發送錄像片段.....	40
使用影片選項目錄.....	40
文件.....	41
檢視文件.....	41
其他.....	41
外置記憶體.....	41
<b>遊戲及應用功能</b> .....	<b>42</b>
遊戲及應用功能.....	42
玩遊戲.....	42
檢視應用程式.....	42
變更網絡設定.....	42

# 內容

## 05 管理功能

記事簿及工具.....	43
新增日程表至日曆.....	43
編輯日曆日程表.....	43
分享日曆日程表.....	43
新增備忘錄.....	44
設定鬧鐘.....	44
使用計算機.....	44
使用秒錶.....	44
轉換單位.....	45
新增城市至世界時間.....	45
智能咕服務.....	45

## 06 網絡功能

瀏覽器.....	46
存取網絡.....	46
Yahoo!.....	46
新增並存取書籤.....	46
存取已儲存網頁.....	47
檢視瀏覽器記錄.....	47
變更網頁瀏覽器設定.....	47

## 07 設定

設定.....	48
變更您的情景模式.....	48
更改情景模式.....	48
變更您的日期及時間.....	48
變更語言.....	48
變更您的顯示設定.....	49
變更安全設定.....	49
使用飛航模式.....	49
使用省電模式.....	50
重設手機.....	50
檢視記憶體狀態.....	50
變更您的藍芽設定.....	50
變更連線設定.....	50
同其他藍芽裝置配對.....	51
使用藍芽耳機.....	51
將手機用作大型儲存裝置.....	51
傳送檔案到手機.....	52
使用藍芽發送和接收檔案.....	52

## 08 配件

配件.....	54
網絡服務.....	55
技術資料.....	55
一般.....	55
環境溫度.....	55

安全及有效使用的指引.....	57
-----------------	----

# 了解您的手機



01

02

03

04

05

06

07

08



# 手機視圖





01

02

03

04

05

06


07

08

# 插入智能咭和電池

## 1 取下電池蓋

按電池蓋釋放鍵，然後打開電池蓋。

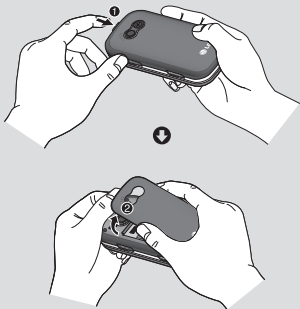

## 2 取出電池

抬起電池的下方邊緣，小心將其從電池格中取出。



**⚠ 警告：**手機開機時，不要取下電池，因為這樣會損壞手機。



## 3 插入智能咭

將智能咭滑入智能咭固定座。請確保智能咭上的金屬接觸區面向下方。要取出智能咭，請向反方向推出。

**⚠ 警告：**開啓鍵盤時，不要插入智能咭，因為這樣會損壞手機和智能咭。

#### 4 安裝電池

先將電池頂部頂入電池格上方邊緣。確保電池觸點對準手機觸點。將電池的底部壓入定位。

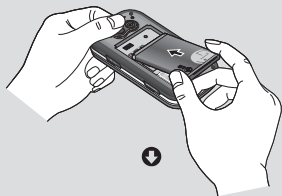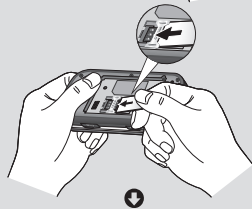

01

02

03

04

05

06


07

08

# 插入智能咭和電池

## 5 裝回電池蓋

插入電池蓋底端，然後合上電池蓋。

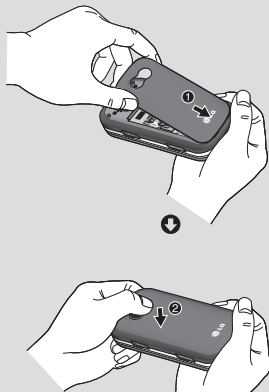

## 6 手機充電

打開 KS360側面的充電器插孔蓋。插入充電器並插入電源插座。需要對 KS360 充電，直至屏幕上顯示「電池已充滿」訊息。

**警告：**不要在柔軟家具上為手機充電。應該在通風良好的區域為手機充電。



# 記憶咭

## 安裝記憶咭

您可以使用記憶咭，擴展手機可使用的記憶體空間。

**提示！** 記憶咭為額外選用配件。

打開記憶咭插槽。將記憶咭插入插槽，直到卡緊為止。請確保金屬接觸區面向下。



## 取出記憶咭

打開記憶咭保護蓋，並按下圖所示，將記憶咭輕輕推進手機並放開，從而小心將其取出：



## 格式化記憶咭

如果您的記憶咭尚未格式化，則在開始使用前，需要將其格式化。

- 1 從備用屏幕，點按 **OK** 並選擇設定。
- 2 選擇**記憶體狀態**並選擇**外置記憶體**。

**警告：** 格式化記憶咭時，所有的內容將會被清除。如果不想丟失記憶咭上的資料，請先進行備份。

01

02

03

04

05

06

07

08

# 功能總覽



## 遊戲及應用功能

- 1 遊戲
- 2 應用程式
- 3 網絡設定



## 通話記錄

- 1 所有通話
- 2 未接來電
- 3 已撥通話
- 4 已接來電
- 5 通話時間
- 6 通話費用
- 7 數據資訊



## 通訊錄

- 1 搜尋
- 2 新增通訊錄
- 3 快速撥號
- 4 群組
- 5 複製全部
- 6 刪除全部
- 7 設定
- 8 資訊



## 多媒體

- 1 MP3 播放器
- 2 相機
- 3 視像攝錄機
- 4 FM 收音機
- 5 語音備忘錄



## 訊息

- 1 新訊息
- 2 收件匣
- 3 電郵郵箱
- 4 草稿
- 5 寄件匣
- 6 已發送
- 7 收聽留言  
訊息
- 8 資訊訊息
- 9 常用範本
- 0 設定



## 我的檔案

- 1 圖像
- 2 聲音
- 3 影片
- 4 文件
- 5 其他
- 6 外置記憶體  
(需插入記憶  
咭)



## 情景模式

- 1 標準
- 2 靜音
- 3 震動
- 4 戶外
- 5 耳機



## 記事簿

- 1 日曆
- 2 備忘錄



## 工具

- 1 鬧鐘
- 2 計算機
- 3 秒錶
- 4 單位轉換器
- 5 世界時間
- 6 智能咭服務  
(視乎不同  
網絡商)



## 瀏覽器

- 1 主頁
- 2 Yahoo!
- 3 書籤
- 4 輸入網址
- 5 記錄
- 6 已儲存網頁
- 7 設定
- 8 資訊



## 連接

- 1 藍芽
- 2 網絡
- 3 USB 連接  
模式



## 設定

- 1 日期及時間
- 2 語言
- 3 顯示
- 4 快捷鍵
- 5 通話
- 6 安全
- 7 飛航模式
- 8 省電
- 9 重設
- 0 記憶體狀態

# 備用屏幕

## 狀態列

狀態列透過使用多種圖示，指明如訊號強度、新訊息和電池壽命等情況，亦告訴您藍芽是否已啟動。

下表說明可能在狀態列中看到的圖示的含義。

圖示	說明
	網絡訊號強度 (列數目將有所變化)
	無網絡訊號
	漫遊服務
	藍芽已啟用
	已連接 WAP 服務
	鬧鐘已設定
	新訊息

圖示	說明
	新語音訊息
	正在使用一般情景模式
	正在使用靜音情景模式
	正在使用震動情景模式
	正在使用戶外情景模式
	正在使用耳機情景模式
	剩餘電量
	電池已耗盡

01

02

03

04

05

06





07

08




# 通話功能

## 撥打電話


- 1 確保手機已開啓。
- 2 撥打電話的最快速方式即為按  啓用觸控模式。按此鍵後，您可觸控屏幕，輸入電話號碼進行撥號。或者，您可以在開啓滑蓋後使用鍵盤。要刪除數字，請按  或按清除鍵。
- 3 點按  開始通話。
- 4 要結束通話，請按  。

**提示！** 若要在撥打國際電話時輸入「+」，請按住 **0**。


## 透過通訊錄撥打電話

- 1 選擇功能表中的通訊錄並選擇「搜尋」。
- 2 使用鍵盤輸入要通話聯絡人的首個字母，然後選擇需要的聯絡人。
- 3 點按  開始通話。


## 接聽來電和拒接來電

手機響鈴後，點按接聽或點按  接聽來電。

手機響鈴時，選擇靜音，使鈴聲靜音。如果在開會時忘記將情景模式變更爲靜音，此方法十分有效。

按  或按拒接以拒接來電。

**提示！** 您可變更手機上的設定，從而採用不同的方式接聽來電。

點按 ，選擇**設定**並選擇**通話**。選擇接聽模式並從「**滑蓋開啓**」、「**按任何鍵**」或「**僅接受按鍵**」中選擇。


## 調節通話音量

要在通話中調節音量大小，按手機左側的音量鍵。


## 快速撥號

您可為常撥聯絡人指定一個快速撥號號碼。

- 1 按「**功能表**」並選擇「**通訊錄**」然後選擇**快速撥號**。
- 2 您的語音信箱設定至快速撥號1，且您無法變更。使用導覽鍵並選擇「**配置**」選擇通訊錄的號碼。
- 3 通訊錄將開啓。使用導覽鍵選擇要將其指定給此號碼的通訊錄，然後點按確定。

要撥打快速撥號號碼，請按住指定的號碼，直到聯絡人電話顯示在屏幕上。通話將自動開始；無需點按。

## 檢視通話記錄

按**功能表**或，選擇**通話記錄**。選擇要檢視的項目：

**所有通話** - 檢視所有已撥、已接和未接來電的完整清單。

**未接來電** - 檢視所有未接來電的清單。

**已撥通話** - 檢視所有已撥出通話的清單。

**已接來電** - 檢視所有已接聽號碼的清單。

**通話時間** - 檢視通話時間詳情，包括已接來電和已撥通話。

**通話費用** - 檢視最後通話或所有通話的費用。此服務取決於網絡，部份網絡商無法支援此項服務。

**數據資訊** - 檢視所有已接收和已發送的數據量（以千字節表示）。

**提示！** 從任何通話記錄，選擇「**選項**」和「**刪除**」以刪除所選項目。

**提示！** 使用導覽鍵，選擇任何單個通話項目，檢視通話的日期和時間。要檢視通話時間，請點按**檢視**。

# 通話功能

## 使用來電轉駁

- 1 按**功能表**或 **OK**，選擇**設定**並選擇**通話**。
- 2 選擇**來電轉駁**。
- 3 可選擇所有語音通話、線路繁忙時、無人接聽時、無網絡或關機時、所有數據通話、所有傳真通話。
- 4 選擇**啓用**並選擇是否轉駁至留言信箱號碼、其他號碼或常用號碼。
- 5 輸入您的轉駁號碼，或選擇**搜尋**瀏覽轉駁號碼的通訊錄。

**注意：**轉駁電話需要收費。請聯絡網絡供應商，了解詳情。


**提示！** 要關閉所有來電轉駁，請從**來電轉駁**功能表中選擇**取消全部**。

## 使用通話限制

- 1 按**功能表**或 **OK**，選擇**設定**並選擇**通話**。
- 2 選擇**通話限制**。
- 3 選擇以下七個選項的任何一個項目：
  - 所有撥出通話**
  - 國際撥號**
  - 本國以外的國際撥號**
  - 所有來電**
  - 國際漫遊時來電**
  - 取消所有限制通話**
  - 更改密碼**
- 4 選擇**啓用**並輸入通話限制密碼。請向您的網絡商查詢這項服務。

**提示！** 從**通話**功能表中選擇**固定撥號號碼**，開啓並編譯可從此手機撥出的號碼清單。您需要從您的網絡商處得到一個PIN2碼。僅固定撥號清單中包含的號碼才可從手機撥出。

## 變更通話設定

- 1 按**功能表**或 ，選擇**設定**並選擇**通話**。
- 2 您可從此處修改以下選項的設定：
  - 來電轉駁** - 選擇是否轉駁您的來電。
  - 通話限制** - 選擇何時限制通話。
  - 固定撥號號碼** - 選擇可從您的手機撥出的號碼清單。
  - 接聽模式** - 選擇透過滑蓋開啓、按任何鍵或僅接受按鍵來接聽來電。
  - 發送我的號碼** - 選擇撥出通話時，是否顯示您的號碼。
  - 來電等候** - 有來電等候時，手機會提示您。
  - 分鐘提示** - 選擇**開啓**後，您便可在通話時聽到分鐘提示音。
  - 自動重撥** - 選擇後，如果手機無法接通電話，則會自動嘗試重撥。

**發送 DTMF音頻** - 通話中，您可發送屏幕上號碼的 DTMF（雙音多頻訊號）音。當您撥打自動化系統，如銀行服務時，此選項有助於您輸入密碼或賬號。

# 通訊錄

## 搜尋通訊錄

- 1 從主功能表選擇「**通訊錄**」並選擇「**搜尋**」。
- 2 使用鍵盤或觸控板輸入聯絡人的首個字母。
- 3 要選擇通訊錄及其不同的號碼，請使用導覽鍵。

## 新增通訊錄

- 1 選擇**通訊錄**並選擇**新增通訊錄**。
- 2 選擇是否在**手機**或**智能咭**上儲存新通訊錄。
- 3 輸入在欄位中提供的所有資訊，並選擇**儲存**。

或者，使用輕微更快捷的方法…

- 1 輸入要儲存的號碼並按左軟鍵或「**選項**」。
- 2 選擇**儲存**或**更新現有通訊錄**。
- 3 根據以上操作，輸入相關資訊，然後點按**儲存**。

## 通訊錄選項

您可在檢視通訊錄時進行多項操作。以下是存取和使用選項功能表的方式：

- 1 開啓您要使用的通訊錄。參閱以上的**搜尋**。
- 2 選擇**選項**開啓選項清單。

在此處您可以：

**編輯** - 變更任何聯絡人的詳細資料。

**新訊息** - 找到所需號碼後，您即可向選定聯絡人發送訊息。如果聯絡人具有電郵地址，選擇您是否要發送**訊息**或**電郵**。

**發送方式** - 以名片方式向他人發送聯絡人的詳細資料。選擇以**文字訊息**、**多媒體訊息**發送，或透過**藍芽**或**電郵**發送。

**刪除** - 刪除聯絡人。確定後，選擇**是**。

**新增通訊錄** - 您可新增至通訊錄列表。

**多方刪除** - 標記要刪除的多個聯絡人。

**複製至智能咭/手機** - 選擇要複製到智能咭還是手機（視您起初儲存聯絡人的位置而定）。

## 新增通訊錄至群組

您可將聯絡人儲存至群組中，從而將工作同事和家庭成員分開（例如）。手機上存在很多已設定好的群組，包括**家庭、朋友、同事、貴賓、群組1**和**群組2**或**無群組**。

- 1 選擇**通訊錄**並選擇**群組**。
- 2 選擇到要將聯絡人新增至的群組，並按**檢視**，然後選擇**加入**。
- 3 您的通訊錄將開啓。點按到要將其新增至群組中的任何聯絡人，並點按 ，然後選擇**完成**。
- 4 確定後，選擇**是**。

**提示！** 您可為群組指定鈴聲或圖示。選擇要為其指定鈴聲或圖示的群組，並選擇**選項**及所需的項目。

## 重新命名群組

您可重新命名任何群組，以符合您的生活方式要求。

- 1 選擇**通訊錄**並選擇**群組**。
- 2 選擇要為其重新命名的群組。
- 3 選擇**選項**，再選取**重新命名**，並輸入您的新群組名稱。
- 4 選擇**儲存**。

**注意：**您只能將通訊錄指定到群組中，或將圖片新增至已儲存在手機（不是智能咕）記憶體中的通訊錄。

## 新增圖片至通訊錄

您可變更通訊錄列表的外觀，使其包含圖片。

- 1 選擇**通訊錄**並選擇**設定**。
- 2 選擇**檢視選項**並選擇**附圖片**。
- 3 然後返回通訊錄，並選取要將圖片新增至其中的聯絡人。
- 4 選擇**選項**並選擇**編輯**。

# 通訊錄

- 5 向下按至「相片」部分。選擇「選項」並選擇「圖像」或「新圖像」。選擇圖像後，您可選擇已儲存至手機記憶體中的圖像。選擇新圖像後，您的相機取景器將會開啓，這樣您可為聯絡人拍照。拍照，然後按設定。
- 6 選擇**儲存**。

## 將通訊錄複製到智能咭

您可選擇在手機和智能咭之間複製通訊錄。

- 1 選擇**通訊錄**，並選擇**複製全部**。
- 2 選擇從**智能咭至手機**或**手機至智能咭**複製通訊錄。
- 3 選擇保留原始號碼，或刪除原始號碼。
- 4 確定後，選擇**是**。

## 刪除所有通訊錄

- 1 選擇**通訊錄**，並選擇**刪除全部**。
- 2 選擇從**智能咭**或**手機**中刪除通訊錄。
- 3 確定後，選擇**是**。
- 4 輸入密碼，預設情況下，密碼設定為 0000。然後點按**確定**。

## 檢視資訊

選擇**通訊錄**並選擇**資訊**。您可從此處檢視您的**服務撥號號碼**、**本手機號碼**和您的**名片**。



**提示！** 如果您尚未建立名片，名片屏幕將為您提供建立名片的選項。選擇**新增**，並輸入要提供的詳情。選擇**儲存**。

# 訊息

## 訊息


KS360 包含與 SMS（文字訊息服務）、MMS（多媒體訊息服務）和電郵相關的功能。只需點按  並選擇**訊息**。

## 發送訊息

- 1 按**功能表**或 ，選擇**訊息**並選擇**新訊息**。或者，更快捷的方式是，滑開滑蓋時，按鍵盤上的 。
- 2 選擇**訊息**以發送文字訊息或多媒體訊息。（如果要發送電郵，請參閱第 24-25 頁。）
- 3 新訊息編輯器將開啓。  
訊息編輯器將文字訊息和多媒體訊息集合在同一個功能表中，可輕鬆在文字訊息模式和多媒體訊息模式之間切換。訊息編輯器的預設設定為文字訊息模式。
- 4 使用鍵盤輸入訊息。有關如何輸入文字的詳情，請參閱第 24 頁。
- 5 選擇**選項**並選擇**附加**，您可新增圖

像、聲音、影片、符號、文字範本、情感圖示、名稱和號碼、新增投影片、標題或更多（通訊錄/我的名片/日程表）。

- 6 選擇「**發送至**」。
- 7 輸入手機號碼或點按**選項**並選擇**通訊錄**開啓通訊錄清單。您可以選擇多個通訊錄。
- 8 選擇**發送**。

 **警告：**若向訊息編輯器加插了**圖像、聲音、影片、投影片或標題**，它將自動轉換為多媒體訊息模式，而您亦需為此支付相應費用。

01

02

03

04

05

06

07

08




# 訊息

## 輸入文字


使用手機鍵盤，您可輸入英數字元。例如，在通訊錄中儲存名稱、編寫訊息和在日曆中建立日程表，都需要輸入文字。手機中提供以下可用的文字輸入方式：ABC 模式和 123 模式。

(設定不同語言會影響輸入法模式)

**注意：**部份欄位只可使用一種文字輸入模式（例如通訊錄欄位中的電話號碼）。


要在文字輸入欄位中輸入符號，請按  鍵並選擇符號，然後選擇**確定**。使用導覽鍵選擇更多符號選項。

按  可在每個單字後加入空格。

要刪除某個字元，請點按  鍵。


## 使用鍵盤的文字輸入模式

要求輸入文字時，如編寫訊息，鍵盤將預設為 ABC 模式(視乎不同語言)。若正輸入電話號碼，如撥打電話，鍵盤數字鍵將預設為數字。

在 ABC 模式中，首先按  然後按所需的數字，可輸入號碼。


## 設定電子郵件

縱使出門在外，您亦可使用 KS360 上的電郵功能與其他人保持聯絡。設定 POP3 或 IMAP4 電郵帳戶快捷方便。

- 1 按**功能表**或 ，選擇**訊息**並選擇**設定**。
- 2 依次選擇**電郵**和**電郵帳戶**。
- 3 選擇**新增**。
- 4 輸入電郵地址。

## 使用新帳戶發送電郵

若要發送/接收電郵，您必須建立一個電郵帳戶(參閱以上)。

- 1 按  選擇**訊息**並選擇**新訊息**。
- 2 選擇**電郵**，則系統會開啓一封新電郵。
- 3 寫上主題，然後點按**確定**。
- 4 使用鍵盤輸入訊息。
- 5 選擇**選項**並選擇**附加**，您可選擇要新增的附件。：圖像、聲音、影片、文件、通訊錄、我的名片和日程表。

- 6 選擇發送給，並輸入收件者地址，或點按**選項**，選擇**通訊錄**以開啓您的通訊錄清單。
- 7 按發送，系統將發送您的電郵。

## 訊息資料夾

按**功能表**或 **OK**，選擇**訊息**。由於各資料夾的名稱相當清楚，您可辨識用於 KS360 的資料夾結構。

**收件匣** - 收到的所有訊息將置於您的收件匣中。您可從此處進行回覆、轉寄等操作，詳情請見下方說明。

**電郵郵箱** - 包含所有電郵訊息。選擇要使用的帳戶，並點按**擷取**。KS360 便會連線至您的電郵帳戶並提取您的新訊息。

**草稿** - 若不夠時間完成訊息，您可將寫完的部份儲存於此處。

**寄件匣** - 這裡是發送中的訊息之臨時存放資料夾。

**已發送** - 所有已發送的訊息將置於您的「已發送」資料夾中。

**收聽留言訊息** - 您可存取留言信箱（若網絡提供此服務）。收到新留言時，相應符號會在備用屏幕上提示。

**資訊訊息** - 從網絡商接收到的所有資訊訊息和更新。

**常用範本** - 已編寫好的有用訊息清單，以便快速回覆。

## 管理訊息

您可使用**收件匣**來管理您的訊息。

- 1 按**功能表**或 **OK**，選擇**訊息**並選擇**收件匣**。

- 2 選擇**選項**，然後選擇以：

**刪除** - 刪除選定的訊息。

**回覆** - 回覆所選訊息。

**轉寄** - 將所選訊息發送給他人。

**回覆通話** - 向您的寄件者致電。

**線狀圖檢視/一般檢視** - 選擇收件匣中訊息顯示的方式。

**資訊** - 檢視訊息的詳情，例如，訊息發送時間。

**複製/移動** - 您可選擇複製或移動訊息，選擇複製或移動所選訊息至智能咭或手機。

**多方刪除** - 刪除所選訊息。

**刪除全部已讀訊息** - 所有已開啓的訊息將被刪除。

01

02

03

04

05

06

07

08

# 訊息

**刪除全部** - 您可選擇刪除文字訊息或所有訊息。

看到**無足夠空間儲存智能咭訊息**這則訊息時，請從收件匣中刪除部份訊息。

看到**無足夠空間儲存訊息**這則訊息時，您可透過刪除訊息以釋放儲存空間。

## 使用範本

您可為經常發送的文字和**多媒體**訊息建立範本。您會發現手機上已存有部份範本，您可根據需要對其進行編輯。

- 1 按**功能表**或 **OK**，選擇**訊息**並選擇**常用範本**。
- 2 選擇**文字**或**多媒體**訊息。然後，您可選擇**選項**並選擇**編輯**以變更現有範本，或選擇**選項****新增範本**或**刪除範本**。
- 3 要發送範本，請選擇要發送的範本，並選擇**選項**及**發送方式**。
- 4 選擇發送範本的方式：**訊息**、**藍芽****訊息**或**電郵**。
- 5 選擇發送，並於通訊錄選擇聯絡人，並點按**發送**。

## 變更文字訊息設定

您的 KS360 已預先定義訊息設定，以便您可立即發送訊息。

如果要變更此設定，可使用**設定**選項來完成。

按**功能表**或 **OK**，選擇**訊息**，然後選擇**設定**和**文字****訊息**。您可對以下各項進行變更：

**訊息類型** - 將文字轉換為語音、傳真、傳呼、X.400 電郵或 ERMES。

**有效期** - 選擇訊息要在訊息中心中保留多久。

**發送報告** - 選擇是否要就已發送的訊息接收確認訊息。

**經同一訊息中心回覆** - 訊息發送後，系統允許收件人回覆並將回覆成本納入您的電話帳單中。

**訊息中心號碼** - 為您的訊息中心輸入詳細資料。

**字元編碼** - 選擇編碼字元的方式。這將影響到您的訊息大小，從而影響數據費用。

**發送長文字**為：當在訊息欄位中輸入的文字長度超過 2 頁時，選擇是以**多樣文字**訊息還是**多媒體**訊息來發送訊息。

**載送設定** - 選擇是否透過首選 GSM 或首選 GPRS 發送訊息。

## 變更多媒體訊息設定

您的 KS360 已預先定義訊息設定，以便您可立即發送訊息。

如果要變更此設定，可使用**設定**選項來完成。

按**功能表**或 **OK**，選擇**訊息**，然後選擇**設定**和**多媒體訊息**。

您可對以下各項進行變更：

**投影片播放時間** - 選擇投影片在屏幕上的顯示時間。

**重要性** - 選擇多媒體的優先等級。

**有效期** - 選擇訊息要在訊息中心中保留多久。

**發送報告** - 選擇是否要求報告或允許報告。

**讀取報告** - 選擇是否要求報告或允許報告。

**自動下載** - 選擇自動或手動下載多媒體訊息，具體取決於您是在本地網絡或漫遊網絡。

**網絡設定** - 為發送多媒體訊息選擇網絡商特定的網絡設定檔。

**允許訊息類型** - 選擇允許的訊息類型。

## 變更電子郵件設定

您可對電郵設定進行調整，以便符合您的使用習慣。

1 按**功能表**或 **OK**，選擇**訊息**並選擇**設定**。

2 選擇**電郵** 這樣您可對以下設定進行調整：

**電郵帳戶** - 您可設定電郵帳戶。

**接入點** - 您可設定電郵接入點。

**擷取間隔** - 選擇 KS360 查收新電郵的頻率。

**名片** - 建立電郵名片並啟用此功能。

## 變更其他設定

按**功能表**或 **OK**，選擇**訊息**並選擇**設定**，然後：

**留言信箱號碼** - 您的留言號碼儲存於此處。聯絡網絡商，了解他們提供服務的更多詳情。


**Push 信息** - 變更服務訊息設定。


**資訊廣播** - 選擇資訊訊息的接收、提示和語言。

**儲存文字訊息** - 您可選擇手機記憶或外置記憶體。

# 多媒體


## 快速拍照


- 1 長按手機左側的相機鍵。相機取景器將出現在屏幕上。
- 2 水平握住手機，將鏡頭對準拍照對象。
- 3 定位手機，以便您看到拍照的對象。
- 4 按  或完全按下相機鍵拍照。


**注意：**您亦可從備用屏幕存取相機功能表。按  並選擇「多媒體」。選擇「相機」開啓取景器。


## 拍照前


按  存取這些選項：

 **自拍時計** - 自拍時計讓您設定按拍攝按鈕後的延遲時間。可供選擇的選項為：關閉、3 秒、5 秒或 10 秒。當您要加入拍攝的群組照片中時，此選項十分有效。

 **連環拍照** - 此功能可讓您自動快速而連貫地拍攝多張照片，特別適用於拍攝移動物體或體育賽事。

 **白平衡** - 白平衡可確保照片中的任何白色顯示得真實。爲了使相機正常調整白平衡，您可能需要確定光線條件。從以下選項中選擇：**自動、日光、白熱光、陰天、日光燈或夜間模式。**


 **色彩效果** - 從以下四種選項中選擇：關閉（標準/色彩）、深褐色、黑白或底片。


 **EV** - 對比度定義圖像在有光和黑暗中的區別。低對比度會將圖像顯示得較模糊，而高對比度會將圖像顯示得較清晰。


## 拍攝照片後


您的拍攝照片會顯示在屏幕上。圖像的名稱顯示在屏幕，您可在屏幕左側看到 6 個選項。

**確定** - 選擇此鍵可直接拍攝另一張照片。當前相片將會被儲存。

 **新圖像** - 選擇此鍵可直接拍攝另一張照片。當前相片將會被儲存。

 **設為** - 選擇此鍵可開啓一個子功能表，從而可將圖像設為牆紙或來電顯示圖片。

 **發送方式** - 選擇此鍵可以多媒體訊息、藍芽或電郵來發送相片。參閱第 23 頁，了解發送訊息。

 **影集** - 選擇以查看影集中的其他相片。參閱第 30 頁，了解檢視已儲存照片的更多資訊。

**刪除** - 選擇以刪除剛拍攝的相片，並透過按是確認。取景器將再次出現。

## 使用快速設定

選擇「選項」存取快速設定選項。其中包括拍照的多個選項。

**視像攝錄機** - 從相機模式轉換至視像攝錄機模式。

**顯示** - 選擇「標準」或「清晰」模式。

**解像度** - 請參閱第 30 頁的變更圖片大小，了解更多詳情。

**質量** - 在正常、細緻和特細緻之間選擇。質量越細緻，圖片便越清晰，但佔用的檔案空間會增大，從而在記憶體中儲存的照片會相應減少。

**快門音效** - 從三種快門聲音中選擇一種。

**儲存至** - 選擇是將照片儲存至手機，還是儲存至外置記憶體。

**重設設定** - 選擇是重設手機至其原始相機設定。


# 多媒體

## 變更圖片大小

您可變更相片大小，以節省記憶體空間。像素越高，檔案大小越大，從而佔用的記憶體空間便越多。若要使手機儲存更多的照片，請變更像素數目，以縮小檔案大小。

- 1 選擇選項，並從工具列上選擇**解像度**。
- 2 從四個數字選項中選擇像素值 320X240、640X480、1280X960、1600X1200。
- 3 選擇要使用的大小選項，並點按**確定**以執行變更。

## 檢視已儲存照片

- 1 您可從相機模式和備用屏幕中存取已儲存的相片。從取景器，您只需要按「影集」。從備用屏幕，您應點按**功能表**或 ，然後選擇**我的檔案**和**圖像**。
- 2 圖像將顯示於屏幕上。
- 3 使用導覽鍵選擇要檢視的相片，並點按**檢視**予以放大。


## 將相片設為牆紙或來電顯示圖片

從圖像，使用導覽鍵，選擇圖像並點按**設為**，將選定的圖像用作牆紙或來電顯示圖片。

**注意：**圖片來電顯示僅能新增至儲存至手機，而不是智能咭的通訊錄。

## 拍攝快速影片


- 1 快速按下手機左側的相機鍵。
- 2 選擇視像攝錄機。
- 3 將鏡頭對準拍攝對象。
- 4 按下手機左側的相機鍵，開始錄製。
- 5 **REC** 將顯示在取景器上，計時器將顯示拍攝影片的長度。
- 6 要暫停影片，請選擇**暫停**，透過選擇**繼續**以繼續。
- 7 選擇**停止**停止錄製。


**注意：**您亦可從備用屏幕存取**視像攝錄機**。按  並選擇「多媒體」，選擇視像攝錄機以開啓攝錄機。


## 錄製影片後


影片名稱顯示在屏幕上，您可在屏幕左側看到六個選項。

**確定** - 選擇此鍵直接錄製另外一個影片。當前影片將會被儲存。

 **新增影片** - 選擇此鍵直接錄製另外一個影片。當前影片將會被儲存。

 **播放** - 選擇此鍵播放剛錄製的影片。

 **發送方式** - 選擇此鍵可以**多媒體訊息**或**電郵**來發送影片。參閱第 23 頁，**了解發送訊息**。

 **影集** - 選擇以查看影集中的其他影片。當前影片將會被儲存。請參閱第 32 頁，**了解觀看已儲存的影片**的更多資訊。

**刪除** - 點按以刪除剛錄製的影片，並透過按是確認。取景器將再次出現。

## 了解取景器

**注意**：您可使用手機右側的音量鍵，調整縮放比例。

## 使用快速設定

選擇「選項」存取快速設定選項。其中包括錄製影片的多個選項。

**相機** - 從視像攝錄機轉換至靜態相機模式。

**顯示** - 選擇「標準」或「清晰」模式。

**解像度** - 若要使手機儲存更多的影片，請變更像素數目，以縮小檔案大小。針對影片，在兩個選項之間選擇，176 x 144、320 x 240。

**質量** - 在特細緻、細緻及正常之間選擇。



**儲存至** - 選擇是將影片儲存至手機，還是儲存至外置記憶體。

**重設設定** - 選擇是重設手機至其原始相機設定。



# 多媒體

## 觀看已儲存影片


- 1 您可從視像攝錄機模式或備用屏幕中存取已儲存的影片。從取景器選擇「影集」。從備用屏幕，您應點按**功能表**或 ，然後選擇**我的檔案和影片**。
- 2 影集將顯示於屏幕上。
- 3 使用導覽鍵選擇要檢視的影片，並按  觀看影片。

## 檢視影片時調節音量

要在播放影片時調節影片聲音的音量，使用手機左側的音量鍵。音量等級會顯示在屏幕上。

## MP3 播放器

LG KS360 具有內置的 MP3 播放器，這樣，您可播放所有喜愛的音樂。

要存取 MP3 播放器，請點按**功能表**或  並依次選擇**多媒體**和**MP3 播放器**。從此處您可存取：

**所有歌曲** - 包含手機上具有的所有歌曲。

**我的播放列表** - 包含建立的播放列表、最近歌曲和最愛歌曲。







**設定** - 調節音樂設定。

## 將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或USB線。使用藍芽傳送：

- 1 確保兩個裝置均開啓藍芽，且彼此可看見對方。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 檔案發送後，您需要按**是**予以接受。
- 4 檔案將出現在**所有歌曲**中。

## 播放歌曲

- 按**功能表**或  並選擇**多媒體**，然後選擇 MP3 **播放器**。
- 選擇要播放的音樂。選擇 .
- 選擇  暫停歌曲。
- 選擇  以跳至下一首歌曲。
- 選擇  以跳至上一首歌曲。
- 選擇  停止音樂，並返回上一頁功能表。

**提示！**要在收聽音樂時更改音量大小，請使用手機左側的音量鍵或使用上下導覽鍵。

## 播放音樂時使用選項

選擇**選項**並從以下選項中選擇：

**最少化** - 隱藏音樂播放器屏幕，這樣，您可在播放音樂的同時，繼續按正常使用手機。

**檢視播放列表** - 查看目前的播放列表。

**搜尋** - 搜尋手機上所有歌曲中的曲目。

**加入到播放列表** - 將目前曲目新增到播放列表。


**設為** - 將目前曲目設為鈴聲或訊息提示音。

**資訊** - 您可檢視正收聽音樂檔案的相關資訊。



**設定** - 變更均衡器或播放模式或設定隨機模式以優化音樂效果。

## 建立播放列表

透過從**所有歌曲**資料夾中選擇一系列歌曲，您可建立自己的播放列表。

- 按  並選擇**多媒體**。
- 選擇 MP3 **播放器**，然後選擇**我的播放列表**。
- 按「新增」，輸入播放列表名稱並按「儲存」。
- 新增播放列表**資料夾將顯示。透過選擇至要將其納入至播放列表的歌曲，並點按  選擇歌曲。
- 選擇**儲存**儲存播放列表。

## 播放播放列表


- 按**功能表**或  並選擇**多媒體**。
- 選擇 MP3 **播放器**，然後選擇**我的播放列表**。
- 選擇要播放的播放列表，並選擇**檢視**，然後選擇 .

# 多媒體

## 編輯播放列表

您可能需要不時新增歌曲，或從播放列表中刪除歌曲。

若要整理播放列表，您可使用**選項**功能表進行編輯。

- 1 按**功能表**或  並選擇**多媒體**。
- 2 選擇 **MP3 播放器**，然後選擇**我的播放列表**。
- 3 選擇要編輯的播放列表，並點按**檢視**，然後選擇**選項**。選擇以下選項之一：

**播放** - 您可播放選定的音樂。

**加入到播放列表** - 使用此選項，您可新增歌曲至播放列表。

**刪除** - 從播放列表中移除歌曲。  
選擇**是**確認。


**上移/下移** - 在播放列表中上移或下移。

**多方刪除** - 選擇並從播放列表中刪除歌曲。

**刪除全部** - 從播放列表中移除所有歌曲。

**資訊** - 檢視播放列表資訊。

## 刪除播放列表

- 1 按**功能表**或  並選擇**多媒體**。
- 2 選擇 **MP3 播放器**，然後選擇**我的播放列表**。
- 3 點按至要刪除的播放列表，並選擇**選項**。
- 4 選擇**刪除全部**並選擇**是**以確認。

### 注意：

由於數碼權限管理 (DRM) 系統的存在，從互聯網下載或透過多媒體訊息接收到的部分媒體項目可能具有一個存取時使用的「**購買權限**」功能表。您可從擁有內容權限的網站獲取購買權限的密鑰。

音樂版權受國際公約及國內版權法的保護。需要取得授權或許可才可以複寫或複製音樂。在部份國家，國家法禁止私人複製受版權保護的材料。請檢查適用國家關於使用此類材料的國家法律。

## 使用 FM 收音機

LG KS360 具有 FM 收音機功能，這樣，您可在外出旅途中調諧至最愛電台，收聽節目。

**注意：**您需要插入耳機才可收聽收音機。將插頭插入耳機插孔中（即為將充電器插入的相同插孔）。

## 搜尋電台

透過手動或自動搜尋電台節目，將其保留到手機中。這些節目將儲存至特定頻道編號，如此以來，您就不需要重新調諧。手機中可儲存 12 個頻道。

如要自動調諧：

- 1 按**功能表**或 **OK** 並選擇**多媒體**，然後選擇**FM 收音機**。
- 2 點按**選項**並選擇**自動選取頻道**，然後選擇**是**。
- 3 找到電台後，KS360 會詢問您是否儲存此電台。如果要儲存此頻道，請選擇**是**，否則，選擇**否**。選擇儲存的任何電台將自動分配到手機中的頻道號中。

如要手動調諧：

- 1 按**功能表**或 **OK** 並選擇**多媒體**，然後選擇**FM 收音機**。
- 2 選擇要儲存電台的頻道號，並選擇**編輯**。
- 3 要進入電台，您可使用導覽鍵搜尋頻率，或使用鍵盤輸入頻率，然後選擇**儲存**。

**注意：**您亦可編輯已儲存至頻道號中的電台。

**提示！**如要改善收音機的接收效果，您可延長作為收音機天線的耳機線。

## 重設頻道

- 1 按**功能表**或 **OK** 並選擇**多媒體**，然後選擇**FM 收音機**。
- 2 點按**選項**並選擇**重設頻道**。選擇**是**確認重設。每個頻道將返回至開始 87.5Mhz 頻率。

## 收聽收音機

- 1 按**功能表**或 **OK** 並選擇**多媒體**，然後選擇**FM 收音機**。
- 2 選擇要收聽電台的頻道號。




**注意：**您可透過內置喇叭收聽電台節目。按「選項」，選擇「收聽透過」，然後選擇「揚聲器」。

# 多媒體

## 使用語音備忘錄

使用**語音備忘錄**錄製語音備忘錄或其他聲音。

## 錄製語音備忘錄

- 1 按**功能表**或  並選擇**多媒體**，然後選擇**語音備忘錄**。
- 2 按  開始錄製。
- 3 選擇**暫停**暫停錄製。
- 4 選擇**停止**結束錄製。
- 5 選擇  收聽錄製聲音。

**注意：**透過選擇**選項**和**聲音集**，您可收聽已儲存的所有錄音。

## 發送錄音

- 1 完成錄音後，點按**選項**。
- 2 選擇**發送方式**並從**多媒體訊息**、**藍芽**或**電郵**中選擇。若選擇**多媒體訊息**或**電郵**，錄製會新增至訊息中，您可按正常方式編寫和發送。若選擇**藍芽**，則系統會提示您開啓藍芽。

**提示！** 如果計劃以訊息方式發送錄影，開始錄製前，請點按**選項**並選擇**錄製模式**，然後選擇**多媒體訊息**。這可確保錄音適合訊息。

# 我的檔案

您可將多媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖像、聲音、影片和文件。您亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。

所有的多媒體檔案將儲存在**我的檔案**中。按 **功能表** 或 **OK** 然後選擇**我的檔案**，以開啟資料夾清單。

## 圖像

**圖像**包括預載至手機上的預設圖像資料夾、預設 flash 檔案和透過手機相機拍攝的圖像。

## 圖像選項功能表

**圖像**中可用的選項取決於選取的圖像類型。所有選項均可用於手機相機上拍攝的圖片。僅「檢視」、「設為」、「檔案資訊」、「投影片播放」、「排序方式」和「檢視模式」選項可用於預設圖像。

在**圖像**資料夾中，點按**選項**顯示您的選項清單。

**刪除** - 刪除選定的圖像。

**設為** - 將選定圖像設定為**牆紙**或**來電顯示圖片**。

**發送方式** - 透過**多媒體訊息**、**藍芽**或**電郵**，將所選圖像發送給朋友。

**注意**：透過多媒體訊息發送前，圖像可能需要重新調整大小。

**檔案** - 編輯圖像、重新命名、製造動畫或檢視選定圖像的相關資訊（名稱、大小、日期、時間、解像度、類型和版權）。如果您已插入外置記憶咭，則會顯示兩個附加選項：**移動至外置記憶體**和**複製至外置記憶體**。

**列印透過** - 透過藍芽或 Pictbridge 列印圖像檔案。

**投影片播放** - 觀看圖像的幻燈片放映。參閱第 39 頁，了解建立投影片播放的更多資訊。

**新增資料夾** - 在主要圖像資料夾內建立新增資料夾。

**標示/取消標示** - 選擇要刪除、複製、移動的多個圖像。

**刪除全部** - 刪除圖像資料夾中的所有照片。

**排序方式** - 按**日期**、**類型**或**名稱**，安排圖像。

**檢視模式** - 變更檢視照片的方式。

01

02

03

04

05


06

07


08

# 我的檔案


## 發送照片

- 1 按**功能表**或  然後選擇**我的檔案**。
- 2 選擇**圖像**。
- 3 選擇相片，然後選擇**選項**。
- 4 選擇**發送方式**並從**多媒體訊息**、**藍芽**或**電郵**中選擇。
- 5 若選擇**多媒體訊息**或**電郵**，則您的照片將附加至訊息中，您可按正常方式編寫和發送訊息。若選擇**藍芽**，手機會提示您開啓藍芽，並搜尋要向其發送圖片的裝置。


## 管理圖像

- 1 按**功能表**或  然後選擇**我的檔案**。
- 2 選擇**圖像**。
- 3 選擇**選項**，然後選擇**排序方式**。
- 4 從**日期**、**類型**或**名稱**中選擇。

## 刪除圖像


- 1 按**功能表**  然後選擇**我的檔案**。
- 2 選擇**圖像**。
- 3 選擇圖像，並點按**選項**。
- 4 選擇**刪除**並按「是」確認。

## 刪除多個圖像

- 1 按**功能表**或  然後選擇**我的檔案**。
- 2 選擇**圖像**。
- 3 選擇**選項**並選擇**標示/取消標記**和**刪除**。
- 4 各圖像旁將會顯示一個方塊。選擇  標記每個圖像。若要取消標記某圖像，請再次選擇  以便勾號從方塊中消失。或者，您可選擇「**選項**」，然後選擇「**全部標記**」或「**取消全部標記**」。
- 5 一旦您已標示所有合適的方塊，請選擇完成並確認要刪除所有已標示的圖像。

## 建立投影片播放

若要查看手機上的所有圖像，或瀏覽所擁有的內容，您可建立投影片，而毋需開啓和關閉每個圖像。



- 1 按**功能表**或  然後選擇**我的檔案**。
- 2 選擇**圖像**。
- 3 選擇要開始投影片播放的相片，並選擇**選項**。
- 4 選擇**投影片播放**，即可開始播放。
- 5 點按**暫停**以暫停投影片播放，點按**退出**結束投影片播放，並返回到**圖像**資料夾。

投影片放映期間，按「選項」以便在「完整圖像」和「全屏幕」之間選擇。選擇**橫向圖像**，變更圖像的方向。

## 聲音

**聲音**資料夾包含預設的聲音、您的錄音以及您下載的聲音檔案。您可在此處管理或將聲音設定為鈴聲。



## 使用聲音

- 1 按**功能表**或  然後選擇**我的檔案**。
- 2 點按並選擇**聲音**。
- 3 選擇**預設聲音**或從錄音檔案清單中選擇。
- 4 選擇某一聲音，並按  開始收聽。
- 5 點按**選項**，選擇**設為**並從**鈴聲**、**個人來電鈴聲**或**訊息提示音**中選擇。

## 影片

**影片**資料夾會顯示已下載的影片清單以及您在手機上錄製的影片清單。

## 觀看影片

- 1 按**功能表**或  然後選擇**我的檔案**。
- 2 點按並選擇**影片**。
- 3 選擇影片並點按 。



# 我的檔案

## 在暫停影片時使用選項


選擇**選項**後，播放影片將處於暫停模式，且您可從以下選項中選擇：

**刪除** - 刪除影片。

**發送方式** - 透過**多媒體訊息**、**電郵**或**藍芽**，將所選影片發送給朋友。

**資訊** - 檢視所選檔案的名稱、大小、日期、時間、類型及版權的詳細資訊。

## 發送錄像片段

- 1 按**功能表**或  然後選擇**我的檔案**。
- 2 點按並選擇**影片**。
- 3 選擇所需的錄像片段，然後點按**選項**。
- 4 按發送方式並從**多多媒體訊息**、**電郵**或**藍芽**中選擇。
- 5 若選擇**多媒體訊息**或**電郵**，則錄像片段會附加至訊息中，您亦可正常編寫和發送訊息。若選擇**藍芽**，手機會提示您開啓藍芽，並搜尋要向其發送影片的裝置。

**注意：**透過多媒體訊息發送前，影片可能需要重新調整大小。部份影片太大，無法透過多媒體訊息發送。

## 使用影片選項目錄

在「影片」資料夾中，選擇某個影片，按「**選項**」顯示以下選項清單。

**刪除** - 刪除選定的影片。

**發送方式** - 透過**多媒體訊息**、**電郵**或**藍芽**，將所選影片發送給朋友。

**檔案** - 重新命名影片，檢視相關資訊（名稱、大小、日期、時間、類型和版權）。如果您已插入外置記憶咭，則會顯示兩個附加選項：**移動至外置記憶體**和**複製至外置記憶體**。

**新增資料夾** - 在主要影片資料夾內建立新增資料夾。

**標示/取消標記** - 選擇要刪除、複製、移動的錄像片段。

**刪除全部** - 刪除**影片**資料夾中的所有短片。

**排序方式** - 按**日期**、**類型**或**名稱**，安排影片。

**自動重複播放** - 您可以設定播放模式：**關閉**、**重複一次**和**重複全部**。


- **關閉**：播放選定的檔案。
- **重複一次**：播放一次清單中的所有檔案。
- **重複全部**：連續重複播放清單中的所有檔案。

**列表/縮圖檢視** – 您可以變更檢視模式。

## 文件

從**文件**功能表。

## 檢視文件

- 1 按**功能表**或  然後選擇**我的檔案**。
- 2 選擇**文件**。
- 3 選擇一個文件，並點按**檢視**。

## 其他

顯示內置記憶體和外置記憶體中**其他**資料夾的檔案列表。在多媒體記憶中。

您可能會發現，從電腦將檔案傳送到手機時，這些檔案將出現於**其他**資料夾而不是**文件**資料夾中。若發生這種情況，您可以將其移動。

## 外置記憶體


若插入記憶咭，則將顯示為**我的檔案**中的一個資料夾。外置記憶體資料夾將分為另外五個資料夾：圖像、聲音、影片、文件和其他。每個資料夾將包含此類型的所有檔案，這些檔案儲存至記憶咭中，而不是手機上。

# 遊戲及應用功能

## 遊戲及應用功能

KS360 手機提供有預載遊戲，可讓您在休閒時娛樂。如果您選擇下載任何其他遊戲或應用功能，下載的遊戲或應用功能將儲存在此資料夾中。


### 玩遊戲

- 1 按**功能表**或  並選擇**遊戲及應用功能** 然後「遊戲」。
- 2 您可從網站下載遊戲，然後盡情體驗遊戲的樂趣。

**注意：**連接至此服務時，需另行收費。請向網絡供應商諮詢收費詳情。


### 檢視應用程式

使用**應用程式**功能表，您可管理安裝在手機上的 Java 應用程式。您亦可刪除已下載的應用功能。

- 1 按**功能表**或  並選擇**遊戲及應用功能** 然後「應用程式」。
- 2 播放並管理擁有的應用功能。

## 變更網絡設定

要下載遊戲，您可設定數值，使用**網絡設定**，連接到網絡。

- 1 按**功能表**或  並選擇**遊戲及應用功能** 然後「網絡設定」。
- 2 您可檢視或新增網絡設定。

# 記事簿 及工具

## 新增日程表至日曆

- 1 從備用屏幕，按**功能表**或 **OK**，然後依次選擇**記事簿**和**日曆**。
- 2 選擇要將日程表新增至的日期。透過使用導覽鍵，按至所需的日期，透過選擇選項。
- 3 選擇新增日程表，輸入開始事件的時間。使用導覽鍵向下按，並輸入事件的結束時間。
- 4 再次向下按，並選擇是否要為事件設定**鬧鐘**。向左或向右按，查看可用的選項。您可設定鬧鐘在事件的開始時間響鈴，或事件開始前設定的時間期間響鈴，以便提醒您事件即將發生。
- 5 向下按，並為事件輸入標題。使用鍵盤輸入字母和數字。
- 6 再次向下按，選擇事件是一次性關閉，或是一次、每天、每星期、每月或每年重複。如果事件重複，您亦可向下按，為事件何時將徹底停止輸入**到期日期**。
- 7 選擇**儲存**，則事件將儲存至日曆中。一個方形游標將標示存有至日程表的日期。

## 編輯日曆日程表

- 1 從備用屏幕，按**功能表**或 **OK**，然後依次選擇**記事簿**和**日曆**。
- 2 選擇**選項**並選擇**所有日程表**，查看所有事件清單。選擇要編輯的事件，並選擇**檢視**。或者，在日曆中選擇日程表日期，並選擇**檢視**。
- 3 選擇**編輯**，並按到要變更的事件詳細資料。作出修改，並按**儲存**以儲存已編輯的日程表。

**注意：**透過選擇以檢視日程表，然後選擇**選項**和**刪除**，您可從日曆中刪除日程表。

## 分享日曆日程表

- 1 從備用屏幕，按**功能表**或 **OK**，然後依次選擇**記事簿**和**日曆**。
- 2 選擇要分享的日程表並選擇**選項**。
- 3 選擇**發送方式**並從**文字訊息**、**多媒體訊息**、**藍芽**或**電郵**中選擇。

01

02

03

04

05

06

07

08

# 記事簿 及工具

## 新增備忘錄

- 1 從備用屏幕，按**功能表**或 **OK**，然後依次選擇**記事簿**和**備忘錄**。
- 2 選擇新增並輸入您的備忘錄。
- 3 選擇**儲存**。
- 4 下次開啓備忘錄應用程式時，備忘錄將會顯示在屏幕上。

**提示！** 您可以編輯現有備忘錄。選擇要編輯的備忘錄，然後點按**選項**並選擇**編輯**。

## 設定鬧鐘

- 1 從備用屏幕，按**功能表**或 **OK**，然後選擇**工具**及**鬧鐘**。
- 2 選擇**新增**。
- 3 向下按，並輸入想要鬧鐘響鈴的時間。
- 4 選擇指明鬧鐘響鬧的重複類型：一次、每天、星期一至星期五、星期一至星期六、星期六至星期日，或是**選擇日子**。
- 5 向下按並選擇是否要鬧鐘：依據**情境模式**、**永遠響鈴**或**永遠震動**。

- 6 向下點按選擇鬧鐘提示音。選擇**聲音**選項以選擇新聲音。
- 7 向下點按，並為鬧鐘輸入標題，或使用建議的名稱。
- 8 選擇**儲存**。

**注意：**您最多可設定 5 個鬧鐘。

## 使用計算機

- 1 從備用屏幕，按**功能表**或 **OK**，然後選擇**工具**及**計算機**。
- 2 按數字鍵，輸入數字。
- 3 對於簡單計算，按所需的功能 (+, -, x, ÷)，然後按 =。
- 4 對於更複雜的計算，請選擇**功能**以選擇相應的指令。
- 5 選擇**清除**清除屏幕，開始新的計算。

## 使用秒錶

- 1 從備用屏幕，按**功能表**或 **OK** 然後選擇**工具**及**秒錶**。
- 2 選擇**開始**開始使用計時器。
- 3 如果要記錄圈數，請選擇「以圈計」。最多可儲存 20 圈。
- 4 選擇**停止**結束計時器。
- 5 選擇**繼續**，在上次停止的時刻處重新啓動秒錶或選擇**重設**重新開始計時。

## 轉換單位

- 1 從備用屏幕，按**功能表**或 **OK**，然後選擇**工具**及**單位轉換器**。
- 2 選擇是否要轉換貨幣、面積、長度、重量、溫度、體積或速度。
- 3 從要輸入的量度單位中選擇。使用導覽鍵，選擇單位，並輸入單位數量。
- 4 向下按至單位換算方塊，並選擇要轉換至的單位量度。轉換將自動顯示在以下的行中。

## 新增城市至世界時間

- 1 從備用屏幕，按**功能表**或 **OK**，然後選擇**工具**及**世界時間**。
- 2 使用導覽鍵，瀏覽地球儀並選擇洲。
- 3 選擇**放大**放大某個區域，並從此區域中選擇城市。
- 4 按設定並選擇**是**。

## 智能咭服務


此功能取決於智能咭和網絡服務。

如果智能咭支援 SAT（即 SIM 應用程式工具集）服務，本功能表將出現智能咭上儲存之網絡商服務名稱。

# 瀏覽器

使用瀏覽器，您可隨時獲取最新新聞和天氣預報以及體育或交通資訊。另外，瀏覽器還可讓您下載到最新的音樂、鈴聲、待機圖片及遊戲。

## 存取網絡

- 1 按**功能表**或  並選擇**瀏覽器**。
- 2 要直接存取瀏覽器主頁，請選擇**主頁**。或者，選擇**輸入網址**並鍵入所需的網址，然後點按**連接**。


**注意：**連線至此服務和下載內容，需另行收費。請向網絡供應商諮詢資料費用。

## Yahoo!

選定此功能，您可快速輕鬆上網瀏覽。

## 新增並存取書籤

爲了方便快捷存取喜愛的網站，您可新增書籤並儲存網頁。

- 1 按**功能表**或  並選擇**瀏覽器**。
- 2 選擇**書籤**。屏幕上會顯示一個書籤清單。
- 3 要新增書籤，請選擇**選項**並選擇**新書籤**。依次輸入書籤名稱和網址。
- 4 按**儲存**。您的書籤會立即出現在書籤清單中。
- 5 要存取書籤，只需要點按到所需的書籤，並點按**連接**。您將會連往書籤標記的網頁。

## 存取已儲存網頁

- 1 按**功能表**或 **OK** 並選擇**瀏覽器**。
- 2 選擇**已儲存網頁**。
- 3 選擇所需的網頁，並點按**開啓**。

**提示！** 此功能表亦允許您刪除已儲存網頁。

## 檢視瀏覽器記錄

- 1 按**功能表**或 **OK** 並選擇**瀏覽器**。
- 2 選擇**記錄**並選擇**確定**。
- 3 最近存取的網頁標題清單會顯示。  
要存取其中的一個網頁，請點按到所需的網頁，並點按**連接**。

## 變更網頁瀏覽器設定

- 1 按**功能表**或 **OK** 並選擇**瀏覽器**。
- 2 選擇**設定**。
- 3 您可選擇瀏覽互聯網時，手機處理、顯示和使用資訊的方式。您可在網絡設定、屏幕設定模式、暫存記憶、Cookies、安全認證、顯示圖像、Javascript 和儲存位置內修改設定。
- 4 變更設定後，選擇**確定**。

01

02

03

04

05

06

07

08




# 設定

在此資料夾內，您可調整各項設定，以便讓此 KS360 可彰顯您的個性。


**注意：**有關通話設定的詳情，請參閱第 19 頁。

## 變更您的情景模式

您可以從備用屏幕快速變更您的情景模式。只需要使用導覽鍵按下  然後按要啓用的設定檔。從以下選項中選擇：標準、靜音、震動、戶外。


## 更改情景模式

您可更改每個情景模式設定。

- 1 按**功能表**或  並選擇**情景模式**。
- 2 選擇所需的情景模式，並選擇**更改**。
- 3 對於靜音和震動情景模式，您只可更改震動設定。對於其他情景模式，您可變更清單中可用的所有聲音和提示選項。

## 變更您的日期及時間

您可設定與日期和時間相關的功能。

- 1 按**功能表**或  並選擇**設定**。
- 2 選擇**日期及時間**，並從以下清單中選擇：

**設定日期** - 您可輸入目前的日期。

**日期格式** - 您可設定日期格式。  
(年/月/日、日/月/年、月/日/年)

**設定時間** - 您可輸入目前的時間。


**時間格式** - 您可設定時間格式：24 小時或 12 小時。

**自動更新** - 選擇**開啓**後，手機將自動更新日期和時間。

## 變更語言

選擇「語言」變更手機中任何文字的語言。任何變更亦將改變語言輸入模式。

## 變更您的顯示設定

- 1 按**功能表**或  並選擇**設定**。
- 2 選擇**顯示**並從以下選項中選擇：

**牆紙** - 選擇出現在屏幕顯示上的牆紙。

**時鐘** - 選擇是否讓日期和時間顯示於備用屏幕上。

**背景燈時計** - 選擇背景燈的維持時間。

**提示!** 背景燈開啓時間越長，耗費的電量就越多，這樣，手機充電將更頻繁。

**亮度** - 使用導覽鍵調節亮度。從 40%、60%、80% 或 100% 中選擇，然後選擇「確定」儲存您的變更。

**功能導向捷徑** - 當圖像在備用屏幕的中間時，選擇開啓會顯示 4 個導覽鍵。

**字體大小** - 變更以下選項的字型大小：功能表、撥號中和訊息。

**主題** - 快速變更屏幕的整個外觀。

**功能表風格** - 在格子檢視與列表檢視之間變換功能表檢視。

**主字體式樣** - 選擇主字體式樣。


**撥號字體式樣** - 選擇用鍵盤撥號時的字體樣式。

**備用歡迎辭** - 選擇後，將訊息新增至備用屏幕中。

**網絡名稱** - 選擇開啓或關閉以顯示或隱藏網絡名稱。

## 變更安全設定

變更安全設定，保護 KS360 和手機中重要資訊的安全。

- 1 按**功能表**或  並選擇**設定**。
- 2 選擇**安全**並從以下清單中選擇：

**PIN碼要求** - 可選擇開啓或關閉。

**自動按鍵鎖** - 選擇未使用手機多久時鎖定鍵盤。

**手機鎖** - 在以下狀態下選擇安全密碼鎖定您的手機：在開機時、智能咕更換時或立即。

**手機遺失追蹤** - 可設定手機遺失追蹤。

**更改密碼** - 變更您的**安全密碼**、**PIN1 碼**、**PIN2碼**或**手機追蹤密碼**。

## 使用飛航模式

使用此功能，**開啓**或**關閉**飛航模式。**開啓飛航模式**後，您將無法撥打電話，連接到互聯網，發送訊息或使用藍芽。

# 設定

## 使用省電模式

選擇永遠開啓、僅夜間或關閉省電設定。

## 重設手機

使用手機設定中的「重設」，將所有設定恢復為原廠設定。您需要安全密碼，才能啓用此功能。

## 檢視記憶體狀態

KS360 手機具有三種可用記憶體：手機、智能咭和外置記憶體（您可能需要另行購買記憶咭）。

您可以使用記憶體狀態查看可用的空間。

按**功能表**或 **OK** 並選擇**設定**。選擇**記憶體狀態**，您將看到 KS360 中記憶體的目前狀態（一般、預留、智能咭和外置記憶體）。

**提示！** 有關安裝記憶咭的資訊，請參閱第 13 頁。

## 變更您的藍芽設定

- 1 按**功能表**或 **OK** 並選擇**連接**，然後選擇**藍芽**。
- 2 選擇**藍芽設定**。對以下選項作出變更：

**顯示我的手機** - 選擇向其他裝置顯示或隱藏您的裝置。

**我的手機名稱** - 為 KS360 手機輸入名稱。

**我的藍芽位址** - 檢視您的藍芽位址。

## 變更連線設定

您的網絡商已經為您設定連線設定，因而，您可以立即享用您的新手機。若要變更任何設定，請使用此功能表。

按**功能表**或 **OK** 並選擇**連接**。您可從以下選項中選擇：

**藍芽** - 設定 KS360 以使用藍芽。您可調整是否向其他裝置顯示您的手機，或搜尋手機已配對的裝置。

**網絡** - 您的 KS360 會自動連線至您的首選網絡。使用此功能表可變更這些設定。您亦可以使用此功能表來新增接入點。

**USB 連接模式** - 選擇**數據服務**並透過 LG PC Suite 軟件同步您的 KS360，藉此複製您手機中的檔案。若您已插入記憶咭，選擇**大容量儲存**，可將手機用作 USB 記憶棒。連接電腦，並將檔案儲存至 KS360。

## 同其他藍芽裝置配對

透過將 KS360 手機同其他裝置配對起來，您可設定一個密碼保護連接。這意味著配對會更安全。

- 1 檢查藍芽是否為**開啓**並**顯示**。透過選擇**顯示我的手機**，然後選擇**顯示**，您可在**藍芽設定**功能表中變更您的裝置的可見性。
- 2 從藍芽功能表中選擇**裝置列表**，然後選擇**新增**。
- 3 您的 KS360 手機將搜尋裝置。完成搜尋後，**配對**和**更新**將顯示在屏幕上。
- 4 選擇要配對的裝置，並選擇**配對**，然後輸入密碼，並選擇**確定**。
- 5 然後，手機將連接到其他裝置，且

您必須在此裝置上輸入相同的密碼。

- 6 密碼保護藍芽連線已準備就緒。

## 使用藍芽耳機

- 1 檢查藍芽是否為**開啓**並**顯示**。
- 2 遵循隨耳機附帶的說明，將手機置於配對模式中並配對裝置。
- 3 KS360 手機將自動切換到耳機情景模式。您亦可連接藍芽到手機，以接聽來電。

## 將手機用作大型儲存裝置

手機可用作大型儲存裝置，如同 USB 記憶棒。此功能非常適合將檔案從電腦移至手機。插入記憶咭後，以**大型儲存裝置**連接時，它將顯示為電腦上的兩個磁碟機。手機記憶體和外置記憶體。

- 1 按**功能表**或 **OK** 然後選擇**連接**。
- 2 選擇 **USB 連接模式**。
- 3 點按到**大容量儲存**並點按**確定**。
- 4 將 USB 線較小的一端插入至 KS360 手機邊緣的 USB 插孔。將較大的一端插入電腦的 USB 連接埠。
- 5 卸除式磁碟資料夾將自動在電腦上

# 設定

開啓，如果您已插入記憶咭，則顯示兩個資料夾，顯示手機或記憶咭上的所有資料夾。

- 6 將圖像、影片、音樂或文件拖放至相應的資料夾中。
- 7 按一下桌面工具列中的**安全地移除硬體**圖示，安全移除您的手機。
- 8 要存取如圖像等檔案時，按**功能表**或 **OK**，然後依次選擇**我的檔案**、**外置記憶體**和**圖像**。所有剛傳輸的圖像將包含在此檔案中。

## 傳送檔案到手機

您亦可以使用藍芽，將檔案從電腦傳送至手機。

- 1 確保您的手機與電腦均已開啓藍芽，並已被對方偵測到。
- 2 使用電腦，透過藍芽發送檔案。
- 3 檔案發送後，您需要按**是**予以接受。

- 4 檔案將儲存至合適的資料夾，具體取決於檔案的類型。因此，例如，圖片將儲存至**圖像**資料夾中，音樂將儲存至**聲音**資料夾中。如果手機無法確認檔案類型，檔案將被儲存至**其他**資料夾中。

**注意：**使用藍芽發送的檔案將被儲存至手機記憶體中。

## 使用藍芽發送和接收檔案

藍芽是一種發送和接收檔案的好方法，因為不需要USB線，且連線方便快捷。您亦可連接藍芽到手機，以接聽來電。

開始同藍芽分享檔案前，您需要將您的裝置同其他藍芽裝置配對起來。有關配對裝置的更多詳情，請參閱第51頁的**同其他藍芽裝置配對**。

**要開啓藍芽，請執行以下操作：**

- 1 按**功能表**或 **OK** 並選擇**連接**，然後選擇**藍芽**。
- 2 選擇**藍芽開啓/關閉**並選擇**開啓**。
- 3 選擇**關閉**關閉藍芽。

### 發送檔案：

- 1 開啟要發送的檔案，通常為照片、影片或音樂檔案。
- 2 選擇**選項**並選擇**發送方式**，然後選擇**藍芽**。
- 3 如果尚未啟用，選擇**是**開啟藍芽。
- 4 KS360 手機將自動搜尋範圍內其他已啟動藍芽的裝置。
- 5 選擇要將檔案發送至的裝置並點按**發送**。

### 接收檔案：

- 1 要接收檔案，藍芽必須為**開啟**並**可見**。參閱第 50 頁的變更您的藍芽設定，了解更多資訊。
- 2 系統顯示一則訊息，提示您接受來自寄件者的檔案。選擇**是**接收檔案。

**提示！** 留意進度列，確保檔案已發送。

#### 注意事項

Bluetooth® 字標和徽標屬 Bluetooth SIG, Inc. 所有，且 LG Electronics 使用任何此類標記均獲得許可。其他商標和交易名稱為他們各自所有者的商標和交易名稱。

# 配件

以下配件隨 KS360 手機一併提供。有不同的配件供您的手機使用。您可以根據您的個人通訊要求選擇這些配件。

旅行充電器



免提耳機



標準電池



使用手冊

了解更多 KS360.

## 注意事項

- 只可用原裝 LG 配件。不使用原裝 LG 配件，保養可能失效。
- 不同的地區可能有不同的配件，請向我們的地區服務公司或代理商查詢更多詳情。

# 網絡服務

本手冊所述之無線電話經認可可用於 GSM 900, DCS 1800 及 PCS 1900 網絡。

手冊中提及的多項功能均為網絡服務。這些特殊服務需向您的無線服務供應商申請。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

# 技術資料

## 一般

產品名稱：KS360

系統：GSM 900 / DCS 1800 / PCS 1900

## 環境溫度

最高：+55°C (放電)

+45°C (充電)

最低：-10°C

01

02

03

04

05

06

07

08



# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KS360

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.6.1

EN 60950-1 : 2001

EN 50360/EN 50361 : 2001

EN 301 511 V9.0.2

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

18. JUN. 2008

Signature of representative

# 安全及有效使用的指引

請閱讀以下簡易的使用準則。違反這些準則可能會發生危險或觸犯法律。詳細資訊刊於本用戶手冊的正文部份。

## 無線電波暴露準則

### 無線電波暴露及比吸收率 (SAR) 資訊

本手機型號 KS360 已為遵守無線電波暴露的應用安全要求而設計。此要求根據包括專為確保任何年齡、任何健康狀況的所有人士安全而設的安全極限的科學指引。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均十 (10) 克組織 2 W/Kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.489 W/kg (10g) 攜帶於身上時則為 0.949 W/kg (10g)。

- 採用了電氣與電子工程師學會 (IEEE) 建議 SAR 限制 (即平均一 (1) 克組織 1.6 W/Kg) 的國家/地區居民的 SAR 數據資訊 (如美國、加拿大、澳洲及臺灣)。

## 產品護理及維修

### 警告！

僅請使用經認可可用於此特定手機型號的電池、充電器及配件。使用其他種類可能使手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 請遠離電視、收音機或電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。

# 安全及有效使用的指引

- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電或造成手機嚴重損壞。
- 不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。

## 有效手機操作

### 電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，例如您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

### 道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提聽筒套件，請使用免提聽筒套件。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子設備，例如立體聲音響及安全設備等。

- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

## 避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啓或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

## 玻璃零件

手機有部分零件為玻璃質料。當手機掉落地面或是受到相當程度的撞擊時，玻璃質料的鏡面可能會破裂。千萬不要以手接觸或嘗試移除玻璃碎片，應立即停止使用手機，並盡快到 LG 授權的維修中心更換該破碎的玻璃鏡面。

## 爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

## 潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

## 在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

## 兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

## 緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

# 安全及有效使用的指引

## 電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
  - 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
  - 請勿拆解電池組或造成電池組短路。
  - 請保持電池組的金屬接點清潔。
  - 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
  - 如果電池很久沒有使用來擴展其用量，需重充電池。
  - 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
  - 請勿把電池放置在熱或冷的地方，這可損害電池效能。
  - 若使用類型不當的電池，則有發生爆炸的危險。
  - 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
  - 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。



视话机软件或服务提供商而定，  
本手册中的部分内容可能与您的  
手机有所不同。



## KS360 用户手册 | 简体中文

恭喜您购买此款功能先进、外观小巧的 LG KS360 手机。它采用了最新的数字移动通信技术，为您提供便利的操作。

设定 01

待机屏幕 02

基本功能 03

高级功能 04

管理功能 05

浏览器 06

设置 07

配件 08



# 内容

<b>01 设定</b>	<b>电话簿..... 20</b>
了解您的手机..... 7	搜索..... 20
打开视图..... 8	新联系人..... 20
<b>安装 SIM 卡和电池..... 10</b>	联系人选项..... 20
<b>储存卡..... 13</b>	将联系人添加到群组..... 21
安装储存卡..... 13	为群组重命名..... 21
拔出储存卡..... 13	为联系人添加图片..... 21
将储存卡格式化..... 13	将电话簿复制到 SIM 卡..... 22
<b>菜单地图..... 14</b>	删除所有联系人..... 22
<b>02 待机屏幕</b>	查看资料..... 22
<b>待机屏幕..... 15</b>	<b>信息..... 23</b>
状态栏..... 15	信息..... 23
<b>03 基本功能</b>	发送信息..... 23
<b>通话..... 16</b>	输入文本..... 24
拨电..... 16	使用键盘文本输入模式..... 24
从电话簿拨电..... 16	设立电子邮件..... 24
接听和拒绝通话..... 16	使用新帐户发送电子邮件..... 24
调整通话音量..... 17	信息文件夹..... 25
快速拨号..... 17	管理信息..... 25
查看通话记录..... 17	使用模板..... 26
使用呼叫转移..... 18	更改文本信息设置..... 26
使用呼叫阻截..... 18	更改多媒体信息设置..... 27
更改通话设置..... 19	更改电子邮件设置..... 27
	更改其它设置..... 28

## 04 高级功能

<b>多媒体</b> .....	<b>29</b>	使用录音机 .....	37
快速拍照 .....	29	录制语音备忘录 .....	37
拍照前 .....	29	发送录音 .....	37
拍照后 .....	30	<b>我的文档</b> .....	<b>38</b>
使用快速设置 .....	30	图像 .....	38
更改图像大小 .....	31	图像选项菜单 .....	38
查看保存的照片 .....	31	发送照片 .....	39
设定照片为墙纸或图像 ID .....	31	管理图像 .....	39
快速录像 .....	32	删除图像 .....	39
录像后 .....	32	删除多个图像 .....	39
了解取景器 .....	33	创建幻灯片 .....	40
使用快速设置 .....	33	声音 .....	40
观看保存的视频 .....	33	使用声音 .....	40
观看视频时调整音量 .....	33	视频 .....	40
MP3 播放机 .....	34	观看视频 .....	40
将音乐传输到手机 .....	34	视频暂停时使用选项 .....	41
播放歌曲 .....	34	发送视频剪辑 .....	41
播放音乐时使用选项 .....	34	视频选项菜单 .....	41
创建播放列表 .....	35	文件 .....	42
播放播放列表 .....	35	查看文件 .....	42
编辑播放列表 .....	35	其它 .....	42
删除播放列表 .....	36	外部储存卡 .....	42
使用 FM 收音机 .....	36	<b>游戏和应用程序</b> .....	<b>43</b>
搜索电台 .....	36	游戏和应用程序 .....	43
重新设定频道 .....	37	玩游戏 .....	43
收听收音机 .....	37	查看应用程序 .....	43
		更改网络设置 .....	43

# 内容

## 05 管理功能

记事本和工具.....	44
将事件添加到日历.....	44
编辑日历事件.....	44
共享日历事件.....	45
添加备忘录.....	45
设置闹钟.....	45
使用计算器.....	46
使用秒表.....	46
对换单位.....	46
添加城市到世界时间.....	46
SIM 卡服务.....	46

## 06 浏览器

浏览器.....	47
访问网页.....	47
体验雅虎!.....	47
添加并访问书签.....	47
保存页面.....	47
访问保存的页面.....	48
查看浏览记录.....	48
更改网络浏览器设置.....	48

## 07 设置

设置.....	49
更改情景模式.....	49
将情景模式个人化.....	49
更改日期和时间.....	49
更改语言.....	49
更改显示设置.....	50
更改保安设置.....	50
使用航行模式.....	51
使用省电模式.....	51
重新设置手机.....	51
查看储存器状态.....	51
更改蓝牙设置.....	51
更改连接设置.....	51
与其它蓝牙装置配对.....	52
使用蓝牙耳机.....	52
将手机用作批量储存器.....	52
将文件传输到手机.....	53
使用蓝牙发送和接收文件.....	53

## 08 配件

配件.....	55
网络服务.....	56
技术数据.....	56
标准.....	56
外部环境.....	56
关于安全有效使用手机的准则 ...	58

# 了解您的手机

## 音量键

- 在待机模式下：控制铃声音量。
- 在通话过程中：控制听筒音量。



01

02

03

04

05

06

07

08

# 打开视图

## 左软键/右软键

执行显示屏底部所示的功能。

左软键：直接转到主菜单。

右软键：直接转到电话簿。

## Fn 键

从文本模式更改为数字模式。

## 符号键

输入符号字符。

更改文本模式  
(大写/小写)

字母数字键

## 空格键

在编辑时用于  
输入空格。

## 回车键

## 确定键

选择菜单选项并  
确认操作。

## 信息键

## 清除键

- 每按一下清除一个字符。
- 按住此键清除所有输入内容。
- 使用此键返回上一屏幕。





01

02

03

04

05

06


07

08

# 安装 SIM 卡和电池


## 1 卸下电池盖

按电池盖释放闩，将电池盖举起。

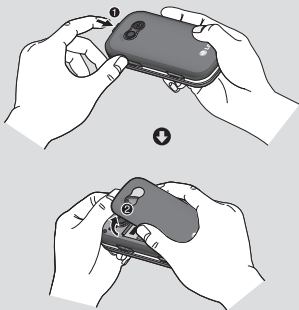

## 2 取出电池

抬起电池底边，小心将电池从电池室取出。

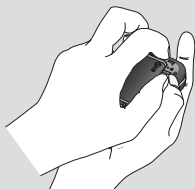


**⚠ 警告：**手机开机时，不要取出电池，这可能会损坏手机。

## 3 安装 SIM 卡


将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 SIM 卡，请从顶部滑动，从弹夹中取出。

**⚠ 警告：**滑盖打开时请不要插入 SIM 卡，否则可能损坏手机和 SIM 卡。

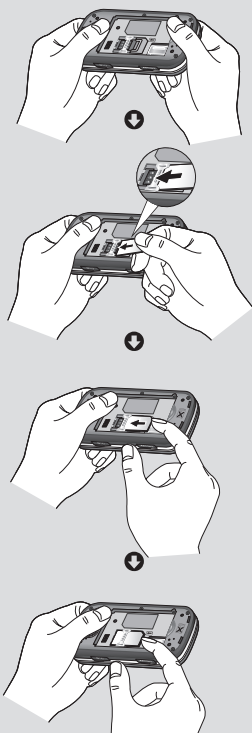

#### 4 安装电池

先将电池顶端插入电池室顶部。  
请确保电池触点与手机端子对齐。  
向下按电池底部，直至电池卡入  
到位。

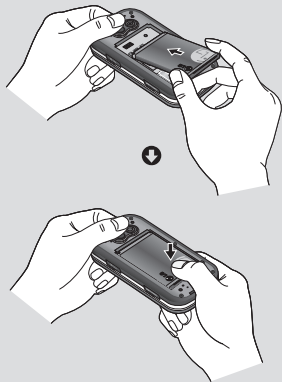

01

02

03

04

05

06

07


08



# 安装 SIM 卡和电池

## 5 更换电池盖

插入电池盖底部，然后推入，直到卡入到位。

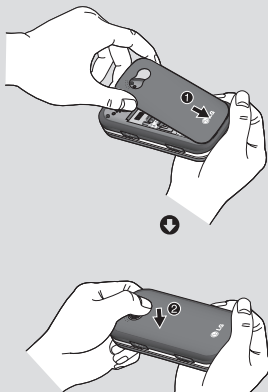

## 6 充电

推开 KS360 侧面的充电器插槽盖。插入充电器并插入电流插座。只要屏幕上显示“已完全充电”信息，KS360 充电才完成。

**警告：**如果手机置于柔软物体之上，请不要充电。应将手机放在完全通风的位置充电。




# 储存卡

## 安装储存卡

使用储存卡，可以扩展手机的可用储存空间。

**提示!** 储存卡是可选配件。

打开储存卡插槽。将储存卡滑入插槽顶部，直到卡卡到位。确保金色接触区域面朝下。

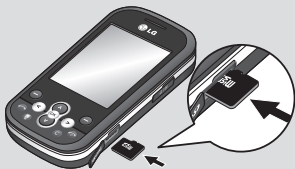

## 拔出储存卡

打开插槽盖，向手机内侧推动储存卡并快速释放，然后小心取出储存卡，如下图所示：



## 将储存卡格式化

如果尚未将储存卡格式化，您需要先格式化才可以开始使用。

- 1 从待机屏幕选择 **OK** 然后选择**设置**。
- 2 选择**储存器状态**，然后选择**外部储存卡**。

**警告:** 将卡格式化时，所有内容将被擦除。如果不想失去储存卡中的数据，请先备份。

01

02

03

04

05

06

07

08

# 菜单地图



## 游戏和应用程序

- 1 游戏
- 2 应用程序
- 3 网络设置文件



## 通话记录

- 1 所有通话
- 2 未接来电
- 3 拨电
- 4 已接来电
- 5 通话时间
- 6 通话费用
- 7 数据资料



## 电话簿

- 1 搜索
- 2 新联系人
- 3 快速拨号
- 4 群组
- 5 全部复制
- 6 全部删除
- 7 设置
- 8 资料



## 多媒体

- 1 MP3 播放机
- 2 照相机
- 3 录像机
- 4 FM 收音机
- 5 录音机



## 信息

- 1 新信息
- 2 收件箱
- 3 电邮箱
- 4 草稿箱
- 5 发件箱
- 6 已发送
- 7 收听语音邮件
- 8 小区广播信息
- 9 模板
- 0 设置



## 我的文档

- 1 图像
- 2 声音
- 3 视频
- 4 文件
- 5 其它
- 6 外部存储卡  
(需插入记忆咭)



## 情景模式

- 1 通用
- 2 静音
- 3 仅振动
- 4 户外
- 5 耳机



## 记事本

- 1 日历
- 2 备忘录



## 工具

- 1 闹钟
- 2 计算器
- 3 秒表
- 4 单位对换器
- 5 世界时钟
- 6 SIM 卡服务  
(视乎不同网络商)



## 浏览器

- 1 主页
- 2 Yahoo!
- 3 书签
- 4 输入网址
- 5 网页浏览记录
- 6 已保存的页面
- 7 设置
- 8 资料



## 连接性

- 1 蓝牙
- 2 网络
- 3 USB 连接



## 设置

- 1 日期和时间
- 2 语言
- 3 显示
- 4 快捷键
- 5 呼叫
- 6 保安设置
- 7 飞行模式
- 8 省电
- 9 重新设置
- 0 储存器状态

# 待机屏幕

## 状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等资料，以及告知您是否启用了蓝牙。

下表描述了您可能在状态栏中看到的不同图标的涵义。

图标	描述
	网络信号强度 (指示栏数不同)
	无网络信号
	漫游服务
	已启动蓝牙
	已连接 WAP 服务
	已设定闹钟
	新信息
	新语音信息
	正在使用“通用”情景模式

图标	描述
	正在使用“静音”情景模式
	正在使用“仅振动”情景模式
	正在使用“户外”情景模式
	正在使用“耳机”情景模式
	剩余电量
	电池电量空

01

02

03

04

05



06



07

08

# 通话


## 拨电

- 1 确保手机已开机。
- 2 拨打电话的最快捷方式是按  激活触摸模式。如果按此键，您可以点触屏幕以输入要呼叫的手机号码。或者，您可以打开滑盖，然后使用键盘。要删除数字，请按  或返回箭头。


- 3 按  开始通话。
- 4 要结束通话，请按  。


**提示！** 要输入 + 以拨打国际电话，请按住 0。

## 接听和拒绝通话


电话响时，选择接受或选择  接听来电。

电话响后，按相机键，然后选择“静音”以静音。如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。

按  或选择拒绝以拒接来电。

**提示！** 您可以更改手机上的设置以不同方式接听来电。选择 ，选择**设置**，然后选择**呼叫**。选择**接听模式**，从**滑开滑盖、按任何键**或**仅接受键**中选择。

## 从电话簿拨电

- 1 在菜单中选择“电话簿”，然后选择“搜索”。
- 2 使用键盘，输入您要呼叫的联系人首字母，然后滚动到所需联系人。
- 3 按  开始通话。


## 调整通话音量

要调节通话过程中的音量，请按手机左侧的音量键。


## 快速拨号

您可以为经常呼叫的联系人分配快速拨号号码。

- 1 按“菜单”，选择“电话簿”，然后选择“快速拨号”。
- 2 语音信箱设为快速拨号 1 且无法更改。使用导航键并选择分配。
- 3 此时将打开您的地址簿。使用导航键选择您想分配为该数字的联系人，然后选择确定。

要呼叫快速拨号号码，按住分配的数字，直到屏幕上显示该联系人。将自动启动呼叫，无需再按 。

## 查看通话记录

按**菜单**或 , 选择**通话记录**。选择以查看：

**所有通话** - 查看所有拨电、已接来电和未接来电的完整列表。

**未接来电** - 查看您没接到的所有通话的列表。

**拨电** - 查看所有已拨打的号码的列表。

**已接来电** - 查看打给您的所有号码的列表。

**通话时间** - 查看通话时长的详细资料，包括已接来电和已拨电。

**通话费** - 查看“最后通话”或“所有通话”的相关费用。此服务取决于网络，某些运营商不支持此服务。

**数据资料** - 查看所有已接收和发送数据的字节数。

**提示!** 从任意通话记录中选择**选项**，然后选择**删除**删除选定的或所有录制项目。

**提示!** 使用导航键，突出显示单个通话条目以查看该通话的日期和时间。要查看通话时间，请选择“查看”。

# 通话

## 使用呼叫转移

- 1 按**菜单**或 **OK**，选择**设置**，然后选择**呼叫**。
- 2 选择**呼叫转移**。
- 3 选择转移通话的情况：所有语音通话、无法接听时，无人接听时或无法接通时。
- 4 选择**启动**，然后选择转移至语音邮箱、其它号码或常用号码。
- 5 输入转移号码或从电话簿搜索并选择转接号码。

**备注：**转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。


**提示！**要关闭所有通话转接，请从“呼叫转接”菜单中选择“全部取消”。

## 使用呼叫阻截

- 1 按**菜单**或 **OK**，选择**设置**，然后选择**呼叫**。
- 2 选择**呼叫阻截**。
- 3 选择以下七个选项中的一项或所有项：
  - 所有拨电
  - 国际拨电
  - 主国以外的国际漫游拨电
  - 所有来电
  - 国际漫游时的来电
  - 取消所有阻截
  - 更改密码
- 4 选择“启动”，然后输入呼叫阻截密码。请与您的网络运营商联系，了解有关此服务的信息。

**提示！**从**通话**菜单中选择**固定拨号号码**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的 PIN2 码。仅可以使用手机拨打此号码列表中的号码。

## 更改通话设置

1 按**菜单**或 ，选择**设置**，然后选择**呼叫**。

2 在此，您可以修改以下设置：

**呼叫转移** - 选择是否要转移呼叫。转接通话会产生相应费用。

**呼叫阻截** - 选择何时限制呼叫。

**固定拨号号码** - 选择可从此手机拨出的号码列表。

**接听模式** - 选择是使用接受键、按任意键还是滑开手机时接听电话。

**发送本机号码** - 选择当您呼叫对方时是否显示您的号码。

**呼叫等待** - 有等待呼叫时会收到通知。

**分钟提示** - 选择**打开**，在通话过程中每一分钟将听到一次提示音。

**自动重拨** - 选择手机将在连接失败的情况下进行自动重拨。

**发送双音多频音** - 在通话过程中，您可以发送显示号码的DTMF（双音多频）铃声。当您呼叫诸如银行服务等自动系统时，此选项有助于您输入密码或帐户号。



# 电话簿

## 搜索

- 1 从主菜单中选择“电话簿”，然后选择“搜索”。
- 2 使用键盘或触式键盘输入您要呼叫的联系人首字母。
- 3 要在联系人及其不同电话号码间移动，请使用导航键。

## 新联系人

- 1 从菜单屏幕或从待机屏幕选择电话簿，然后选择添加。
- 2 选择将新联系人保存到**手机**还是**SIM 卡**。
- 3 在提供的字段中输入所有资料，然后选择**保存**。

或者，使用更快捷的方式…

- 1 在待机屏幕上输入要保存的号码，然后选择**选项**。
- 2 选择**保存**或**添加至现有联系人**。
- 3 输入以上相关资料，然后选择**保存**。

## 联系人选项

查看联系人时，您可以执行多项操作。以下显示如何进入并使用“选项”菜单：

- 1 打开您要使用的联系人。请参阅上面的搜索。
- 2 选择**选项**以打开选项列表。

在此，您可以：

**修改** – 更改联系人的任何详细资料。

**新信息** – 向联系人发送信息。如果联系人有电子邮件地址，请选择是发送信息还是电邮。

**发送方式** – 将联系人的资料作为名片发送给其他人。选择发送方式：作为文本信息、多媒体信息、蓝牙或电邮。

**删除** – 删除联系人。如果确定，请选择是。

**新联系人** – 添加新联系人。

**多项删除** – 标记多个联系人以删除。

**复制至 SIM 卡/手机** – 选择是移动或复制到 SIM 卡还是手机（取决于联系人的初始保存位置）。

## 将联系人添加到群组

您可以将联系人保存到群组，例如，将工作同事和家人分开。手机中已设定多个群组，包括：**家人、朋友、同事、重要人士、群组 1、群组 2 和无群组**。

- 1 选择**电话簿**，然后选择**群组**。
- 2 移动到您要添加联系人的群组，选择**查看**，然后选择**添加**。
- 3 将打开您的电话本。移动到您要添加到群组的联系人，选择 ，然后选择**完成**。
- 4 如果确定，请选择是。

**提示！** 您可以为群组指定来电铃声或图标。选择您要为其指定来电铃声或图标的群组，选择**选项**，然后选择所需项目。

## 为群组重命名

您可以为群组重命名以满足您的要求。

- 1 选择**电话簿**，然后选择**群组**。
- 2 选择您要重命名的群组。
- 3 选择**选项**，选择**重命名**，然后输入新群组名称。
- 4 选择**保存**。

**备注：**您仅可以将联系人分配到群组或为联系人添加保存在手机内存（不是 SIM 卡）中的图片。

## 为联系人添加图片

您可以为联系人添加图片，更改联系人在电话簿中的显示方式。

- 1 选择**电话簿**，然后选择**设置**。
- 2 选择**查看选项**，然后选择**附加图片**。
- 3 然后返回电话簿，选择您要为其添加图片的联系人。
- 4 选择**选项**，然后选择**修改**。
- 5 向下移动到**图片**部分。选择**选项**，然后选择**选择或新图像**。如果选择**选择**，您可以选择保存在手机内存的图像。如果选择**新图像**，将打开照相机取景器，以便您为联系人拍照。
- 6 选择**保存**。

# 电话簿

## 将电话簿复制到 SIM 卡

您也可以选择将电话簿从 SIM 卡复制到手机，或从手机复制到 SIM 卡。

- 1 选择**电话簿**，然后选择**全部复制**。
- 2 选择复制电话簿：**SIM 卡至手机**或**手机至 SIM 卡**。
- 3 选择保留还是删除原始记录。
- 4 如果确定，请选择**是**。

## 删除所有联系人

- 1 选择**电话簿**，然后选择**全部删除**。
- 2 选择从 SIM 卡或手机删除联系人。
- 3 如果确定，请选择**是**。
- 4 输入密码，密码默认为 0000，然后选择确定。


## 查看资料

选择**电话簿**，然后选择**信息**。在此，您可以查看**服务拨号号码**、**本机号码**和**名片**。



**提示！**如果您尚未创建名片，**名片**屏幕将为您提供创建名片的选项。选择**新建**，输入所需的详细资料。选择**保存**。

# 信息


## 信息

KS360 包含与短信（文本信息服务）、彩信（多媒体信息服务）、电子邮件，以及网络服务信息相关的功能。按  然后选择**信息**即可。

## 发送信息

- 1 按**菜单**或 , 选择**信息**, 然后选择**新信息**。或者, 另一种快速方式是在滑盖打开时按键盘上的 。
- 2 选择**信息**以发送文本或多媒体信息。（如果要发送电子邮件, 请参阅第 24~25 页。）
- 3 此时将打开新信息编辑器。  
信息编辑器是一款直观易用的工具, 它将短信和彩信组合在一起, 可在短信模式和彩信模式间轻松切换。信息编辑器的默认设置为短信模式。
- 4 使用键盘输入信息。有关如何输入文本的详细信息, 请参阅第 24 页。

- 5 选择**选项**, 然后选择**插入**以添加**图像、声音、视频、符号、文本模板、情绪图标、姓名和号码、新幻灯片、主题**或**更多**（**联系人/我的名片/日程表**）。
- 6 选择“**发送至**”。
- 7 输入电话号码, 或选择**选项**并选择**电话簿或近期列表**以打开联系人列表。您可以添加多个联系人。
- 8 选择**发送**。

 **警告:** 如果在信息编辑器中添加了**图像、声音、视频、新幻灯片或主题**, 将自动切换到彩信模式, 您将需要支付相应的费用。

01

02

03

04

05

06

07


08


# 信息

## 输入文本

您可以使用手机键盘输入字母数字字符。例如，在电话簿中储存姓名、编写短信、在日历中创建日程表等，都需要输入文本。手机中可以使用以下文本输入法：ABC 手动模式和 123 模式。（设定不同语言会影响输入法模式）。

**备注：**某些字段可能只允许一种文本输入模式（如在地址簿字段输入电话号码）。

要在文本输入字段中输入符号，请按  键，选择一个符号，然后选择“确定”。使用导航键滚动以显示更多符号选项。

按  以空格结束每个单词。

要删除字符，请按  键。


## 使用键盘文本输入模式

需要输入文本时，如写信息时，键盘将预设为 ABC 模式（视乎不同语言）。输入号码时，如拨打电话时，键盘数字键将默认为数字。

在 ABC 模式下，您可以先按  然后输入所需号码。


## 设立电子邮件

使用 KS360 中的电子邮件，您可以在旅途中随时与他人保持联系。设立 POP3 或 IMAP4 电子邮件帐户简单快捷。

- 1 按 **菜单** 或 ，选择 **信息**，然后选择 **设置**。
- 2 选择 **电邮**，然后选择 **电邮帐户**。
- 3 选择新建。
- 4 输入电邮地址。

## 使用新帐户发送电子邮件

要发送/接收电子邮件，您应先设立电子邮件帐户（如上所述）。

- 1 选择 ，选择 **信息**，然后选择 **新信息**。
- 2 选择电邮，此时将打开新电子邮件。
- 3 写主题，然后选择 **确定**。
- 4 使用键盘输入信息。
- 5 选择 **选项**，然后选择附件以添加：**图像、声音、视频、文档、联系人、我的名片和日程表**。

6 按**发送**，输入收件人地址或选择**选项**，然后选择**电话簿**以打开联系人列表。

7 按**发送**，您的电子邮件将被发送。

## 信息文件夹

按**菜单**或 **OK**，然后选择**信息**。您可以辨认 KS360 中的文件夹，完全无需进行说明。

**收件箱** - 您接收到的所有信息将放置在收件箱中。在此，您可以进行回复、转发等操作，有关详情，请参阅以下内容。

**电邮箱** - 包含您的所有电子邮件。选择您要使用的帐户，然后选择索取。KS360 将连接到您的电子邮件帐户并索取新邮件。

**草稿箱** - 如果您来不及写完一条信息，您可以将信息保存在此。

**发件箱** - 这是发送信息时的临时存储文件夹。

**已发送** - 您发送的所有信息将放置在“已发送”文件夹中。

**收听语音邮件** - 您可以访问语音邮箱（如果网络提供）。当收到新的语音信息时，待机屏幕上将显示相应符号。

**小区广播信息** - 接收自运营商的所有小区广播信息和更新。

**模板** - 先写好的有用信息列表，用于快速回复。

## 管理信息

您可以使用**收件箱**管理信息。

1 按**菜单**或 **OK**，选择**信息**，然后选择**收件箱**。

2 选择**选项**，然后选择：

**删除** - 删除选定的信息。

**回复** - 回复选定的信息。

**转发** - 将选定信息发送给其他人。

**以电话回复** - 拨电给发件人。

**链接性视图/一般视图** - 选择信息显示在您的收件箱中的方式。

**资料** - 查看有关信息的详细资料，例如，发送时间。

**复制/移动** - 您可以选择复制或移动信息。选择可将选择的信息复制或移动到 SIM 卡或手机。

**多项删除** - 删除选择的信息。

**删除所有已读的** - 将删除所有已阅读的信息。

01

02

03

04

05

06

07

08

# 信息


**全部删除** - 您可以选择删除所有信息或仅删除文本信息。

如果看到信息无 SIM 卡信息储存空间，您应从收件箱中删除一些信息。

如果看到信息无信息储存空间，您可以删除信息或保存的文件以腾出空间。

## 使用模板


为您最常使用的文本信息和多媒体信息创建模板。手机中已存有多个模板，您可以根据需要进行修改。

- 1 选择**菜单**或 ，选择**信息**，然后选择**模板**。
- 2 选择**文本**或**多媒体**。随后，您可以选择**选项**，然后选择**修改**更改现有模板；或选择**选项**以添加新模板或删除模板。
- 3 要发送模板，请选择您要发送的模板，选择**选项**，然后选择**发送方式**。
- 4 选择您要发送模板的方式：信息、蓝牙信息或电邮。
- 5 选择一个联系人，然后选择**发送**。

## 更改文本信息设置

KS360 信息设置已预定，因此，您可以立即发送信息。

如果要更改设置，可以使用**设置**选项执行此操作。

按**菜单**或 ，选择**信息**，然后选择**设置**和**文本信息**。您可以更改：

**信息类型** - 将文本转换为语音、传真、传呼、X.400、电子邮件或 ERMES。

**有效期** - 选择信息在信息中心中的最常保存时间。

**发送报告** - 选择可接收信息已发送确认信息。

**回复计费** - 选择对回复信息收件人计费。

**信息中心号码** - 输入信息中心的号码。

**字符编码** - 选择字符编码方式。这将影响信息大小并因此产生数据费用。

**发送长文本为** - 当您在信息字段中输入的文本超过 2 页时，请选择是以短信还是彩信方式发送信息。

**载体设定** - 选择是通过 GSM 还是 GPRS 发送信息。

## 更改多媒体信息设置

KS360 信息设置已预定，因此，您可以立即发送信息。

如果要更改设置，可以使用**设置**选项执行此操作。

按**菜单**或 **OK**，选择**信息**，然后选择**设置**和**多媒体信息**。

您可以更改：

**幻灯片放映时间** - 选择幻灯片在屏幕上将显示多长时间。

**优先级** - 选择多媒体信息的优先级级别。

**有效期** - 选择信息在信息中心中的最常保存时间。

**发送报告** - 选择是否允许要求发送报告。

**阅读报告** - 选择是否允许发送已读报告。

**自动下载** - 选择是自动还是手动下载多媒体信息，取决于您是在当地还是漫游。

**网络设置文件** - 选择运营商特定网络设置文件以发送多媒体信息。

**允许的信息类型** - 选择允许的多媒体信息类型。

## 更改电子邮件设置

您可以调整电子邮件设置以满足您的个人需要。

1 按**菜单**或 **OK**，选择**信息**，然后选择**设置**。

2 选择电邮，然后，您可以调整以下设置：

**电邮帐户** - 您可以设置电子邮件帐户。

**接入点** - 您可以设置电子邮件接入点。


**索取的间隔时间** - 选择 KS360 检查新电子邮件的频率。

**签名** - 创建电子邮件签名并打开此功能。



# 信息

## 更改其它设置

按**菜单**或 ，选择**信息**和**设置**，然后选择：

**语音邮件中心号码** - 您的语音邮件中心号码保存在此。有关其提供的服务的详细资料，请联系您的网络运营商。


**服务信息** - 更改服务信息设置。

**小区广播信息** - 选择小区广播的接收状态、信息提示和语言。

**保存文本信息** - 选择要将文本信息保存到手机内存还是外部储存卡。

# 多媒体


## 快速拍照


- 1 按下手机左侧的相机键。屏幕上将显示相机取景器。
- 2 水平放置照相机，将镜头对准要拍摄的物体。
- 3 使用相机定位以便您看到要拍摄的物品。
- 4 完全按下  或相机键拍摄照片。


**备注：**您也可以从待机屏幕进入照相机菜单。按 ，选择**多媒体**，向下移动并选择**照相机**以打开取景器。


## 拍照前


按  访问这些选项：

 **自拍计时器** - 自拍计时器允许您设定按相机键后的延时。可选择 3, 5 或 10 秒。适合拍摄群组照用途。

 **连拍** - 能自动迅速地拍摄高达多张照片，适合拍摄移动性物体和运动场地使用。

 **白平衡** - 白平衡确保照片中的白色显示真实。要正确调整照相机的白平衡，您需要确定光照条件。从**自动、日光、白炽、阴天、荧光效果**中选择。

 **色彩效果** - 从四个色彩效果选项中选择：关（正常/彩色），棕褐色，单色（黑白）或反色。

 **曝光值** - 如果拍摄近距离图像物体，请启用超微距拍摄模式。

01

02

03

04

05

06

07


08


# 多媒体


## 拍照后


拍好的照片将显示在屏幕上。图像名称在屏幕底部显示，屏幕右侧将显示 6 个选项。

**确定** - 选择可以立即拍摄另一张照片。将保存您的当前照片。

 **新图像** - 选择可以立即拍摄另一张照片。将保存您的当前照片。

 **设定为** - 选择可以打开一个子菜单，您可以选择将图像设定为**墙纸**或**图像 ID**。

 **发送方式** - 选择以**多媒体信息**、**蓝牙**或**电邮**形式发送照片。有关发送信息的信息，请参阅第 23 页。

 **相册** - 选择可以查看相册中的其它照片。将保存您的当前照片。有关查看保存的照片的信息，请参阅第 31 页。

**删除** - 选择以删除您刚拍摄的照片，选择是确认删除。取景器将出现。

## 使用快速设置

选择“选项”访问快速设置选项。这包括适用于拍照的各种选项。

**摄像机** - 从相机模式转换为摄像机模式。

**显示** - 选择“标准”或“干净”模式。

**解析度** - 请参阅第 31 页的**更改图像大小**。

**品质** - **普通**、**精细**和**超精细**之间转换。品质越精细，照片将越清晰，同时，文件更大，这意味着内存可储存的照片越少。

**快门音** - 从三种快门声音中选择一种。

**保存至** - 选择是将照片保存在手机内存或外部储存卡。


**恢复初始设置** - 选择是以重新设置手机，恢复为原始照相机设置。

## 更改图像大小

您可以更改照片大小以节省储存空间。像素越高，文件越大，同时意味着将占用更多内存。如果要在手机内保存更多图片，您可以更改像素大小，使文件更小。

- 1 按**选项**，从工具栏中选择**解析度**。
- 2 从 4 个数值选项中选择像素值（320x240，640x480，1280x960，1600x1200）。
- 3 选择您要使用的像素，选择**确定**。

## 查看保存的照片

- 1 您可以通过照相机模式或从待机屏幕访问保存的照片。从取景器中选择相册。您应该在待机屏幕中按“菜单”或 ，然后选择“我的文档”和“图像”。
- 2 屏幕上将显示您的图片库。
- 3 使用导航键选择您要查看的照片，然后选择“查看”放大。

## 设定照片为墙纸或图像 ID


使用导航键从图片库中选择一个图像，然后选择“选项”和“设置”将选定图像设为墙纸或联系人的图像编号。在您将照片设为图像编号时，可以选择照片的任何部分进行使用。

**备注：**图像 ID 仅可添加到手机（不是 SIM 卡）中保存的联系人。

# 多媒体

## 快速录像


- 1 快速按下手机左侧的相机键。
- 2 选择摄像机。
- 3 将相机镜头对准要拍摄的物体。
- 4 按下手机左侧的相机键开始录制。
- 5 **REC** 出现在取景器的右下角，计时器将显示视频长度。
- 6 要暂停视频，请选择**暂停**，要恢复录制，请选择**继续**。
- 7 选择**停止**可以停止录制。


**备注：**您也可以从待机屏幕进入**录像机**功能。按  并选择照相机，向下滚动并选择摄像机以打开取景器。


## 录像后


视频名称在屏幕底部显示，屏幕左侧将显示 6 个选项。

**确定** - 选择可以立即拍摄另一段视频。将保存您的当前照片。

 **新视频** - 选择可以立即拍摄另一段视频。将保存您的当前视频。

 **播放** - 选择可播放已录制的视频。

 **发送方式** - 选择以**多媒体信息**或电邮形式发送视频。有关发送信息的信息，请参阅第 23 页。

 **相册** - 选择可以查看相册中的其它视频剪辑。将保存您的当前视频剪辑。有关观看保存的视频的信息，请参阅第 33 页。

**删除** - 选择以删除您刚录制的视频，选择“是”确认。此时将出现取景器。

## 了解取景器

**备注：**您可使用手机右侧的音量键，调整缩放。

## 使用快速设置

选择**选项**以打开快速设置选项。这包括适用于录制视频的各种选项。

**照相机** - 从摄像机模式转换为静态相机模式。

**显示** - 选择“标准”或“干净”模式。

**解析度** - 如果要在手机中保存更多视频，请更改像素大小，使文件更小。有四个选项可供视频选择：



**176x144, 320x240。**

**品质** - 超精细、精细、普通

**保存至** - 选择将视频剪辑保存至手机内存或外部储存卡。

**恢复初始设置** - 选择**是**重新设置手机，恢复为初始录像机设置。

## 观看保存的视频

- 1 您可以从录像机模式或待机屏幕访问保存的视频。从取景器中选择相册。从待机屏幕中按菜单或 ，然后选择**我的文档**和**视频**。
- 2 屏幕上将显示您的图片库。
- 3 使用导航键选择您要查看的视频，然后按  观看。


## 观看视频时调整音量

要在播放视频时调整音频音量，请使用手机左侧的音量键。音量显示在视频的左下方。

# 多媒体

## MP3 播放机

LG KS360 拥有内置的 MP3 播放机，因此，您可以播放所有喜爱的音乐。

要访问音乐播放器，请按“菜单”， 选择“多媒体”，然后选择音乐播放器。

您可访问：

**所有歌曲** - 包含手机里的所有歌曲。

**我的播放列表** - 包含所有您创建的播放列表，近期播放和喜爱的歌曲。







**设置** - 调整您的音乐设置。

## 将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或同步数据电缆。使用蓝牙传输：

- 1 请确保双方装置都已打开蓝牙，对方可见。
- 2 选择另一个装置上的音乐文件，选择通过蓝牙发送。
- 3 文件发出后，您必须选择是在您的手机上接受它。
- 4 文件将显示在**所有歌曲**中。

## 播放歌曲

- 1 按**菜单**或  选择**多媒体**，然后选择 **MP3播放机**。
- 2 选择要播放的歌曲。选择 。
- 3 选择  暂停歌曲。
- 4 选择  以跳到下一首歌曲
- 5 选择  以跳到上一首歌曲。
- 6 选择  以停止音乐并返回所有歌曲菜单。

**提示!** 要在聆听音乐时更改音量，请使用手机左侧的音量键，或导航键的上、下按键。

## 播放音乐时使用选项

选择**选项**，然后从下列内容中选择：

**最小化** - 隐藏 MP3 播放机屏幕，这样，在音乐播放时，您可以像往常一样使用手机。

**查看播放列表** - 查看您当前正在聆听的播放列表。

**搜索** - 从手机的歌曲列表中搜索曲目。

**添加到播放列表** - 将当前曲目添加到播放列表。



**设定为** - 将当前曲目设定为铃声或信息提示音。

**资料** - 您可以查看有关正在收听的MP3文件的详细资料。



**设置** - 更改均衡器或播放模式或打开设定随机播放以调节音乐效果。

## 创建播放列表

您可以从**所有歌曲**文件夹中进行选择，以创建自己的播放列表。

- 1 按  然后选择**多媒体**。
- 2 选择 **MP3 播放机**，然后选择**我的播放列表**。
- 3 按“新建”，输入播放列表名称，然后按“保存”。
- 4 此时将显示**新建播放列表**文件夹。选择要包括在播放列表中的所有歌曲：移动到这些歌曲，然后选择 。
- 5 选择保存以存储播放列表。


## 播放播放列表

- 1 按**菜单**或  然后选择**多媒体**。
- 2 选择 **MP3 播放机**，然后选择**我的播放列表**。
- 3 选择要播放的播放列表，选择**查看**，然后选择 。

## 编辑播放列表

您可能随时想要向播放列表添加新歌曲或从中删除歌曲。

如果要管理播放列表，您可以使用“选项”菜单编辑。

- 1 按**菜单**或  然后选择**多媒体**。
- 2 选择 **MP3 播放机**，然后选择**我的播放列表**。
- 3 移动到您要修改的播放列表，选择**查看**，然后选择**选项**从以下选项选择：

**播放** - 您可以播放选定的音乐。

**添加** - 使用此选项，您可以向播放列表添加歌曲。

**删除** - 从播放列表中删除歌曲。选择“是”确认。

**在播放列表中向上/向下移动。**




# 多媒体

**多项删除** - 从播放列表中删除选定的歌曲。

**全部删除** - 从播放列表中删除所有歌曲。

**资料** - 查看播放列表信息。

## 删除播放列表

- 1 按**菜单**或  然后选择**多媒体**。
- 2 选择**MP3播放机**，然后选择**我的播放列表**。
- 3 移动到您要删除的播放列表，然后选择**选项**。
- 4 选择**全部删除**，然后选择**是**确认。

### 备注：

由于安装了数字版权管理 (DRM) 系统，您从互联网下载或通过多媒体信息接收的某些媒体内容可能包含一个“购买权限”菜单，购买后方可访问。您可以从对内容具有所有权的网站获取购买版权的键。

音乐的版权受国际条约和国家版权法保护。可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。请查看有关使用此材料的适用国家的国家立法。

## 使用 FM 收音机


LG KS360 拥有 FM 收音机功能，以便您转到喜爱的电台收听无线广播。

**备注：**要收听收音机，您需要插入耳机。将耳机插入耳机插槽（与插入充电器的插槽相同）。


## 搜索电台

您可以手动或自动微调电台。搜索后，它们将保存至特定频道编号，这样，您就不用重复进行微调。您可以在手机中最多保存 12 个频道。

### 自动微调：

- 1 按**菜单**或  选择**多媒体**，然后选择**FM 收音机**。
- 2 选择**选项**，然后选择**自动微调**，然后选择**是**。
- 3 每次找到一个电台时，KS360 将询问您是否保存。如果要保存该频道，请选择**是**，否则，请选择**否**。手机将自动为您选择要保存的电台分配一个频道编号。


手动微调:

- 1 按**菜单**或  选择**多媒体**, 然后选择**FM 收音机**。
- 2 选择您要保存电台的频道编号, 然后选择**修改**。
- 3 要进入电台, 您可以使用导航键搜索, 也可以使用键盘输入频率, 然后选择**保存**。


**备注:** 您也可以修改保存在频道编号中的电台。

**提示!** 要提高接收品质, 请伸展耳机线, 它具有收音机天线的功能。

## 重新设定频道

- 1 按**菜单**或  选择**多媒体**, 然后选择**FM 收音机**。
- 2 选择**选项**, 然后选择**重设频道**。选择**是**确认重设。每个频道的开始频率将返回为 87.5Mhz。

## 收听收音机




- 1 按**菜单**或  选择**多媒体**, 然后选择**FM 收音机**。
- 2 选择您要收听的电台的频道编号。

**备注:** 您可以通过内置扬声器收听收音机。选择**选项**, 选择**收听方式**, 然后选择**扬声器**。

## 使用录音机

使用录音机录制语音备忘录或其它声音。

### 录制语音备忘录

- 1 按**菜单**或  选择**多媒体**, 然后选择**录音机**。
- 2 按  开始录音。
- 3 选择**暂停**暂停录音。
- 4 选择**停止**结束录音。
- 5 选择  收听录音。

**备注:** 选择**选项**, 然后选择**声音**可以收听保存的所有语音备忘录。


### 发送录音

- 1 完成录音后, 请选择**选项**。
- 2 选择**发送方式**, 然后从**多媒体信息**、**蓝牙**或**电邮**中选择。如果选择**信息**或**电邮**, 录音将被添加到信息中, 您可以照常撰写或发送信息。如果选择**蓝牙**, 手机可能提示您打开蓝牙。

**提示!** 如果要將录音作为信息发送, 开始录音前, 请选择**选项**, 选择**录音模式**, 然后选择**多媒体信息**。此操作将确保录音适合作为信息发送。

# 我的文档

您可以将任意多媒体文件储存到手机内存中，这样，您可以轻松使用所有图片、声音、视频和游戏。您也可以将文件保存到储存卡中。使用储存卡的优点是：您可以释放手机内存的储存空间。

所有多媒体文件保存在**我的文档**中。选择**菜单**或  然后选择**我的文档**以打开文件夹列表。

## 图像

“图像”包含一个文件夹，其中包括预先加载到手机中的默认 Flash 文件、您下载的图像以及手机相机拍摄的图像。

## 图像选项菜单

图像中可用的选项取决于您选择的图像类型。对于使用手机相机拍摄的照片，所有选项均可用。对于默认图像，以下选项可用：查看、设定为、文件资料、幻灯片放映、排序方式和**查看样式**。

在“图像”文件夹中，选择“选项”以显示选项列表。

**删除** - 删除选定的图像。

**设定为** - 将选定图像设定为墙纸或图像 ID。

**发送方式** - 将选多媒体信息、蓝牙或电子邮件向朋友发送选定的图像。

**备注：**在通过多媒体信息发送图像前，可能需要调整其大小。

**文件 - 修改图像、重命名、制作动画或查看信息**（名称、大小、日期、分辨率、类型和版权所有）。如果插入了外部储存器，将另外显示两个选项：移动至外部储存卡和复制至外部储存卡。

**打印方式** - 通过蓝牙或 Pictbridge 打印图像文件。

**幻灯片放映** - 观看图像的幻灯片显示。有关创建幻灯片的信息，请参阅第 41 页。

**新文件夹** - 在主图像文件夹中创建一个新文件夹。


**标记/取消标记** - 选择多个要删除的图像。

**全部删除** - 删除“图像”文件夹中的所有图片。


**排序方式** - 按日期、类型或名称排列图像。

**查看样式** - 更改您查看图片的方式。


## 发送照片

- 1 选择**菜单**或  然后选择**我的文档**。
- 2 移动并选择**图像**。
- 3 选择图片并选择**选项**。
- 4 选择**发送方式**，然后从**多媒体信息**、**蓝牙**或**电邮**中选择。
- 5 如果选择**多媒体信息**或**电邮**，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将图片发送至的装置。


## 管理图像

- 1 按**菜单**或  然后选择**我的文档**。
- 2 选择**图像**。
- 3 选择**选项**，然后选择**排列方式**。
- 4 从**日期**、**类型**或**名称**中选择。

## 删除图像

- 1 按  然后选择**我的文档**。
- 2 选择**图像**。
- 3 选择图像并选择**选项**。
- 4 选择“删除”然后按“是”确认。


## 删除多个图像

- 1 按**菜单**或  然后选择**我的文档**。
- 2 选择**图像**。
- 3 依次选择**选项**、**标记/取消标记**和**删除**。
- 4 在每个图像旁边会显示一个框。选择每个图像，然后选择  进行标记。要取消标记图像，请再次选择  以取消框中的勾选。或者，您可以选择**选项**，然后选择**全部标记**或**取消所有标记**。
- 5 标记了所有对应的框后，选择**删除**并确认您要删除所有标记的图像。

# 我的文档

## 创建幻灯片

如果您要查看手机中的所有图像或浏览已存有的图像，您可以创建一个幻灯片，这样，您无需对每张图像都执行打开和关闭操作。


- 1 按**菜单**或  然后选择**我的文档**。
- 2 移动并选择**图像**。
- 3 选择您要开始放映幻灯片的照片，然后选择**选项**。
- 4 选择**幻灯片放映**，放映即开始。
- 5 按**暂停**暂停幻灯片放映，选择**退出**结束幻灯片放映并返回**图像**文件夹。

在幻灯片放映过程中，按“选项”选择完整图像或全屏显示。选择**横向**更改图像方向。

## 声音

**声音**文件夹中包含**默认声音**、录音以及下载的声音文件。在此，您可以管理、发送或将声音设定为铃音。



## 使用声音

- 1 按**菜单**或  然后选择**我的文档**。
- 2 移动并选择**声音**。
- 3 选择**默认声音**或从录音文件列表中选择。
- 4 选择声音，然后选择  以收听。
- 5 选择**选项**，选择**设定为**，然后从**铃声、铃声编号**和**信息提示音**中选择。

## 视频

**视频**文件夹显示已下载的视频以及手机中录制的视频列表。在“**视频**”文件夹中，选择选项以显示选项列表。

## 观看视频

- 1 按**菜单**或  然后选择**我的文档**。
- 2 移动并选择**视频**。
- 3 选择视频，然后选择  。

## 视频暂停时使用选项

选择选项将暂停正在播放的视频，您可以从以下选项选择：

**删除** - 删除视频。

**发送方式** - 通过多媒体资料、蓝牙或电邮向朋友发送选定的视频。

**信息** - 查看选定文件的名称、大小、日期、时间、类型和版权详细资料。

通过转动手机，您可以更改观看视频的方式。

## 发送视频剪辑

- 1 按**菜单**或  然后选择**我的文档**。
- 2 移动并选择**视频**。
- 3 选择所需视频剪辑，然后选择**选项**。
- 4 按**发送方式**，然后从**多媒体信息、蓝牙或电邮**中选择。
- 5 如果选择**多媒体信息**或**电邮**，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将视频发送到的装置。

**备注：**在通过多媒体信息发送视频前，可能需要调整其大小。某些视频可能太大，根本无法通过多媒体信息发送。

## 视频选项菜单

在“视频”文件夹中突出显示一个视频然后选择**选项**以显示下列选项列表。

**删除** - 删除选定的视频。

**发送方式** - 通过多媒体信息、电子邮件或蓝牙向朋友发送选定的视频。

**文件** - 重命名视频、将视频移动到其它文件夹或查看资料（名称、大小、日期、分辨率、类型和版权所有）。

如果插入了外部储存器，将另外显示两个选项：移动到外存卡和复制到外存卡。

**新文件夹** - 在主视频文件夹中创建一个新文件夹。

**标记/取消标记** - 选择多个视频剪辑，然后选择**删除**。

**全部删除** - 删除“视频”文件夹中的所有剪辑。

**排序方式** - 按日期、类型或名称排列视频。

# 我的文档

**自动播放下一个** - 可设置播放模式：关、重复一次和全部重复。


- **关**：播放选定的文件。
- **重复一次**：播放列表中的所有文件一次。
- **全部重复**：反复播放列表中的所有文件。

**列表视图/缩略图视图** - 更改您查看视频的方式。

## 文件

从**文档**菜单中。

## 查看文件

- 1 按**菜单**或  然后选择**我的文档**。
- 2 选择**文件**。
- 3 选择**文件**，然后选择**查看**。

## 其它

**其它**文件夹用于存储非图片、声音或视频文件。其使用方式与**文档**文件夹相同。

当您从电脑传输文件到手机时，您可能发现文件保存在**其它**而不是**文件文件夹**中。如果这样，您可以移动文件。

## 外部储存卡


如果您已插入储存卡，它将显示为**我的文档**中的一个文件夹。您的外部储存卡文件夹将分为五个文件夹：**图像、声音、视频、文件和其它**。每个文件夹将包含该类型下所有保存在储存卡而不是手机中的文件。

# 游戏和应用程序

## 游戏和应用程序

KS360 中预安装了多款游戏，供您在闲暇时娱乐。如果选择要下载其它游戏或应用程序，它们将保存到此文件夹中。


### 玩游戏

- 1 按**菜单**或  然后选择**游戏和应用程序**选择“游戏”。
- 2 您可以从站点下载游戏，然后开玩。

**备注：**连接此服务时，可能会产生额外费用。查看网络提供商要求的数据付费。


### 查看应用程序

使用**应用程序**菜单，您可以管理安装在手机上的 Java 应用程序。您还可以删除下载的应用程序。

- 1 按**菜单**或  然后选择**游戏和应用程序**选择“应用程序”。
- 2 查看并管理应用程序。

## 更改网络设置


要下载游戏，您可以使用网络设置文件连接网络。

- 1 按**菜单**或  然后选择**游戏和应用程序**选择“网络设定”。
- 2 您可以添加并编辑新网络设定。




# 记事本和工具

## 将事件添加到日历


- 1 从待机屏幕中按“菜单”或 ，按菜单选择记事本，然后选择日历。
- 2 选择您要添加事件的日期。您可以通过以下方式选择日期：使用导航键移动到日期；或选择**选项**，然后手动输入日期。
- 3 选择新建日程表然后向下滚动输入事件开始时间。向下滚动输入并输入事件结束时间。
- 4 选择是否要为事件设置**闹钟**。您可以将闹钟设为在事件开始时停止，或在事件开始前的特定时间内停止，以提醒您该事件即将开始。
- 5 输入事件**主题**。使用键盘输入字母和数字。
- 6 再次向下移动，选择事件是一次性事件，还是以每天、每周、每月或每年为间隔重复。如果事件为重复事件，您还可以向下移动以输入**截止日期**，事件将在该日期完全停止。
- 7 选择**保存**，您的事件将保存在日程表中。方形光标将会标记保存有事件的日期。

## 编辑日历事件


- 1 从待机屏幕中按“菜单”或 ，选择记事本，然后选择**日历**。
- 2 选择**选项**，然后选择所有日程表以查看所有事件列表。滚动到您要编辑的事件，然后选择**查看**。或者，在日历中选择事件发生的日期，然后选择**查看**。
- 3 选择**修改**，然后移动到您要更改的事件详细资料。进行修改，然后选择**保存**以保存修改过的事件。

**备注：**您可以从日历中删除事件：选择事件以查看，然后依次选择**选项**和**删除**。

## 共享日历事件


- 1 从待机屏幕中按“菜单”或 ，选择**记事本**，然后选择**日历**。
- 2 选择要共享的事件，然后选择**选项**。
- 3 选择发送方式，从**文本信息**、**多媒体信息**、**蓝牙**或**电邮**中选择。

## 添加备忘录

- 1 从待机屏幕中按“菜单”或 ，然后选择**备忘录**。
- 2 选择**选项**，然后备忘录，输入您的备忘录。
- 3 选择“选项”然后“保存”。
- 4 在您下一次打开备忘录应用程序时，屏幕上将显示此备忘录。

**提示！** 您可以编辑现有备忘录。选择要编辑的备忘录，选择**选项**，然后选择**编辑**。

## 设置闹钟

- 1 从待机屏幕中按“菜单”或 ，选择**工具**，然后选择**闹钟**。
- 2 选择**新建**。
- 3 输入所需闹钟时间。
- 4 选择重复类型以说明闹钟的响铃方式：**一次**、**每天**、**周一至五**、**周一至六**、**周六至日**或选择**周日**。
- 5 为闹钟选择**跟随设置文件**、**每次响铃**或**每次振动类型**。
- 6 向下移动以选择闹钟提示音。选择声音以选择新声音。
- 7 为闹钟输入名称或保留建议的名称。
- 8 选择**保存**。

**备注：**您最多可以设置 5 个闹钟。

# 记事本和工具

## 使用计算器

- 1 从待机屏幕中按“菜单”或 **OK**，选择**工具**，然后选择**计算器**。
- 2 按数字键以输入数字。
- 3 对于简单计算，选择您所需的函数（+，-，×，÷），然后按 =。
- 4 对于更复杂的计算，请选择**函数**以选择一个命令。
- 5 选择**清除**清除屏幕，以开始一个新计算。

## 使用秒表

- 1 从待机屏幕中按“菜单”或 **OK**，选择**工具**，然后选择**秒表**。
- 2 选择**开始**可启动秒表。
- 3 如果要记录时间，请选择**圈数**。最多可保存 20 圈的时间。
- 4 选择**停止**结束秒表。
- 5 选择**继续**从您停止的时间重新开始秒表，或选择重新设置重新开始计时。

## 对换单位

- 1 从待机屏幕中按“菜单”或 **OK**，选择**工具**，然后选择**单位对换器**。
- 2 选择要换算的内容：**货币、面积、长度、重量、温度、面积/容量或速度**。
- 3 选择您要输入的测量单位。左右滚动可以选择单位，然后向下移动以选择单位量。
- 4 选择您要换算的单位测量值。在下面的行中将自动显示换算值。

## 添加城市到世界时间

- 1 从待机屏幕中按“菜单”或 **OK**，选择**工具**，然后选择**世界时钟**。
- 2 从上下左右四个方向在全球范围内导航，然后选择一个洲。
- 3 选择**放大**以放大一个区域，然后选择该区域中的城市。
- 4 按“设定”。

## SIM 卡服务


此功能视 SIM 卡和网络服务而定。

如果 SIM 卡支持 SAT（例如 SIM 卡应用程序套件）服务，则此菜单将是 SIM 卡上储存的运营商特定服务的名称。

# 浏览器

轻松使用浏览器，您可以在需要时随时获取新闻、天气预报以及体育或交通信息。此外，您还可以使用浏览器下载最新音乐、铃声、墙纸和游戏。

## 访问网页

- 1 按**菜单**或  然后选择**浏览器**。
- 2 要直接访问浏览器主页，请选择**主页**。选择**输入网址**并输入所需的网址，然后选择**连接**。


**备注：**连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

## 体验雅虎！

通过选择此菜单，您可以快速便捷地网上冲浪。

## 添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 按**菜单**或  然后选择**浏览器**。
- 2 选择**书签**。此时屏幕上将出现一个书签列表。
- 3 要添加一个书签，请选择**选项**，然后选择**新书签**。输入书签名称和网址。
- 4 选择**保存**。现在，您添加的书签将显示在书签列表中。
- 5 要访问书签，只需移动到所需书签，选择**连接**即可。您将被连接到书签页面。

## 保存页面

- 1 如上所述，访问所需网页。
- 2 选择**选项**，移动到**保存**，然后选择**此页**。
- 3 选择**确定**。

01

02

03

04

05

06

07

08

# 浏览器

## 访问保存的页面

- 1 按**菜单**或 **OK** 然后选择**浏览器**。
- 2 选择**已保存的页面**。
- 3 选择所需页面，然后选择**打开**。

**提示!** 使用此菜单，您还可以删除已保存的页面。

## 查看浏览记录

- 1 按**菜单**或 **OK** 然后选择**浏览器**。
- 2 选择网络浏览记录，然后选择**确定**。
- 3 此时将显示一个您最近访问过网页的标题列表。要访问其中一个网页，移动到所需页面，然后选择连接。

## 更改网络浏览器设置


- 1 按**菜单**或 **OK** 然后选择**浏览器**。
- 2 选择**设置**。
- 3 您可以选择浏览互联网时手机的处理方式、显示方式以及资料使用方式。您可以修改以下设置：**网络设置文件、提供模式、缓存、Cookies、保安证书、显示图像、Javascript 和储存位置**。
- 4 更改设置后，请选择**确定**。

# 设置

使用此文件夹，您可以调整设置以使 KS360 更具个性化。


**备注：**有关通话设置的信息，请参阅第 19 页。

## 更改情景模式

您可以在待机屏幕上快速更改情景模式。只需使用导航键按  然后即可选择您要启动的设置文件。从**通用、静音、仅振动、户外和耳机**中选择。


## 将情景模式个人化

您可以个性化每种情景模式。

- 1 按**菜单**或  选择“设置”，然后选择“设置文件”。
- 2 选择所需情景模式，然后选择**个性化**。
- 3 对于**静音**和**仅振动**情景模式，您可以调整振动强度。对于其它情景模式，您可以更改列表中可用的所有声音和提示选项。

## 更改日期和时间

您可以设置与日期和时间相关的功能。

- 1 按**菜单**或  然后选择**设置**。
- 2 选择**日期和时间**，然后从以下列表中选择：

**设定日期** - 您可以输入当前日期。

**日期格式** - 您可以设置日期格式。（年/月/日、日/月/年、月/日/年）

**设定时间** - 您可以输入当前时间。

**时间格式** - 您可以将时间格式设为 24 小时制或 12 小时制。

**自动更新** - 选择**开**，手机将自动更新日期和时间。

## 更改语言

选择“语言”可更改您手机的文本语言。此更改还将改变语言输入模式。

01

02

03

04

05


06

07

08

# 设置

## 更改显示设置

- 1 按**菜单**或  然后选择**设置**。
- 2 选择**显示**，然后从以下选项中选择：

**墙纸** - 选择要显示在屏幕上的墙纸。

**时钟** - 选择以在待机屏幕上显示时间和日期。

**背景灯计时器** - 选择背景灯显示的持续时间。

**提示!** 背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的对手机进行充电。

**亮度** - 调整屏幕亮度。默认亮度为100%。使用左右导航键，调整亮度为40%、60%、80%或100%。

**主屏快捷键** - 选择“开”，您可以在待机屏幕中设置 4 个快捷键。快捷键使您可以一键式轻松访问常用功能。

**字体大小** - 更改以下内容的字体大小：菜单、拨号和信息。

**主题** - 快速更改屏幕整体外观。

**菜单样式** - 将菜单视图从格式视图更改为列表视图，反之亦然。

**主字体样式** - 选择主字体样式。


**拨号的字体样式** - 调整您键入电话号码时显示的字体样式。

**待机文本** - 选择待机屏幕上的显示文本。

**网络名称** - 选择是显示还是隐藏网络名称。

## 更改保安设置

更改保密设置以保护 KS360 及重要信息。

- 1 按**菜单**或  然后选择**设置**。
- 2 选择**保安设置**，然后从列表中选择下列内容：

**PIN 码要求** - 选择开机时要求的 PIN 码。

**自动键盘锁** - 选择手机处于未使用状态下多久即锁定键盘。

**手机锁** - 为以下选项输入保安密码以锁住手机：**开机时**、**更换 SIM 卡时**或**立即**。

**防盗手机追踪器** - 可设定防盗手机追踪。

**更改密码** - 更改您的保安密码、PIN1码、PIN2 码或防盗追踪密码。

## 使用航行模式

使用此功能，将航行模式设为**开**或**关**。**航行模式**被设为**开**时，您将无法拨打电话、连接互联网、发送信息或使用蓝牙。

## 使用省电模式

选择开启或关闭省电设置。

## 重新设置手机

使用手机设置汇总的“重新设置”将所有设置重置为出厂设置。要启动此功能，您需要保安密码。

## 查看储存器状态

KS360 有三种可用储存器：手机、SIM 卡和外部储存卡（您可能需要单独购买储存卡）。

您可以使用储存管理器确定每种储存器的使用方式以及查看可用空间。

按**菜单**或 **OK** 然后选择**设置**。选择储存器状态，您将看到 KS360 中内存的当前状态（公用的、预留的、SIM 卡和外部储存卡）。

**提示！** 有关插入储存卡的详情，请参阅第 13 页。

## 更改蓝牙设置

1 按**菜单**或 **OK** 选择**连接性**，然后选择**蓝牙**。

2 选择**蓝牙设置**。进行更改：

**本机的可寻度** - 选择向其他人显示还是隐藏您的装置。

**我的名称** - 为您的 KS360 输入一个名称。

**我的地址** - 查看您的蓝牙地址。

## 更改连接设置

网络运营商已为您设定连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

按**菜单**或 **OK** 然后选择**连接性**。选项包括：

**蓝牙** - 设置 KS360 以使用蓝牙。您可以调整对其它装置的可寻度，或搜索您可以配对的装置。

**网络** - KS360 将自动连接到首选网络。要更改这些设置，请使用此菜单。您也可以使用此菜单添加新的接入点。



# 设置

**USB 连接** - 选择**数据服务**并使用 LG PC 套件软件同步 KS360 以复制手机中的文件。如果您已插入储存卡，请选择批量储存，以使用 USB 记忆棒的相同方式来使用手机。连接电脑，将文件拖放到 KS360 可移动装置文件夹。

## 与其它蓝牙装置配对

要将您的 KS360 与其它装置配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否为**开且显示**。您可以在**蓝牙设置**菜单中更改可寻度：选择**本机的可寻度**，然后选择**显示**。
- 2 从蓝牙菜单中选择**装置列表**，然后选择**新建**。
- 3 KS360 将搜索装置。搜索完成时，屏幕上将显示找到的装置。
- 4 选择您要配对的装置，选择**配对**，输入通行码，然后选择**确定**。
- 5 随后，您的手机将连接到其它装置，您可以在该装置上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已准备就绪了。

## 使用蓝牙耳机

- 1 查看蓝牙是否为**开且显示**。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对装置。
- 3 KS360 将自动转换到“耳机”情景模式。您也可以连接蓝牙耳机拨打和接听电话。

## 将手机用作批量储存器

KS360 可以用作批量储存装置，和 USB 记忆棒一样。要将文件从电脑移动到手机时，这是一个好方法。如果已插入储存卡，作为**批量储存连接**连接时，将在电脑上显示为两个驱动器：手机内存和外部储存器。

- 1 按**菜单**或  然后选择**连接**。
- 2 选择 **USB 连接**。
- 3 移动到批量储存，然后选择**确定**。
- 4 将 USB 数据电缆的较小端插入 KS360 一端的接口。将较大端插入电脑的 USB 端口。
- 5 此时将自动打开电脑上的可移动磁盘（如果已插入储存卡，则为两个），其中显示手机或储存卡上的所有文件夹。

- 6 将您的图像、视频、音乐或文件拖放至正确文件夹。
- 7 通过单击电脑工具栏上的**安全移除硬件**图标，安全移除您的手机。
- 8 当您访问文件时，如图像，按**菜单**或 **OK**，然后依次选择**我的文档**、**外部储存卡**和**图像**。此文件中将包含所有您传送的图像。

## 将文件传输到手机

您也可以使用蓝牙将文件从电脑传送到手机。

- 1 请确保手机和电脑都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用电脑发送文件。
- 3 文件发出后，您必须选择**是**在您的手机上接受它。
- 4 文件将根据其类型保存到相应文件夹。例如，照片将保存在**图像**文件夹，音乐将保存在**声音**文件夹。如果手机无法辨认文件类型，文件将保存在**其它**文件夹。

**备注：**使用蓝牙发送的文件将保存在手机内存里。

## 使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

开始使用蓝牙共享文件之前，您需要将您的装置与其它蓝牙装置配对。有关配对装置的详情，请参阅第 52 页的**与其它蓝牙装置配对**。

### 打开蓝牙：

- 1 按**菜单**或 **OK** 选择**连接**，然后选择**蓝牙**。
- 2 选择**蓝牙开/关**，然后选择**开**。
- 3 选择**关**以关闭蓝牙。

### 发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 依次选择**选项**、**发送方式**，然后选择**蓝牙**。
- 3 如果尚未启用蓝牙，请选择**是**打开蓝牙。
- 4 KS360 将自动搜索范围内其它启用了蓝牙的装置。
- 5 选择您要向其发送文件的设备，然后选择**发送**。

# 设置

## 接收文件：

- 1 要接收文件，您的蓝牙必须为**开且可见**。有关详情，请参阅第 51 页的**更改蓝牙设置**。
- 2 手机会提示您，是否接收来自其他发件人的文件。选择**是**以接收文件。

**提示！** 注意进度栏，确保文件已发送。

**备注** Bluetooth® 字体标记及徽标由 Bluetooth SIG, Inc. 所有，LG Electronics 对此类标记的使用已得到授权。其它商标和产品名称是其各自所有者的商标。

# 配件

这些配件随 KS360 提供。

充电器



免提耳机



电池



用户手册

了解更多关于 KS360 的资料。

## 备注

- 务必使用正品 LG 配件。否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

01

02

03

04

05

06

07

08

## 网络服务

本指南中描述的无线手机适用于 GSM 900、DCS 1800 和 PCS 1900 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

## 技术数据

### 标准

产品名称：KS360

系统：GSM900/DCS1800/  
PCS 1900

### 外部环境

最高温度：+55° C（放电）、  
+45° C（充电）

最低温度：-10° C

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KS360

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.6.1

EN 60950-1 : 2001

EN 50360/EN 50361 : 2001

EN 301 511 V9.0.2

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

18. JUN. 2008

  
Signature of representative

# 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

## 暴露在射频能量之下

### 无线电波暴露和“特定吸收率”(SAR) 信息

此款 KS360 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频段中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为 2W/kg，平均值超过十 (10) 克薄纸。

- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.489 W/kg (10克)，戴在身体上时，其值为 0.949 W/kg (10克)。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/kg，平均值超过一 (1) 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

## 产品保养和维护

### 警告!

- 仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其他类型可能导致适用于此手机的许可或保修失效，并可能造成危险。
- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
  - 远离诸如电视、收音机或个人计算机之类的电器。
  - 远离诸如暖气片或厨灶之类的热源。
  - 小心不要让手机摔落。
  - 不要让手机受到机械振动或撞击。

- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗设备。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应在通风条件好的位置对手机进行充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

## 有效的手机操作

### 电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上，例如，胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

### 行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。



# 关于安全有效使用手机的准则

- 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气囊。否则，可能导致安全气囊失效，或由于不适当的个人行为造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

## 避免对您的听力造成伤害

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

## 玻璃零件

您的移动设备的有些零件由玻璃制成。这块玻璃如果您的移动设备在一个硬面被投下或，可能打破接受坚固冲击。如果玻璃打破，不要接触也不要试图去除。停止使用您的移动设备，直到玻璃被一个授权服务供应商替换。

## 爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

## 易爆环境

- 不要在加油站内使用手机。
- 请勿在加油点或化工厂附近使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

## 在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

## 儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。





Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



## KS360 User Guide | ENGLISH

Congratulations on your purchase of the advanced and compact KS360 phone by LG, designed to operate with the latest digital mobile communication technology.

SET UP	<b>01</b>
YOUR STANDBY SCREEN	<b>02</b>
THE BASICS	<b>03</b>
GET CREATIVE	<b>04</b>
GET ORGANISED	<b>05</b>
BROWSER	<b>06</b>
SETTINGS	<b>07</b>
ACCESSORIES	<b>08</b>

# Contents

<b>01 SET UP</b>	
Getting to know your phone .....	7
Open view .....	8
Installing the SIM and battery .....	10
<b>Memory card</b> .....	<b>13</b>
Installing a memory card .....	13
Removing a memory card .....	13
Formatting a memory card .....	13
<b>Menu map</b> .....	<b>14</b>
<b>02 YOUR STANDBY SCREEN</b>	
Your standby screen .....	15
The status bar .....	15
<b>03 THE BASICS</b>	
<b>Calls</b> .....	<b>16</b>
Making a call .....	16
Making a call from your contacts .....	16
Answering and rejecting a call .....	16
Adjusting the call volume .....	17
Speed dialling .....	17
Viewing your call logs .....	17
Using call divert .....	18
Using call barring .....	18
Changing the call settings .....	19
<b>Contacts</b> .....	<b>20</b>
Searching for a contact .....	20
Adding a new contact .....	20
Contact options .....	20
Adding a contact to a group .....	21
Renaming a group .....	21
Adding a picture to a contact .....	21
Copying your contacts to your SIM .....	22
Deleting all your contacts .....	22
Viewing information .....	22
<b>Messaging</b> .....	<b>23</b>
Messaging .....	23
Sending a message .....	23
Entering text .....	24
Text input mode using the keypad .....	24
Setting up your email .....	24
Sending an email using your new account .....	24
Message folders .....	25
Managing your messages .....	25
Using templates .....	26
Changing your text message settings .....	27
Changing your multimedia message settings .....	27
Changing your email settings .....	28
Changing your other settings .....	28

## 04 GET CREATIVE

<b>Multimedia</b> .....	29	Listening to the radio .....	37
Taking a quick photo .....	29	Using the voice recorder .....	38
Before you've taken your photo .....	29	Recording your voice memo .....	38
After you've taken your photo .....	30	Sending a voice recording .....	38
Using the quick settings .....	30	<b>My stuff</b> .....	39
Changing the image size .....	31	Images .....	39
Viewing your saved photos .....	31	Images options menu .....	39
Setting a photo as Wallpaper or Picture ID ..	31	Sending a photo .....	40
Shooting a quick video .....	32	Organising your images .....	40
After you've shot your video .....	32	Deleting an image .....	40
Getting to know the viewfinder .....	33	Deleting multiple images .....	40
Using the quick settings .....	33	Creating a slide show .....	41
Watching your saved videos .....	33	Sounds .....	41
Adjusting the volume when viewing a		Using a sound .....	41
video .....	33	Videos .....	41
MP3 player .....	34	Watching a video .....	41
Transferring music onto your phone .....	34	Using options while video is paused .....	42
Playing a song .....	34	Sending a video clip .....	42
Using options while playing music .....	34	Video options menu .....	42
Creating a playlist .....	35	Documents .....	43
Playing a playlist .....	35	Viewing a document .....	43
Editing a playlist .....	35	Others .....	43
Deleting a playlist .....	36	External memory .....	43
Using the FM radio .....	37	<b>Games and Applications</b> .....	44
Searching for stations .....	37	Games and Applications .....	44
Resetting channels .....	37	Playing a game .....	44
		Viewing applications .....	44
		Changing the network profile .....	44



# Contents

## 05 GET ORGANISED

<b>Organiser &amp; Tools.....</b>	<b>45</b>
Adding an event to your calendar.....	45
Editing a calendar event.....	45
Sharing a calendar event.....	46
Adding a memo.....	46
Setting your alarm.....	46
Using your calculator.....	47
Using the stopwatch.....	47
Converting a unit.....	47
Adding a city to your world clock.....	47
SIM services.....	48

## 06 BROWSER

<b>Browser.....</b>	<b>49</b>
Accessing the web.....	49
Enjoying Yahoo!.....	49
Adding and accessing your bookmarks ...	49
Accessing a saved page.....	50
Viewing your browser history.....	50
Changing the web browser settings.....	50

## 07 SETTINGS

<b>Settings.....</b>	<b>51</b>
Changing your profiles.....	51
Personalising your profiles.....	51
Changing your date & time.....	51
Changing the language.....	51
Changing your display settings.....	52
Changing your security settings.....	52
Using flight mode.....	53
Using power save.....	53
Resetting your phone.....	53
Viewing memory status.....	53
Changing your Bluetooth settings.....	53
Changing your connectivity settings.....	53
Pairing with another Bluetooth device.....	54
Using a Bluetooth headset.....	54
Using your phone as a mass storage device..	55
Transferring a file to your phone.....	55
Sending and receiving your files using Bluetooth.....	56

## 08 ACCESSORIES

<b>Accessories.....</b>	<b>57</b>
<b>Network service.....</b>	<b>58</b>
<b>Technical data.....</b>	<b>58</b>
General.....	58
Ambient Temperatures.....	58

<b>Guidelines for safe and efficient use.....</b>	<b>60</b>
---	-----------

# Getting to know your phone



01

02

03

04

05


06

07

08

# Open view



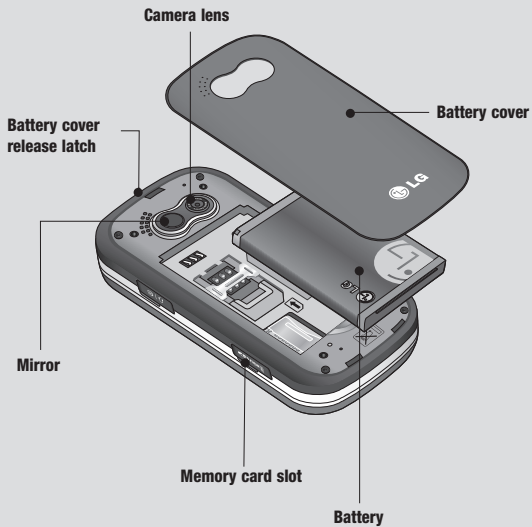

01

02

03

04

05

06


07

08

# Installing the SIM and battery


## 1 Remove the battery cover

Press the battery cover release latch. The battery cover should lift off easily.

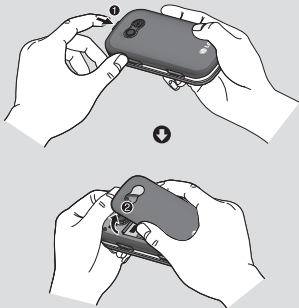

## 2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

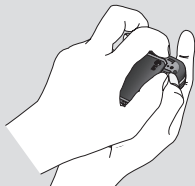


**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, push it out of the holder from the top.

**⚠ WARNING:** Do not insert the SIM card when the keyboard is open, as this may damage your phone and SIM card.

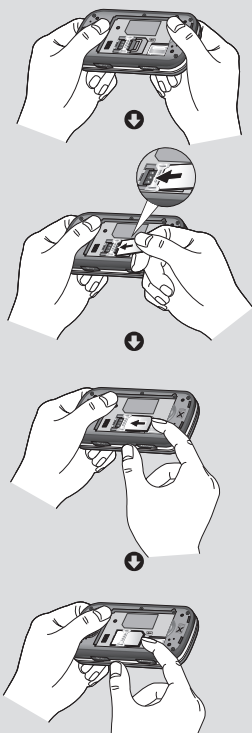

#### 4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

01

02

03

04

05

06


07

08

# Installing the SIM and battery

## 5 Replace the battery cover

Insert the bottom of the battery cover and push down until it clicks into place.

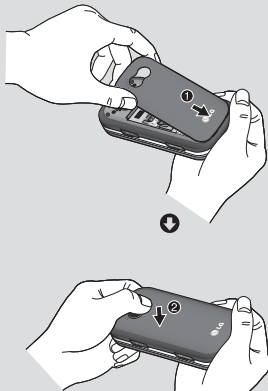

## 6 Charging your phone

Pull open the cover of the charger socket on the side of your KS360. Insert the charger and plug into a mains electricity socket. Your KS360 will need to be charged until a message reading Battery Full appears on screen.

**⚠ WARNING:** Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.



# Memory card

## Installing a memory card

You can expand the memory space available on your phone using a memory card.

**TIP!** A memory card is an optional accessory.

Open the memory card slot. Slide the memory card into the slot cover, until it clicks into place. Make sure that the gold contact area is facing downwards.



## Removing a memory card

Open the cover and carefully remove the memory card by gently pushing it in to the phone and quickly releasing it, as shown in the following diagram:



## Formatting a memory card

If your memory card is not already formatted, you will need to do so before you can begin using it.

- 1 From the standby screen press **OK** and select **Settings**.
- 2 Choose **Memory status** and select **External memory**.

**WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

01

02

03

04

05

06

07

08



# Menu map



## Games & Apps

- 1 Games
- 2 Applications
- 3 Network profile



## Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



## Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



## Multimedia

- 1 MP3 player
- 2 Camera
- 3 Video camera
- 4 FM radio
- 5 Voice recorder



## Messaging

- 1 New message
- 2 Inbox
- 3 Email box
- 4 Drafts
- 5 Outbox
- 6 Sent
- 7 Listen to voicemail
- 8 Info messages
- 9 Templates
- 0 Settings



## My stuff

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Documents
- 5 Others
- 6 External memory (need to insert memory card)



## Profiles

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



## Organiser

- 1 Calendar
- 2 Memo



## Tools

- 1 Alarm clock
- 2 Calculator
- 3 Stopwatch
- 4 Unit converter
- 5 World clock
- 6 SIM services\*

\*This feature depends on SIM and the network services. If your operator supports SIM Tool Kit then this menu will appear.



## Browser

- 1 Home
- 2 Yahoo!
- 3 Bookmarks
- 4 Enter address
- 5 History
- 6 Saved pages
- 7 Settings
- 8 Information



## Connectivity

- 1 Bluetooth
- 2 Network
- 3 USB connection



## Settings








- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Shortcut
- 5 Call
- 6 Security
- 7 Flight mode
- 8 Power save
- 9 Reset
- 0 Memory status









# Your standby screen

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth is active.

Below is a table explaining the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	Roaming service
	Bluetooth® is activated
	WAP service is connected
	An alarm is set
	New message

Icon	Description
	New voice message
	General profile in use
	Silent profile in use
	Vibrate profile in use
	Outdoor profile in use
	Headset profile in use
	Remaining battery life
	Battery empty

01

02

03

04

05





06

07

08


# Calls

## Making a call


- 1 Make sure your phone is on.
- 2 The fastest way to make a call is to activate touch mode by pressing . If you press this key, you can touch the screen to enter the phone number to call. Or, you can use the keypad after opening the slide. To delete a digit press  or the back arrow.
- 3 Press  to initiate the call.
- 4 To end the call, press .

**TIP!** To enter + when making an international call, touch and hold **0**.

## Making a call from your contacts


- 1 Select **Contacts** in the menu and choose Search.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the contact.
- 3 Press  to initiate the call.

## Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing, then select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

**TIP!** You can change the settings on your phone to answer your calls in different ways. Press , select **Settings** and choose **Call**. Select **Answer mode** and choose from **Slide open**, **Any key** or **Accept key only**.


## Adjusting the call volume

To adjust the volume during a call, press the volume key on the left hand side of your phone.

## Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Menu** and choose **Contacts**, then select **Speed dials**.
- 2 Your voicemail is set to speed dial 1 and you cannot change this. Select any other number either by using the navigation keys and selecting **Assign** or by pressing the hard key number.
- 3 Your address book will open. Select the contact you'd like to assign to that number using the navigation keys, then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will initiate automatically; there's no need to press .

## Viewing your call logs

Press **Menu** or , select **Call history**. Choose to view:

**All calls** - View a complete list of all your dialled, received and missed calls.

**Missed calls** - View a list of any calls you have missed.

**Dialled calls** - View a list of all the numbers you have called.

**Received calls** - View a list of all the numbers that have called you.

**Call duration** - View details of how long you have spent on your calls; received and dialled.

**Call costs** - View the charges applied to your Last call or All calls. This service is network dependent, some operators are unable to support this.


**Data information** - View the amount of all your received and sent data in kilobytes.

**TIP!** From any call log select **Options** and choose **Delete** to delete selected items.

**TIP!** Using the navigation keys, highlight any single call entry to view the date and time of the call.

# Calls

## Using call divert

- 1 Press **Menu** or  , select **Settings** and choose **Call**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no reply, when you are out of reach, all data calls or all fax calls.
- 4 Choose **Activate** and select whether to divert to voicemail, another number or your favourite number.
- 5 Enter your divert number or select **Search** to browse **Contacts** for your divert number.

**Note:** Charges are incurred for diverting calls. Please contact your network provider for details.


**TIP!** To turn off all call diverts, choose **Cancel** all from the **Call divert** menu.

## Using call barring

- 1 Press **Menu** or  , select **Settings** and choose **Call**.
- 2 Select **Call barring**.
- 3 Choose any or all of the seven options:
  - All outgoing**
  - Outgoing international**
  - Outgoing international except home country**
  - All incoming**
  - Incoming when abroad**
  - Cancel all barrings**
  - Change password**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

**TIP!** Select **Fixed dial number** from the **Call** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

## Changing the call settings

- 1 Press **Menu** or , select **Settings** and choose **Call**.
- 2 From here you can amend the settings for:

**Call divert** - Choose whether to divert your calls.

**Call barring** - Select which calls you would like to be barred.

**Fixed dial number** - Choose a list of numbers that can be called from your phone.

**Answer mode** - Choose whether to answer the phone using only the accept key, any key or by sliding your handset open.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Call waiting** - Be alerted when you have a call waiting.

**Minute minder** - Select **On** to hear a tone every minute during a call.

**Auto redial** - Choose that the phone will automatically try to redial in the case of failure to connect a call.

**Send DTMF tones** - You can send the DTMF (dual tone multi-frequency) tones of the number on the display during a call. This option is helpful for entering a password or account number when you call an automated system, like a banking service.

01

02

03

04

05

06

07

08

# Contacts

## Searching for a contact

- 1 Select **Contacts** from the main menu and choose **Search**.
- 2 Using the keypad or touchpad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

## Adding a new contact

- 1 Select **Contacts** and choose **New contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.

Or, use a slightly quicker method...

- 1 Enter the number you wish to store and press **Options**.
- 2 Choose **Save** or **Add to existing contact**.
- 3 Enter the relevant information as above and select **Save**.

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use the Options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** above.
- 2 Select **Options** to open the list of options.

From here you can:

**Edit** - Change any of the contact's details.

**New message** - Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Message** or **Email**.

**Send via** - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, via **Bluetooth** or by **Email**.

**Delete** - Delete the contact. Select **Yes** if you are sure.


**New contact** - Add a new contact.

**Multi delete** - Mark multiple contacts to delete.

**Copy to SIM/phone** - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

## Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family**, **Friends**, **Colleague**, **VIP**, **Group 1**, **Group 2** and **No group** already set up on the phone.

- 1 Select **Contacts** and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and select **View** then select **Add**.
- 3 Your contacts will open. Scroll to any contacts you would like to add to the group and press , then select **Done**.
- 4 Select **Yes** if you are sure.

**TIP!** You can assign a ringtone or icon to a group. Select the group you wish to assign the ringtone or icon to, select **Options** and choose the item you want.

## Renaming a group

You can rename any of the groups to fit your lifestyle.

- 1 Select **Contacts** and choose **Groups**.
- 2 Select the group you want to rename.
- 3 Choose **Options**, select **Rename** and enter your new group name.
- 4 Select **Save**.

**Note:** You can only assign a contact to a group or add a picture to a contact that is saved in your phone (not SIM) memory.

## Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.

- 1 Select **Contacts** and choose **Settings**.
- 2 Select **View options** and choose **With picture**.
- 3 Then return to the address book and select the contact you want to add a picture to.
- 4 Choose **Options** and select **Edit**.



# Contacts

- 5 Scroll down to the **Photo** section. Choose **Options** and select **Images** or **New image**. If you select **Images**, you can choose an image that is saved in your phone memory. If you select **New image**, your camera viewfinder will open, so you can take a picture of your contact. Take the picture then press set.
- 6 Select **Save**.

## Copying your contacts to your SIM

You can also choose to copy your contacts from your SIM to your handset or from your handset to your SIM.

- 1 Select **Contacts** and choose **Copy All**.
- 2 Select to copy the contacts from **SIM to phone** or **Phone to SIM**.
- 3 Choose whether to **Keep original** or **Delete original**.
- 4 Select **Yes** if you are sure.

## Deleting all your contacts

- 1 Select **Contacts** and choose **Delete all**.
- 2 Select to delete contacts from **SIM** or **Phone**.
- 3 Select **Yes** if you are sure.
- 4 Enter the password, which is set to 0000 as default, and select **OK**.


## Viewing information

Select **Contacts** and choose **Information**. From here you can view your **Service dial numbers**, your **Own number** and your **Business card**.



**TIP!** If you haven't yet created a business card, the **Business card** screen will give you the option to create one. Select **New** and enter your details as you would for any contact. Choose **Save**.

# Messaging

## Messaging

Your KS360 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) Email, Bluetooth message, as well as the network's service messages. Simply press  and select **Messaging**.

## Sending a message

- 1 Press **Menu** or , select **Messaging** and choose **New message**. Or, a quicker way is to press  on the keypad when the slide is open.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using the keypad. See page 24 for more information on how to enter text.
- 5 Select **Options** and choose **Insert** to add an **Image, Sound, Video, Symbol, Text**

**template, Emoticon, Name & Number, New slide, Subject** or **More (Contact/My business card/Schedule)**.

- 6 Choose **Send to**.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 8 Select **Send**.



**WARNING:** If an **Image, Sound, Video, New slide** or **Subject** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

01

02

03

04

05

06

07


08


# Messaging

## Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: Abc manual mode and 123 mode. (different language will affect text input mode)

**Note:** Some fields may allow only one text input mode (e.g. telephone number in address book fields).


To input a symbol in the text entry field, press the  key and select a symbol, then select **OK**. Scroll using the navigation keys to show more symbol options.

Complete each word with a space by pressing .

To delete a character, press .


## Text input mode using the keypad

When you are required to enter text, for example when writing a message, the keypad will default to Abc mode (depends on different language). If you are entering a number, for example when making call, the keypad number keys will default to numbers.

In Abc mode you can enter numbers by first pressing  and then the number you require.


## Setting up your email

You can stay in touch on the move using email on your KS360. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu** or , select **Messaging** and choose **Settings**.
- 2 Select **Email** then **Email account**.
- 3 Select **New**.


## Sending an email using your new account

To send/receive an email, you should set up an email account (see above).

- 1 Press , select **Messaging** and choose **New message**.
- 2 Choose **Email** and a new email will open.
- 3 Write a subject then press **OK**.
- 4 Enter your message using the keypad.
- 5 Select **Options** and choose an attachment to add: **Image, Sound, Video, Document, Contact, My business card, Schedule** or **Others**.

- 6 Press **Send** and enter the recipient's address or press **Options** and select **Contacts** to open your contacts list.
- 7 Press **Send** and your email will be sent.

## Message folders

Press **Menu** or , select **Messaging**. The folder structure used on your KS360 is fairly self-explanatory.

**Inbox** - All the messages you receive are placed into your Inbox. From here you can reply, forward and more, see below for details.

**Email box** - Contains all your email messages. Select the account you want to use then select **Retrieve**. Your KS360 will connect to your email account and retrieve your new messages.

**Drafts** - If you don't have time to finish writing a message, you can save what you have done so far here.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent** - All the messages you send are placed into your Sent folder.

**Listen to voicemail** - You can access your voicemail box (if provided by your network). When a new voice message is received, the symbol will be displayed on the standby screen.

**Info messages** - All info messages and updates received from your operator.

**Templates** - A list of useful messages, already written for a quick reply.

## Managing your messages

You can use your **Inbox** to manage your messages.

- 1 Press **Menu** or , select **Messaging** and choose **Inbox**.

- 2 Select **Options** and then choose to:

**Delete** - Delete the selected message.

**Reply** - Send a reply to the selected message.

**Forward** - Send the selected message on to another person.

**Return call** - Call the person who sent you the message.

**Threaded view/General view** - Choose the way messages are displayed in your inbox.

# Messaging

**Information** - View the details of a message, for example, the time it was sent.

**Copy/Move** - Choose to copy or move the selected message to the SIM card or phone.

**Multi delete** - Delete selected messages.

**Delete all read** - All opened messages will be deleted.


**Delete all** - Delete text messages, multimedia messages or all messages.

If you see the message **No space for SIM message**, you should delete some messages from your inbox which are stored in SIM Card.

If you see the message **No space for messages**, you can delete either messages or saved files to create space.

## Using templates

You can create templates for the **Text** and **Multimedia** messages you send most frequently. There are some templates already on your phone, which can be edited if you wish.

- 1 Press **Menu** or , select **Messaging** and choose **Templates**.
- 2 Choose **Text** or **Multimedia**. You can then select **Options** and choose **Edit** to change existing templates, to add **New template** or to **Delete** templates.
- 3 To send a template, select the one you want to send, choose **Options** and select **Send via**.
- 4 Choose how you would like to send the template, as a **Message, Bluetooth message** or **Email**.
- 5 Choose a contact and select **Send**.

## Changing your text message settings

Your KS360 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do this using the **Settings** options.

Press **Menu** or **OK**, select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

**Message type** - Convert your text into Voice, Fax, Paging, X.400, Email or ERMES.

**Validity period** - Choose how long your message is stored at the message centre.

**Delivery report** - Choose to receive confirmation that your message was delivered.

**Reply charging** - Choose to be billed for your message recipient's reply.

**Message centre number** - Enter the details for your message centre.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your message and therefore data charges.

**Send long text as** - Choose whether to send your message as SMS or MMS when you enter a text longer than 2 pages in the message field.

**Bearer setting** - Choose whether to send your messages via GSM or GPRS.

## Changing your multimedia message settings

Your KS360 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do so using the **Settings** options.

Press **Menu** or **OK**, select **Messaging**, then choose **Settings** and **Multimedia message**. You can make changes to:

**Slide duration** - Choose how long your slides appear on screen.

**Priority** - Choose the priority level of your multimedia message.

**Validity period** - Choose how long your message is stored at the message centre.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read report** - Choose to allow and/or send a read report.

01

02

03

04

05

06

07

08

# Messaging

**Auto download** - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

**Network profile** - Select an operator specific network profile for sending multimedia messages.

**Permitted message type** - Select which type of multimedia messages to allow.

## Changing your email settings

You can adapt your email settings to your own preferences.

1 Press **Menu** or , select **Messaging** and choose **Settings**.

2 Select **Email** then you can adapt the following settings:


**Email account** - You can set up an email account.

**Access point** - You can set the email access point.

**Retrieve interval** - Choose how often your KS360 checks for new email messages.

**Signature** - Create an email signature and switch this feature on.

## Changing your other settings

Press **Menu** or , select **Messaging**, choose **Settings** then:

**Voicemail number** - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.


**Push message** - Change your service message settings.


**Info message** - Choose the reception status, alerts and language of your info messages.

**Save text message** - Choose whether to save your text messages to the phone memory or to the external memory.

# Multimedia


## Taking a quick photo


- 1 Hold the camera key down on the left side of the handset. The camera viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Position the phone so you can see the subject of your photo.
- 4 Press  or press the camera key all the way down to take a photo.


**Note:** You can also access the camera menu from the standby screen. Press  and select **Multimedia**. Select **Camera** to open the viewfinder.


## Before you've taken your photo


Press  to access these options:

 **Self timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from 3 seconds, 5 seconds or 10 seconds. Great for that group photo you want to be part of.

 **Multi shot** - This enables you to take many shots automatically in very quick succession, great for taking photos of moving objects or at sporting events.

 **White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy**, **Fluorescent** or **Night mode**.

 **Colour effect** - Choose from four colour tone options: **Off** (normal/colour), **Sepia**, **Mono** (black and white) or **Negative**.

 **EV** - Exposure values, represented by numbers with a plus or minus. When the main subject is darker than the background, increase exposure value. If the subject is much lighter than the background, decrease exposure value.

01

02

03

04

05

06

07

08



# Multimedia

## After you've taken your photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen and you will see six options displayed on the left side of the screen.

**OK** - Select to take another photo straightaway. Your current photo will be saved.



**New image** - Take another photo straightaway. Your current photo will be saved.



**Set as** - Select to open a sub menu to set your image as **Wallpaper** or **Picture ID**.



**Send via** - Select to send the photo as a **Multimedia message**, **Bluetooth** or **Email**. See page 23 for **Sending a message**.



**Album** - Select to look at the other photos in your album. Your current photo will be saved. See page 31 for **Viewing your saved photos**.

**Delete** - Delete the photo you have just taken and confirm by selecting **Yes**. The viewfinder will reappear.

## Using the quick settings

Select **Options** to access the quick settings options. These include various options for taking photos.

**Video camera** - Convert from camera mode to video camera mode.

**Display** - Choose Standard or Clean mode.

**Resolution** - See **Changing the image size** on page 31.

**Quality** - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality, the sharper a photo will be. The file size will increase as a result, which means you will be able to store fewer photos in your memory.

**Shutter tone** - Select one of the three shutter sounds.

**Save to** - Choose whether to save your photos to the phone memory or to the external memory.


**Reset settings** - Choose **Yes** to reset your phone to the original camera settings.

## Changing the image size

You can change the size of the photo to save memory space. The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on your phone you can alter the pixel number to make the file size smaller.

- 1 Press **Options** and select **Resolution** from the toolbar.
- 2 Select a pixel value from the four numerical options (320x240, 640x480, 1280x960, 1600x1200).
- 3 Press **OK** to implement your changes.

## Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply press **Album**. From the standby screen you should press **Menu** or  , then select **My stuff** and **Images**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the photo you want to view and select **View** to enlarge it.

## Setting a photo as Wallpaper or Picture ID


From your image gallery, use the navigation keys to select an image and choose **Options** and **Set as** to use the selected image as **Wallpaper** or **Picture ID** for one of your contacts. When you set the photo as Picture ID you can choose which part of the photo to use.

**Note:** Picture ID can only be added to contacts saved to your phone, not your SIM.

# Multimedia

## Shooting a quick video

- 1 Quickly press the camera key on the left side of the handset.
- 2 Choose **Video camera**.
- 3 Point the camera lens towards the subject of the video.
- 4 Press the camera key on the left side of the handset to start recording.
- 5 **REC** will appear in the bottom right corner of the viewfinder and a timer will show the length of your video.
- 6 To pause the video select **Pause** and resume by selecting **Resume**.
- 7 Select **Stop** to stop recording.

**Note:** You can also access the **Video camera** from the standby screen. Press  and select **Multimedia**, scroll down and select **Video camera** to open the viewfinder.

## After you've shot your video

The name of the video runs along the bottom of the screen and six options will be displayed on the left side of the screen.

**OK** - Select to record another video straight away. Your current video will be saved.



**New video** - Select to shoot another video straight away. Your current video will be saved.



**Play** - Select to play the video you have just recorded.



**Send via** - Select to send the video as a **Multimedia message** or **Email**. See page 23 for **Sending a message**.



**Video Album** - Select to look at the other video clips in your album. Your current video clip will be saved. See page 33 for **Watching your saved videos**.

**Delete** - Delete the video you have just recorded and confirm by selecting Yes. The viewfinder will reappear.

## Getting to know the viewfinder

**Note:** You can adjust the zoom using the volume keys on the left side of the phone.

## Using the quick settings

Select **Options** to access the quick settings options. These include various options for recording videos.

**Camera** - Convert from video camera mode to still camera mode.

**Display** - Choose Standard or Clean mode.



**Resolution** - If you want to fit more videos on your phone you can alter the pixel number to make the file size smaller. Choose between two options for your video, 176x144, 320x240.

**Quality** - **Super fine/ Fine/ Normal**.

**Save to** - Choose whether to save your video clip to the phone memory or to an external memory.

**Reset settings** - Choose **Yes** to reset your phone to the original video camera settings.

## Watching your saved videos

- 1 You can access your saved videos either from within video camera mode or from the standby screen. From the viewfinder select **Album**. From the standby screen you should press **Menu** or , then select **My stuff** and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the video you want to view and press  to watch it.

## Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the volume keys on the left side of the handset. The volume level is shown below the video, on the left hand side.

01

02

03

04

05

06

07

08

# Multimedia

## MP3 player

Your LG KS360 has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, press **Menu** or  and select **Multimedia** then **MP3 player**. From here you have access to:

**All songs** - Contains all of the songs you have on your phone.

**My playlist** - Contains any playlists you have created as well as **On the go**, **Recent songs** and **Favourite songs**.







**Settings** - Adjust your music settings.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All songs**.

## Playing a song

- 1 Press **Menu** or  and select **Multimedia**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play. Select .
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select  to stop the music and return to the MP3 player menu.

**TIP!** To change the volume while listening to music, use the volume keys on the left side of your phone, or the up and down navigation keys.

## Using options while playing music

Select **Options** and choose from:

**Minimise** - Hide the music player screen so that you can continue using your phone as normal while music is playing.

**View playlist** - Look at the playlist you are currently listening to.

**Search** - Search for a track from the list of songs on your phone.

**Add to playlist** - Adds the current track to a playlist.



**Set as** - Set the current track as your **Ringtone** or **Message tone**.

**Information** - You can view information about the music file you are listening to.



**Settings** - Change the Shuffle, Play mode or Equalizer settings.

## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Press  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Press **New**, enter the playlist name and press **Save**.
- 4 The **New playlist** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting .
- 5 Select **Save** to store the playlist.


## Playing a playlist

- 1 Press **Menu** or  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Select the playlist you would like to play and select **View**, then select .

## Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

If you want to organise your playlists, you can edit them using the **Options** menu.

- 1 Press **Menu** or  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to edit and select **View**, then select **Options**. Choose from:

**Play** - You can play the selected music.

**Add to Playlist** - You can add songs to the playlist using this option.

**Remove** - Remove a song from the playlist. Select **Yes** to confirm.

01

02

03

04

05

06

07

08


# Multimedia

**Multi delete** - Select and delete songs from the playlist.

**Remove all** - Remove all of the songs from the playlist.

**Information** - Select to view information.

## Deleting a playlist

- 1 Press **Menu** or  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to delete and select **Options**.
- 4 Select **Delete** and select **Yes** to confirm.

## Note:

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

## Using the FM radio


Your LG KS360 has an FM radio feature so you can tune in to your favourite stations to listen on the move.

**Note:** You will need to insert your headset in order to listen to the radio. Insert the plug into the headset socket (this is the same socket that you plug your charger into).


## Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 12 channels in your phone.

To auto tune:

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and choose **Auto scan** then select **Yes**.
- 3 Each time a station is found, your KS360 will ask if you want to save it. Select **Yes** if you want to store the channel and **No** if you don't. Any stations you choose to save will automatically be allocated to a channel number in your phone.


To manually tune:

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select a channel number that you want to save a station to and choose **Edit**.
- 3 To enter your station, use the navigation keys to search or enter the frequency using the keypad, then select **Save**.


**Note:** You can also edit the stations you have saved in a channel number.

**TIP!** To improve the reception extend the headset cord, which functions as the radio antenna.

## Resetting channels

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and select **Reset channels**. Choose **Yes** to confirm the reset. Each channel will return to the starting 87.5Mhz frequency.

## Listening to the radio

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

**Note:** You can listen to the radio via a built-in speaker. Press **Options**, select **Listen via** and choose **Speaker**.






# Multimedia

## Using the voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

## Recording your voice memo

- 1 Press **Menu** or  and select **Multimedia**, then choose **Voice recorder**.
- 2 Press  to begin recording.
- 3 Select **Pause** to pause the recording.
- 4 Choose **Stop** to end the recording.
- 5 Select  to listen to the recording.

**Note:** You can listen to all of the voice recordings you have saved by selecting **Album**.


## Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

**TIP!** If you plan to send your recording as a message, before you start recording, select **Options**, select **Recording mode** and choose **MMS**. This will ensure that the recording fits into a message.

# My stuff

You can store any multimedia files in your phone memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone memory.

All your multimedia files will be saved in **My stuff**. Press **Menu** or  then select **My stuff** to open a list of folders.

## Images

**Images** contains a folder of default images and default flash files pre-loaded onto your phone, images downloaded by you and images taken on your phone camera.

## Images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera. Only the **View**, **Set as**, **File info**, **Slide show**, **Sort by** and **View style** options are available for default images.

In the **Images** folder, select **Options** to bring up your list of options.

**Delete** - Delete the selected image.

**Set as** - Set the selected image as your **Wallpaper** or as a **Picture ID**.

**Send via** - Send the selected image to a friend via **Multimedia message**, **Bluetooth** or **Email**.

**Note:** The image may need to be resized before it can be sent by MMS.

**File - Edit image, Rename, Make animation** or view the **Information** (Name, Size, Date, Time, Resolution, Type and Copyright) of the selected image. If you have an external memory card inserted, two additional options will show: **Move to external memory** and **Copy to external memory**.

**Print via** - Print an image file via **Bluetooth** or **Pictbridge**.

**Slide show** - Watch a slide show of your images. See **Creating a slide show** on page 41 for more information.

**New folder** - Create a new folder within the main Images folder.

**Mark/Unmark** - Select more than one image to delete or Copy or Move

**Delete all** - Delete all the photos in your Images folder.

01

02

03

04

05

06

07


08

# My stuff


**Sort by** - Arrange your images by **Date**, **Type** or **Name**.

**View style** - Change the way you view your photos.


## Sending a photo

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Select a photo and choose **Options**.
- 4 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**.
- 5 If you choose **Multimedia message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.




## Organising your images

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** then select **Sort by**.
- 4 Choose from **Date**, **Type** or **Name**.

## Deleting an image


- 1 Press  then select **My stuff**.
- 2 Select **Images**.
- 3 Select an image and press **Options**.
- 4 Select **Delete** and confirm by pressing **Yes**.

## Deleting multiple images

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** and select **Mark/Unmark** and **Delete**.
- 4 A box will appear next to each image. Select  to mark each image. To unmark an image, select  again so that the tick disappears from the box. Or, you can select **Options** then choose **Mark all** or **Unmark all**.
- 5 Once you have marked all of the appropriate boxes, select **Done** and confirm you want to delete all of the marked images.

## Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.



- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Select the photo you would like to begin the slide show and select **Options**.
- 4 Choose **Slide show** and it will begin.
- 5 Press **Pause** to pause the slide show and **Quit** to end the slide show and return to the **Images** folder.

During the slide show, press **Options** to choose between **Full image** and **Full screen**. Select **Landscape** to change the orientation of the image.

## Sounds

The **Sounds** folder contains the **Default** sounds, your **Voice recordings** and sound files downloaded by you. From here you can manage, send or set sounds as ringtones.



## Using a sound

- 1 Press **Menu** or  then select **My stuff**.
- 2 Scroll to and select **Sounds**.
- 3 Select **Default sounds** or choose from the list of voice recording files.
- 4 Select a sound and press  to listen to it.
- 5 Select **Options**, select **Set as** and choose from **Ringtone**, **Ringtone ID** and **Message tone**.

## Videos

The **Videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Press **Menu** or  then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select a video and press .

01

02

03

04

05

06

07

08

# My stuff

## Using options while video is paused

By selecting **Options**, the video you are playing will be in pause mode and you can choose from:

**Delete** - Delete the video.

**Send via** - Send the video to a friend via **Multimedia message, Bluetooth** or **Email**.

**Information** - View the Name, Size, Date, Time, Type and Copyright details of the selected file.

## Sending a video clip

- 1 Press **Menu** or  then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select the video clip you want and press **Options**.
- 4 Press **Send via** and choose from **Multimedia message, Bluetooth** or **Email**.
- 5 If you choose **Multimedia Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

**Note:** The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all.

## Video options menu

In the **Videos** folder highlight a video and press **Options** to bring up the following list of options.

**Delete** - Delete the selected video.

**Send via** - Send the selected video to a friend via **Multimedia message, Email** or **Bluetooth**.

**File** - Rename the video or view the information (Name, Size, Date, Time, Type and Copyright).

If you have an external memory card inserted two additional options will show: **Move to external memory** and **Copy to external memory**.

**New folder** - Create a new folder within the main Videos folder.

**Mark/Unmark** - Select more than one video clip before selecting **Delete**.

**Delete all** - Delete all the clips in your Videos folder.

**Sort by** - Arrange your videos by **Date, Type** or **Name**.

**Auto next play** - Allows to set the play mode: **Off, Repeat once** and **Repeat all**.


- **Off**: Plays the selected file.
- **Repeat once**: Plays all files in a list once.
- **Repeat all**: Continues to play all files in a list repeatedly.

**List view / Thumbnail view** - Change the way you view your videos.

## Documents

From the **Documents** menu.

### Viewing a document

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Documents**.
- 3 Select a document and press **View**.

## Others

From the **Others** menu, you can view the files which are not saved in the Images, Sounds, Videos or Documents folders.

You may find that when you transfer files from your computer to your phone, they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

## External memory

If you've inserted a memory card it will be displayed as a folder within **My stuff**. Your external memory folder will be divided into five further folders: **Images, Sounds, Videos, Documents** and **Others**. Each folder will contain all the files of that type which are saved to your memory card rather than your handset.

01

02

03

04

05

06

07


08

# Games and Applications

## Games and Applications

Your KS360 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.


### Playing a game

- 1 Press **Menu** or  and select **Games & Apps** and then **Games**.
- 2 You can download games from site, and then enjoy it.

**Note:** An additional cost is incurred when connecting to this service. Check your data charges with your network provider.


### Viewing applications

You can manage the Java applications installed in your phone by using the **Applications** menu. You can also delete downloaded applications.

- 1 Press **Menu** or  and select **Games & Apps** and then **Applications**.
- 2 View and manage any applications you have.


## Changing the network profile

To download a game, you can set the value to connect to the network using **Network profile**.

- 1 Press **Menu** or  and select **Games & Apps** and then **Network profile**.
- 2 You can add and edit a new network profile.


# Organiser & Tools

## Adding an event to your calendar

- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **New schedule** and scroll down to enter the time you would like your event to begin. Scroll down and enter the end time of your event.
- 4 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.
- 5 Scroll down and enter a **Subject** for the event. Use the keypad to type letters and numbers.

- 6 Scroll down once more to select whether the event is occurring **Once** or repeated at **Daily**, **Weekly**, **Monthly** or **Yearly** intervals. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 7 Select **Save** and your event will be saved in the calendar. A square cursor will mark the days of any saved events.

## Editing a calendar event

- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Calendar**.
- 2 Choose **Options** and select **All schedules** to see a list of all your events. Scroll to the event you would like to edit and select **View**. Alternatively select the day of the event in the calendar and select **View**.
- 3 Select **Edit** and scroll to the event detail you want to change. Make your modifications and select **Save** to store the edited event.

**Note:** You can delete an event from your calendar by selecting to view the event and then pressing **Options** and **Delete**.

01

02

03

04

05

06


07

08




# Organiser & Tools

## Sharing a calendar event


- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Calendar**.
- 2 Select the event you would like to share and choose **Options**.
- 3 Choose **Send via** and select from **Text message**, **Multimedia message**, **Bluetooth** or **Email**.

## Adding a memo

- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Memo**.
- 2 Select **New** and type your memo.
- 3 Select **Options** then **Save**.
- 4 Your memo will appear on screen the next time you open the memo application.


**TIP!** You can edit an existing memo. Select the one you want to edit, press **Options** and select **Edit**.

## Setting your alarm


- 1 From the standby screen press **Menu** or , and select **Tools**, then **Alarm clock**.
- 2 Select **New**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Once**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun**, or **Choose weekday**.
- 5 Scroll down and choose whether you would like the alarm to **Always sound**, **Always vibrate** or **Follow profile**.
- 6 Scroll down to choose the alarm tone. Choose **Sounds** to select a new sound.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.
- 8 Select **Save**.

**Note:** You can set up to 5 alarms.


## Using your calculator

- 1 From the standby screen press **Menu** or , and select **Tools**, then **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, ÷), followed by =.
- 4 For more complex calculations, select **Function** to select a command.
- 5 Select **Clear** to clear the screen and start a new calculation.


## Using the stopwatch

- 1 From the standby screen press **Menu** or , and select **Tools**, then **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. Up to 20 lap times can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

## Converting a unit

- 1 From the standby screen press **Menu** or , and select **Tools**, then **Unit converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Scroll up to choose from the unit of measurement you want to enter. Scroll left and right to select a unit, then scroll down and enter the unit quantity.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

## Adding a city to your world clock

- 1 From the standby screen press **Menu** or , and select **Tools**, then **World clock**.
- 2 Scroll up, down, left or right to navigate the globe and choose a continent.
- 3 Select **Zoom in** to zoom into an area and choose from the cities in that area.
- 4 Press **Set**.

# Organiser & Tools

## **SIM services**


This feature depends on SIM and the network services.

If the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

# Browser

With a browser at the tip of your fingers, you can get up to date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

## Accessing the web

- 1 Press **Menu** or  and select **Browser**.
- 2 To access the browser homepage directly, select **Home**. Or select **Enter address** and type in your desired URL, followed by **Connect**.


**Note:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

## Enjoying Yahoo!

You can surf the web quickly and easily by selecting this menu.

## Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Press **Menu** or  and select **Browser**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To add a new bookmark, select **Options** and choose **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Press **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and select **Connect**. You will be connected to your bookmarked page.

01

02

03

04

05


06

07

08


# Browser

## Accessing a saved page


- 1 Press **Menu** or  and select **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and press **Open**.

**TIP!** This menu will also allow you to delete saved pages.

## Viewing your browser history

- 1 Press **Menu** or  and select **Browser**.
- 2 Select **History** and select **OK**.
- 3 A list of web page titles you have accessed recently will be displayed. To access one of these pages, scroll to the required page and select **Connect**.

## Changing the web browser settings


- 1 Press **Menu** or  and select **Browser**.
- 2 Select **Settings**.
- 3 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Network profiles, Rendering mode, Cache, Cookies, Security certificates, Show image, JavaScript, Storage location**.
- 4 Once you have changed your settings, select **OK**.

# Settings

Within this folder you can adapt your settings to make your KS360 personal to you.


**Note:** For information on call settings see page 19.

## Changing your profiles

You can quickly change your profile from the standby screen. Simply press  using the navigation keys then the profile you would like to activate. Choose from **General**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.


## Personalising your profiles

You can personalise each profile setting.

- 1 Press **Menu** or  and select **Profiles**.
- 2 Choose the profile you want and select **Personalise**.
- 3 For the **Silent** and **Vibrate only** profiles, you can adapt the vibration. For the other profiles, you can change all of the sounds and alert options available in the list.

## Changing your date & time

You can set functions relating to the date and time.

- 1 Press **Menu** or  and select **Settings**.
- 2 Select **Date & Time** and choose from the list below:

**Set date** - You can enter the current date.

**Date format** - You can set the date format. (YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY)

**Set time** - You can enter the current time.

**Time format** - You can set the time format to either 24 hours or 12 hours.

**Auto update** - Select **On**, the phone will automatically update the date and time.

## Changing the language

Select **Languages** to change the language for any text in your phone. Any change will also alter the language input mode.

01

02

03

04

05


06

07

08

# Settings

## Changing your display settings

- 1 Press **Menu** or  and select **Settings**.
- 2 Select **Display** and choose from:

**Wallpaper** - Choose a wallpaper to appear on your screen display.

**Clocks** - Choose to have the time and date visible on your standby screen. Choose from

**No date & time** or **Normal**.

**Backlight timer** - Choose how long the backlight remains on for.

**TIP!** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Brightness** - Use the navigation keys to adjust the brightness. Choose from 40%, 60%, 80% or 100%, then select OK to save your change.

**Home screen shortcut** - Select **On** to display the shortcuts of 4 menus as pictures on the middle of the standby screen.

**Font size** - Change the font size of the following : **Menu**, **Dialling** and **Messaging**.

**Theme** - Quickly change the whole look of your screen.

**Menu style** - Change the menu view from **Grid view** to **List view**.

**Main font style** - Adjust the font type.


**Dialling font style** - Adjust the font style for when you are dialling a phone number.

**Standby text** - Choose to add a message to your standby screen.

**Network Name** - Choose On or Off

## Changing your security settings

Change your security settings to keep your KS360 and the important information it holds protected.

- 1 Press **Menu** or  and select **Settings**.
- 2 Select **Security** and choose from the list below:

**PIN code request** - Choose a PIN code to be requested when you turn your phone on.

**Auto key lock** - Choose how long before the keypad locks when the phone is not in use.

**Phone lock** - Choose a security code to lock your phone **When power on**, **When SIM changed** or **Immediately**.

**Anyi-theft mobile tracher** - The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it. The moment an un-authorized user wants to use your phone by inserting another SIM card, a SMS is triggered from your phone and is sent to your pre-defi ned numbers.

**Change codes** - Change your Security code, PIN1 code, PIN2 code or ATMT code.

## Using flight mode

Use this function to switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the internet, send messages when **Flight mode** is switched **On**.

## Using power save

Choose to switch the power saving settings **On** or **Off**.


## Resetting your phone

Use **Reset** in **Phone settings** to reset all the settings to the factory definitions. You need the security code to activate this function.

## Viewing memory status


Your KS360 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Menu** or  and select **Settings**. Choose **Memory status** and you will then see the current status of the memories (Common, Reserved, SIM card and External memory) in your KS360.

**TIP!** See page 13 for information on **inserting a memory card**.

## Changing your Bluetooth settings

- 1 Press **Menu** or  and select **Connectivity**, then choose **Bluetooth**.
- 2 Choose **Bluetooth settings**. Make your changes to:


**My visibility** - Choose whether to **Show** or **Hide** your device to others.

**My name** - Enter a name for your KS360.

**My address** - View your Bluetooth address.

## Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Press **Menu** or  and select **Connectivity**. Your options are:



# Settings

**Bluetooth** - Set up your KS360 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

**Network** - Your KS360 connects automatically to your preferred network. To change these settings use this menu. You can also add new access points using this menu.

**USB connection** - Choose **Data service** and synchronise your KS360 using the LG PC Suite software to copy files from your phone. If you have a memory card inserted, select

**Mass storage** to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the KS360 removable device folder.

## Pairing with another Bluetooth device

By pairing your KS360 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth settings** menu, by selecting **My visibility**, then **Show**.


- 2 Select **Device list** from the Bluetooth menu and choose **New**.
- 3 Your KS360 will search for devices. When the search is completed **Pair** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Pair** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.


## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your KS360 will then automatically connect to your Bluetooth headset and switch to headset profile.

## Using your phone as a mass storage device

Your KS360 can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. If you've inserted a memory card, when connecting as **Mass storage**, the phone will be displayed as two drives on your computer: the handset memory and external memory.

- 1 Press **Menu** or  select **Connectivity**.
- 2 Select **USB Connection**.
- 3 Scroll to **Mass storage** and select **OK**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the KS360. Plug the larger end into the USB port of your computer.
- 5 A removable disk folder will open automatically on your computer, two if you have a memory card inserted, showing all the folders on your phone or memory card.
- 6 Drag and drop your images, videos, music or documents into the correct folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.

- 8 When you want to then access a file, for example an image, press **Menu** or , then select **My stuff** followed by **External memory** then **Images**. All the images you transfer will be contained in this file.

## Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file will be saved within the appropriate folder depending on type. So for example, photographs will be saved in the **Images** folder and music in the **Sounds** folder. If your phone cannot identify the file type, the file will be saved in the **Others** folder.

**Note:** Files sent using Bluetooth will be saved to the phone memory.


# Settings

## Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device** on page 54.

### To switch Bluetooth on:

- 1 Press **Menu** or  and select **Connectivity**, then choose **Bluetooth**.
- 2 Select **Bluetooth on/off** and choose **On**.
- 3 Select **Off** to switch Bluetooth off.

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.

- 4 Your KS360 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **Send**.

### To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** on page 53 for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

**Note** The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

# Accessories

These accessories were supplied with your KS360.

## Charger



## headset



## Battery



## User Guide

Learn more about your KS360.

### Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

01

02

03

04

05

06

07

08

## Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800 and PCS1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

Product name : KS360

System : GSM 900 / DCS 1800 / PCS 1900

### Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KS360

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.6.1

EN 60950-1 : 2001

EN 50360/EN 50361 : 2001

EN 301 511 V9.0.2

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

18. JUN. 2008

  
Signature of representative

# Guidelines for safe and efficient Use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KS360 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.

- The highest SAR value for this model phone tested by DASy4 for use at the ear is 0.489 W/kg (10g) and when worn on the body is 0.949 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### WARNING

- Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
  - Keep away from electrical appliances such as TVs, radios, and personal computers.
  - The unit should be kept away from heat sources such as radiators or cookers.
  - Do not drop.

- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## **Efficient phone operation**

### **Electronics devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.



# Guidelines for safe and efficient Use

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.


## Guidelines for safe and efficient Use

- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



Warranty Card  
產品保用證

Mobile Phone  
手提電話

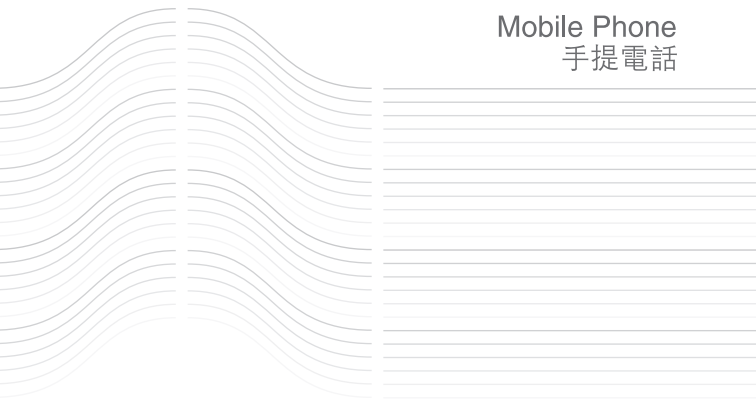

## Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



Welcome to contact for detailed information  
& Customer Care Centre address

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.


多謝閣下購買及使用本公司之產品。請參閱保用證所列之產品保用條款。

**IMPORTANT :** Please keep and present this warranty card and purchase invoice when services are rendered.  
Otherwise, this warranty will be voided.


重要事項：顧客請保留此保用證和購貨發票，並需在檢查/維修時出示，否則保用無效。

### 手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
    - (i) Handset :12 months
    - (ii) Charger :6 months
    - (iii) Battery :6 months
    - (iv) Hand free earphone :3 months.
  - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
  - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories. etc.)
  - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
  - (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
  - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
  - (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
    - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
    - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
    - (iii) The IMEI number sticker on this product has been erased or modified.
    - (iv) The content of warranty policy has been modified without authorization.
  - (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
  - (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
  - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
  - (11) This warranty card is restricted within Hong Kong SAR only.
- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
    - (i) 機身, 12個月
    - (ii) 充電器, 6個月
    - (iii) 電池, 6個月
    - (iv) 免提耳機, 3個月
  - (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
  - (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
  - (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
  - (5) 在保修期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
  - (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
  - (7) 在下列情況下本保用證將自動失效。本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
    - (i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去，保修服務即無效。
    - (ii) 手機曾被錯誤使用，錯誤處理，疏忽使用，直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
    - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
    - (iv) 擅自修改本保用證的內容。
  - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害、意外事件造成之損失概不負責。
  - (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
  - (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
  - (11) 此保用證只適用於香港特別行政區範圍內。



## 服務承諾

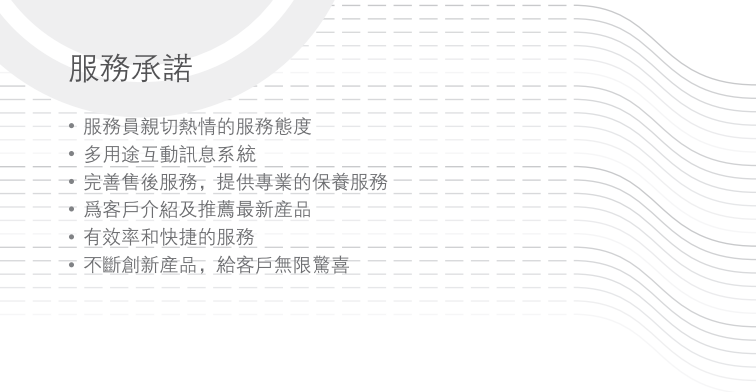- 服務員親切熱情的服務態度
  - 多用途互動訊息系統
  - 完善售後服務，提供專業的保養服務
  - 為客戶介紹及推薦最新產品
  - 有效率和快捷的服務
  - 不斷創新產品，給客戶無限驚喜
- 

---

---

---



To:

LG Electronics HK Ltd.  
North Point Post Office Box No.54509  
香港北角郵政信箱54509號



## Limited Warranty

### 限期保用證

To provide our best after-sales service, please complete and return this warranty card to us.  
您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下專有的售後服務。

### Customer Information

#### 客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號

















