


Click on
www.comarkltd.com
 For complete product information

FoodPro Thermometer

Noncontact Food Safety Thermometer




- Infrarot-Lebensmittelthermometer
- Thermomètre infrarouge alimentaire
- Termómetro sin Contacto para Seguridad de Alimentos
- Termómetro sem Contacto para Segurança Alimentícia
- 食品衛生用非接触溫度計
- 非接触食品安全型測溫儀

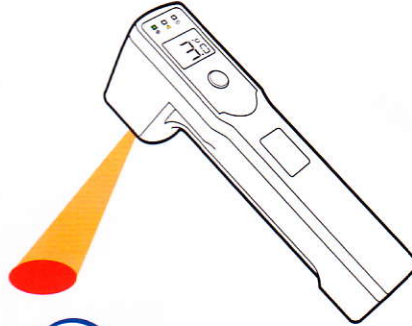



Comark Instruments
 PO Box 9090,
 Everett, WA 98206, USA
 Tel: (503) 643 5204
 Fax: (503) 644 5859
 Email:
 sales@comarkUSA.com
 www.comarkUSA.com











Comark Limited
 Gunnels Wood Road, Stevenage,
 Hertfordshire, SG1 2TA England
 Tel: 01438 (+44 1438) 367367
 Fax: 01438 (+44 1438) 367400
 Email:
 salesuk@comarkltd.com - UK and Ireland
 salesint@comarkltd.com - International
 www.comarkltd.com

Made in China © Comark Limited

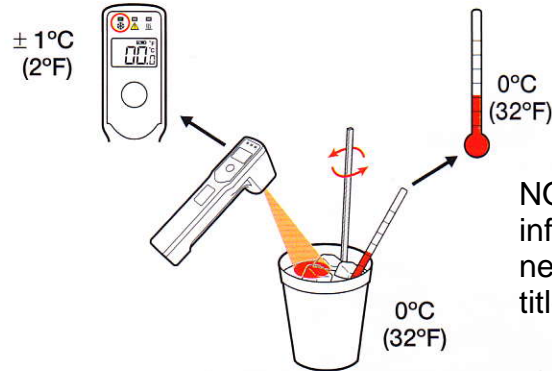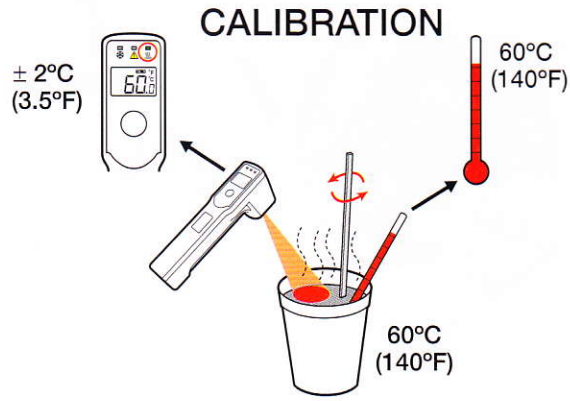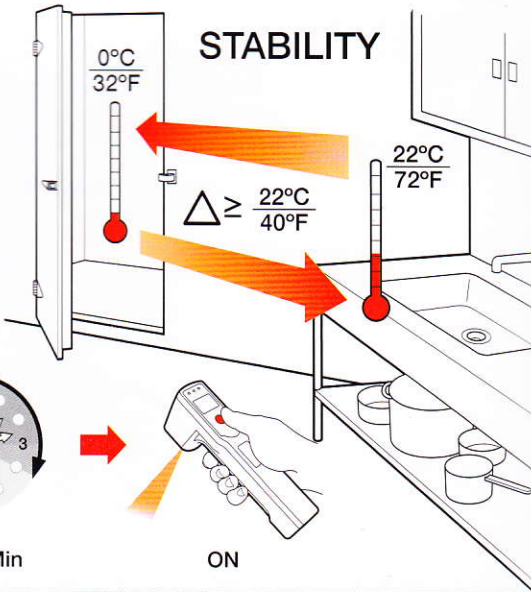

NOTE: see extra info at bottom of next page = p2 title ICEPOINT

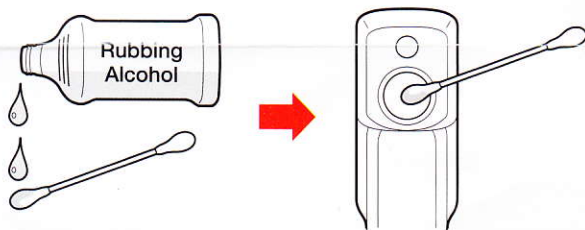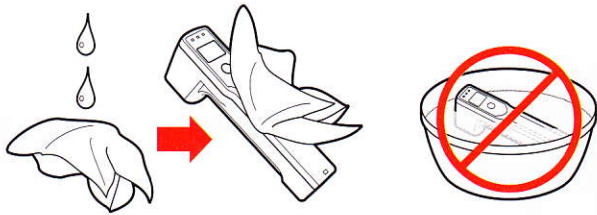

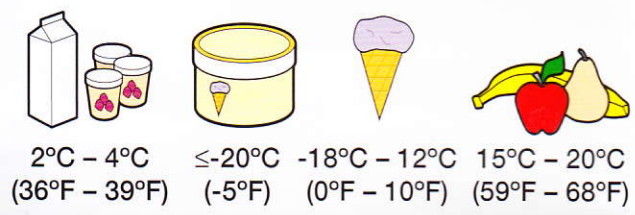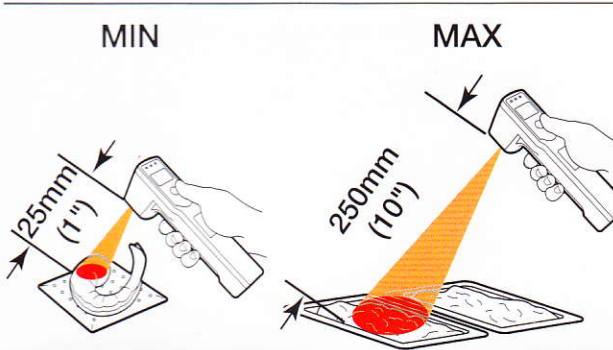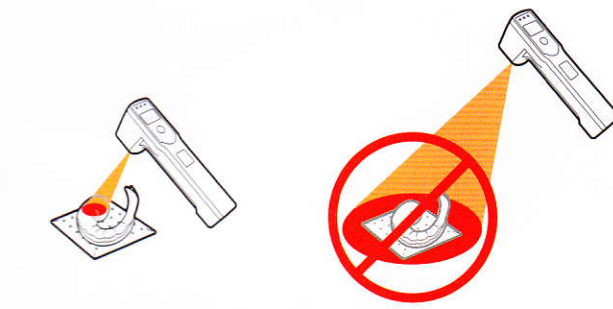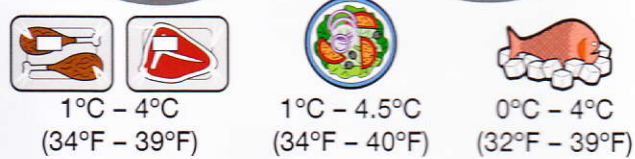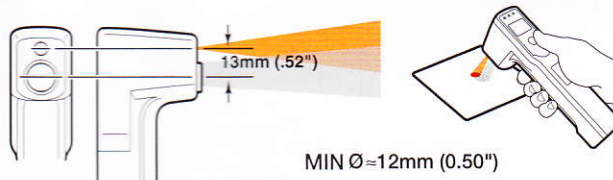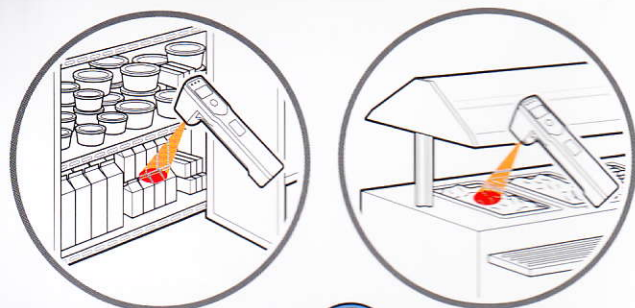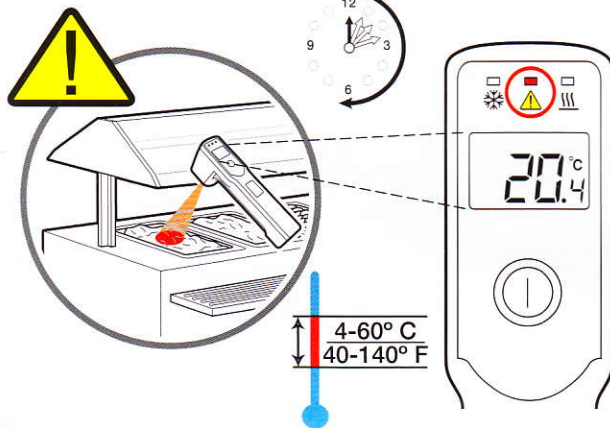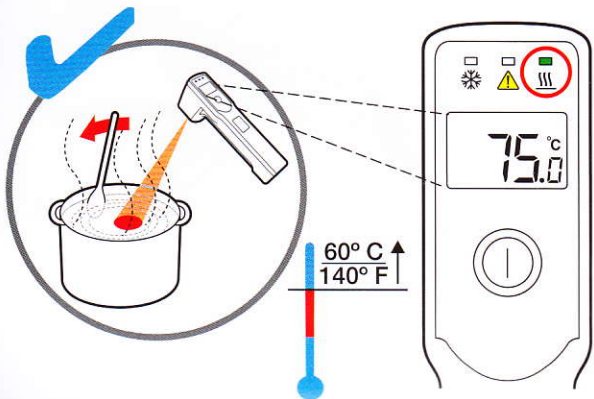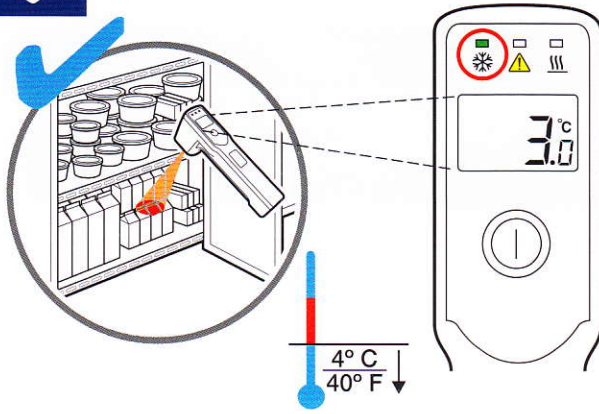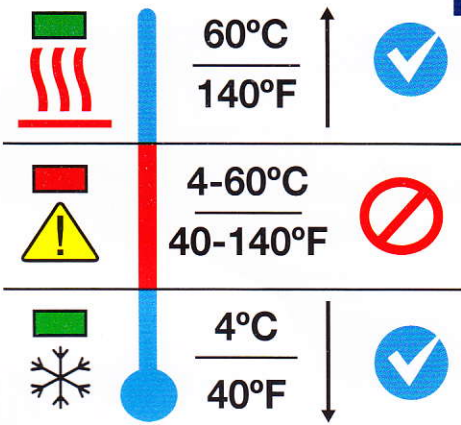




ICEPOINT the diagram indicates using ice cubes in water in an insulated cup. However you must use ice SLURRY with fine particles of crushed ice in water so the overall consistency is liquid. [the reason is that ice cubes can be at any temperature and may be at -18C when they come from the freezer.

HACCP Zone Indicators / Indicateur zone HACCP /
 HACCP-Bereichsanzeige / Indicadores de Zona APPCC HACCP /
 HACCP ゾーン表示 / HACCP 区域指示灯

C°/F° Indicator / Affichage C°/F° /
 C°/F°-Anzeige / Indicador °C/°F /
 Indicador °C/°F / 温度表示 (C°) /
 C°/F° 指示灯




Low Battery Icon / Icône Etat des piles /
 Batteriezustandsanzeige / Icono de Bateria
 Baja / Ícone de bateria com carga baixa /
 バッテリーアイコン / 電池电量不足图标

ON (Measure) / ON (Mesure) / ON (Messen) /
 ON (Medición) / ON (medida) / 测温ボタン /
 ON (測量)

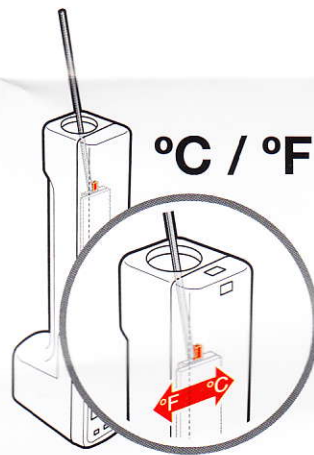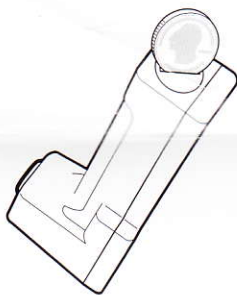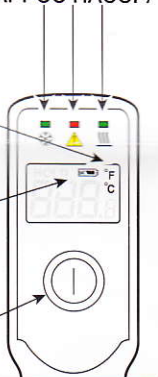

Target Illumination / Eclairage de la cible Optique /
 Messfleckbeleuchtung / Iluminación del Objetivo /
 Iluminação alvo / マーカー (照準) / 目标照明

Window for IR Optics / Sonde /
 Infraoptic / Ventana de Óptica IR /
 Janela para óticos IR /
 红外测量窗口
 レンズ

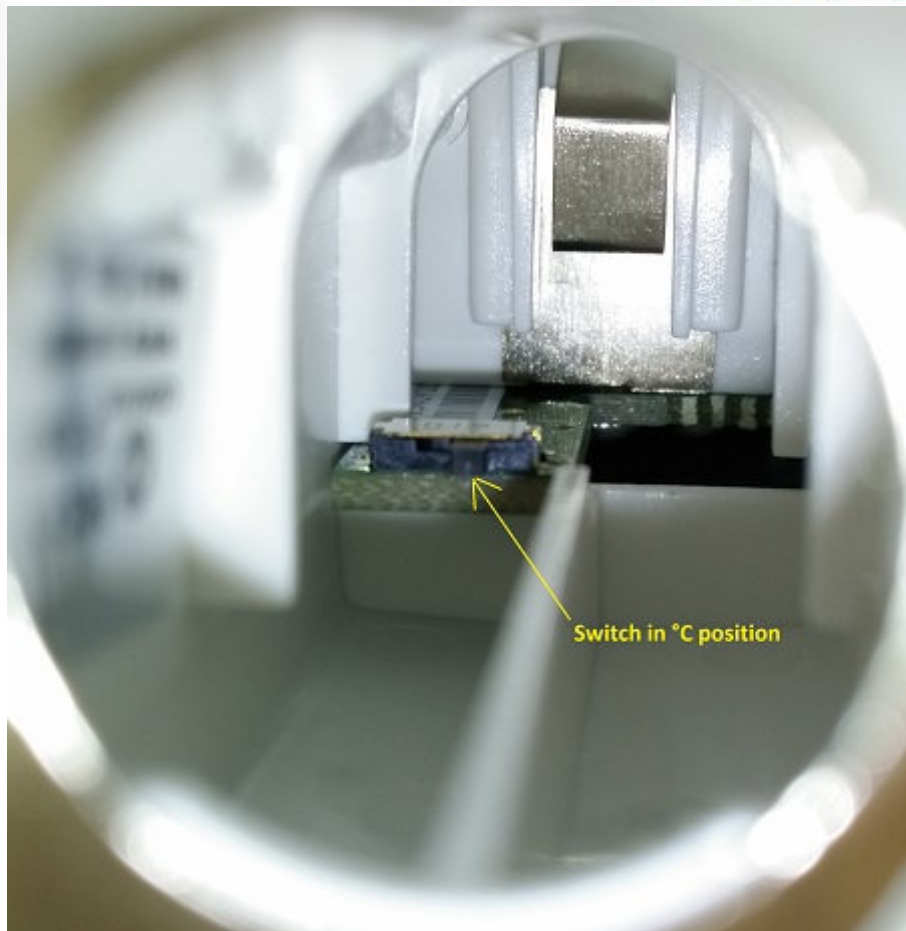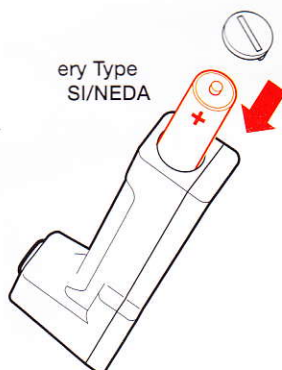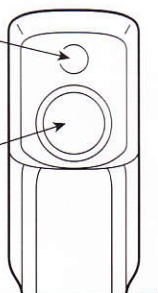

Switch in °C position

Image showing the position of the switch when looking in the battery compartment. Operate switch carefully with small screwdriver. To right position deg C to left is deg F. The switch is difficult to see (use a light) and it is about 2/3 of the way down.



For information on products or to locate your nearest
 Distributor contact us on:

WWW.ECEFAST.COM.AU AUSTRALIA 1-800-811-818
 SALES@ECEFAST.COM.AU NEW ZEALAND 0-800-ECEFAST