

IBM FlashSystem A9000R
Version 12.2.1

*Command-Line Interface (CLI)
Reference Guide*



Note

Before using this document and the product it supports, read the information in “Notices” on page 737.

Edition notice

Publication number: SC27-8711-08. This publication applies to version 12.2.1 of IBM FlashSystem A9000R and to all subsequent releases and modifications until otherwise indicated in a newer publication.

© Copyright IBM Corporation 2016, 2018.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

About this guide. ix

Intended audience	ix
Conventions used in this guide	ix
Related information and publications	ix
IBM Publications Center	x
Sending or posting your comments	x
Getting information, help, and service	x

Chapter 1. Overview of the command-line interface (CLI) 1

Overview of the XCLI utility	1
Installing and starting the XCLI	1
Exiting an interactive XCLI session	3
Using the CLI	4
Interactive and basic modes	4
Understanding the command syntax	6
Using identification parameters	7
Display options	11
Running commands in batch mode	12
Displaying CLI help and the XCLI utility version	14

Chapter 2. Host and cluster management commands 15

Adding a host to a cluster	15
Creating a cluster	16
Deleting clusters.	17
Listing clusters	18
Removing a host from a cluster.	19
Renaming clusters	20
Adding a port to a host	20
Defining a new host	22
Deleting a host	24
Listing hosts	25
Listing ports	26
Removing a port from a host	27
Renaming a host.	28
Updating a host definition	29
Mapping a volume to a host or cluster	30
Listing the mapping of volumes to hosts or clusters	33
Setting the special type of hosts or clusters	34
Listing hosts/clusters to which a volume is mapped	35
Unmapping a volume from a host or cluster	36
Setting the default idle time before unmapping a volume	38
Retrieving the default idle time before unmapping a volume	39
Creating a performance class	39
Deleting a performance class	40
Renaming a performance class	41
Listing details of performance classes.	42
Adding a host to a performance class.	43
Removing a host from its performance class	44
Adding a pool to a performance class	45
Removing a pool from its performance class	46
Adding a volume to a performance class	46

Removing a volume from its performance class	47
Adding a domain to a performance class	48
Removing a domain from its performance class	49
Setting the rate for a performance class	50
Listing host profiles	51
Updating the host profile.	52
Removing the profile of the specified host	53
Enabling the host profiler.	53
Disabling the host profiler	54

Chapter 3. Volume management commands 55

Clearing reservations of a volume	55
Listing reservation keys	55
Listing volume reservations	56
Copying volumes	57
Creating a volume	60
Deleting a volume	62
Formatting a volume	64
Listing volumes	66
Listing a volume's extended attributes	68
Locking a volume	69
Renaming a volume	71
Resizing a volume	72
Unlocking a volume	76

Chapter 4. Volume snapshot management commands 79

Changing a snapshot deletion priority	79
Creating a snapshot	80
Deleting a snapshot	84
Duplicating a snapshot	85
Formatting a snapshot.	87
Listing snapshot information	88
Restoring a volume from a snapshot	90

Chapter 5. Consistency group management commands 93

Adding a volume to a consistency group	93
Creating consistency groups	97
Deleting a consistency group	98
Listing consistency groups	99
Removing a volume from a consistency group	100
Renaming a consistency group	102
Creating a cross-system consistency group.	103
Associating an existing consistency group with a cross-system consistency group definition	104
Removing a consistency group from a cross-system consistency group	106
Adding a remote system name to a cross-system consistency group definition	107
Removing a remote system from a cross-system consistency group	108
Listing cross-system consistency group definitions	109

Retrieving remote systems in a specified cross-system consistency group	110
Deleting a cross-system consistency group	111
Listing cross-system consistency group definitions	111

Chapter 6. Snapshot set management commands 113

Snapshotting a consistency group	113
Changing a snapshot group deletion priority	116
Deleting a snapshot group	117
Disbanding a snapshot group	118
Duplicating a snapshot group	119
Formatting a snapshot group	121
Listing snapshot groups	122
Locking a snapshot group	124
Renaming a snapshot group	125
Restoring a consistency group from a snapshot group	126
Unlocking a snapshot group	128
Setting a snapshot group descriptor	129
Returning a snapshot group's descriptor	130

Chapter 7. Storage pool management commands 131

Moving a consistency group between storage pools	131
Changing the pool limitation, performance class, or threshold parameters	133
Changing pool settings for snapshots	135
Creating storage pools	137
Deleting a storage pool	139
Listing storage pools	140
Renaming a storage pool	141
Resizing a storage pool	142
Moving a volume between storage pools	144

Chapter 8. System management commands 147

Displaying the values of configuration parameters	147
Setting configuration parameters	148
Testing the DNS	150
Displaying help	151
Displaying the current maintenance urgency	152
Shutting down the system	153
Listing the operational state	154
Displaying system usage and data reduction statistics	154
Displaying information about effective and physical capacity	156
Displaying information about effective capacity	157
Displaying system capacity thresholds	158
Changing a system capacity threshold	159
Resuming the system's normal operation	160
Displaying the current time	161
Setting the system's time	162
Listing optional time zones	163
Setting the time zone	163
Printing the current system version	164
Displaying the values of VPD parameters	165
Setting VPD parameters	166
Displaying the system's MIB file	168

Retrieving the electronic license acceptance status	169
Retrieving a fragment of the electronic license file	170
Accepting the electronic license agreement	171
Enabling command auditing	172
Disabling command auditing	172
Displaying the command audit state.	173
Configuring audit servers	174
Checking the command audit state	174
Retrieving the list of Flash VDisks	175
Enabling CIM service.	176
Disabling the CIM service	177
Displaying the CIM service state	177

Chapter 9. Remote target connectivity commands 179

Setting the threshold of a link disruption duration that triggers an event.	179
Updating the target's mirroring configuration	180
Activating connectivity to a remote target	181
Deactivating connectivity to a remote target	182
Defining connectivity to a remote target	183
Deleting connectivity to a remote target	185
Listing target connectivity definitions	186
Defining a remote target.	187
Deleting a remote target.	189
Listing remote targets	191
Allowing remote mirroring access	192
Activating a port	193
Adding a new port to a remote target	194
Deactivating a port	195
Deleting a port from a remote system	196
Listing the ports of a remote target	197
Renaming a remote target	198
Updating the target configuration	199
Adding a Quorum Witness to a target	200
Removing a Quorum Witness from a target	201

Chapter 10. Remote mirroring commands 203

Canceling a snapshot mirror (ad hoc sync job)	203
Creating a snapshot mirror (ad hoc sync job)	205
Activating mirroring	210
Changing the RPO for local or remote system	213
Changing the designation of mirroring peers	215
Changing the mirroring schedule for remote slave peers	217
Changing the role of a mirrored volume	219
Changing a mirroring schedule for local peers	222
Creating a mirroring definition	223
Deactivating mirroring	230
Deleting a remote mirroring definition	232
Viewing the mirroring status	235
Obtaining statistics on past sync jobs	238
Switching roles between master and slave.	239
Retrieving RPO thresholds	241
Setting an RPO threshold	242
Changing the interval of a schedule	243
Creating a schedule object	245
Triggering a schedule.	247
Deleting a schedule object	248

Listing a schedule object	249
Renaming a schedule	250
Viewing sync job status	250

Chapter 11. HyperSwap commands 253

Creating a HyperSwap relationship	253
Viewing the status of HyperSwap volumes and consistency groups	259
Activating a HyperSwap relationship	262
Deactivating a HyperSwap relationship	265
Deleting a HyperSwap relationship	266
Switching roles between Master and Slave volumes	269
Changing a peer role in a HyperSwap volume	271
Restoring the availability of a Master volume.	274
Creating a HyperSwap volume snapshot (ad hoc sync job)	275
Changing the designation of HyperSwap relationship peers	279
Enabling automatic failover in a HyperSwap relationship	281
Disabling automatic failover in a HyperSwap relationship	283
Converting a HyperSwap relationship into a sync mirror	284
Converting a sync mirror into a HyperSwap relationship	285
Creating a new Quorum Witness	288
Listing Quorum Witnesses	290
Updating a Quorum Witness definition.	292
Renaming a Quorum Witness	293
Deleting a Quorum Witness	294
Activating a Quorum Witness	295
Deactivating a Quorum Witness	296
Listing the Quorum Witness connection status	297
Getting Quorum Witness information	299

Chapter 12. Data migration commands 301

Activating data migration	301
Deactivating data migration	302
Defining data migration configuration	303
Deleting a data migration process	305
Listing data migration statuses	307
Testing the data migration definition	308

Chapter 13. IBM Hyper-Scale Mobility commands 309

Creating an IBM Hyper-Scale Mobility relation	309
Activating a volume migration	313
Deactivating IBM Hyper-Scale Mobility migration	315
Aborting a defined or activated IBM Hyper-Scale Mobility process	316
Moving the IBM Hyper-Scale Mobility source volume to a Proxy state	317
Deleting an IBM Hyper-Scale Mobility relation	319
Listing the IBM Hyper-Scale Mobility status	320

Chapter 14. Event handling commands 323

Generating a custom event	323
Generating a CSS product event	324

Defining a new event notification destination.	325
Deleting a destination	328
Listing event notification destinations	329
Renaming a destination	331
Testing a destination	332
Updating an event notification destination	333
Adding a destination to a destination group	336
Creating a destination group	338
Updating an event notification destination group	339
Deleting a destination group	340
Listing destination groups	340
Removing a destination from a destination group	341
Renaming a destination group.	342
Clearing alerting events	343
Listing events	344
Listing uncleared alerting events	347
Setting the threshold for event notification	348
Listing thresholds	349
Activating a rule	350
Creating event notification rules	350
Deactivating a rule	354
Deleting event notification rules	354
Listing event notification rules.	355
Renaming event notification rules	356
Updating an event notification rule	357
Defining an SMS gateway	360
Deleting an SMS gateway	362
Listing SMS gateways	363
Prioritizing SMS gateways	364
Renaming an SMS gateway.	365
Updating an SMS gateway	366
Defining a new SMTP gateway	367
Deleting an SMTP gateway.	369
Listing SMTP gateways	370
Prioritizing SMTP gateways	371
Renaming an SMTP gateway	372
Updating an SMTP gateway	373
Generating an XMPNS admin control event	374

Chapter 15. IP configuration commands 377

Creating a new IP interface.	377
Deleting IP interfaces.	378
Listing IP interface configuration	379
Listing IP interface addresses	381
Showing the status and configuration of Ethernet ports	382
Renaming an IP interface	384
Printing the ARP database of an IP interface	385
Testing the traceroute to a remote IP	385
Testing the traceroute to a remote IP	386
Updating an IP interface.	387
Defining a new IPSec connection	390
Updating an existing IPSec connection	391
Removing an existing IPSec connection.	393
Listing IPSec connections	394
Listing IPSec tunnels	394
Connecting to a support center	395
Defining a support center	397
Deleting a support center	398
Disconnecting from a support center	398

Listing support centers	399
Listing the status of all support centers	400
Configuring the support center connection to enable automatic connect on restart	401
Listing the configuration of the automatic connection to a support center.	402
Creating a new IP access group	403
Removing an address from an IP access group	404
Adding a new address to an IP access group	405
Deleting an existing IP access group.	406
Renaming an existing IP access group	406
Listing IP access groups	407
Listing IP access groups	408

Chapter 16. PKI configuration commands 409

Listing PKI items	409
Generating a certificate signing request.	410
Generating a private key and CSR	411
Deleting the PKI content	412
Changing a PKI symbolic name	412
Importing a signed certificate	413
Importing a PKCS#12 certificate	415
Displaying the details of a signed certificate	416
Updating a PKI certificate or services	417

Chapter 17. InfiniBand commands . . . 421

Listing the configured InfiniBand ports.	421
Listing data counters for the enabled InfiniBand switch ports	422
Listing error counters for enabled InfiniBand switch ports	423
Listing the status of the enabled InfiniBand switch ports	424
Listing data counters for the enabled InfiniBand HCA ports	425
Listing error counters for the enabled InfiniBand HCA ports.	426
Listing the statuses of the enabled InfiniBand HCA ports	427
Listing the configured InfiniBand switches	428
Listing the configured InfiniBand switch management addresses	430
Listing the configured InfiniBand switch firmware versions	431
Listing the configured InfiniBand switch power values	432
Listing the configured InfiniBand switch voltage values	433
Listing the configured InfiniBand switch temperature values	435
Listing the configured InfiniBand switch fan parts	436
Listing the configured InfiniBand switch PSUs	437
Listing the configured InfiniBand switch BBUs	438
Listing the configured InfiniBand switch fans.	440

Chapter 18. Access control commands 443

Adding an access control definition	443
Deleting an access control definition.	444

Listing access control definitions	445
Adding an LDAP server definition	446
Testing an LDAP configuration	448
Listing LDAP configuration parameters	449
Configuring LDAP in the system.	451
Listing LDAP servers defined in the system	455
Listing LDAP server users	456
Listing LDAP-based authentication mode	457
Enabling or disabling LDAP-based authentication mode	458
Updating an LDAP server definition	459
Removing an LDAP server definition	460
Launching the ldapsearch utility	461
Defining a new user	463
Deleting a user	465
Adding users to user groups	467
Creating user groups	468
Deleting a user group	470
Listing user groups	471
Removing a user from a user group	471
Renaming user groups	472
Updating a user group	473
Listing users.	475
Renaming users	476
Updating a user definition	477
Creating a new domain	480
Updating a domain definition	482
Renaming a domain	484
Deleting a domain.	485
Listing domains	486
Listing users per domain	487
Listing objects in domains	488
Listing the global domain	489
Attaching an object to a domain	490
Disassociating object from a domain.	492
Associating users to a domain.	494
Removing a user from a domain	495
Adding a pool to a domain.	497
Removing a pool from a domain	498
Moving a pool from one domain to another	499
Setting the domain attribute	501
Setting domain-related policies	502
Displaying domain-related policies	503
Specifying a user associated with IBM Hyper-Scale Manager	504
Retrieving the user associated with the IBM Hyper-Scale Manager.	505
Setting the application administrator's scope of commands	506
Getting the application administrator's scope of commands	506

Chapter 19. Fibre channel and iSCSI configuration and status commands . 509

Discovering FC hosts	509
Changing FC port configuration	510
Listing FC ports	511
Listing FC port tests	513
Starting an FC port test	516
Aborting an FC port test	517
Listing connectivity to hosts	518

Chapter 20. Flash enclosure maintenance commands 521

Listing Flash enclosure status 521
Listing a Flash canister status 522
Listing a Flash card status 524
Retrieving the list of Flash fans 525
Retrieving the list of Flash IB adapters 526
Retrieving the Flash control connectivity list 527
Retrieving the list of Flash PSUs 529
Retrieving the list of Flash PIBs 530
Retrieving the list of Flash LED cards 530
Listing Flash BBU components 531
Retrieving the serial number of a Flash enclosure 1S 533

Chapter 21. Hardware maintenance commands 535

Monitoring the redistribution process 535
Displaying the system's average power consumption 536
Getting the values for calculating the system's average power consumption 536
Displaying the system's average temperature 537
Enabling XIV Support access 538
Disabling XIV Support access 539
Displaying the XIV Support window 540
Listing system components 541
Listing module configuration 544
Listing the internal temperature of modules 546
Listing boot media devices in the system 548
Viewing vault devices in the system 550
Listing BBUs in the system 552
Listing PSUs in a module 555
Listing compression adapters in the system 556
Listing fans in a module 557
Listing NICs in the system 559
Listing DIMMs in the modules 561
Listing CPUs in the modules 566
Listing InfiniBand host card adapters in the storage system 568
Listing CNA adapters in the system 569
Listing module LEDs in the system 570
Listing data disk devices in the system 575
Listing service statuses 577
Listing system components that require service 578
Listing trace snapshot on a module 579
Creating a trace snapshot 580

Chapter 22. Statistics commands 583

Getting performance statistics 583

Retrieving usage history 588

Chapter 23. Metadata commands 591

Setting metadata 591
Deleting metadata 592
Listing metadata 594
Setting user metadata 595
Listing user metadata 595
Deleting user metadata 596

Chapter 24. Encryption enablement and support commands 599

Disabling encryption 599
Enabling encryption 600
Defining a key server 603
Removing a key server 605
Displaying key server status 606
Checking key server status 607
Obtaining a new master key 608
Renaming a key server 609
Changing key server properties 610
Entering a recovery key 612
Generating recovery keys 613
Retrieving the security administrator's recovery key 615
Rekeying the security administrators 617
Displaying recovery key status 618
Recovering key verification 620
Recovering key share information 621
Finishing the recovery process 622
Obtaining a new master key 623
Changing the key management scheme 624
Viewing the key scheme 626

Chapter 25. Security configuration commands 627

Listing configuration parameters for a communication protocol 627
Setting configuration parameters for a communication protocol 628

Chapter 26. Events 629

Chapter 27. Return codes 735

Notices 737
Trademarks 738

About this guide

This guide describes the command-line interface (CLI) commands for IBM® FlashSystem A9000R.

Intended audience

This document serves as a reference for system administrators and all IT staff who manage the IBM FlashSystem® A9000 system from the CLI. This document is also a reference for programmers who want to automate storage system commands.

Conventions used in this guide

Command examples and output examples are documented in monospaced font, with a frame around it.

For example:

- **Command:**

```
vol_rename vol=DBVolume new_name=DBVolume1
```

- **Output:**

```
Command completed successfully.
```

Access control refers to the types of user accounts that are allowed to use a specific command.

Return codes are the possible codes that the system can return after a specific command is issued and completed either successfully or with an error.

Related information and publications

You can find additional information and publications related to IBM FlashSystem A9000R on the following information sources:

- IBM FlashSystem A9000R on IBM Knowledge Center (ibm.com/support/knowledgecenter/STJKN5) – on which you can find the following related publications:
 - IBM FlashSystem A9000R – Release Notes
 - IBM FlashSystem A9000R – Product Overview
 - IBM FlashSystem A9000R – Planning Guide
 - IBM FlashSystem A9000 and IBM FlashSystem A9000R – Application Programming Interface (API) Reference Guide
- IBM Flash Storage and Solutions marketing website(ibm.com/systems/storage/flash)
- IBM Storage Redbooks® website (redbooks.ibm.com/portals/storage)
- IBM Hyper-Scale Manager on IBM Knowledge Center (ibm.com/support/knowledgecenter/SSUMNQ)

IBM Publications Center

The IBM Publications Center is a worldwide central repository for IBM product publications and marketing material.

The IBM Publications Center website (ibm.com/shop/publications/order) offers customized search functions to help you find the publications that you need. You can view or download publications at no charge.

Sending or posting your comments


Your feedback is important in helping to provide the most accurate and highest quality information.

Procedure

To submit any comments about this guide:

- Go to IBM FlashSystem A9000R on IBM Knowledge Center (ibm.com/support/knowledgecenter/STJKN5), drill down to the relevant page, and then click the **Feedback** link that is located at the bottom of the page.

By adding a comment, you accept our [IBM Knowledge Center Terms of Use](#). Your comments entered on this IBM Knowledge Center site do not represent the views or opinions of IBM. IBM, in its sole discretion, reserves the right to remove any comments from this site. IBM is not responsible for, and does not validate or confirm, the correctness or accuracy of any comments you post. IBM does not endorse any of your comments. All IBM comments are provided "AS IS" and are not warranted by IBM in any way.

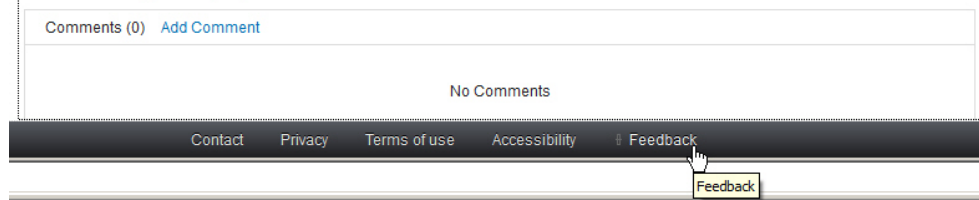

The feedback form is displayed and you can use it to enter and submit your comments privately.

- You can post a public comment on the Knowledge Center page that you are viewing, by clicking **Add Comment**. For this option, you must first log in to IBM Knowledge Center with your IBMid.
- You can send your comments by email to starpubs@us.ibm.com. Be sure to include the following information:
 - Exact publication title and product version
 - Publication form number (for example: SC01-0001-01)
 - Page, table, or illustration numbers that you are commenting on
 - A detailed description of any information that should be changed

Note: When you send information to IBM, you grant IBM a nonexclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

Getting information, help, and service

If you need help, service, technical assistance, or want more information about IBM products, you can find various sources to assist you. You can view the following websites to get information about IBM products and services and to find the latest technical information and support.

- IBM website (ibm.com[®])

- IBM Support Portal website (www.ibm.com/storage/support)
- IBM Directory of Worldwide Contacts website (www.ibm.com/planetwide)
- IBM developerWorks Answers website (www.developer.ibm.com/answers)
- IBM service requests and PMRs (ibm.com/support/servicerequest/Home.action)

Chapter 1. Overview of the command-line interface (CLI)

The command-line interface (CLI) provides a mechanism for issuing commands to manage and maintain the storage system. CLI commands are entered on the IBM XCLI utility.

This section explains how to install and start the XCLI utility. It also provides information about interactive and basic modes for running commands in the utility and an overview of the CLI command structure and parameters.

The following topics are covered:

- “Overview of the XCLI utility”
- “Using the CLI” on page 4

Overview of the XCLI utility

This section describes how to download, install, and start the IBM XCLI utility. It also explains how to log off the XCLI.

The following topics are covered:

- “Installing and starting the XCLI”
- “Exiting an interactive XCLI session” on page 3

Installing and starting the XCLI

This information describes how to download and install the IBM XCLI utility. The XCLI is available on Microsoft Windows, Linux and other operating systems.

About this task

Note: For the installation requirements and a list of available packages, see the *IBM Hyper-Scale Manager Release Notes* on the IBM Knowledge Center website.

Procedure

Perform these steps to download and install the XCLI:

1. Download the IBM Hyper-Scale Manager installation package from the IBM Fix Central website.
2. Perform one of the following procedures for your operating system.
 - **Windows:** Double-click the installation file, and follow the instructions on the screen.
 - **Linux:** Extract the installation file to a designated folder on your system, using the following command:

```
tar -xzf file_name.tar
```
 - **AIX®, HP-UX, Solaris:** Extract the installation file using the following command:

```
gunzip file_name.tar.gz
```

Then extract the file to a designated folder on your system, using the following command:

```
tar -xvf file_name.tar
```

3. Start the XCLI depending on the hosting operating system and operational mode.

Starting the XCLI on a Windows system

You can start the XCLI on a Windows system in either interactive or basic mode.

Interactive mode:

About this task

To run commands in interactive mode, perform the following steps:

Procedure

1. Click **Start > Programs > IBM XIV > XCLI** to open an XCLI session window.
2. Follow the instructions on the screen and type the following information:
 - a. Storage system IP address or DNS
 - b. User name
 - c. Password

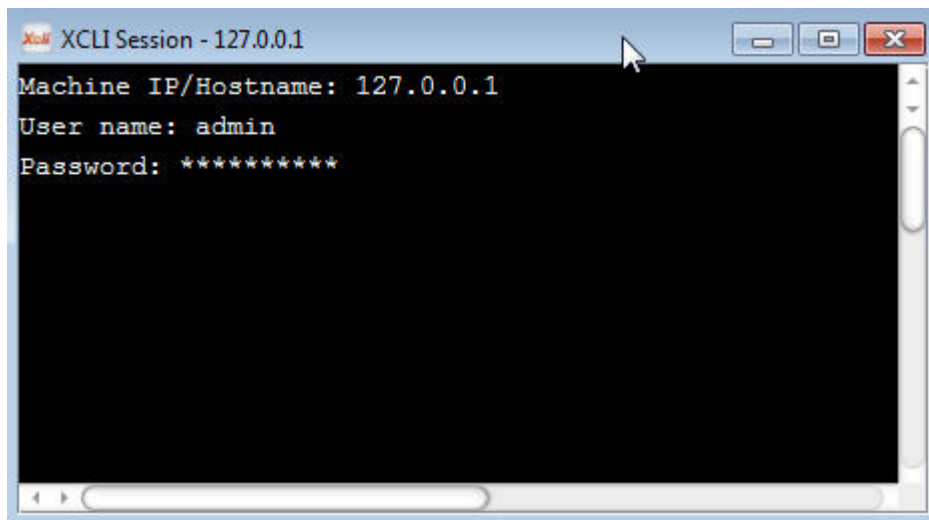


Figure 1. XCLI terminal

3. You are now connected to the specified storage system. The XCLI prompt appears in the session window. The window title includes the name of the storage system to which the XCLI is connected.
4. Run any CLI command from this prompt.

Note: The font size in the XCLI utility terminal is customizable. To increase the font size, press **CTRL+**. To decrease the font size, press **CTRL-**.

Basic mode:

About this task

To run commands in basic mode, perform the following steps:

Procedure

1. Open a Windows command session.
2. Type `cd c:\program files\IBM\Storage\XIV.`

3. Run any CLI command, including the XCLI identification parameters, for example:

```
xcli -u user -p ***** -m 127.0.0.1 vol_list
```

Starting the XCLI on a Linux system

You can start the XCLI on a Linux system in either interactive or basic mode.

Interactive mode:

About this task

To run commands in interactive mode, perform the following steps:

Procedure

1. Type `xcli -w` to open a new session.
2. Follow the instructions on the screen and type the following information:
 - a. User name
 - b. Password
 - c. Storage system IP address or DNS
3. You are now connected to the specified storage system. The XCLI prompt appears in the session window. You can run any CLI command from this prompt.

Basic mode:

About this task

To run commands in basic mode, enter the command including the XCLI identification parameters, for example:

```
xcli -u user -p ***** -m 127.0.0.1 vol_list
```

Exiting an interactive XCLI session

When running XCLI in interactive mode, you can exit the interactive session by either closing the session window or running the **exit** command.

To terminate an interactive XCLI session automatically after the predefined period, set the **session_timeout** property in the `xiv-general.properties` file, that is stored in the `properties` directory. The value of **session_timeout** is defined in minutes.

The location of the `properties` directory varies among operating systems as follows:

Windows

```
%APPDATA%\XIV\GUI12\properties
```

Non Windows

```
$USERDIR/.xiv/GUI12/properties
```

Using the CLI

This section provides information about interactive and basic modes for running CLI commands and an overview of the CLI command structure and parameters.

The following topics are covered:

- “Interactive and basic modes”
- “Understanding the command syntax” on page 6
- “Using identification parameters” on page 7
- “Display options” on page 11
- “Running commands in batch mode” on page 12
- “Displaying CLI help and the XCLI utility version” on page 14

Interactive and basic modes

You can use the CLI in two modes: interactive and basic.

The differences between these two modes are as follows:

- Basic mode requires you to log in to the storage system each time you issue a command, but the interactive mode requires you to log in only once.
- In basic mode, you must enter the entire command syntax. In interactive mode, you can enter a shorter syntax.
- Interactive mode offers several command and argument completion features.

The following example shows the command syntax for each of these modes:

Basic

```
xcli -u user -p password -m 127.0.0.1 vol_list
```

Interactive

```
vol_list
```

Note: Each of the batch-mode parameters in these examples is explained later in this chapter.

Interactive mode features

Running CLI commands in interactive mode provides command and argument completion, along with possible values to these arguments.

About this task

The CLI offers several ways to interactively complete command names.

Procedure

1. To complete the name of a command, type one or more characters and press Tab. In the following example, the CLI adds a character to the name of a command that starts with **vol**. The first click on Tab adds a character.

```
>>vol  
>>vol_
```


- Next, to list commands, type one or more characters and press Tab twice (Tab-Tab).

```
>>vol_
vol_by_id      vol_copy      vol_create    vol_delete
vol_format     vol_list     vol_lock     vol_mapping_list
vol_move       vol_rename   vol_resize    vol_unlock
```

Example

- This example lists all commands that start with the letter **v**:

```
>> v
version_get    vol_by_id     vol_copy      vol_create
vol_delete     vol_format   vol_list      vol_lock
vol_mapping_list vol_move     vol_rename    vol_resize
vol_unlock     vpd_config_get vpd_config_set
```

- This example lists all commands that start with the letters **cg**:

```
>> cg_
cg_add_vol     cg_create     cg_delete     cg_list
cg_move        cg_remove_vol cg_rename     cg_snapshots_create
```

Command Argument Completion:

The CLI can provide list arguments and argument values to help you complete a command.

About this task

To list arguments for a specific command, type the command name and press Tab. To list values for a specific argument, type the command name and argument, optionally specify one or more characters for the value, and then press Tab.

Procedure

- Listing arguments for a command. This example lists arguments for the **vol_create** command:

```
>> vol_create
vol= size= size_block= pool=
```

- Listing values for a specific argument. This example lists valid values for the **pool** argument that is required for the **pool_create** command:

```
>> pool_create pool=
8058 2nd Pool 8059 pool1
```

- Listing a subset of values for a specific argument. This example lists valid values that start with **v** for the **vol** argument that is required for the **vol_list** command:

```
>> vol_list vol=v
vol1 vol2
```

Understanding the command syntax

This information describes the general syntax for a CLI command in basic mode.

When in basic mode, the CLI uses the following general syntax:

```
xcli < <[ --file=FILE ] -c CONFIG|-m IP1 [-m IP2 [-m IP3]] >
-L|-a <config> -m IP1 [-m IP2 [-m IP3]]|-d IP1 [-m IP2 [-m IP3]] >|
[ -r ]
[ <-l | --list> | <-s | --csv> | <-x | --xml> ]
[ <-u | --user> user ]
[ <-p | --password> password ]
[-t [--fields=field1,field2,...]]
[command]
```

Command syntax quick reference

This information describes the command parameters and options that are available in the CLI basic mode.

Use the following table as a quick reference to the various parameters and options.

Options	Values
-f	Specifies the name of a configuration file that lists the storage system
-c	Specifies the storage system on which the command is to be run
-m	Specifies the IP address of the storage system on which the command runs
-L	Lists the storage systems, as read from the configuration file
-a	Specifies the name of the storage system
-d	Removes a storage system from the configuration file
-r	Specifies the name of a batch file that runs CLI commands
-l	Displays the command output in user-readable format
-s	Displays the command output in CSV format
-x	Displays the command output in XML format
-u	Specifies the user
-p	Specifies the password
-t	Manages the fields of the command output
-h	Displays command help
-y	Suppresses the Are you sure? prompt
-v	Displays the version of the XCLI on the screen
command	Runs the specified command

Syntax example

The CLI command syntax specifies the command to be run, along with its applicable parameters and their values.

In the following example, the parameters to the left of the **vol_list** command specify the storage system to which the command is being directed, and also specify the required user and password for this storage system:

```
xcli -u admin -p ***** -m 127.0.0.1 vol_list
```

Identification parameters

- u Specifies the user ID.
- p Specifies the password.

Storage system

The storage system is specified by either its IP address or name of the storage system as listed in the configuration file. See “Configuration parameters” on page 8 for more information.

- m Specifies the IP address of the storage system to which this command is directed.
- c Specifies the name of the storage system to which this command is directed, as it is defined in the configuration file (for example, my_system).

Command

vol_list

Specifies the command to be run. For more information about running commands, see “Interactive mode features” on page 4.

Using identification parameters

This information describes the parameters used to set the user, password, and storage system.

The following topics are covered:

- “Setting user and password parameters”
- “Identifying and configuring a storage system” on page 8

Setting user and password parameters

The CLI and the storage system provide a password-controlled user ID as a security mechanism for controlling CLI operations.

When running in basic mode, specify the user name and password as follows:

```
xccli -u admin -p ***** -c my_system vol_list
```

In this command:

Identification parameters

- u Specifies the user ID.
- p Specifies the password.

my_system

- c Specifies the name of the storage system to which this command is directed, as it is defined in the configuration file (for example, my_system).

Command

vol_list

Specifies the command to be run.

The password handling mechanism performs as follows:

1. Checking the user:

- The **-u** or **--user** parameter on the command line is checked first and its value is used as the user name.
 - If the **-u** or **--user** parameter is not specified, the `XIV_XCLIUSER` environment variable is used as a user name.
2. Checking the password:
- The **-p** or **--password** parameter on the command line is checked first and its value is used as the password.
 - If the **-p** or **--password** parameter is not specified, the `XIV_XCLIPASSWORD` environment variable is used as the password.

Note: If you do not specify both the user ID and the password, the command fails.

Identifying and configuring a storage system

This information describes the parameters used to identify the storage system on which a command is to run, and how to create a configuration file to manage the storage systems that you can use.

Configuration parameters:

Most CLI commands are directed to a specific storage system using the IP address. You must provide at least one address and up to three addresses per storage system.

To provide the storage system IP address, log in to an interactive session or specify the configuration file that stores the storage system IP address or addresses.

Specifying a storage system using its IP address

In the following example, the command is directed to a storage system with an IP address of 127.0.0.1:

```
xcli -u admin -p ***** -m 127.0.0.1 vol_list
```

In this command:

Identification parameters

- u** Specifies the user ID.
- p** Specifies the password.

Storage system

The storage system is specified by its IP address.

- m** Specifies the IP address of the storage system to which this command is directed.

Command

vol_list

Specifies the command to be run.

Specifying a storage system by using a configuration file

In the following example, the command is directed to a storage system that is listed on the `my_system` configuration file:

```
xcli -u admin -p ***** -c my_system vol_list
```

In this command:

Identification parameters

- u Specifies the user ID.
- p Specifies the password.

Storage system

The storage system is specified by its name on the configuration file.

- c Specifies the name of the storage system to which this command is directed, as it is defined in the configuration file (for example, `my_system`).

Command

- `vol_list`
Specifies the command to be run.

Creating a configuration file:

You can use the configuration file to manage a list of the storage systems that you are working with.

Use the following options to add and subtract storage systems from this file and to list them.

Listing the available storage systems

In the following example, the configuration information is read from a default file location or from the file that is specified with `[-f file]`.

```
xcli [-f file] -L
```

Adding a new storage system to the configuration file

In the following example, IP1...IP3 are added to the configuration file at the default file location. If applicable, the addresses are added to the file that is specified in `[-f file]`. The `<config>` variable represents the configuration name of the storage system that you are adding to the list.

```
xcli [-f file] -a <config> -m IP1 [-m IP2 [-m IP3]]
```

Removing a storage system from the configuration file

In the following example, IP1...IP3 are removed from the configuration file. If applicable, the addresses are removed from the file that is specified with `[-f file]`.

```
xcli [-f file] -d IP1 [-m IP2 [-m IP3]]
```

Location of the configuration file

The configuration file is located in the following directory, depending on the operating system. You do not specify the location of the configuration file when you add or remove storage systems from the configuration.

Windows

\Application Data\XIV\GUI12\properties

UNIX In the home folder under `.xiv`

Certificate management

This section describes the way certificates are managed via the XCLI utility.

The general format of the certificate commands is:

```
xcli -C <command> [ <p1>=<v1> [<p2>=<v2>]...]
```

The available commands are: list, show, import and remove.

List [type=<type>]

This command lists the trusted certificates (global and private). This command accepts the type of list as a parameter.

Type = all (default)

Lists all trusted certificates.

For example:

```
xcli -C list
```

Private

Lists all private trusted certificates.

For example:

```
xcli -C list type=private
```

Global

Lists all global trusted certificates.

Show alias=<alias>

This command displays the certificate details. This command accepts the name of the specific certificate as a parameter. For example:

```
xcli -C show alias=abcd
```

Import pem=<pem_file_path> [alias=<alias>]

This command imports a certificate (in PEM format) into the list of trusted certificates. This command accepts the location of the certificate as a mandatory parameter and the name into which the certificate will be renamed. For example:

```
xcli -C import pem=C:\abc\def\cert.pem  
xcli -C import alias=abcd pem=C:\abc\def\cert.pem
```

Remove alias=<alias>

This command removes a certificate from the list. For example:

```
xcli -C remove alias=abcd
```

Display options

This information describes the formats that you can choose to display the command output.

The following topics are covered:

- “Using display options”
- “Table display options” on page 12

Using display options

Output from an CLI command can be displayed in a list, comma-separated value (CSV) and XML formats. You can specify only one format. If you do not specify the format, the output defaults to a list.

The display options are:

- l Displays command output in a list (also known as user-readable format).
- s Displays command output in CSV format.
- x Displays command output in XML format.

Use the display options as follows:

Interactive mode

```
vol_list -s
```

Basic mode

```
xcli -u user -p ***** -m 127.0.0.1 -s vol_list
```

In this command:

Identification parameters

- u Specifies the user ID.
- p Specifies the password.

Storage system

The storage system is specified by either its IP address or name of the storage system as listed in the configuration file. See “Configuration parameters” on page 8 for more information.

- m Specifies the IP address of the storage system to which this command is directed.
- c Specifies the name of the storage system to which this command is directed, as it is defined in the configuration file (for example, my_system).

Display option

- s Displays command output in CSV format.

Command

vol_list

Specifies the command to be run. For more information about running commands, see “Interactive mode features” on page 4.

Table display options

The list option displays the command output in a user-readable format. When running a command with a list option, you can specify which table columns are displayed on the screen.

Determine the way that the table is displayed as follows:

Interactive mode

```
vol_list -f "size"
```

Single-command mode

```
xcli -u admin -p ***** -m 127.0.0.1 vol_list -f "size"
```

In this command:

Identification parameters

- u Specifies the user ID.
- p Specifies the password.

Storage system

The storage system is specified by either its IP address or name of the storage system as listed in the configuration file. See “Configuration parameters” on page 8 for more information.

- m Specifies the IP address of the storage system to which this command is directed.
- c Specifies the name of the storage system to which this command is directed, as it is defined in the configuration file (for example, my_system).

Table display option

-f "size"

Specifies the columns to be displayed. Multiple columns can be specified by a comma-separated list.

In this example, only the **Size** column is displayed. You can list any combination of the table columns.

Command

vol_list

Specifies the command to be run. For more information about running commands, see “Interactive mode features” on page 4.

Viewing the available columns

You can view all of the available table's columns by running: `xcli.py help command=<command_name> -f fields -z`.

The result provides information about the command, including a list of all of its output fields.

Running commands in batch mode

CLI commands can be grouped together and run in a batch. For example, you can use batch mode to run an identical set of commands on multiple storage systems.

Creating a batch file for the commands

Create a text file and write the commands without the **xcli** prefix or CLI parameters. For example:

```
pool_create pool=pool_00001 hard_size=171 soft_size=171 snapshot_size=65
vol_create vol=vol_00010 size=17 pool=pool_00001
vol_list vol=vol_00010
```

This example contains the following commands:

- The **pool_create** command, along with its arguments. This command creates a storage pool, which is a prerequisite for creating a volume.
- The **vol_create** command, along with its arguments. This command creates a volume in the pool that has just been created.
- The **vol_list** command displays the details of the newly created volume.

Name the script file and save it.

Running a batch file

To run the batch file, you must specify the CLI parameters:

```
xcli -u admin -p ***** -m 127.0.0.1 -r
"C:\Documents and Settings\avia\xcli\xcli_script.txt"
```

In this command:

Identification parameters

- u Specifies the user ID.
- p Specifies the password.

Storage system

The storage system is specified by either its IP address or name of the storage system as listed in the configuration file. See “Configuration parameters” on page 8 for more information.

- m Specifies the IP address of the storage system to which this command is directed.
- c Specifies the name of the storage system to which this command is directed, as it is defined in the configuration file (for example, my_system).

The batch parameter

- r Specifies the name of the batch file to run on the storage system.

Viewing the output

The three commands in the previous example create a pool, then create a volume, then display the volume details. The following output is returned from running these three commands in batch mode:

- Confirmation that a pool was created
- Confirmation that a volume was created
- Table with the details of the newly created volume

Failure of batch mode

When one of the commands that run in batch mode fails, the following actions occur:

1. The script exits immediately.
2. No commands after the failing command are run.
3. An error message is displayed identifying the CLI command that failed.

Displaying CLI help and the XCLI utility version

This information describes how to display help for the CLI command and the version of the XCLI utility.

About this task

The following command displays the help text for the CLI in batch mode:

```
xcli <-h | --help>
```

For details about the **help** command, see “Displaying help” on page 151.

The following command displays the XCLI utility version:

```
xcli <-v | --version>
```

Chapter 2. Host and cluster management commands

This section describes the command-line interface (CLI) for host and cluster management.

Adding a host to a cluster

Use the **cluster_add_host** command to add a host to a cluster.

```
cluster_add_host cluster=ClusterName host=HostName map=MapName
```

Parameters

Name	Type	Description	Mandatory
cluster	Object name	Name of the cluster to contain the host.	Y
host	Object name	Host to be added to the cluster.	Y
map	Enumeration	Defines whether to override the cluster mapping with the host mapping or vice versa, or append the cluster mapping on top of the host mapping.	Y

If the host already belongs to another cluster, the command fails. If the host already belongs to the specified cluster, the operation completes successfully, but has no effect.

Using the **map** parameter:

- If **map=cluster**, the mapping of the host and host type are overridden with the cluster's mapping and type.
- If **map=host**, the mapping of the cluster and its host type are overridden with the host's mapping and type. Use this value to add a host to an empty cluster, so that the cluster will obtain the host's mapping.
- If **map=clusterWithHostExceptions**, the host keeps its mapping and the cluster mapping is appended on top of it.

The host or cluster receives a single SCSI unit attention message, even if the change affects multiple volumes.

Example:

```
cluster_add_host cluster=Cluster1 host=Host1 map=cluster
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **HOST_BAD_NAME**
The host name does not exist.
- **CLUSTER_BAD_NAME**
The cluster name does not exist.
- **HOST_BELONGS_TO_ANOTHER_CLUSTER**
This host already belongs to another cluster.
- **HOST_AND_CLUSTER_HAVE_CONFLICTING_MAPPINGS**
Host mapping conflicts with cluster mapping.
- **HOST_AND_CLUSTER_HAVE_DIFFERENT_MAPPING_TYPE**
The host mapping type is not the same as the cluster mapping type.
- **HOST_NOT_IN_CLUSTERS_DOMAINS**
The host is not part of all of the domains the cluster is attached to.

Creating a cluster

Use the **cluster_create** command to create a new cluster.

```
cluster_create cluster=ClusterName [ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
cluster	Object name	Name of the cluster to be created.	Y	N/A
domain	N/A	The cluster will be attached to the specified domains. To define more than one domain, separate them with a comma. To attach the cluster to all existing domains, use "*".	N	none

The newly created cluster does not contain hosts, and has the default type, but no mapping.

Example:

```
cluster_create cluster=Cluster1
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CLUSTER_NAME_EXISTS**
The cluster name already exists.
- **MAX_CLUSTERS_REACHED**
The maximum number of defined clusters is already reached.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.

Deleting clusters

Use the **cluster_delete** command to delete a cluster.

```
cluster_delete cluster=ClusterName
```

Parameters

Name	Type	Description	Mandatory
cluster	Object name	Cluster to be deleted.	Y

This command deletes a cluster. All hosts contained in the cluster remain active and are not deleted. The special type of each host is set to the cluster's special type. The mapping of each host is set to the cluster's mapping. No I/O interruption is caused by this command.

Example:

```
cluster_delete cluster=Cluster1
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_ASSIGNED_CLUSTER**

Cluster *Cluster'* includes hosts. Are you sure you want to delete it?

Return codes

- **CLUSTER_BAD_NAME**

The cluster name does not exist.

Listing clusters

Use the **cluster_list** command to retrieve information about a specific cluster, or about all of them.

```
cluster_list [ cluster=ClusterName ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
cluster	Object name	Name of cluster to be listed.	N	All clusters.
domain	Object name	The domain name.	N	All Domains

The output provides each cluster's special type, and comma-separated lists of hosts, users, and user groups.

Example:

```
cluster_list
```

Output:

```
Name      Hosts  Type      Creator      User Group
-----
Cluster1  default xiv_maintenance
```

Field ID	Field output	Default position
name	Name	1
hosts	Hosts	2
type	Type	3
creator	Creator	4

Field ID	Field output	Default position
user_group	User Group	5

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Removing a host from a cluster

Use the `cluster_remove_host` command to remove a host from a cluster.

```
cluster_remove_host cluster=ClusterName host=HostName
```

Parameters

Name	Type	Description	Mandatory
<code>cluster</code>	Object name	Cluster name.	Y
<code>host</code>	Object name	Host to be removed from cluster.	Y

This command removes the specified host from a cluster. The host then no longer belongs to any cluster. The host's special type and mapping remain identical to the cluster's special type and mapping, and therefore, I/O is not interrupted. The association of the host with user or user groups remains the same as the cluster's association.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **HOST_BAD_NAME**
The host name does not exist.
- **CLUSTER_BAD_NAME**
The cluster name does not exist.
- **HOST_NOT_IN_CLUSTER**
This host does not belong to the specified cluster.

Renaming clusters

Use the **cluster_rename** command to rename a cluster.

```
cluster_rename cluster=ClusterName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
cluster	Object name	Cluster to be renamed.	Y
new_name	Object name	New name of cluster.	Y

This command renames the specified cluster.

Example:

```
cluster_rename cluster=Cluster1 new_name=Cluster2
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CLUSTER_BAD_NAME**
The cluster name does not exist.
- **CLUSTER_NAME_EXISTS**
The cluster name already exists.

Adding a port to a host

Use the **host_add_port** command to add a port address to a host.

```
host_add_port host=HostName < fcaddress=wwpn | iscsi_name=iSCSIName  
[ num_of_visible_targets=num ] >
```

Parameters

Name	Type	Description	Mandatory	
host	Object name	The host name.	Y	

Name	Type	Description	Mandatory	
fcaddress	N/A	FC address of the added port.	N	
iscsi_name	iSCSI initiator name	iSCSI initiator name of the newly added port.	N	
num_of_visible_targets	Integer	Limit the maximum number of target IP addresses to be reported on iSCSI discoveries invoked by this initiator port. Valid values: 0 (unlimited), 2-64.	N	0

The FC port address or iSCSI initiator (port) name assigned to the host must be unique per storage system. The FC port name must be exactly 16 characters long, in hexadecimal format.

Only the following alphanumeric characters are valid: 0-9, A-F, a-f. In addition to the 16 characters, colons (:) may be used as separators in the 16 character port name. The iSCSI initiator name may not exceed 253 characters and may not contain any blank spaces.

Example:

```
host_add_port host=Host1 fcaddress=5001738035C601C0
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **HOST_BAD_NAME**
The host name does not exist.
- **HOST_PORT_EXISTS**
A host with this port ID is already defined.
- **ISCSI_HOST_ILLEGAL_PORT_NAME**
The port name for iSCSI Host is illegal.

Troubleshooting: Port names for iSCSI Hosts must contain only printable characters.

- **MAX_PORTS_REACHED**
The maximum number of ports defined in the system is already reached.
- **TARGET_PORT_BAD_ADDRESS**
The remote port address is illegal or does not belong to the remote target.
- **PORT_EXISTS**
The port is already defined.
- **OLVM_LINK_IS_NOT_UP**
The IBM Hyper-Scale Mobility link is not up. The mapping list cannot be updated.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_MAX_VIRTUAL_HOSTS_REACHED**
The maximum number of defined remote virtual hosts is already reached.
- **INVALID_NUM_OF_TARGETS**
The specified value representing the number of visible targets is invalid. It can be either 0 (unlimited), or a number in the range from 2 through 64.

Defining a new host

Use the **host_define** command to define a new host to connect to the storage system.

```
host_define host=HostName [ cluster=ClusterName ]
[ iscsi_chap_name=iscsiChapName iscsi_chap_secret=iscsiPass ] [ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
host	Object name	The name of the host to be created.	Y	N/A
cluster	Object name	The name of the cluster to contain the newly created host.	N	No cluster.
iscsi_chap_name	String	The host's CHAP name identifier.	N	none
iscsi_chap_secret	String	The password of the initiator used to authenticate to the system when CHAP is enabled.	N	none
domain	N/A	The domains the cluster will be attached to. To include more than one domain, separate them with a comma. To include all existing domains, use an asterisk ("*").	N	none

The name of the host must be unique in the system.

Use the **host_add_port** command to add port addresses to this host (see Adding a port to a host for details). Specifying the cluster is optional.

The parameters **iscsi_chap_name** and **iscsi_chap_secret** must be either both specified or both unspecified.

If **iscsi_chap_secret** does not conform to the required secret length (96-128 bits), the command will fail.

The command checks whether the **iscsi_chap_name** and **iscsi_chap_secret** are unique. In case they are not, an error message is displayed, but the command completes.

The secret has to be between 96 bits and 128 bits. There are 3 ways to enter the secret:

- *Base64*: Requires to prefix the entry with 0b. Each subsequent character entered is treated as a 6-bit equivalent length
- *Hex*: Requires to prefix the entry with 0x. Each subsequent character entered is treated as a 4-bit equivalent length
- *String*: Requires no prefix (cannot be prefixed with 0b or 0x). Each character entered is treated as a 8 bit equivalent length

Example:

```
host_define host=server1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ISCSI_CHAP_NAME_AND_SECRET_NOT_UNIQUE**
Both iSCSI CHAP name and secret are already used by another host. Are you sure you want to reuse those values?

Return codes

- **HOST_NAME_EXISTS**
The host name already exists.
- **MAX_HOSTS_REACHED**

The maximum number of defined hosts is already reached.

- **CLUSTER_BAD_NAME**

The cluster name does not exist.

- **DOMAIN_DOESNT_EXIST**

The domain does not exist.

- **HOST_NOT_IN_CLUSTERS_DOMAINS**

The host is not part of all of the domains the cluster is attached to.

Deleting a host

Use the **host_delete** command to delete a host.

```
host_delete host=HostName
```

Parameters

Name	Type	Description	Mandatory
host	Object name	The host name.	Y

After this command is executed, the deleted host can no longer connect to the system, and I/O requests from this host are not handled.

Example:

```
host_delete host=mailserver
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_HOST**

Are you sure you want to delete host *Host*?

Return codes

- **HOST_BAD_NAME**

The host name does not exist.

Listing hosts

Use the **host_list** command to list a specific host or all hosts.

```
host_list [ host=HostName ] [ perf_class=perfClassName ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
host	Object name	The host name.	N	All hosts.
perf_class	Object name	The name of a performance class.	N	no filter.
domain	Object name	The domain name.	N	All Domains

This command lists all the hosts in the system.

A host name can be specified to list only a specific host or all the hosts.

The list contains the following comma separated information:

- Port addresses
- Containing cluster, if one exists
- Associated users and user groups

Example:

```
host_list host=mailserver
```

Output:

```
Name      Type      FC Ports  iSCSI Ports  User Group  Cluster
-----
host_4    default             iscsi_4
host_5    default             iscsi_5
host_6    default             iscsi_6
host_7    default             iscsi_7
host_8    default             iscsi_8
host_9    default             iscsi_9
```

Field ID	Field output	Default position
name	Name	1
type	Type	2
fc_ports	FC Ports	3
iscsi_ports	iSCSI Ports	4
creator	Creator	N/A
user_group	User Group	5
cluster	Cluster	6
perf_class	Performance Class	7
iscsi_chap_name	iSCSI CHAP Name	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Listing ports

Use the **host_list_ports** command to list all the ports of a host.

```
host_list_ports host=HostName [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
host	Object name	The host name.	Y	N/A
domain	Object name	The domain name.	N	All Domains

Example:

```
host_list_ports host=tlib_host_pro125_fc0
```

Output:

```
Host          Type      Port name
-----
tlib_host_pro125_fc0  FC        100000062B125CD0
```

Field ID	Field output	Default position
host	Host	1
type	Type	2
port_name	Port Name	3
num_of_visible_targets	iSCSI targets limit	4

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Removing a port from a host

Use the `host_remove_port` command to remove a port from a host.

```
host_remove_port host=HostName < fcaddress=wwpn | iscsi_name=iSCSIName >
```

Parameters

Name	Type	Description	Mandatory
<code>host</code>	Object name	The host name.	Y
<code>fcaddress</code>	N/A	FC address of the port to be removed.	N
<code>iscsi_name</code>	iSCSI initiator name	iSCSI initiator name of the port to be removed.	N

Example:

```
xcli.py host_remove_port host=host1 iscsi_name=iscsi1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **HOST_BAD_NAME**
The host name does not exist.
- **PORT_DOES_NOT_BELONG_TO_HOST**
The port ID belongs to another host.
- **HOST_PORT_DOES_NOT_EXIST**
The port ID is not defined.
- **ISCSI_HOST_ILLEGAL_PORT_NAME**
The port name for iSCSI Host is illegal.
Troubleshooting: Port names for iSCSI Hosts must contain only printable characters.
- **OLVM_LINK_IS_NOT_UP**
The IBM Hyper-Scale Mobility link is not up. The mapping list cannot be updated.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.

- **TARGET_PORT_BAD_ADDRESS**
The remote port address is illegal or does not belong to the remote target.
- **HOST_PORT_EXISTS**
A host with this port ID is already defined.
- **MAX_PORTS_REACHED**
The maximum number of ports defined in the system is already reached.
- **PORT_EXISTS**
The port is already defined.
- **REMOTE_MAX_VIRTUAL_HOSTS_REACHED**
The maximum number of defined remote virtual hosts is already reached.

Renaming a host

Use the **host_rename** command to rename a host.

```
host_rename host=HostName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
host	Object name	The original host name.	Y
new_name	Object name	The new host name. Must be unique in the system.	Y

The new host name must be unique in the system.

The command still succeeds even if the new name is identical to the current name.

Example:

```
host_rename host=server2 new_name=mailserver
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **HOST_BAD_NAME**
The host name does not exist.
- **HOST_NAME_EXISTS**
The host name already exists.

Updating a host definition

Use the **host_update** command to update a host definition.

```
host_update host=HostName [ iscsi_chap_name=iscsiChapName ] [ iscsi_chap_secret=iscsiPass ]
```

Parameters

Name	Type	Description	Mandatory	Default
host	Object name	Name that represents the host to the storage system.	Y	N/A
iscsi_chap_name	String	The host's CHAP name identifier	N	[unchanged]
iscsi_chap_secret	String	The password of the initiator used to authenticate to the storage system when CHAP is enabled	N	[unchanged]

The command carries out the following CHAP-related checks:

- The parameters **iscsi_chap_name** and **iscsi_chap_secret** must be either both specified or both unspecified.
These parameters have to be unique. In case they are not, an error message is displayed, but the command completes.
- The secret needs to be between 96 bits and 128 bits. There are 3 ways to enter the secret:
 - *Base64*: Requires to prefix the entry with 0b. Each subsequent character entered is treated as a 6-bit equivalent length
 - *Hex*: Requires to prefix the entry with 0x. Each subsequent character entered is treated as a 4-bit equivalent length
 - *String*: Requires no prefix (cannot be prefixed with 0b or 0x). Each character entered is treated as an 8-bit equivalent length
- If **iscsi_chap_secret** does not conform with the required secret length (96-128 bits), the command fails.

Changing the **iscsi_chap_name** and/or **iscsi_chap_secret**:

- A warning message will be displayed stating that the changes will apply only next time the host is connected.

Example:

```
host_update host iscsi_chap_name iscsi_chap_secret
```

Output:

Command executed successfully.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ISCSI_CHAP_NAME_AND_SECRET_NOT_UNIQUE**
Both iSCSI CHAP name and secret are already used by another host. Are you sure you want to reuse those values?
- **ISCSI_CHAP_SECRET_NOT_UNIQUE**
iSCSI CHAP secret is already used by another host. Are you sure you want to reuse this value?
- **ISCSI_CHAP_NAME_NOT_UNIQUE**
iSCSI CHAP name is already used by another host. Are you sure you want to reuse this value?

Return codes

- **HOST_BAD_NAME**
The host name does not exist.
- **ISCSI_CHAP_NAME_EMPTY**
CHAP name should be a non-empty string.
- **ISCSI_CHAP_NAME_TOO_LONG**
CHAP name is too long.
- **ISCSI_CHAP_SECRET_EMPTY**
CHAP secret should be a non-empty string.
- **ISCSI_CHAP_SECRET_BAD_SIZE**
CHAP secret should be 12 to 16 bytes long.
- **ISCSI_CHAP_SECRET_BAD_HEX_FORMAT**
CHAP secret is an illegal hexadecimal number or its size is illegal. It should be 24 to 32 hexadecimal digits.

Mapping a volume to a host or cluster

Use the **map_vol** command to map a volume to a host or a cluster.

```
map_vol <host=HostName | cluster=ClusterName> vol=VolName lun=LUN [ override=<no|yes> ]
```

Parameters

Name	Type	Description	Mandatory	Default
host	Object name	Host name.	N	N/A
cluster	Object name	Cluster name.	N	N/A
vol	Object name	Volume name.	Y	N/A
lun	Integer	LUN identifier.	Y	N/A
override	Boolean	Override the existing mapping.	N	no

This command maps a volume to a host or to a cluster. It maps the volume to all the hosts that are contained in the cluster.

The command fails if:

- The specified host is contained in a cluster, because in this case the mapping must be done through the cluster.
- Another volume is mapped to the same LUN for this cluster/host, and the **override** parameter is not specified.
 - If the **override** parameter is specified, the mapping is replaced. The host (or all hosts in the cluster) will see continuous mapping of volume to this LUN with a different content, and probably size.
- Mapping to a cluster, if the LUN was defined as an exception.
 - Whenever the LUN is defined as an exception, map it directly to the host.

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	This volume is a snapshot. The master volume of this snapshot is mapped to a host or cluster that is associated with the user executing this command. This snapshot was created by an application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_PERFORM_HOST_SPECIFIC_MAPPING**
'Host' is part of a cluster. Are you sure you want to map this volume only for that specific host?
- **ARE_YOU_SURE_YOU_WANT_TO_MAP_VOLUME**
Are you sure you want to map volume *Volume*, which is already mapped to another host/cluster?

Return codes

- **HOST_BAD_NAME**
The host name does not exist.

- **HOST_BELONGS_TO_CLUSTER**
This host already belongs to a cluster.
- **CLUSTER_BAD_NAME**
The cluster name does not exist.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **SNAPSHOT_IS_INTERNAL**
Internal snapshots cannot be mapped, modified or deleted.
- **VOLUME_ALREADY_ASSIGNED**
Mapping conflict: the volume is already assigned.
- **LUN_ALREADY_IN_USE**
Mapping conflict: LUN is already in use.
- **EXT_LUN_ILLEGAL**
The LUN is out of range or does not exist.
- **VOLUME_HAS_HOST_SPECIFIC_MAPPING**
The specified volume is currently mapped to another LUN in a host-specific mapping.
- **LUN_HAS_HOST_SPECIFIC_MAPPING**
The specified LUN currently has another volume mapped in a host-specific mapping.
- **VOLUME_IS_NON_PROXY_OLVM_DESTINATION**
The volume is in an IBM Hyper-Scale Mobility migration state.
- **ISCSI_HOST_ILLEGAL_PORT_NAME**
The port name for iSCSI Host is illegal.
Troubleshooting: Port names for iSCSI Hosts must contain only printable characters.
- **MAX_PORTS_REACHED**
The maximum number of ports defined in the system is already reached.
- **OLVM_LINK_IS_NOT_UP**
The IBM Hyper-Scale Mobility link is not up. The mapping list cannot be updated.
- **HOST_PORT_EXISTS**
A host with this port ID is already defined.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **REMOTE_MAX_VIRTUAL_HOSTS_REACHED**
The maximum number of defined remote virtual hosts is already reached.
- **VOLUME_HAS_INACTIVE_DATA_MIGRATION**
Cannot map a volume that has an inactive data migration.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **VOLUME_IS_AN_UNAVAILABLE_HYPERSWAP_PEER**

The operation is not permitted on a HyperSwap target which is unavailable for IO.

- **HOST_TYPE_IS_NOT_CONFIGURED**

Cannot associate a HyperSwap volume with a host of unconfigured type.
IMPORTANT: Please read the HyperSwap chapter in the 'Best Practice' document to understand the solution requirements.

Listing the mapping of volumes to hosts or clusters

Use the **mapping_list** command to list the mapping of volumes to a specified host or cluster.

```
mapping_list [ host=HostName | cluster=ClusterName ] [ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
host	Object name	Host name.	N	N/A
cluster	Object name	Cluster name.	N	N/A
domain	N/A	List of hosts, clusters or domains to show mapping from. To define more than one host, cluster or domain, separate them with a comma. To specify all existing domains, use "*".	N	All user domains.

Field ID	Field output	Default position
lun	LUN	1
volume	Volume	2
proxy	Proxy	3
size	Size	4
master	Master	5
wwn	WWN	6
locked	Locked	7
host	Host	8

Example:

```
mapping_list host=demo__host_1,demo_host_fc10000006072d0190
```

Output:

LUN	Volume	Proxy	Size	Master
0	vol-2693072-0006	no	103	
1	vol-2693072-0007	no	103	
2	cg-2693072-0005.snap_group_00001.vol-2693072-0006	no	103	vol-2693072-0006
3	cg-2693072-0005.snap_group_00001.vol-2693072-0007	no	103	vol-2693072-0007
4	vol-2693172-0013	no	103	
5	vol-2693172-0013.snapshot_00001	no	103	vol-2693172-0013

WWN	Locked	Host
60017380000035c7000000000000000a	no	tlib_host_host081_fc21000024ff2c4cf7
60017380000035c7000000000000000b	no	tlib_host_host081_fc21000024ff2c4cf7
60017380000035c7000000000000000c	yes	tlib_host_host081_fc21000024ff2c4cf7
60017380000035c7000000000000000c	yes	tlib_host_host081_fc21000024ff2c4cf7
60017380000035c70000000000000011	no	tlib_host_host081_fc21000024ff2c4cf7
60017380000035c70000000000000012	no	tlib_host_host081_fc21000024ff2c4cf7

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Return codes

- **HOST_BAD_NAME**
The host name does not exist.
- **CLUSTER_BAD_NAME**
The cluster name does not exist.
- **TOO_MANY_MAPPINGS**
There are too many mappings to display.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.

Setting the special type of hosts or clusters

Use the **special_type_set** command to set the special type of a host or a cluster.

```
special_type_set <host=HostName | cluster=ClusterName>
type=<default|hpux|zvm|Windows2008|AllOthers>
```

Parameters

Name	Type	Description	Mandatory
host	Object name	Host name.	N
cluster	Object name	Cluster name.	N
type	Enumeration	Special map type.	Y

Make sure to define the **type** parameter prior to attaching HyperSwap volumes to the host. The supported special types are hpx, zvm, and Windows2008. For any other operating system, select AllOthers.

Note: If you need to modify the **type** parameter, make sure to do it when creating a new host definition. Changing the type when volumes are already attached to the host, will cause loss of access to the host.

Example:

```
special_type_set host=tlib_host_pro26_fc0 type=zvm
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **HOST_BAD_NAME**
The host name does not exist.
- **HOST_BELONGS_TO_CLUSTER**
This host already belongs to a cluster.
- **HOST_HAS_MAPPED_VOLUMES**
The host already has mapped volumes.
- **CLUSTER_BAD_NAME**
The cluster name does not exist.
- **CLUSTER_HAS_MAPPED_VOLUMES**
The cluster already has mapped volumes.

Listing hosts/clusters to which a volume is mapped

Use the **vol_mapping_list** command to list all hosts and clusters to which a volume is mapped.

```
vol_mapping_list vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	Volume name.	Y

This command lists all the hosts and clusters to which a volume is mapped, as well as hosts that are part of a cluster and have host-specific mapping to the volume. The output list contains two columns: name of host/cluster and type (host or cluster).

Field ID	Field output	Default position
host	Host/Cluster	1
type	Type	2
lun	LUN	3

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**

The volume name does not exist.

Unmapping a volume from a host or cluster

Use the **unmap_vol** command to unmap a volume from a host or a cluster.

```
unmap_vol <host=HostName | cluster=ClusterName> vol=VolName [ idle_seconds=IdleSeconds ]
```

Parameters

Name	Type	Description	Mandatory	Default
host	Object name	Host name.	N	N/A
cluster	Object name	Cluster name.	N	N/A
vol	Object name	Volume name.	Y	N/A
idle_seconds	Integer	How many seconds the volume needs to be idle before unmapping	N	-1
force	Boolean	Force completing the unmap operation, even if there exists in-flight I/O that has not completed on the proxy volume.	N	no

The command to unmap from a cluster will unmap the volume from all the hosts that are contained in that cluster.

The command fails if the specified host is contained in a cluster. In this case, the unmapping of the host must be performed through the cluster.

The command does not fail when the volume is not mapped to the host/cluster.

Using this command with `unmap_vol_set_default_idle_time`: The default value of the `idle_seconds` parameter can be set before running the `unmap_volume` command.

The command takes some time to process: If the command fails with `VOLUME_NOT_IDLE` (see the completion codes table below), wait one minute to allow the host to complete background writes, and try again the command.

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	The volume is a snapshot, where its master volume is mapped to a host or cluster associated with the user and the snapshot was created by an application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Warnings

- **HA_SLAVE_NOT_CONNECTED**

The secondary volume in this HyperSwap relationship is not connected to the primary volume. Are you sure you want to unmap the volume?

Troubleshooting: It is not recommended to unmap a volume from the secondary if the relationship is still in use.

Return codes

- **HOST_BAD_NAME**

The host name does not exist.

- **HOST_BELONGS_TO_CLUSTER**

This host already belongs to a cluster.

- **CLUSTER_BAD_NAME**

The cluster name does not exist.

- **VOLUME_BAD_NAME**

The volume name does not exist.

- **SNAPSHOT_IS_INTERNAL**

Internal snapshots cannot be mapped, modified or deleted.

- **VOLUME_IS_NON_PROXY_OLVM_DESTINATION**

The volume is in an IBM Hyper-Scale Mobility migration state.

- **OPERATION_DENIED_OBJECT_MANAGED**

This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.

- **OLVM_LINK_IS_NOT_UP**
The IBM Hyper-Scale Mobility link is not up. The mapping list cannot be updated.
- **ISCSI_HOST_ILLEGAL_PORT_NAME**
The port name for iSCSI Host is illegal.
Troubleshooting: Port names for iSCSI Hosts must contain only printable characters.
- **MAX_PORTS_REACHED**
The maximum number of ports defined in the system is already reached.
- **HOST_PORT_EXISTS**
A host with this port ID is already defined.
- **VOLUME_NOT_IDLE**
The volume was not idle before unmapping. Check connected hosts and idle timeout.
- **MAPPING_IS_NOT_DEFINED**
The requested mapping is not defined.
- **REMOTE_MAX_VIRTUAL_HOSTS_REACHED**
The maximum number of defined remote virtual hosts is already reached.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.

Setting the default idle time before unmapping a volume

Use the `unmap_vol_set_default_idle_time` command to set the default idle time required for a volume before unmapping it.

```
unmap_vol_set_default_idle_time idle_time_seconds=IdleSeconds
```

Parameters

Name	Type	Description	Mandatory
<code>idle_time_seconds</code>	Integer	Defines how many seconds the volume needs to be idle before unmapping.	Y

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Retrieving the default idle time before unmapping a volume

Use the `unmap_vol_get_default_idle_time` command to retrieve the default idle time required for a volume before unmapping it.

```
unmap_vol_get_default_idle_time
```

Example:

```
unmap_vol_get_default_idle_time
```

Output:

```
idle_time_seconds = "0"
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Creating a performance class

Use the `perf_class_create` command to create a performance class.

```
perf_class_create perf_class=perfClassName [ type=<shared|independent> ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>perf_class</code>	String	The name of a performance class.	Y	N/A
<code>type</code>	Enumeration	Determines if associated objects will be limited independently or share the same limit.	N	shared

The performance class name must be unique. Up to 1000 classes can be created.

Example:

```
perf_class_create perf_class=p1
```

Output:

Command executed successfully.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **PERF_CLASS_EXISTS**
The performance class already exists.
- **MAX_PERF_CLASSES_REACHED**
The maximum number of defined performance classes is already reached.

Deleting a performance class

Use the **perf_class_delete** command to delete a performance class.

```
perf_class_delete perf_class=perfClassName
```

Parameters

Name	Type	Description	Mandatory
perf_class	Object name	Name of a performance class.	Y

Example:

```
perf_class_delete perf_class=p1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_A_PERF_CLASS**

Are you sure you want to delete performance class *Performance Class*?

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_A_PERF_CLASS_ASSOCIATED_WITH_HOSTS**

Deleting performance class *Performance Class* will remove the performance limits set for hosts associated with the performance class. Are you sure you want to delete performance class *Performance Class*?

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_A_PERF_CLASS_ASSOCIATED_WITH_POOLS**

Deleting performance class *Performance Class* will remove the performance limits set for pools associated with the performance class. Are you sure you want to delete performance class *Performance Class*?

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_A_PERF_CLASS_ASSOCIATED_WITH_VOLUMES**

Deleting performance class *Performance Class* will remove the performance limits set for volumes associated with the performance class. Are you sure you want to delete performance class *Performance Class*?

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_A_PERF_CLASS_ASSOCIATED_WITH_DOMAINS**

Deleting performance class *Performance Class* will remove the performance limits set for domains associated with the performance class. Are you sure you want to delete performance class *Performance Class*?

Return codes

- **PERF_CLASS_BAD_NAME**

The performance class does not exist.

Renaming a performance class

Use the **perf_class_rename** command to rename a performance class.

```
perf_class_rename perf_class=perfClassName  
new_name=Name
```

Parameters

Name	Type	Description	Mandatory
perf_class	Object name	The name of an existing performance class.	Y
new_name	String	The new name for the performance class. The class new name must be unique.	Y

Example:

```
perf_class_rename perf_class=p1 new_name=perf1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **PERF_CLASS_EXISTS**
The performance class already exists.
- **PERF_CLASS_BAD_NAME**
The performance class does not exist.

Listing details of performance classes

Use the **perf_class_list** command to list performance classes.

```
perf_class_list [ perf_class=perfClassName ]
```

Parameters

Name	Type	Description	Mandatory	Default
perf_class	String	Name of a performance class. If left unspecified, all performance classes will be listed.	N	All performance classes.

ID	Name	Default Position
name	Performance class	1
type	Class type	2
max_iops	Max IO rate (IOPS)	3
max_bw	Max BW rate (MB/sec)	4

Example:

```
perf_class_list
```

Output:

```
Performance class  Max IO rate(IOPS)  Max BW rate(MB/sec)
perf1              0                0
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Adding a host to a performance class

Use the **perf_class_add_host** command to add a host to a performance class.

```
perf_class_add_host perf_class=perfClassName host=HostName
```

Parameters

Name	Type	Description	Mandatory
perf_class	Object name	The name of a performance class.	Y
host	Object name	The name of the host to be added to the performance class.	Y

If the host is already associated with another performance class, it will be removed from that performance class.

Example:

```
perf_class_add_host perf_class=p1 host=h1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **PERF_CLASS_BAD_NAME**
The performance class does not exist.
- **PERF_CLASS_ASSOCIATED_WITH_POOLS_OR_DOMAINS**

Performance class *Performance Class* is already being used by a pool or domain.

- **PERF_CLASS_ASSOCIATED_WITH_VOLUMES**

Performance class *Performance Class* is already being used by a volume.

- **HOST_BAD_NAME**

The host name does not exist.

- **HOST_ALREADY_IN_PERF_CLASS**

Host *host* is already in performance class *Performance Class*.

Removing a host from its performance class

Use the **perf_class_remove_host** command to remove a host from its performance class.

```
perf_class_remove_host host=HostName
```

Parameters

Name	Type	Description	Mandatory
host	Object name	The name of the host to be removed from its performance class.	Y

Example:

```
perf_class_remove_host host=h1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **HOST_BAD_NAME**

The host name does not exist.

- **PERF_CLASS_DOES_NOT_CONTAIN_ANY_HOSTS**

The performance class is already empty.

Adding a pool to a performance class

Use the `perf_class_add_pool` command to add a pool to a performance class.

```
perf_class_add_pool perf_class=perfClassName pool=PoolName
```

Parameters

Name	Type	Description	Mandatory
<code>perf_class</code>	Object name	Name of a performance class	Y
<code>pool</code>	Object name	Name of a pool that will be added to the performance class	Y

If the pool is already associated with another performance class, it will be removed from it.

Example:

```
perf_class_add_pool perf_class=p1 pool=h1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **PERF_CLASS_BAD_NAME**
The performance class does not exist.
- **PERF_CLASS_ASSOCIATED_WITH_HOSTS**
Performance class *Performance Class* is already being used by a host.
- **PERF_CLASS_ASSOCIATED_WITH_VOLUMES**
Performance class *Performance Class* is already being used by a volume.
- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **POOL_ALREADY_IN_PERF_CLASS**
Pool *pool name* is already in performance class *Performance Class*.

Removing a pool from its performance class

Use the **perf_class_remove_pool** command to remove a pool from its performance class.

```
perf_class_remove_pool pool=PoolName
```

Parameters

Name	Type	Description	Mandatory
pool	Object name	The name of the pool to be removed from its performance class.	Y

Example:

```
perf_class_remove_pool pool=h1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **POOL_NOT_CONNECTED_TO_ANY_PERF_CLASS**
The pool is not connected to any performance class.

Adding a volume to a performance class

Use the **perf_class_add_vol** command to add a volume to a performance class.

```
perf_class_add_vol perf_class=perfClassName vol=VolName
```

Parameters

Name	Type	Description	Mandatory
perf_class	Object name	The name of a performance class.	Y

Name	Type	Description	Mandatory
vol	Object name	The name of the volume to be added to the performance class.	Y

If the volume is already associated with another performance class, it will be removed from that.

Example:

```
perf_class_add_vol perf_class=p1 volume=h1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **PERF_CLASS_BAD_NAME**
The performance class does not exist.
- **PERF_CLASS_ASSOCIATED_WITH_HOSTS**
Performance class *Performance Class* is already being used by a host.
- **PERF_CLASS_ASSOCIATED_WITH_POOLS_OR_DOMAINS**
Performance class *Performance Class* is already being used by a pool or domain.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_ALREADY_IN_PERF_CLASS**
Volume *volume name* is already in performance class *Performance Class*.

Removing a volume from its performance class

Use the **perf_class_remove_vol** command to remove a volume from its performance class.

```
perf_class_remove_vol vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	The name of a volume to be removed from its performance class.	Y

Example:

```
perf_class_remove_vol volume=h1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NOT_CONNECTED_TO_ANY_PERF_CLASS**
The volume is not connected to any performance class.

Adding a domain to a performance class

Use the **perf_class_add_domain** command to add a domain to a performance class.

```
perf_class_add_domain perf_class=perfClassName domain=DomainName
```

Parameters

Name	Type	Description	Mandatory
domain	Object name	The name of the domain to be added to the performance class.	Y
perf_class	Object name	The name of a performance class.	Y

Example:

```
perf_class_add_domain perf_class=perf1 domain=d1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **PERF_CLASS_BAD_NAME**
The performance class does not exist.
- **PERF_CLASS_ASSOCIATED_WITH_HOSTS**
Performance class *Performance Class* is already being used by a host.
- **PERF_CLASS_ASSOCIATED_WITH_VOLUMES**
Performance class *Performance Class* is already being used by a volume.
- **DOMAIN_ALREADY_IN_PERF_CLASS**
Domain *domain name* is already in performance class *Performance Class*.

Removing a domain from its performance class

Use the **perf_class_remove_domain** command to remove a domain from its performance class.

```
perf_class_remove_domain domain=DomainName
```

Parameters

Name	Type	Description	Mandatory
domain	Object name	The name of the domain to be removed from its performance class.	Y

Example:

```
perf_class_remove_domain domain=d1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **PERF_CLASS_NOT_ASSOC_WITH_DOMAIN**
The domain is not in any performance class.

Setting the rate for a performance class

Use the **perf_class_set_rate** command to set the rate for a performance class.

```
perf_class_set_rate perf_class=perfClassName [ max_io_rate=iops ] [ max_bw_rate=bw ]
```

Parameters

Name	Type	Description	Mandatory	Default
perf_class	Object name	Name of a performance class.	Y	N/A
max_io_rate	Positive integer	Specifies the performance class maximum rate in IOPS per interface module (IOPS). The max setting allowed is 100,000. If zero is specified, the IOPS rate will not be limited.	N	Keep unchanged.
max_bw_rate	Positive integer	Specifies the performance class maximum bandwidth rate per interface module (MB/sec). The maximum setting allowed is 10,000. If zero is specified, the bandwidth rate will not be limited.	N	Keep unchanged.

Either **max_io_rate**, or **max_bw_rate**, or both must be set.

The specified rate is applied to each interface module. To calculate the limit per system, multiply the specified rate by the number of interface modules.

Example:

```
perf_class_set_rate perf_class=p1 max_io_rate=1000
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **PERF_CLASS_BAD_NAME**
The performance class does not exist.
- **PERF_CLASS_INVALID_RATE**
The rate set for the performance class is invalid.

Listing host profiles

Use the **host_profile_list** command to list all host profiles.

```
host_profile_list [ host=HostName ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
host	Object name	The name of the specific host whose profiles should be listed	N	>All Host Profiles.
domain	Object name	The domain name.	N	All Domains

The command lists all host profiles or a specific one.

Field ID	Field output	Default position
host_name	Host Name	1
update_time	Update Time	2
profile	Profile	3

Example:

```
host_profile_list host
```

Output:

```
Host Name          Update Time        Profile
-----
host1              2012-05-09 22:54:36  Windows 7
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Updating the host profile

Use the **host_profile_set** command to update the host profile.

```
host_profile_set profile_value
```

Parameters

Name	Type	Description	Mandatory
profile_value	String	The host profile value length up to 1024 characters	Y

Example:

```
host_profile_set profile_value=Profile
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **HOST_PROFILE_UPDATE_TOO_FREQUENT**
Host Profile has been set too often.

Troubleshooting: Try again after the minimal update interval time.

- **HOST_BAD_NAME**
The host name does not exist.
- **MAX_HOST_PROFILES_REACHED**
The maximum number of defined host profiles is already reached.

Removing the profile of the specified host

Use the **host_profile_clear** command to remove the profile of the specified host.

```
host_profile_clear host=HostName
```

Parameters

Name	Type	Description	Mandatory
host	Object name	The host name.	Y

Example:

```
host_profile_clear host
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **HOST_BAD_NAME**
The host name does not exist.
- **HOST_PROFILE_DOES_NOT_EXIST**
No profile is defined for the requested host.

Enabling the host profiler

Use the **host_profiler_enable** command to enable the host profiler functionality.

```
host_profiler_enable
```

Example:

```
host_profiler_enable
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Disabling the host profiler

Use the **host_profiler_disable** command to disable the host profiler functionality.

```
host_profiler_disable
```

Example:

```
host_profiler_disable
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Chapter 3. Volume management commands

This section describes the command-line interface (CLI) for volume management.

See also:

- Volume snapshot management commands
- Consistency group management commands
- Storage pool management commands

Clearing reservations of a volume

Use the **reservation_clear** command to clear reservations of a volume.

```
reservation_clear vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	The name of the volume to clear reservations of.	Y

Example:

```
reservation_clear vol=Vol1
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.

Listing reservation keys

Use the **reservation_key_list** command to list reservation keys.

```
reservation_key_list [ vol=VolName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	The name of the volume whose reservation keys are to be listed.	N	All volumes.

Example:

```
reservation_key_list vol=Vol2
```

Output:

```
Initiator Port      Volume Name      Reservation Key
-----
100000062B151C3C  vol-dmathies-0a7  2
100000062B151C3C  vol-dobratz-23a   3
```

Field ID	Field output	Default position
initiator_port	Initiator Port	1
initiator_port_isid	Initiator ISID	2
vol_name	Volume Name	3
reg_key	Reservation Key	4

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.

Listing volume reservations

Use the **reservation_list** command to list volume reservations.

```
reservation_list [ vol=VolName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	The name of the volume whose reservations are to be listed.	N	All volumes.

Example:

```
reservation_list vol=Vol1
```

Output:

```
Volume Name   Reserving Port   Reservation Type   Persistent
vol1          none             none               none

Cont.:

Reservation Type   Persistent Access Type   Initiator UID   PR Generation
none              none                     -1              0
```

Field ID	Field output	Description	Default position
name	Volume Name	N/A	1
reserved_by_port	Reserving Port	N/A	2
reserved_by_port_isid	Reserving ISID	N/A	3
reservation_type	Reservation Type	N/A	4
persistent_reservation_type	Persistent Reservation Type	N/A	5
access_type	Persistent Access Type	N/A	6
reserving_initiator_uid	Initiator UID	uid of reserving host	7
pr_generation	PR Generation	N/A	8
reservation_age	Reservation Age	N/A	9

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**

The volume name does not exist.

Copying volumes

Use the **vol_copy** command to copy a source volume onto a target volume.

```
vol_copy vol_src=VolName vol_trg=VolName
```

Parameters

Name	Type	Description	Mandatory
vol_src	Object name	Name of the source volume from which the data is to be taken.	Y
vol_trg	Object name	Name of the target volume to which the data is to be copied.	Y

This command copies a source volume onto a target volume.

All data stored on the target volume is lost and cannot be restored.

This command performs the following as a single atomic action:

- Deletes the target volume.
- Creates a new volume with the same name as the target volume and the same size as the source volume.
- Instantly copies the source volume data onto the target volume.

All volume-to-host mappings of the target volume remain intact during this process. Except for its size, the target volume retains all of its properties, including its name, ID, lock state, creation time and all other attributes.

Immediately after the completion of the command, the volumes are independent of each other and are valid for any further operations (including deletion).

If the target volume is larger than the source volume, excess storage space is freed and returned to the target volume's storage pool. If the target volume is smaller than the source volume, all storage space that is needed to support the additional volume's capacity is reserved from the storage pool.

The command fails in the following cases:

- The target is not formatted.
- The source volume is larger than the target volume, and there is not enough free space in the storage pool that contains the target for target volume resizing.
- The target volume has a snapshot associated with it or if the target volume is a snapshot.
- The target volume is locked.
- The target volume is part of any mirroring definitions (either master or slave).
- The source volume is a slave of a synchronous mirroring, and it is currently inconsistent due to either a re-synchronization or an initialization process.
- There is not enough free space in the storage pool that contains the target.

In the following example, the `-y` option suppresses the **ARE YOU SURE YOU WANT TO COPY VOLUME Y/N** prompt.

Example:

```
vol_copy vol_src=DBVolume vol_trg=DBVolumeCopy
```

Output:

Command executed successfully

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_COPY_VOLUME**
Are you sure you want to copy the contents of volume *source Volume* to volume *target Volume*?

Return codes

- **NOT_ENOUGH_SPACE**
No space to allocate for the volume's current usage.
- **SOURCE_VOLUME_BAD_NAME**
The source volume name does not exist.
- **SOURCE_VOLUME_DATA_MIGRATION_UNSYNCHRONIZED**
Data Migration to source volume has not completed.
- **TARGET_VOLUME_BAD_NAME**
The target volume name does not exist.
- **TARGET_VOLUME_LOCKED**
The target volume is locked.
- **TARGET_VOLUME_HAS_MIRROR**
A mirror is defined for the target volume.
- **TARGET_VOLUME_HAS_DATA_MIGRATION**
Data Migration is defined for the target volume.
- **VOLUME_IS_SNAPSHOT**
The operation is not permitted on snapshots.
- **VOLUME_IDENTICAL**
The same volume is defined as source and target.
- **VOLUME_HAS_SNAPSHOTS**
The volume has snapshots.
- **VOLUME_IS_NOT_CONSISTENT_SLAVE**
The operation not allowed on an inconsistent secondary volume.
- **VOLUME_IS_NOT_CONSISTENT_OLVM_DESTINATION**
The operation not allowed on an inconsistent IBM Hyper-Scale Mobility volume.
- **TARGET_VOLUME_NOT_FORMATTED**
The target volume is not formatted.
- **SNAPSHOT_IS_FORMATTED**

The snapshot is formatted.

- **VOLUME_TOO_BIG_TO_COPY**

The volume is too large to be copied.

- **TARGET_VOLUME_HAS_OLVM**

This target volume is part of an IBM Hyper-Scale Mobility relationship.

- **VOLUME_IS_OLVM_PROXY**

The volume is in an IBM Hyper-Scale Mobility Proxy phase.

- **OPERATION_DENIED_OBJECT_MANAGED**

This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **SYSTEM_OUT_OF_PHYSICAL_SPACE**

The operation not allowed while the system is out of physical space.

- **VOLUME_TOO_BIG**

No space to allocate to the volume.

- **VOLUME_HAS_HA**

This operation is forbidden on a volume with a HyperSwap relationship.

- **TARGET_VOLUME_HAS_HA**

This operation is forbidden, if the target volume is a peer in a HyperSwap relationship.

Creating a volume

Use the **vol_create** command to create a new volume.

```
vol_create vol=VolName < size=GB | size_blocks=BLOCKS > pool=PoolName [ ext_id=Identifier ]  
[ perf_class=perfClassName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Volume name.	Y	N/A
size	Positive integer	Volume size in GB.	N	N/A
size_blocks	Positive integer	Size in number of blocks.	N	N/A
pool	Object name	The name of the storage pool to which the volume belongs.	Y	N/A
ext_id	String	External identifier of the volume.	N	N/A
perf_class	Object name	Name of the performance class for the volume.	N	No performance class

This command is used to create a new volume. The name of the volume must be unique in the system.

The space for the volume is allocated from the specified storage pool and the volume belongs to that storage pool. Specifying the storage pool is mandatory.

When creating a volume, the storage space that is needed to support the volume's capacity is reserved from the capacity of the storage pool for the volume. The command fails if the reservation cannot be committed.

Volumes are created in increments of approximately 1 GB. In some cases, rounding of up to 5% of the total volume size can take place in order to improve internal accounting. The volume size is the actual "net" storage space, as seen by the user's applications, not including any internal overhead, such as rounding.

The volume is logically formatted at the creation time, which means that any read operation results in returning all zeros as a response.

Upon successful completion of the command, its lock state is *unlocked*, meaning that write, format and resize operations are allowed.

The creation time of the volume is set to the current time and is never changed.

Example:

```
vol_create vol=DBVolume size=2000 pool=DBPool
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **VOLUME_SIZE_VERY_LARGE_ARE_YOU_SURE**

The volume size is very large. It may not be possible to mirror this volume to older versions of the storage system. Are you sure?

Return codes

- **VOLUME_CANNOT_HAVE_ZERO_SIZE**

The volume size cannot be zero.

- **POOL_DOES_NOT_EXIST**

The storage pool does not exist.

- **VOLUME_EXISTS**

The volume name already exists.

- **VOLUME_BAD_PREFIX**

The volume name has a reserved prefix.

- **VOLUME_TOO_BIG**
No space to allocate to the volume.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **ELECTRONIC_LICENSE_NOT_APPROVED**
Operation blocked until Electronic license approval
Troubleshooting: Please retrieve Electronic license version and accept it
- **VOLUME_SIZE_ABOVE_LIMIT**
The specified volume size is above the limit.
- **INVALID_SLICE_OFFSET**
Slice offset is illegal.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **ENCRYPTION_IN_PROGRESS**
The system is in the process of changing the encryption activation state.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **PERF_CLASS_ASSOCIATED_WITH_HOSTS**
Performance class *Performance Class* is already being used by a host.
- **PERF_CLASS_ASSOCIATED_WITH_POOLS_OR_DOMAINS**
Performance class *Performance Class* is already being used by a pool or domain.
- **PERF_CLASS_BAD_NAME**
The performance class does not exist.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **SYSTEM_OUT_OF_PHYSICAL_SPACE**
The operation not allowed while the system is out of physical space.

Deleting a volume

Use the **vol_delete** command to delete a volume.

```
vol_delete vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	Name of the volume to delete.	Y

After deletion, all data stored on the volume is lost and cannot be restored.

This command cannot be applied to a snapshot. To delete a snapshot, use Deleting a snapshot.

The volume is removed from all LUN maps that contain its mapping

This command deletes all snapshots associated with this volume. Even snapshots that are part of a snapshot group (this can happen when the volume was in a consistency group and was removed from it prior to the deletion).

This command cannot be applied to a volume that is part of a consistency group or to a volume that is mapped to a host or cluster.

The command succeeds regardless of the volume's lock state.

Example:

```
vol_delete vol=DBVolumeCopy
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_VOLUME**
Are you sure you want to delete volume *Volume*?
- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_VOLUME_WITH_SNAPSHOTS**
Volume *Volume* has snapshots! Are you sure you want to delete this volume AND all of its snapshots?

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_HAS_MIRROR**
A mirror is defined for this volume.
- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The snapshot is part of a snapshot group.
- **SNAPSHOT_IS_INTERNAL**
Internal snapshots cannot be mapped, modified or deleted.
- **VOLUME_BELONGS_TO_CG**
The volume belongs to a consistency group.
- **VOLUME_IS_MAPPED**
The volume mapped to a host cannot be deleted.

- **VOLUME_IS_BOUND**
The volume is bound to an ALU.
Troubleshooting: Unbind the volume from the ALU.
- **VOLUME_HAS_MAPPED_SNAPSHOT**
A volume with a snapshot that is mapped to a host cannot be deleted.
- **SNAPSHOT_HAS_ACTIVE_SYNC_JOB**
The snapshot is currently the target of an active sync job.
Troubleshooting: Please wait for the sync job to complete.
- **SNAPSHOT_IS_CONSISTENT_ELCS**
If a mirrored volume is not consistent, then its ELCS is protected and cannot be deleted.
- **VOLUME_HAS_OLVM**
An IBM Hyper-Scale Mobility relationship is defined for this volume.
- **VOLUME_IS_OLVM_PROXY**
The volume is in an IBM Hyper-Scale Mobility Proxy phase.
- **VOLUME_IS_OLVM_DESTINATION**
The volume is defined as an IBM Hyper-Scale Mobility destination.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **VOLUME_HAS_DATA_MIGRATION**
Data Migration is defined for this volume.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **VOLUME_HAS_HA**
This operation is forbidden on a volume with a HyperSwap relationship.

Formatting a volume

Use the **vol_format** command to formats a volume.

```
vol_format vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	Name of the volume to be formatted.	Y

A formatted volume returns zeros as a response to any read command.

All data stored on the volume is lost and cannot be restored.

The formatting of the volume is done logically and no data is actually written to the physical storage space allocated for the volume. This allows the command to complete instantly.

The volume's lock state must be unlocked when the command is issued.

This command fails if the volume has snapshots associated with it, or if the volume is a snapshot, or if the volume is part of any mirroring or data migration definition.

Example:

```
vol_format vol=DBVolume
```

Output:

```
Command executed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_FORMAT_VOLUME**
Volume *Volume* may contain data. Formatting it will cause data loss. Are you sure you want to format volume *Volume*?

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_IS_OLVM_PROXY**
The volume is in an IBM Hyper-Scale Mobility Proxy phase.
- **VOLUME_HAS_SNAPSHOTS**
The volume has snapshots.
- **VOLUME_IS_SNAPSHOT**
The operation is not permitted on snapshots.
- **VOLUME_LOCKED**
The volume is locked.
- **VOLUME_HAS_MIRROR**
A mirror is defined for this volume.
- **VOLUME_HAS_OLVM**
An IBM Hyper-Scale Mobility relationship is defined for this volume.
- **VOLUME_HAS_DATA_MIGRATION**
Data Migration is defined for this volume.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **VOLUME_HAS_HA**

This operation is forbidden on a volume with a HyperSwap relationship.

Listing volumes

Use the **vol_list** command to list all volumes or a specific one.

```
vol_list [ vol=VolName | pool=PoolName | cg=cgName ] [ show_proxy=<yes|no> ]  
[ managed=<yes|no|all> ] [ domain=DomainName ] [ wwn=WWNString ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Name of a specific volume to be listed.	N	All volumes.
pool	Object name	Name of a specific pool whose volumes are to be listed.	N	Volumes in all Pools.
cg	Object name	List all the volumes in this consistency group.	N	All Consistency Groups.
show_proxy	Boolean	Returns data on proxy volumes (volumes in Proxy state) as well.	N	No
managed	Boolean	Filter only volumes that are or are not managed.	N	no.
domain	Object name	The domain name.	N	All Domains
wwn	String	The WWN in string format.	N	""

This command lists volumes according to:

- Volume name
- Pool
- Consistency Group
- WWN

If no parameter is indicated, the command lists all the available volumes. In addition, the command indicates whether the volume is mirrored.

This command displays the following VAAI fields (available in the XML output format):

- **enable_VAAI**
- **user_disabled_VAAI**

This command displays the following snapshot format field (available in the XML output format):

- **snapshot_format**

Field ID	Field output	Default position
name	Name	1
size	Size (GB)	2
size_MiB	Size (MiB)	N/A
vol_copy_type	Copy type	3
master_name	Master Name	4
cg_name	Consistency Group	5
pool_name	Pool	6
creator	Creator	7
written	Written (GB)	8
written_MiB	Written (MiB)	N/A
proxy	Proxy	N/A
capacity	Capacity (blocks)	N/A
modified	Modified	N/A
sg_name	Snapshot Group Name	N/A
delete_priority	Deletion Priority	N/A
locked	Locked	N/A
snapshot_time	Snapshot Creation Time	N/A
snapshot_time_on_master	Master Copy Creation Time	N/A
snapshot_internal_role	Snapshot Internal Role	N/A
snapshot_of	Snapshot of	N/A
sg_snapshot_of	Snapshot of Snap Group	N/A
wwn	WWN	N/A
mirrored	Mirrored	N/A
locked_by_pool	Locked by Pool	N/A
capacity_used_by_snapshots_MiB	Capacity Used by Snapshots (MiB)	N/A
short_lived_io	Short Live IO	N/A
enable_VAAI	VAAI enabled	N/A
user_disabled_VAAI	VAAI disabled by user	N/A
snapshot_format	Snapshot Format	N/A
unmap_support	Unmap Support	N/A
managed	Managed	N/A
marked	Marked	N/A
perf_class	Performance Class Name	N/A
thin_provisioning_savings	Thin Provisioning Savings (%)	N/A
est_compression_factor	Est. Compression Factor	N/A
unique_stored_data	Unique Stored Data (GB)	N/A
ha	HA Relation	N/A
target_port_group_id	TPG ID	N/A
target_port_group_state	TPG State	N/A
lock_modes	Lock Modes	N/A
copy_master_wwn	Copy Master	N/A

Example:

vol_list

Output:

Name	Size (GB)	Master Name	Consistency Group
DBLog	3006		
Dev	2010		
Dev.snapshot_00001	2010	Dev	
Pool	Creator	Written (GB)	
MainPool	admin	21	
MainPool	admin	13	
MainPool	admin	0	

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Disallowed

Listing a volume's extended attributes

Use the **vol_list_extended** command to return the attributes of the volume which are not returned by **vol_list**.

```
vol_list_extended [ vol=VolName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Name of a specific volume to be listed.	N	All volumes.

This command lists extended attributes of volumes according to:

- Volume name

Field ID	Field output	Default position
name	Name	1
wwn	WWN	2
product_serial_number	Product Serial Number	3
uid	UID	N/A

Example:

```
vol_list_extended
```

Output:

Name	WWN	Product Serial Number
DBLog	6001738000035C3000000000000000A	MN035C300000000000000000A
Dev	6001738000035C3000000000000000B	MN035C300000000000000000B
Dev.snapshot_00001	6001738000035C3000000000000000D	MN035C300000000000000000D
Dev.snapshot_00002	6001738000035C3000000000000000E	MN035C300000000000000000E
Dev.snapshot_00003	6001738000035C3000000000000000F	MN035C300000000000000000F
Marketing	6001738000035C3000000000000000C	MN035C300000000000000000C

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**

The volume name does not exist.

Locking a volume

Use the **vol_lock** command to lock a volume so that it is read-only.

```
vol_lock vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	Name of the volume to lock.	Y

This command locks a volume so that hosts cannot write to it.

A volume that is locked is write-protected, so that hosts can read the data stored on it, but cannot change it. In addition, a locked volume cannot be formatted or resized. In general, locking a volume prevents any operation (other than deletion) that changes the volume's image.

This command succeeds when the volume's lock state is already set to the one the user is trying to apply. In this case, the lock state remains unchanged.

The lock state of a master volume is set to *unlocked* when a master volume is created.

The lock state of a snapshot is set to *locked* when a snapshot is created.

In addition to the lock state, snapshots also have a modification state. The modification state is a read-only state (which cannot be changed by the user explicitly) and it is initially set to *unmodified* when the snapshot is created. The first

time a snapshot lock state is set to *unlocked*, the modification state of the snapshot is changed to *modified*, and it is never changed thereafter.

Example:

```
vol_lock vol=DBVolume
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	The volume is a snapshot, where its master volume is mapped to a host or cluster associated with the user and the snapshot was created by an application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **SNAPSHOT_IS_INTERNAL**
Internal snapshots cannot be mapped, modified or deleted.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_IS_OLVM_PROXY**
The volume is in an IBM Hyper-Scale Mobility Proxy phase.
- **VOLUME_IS_SLAVE**
The volume is defined as a secondary volume.
- **VOLUME_IS_OLVM_DESTINATION**
The volume is defined as an IBM Hyper-Scale Mobility destination.
- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The snapshot is part of a snapshot group.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.

- **TARGET_NOT_CONNECTED**

There is currently no connection to the target system.

- **HA_IS_NOT_OPERATIONAL**

This HyperSwap relationship is not operational. The operation cannot be carried out on a non-operational HyperSwap relationship.

Renaming a volume

Use the **vol_rename** command to rename a volume.

```
vol_rename vol=VolName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	Name of the volume to be renamed.	Y
new_name	Object name	New volume name.	Y

The new name of the volume must be unique in the system.

This command succeeds even if the new name is identical to the current name. It also succeeds regardless of the volume's lock state.

Renaming a snapshot does not change the name of its master volume. Renaming a master volume does not change the names of its associated snapshots.

Example:

```
vol_rename vol=DBVolume new_name=DBVolume1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	The volume is a snapshot, where its master volume is mapped to a host or cluster associated with the user and the snapshot was created by an application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_EXISTS**
The volume name already exists.
- **SNAPSHOT_IS_INTERNAL**
Internal snapshots cannot be mapped, modified or deleted.
- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The snapshot is part of a snapshot group.
- **VOLUME_BAD_PREFIX**
The volume name has a reserved prefix.
- **SNAPSHOT_IS_CONSISTENT_ELCS**
If a mirrored volume is not consistent, then its ELCS is protected and cannot be deleted.
- **OLVM_ERROR**
IBM Hyper-Scale Mobility error.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_VOLUMES**
This command is not supported for IBM Hyper-Scale Mobility volumes.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **HA_IS_NOT_OPERATIONAL**
This HyperSwap relationship is not operational. The operation cannot be carried out on a non-operational HyperSwap relationship.
- **REMOTE_VOLUME_EXISTS**
The secondary volume with the indicated name already exists. The name cannot be reused.
- **REMOTE_ALU_EXISTS**
An ALU with the indicated secondary volume name already exists on the remote machine.

Resizing a volume

Use the **vol_resize** command to resize a volume.

```
vol_resize vol=VolName < size=GB | size_blocks=BLOCKS >  
[ shrink_volume=<yes|no> ] [ force_on_inactive_mirror=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	The name of the volume to be resized.	Y	N/A
size	N/A	The new volume size.	N	N/A
size_blocks	N/A	New size of volumes in number of blocks.	N	N/A
shrink_volume	Boolean	Must be specified as yes if the new size is smaller than the current size.	N	No
force_on_inactive_mirror	Boolean	The parameter is required for a successful resize of a volume if (1) the volume is mirrored, (2) the volume is a master, and (3) the mirror has been deactivated by the system following a previously issued resize command that failed to successfully complete due to a communication error.	N	No

The volume can be resized in either direction. However, whenever the volume is downsized, you have to specify this with **shrink_volume=yes**.

The new size of the volume is rounded up in increments of approximately 1 GB. In some cases, rounding of up to 5% of the total volume size can take place.

If the new size equals the current size, the command succeeds without changes to the volume.

The volume's address space is extended at its end to reflect the increased size, and the additional capacity is logically formatted (that is, zeros are returned for all read commands).

When resizing a regular volume (not a writable snapshot), all storage space that is needed to support the additional volume's capacity is reserved (static allocation). This guarantees the functionality and integrity of the volume, regardless of the resource levels of the volume's storage pool. The command fails if this reservation cannot be committed.

The volume's lock state must be unlocked when the command is issued, or otherwise the command fails.

- Resizing a master volume does not change the size of its associated snapshots.
- These snapshots can still be used to restore their individual master volumes.

- A snapshot is resized in a similar way: the resize does not change the size of its master volume.

In the following example, the `-y` option suppresses the `ARE_YOU_SURE_YOU_WANT_TO_ENLARGE_VOLUME Y/N` prompt.

Example:

```
vol_resize -y vol=DBVolume size=2500
```

Using the `force_on_inactive_mirror` parameter:

- This parameter forces the resizing of a mirror peer even if mirroring is inactive (this may happen when the mirroring cannot be activated due to size mismatch).

Output:

```
Command executed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_ENLARGE_VOLUME**
Are you sure you want to increase the volume size?
- **ARE_YOU_SURE_YOU_WANT_TO_REDUCE_VOLUME**
Decreasing the volume size may cause data loss. Are you sure you want to proceed?
- **VOLUME_SIZE_VERY_LARGE_ARE_YOU_SURE**
The volume size is very large. It may not be possible to mirror this volume to older versions of the storage system. Are you sure?

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_TOO_BIG**
No space to allocate to the volume.
- **REMOTE_VOLUME_SIZE_ABOVE_LIMIT**
The specified volume size is above the limit of the remote machine.
- **VOLUME_LOCKED**
The volume is locked.
- **VOLUME_HAS_DATA_MIGRATION**
Data Migration is defined for this volume.

- **CAN_NOT_SHRINK_MAPPED_VOLUME**
A mapped volume's size cannot be decreased.
- **CAN_NOT_SHRINK_VOLUME_WITH_SNAPSHOTS**
The size of volume with snapshots cannot be decreased.
- **CAN_NOT_SHRINK_REMOTE_VOLUME_WITH_SNAPSHOTS**
The remote volume has snapshots.
- **CAN_NOT_SHRINK_MAPPED_REMOTE_VOLUME**
The remote volume is mapped.
- **VOLUME_IS_BOUND**
The volume is bound to an ALU.
Troubleshooting: Unbind the volume from the ALU.
- **REMOTE_VOLUME_HAS_DATA_MIGRATION**
Data migration is already defined for the secondary volume.
- **VOLUME_CANNOT_HAVE_ZERO_SIZE**
The volume size cannot be zero.
- **CAN_NOT_SHRINK_SNAPSHOTS**
The size of snapshots cannot be decreased.
- **CAN_NOT_RESIZE_ASYNC_INTERVAL_VOLUMES**
The size of volumes with asynchronous mirroring cannot be changed.
- **CAN_NOT_SHRINK_VOLUME**
The size of volumes cannot be decreased without an explicit request.
- **MIRROR_SIZE_MISMATCH**
The secondary and primary volume sizes are different.
- **MIRROR_POSSIBLE_SIZE_MISMATCH**
The secondary and primary volume sizes may be different.
- **HA_POSSIBLE_SIZE_MISMATCH**
Primary and secondary HyperSwap volume sizes may be different.
- **VOLUME_SIZE_ABOVE_LIMIT**
The specified volume size is above the limit.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_VOLUMES**
This command is not supported for IBM Hyper-Scale Mobility volumes.
- **MIRROR_IS_NON_OPERATIONAL**
The mirror is non-operational.
- **VOLUME_IS_SLAVE**
The volume is defined as a secondary volume.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **REMOTE_MIRROR_IS_STANDBY**
The remote mirror is marked as Standby.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **HA_IS_NOT_OPERATIONAL**
This HyperSwap relationship is not operational. The operation cannot be carried out on a non-operational HyperSwap relationship.
- **HA_RETRY_OPERATION**
An operation is in progress on this HyperSwap relationship.
Troubleshooting: Try issuing the command again in a few seconds.

Unlocking a volume

Use the **vol_unlock** command to unlock a volume, so that it is no longer read-only and can be written to.

```
vol_unlock vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	The name of the volume to unlock.	Y

An unlocked volume is no longer write-protected.

The lock state of regular volumes is set to *unlocked* when they are created. The lock state of snapshots is set to *locked* when they are created.

In addition to the lock state, snapshots also have a modification state. The modification state is a read-only state (which cannot be changed by the user explicitly) and it is initially set to *unmodified* when the snapshot is created. The first time a snapshot lock state is set to *unlocked*, the modification state of the snapshot is changed to *modified*, and it is never changed thereafter.

The modification time is the time when the unlock command was executed, regardless of the actual changes performed on the volume via write commands.

Example:

```
vol_unlock vol=DBVolume
```

Output:

```
Command executed successfully.
```


Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	The volume is a snapshot, where its master volume is mapped to a host or cluster associated with the user and the snapshot was created by an application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_UNLOCK_SNAPSHOT**
Are you sure you want to unlock snapshot *Snapshot*?

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_IS_OLVM_PROXY**
The volume is in an IBM Hyper-Scale Mobility Proxy phase.
- **VOLUME_IS_SLAVE**
The volume is defined as a secondary volume.
- **VOLUME_IS_OLVM_DESTINATION**
The volume is defined as an IBM Hyper-Scale Mobility destination.
- **SNAPSHOT_IS_INTERNAL**
Internal snapshots cannot be mapped, modified or deleted.
- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The snapshot is part of a snapshot group.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and `xiv_maintenance / xiv_development` may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **SYSTEM_OUT_OF_PHYSICAL_SPACE**
The operation not allowed while the system is out of physical space.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **HA_IS_NOT_OPERATIONAL**

This HyperSwap relationship is not operational. The operation cannot be carried out on a non-operational HyperSwap relationship.

Chapter 4. Volume snapshot management commands

This section describes the command-line interface (CLI) for snapshot management.

See also:

- Volume management commands
- Consistency group management commands
- Storage pool management commands

Changing a snapshot deletion priority

Use the `snapshot_change_priority` command to change a snapshot's deletion priority.

```
snapshot_change_priority snapshot=SnapshotName delete_priority=del_value
```

Parameters

Name	Type	Description	Mandatory
<code>snapshot</code>	Object name	Name of the snapshot whose <code>delete_priority</code> is to be changed.	Y
<code>delete_priority</code>	Integer	The priority for deleting the volume's snapshot.	Y

This command changes the priority of the deletion of an existing snapshot. The deletion priority determines which snapshots are deleted first when the system runs out of snapshot storage.

The Auto Delete Priority can have a value between 1 and 4, as follows:

- 1 = Is the last to be deleted automatically ("1" is the default set by the system)
- ...
- 4 = Is the first to be deleted automatically

Example:

```
snapshot_change_priority snapshot=DBVolume.snapshot1 delete_priority=4
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A

User Category	Permission	Condition
Application administrator	Conditionally Allowed	The master volume of the snapshot is mapped to a host or cluster associated with the user and the snapshot was created by the application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **VOLUME_IS_NOT_A_SNAPSHOT**
The operation is permitted on snapshots only.
- **SNAPSHOT_ILLEGAL_PRIORITY**
Illegal snapshot priority; must be an integer between 1 and 4.
- **SNAPSHOT_IS_INTERNAL**
Internal snapshots cannot be mapped, modified or deleted.
- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The snapshot is part of a snapshot group.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **SNAPSHOT_IS_CONSISTENT_ELCS**
If a mirrored volume is not consistent, then its ELCS is protected and cannot be deleted.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Creating a snapshot

Use the **snapshot_create** command to create a snapshot of an existing volume.

```
snapshot_create vol=VolName < [ name=Name ]
[ delete_priority=del_value ] > | < overwrite=Name > [ ext_id=Identifier ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Name of the volumes to snapshot.	Y	N/A
name	Object name	Names of the new snapshots.	N	Auto-generated names.
delete_priority	Integer	The deletion priority of the volume's snapshot.	N	1

Name	Type	Description	Mandatory	Default
overwrite	Object name	Name of an existing snapshot to be overwritten with the current volume content.	N	N/A
ext_id	String	External identifier of the volume.	N	N/A

This command creates a new snapshot for an existing volume, which is referred to as the snapshot's master volume. The snapshot's content is the same as the master volume at the exact point in time when the snapshot was created. The snapshot remains unchanged, although the master volume keeps changing after the snapshot is created. Upon a successful completion of this command, the snapshot is created and assigned a name that can later be used by other commands. The name does not have to be new. It can be the name of an already existing snapshot (in such a case, the already existing snapshot is overridden).

A write operation can be processed at the exact time of the snapshot creation, meaning that the write operation request was sent to the system before the command was executed, while the write was acknowledged after the command was executed. In this case, the content of the snapshot is not deterministic and may either contain the original value before the write operation, or the new value after the write operation. In fact, the snapshot's data may even contain a mixture of the two, where some blocks are equal to the volume before the write operation and other blocks are equal to the value after the write operation.

The new snapshot is initially locked for changes.

The created snapshot acts like a regular volume, except for the differences described below:

- The snapshot's name is either automatically generated from its master volume's name or given as a parameter to the command. It can later be changed without altering the snapshot's modification state.
- Upon successful completion of the command, the system assigns a unique SCSI ID to the snapshot. The creation time of the snapshot is set to the current time and is never changed until the snapshot is deleted.
- The size of the snapshot is the same as its master volume's size, but no storage space is reserved for the snapshot. This means that the functionality of the snapshot is not guaranteed. When the snapshot's storage pool is exhausted, the snapshot may be deleted.
- The snapshot's lock state is initially set to "locked", and as long as it is not "unlocked", the snapshot remains an exact image of the master volume at creation time and can be the source for a restore operation. The modification state of the snapshot is initially set to "unmodified".

During creation, the snapshot's deletion priority can be set explicitly, or it is automatically set to the default value. The deletion priority determines which snapshots will be deleted first when the storage pool runs out of snapshot storage. This may happen due to the redirect-on-write mechanisms which share unchanged data between volumes and their snapshots, as well as between snapshots of the same volume.

The Auto Delete Priority can have a value between 1 and 4, as follows:

- 1 = Is last to be deleted automatically ("1" is the default set by the system)
- ...
- 4 = Is first to be deleted automatically

The snapshot is associated with its master volume and this association cannot be broken or changed as long as the snapshot exists.

The `overwrite` option copies the current content of the volume into one of its existing snapshots (set as an input argument). The overwritten snapshot keeps the same SCSI device WWN and same mapping, so hosts maintain a continuous mapping to the snapshot, without any need for a rescan or similar operation. The overwritten snapshot must be an existing snapshot of the given volume. The overwritten snapshot cannot be part of a snapshot group.

This command fails when no snapshot space is defined in the storage pool the master volume belongs to.

Mirroring limitations:

- This command fails if the volume is a slave of an asynchronous mirroring coupling.
- This command fails if the volume is a slave of an inconsistent synchronous coupling.

Example:

```
snapshot_create vol=DBVolume name=DBVolume.snapshot1 delete_priority=2
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	The volume is mapped to a host or a cluster associated with the user. If a snapshot overwrite is used, the target snapshot must be one created by a server administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **DOMAIN_MAX_VOLUMES_REACHED**

The domain exceeds the maximum allowed number of volumes.

- **SNAPSHOT_ILLEGAL_PRIORITY**
Illegal snapshot priority; must be an integer between 1 and 4.
- **VOLUME_IS_SNAPSHOT**
The operation is not permitted on snapshots.
- **VOLUME_EXISTS**
The volume name already exists.
- **VOLUME_BAD_PREFIX**
The volume name has a reserved prefix.
- **VOLUME_DATA_MIGRATION_UNSYNCHRONIZED**
Data Migration to this volume has not completed.
- **OVERWRITE_SNAPSHOT_BAD_NAME**
The snapshot name does not exist.
- **OVERWRITE_SNAPSHOT_IS_MASTER_VOL**
This snapshot cannot be overwritten because it is a primary volume.
- **SNAPSHOT_OVERWRITE_MISMATCH**
The specified snapshot is not a snapshot of the specified volume.
- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The snapshot is part of a snapshot group.
- **SNAPSHOT_IS_INTERNAL**
Internal snapshots cannot be mapped, modified or deleted.
- **POOL_SNAPSHOT_LIMIT_REACHED**
There is not enough space to create a snapshot.
- **VOLUME_IS_NOT_CONSISTENT_SLAVE**
The operation not allowed on an inconsistent secondary volume.
- **VOLUME_IS_NOT_CONSISTENT_OLVM_DESTINATION**
The operation not allowed on an inconsistent IBM Hyper-Scale Mobility volume.
- **VOLUME_IS_OLVM_PROXY**
The volume is in an IBM Hyper-Scale Mobility Proxy phase.
- **SNAPSHOT_HAS_ACTIVE_SYNC_JOB**
The snapshot is currently the target of an active sync job.
Troubleshooting: Please wait for the sync job to complete.
- **TOO_MANY_FAST_SNAPSHOTS_IN_VOLUME**
The maximum allowed number of fast snapshots for this volume is already reached.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **NUM_VOLUMES_WILL_EXCEED_MAXIMUM**
Cannot create all the volumes, because otherwise the number of volumes will exceed the allowed maximum.
- **DOMAIN_WILL_EXCEED_MAXIMUM_VOLUMES_ALLOWED**
Cannot create all the volumes, because otherwise the maximum allowed number of volumes in the domain will be exceeded.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **MAX_SNAPSHOTS_PER_VOLUME_REACHED**

The maximum allowed number of snapshots is already reached.

Deleting a snapshot

Use the **snapshot_delete** command to delete a snapshot.

```
snapshot_delete snapshot=SnapshotName
```

Parameters

Name	Type	Description	Mandatory
snapshot	Object name	Snapshot to be deleted.	Y

This command cannot be used to delete a master volume, or a snapshot which is mapped to a host or cluster, or an internal snapshot of a mirroring.

Example:

```
snapshot_delete snapshot=DBVolume.snapshot1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	The master volume of the snapshot is mapped to a host or cluster associated with the user and the snapshot was created by the application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **VOLUME_BAD_NAME**

The volume name does not exist.

- **VOLUME_IS_NOT_A_SNAPSHOT**

The operation is permitted on snapshots only.

- **SNAPSHOT_IS_INTERNAL**

Internal snapshots cannot be mapped, modified or deleted.

- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**

The snapshot is part of a snapshot group.

- **SNAPSHOT_IS_MAPPED**

A snapshot that is mapped to a host cannot be deleted.

- **VOLUME_IS_BOUND**

The volume is bound to an ALU.

Troubleshooting: Unbind the volume from the ALU.

- **SNAPSHOT_HAS_ACTIVE_SYNC_JOB**

The snapshot is currently the target of an active sync job.

Troubleshooting: Please wait for the sync job to complete.

- **SNAPSHOT_IS_CONSISTENT_ELCS**

If a mirrored volume is not consistent, then its ELCS is protected and cannot be deleted.

- **OPERATION_DENIED_OBJECT_MANAGED**

This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

Duplicating a snapshot

Use the **snapshot_duplicate** command to duplicate an existing snapshot.

```
snapshot_duplicate snapshot=SnapshotName [ name=Name ]
```

Parameters

Name	Type	Description	Mandatory	Default
snapshot	Object name	The name of the snapshot to duplicate.	Y	N/A
name	Object name	Name of the new snapshot to be generated.	N	Automatically generated name.

The newly created snapshot is initially locked for changes and is associated with the master volume of the existing snapshot. The content of the newly created snapshot is identical with the content of the source snapshot.

It is useful to duplicate a snapshot before unlocking it for write operations. The duplicate snapshot can be used as a logical backup of the data in case the write operation caused logical data corruption.

Upon successful completion of the command, a new duplicate snapshot is created.

The duplicated snapshot is identical with the source snapshot. It has the same creation time and behaves as if it was created at the exact same moment and from the same master volume.

The duplicate snapshot's name is either automatically generated from its master volume's name or provided as a parameter. It can later be changed without altering its modification state.

A snapshot can be duplicated multiple times. A duplicated snapshot can be the source for further duplications.

Example:

```
snapshot_duplicate snapshot=DBVolume.snapshot1 name=DBVolume.snapshot1.copy
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	The master volume of the snapshot is mapped to a host or cluster associated with the user and the snapshot was created by the application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **VOLUME_IS_NOT_A_SNAPSHOT**
The operation is permitted on snapshots only.
- **VOLUME_EXISTS**
The volume name already exists.
- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The snapshot is part of a snapshot group.
- **VOLUME_BAD_PREFIX**
The volume name has a reserved prefix.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **MAX_SNAPSHOTS_PER_VOLUME_REACHED**
The maximum allowed number of snapshots is already reached.

Formatting a snapshot

Use the **snapshot_format** command to format a snapshot.

```
snapshot_format snapshot=SnapshotName
```

Parameters

Name	Type	Description	Mandatory
snapshot	Object name	The snapshot to be formatted.	Y

This command deletes the content of a snapshot while maintaining its mapping to the host. The format operation results with:

- The formatted snapshot is read-only
- The format operation has no impact on performance
- The formatted snapshot does not consume space
- Reading from the formatted snapshot always returns zeroes
- The formatted snapshot can be overridden
- The formatted snapshot can be deleted
- The formatted snapshot deletion priority can be changed

Example:

```
snapshot_format snapshot
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The snapshot is part of a snapshot group.
- **SNAPSHOT_HAS_ACTIVE_SYNC_JOB**
The snapshot is currently the target of an active sync job.
Troubleshooting: Please wait for the sync job to complete.
- **VOLUME_BAD_NAME**
The volume name does not exist.

- **SNAPSHOT_IS_INTERNAL**
Internal snapshots cannot be mapped, modified or deleted.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **SNAPSHOT_IS_FORMATTED**
The snapshot is formatted.
- **ELCS_CANNOT_BE_FORMATTED**
The snapshot is an ELCS and cannot be formatted.
- **VOLUME_IS_NOT_A_SNAPSHOT**
The operation is permitted on snapshots only.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Listing snapshot information

Use the **snapshot_list** command to list snapshot information.

```
snapshot_list vol=VolName [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	List of all the snapshots of this volume.	Y	N/A
domain	Object name	The domain name.	N	All Domains

This command lists snapshot information for all the snapshots of a specified volume.

It displays the following VAAI fields (available in XML output format):

- **enable_VAAI**
- **user_disabled_VAAI**

The command displays the following snapshot format field (available in XML output format):

- **snapshot_format**

Field ID	Field output	Default position
name	Name	1
size	Size (GB)	2
size_MiB	Size (MiB)	N/A
vol_copy_type	Copy type	3
master_name	Master Name	4
cg_name	Consistency Group	5

Field ID	Field output	Default position
pool_name	Pool	6
creator	Creator	7
written	Written (GB)	8
written_MiB	Written (MiB)	N/A
proxy	Proxy	N/A
capacity	Capacity (blocks)	N/A
modified	Modified	N/A
sg_name	Snapshot Group Name	N/A
delete_priority	Deletion Priority	N/A
locked	Locked	N/A
snapshot_time	Snapshot Creation Time	N/A
snapshot_time_on_master	Master Copy Creation Time	N/A
snapshot_internal_role	Snapshot Internal Role	N/A
snapshot_of	Snapshot of	N/A
sg_snapshot_of	Snapshot of Snap Group	N/A
wwn	WWN	N/A
mirrored	Mirrored	N/A
locked_by_pool	Locked by Pool	N/A
capacity_used_by_snapshots_MiB	Capacity Used by Snapshots (MiB)	N/A
short_lived_io	Short Live IO	N/A
enable_VAAI	VAAI enabled	N/A
user_disabled_VAAI	VAAI disabled by user	N/A
snapshot_format	Snapshot Format	N/A
unmap_support	Unmap Support	N/A
managed	Managed	N/A
marked	Marked	N/A
perf_class	Performance Class Name	N/A
thin_provisioning_savings	Thin Provisioning Savings (%)	N/A
est_compression_factor	Est. Compression Factor	N/A
unique_stored_data	Unique Stored Data (GB)	N/A
ha	HA Relation	N/A
target_port_group_id	TPG ID	N/A
target_port_group_state	TPG State	N/A
lock_modes	Lock Modes	N/A
copy_master_wwn	Copy Master	N/A

Example:

```
snapshot_list vol=DBVolume
```

Output:

Name	Size (GB)	Master Name	Consistency Group	Pool
DBVolume.sp1	2508	DBVolume		default
DBVolume.sp1.copy	2508	DBVolume		default

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Restoring a volume from a snapshot

Use the **snapshot_restore** command to restore a master volume or a snapshot from one of its associated snapshots.

```
snapshot_restore snapshot=SnapshotName [ target_snapshot=SnapshotName ]
```

Parameters

Name	Type	Description	Mandatory	Default
snapshot	Object name	Name of the snapshot with which to restore its master volume, or snapshot.	Y	N/A
target_snapshot	Object name	Snapshot to be restored.	N	Restore the master volume.

This command restores the data of a master volume from one of its associated snapshots.

Issuing a restore command, logically copies the data of the source snapshot onto its volume. The volume's data is therefore restored to the state of the snapshot creation. If the volume was resized after the snapshot was created, the restore operation resizes the volume back to its original size.

All the snapshots associated with the volume are left unchanged during a restore operation.

It is possible to snapshot the volume before restoring it, so that the generated snapshot can be used and the data is not lost.

It is possible to restore another snapshot (the target snapshot) from the source snapshot. The target snapshot must be a snapshot of the same volume as the source snapshot. The target snapshot's content and size will be identical to the source snapshot's content and size. The target snapshot's lock/unlock status will remain as it was.

Restoring a mirrored volume:

- Delete the mirror
- Restore the volume
- Re-establish the mirror

It is impossible to restore a volume while it is mirrored.

Example:

```
snapshot_restore snapshot=DBVolume.snapshot1
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	Both target and source are snapshots of the same master volume. This master volume is mapped to a host or cluster associated with the user, and the target snapshot was created by an application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_RESTORE_SNAPSHOT**
Are you sure you want to restore the volume from snapshot *Snapshot?*

Return codes

- **VOLUME_HAS_DATA_MIGRATION**
Data Migration is defined for this volume.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_IS_NOT_A_SNAPSHOT**
The operation is permitted on snapshots only.
- **VOLUME_TOO_BIG**
No space to allocate to the volume.
- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The snapshot is part of a snapshot group.
- **VOLUME_HAS_MIRROR**
A mirror is defined for this volume.
- **VOLUME_HAS_HA**
This operation is forbidden on a volume with a HyperSwap relationship.
- **VOLUME_LOCKED**
The volume is locked.
- **SNAPSHOTS_BELONG_TO_DIFFERENT_MASTERS**
The target and source snapshots must be snapshots of the same volume.

- **TARGET_SNAPSHOT_BAD_NAME**
The target snapshot name does not exist.
- **TARGET_SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The target snapshot is part of a snapshot group.
- **TARGET_SNAPSHOT_IS_MASTER**
The target snapshot is a primary volume.
- **TARGET_SNAPSHOT_IS_OLVM_DESTINATION**
The target snapshot is an IBM Hyper-Scale Mobility destination volume.
- **TARGET_SNAPSHOT_IS_OLVM_PROXY**
The target snapshot is an IBM Hyper-Scale Mobility proxy volume.
- **TARGET_SNAPSHOT_SAME_AS_SNAPSHOT**
The source snapshot must be different from the target snapshot.
- **TARGET_SNAPSHOT_HAS_ACTIVE_SYNC_JOB**
The target snapshot is currently the target of an active sync job.
Troubleshooting: Please wait for sync job to complete
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Chapter 5. Consistency group management commands

This section describes the command-line interface (CLI) for consistency group management.

See also:

- Volume management commands
- Volume snapshot management commands
- Storage pool management commands

Adding a volume to a consistency group

Use the **cg_add_vol** command to add a volume to a consistency group.

```
cg_add_vol cg=cgName vol=VolName
```

Parameters

Name	Type	Description	Mandatory
cg	Object name	Name of a consistency group.	Y
vol	Object name	Name of the volume to be added.	Y

This command adds a volume to a consistency group. The consistency group can contain up to 128 volumes.

Requirements for successful command completion:

- The volume and consistency group are associated with the same pool.
- The volume is not already part of a consistency group.
- The volume is not a snapshot.
- The consistency group has less than the maximum number of volumes (see above).

Adding a mirrored volume to a non-mirrored consistency group:

- Such an addition always succeeds and the volume will retain its mirroring settings.

Requirements for successful command completion for a mirrored consistency group:

- The command must be issued only on the master consistency group.
- The command cannot be run during the initialization of the volume or consistency group.
- The volume does not have any outstanding ad-hoc sync jobs.
- The volume has to be mirrored, and its following mirroring settings must be identical to those of the consistency group: mirroring type (for example, synchronous), mirroring status, mirroring target, target pool, designation.

- In addition, for a mirrored consistency group that is defined as `sync_best_effort` (synchronous):
 - The synchronization status of both volume and consistency group has to be Synchronized.
- For a mirrored consistency group that is defined as `async_interval` (asynchronous):
 - The volume and consistency group must have the following identical settings and values: schedule, remote schedule, timestamp of the last replicated snapshot.
 - The synchronization status of the volume and consistency group must be `RPO_OK`
- The link has to be up.

Adding a mirrored volume to a mirrored volume and consistency group also adds the volume's peer to the volume and consistency group's peer. Once added, the mirrored volume will be set the RPO of the mirrored volume and consistency group.

The mirrored consistency group has one sync job for all pertinent mirrored volumes within the consistency group.

If the command `cg_add_vol` is issued on a mirrored master consistency group, which fails to receive an acknowledgment from the slave until the command times out or due to an unexpected failure, the **MIRROR_POSSIBLE_CONS_GROUP_MEMBERSHIP_MISMATCH** completion code is returned. The completion code indicates that the member lists of the mirror consistency group peers might not be the same.

Example:

```
cg_add_vol cg=DBGroup vol=DBLog
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **CONS_GROUP_MIRROR_DESIGNATION_MISMATCH**
The volume's role in a mirroring or HyperSwap relationship is different from the consistency group role. Are you sure you want to add the volume to that consistency group?

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_IS_SLAVE**
The consistency group's role in a mirroring relationship is secondary.
- **MAX_VOLUMES_IN_CONS_GROUP_REACHED**
The consistency group contains the maximum allowed number of volumes.
- **MAX_VOLUMES_IN_REMOTE_CONS_GROUP_REACHED**
The remote consistency group contains the maximum allowed number of volumes.
- **MIRROR_HAS_SYNC_JOB**
The operation is not permitted on a mirror with active sync jobs.
- **MIRROR_IS_NOT_SYNCHRONIZED**
The mirror is not synchronized.
- **MIRROR_LAST_SYNC_TIMES_DIFFER**
All mirrors must have the same last sync time.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **REMOTE_VOLUME_BAD_POOL**
The remote volume and remote consistency group belong to different storage pools.
- **REMOTE_VOLUME_BELONGS_TO_CONS_GROUP**
The remote volume belongs to a consistency group.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **VOLUME_BAD_POOL**
The volume belongs to a different storage pool.
- **VOLUME_BELONGS_TO_CG**
The volume belongs to a consistency group.
- **VOLUME_DATA_MIGRATION_UNSYNCHRONIZED**
Data Migration to this volume has not completed.
- **VOLUME_IS_SNAPSHOT**
The operation is not permitted on snapshots.
- **CONS_GROUP_MIRROR_SCHEDULE_MISMATCH**
All volumes in a mirrored consistency group must have the same mirroring schedule.
- **CONS_GROUP_MIRROR_TARGET_MISMATCH**
All volumes in a mirrored consistency group must have the same mirroring target.
- **CONS_GROUP_MIRROR_ROLE_MISMATCH**
All volumes in a mirrored consistency group must have the same mirroring role.
- **CONS_GROUP_MIRROR_ACTIVATION_MISMATCH**

All volumes in a mirrored consistency group must have the same mirroring activation state.

- **HA_HIGH_AVAILABILITY_DISABLED_IN_VOL**
The consistency group's high availability is enabled, but the volume's high availability is disabled.
- **HA_HIGH_AVAILABILITY_ENABLED_IN_VOL**
The consistency group's high availability is disabled but the volume's high availability is enabled.
- **CONS_GROUP_HA_ROLE_MISMATCH**
All volumes in a HyperSwap consistency group must have the same mirroring role.
- **HA_LAST_SYNC_TIMES_DIFFER**
All HyperSwap relationships in a consistency group must have the same last sync time.
- **HA_POSSIBLE_CONS_GROUP_MEMBERSHIP_MISMATCH**
The HyperSwap consistency group may contain different volumes on the primary and secondary machines.
- **CONS_GROUP_HA_ACTIVATION_MISMATCH**
All volumes in a HyperSwap consistency group must have the same HyperSwap activation state.
- **CONS_GROUP_HA_TARGET_MISMATCH**
All volumes in a mirrored consistency group must have the same HyperSwap target.
- **HA_RETRY_OPERATION**
An operation is in progress on this HyperSwap relationship.
Troubleshooting: Try issuing the command again in a few seconds.
- **HA_IS_NOT_SYNCHRONIZED**
The HyperSwap relationship is not synchronized.
- **REMOTE_CONS_GROUP_MIRROR_SCHEDULE_MISMATCH**
All volumes in a mirrored consistency group on the remote machine must have identical mirroring schedule.
- **CONS_GROUP_MIRROR_TYPE_MISMATCH**
All volumes in a mirrored consistency group must be of the same mirroring type.
- **MIRROR_POSSIBLE_CONS_GROUP_MEMBERSHIP_MISMATCH**
The mirrored consistency group contains different volumes on the primary and secondary machines. This problem occurs whenever the `cg_add_vol` command was issued, but the primary machine did not receive an acknowledgment from the secondary machine until the command timed out, or due to any other unexpected failure.
- **REMOTE_CONS_GROUP_CRASH_CONSISTENCY_MISMATCH**
Crash consistency of the volume does not match the state of other volumes in the group on the remote machine.
- **CONS_GROUP_CRASH_CONSISTENCY_MISMATCH**
Crash consistency of the volume does not match the state of other volumes in the group.
- **OPERATION_DENIED_OBJECT_MANAGED**

This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.

- **VOLUME_HAS_OLVM**

An IBM Hyper-Scale Mobility relationship is defined for this volume.

- **VOLUME_HAS_MULTIPLE_MIRRORS**

The volume has multiple mirrors. The operation is not allowed, or a target must be specified.

- **REMOTE_MIRROR_IS_STANDBY**

The remote mirror is marked as Standby.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

Creating consistency groups

Use the **cg_create** command to create a consistency group.

```
cg_create cg=cgName pool=PoolName
```

Parameters

Name	Type	Description	Mandatory
cg	Object name	Name of the consistency group.	Y
pool	Object name	Storage pool of the consistency group.	Y

This command creates a consistency group. A consistency group is a group of volumes that can all be snapshotted at the same point of time. This is essential for snapshotting several volumes used by the same application or by applications that interact with each other in order to generate a consistent set of snapshots.

The name of the consistency group must be unique in the system. The system can contain up to 256 consistency groups.

The storage pool of the consistency group must be specified.

The consistency group is initially empty, containing no volumes.

A consistency group always belongs to a specific storage pool. All the volumes in the consistency group belong to the same storage pool as the consistency group itself.

Example:

```
cg_create pool=p_1 cg=DBgroup
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CONS_GROUP_NAME_EXISTS**
The consistency group name already exists.
- **MAX_CONS_GROUPS_REACHED**
The maximum allowed number of consistency groups is already reached.
- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **DOMAIN_MAX_CONS_GROUPS_REACHED**
The domain exceeds the maximum allowed number of consistency groups.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Deleting a consistency group

Use the **cg_delete** command to delete a consistency group.

```
cg_delete cg=cgName
```

Parameters

Name	Type	Description	Mandatory
cg	Object name	Name of the consistency group to be deleted.	Y

This command fails if:

- The consistency group is not empty, that is, it still contains volumes.
- The consistency group is mirrored, even if it is empty.

All snapshot groups associated with the consistency group are disbanded, that is the snapshots contained in these snapshot groups become independent snapshots.

Example:

```
cg_delete cg=DBvolumes
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_NOT_EMPTY**
This operation is only allowed on an empty consistency group.
- **CONS_GROUP_HAS_MIRROR**
Mirroring is defined for this consistency group.
- **CONS_GROUP_BELONGS_TO_XCG**
The consistency group belongs to another cross-system consistency group.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Listing consistency groups

Use the **cg_list** command to list consistency groups.

```
cg_list [ cg=cgName ] [ managed=<yes|no|all> ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
cg	Object name	Name of a consistency group.	N	All
managed	Boolean	Determines whether to show unmanaged consistency groups (no), managed consistency groups (yes) or both (all).	N	no
domain	Object name	The domain name.	N	All Domains

This command lists the specified details for all consistency groups. If a consistency group name is indicated, only this consistency group is listed.

Field ID	Field output	Default position
name	Name	1
pool	Pool Name	2
mirrored	Mirrored	N/A
ha	HA	N/A
managed	Managed	N/A

Example:

```
cg_list cg=DBgroup
```

Output:

```
Name      Pool Name Mirrored GP Based
DBgroup  default  Yes      No
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Removing a volume from a consistency group

Use the command **cg_remove_vol** to remove a volume from a consistency group.

```
cg_remove_vol vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	Name of the volume to be removed.	Y

This command removes a volume from a consistency group.

A consistency group's name is deduced from the volume name. A unique name is ensured because each volume belongs to only a single consistency group. Future snapshot groups created from this consistency group will not include the snapshot associated with the removed volume.

All the snapshots of the removed volume that were created as part of this consistency group will be permanently removed from the snapshot groups they were associated with.

Following the volume removal:

- The corresponding peer volume is removed from the peer consistency group. If the consistency group is mirrored, the mirroring definition of the removed volume is retained (based on the same settings as the consistency group from which it was removed).
- The peer volume is also removed from the peer consistency group.
- The removed mirrored volume acquires the RPO of the mirrored consistency group from which it was removed.
- An event is generated.

This command succeeds even if the volume is not included in any consistency group.

Requirements for a successful command completion:

- The command can be issued only on the master.
- The link has to be up.
- The consistency group cannot have ongoing sync jobs.

If the command is issued on a mirrored consistency group master, and the master does not receive an acknowledgment from the slave because the command times out or due to an unexpected failure, a return code is returned: (**MIRROR_POSSIBLE_CONS_GROUP_MEMBERSHIP_MISMATCH**).

Example:

```
cg_remove_vol vol=DBLog
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_REMOVE_VOLUME_FROM_CONS_GROUP**
Are you sure you want to remove volume '*Volume*' from its consistency group?

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NOT_IN_CONS_GROUP**
The volume does not belong to a consistency group.

- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **VOLUME_IS_SNAPSHOT**
The operation is not permitted on snapshots.
- **CONS_GROUP_IS_SLAVE**
The consistency group's role in a mirroring relationship is secondary.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **MIRROR_HAS_SYNC_JOB**
The operation is not permitted on a mirror with active sync jobs.
- **MIRROR_POSSIBLE_CONS_GROUP_MEMBERSHIP_MISMATCH**
The mirrored consistency group contains different volumes on the primary and secondary machines. This problem occurs whenever the `cg_add_vol` command was issued, but the primary machine did not receive an acknowledgment from the secondary machine until the command timed out, or due to any other unexpected failure.
- **HA_POSSIBLE_CONS_GROUP_MEMBERSHIP_MISMATCH**
The HyperSwap consistency group may contain different volumes on the primary and secondary machines.
- **VOLUME_IS_NOT_CONSISTENT_SLAVE**
The operation not allowed on an inconsistent secondary volume.
- **SNAPSHOT_HAS_ACTIVE_SYNC_JOB**
The snapshot is currently the target of an active sync job.
Troubleshooting: Please wait for the sync job to complete.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and `xiv_maintenance / xiv_development` may perform this operation on this object.
- **VOLUME_HAS_OLVM**
An IBM Hyper-Scale Mobility relationship is defined for this volume.
- **REMOTE_MIRROR_IS_STANDBY**
The remote mirror is marked as Standby.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **MAX_SNAPSHOTS_PER_VOLUME_REACHED**
The maximum allowed number of snapshots is already reached.
- **HA_RETRY_OPERATION**
An operation is in progress on this HyperSwap relationship.
Troubleshooting: Try issuing the command again in a few seconds.

Renaming a consistency group

Use the `cg_rename` command to rename consistency groups.

```
cg_rename cg=cgName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
cg	Object name	The name of the consistency group to be renamed.	Y
new_name	Object name	The new name of the consistency group.	Y

The new name of the consistency group must be unique in the system.

This command succeeds even if the new name is identical with the current name.

Example:

```
cg_rename cg=DBgroup new_name=DBvolumes
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_NAME_EXISTS**
The consistency group name already exists.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Creating a cross-system consistency group

Use the **xcg_create** command to create a cross-system consistency group (XCG) definition.

```
xcg_create xcg=XcgName
```

Parameters

Name	Type	Description	Mandatory
xcg	Object name	The name of the new cross-system consistency group.	Y

This command creates a cross-system consistency group (XCG) definition, with which consistency groups on different systems can be associated.

Example:

```
xcg_create xcg=DBbackup
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the group is mapped to a host or cluster associated with the user. If a Snapshot Group overwrite is used, then the target Snapshot Group must be one created by a server administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **XCG_NAME_EXISTS**
The cross-system consistency group name already exists.
- **MAX_XCGS_REACHED**
The maximum allowed number of cross-system consistency groups is already reached.

Associating an existing consistency group with a cross-system consistency group definition

Use the **xcg_add_cg** command to associate an existing consistency group to a cross-system consistency group definition.

```
xcg_add_cg xcg=XcgName cg=cgName
```

Parameters

Name	Type	Description	Mandatory
xcg	Object name	Name of a cross-system consistency group.	Y
cg	Object name	Name of a consistency group.	Y

Example:

```
xcg_add_cg xcg=DBbackup cg=CGbackup
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the group is mapped to a host or cluster associated with the user. If a Snapshot Group overwrite is used, then the target Snapshot Group must be one created by a server administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **XCG_BAD_NAME**
The cross-system consistency group name does not exist.
- **MAX_CONS_GROUPS_IN_XCG_REACHED**
The cross-system consistency group contains the maximum allowed number of consistency groups.
- **CONS_GROUP_IS_SLAVE**
The consistency group's role in a mirroring relationship is secondary.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_ALREADY_IN_XCG**
The consistency group already belongs to a cross-system consistency group.
- **CONS_GROUP_BELONGS_TO_XCG**
The consistency group belongs to another cross-system consistency group.

Removing a consistency group from a cross-system consistency group

Use the **xcg_remove_cg** command to remove an existing consistency group from a cross-system consistency group definition.

```
xcg_remove_cg xcg=XcgName cg=cgName
```

Parameters

Name	Type	Description	Mandatory
xcg	Object name	Name of a Cross-system Consistency Group.	Y
cg	Object name	Name of a Consistency Group.	Y

Example:

```
xcg_remove_cg xcg=DBbackup cg=CGBackup
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the group is mapped to a host or cluster associated with the user. If a Snapshot Group overwrite is used, then the target Snapshot Group must be one created by a server administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_REMOVE_CONS_GROUP_FROM_XCG**

Are you sure you want to remove consistency group 'CG' from its cross-system consistency group?

Return codes

- **XCG_BAD_NAME**

The cross-system consistency group name does not exist.

- **CONS_GROUP_BAD_NAME**

The consistency group name does not exist.

- **XCG_IS_EMPTY**

The consistency group is empty.

- **CONS_GROUP_NOT_IN_XCG**

The consistency group does not belong to a cross-system consistency group.

Adding a remote system name to a cross-system consistency group definition

Use the **xcg_add_remote_system** command to add a remote system name to a cross-system consistency group definition.

```
xcg_add_remote_system xcg=XcgName remote_system=RemoteSystem
```

Parameters

Name	Type	Description	Mandatory
xcg	Object name	Name of a cross-system consistency group.	Y
remote_system	String	Name of a remote system.	Y

Example:

```
xcg_add_remote_system xcg=DBbackup remote_system=CGbackup
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the group is mapped to a host or cluster associated with the user. If a Snapshot Group overwrite is used, then the target Snapshot Group must be one created by a server administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **XCG_BAD_NAME**

The cross-system consistency group name does not exist.

- **MAX_REMOTE_SYSTEMS_IN_XCG_REACHED**

The cross-system consistency group contains the maximum number of remote systems.

- **REMOTE_SYSTEM_ALREADY_ADDED**

The remote system belongs to a cross-system consistency group.

Removing a remote system from a cross-system consistency group

Use the **xcg_remove_remote_system** command to remove a remote system name from a cross-system consistency group definition.

```
xcg_remove_remote_system xcg=XcgName remote_system=RemoteSystem
```

Parameters

Name	Type	Description	Mandatory
xcg	Object name	Name of a Cross-system Consistency Group.	Y
remote_system	String	Name of a remote system.	Y

Example:

```
xcg_remove_remote_system xcg=DBbackup remote_system=CGbackup
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the group is mapped to a host or cluster associated with the user. If a Snapshot Group overwrite is used, then the target Snapshot Group must be one created by a server administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **XCG_BAD_NAME**
The cross-system consistency group name does not exist.
- **REMOTE_SYSTEM_NOT_IN_XCG**
The remote system does not belong to a cross-system consistency group.

Listing cross-system consistency group definitions

Use the `xcg_get_local_cgs` command to list cross-system consistency group definitions together with the contained consistency groups.

```
xcg_get_local_cgs [ xcg=XcgName ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>xcg</code>	Object name	Name of a cross-system consistency group.	N	All Cross-system Consistency Groups.

Example:

```
xcg_get_local_cgs
```

Output:

```
Command completed successfully.
```

Field ID	Field output	Default position
<code>name</code>	Name	1
<code>xcg</code>	XCG Name	2

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the group is mapped to a host or cluster associated with the user. If a Snapshot Group overwrite is used, then the target Snapshot Group must be one created by a server administrator.
Security administrator	Disallowed	N/A
Read-only users	Allowed	N/A
Technicians	Disallowed	N/A

Return codes

- `XCG_BAD_NAME`

The cross-system consistency group name does not exist.

Retrieving remote systems in a specified cross-system consistency group

Use the `xcg_get_remote_systems` command to retrieve the names of remote systems that are a part of the specified cross-system consistency group.

```
xcg_get_remote_systems xcg=XcgName
```

Parameters

Name	Type	Description	Mandatory
<code>xcg</code>	Object name	Name of a Cross-system Consistency Group.	Y

Example:

```
xcg_get_remote_systems xcg=XcGroup1
```

Output:

```
Command completed successfully.
```

Field ID	Field output	Default position
<code>name</code>	Name	1
<code>xcg</code>	XCG Name	2

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the group is mapped to a host or cluster associated with the user. If a Snapshot Group overwrite is used, then the target Snapshot Group must be one created by a server administrator.
Security administrator	Disallowed	N/A
Read-only users	Allowed	N/A
Technicians	Disallowed	N/A

Return codes

- `XCG_BAD_NAME`

The cross-system consistency group name does not exist.

Deleting a cross-system consistency group

Use the **xcg_delete** command to delete a cross-system consistency group (XCG) definition.

```
xcg_delete xcg=XcgName
```

Parameters

Name	Type	Description	Mandatory
xcg	Object name	Name of a cross-system consistency group.	Y

Example:

```
xcg_delete xcg=DBbackup
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the group is mapped to a host or cluster associated with the user. If a Snapshot Group overwrite is used, then the target Snapshot Group must be one created by a server administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **XCG_BAD_NAME**
The cross-system consistency group name does not exist.
- **XCG_NOT_EMPTY**
The consistency group is not empty.

Listing cross-system consistency group definitions

Use the **xcg_list** command to list cross-system consistency group definitions together with the contained consistency groups.

```
xcg_list [ xcg=XcgName ]
```

Parameters

Name	Type	Description	Mandatory	Default
xcg	Object name	Name of a Cross-system Consistency Group.	N	All Cross-system Consistency Groups.

Field ID	Field output	Default position
name	Name	1
num_of_cgs	Num Of CGs	2
num_of_remote_systems	Num Of Remote Systems	3

Example:

```
xcg_list
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the group is mapped to a host or cluster associated with the user. If a Snapshot Group overwrite is used, then the target Snapshot Group must be one created by a server administrator.
Security administrator	Disallowed	N/A
Read-only users	Allowed	N/A
Technicians	Disallowed	N/A

Chapter 6. Snapshot set management commands

This section describes the command-line interface (CLI) for snapshot set management.

See also:

- Volume management commands
- Volume snapshot management commands
- Consistency group management commands

Snapshotting a consistency group

Use the **cg_snapshots_create** command to create a snapshot group of a consistency group.

```
cg_snapshots_create cg=cgName < [ snap_group=SnapshotGroupName ]  
[ delete_priority=del_value ] [ auto_resume=token_id ] > | <overwrite=Name>
```

Parameters

Name	Type	Description	Mandatory	Default
cg	Object name	The name of the consistency group whose snapshot will be created.	Y	N/A
snap_group	Object name	The name of the newly created snapshot group.	N	Automatically generated name.
delete_priority	Integer	The priority for deleting this volume when the system runs out of snapshot space.	N	1
overwrite	Object name	An existing snapshot group that will be overwritten with the current content.	N	N/A
auto_resume	Positive integer	Defines whether to resume IO to the consistency group by providing the token ID.	N	0

This command creates a consistent snapshot group of a consistency group. The snapshot group includes a snapshot for each of the volumes contained in the consistency group.

Logically, this command is comprised of the following steps:

- Suspending all I/O activity on all the volumes in the group and waiting for all pending I/Os to complete.
- Creating a snapshot for each volume in the group.

- Resuming I/O activity on all the volumes.

The main advantage of using this command (as opposed to a manual procedure) is that all snapshots are taken at the same point of time, thus ensuring that they are consistent with each other.

The snapshots in the created snapshot group are consistent with each other in the following aspects:

- They are created synchronously at the same point of time.
- All I/Os to the consistency group's volumes that were completed prior to this point of time are recorded in the snapshot's image.
- Neither I/O that was completed after this point of time is recorded in the snapshot's image.

In addition to their regular attributes, all the snapshots in the snapshot group are also associated with the consistency group.

The name of the snapshot group is either automatically generated or provided in the command line.

The delete priority of the snapshots in the snapshot group can also be provided (see *Creating a snapshot*). The delete priority controls which snapshots or snapshot groups are deleted first when the system runs out of space for snapshots.

The `overwrite` option causes the current content of the consistency group to be copied into one of its existing snapshot groups (indicated as parameter's argument). The snapshots of the overwritten snapshot group keep the same SCSI device WWN and same mapping, so hosts maintain a continuous mapping of the snapshots, and a rescan or similar operation is not needed. The overwritten snapshot group must be an existing snapshot group of the respective consistency group.

This command fails if no snapshot space is defined for the storage pool containing the consistency group.

This command fails if one or more of the volumes in the consistency group are slaves in the synchronous mirroring, and the synchronous mirroring is currently inconsistent due to either a re-synchronization or an initialization process.

Mirroring limitations:

- This command fails if the volume is a slave of an asynchronous mirroring coupling.
- This command fails if the volume is a slave of an inconsistent synchronous coupling.

Example:

```
cg_snapshots_create cg=DBgroup snap_group=DBbackupdaily
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the group is mapped to a host or cluster associated with the user. If a Snapshot Group overwrite is used, then the target Snapshot Group must be one created by a server administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **SNAPSHOT_GROUP_BAD_PREFIX**
The snapshot group name has a reserved prefix.
- **SNAPSHOT_GROUP_NAME_EXISTS**
The snapshot group name already exists.
- **CONS_GROUP_EMPTY**
The operation is not allowed on an empty consistency group.
- **CONS_GROUP_MISMATCH**
The snapshot group does not match the consistency group volumes.
- **OVERWRITE_SNAPSHOT_GROUP_DOES_NOT_BELONG_TO_GIVEN_GROUP**
The snapshot group belongs to another consistency group.
- **POOL_SNAPSHOT_LIMIT_REACHED**
There is not enough space to create a snapshot.
- **VOLUME_IS_NOT_CONSISTENT_SLAVE**
The operation not allowed on an inconsistent secondary volume.
- **SNAPSHOT_GROUP_IS_INTERNAL**
Internal snapshots cannot be mapped, modified, or deleted.
- **SNAPSHOT_GROUP_ILLEGAL_PRIORITY**
Illegal snapshot group priority; must be an integer between 1 and 4.
- **SNAPSHOT_HAS_ACTIVE_SYNC_JOB**
The snapshot is currently the target of an active sync job.
Troubleshooting: Please wait for the sync job to complete.
- **OPERATION_DENIED_OBJECT_MANAGED**

This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.

- **CONS_GROUP_TOKEN_MISMATCH**
The token does not match the consistency group.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **MAX_SNAPSHOTS_PER_VOLUME_REACHED**
The maximum allowed number of snapshots is already reached.

Changing a snapshot group deletion priority

Use the **snap_group_change_priority** command to change the deletion priority of a snapshot group.

```
snap_group_change_priority snap_group=SnapshotGroupName delete_priority=del_value
```

Parameters

Name	Type	Description	Mandatory
snap_group	Object name	Name of the snapshot group whose delete_priority is to be changed.	Y
delete_priority	Integer	Priority according to which this snapshot group is deleted.	Y

This command changes the priority of the deletion of an existing snapshot group. Similarly to snapshots, the system determines which of the snapshot groups is deleted first when it runs out of snapshot storage, in accordance with the redirect-on-write mechanism. When the system runs out of space, it deletes the snapshot or snapshot group with the highest deletion priority, and among them the unmapped snapshots or snapshot groups, and the snapshot or snapshot group which was created first.

See Changing a snapshot deletion priority for more details about the valid deletion priority values and their meaning.

Example:

```
snap_group_change_priority snap_group=DBbackup delete_priority=4
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A

User Category	Permission	Condition
Application administrator	Conditionally Allowed	At least one of the volumes in the master Consistency Group is mapped to a host or cluster associated with the user and Snapshot Group was created by a server administrator
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **SNAPSHOT_ILLEGAL_PRIORITY**
Illegal snapshot priority; must be an integer between 1 and 4.
- **SNAPSHOT_GROUP_IS_INTERNAL**
Internal snapshots cannot be mapped, modified, or deleted.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Deleting a snapshot group

Use the **snap_group_delete** command to delete a snapshot group and all its snapshots.

```
snap_group_delete snap_group=SnapshotGroupName
```

Parameters

Name	Type	Description	Mandatory
snap_group	Object name	Name of the snapshot group to be deleted.	Y

This command deletes the snapshot group, as well as all of the snapshots that are contained in the snapshot group. Refer to the documentation on Deleting a snapshot for more information about deleting snapshots.

If one of the members of the snapshot group is mapped to a host, then the entire snapshot group cannot be deleted.

The command is inapplicable for a snapshot group that is still associated with a mirrored consistency group.

Example:

```
snap_group_delete snap_group=DBBackupweekly
```

Output:

Command completed successfully.

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the master Consistency Group is mapped to a host or cluster associated with the user and Snapshot Group was created by a server administrator
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and `xiv_maintenance / xiv_development` may perform this operation on this object.
- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **SNAPSHOT_IS_MAPPED**
A snapshot that is mapped to a host cannot be deleted.
- **VOLUME_IS_BOUND**
The volume is bound to an ALU.
Troubleshooting: Unbind the volume from the ALU.
- **SNAPSHOT_HAS_ACTIVE_SYNC_JOB**
The snapshot is currently the target of an active sync job.
Troubleshooting: Please wait for the sync job to complete.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Disbanding a snapshot group

Use the `snap_group_disband` command to disband a snapshot group into independent snapshots.

```
snap_group_disband snap_group=SnapshotGroupName
```

Parameters

Name	Type	Description	Mandatory
<code>snap_group</code>	Object name	Snapshot group to be disbanded.	Y

This command disbands the snapshot group into independent snapshots. After executing this command, the snapshots can be individually deleted, restored, unlocked, duplicated, and so on. The snapshot group does not exist anymore after this command. The snapshots retain the same names (`snap_group_name.volumename`).

The command is inapplicable for a snapshot group of a mirrored consistency group.

Example:

```
snap_group_disband snap_group=DBbackup_copy
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the master Consistency Group is mapped to a host or cluster associated with the user and Snapshot Group was created by a server administrator
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and `xiv_maintenance / xiv_development` may perform this operation on this object.
- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Duplicating a snapshot group

Use the `snap_group_duplicate` command to duplicate an existing snapshot group.

```
snap_group_duplicate snap_group=SnapshotGroupName [ new_snap_group=NewName ]
```

Parameters

Name	Type	Description	Mandatory	Default
snap_group	Object name	Name of the snapshot group to be duplicated.	Y	N/A
new_snap_group	Object name	Name of the newly generated snapshot group.	N	Autogenerated name.

This command duplicates the specified snapshot group. This is functionally equivalent to duplicating all the snapshots in the snapshot group using `Duplicating a snapshot` and creating a new snapshot group that contains all the generated snapshots.

The name of the new snapshot group is either specified as a parameter or generated automatically.

Refer to `Duplicating a snapshot` for more details about the snapshot duplication operation.

Deletion priority:

- The deletion priority of the duplicated snapshots is 0.

Example:

```
snap_group_duplicate snap_group=DBbackup new_snap_group=DBbackup_copy
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the master Consistency Group is mapped to a host or cluster associated with the user and Snapshot Group was created by a server administrator
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.

- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **SNAPSHOT_GROUP_NAME_EXISTS**
The snapshot group name already exists.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **MAX_SNAPSHOTS_PER_VOLUME_REACHED**
The maximum allowed number of snapshots is already reached.

Formatting a snapshot group

Use the **snap_group_format** command to format a snapshot group.

```
snap_group_format snap_group=SnapshotGroupName
```

Parameters

Name	Type	Description	Mandatory
snap_group	Object name	The snapshot group to be formatted.	Y

This command deletes the content of a snapshot group while maintaining its snapshots mapping to the host. The format operation results with:

- The snapshots of the formatted snapshot group are read-only
- The format operation has no impact on performance
- The snapshots of the formatted snapshot group do not consume space
- Reading from the snapshots of the formatted snapshot group always returns zeroes
- The snapshots can be overridden
- The snapshots can be deleted
- The snapshots deletion priority can be changed

Example:

```
snap_group_format snap_group
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A

User Category	Permission	Condition
Application administrator	Conditionally Allowed	At least one of the volumes in the master Consistency Group is mapped to a host or cluster associated with the user and Snapshot Group was created by a server administrator
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **SNAPSHOT_HAS_ACTIVE_SYNC_JOB**
The snapshot is currently the target of an active sync job.
Troubleshooting: Please wait for the sync job to complete.
- **SNAPSHOT_GROUP_IS_FORMATTED**
The snapshot group is formatted.
- **ELCS_GROUP_CANNOT_BE_FORMATTED**
The snapshot group is an ELCS (external last consistent snapshot), and cannot be formatted.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **SNAPSHOT_GROUP_IS_INTERNAL**
Internal snapshots cannot be mapped, modified, or deleted.
- **VOLUME_IS_NOT_A_SNAPSHOT**
The operation is permitted on snapshots only.
- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Listing snapshot groups

Use the **snap_group_list** command to list all snapshot groups or a specific one.

```
snap_group_list [ snap_group=SnapshotGroupName | cg=cgName ] [ managed=<yes|no|all> ]
```

Parameters

Name	Type	Description	Mandatory	Default
snap_group	Object name	Name of a specific snapshot group to be listed.	N	All snapshot groups.

Name	Type	Description	Mandatory	Default
cg	Object name	List all the snapshot groups of this Consistency Group.	N	All snapshot groups.
managed	Boolean	Defines whether to show unmanaged snap groups (no), managed (yes) or both (all).	N	no.

This command lists snapshot groups. When a snapshot group name is specified, then only that specific snapshot group is listed. When a consistency group name is specified, then the snapshot groups of this consistency group are listed.

This command displays the following snapshot group format field (available in the XML output format):

- **snap_group_format**

Field ID	Field output	Default position
name	Name	1
cg	CG	2
snapshot_time	Snapshot Time	3
locked	Locked	N/A
modified	Modified	N/A
delete_priority	Deletion Priority	4
snap_group_format	Snapshot Group Format	N/A
snap_group_descriptor	Snapshot Group Descriptor	N/A
managed	Managed	N/A

Example:

```
snap_group_list cg=DBvolumes
```

Output:

```
Name          CG          Snapshot Time      Deletion Priority
DBbackup      DBvolumes    2007-01-03 17:46:29 1
DBbackupdaily DBvolumes    2007-01-03 17:49:36 1
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Locking a snapshot group

Use the **snap_group_lock** command to lock a snapshot group by locking all its snapshots.

```
snap_group_lock snap_group=SnapshotGroupName
```

Parameters

Name	Type	Description	Mandatory
snap_group	Object name	Name of the snapshot group to be locked.	Y

This command is functionally equivalent to locking all snapshots individually (through executing Locking a volume on each snapshot). Refer to the documentation of Locking a volume for a description of locking behavior.

Example:

```
snap_group_lock snap_group=DBbackup
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the master Consistency Group is mapped to a host or cluster associated with the user and Snapshot Group was created by a server administrator
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **SNAPSHOT_GROUP_IS_INTERNAL**
Internal snapshots cannot be mapped, modified, or deleted.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Renaming a snapshot group

Use the **snap_group_rename** command to rename a snapshot group.

```
snap_group_rename snap_group=SnapshotGroupName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
snap_group	Object name	Name of the snapshot group to be renamed.	Y
new_name	Object name	New name for the snapshot group.	Y

Example:

```
snap_group_rename snap_group=DBbackup new_name=DBBackupweekly
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the master Consistency Group is mapped to a host or cluster associated with the user and Snapshot Group was created by a server administrator
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **SNAPSHOT_GROUP_NAME_EXISTS**
The snapshot group name already exists.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Restoring a consistency group from a snapshot group

Use the **snap_group_restore** command to restore the master volumes of a consistency group, or of a snapshot group from one of its associated snapshot groups.

```
snap_group_restore snap_group=SnapshotGroupName [ target_snap_group=SnapshotGroupName ]
```

Parameters

Name	Type	Description	Mandatory
snap_group	Object name	Name of the snapshot group from which to restore its master volumes.	Y
target_snap_group	Object name	Snapshot group to be restored.	N

Using this command is equivalent to restoring all the volumes in the consistency group, or all the snapshots in the target snapshot group from their snapshots in the snapshot group.

It is possible to restore a snapshot group from a snapshot group.

Requirements for a successful command completion:

- The consistency group or the target snapshot group must contain the exact same volumes that they contained when the snapshot group was generated.
 - Each volume added to the consistency group after the creation of the snapshot group must be removed from the consistency group before restoration is completed.
- The command is inapplicable for a snapshot group of a mirrored consistency group.

See Restoring a volume from a snapshot for more information about the restoring.

Example:

```
snap_group_restore snap_group=DBbackup_copy
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A

User Category	Permission	Condition
Application administrator	Conditionally Allowed	Both target and source are snapshots groups of the same master Consistency Group, where at least one of the master volumes in this Consistency Group is mapped to a host or cluster associated with the user, and the target Snapshot Group was created by an application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **VOLUME_HAS_DATA_MIGRATION**
Data Migration is defined for this volume.
- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **CONS_GROUP_MISMATCH**
The snapshot group does not match the consistency group volumes.
- **VOLUME_TOO_BIG**
No space to allocate to the volume.
- **VOLUME_HAS_MIRROR**
A mirror is defined for this volume.
- **VOLUME_HAS_HA**
This operation is forbidden on a volume with a HyperSwap relationship.
- **CONS_GROUP_HAS_MIRROR**
Mirroring is defined for this consistency group.
- **VOLUME_LOCKED**
The volume is locked.
- **TARGET_SNAPSHOT_GROUP_BAD_NAME**
The target snapshot group name does not exist.
- **SNAPSHOT_GROUP_MISMATCH**
The snapshot group does not match the target snapshot group.
- **TARGET_SNAPSHOT_GROUP_SAME_AS_SOURCE**
The target snapshot group is identical with the snapshot group.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Unlocking a snapshot group

Use the **snap_group_unlock** command to unlock a snapshot group by unlocking all its snapshots.

```
snap_group_unlock snap_group=SnapshotGroupName
```

Parameters

Name	Type	Description	Mandatory
snap_group	Object name	Name of the snapshot group to be unlocked.	Y

This command unlocks a snapshot group by unlocking all its snapshots. This is equivalent to executing Unlocking a volume on each snapshot. Refer to the documentation of Unlocking a volume for a description of unlocking behavior.

Example:

```
snap_group_unlock snap_group=DBbackup
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the master Consistency Group is mapped to a host or cluster associated with the user and Snapshot Group was created by a server administrator
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **SNAPSHOT_GROUP_IS_INTERNAL**
Internal snapshots cannot be mapped, modified, or deleted.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

Setting a snapshot group descriptor

Use the `snap_group_set_descriptor` command to set a snapshot group descriptor.

```
snap_group_set_descriptor snap_group=SnapshotGroupName descriptor=Descriptor
```

Parameters

Name	Type	Description	Mandatory
<code>snap_group</code>	Object name	Name of the snapshot group.	Y
<code>descriptor</code>	String	A snap group descriptor to be used by external software.	Y

Provides external software with the ability to mark the snapshot as part of a consistency group for various usage scenarios. The command replaces an existing descriptor with a newly specified one.

Example:

```
snap_group_set_descriptor snap_group=DBbackup descriptor=blabla
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	At least one of the volumes in the master Consistency Group is mapped to a host or cluster associated with the user and Snapshot Group was created by a server administrator
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Returning a snapshot group's descriptor

Use the **snap_group_get_descriptor** command to return a snapshot group's descriptor.

```
snap_group_get_descriptor snap_group=SnapshotGroupName
```

Parameters

Name	Type	Description	Mandatory
snap_group	Object name	Name of the snapshot group.	Y

The command provides an external software with the ability to obtain the descriptor attribute value for a snapshot group.

Example:

```
snap_group_get_descriptor snap_group=DBbackup
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Return codes

- **SNAPSHOT_GROUP_BAD_NAME**

The snapshot group name does not exist.

Chapter 7. Storage pool management commands

This section describes the command-line interface (CLI) for storage pool management.

See also:

- Volume management commands
- Volume snapshot management commands
- Consistency group management commands

Moving a consistency group between storage pools

Use the **cg_move** command to move a consistency group, all its volumes, and all their snapshots and snapshot sets from one storage pool to another.

```
cg_move cg=cgName pool=PoolName [ domain_adjust=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
cg	Object name	Name of the consistency group to be moved.	Y	N/A
pool	Object name	Name of the target storage pool.	Y	N/A
domain_adjust	Boolean	Adjusts domain resources. If set to True, the resources of the consistency group source domain and destination domain are adjusted to accommodate the consistency group being moved.	N	no

For successful command completion, there must be sufficient space on the target pools.

Example:

```
cg_move cg=DBGroup pool=DBPool
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **NOT_ENOUGH_SPACE**
No space to allocate for the volume's current usage.
- **NOT_ENOUGH_SNAPSHOT_SPACE**
Snapshot usage will exceed the snapshot limit.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **DOMAIN_MAX_CONS_GROUPS_REACHED**
The domain exceeds the maximum allowed number of consistency groups.
- **MAX_CONS_GROUPS_REACHED**
The maximum allowed number of consistency groups is already reached.
- **DOMAIN_MAX_MIRRORS_REACHED**
The domain exceeds the maximum allowed number of mirrors.
- **MAX_MIRRORS_REACHED**
The maximum number of mirrors is already reached.
- **DOMAIN_USED_TARGET_NOT_IN_DESTINATION**
A target that is used by mirror in the pool is not associated with the target domain.
- **DOMAIN_USED_SCHEDULE_NOT_IN_DESTINATION**
A schedule used by a mirror in the pool is not associated with the target domain.
- **MAPPED_HOSTS_NOT_IN_DESTINATION**
A host that is mapped to a volume in the pool is not associated with the target domain.
- **MAPPED_CLUSTERS_NOT_IN_DESTINATION**
A cluster that is mapped to a volume in the pool is not associated with the target domain.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **CONS_GROUP_REQUIRES_DESTINATION_POOL**

A destination pool must be defined.

- **MAX_DMS_REACHED**

The maximum number of remote volumes (mirror/migration) is already reached.

Troubleshooting: Delete unnecessary Data Migration objects.

- **DOMAIN_MAX_DMS_REACHED**

The domain exceeds the maximum allowed number of data migrations.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **NO_SPACE**

The system does not have enough free space for the requested storage pool size.

- **VOLUME_TOO_BIG**

No space to allocate to the volume.

Changing the pool limitation, performance class, or threshold parameters

Use the **pool_change_config** command to change a storage pool configuration.

```
pool_change_config pool=PoolName [ lock_behavior=<read_only|no_io> ]
[ perf_class=perfClassName ] [ restore_thresholds=<yes|no> | hysteresis=HysteresisValue |
< code=EventCode severity=<INFORMATIONAL|WARNING|MINOR|MAJOR|CRITICAL|NONE>
threshold=<ThresholdValue|NONE> > ]
```

Parameters

Name	Type	Description	Mandatory	Default
pool	Object name	The name of a storage pool.	Y	N/A
lock_behavior	Enumeration	Determines whether and how the pool is locked upon space depletion.	N	read_only
perf_class	Object name	The name of the performance class pool.	N	No performance class
code	N/A	Event code.	N	No code
severity	Enumeration	Severity.	N	No severity
threshold	Integer	The threshold value. None indicates that an event with this severity is not created.	N	No threshold
restore_thresholds	Boolean	Restore thresholds to default values.	N	no
hysteresis	Integer	The hysteresis of the event throwing.	N	"3"

This command changes the pool behavior when the pool runs out of thin provisioning space.

For thin provisioned storage pools, the **lock_behavior** parameter sets how the pool is locked upon space depletion. The pool can be locked for write, or for both read and write.

Example:

```
pool_change_config pool=VOL_BREED_None_0 lock_behavior=read_only
```

This command changes the Performance Class of the pool.

Example:

```
pool_change_config pool=VOL_BREED_None_1 perf_class=valid_perf_class_name
```

This command changes the thresholds parameters of the pool or reset it to default thresholds value.

Example:

```
pool_change_config pool=VOL_BREED_None_1 code=STORAGE_POOL_VOLUME_USAGE_INCREASED severity=INFORMATIONAL threshold=40 pool_change_config pool=VOL_BREED_None_1 code=STORAGE_POOL_SNAPSHOT_USAGE_INCREASED severity=INFORMATIONAL threshold=50 pool_change_config pool=VOL_BREED_None_1 restore_thresholds=yes
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **PERF_CLASS_BAD_NAME**
The performance class does not exist.
- **PERF_CLASS_ASSOCIATED_WITH_HOSTS**
Performance class *Performance Class* is already being used by a host.
- **PERF_CLASS_ASSOCIATED_WITH_VOLUMES**
Performance class *Performance Class* is already being used by a volume.

- **POOL_ALREADY_IN_PERF_CLASS**
Pool *pool name* is already in performance class *Performance Class*.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and *xiv_maintenance* / *xiv_development* may perform this operation on this object.
- **UNRECOGNIZED_EVENT_CODE**
'*String*' is not a recognized return code.
Troubleshooting: Consult the manual for the list of valid return codes.
- **EVENT_DOES_NOT_HAVE_THRESHOLDS**
The event does not have thresholds.
- **EVENT_THRESHOLD_IS_ILLEGAL**
An illegal value for the event threshold.
Troubleshooting: Event threshold values must be monotonic.

Changing pool settings for snapshots

Use the `pool_config_snapshots` command to change storage pool snapshot settings.

```
pool_config_snapshots pool=PoolName [ protected_snapshot_priority=<0|1|2|3|4> ]
```

Parameters

Name	Type	Description	Mandatory	Default
pool	Object name	The name of a storage pool.	Y	N/A
protected_snapshot_priority	Integer	Specifies the snapshot delete priority from 0 to 4 (see full explanation below).	N	unchanged

This command changes the storage pool snapshot limitation policy.

The `create_last_consistent_snapshot` attribute (used for systems which have no space):

- If the value of the attribute is *No*, no last consistent snapshot is generated.
- If the value is changed while synchronizing, the existing snapshot is not deleted.

The `protected_snapshot_priority` parameter:

- Snapshots with a lower delete priority (that is, a higher number) than the specified value might be deleted by the system automatically, in order to free space, before pausing the mirroring, thus protecting snapshots with a priority equal or higher than the value.
- If, for example, the value is set to 3:
 - The system will deactivate mirroring if not enough space can be freed even after the deletion of snapshots with deletion priority of 4.
 - Snapshots with priority level 1, 2 and 3 will not be deleted.
- If the value is set to 4, the system will deactivate mirroring before deleting any of the snapshots.

- If the value is set to 0, the system can delete any snapshot regardless of deletion priority.

Example:

```
pool_config_snapshots pool=DBPool
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

• **ARE_YOU_SURE_YOU_WANT_TO_CHANGE_THE_PROTECTED_LEVEL_OF_SNAPSHOTS**

Are you sure you want to change the protection level of a snapshot in storage pool *Pool*? Note that in case of pool space depletion the system will delete protected snapshots only after deleting unprotected snapshots and internal asynchronous mirror snapshots.

•

• **ARE_YOU_SURE_YOU_WANT_TO_INCREASE_THE_PROTECTED_LEVEL_OF_EXISTING_SNAPSHOTS**

Are you sure you want to increase the protection level of a snapshot in storage pool *Pool*? Note that the pool contains unprotected snapshots that will become protected after issuing this command. In case of pool space depletion the system will delete protected snapshots only after deleting unprotected snapshots and internal asynchronous mirror snapshots.

•

• **ARE_YOU_SURE_YOU_WANT_TO_DECREASE_THE_PROTECTED_LEVEL_OF_EXISTING_SNAPSHOTS**

Are you sure you want to decrease the protection level of a snapshot in Storage Pool *Pool*? Note that the pool contains protected snapshots that will become unprotected after issuing this command. In case of pool space depletion the system will delete internal asynchronous mirror snapshots only after deleting unprotected snapshots.

Return codes

• **POOL_DOES_NOT_EXIST**

The storage pool does not exist.

• **SNAPSHOT_ILLEGAL_PRIORITY**

Illegal snapshot priority; must be an integer between 1 and 4.

• **OPERATION_DENIED_OBJECT_MANAGED**

This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.

Creating storage pools

Use the **pool_create** command to create a storage pool.

```
pool_create pool=PoolName size=GB snapshot_size=GB [ lock_behavior=<read_only|no_io> ]  
[ perf_class=perfClassName ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
pool	Object name	The name of the new storage pool.	Y	N/A
size	Positive integer	Effective capacity of the storage pool (in gigabytes).	Y	N/A
snapshot_size	Positive integer	Effective capacity allocated for snapshots.	Y	N/A
lock_behavior	Enumeration	Determines whether and how the pool is locked upon space depletion.	N	read_only
perf_class	Object name	The name of the performance class pool.	N	No performance class
domain	Object name	Add the pool to the specified domain.	N	none

The name of the storage pool must be unique in the system. Upon creation, the storage pool is empty and does not contain volumes.

Pool size limits

The parameters **size** and **snapshot_size** relate to effective capacity.

The upper limit of the **size** parameter is set to 1 PB.

As for the lower limits of the **size** and **snapshot_size** parameters, the following restrictions apply:

- **size** cannot be less than 2 TB
- **snapshot_size** must be 0, or not less than 400GB.

These limits can be ignored by force (-y). To change the limits, contact the IBM Support.

Example:

```
pool_create pool=DBPool size=1000 snapshot_size=500
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **POOL_SIZE_SMALL**
The pool size is very small. Volumes may not be able to use this space efficiently. Are you sure?
- **POOL_SNAPSHOT_SIZE_SMALL**
The pool snapshot size is very small. Snapshots may be deleted frequently. Are you sure?

Return codes

- **POOL_NAME_EXISTS**
The storage pool name already is assigned to another storage pool.
- **PERF_CLASS_BAD_NAME**
The performance class does not exist.
- **PERF_CLASS_ASSOCIATED_WITH_HOSTS**
Performance class *Performance Class* is already being used by a host.
- **PERF_CLASS_ASSOCIATED_WITH_VOLUMES**
Performance class *Performance Class* is already being used by a volume.
- **MAX_POOLS_REACHED**
The maximum allowed number of storage pools is already reached.
- **NO_SPACE**
The system does not have enough free space for the requested storage pool size.
- **SNAPSHOT_SIZE_BIGGER_THAN_POOL_SIZE**
The snapshot size must be equal to or smaller than the pool size.
- **REACHED_POOL_MAX_SIZE**
Maximum pool size usage is already reached.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **USER_ASSOCIATED_TO_MORE_THAN_ONE_DOMAIN**
The current user is attached to more than one domain, and it is not clear in which domain the pool is to be created.
Troubleshooting: Re-run the command by specifying a domain.
- **NO_FREE_CAPACITY_IN_DOMAIN**
There is not enough free space in the domain.
- **DOMAIN_MAX_POOLS_REACHED**
The maximum allowed number of domain pools is already reached.

Deleting a storage pool

Use the **pool_delete** command to delete a storage pool.

```
pool_delete pool=PoolName
```

Parameters

Name	Type	Description	Mandatory
pool	Object name	The name of the storage pool to be deleted.	Y

This command fails if the storage pool is not empty, that is it still contains volumes.

The capacity of the deleted storage pool is added to the free space.

Example:

```
pool_delete pool=ERPPool
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_POOL**
Are you sure you want to delete storage pool *Pool*?

Return codes

- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **POOL_HAS_CG**
The storage pool comprises consistency groups.
- **POOL_IN_USE**
The storage pool comprises allocated volumes.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and `xiv_maintenance / xiv_development` may perform this operation on this object.

Listing storage pools

Use the **pool_list** command to list all storage pools or the specified one.

```
pool_list [ pool=PoolName ] [ managed=<yes|no|all> ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
pool	Object name	The name of a storage pool.	N	All pools.
managed	Boolean	Determines whether to show unmanaged pools (no), managed (yes), or both (all).	N	No
domain	Object name	The domain name.	N	All Domains

When the **pool** parameter is provided, only the specified storage pool is listed.

Example:

```
pool_list
```

Output:

```
Name      Size (GB)  Empty Space (GB)
default   24292     9225
DBPool    1013      1013
```

Field ID	Field output	Default position
name	Name	1
size	Size (GB)	2
size_MiB	Size (MiB)	N/A
snapshot_size	Snap Size (GB)	3
snapshot_size_MiB	Snap Size (MiB)	N/A
total_volume_size	Total Vols (GB)	4
total_volume_size_MiB	Total Vols (MiB)	N/A
empty_space	Empty (GB)	5
empty_space_MiB	Empty (MiB)	N/A
used_by_volumes	Used by Vols (GB)	6
used_by_volumes_MiB	Used by Vols (MiB)	N/A
used_by_snapshots	Used by Snaps (GB)	7
used_by_snapshots_MiB	Used by Snaps (MiB)	N/A
creator	Creator	N/A
locked	Locked	8
lock_behavior	Lock Behavior	N/A
create_last_consistent_snapshot	Create Last Consistent Snapshot	N/A
protected_snapshot_priority	Protected Snapshots Priority	N/A
managed	Managed	N/A

Field ID	Field output	Default position
perf_class	Perf Class Name	9
domain	Domain	10
sparse	Sparse	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Renaming a storage pool

Use the **pool_rename** command to rename the specified storage pool.

```
pool_rename pool=PoolName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
pool	Object name	The current name of the storage pool.	Y
new_name	Object name	The new name of the storage pool.	Y

The new name of the storage pool must be unique in the system.

This command succeeds even if the new name is identical with the current name.

Example:

```
pool_rename pool=DBPool new_name=ERPPool
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed

User Category	Permission
Technicians	Disallowed

Return codes

- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **POOL_NAME_EXISTS**
The storage pool name already is assigned to another storage pool.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.

Resizing a storage pool

Use the **pool_resize** command to resize a storage pool.

```
pool_resize pool=PoolName [ size=GB ] [ snapshot_size=GB ]
```

Parameters

Name	Type	Description	Mandatory	Default
pool	Object name	The name of the storage pool to be resized.	Y	N/A
size	Positive integer	The new size of the storage pool (in gigabytes)	N	N/A
snapshot_size	Integer	The new limit on snapshot capacity usage of the storage pool.	N	Leave unchanged.

The command can either increase or decrease the storage pool size.

- When increasing a storage pool size, the command succeeds only if the free space holds enough free capacity to allow such an increase.
- When decreasing a storage pool size, the command succeeds only if the storage pool itself holds enough free capacity to allow such a reduction.
- If the new size equals the current size, the command succeeds without changing the storage pool.

Pool size limits

The parameters **size** and **snapshot_size** relate to effective capacity.

The upper limit of the **size** parameter is set to 1 PB.

As for the lower limits of the **size** and **snapshot_size** parameters, the following restrictions apply:

- **size** cannot be less than 2 TB
- **snapshot_size** must be 0, or not less than 400GB.

These limits can be ignored by force (-y). To change the limits, contact the IBM Support.

This command fails if the current storage pool size cannot be decreased, or if the free space cannot be decreased.

Example:

```
pool_resize pool=DBPool size=1300
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **POOL_SIZE_SMALL**
The pool size is very small. Volumes may not be able to use this space efficiently. Are you sure?
- **POOL_SNAPSHOT_SIZE_SMALL**
The pool snapshot size is very small. Snapshots may be deleted frequently. Are you sure?

Return codes

- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **POOL_SIZE_TOO_SMALL**
Storage pool usage exceeds the requested size.
- **REACHED_POOL_MAX_SIZE**
Maximum pool size usage is already reached.
- **NO_SPACE**
The system does not have enough free space for the requested storage pool size.
- **POOL_SNAPSHOT_SIZE_TOO_SMALL**
Storage pool snapshot usage exceeds the requested snapshot size.
- **SNAPSHOT_SIZE_BIGGER_THAN_POOL_SIZE**
The snapshot size must be equal to or smaller than the pool size.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.

- **NO_FREE_CAPACITY_IN_DOMAIN**

There is not enough free space in the domain.

Moving a volume between storage pools

Use the **vol_move** command to move a volume and all its snapshot from one storage pool to another.

```
vol_move vol=VolName pool=PoolName [ domain_adjust=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Name of the volume to move.	Y	N/A
pool	Object name	Name of the storage pool to which to move.	Y	N/A
domain_adjust	Boolean	Adjust domain resources. If set to <i>true</i> , the resources of the volume source domain and destination domain are adjusted to accommodate the volume being moved.	N	no

When moving a master volume from one storage pool to another, all of its snapshots are moved together with it to the destination storage pool.

This command fails when trying to move a snapshot of a volume on its own. This command can fail due to the lack of either soft or hard space.

The command succeeds only if the destination storage pool has enough free storage capacity to accommodate the volume and its snapshots. The exact amount of storage capacity allocated from the destination storage pool is released at the source storage pool.

A volume which belongs to a consistency group cannot be moved without the entire consistency group. You may use [Moving a consistency group between storage pools](#) to move the consistency group itself from one storage pool to another.

A volume that is asynchronously mirrored cannot be moved into a thin provisioning pool.

Example:

```
vol_move vol=DBLog pool=DBPool
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **NOT_ENOUGH_SPACE**
No space to allocate for the volume's current usage.
- **NO_SPACE**
The system does not have enough free space for the requested storage pool size.
- **VOLUME_TOO_BIG**
No space to allocate to the volume.
- **NO_FREE_CAPACITY_IN_DOMAIN**
There is not enough free space in the domain.
- **VOLUME_IS_SNAPSHOT**
The operation is not permitted on snapshots.
- **VOLUME_HAS_OLVM**
An IBM Hyper-Scale Mobility relationship is defined for this volume.
- **VOLUME_BELONGS_TO_CG**
The volume belongs to a consistency group.
- **NOT_ENOUGH_SNAPSHOT_SPACE**
Snapshot usage will exceed the snapshot limit.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **CANNOT_MOVE_TO_THICK_POOL_VOLUME_HAS_GOLDEN_SNAPSHOTS**
The volume has golden snapshots and therefore cannot be moved to a thick pool.
- **MAPPED_HOSTS_NOT_IN_DESTINATION**
A host that is mapped to a volume in the pool is not associated with the target domain.
- **MAPPED_CLUSTERS_NOT_IN_DESTINATION**
A cluster that is mapped to a volume in the pool is not associated with the target domain.
- **DOMAIN_USED_SCHEDULE_NOT_IN_DESTINATION**
A schedule used by a mirror in the pool is not associated with the target domain.
- **DOMAIN_USED_TARGET_NOT_IN_DESTINATION**

A target that is used by mirror in the pool is not associated with the target domain.

- **DOMAIN_MAX_MIRRORS_REACHED**
The domain exceeds the maximum allowed number of mirrors.
- **DOMAIN_MAX_DMS_REACHED**
The domain exceeds the maximum allowed number of data migrations.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **MAX_MIRRORS_REACHED**
The maximum number of mirrors is already reached.
- **MAX_DMS_REACHED**
The maximum number of remote volumes (mirror/migration) is already reached.
Troubleshooting: Delete unnecessary Data Migration objects.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Chapter 8. System management commands

This section describes the command-line interface (CLI) for system management.

Displaying the values of configuration parameters

Use the **config_get** command to show the values of configuration parameters.

```
config_get [ name=Name ]
```

Parameters

Name	Type	Description	Mandatory	Default
name	String	Name of parameter to print.	N	All parameters.

Field ID	Field output	Default position
name	Name	1
value	Value	2

This command shows the name and value of the specified configuration parameter or of all of them, if no parameter is provided.

The values of the following parameters can be shown:

- **dns_primary** - IP address of the master DNS server.
- **dns_secondary** - IP address of the slave DNS server.
- **email_reply_to_address** - Reply-to address to be used when sending emails. This is useful for troubleshooting errors in email addresses.
- **email_sender_address** - Email address used as the sender's address when sending email messages.
- **email_subject_format** - Controls the formatting of the email subject line. To insert the event's data, use the following tags: **{severity}**, **{description}**, or **{system_name}**. System default is "**{severity}: {description}**".
- **iscsi_name** - iSCSI initiator name. Used when configuring a non-XIV system for data migration over iSCSI.
- **machine_model**
- **machine_serial_number**
- **machine_type**
- **ntp_server** - IP address or DNS name of the NTP server.
- **snmp_community** - Community used for SNMP queries of the system.
- **snmp_location** - SNMP location as shown in the SNMP MIB. (.1.3.6.1.2.1.1.6.0).
- **snmp_contact** - SNMP contact as shown in the SNMP MIB. (.1.3.6.1.2.1.1.4.0).
- **snmp_trap_community** - Community used for SNMP traps sent by the system.
- **support_center_port_type** -
- **system_id** - Unique system identifier (equivalent to a serial number).
- **system_name**

Example:

```
config_get
```

Output:

Name	Value
email_sender_address	support@ibm.com
email_reply_to_address	storage@ibm.com
dns_primary	10.0.0.10
dns_secondary	
iscsi_name	iqn.2005-10.com.xivstorage:010140
system_name	IBM Storage System

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **CONF_SERVER_UNREACHABLE**
The configuration server is unreachable.
- **UNRECOGNIZED_CONFIG_PARAMETER**
Unrecognized configuration parameter: '*name*'.
Troubleshooting: Use a valid configuration parameter in the command syntax.
For the list of valid configuration parameters, see the CLI Reference Guide.

Setting configuration parameters

Use the **config_set** command to set configuration parameters.

```
config_set name=Name value=ParamValue
```

Parameters

Name	Type	Description	Mandatory
name	String	Name of the parameter to set.	Y
value	String	Value of the parameter.	Y

This command sets the values of configuration parameters.

The values of the following parameters can be set:

- **dns_master** - IP address of the master DNS server.
- **dns_slave** - IP address of the slave DNS server.

- **email_sender_address** - Email address used as the sender's address when sending email messages. Once set, this parameter cannot be set to null.
- **email_reply_to_address** - Reply-to address to be used when sending emails. This is useful for troubleshooting errors in email addresses.
- **system_name** - Name used as the sender's name when sending email messages.
- **defaultuser** - Default user to be used if no user is specified for the CLI. If null, a user must be specified.
- **snmp_sysname** - SNMP system name as shown in the SNMP MIB. (.1.3.6.1.2.1.1.5.0)
- **snmp_location** - SNMP location as shown in the SNMP MIB. (.1.3.6.1.2.1.1.6.0)
- **snmp_contact** - SNMP contact as shown in the SNMP MIB. (.1.3.6.1.2.1.1.4.0)
- **email_subject_format** - Controls the formatting of the email subject line. To insert the event's data, use the following tags: **{severity}**, **{description}**, or **{system_name}**. System default is "**{severity}: {description}**".
- **ntp_server** - IP address or DNS name of the NTP server.
- **snmp_community** - Community used for SNMP queries of the system.
- **snmp_trap_community** - Community used for SNMP traps sent by the system.

Example:

```
config_set name=dns_secondary value=10.0.0.119
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

• **UNRECOGNIZED_CONFIG_PARAMETER**

Unrecognized configuration parameter: *'name'*.

Troubleshooting: Use a valid configuration parameter in the command syntax. For the list of valid configuration parameters, see the CLI Reference Guide.

• **READ_ONLY_CONFIG_PARAMETER**

Configuration parameter: *'name'* is read-only.

Troubleshooting: Read-only parameters are not available for modifying.

• **IPV4_NOT_CONFIGURED**

The IPv4 address is not configured on the management interface.

Troubleshooting: Define an IPv4 address for management before disabling IPv6.

- **RULE_WITH_SNMP_DEST_EXISTS**

Cannot set snmp_type to None. There is a rule that contains an SNMP destination.

Testing the DNS

Use the **dns_test** command to test the DNS (Domain Naming Service).

```
dns_test name=Name [ type=<A|AAAA> ]
```

Parameters

Name	Description	Mandatory	Default
name	Name of the host to be resolved.	Y	N/A
type	Type of query.	N	According to the DNS server type

This command attempts to translate the DNS name into an IP address. Translation is attempted through each of the defined DNS servers.

This command fails if no DNS servers are defined. A failure of the translation from a name to an IP address is not considered a failure of the command.

The result of each defined DNS server is displayed.

Field ID	Field output	Default position
name	Name	1
primary_ip	IP (Primary DNS)	2
secondary_ip	IP (Secondary DNS)	3

Example:

```
dns_test name=hermes.xiv
```

Output:

```
Name          IP (Primary DNS)  IP (Secondary DNS)
-----
hermes.xiv    212.143.102.243  Not Found
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **DNS_SERVER_NOT_DEFINED**
No DNS servers are defined.

Displaying help

Use the **help** command to display system help.

```
help [ category=Category | search=SearchString | command=CommandName ]
```

Parameters

Name	Type	Description	Mandatory
category	String	Category name.	N
search	String	Search string.	N
command	String	Command name.	N

This command displays the help as follows:

- No parameters - Lists all the commands with their short descriptions, grouped by categories.
- Category - Lists all the commands in the category, with their short descriptions.
- Search - Lists the short descriptions of all the commands in which the search string appears in their name or short description.
- Command with short output (default for command) - Displays the command name and short description.
- Command with full output (default when used in XIV-internal mode) - Displays the command name, short description, syntax, list of parameters and their description, types and default values. If output is table, displays all possible table columns.

Example:

```
help category=volume
```

Output:

```
Category Name      Description
volume  vol_copy  Copies a source volume onto a target volume.
volume  vol_create Creates a new volume.
volume  vol_delete Deletes a volume
volume  vol_format Formats a volume.
volume  vol_list  Lists all volumes, or a specific one.
volume  vol_lock  Locks a volume, so that it is read-only.
volume  vol_rename Renames a volume
volume  vol_resize Resizes a volume
volume  vol_unlock Unlocks a volume, so that it is no longer read-only,
and can be written to.
```

Field ID	Field output	Default position
category	Category	1
name	Name	2
access_control	Access Control	N/A
syntax	Syntax	N/A
fields	Fields	N/A
description	Description	3
example	Example	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Displaying the current maintenance urgency

Use the **maintenance_urgency_list** command to display the current maintenance urgency of the system.

```
maintenance_urgency_list
```

Example:

```
maintenance_urgency_list
```

Output:

```
maintenance_urgency = "NONE"
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Shutting down the system

Use the **shutdown** command to shut down the system.

```
shutdown [ emergency=<yes|no> ] [ ignore_ha=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
emergency	Boolean	Instructs the system to shut down within a timeout even if some of the disks could not be saved, much like in an emergency shutdown performed when the system loses power.	N	no
ignore_ha	Boolean	Ignore activated HA objects.	N	no

The system stops serving hosts, de-stages all information to disks and then turns itself off. If the **emergency** parameter is defined, the system shuts down within the timeout period.

NOTE: USING THIS OPTION MAY CAUSE DATA LOSS.

Example:

```
shutdown -y
```

Output:

```
Command executed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_SHUT_DOWN**

Are you sure you want to shut down the machine and all its components?

Return codes

- **COMMAND_IS_NOT_VALID_IN_CURRENT_SYSTEM_STATE**
The requested command cannot be invoked in the current system state.
- **FIRMWARE_UPGRADE_IN_PROGRESS**
Firmware upgrade in progress.
Troubleshooting: Contact IBM Support.
- **FLASH_CCL_IN_PROGRESS**
The requested command cannot be invoked while Flash Enclosure CCL is in progress.
Troubleshooting: Wait for Flash CCL to complete.
- **SYSTEM_HAS_ACTIVE_MASTER_HA_RELATIONS**
The system owns volume(s) defined as primary in a HyperSwap relationship. If you continue with shutdown without first handling those relationships, the host may lose access to those volumes.
Troubleshooting: It is recommended to run `switch_roles` before continuing. You may explicitly add `ignore_ha=yes` to force the operation.

Listing the operational state

Use the `state_list` command to display the current operational state of the system.

```
state_list
```

Field ID	Field output	Default position
<code>category</code>	Category	1
<code>value</code>	Value	2

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Displaying system usage and data reduction statistics

Use the `system_usage_get` command to retrieve system-wide usage and data reduction related statistics.

```
system_usage_get
```

The command provides various information on system usage, and on data reduction, including:

- the sum of all user volume and snapshot sizes, excluding internal volumes (statistics and metadata)

- the sum of all logical block address (LBA) ranges written to the currently existing volumes and snapshots
- savings due to thin provisioning
- savings due to data reduction
- deduplication and compression factors.

The data retrieved by the command may vary due to currently running background processes.

Example:

```
system_usage_get
```

Output:

```
Volumes and Snapshots (GB)  Thin Provisioning Savings (%)  Total Written (GB)
-----
3100                        90                             340

Data Reduction Savings (%)  Total Stored (GB)  Deduplication Factor  Compression Factor
-----
87                          45                 1.37                  5.63
```

Field ID	Field output	Default position
total_volumes_and_snapshots	Volumes and Snapshots (GB)	1
thin_provisioning_savings	Thin Provisioning Savings (%)	2
total_written	Total Written (GB)	3
total_written_pending_deletion	Total Written Pending Deletion (GB)	4
data_reduction_savings	Data Reduction Savings (%)	5
total_stored	Total Stored (GB)	6
deduplication_factor	Deduplication Factor	7
compression_factor	Compression Factor	8
data_only_deduplication_factor	Data Only Deduplication Factor	N/A
data_only_compression_factor	Data Only Compression Factor	N/A
data_only_reduction_factor	Data Only Reduction Factor	N/A
deduplication_factor_full_accuracy	Deduplication Factor Full Accuracy	N/A
compression_factor_full_accuracy	Compression Factor Full Accuracy	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Displaying information about effective and physical capacity

Use the `system_capacity_list` command to display information about the system's effective and physical capacity.

```
system_capacity_list
```

The command output displays two lines of information: one for the effective capacity, and one for the physical capacity.

Effective capacity

Allocated effective capacity represents the sum of all virtual capacity provisioned to domains and to the pools in the default domain before any data reduction is applied.

There is a limit to the amount of effective capacity supported by each system. This limit is determined by the system configuration, namely, by the amount of grid controller resources, and it significantly exceeds the system physical capacity.

The command output for effective capacity includes the following field:

- **Allocated (GB)** — The sum of all effective capacity provisioned to domains, and to pools in the default domain. The value is represented in GB.

The rest of the output fields for effective capacity - **Total**, **Allocated (%)**, **Free (GB)**, and **Free (%)** - are currently not available (N/A).

Physical capacity

Physical capacity represents the amount of data that can be stored by the system after data reduction is applied. It is derived from the amount of flash storage media available in the system after taking into account the RAID protection scheme.

The command output for physical capacity includes the following fields:

- **Total** — The system's total physical capacity in GB.
- **Allocated (GB)** — The consumed physical capacity, represented in GB.
- **Allocated (%)** — The allocated capacity, represented as percentage of the total capacity.
- **Free (GB)** — The difference between the total and allocated capacity in GB.
- **Free (%)** — The free capacity, represented as percentage of the total capacity.

Example:

```
system_capacity_list
```

Output:

Type	Total (GB)	Allocated (GB)	Allocated (%)	Free (GB)	Free (%)
Effective	N/A	50640	N/A	N/A	N/A
Physical	16530	1400	8	15130	92

Field ID	Field output	Default position
type	Type	1
total	Total (GB)	2
allocated	Allocated (GB)	3
allocated_percent	Allocated (%)	4
free	Free (GB)	5
free_percent	Free (%)	6
total_MiB	Total (MiB)	N/A
allocated_MiB	Allocated (MiB)	N/A
free_MiB	Free (MiB)	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Displaying information about effective capacity

Use the **system_effective_capacity_get** command to display additional information about the system's effective capacity.

```
system_effective_capacity_get
```

This command displays information about the system's effective capacity limit. This value depends on the current system configuration.

Example:

```
system_effective_capacity_get
```

Output:

```
Limit (GB)
-----
1400071
```

Field ID	Field output	Default position
effective_capacity_limit	Limit (GB)	1
effective_capacity	Effective (GB)	N/A
effective_capacity_factor	Effective Factor	N/A
effective_capacity_max_limit	Max. Limit (GB)	N/A
effective_capacity_default_limit	Default Limit (GB)	N/A
effective_capacity_min_limit	Min. Limit (GB)	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Displaying system capacity thresholds

Use the **system_capacity_threshold_list** command to list the current system capacity thresholds.

```
system_capacity_threshold_list
```

A user can define up to 8 progressive thresholds that will trigger events about physical capacity consumption, as per the **system_capacity_list** command (see “Displaying information about effective and physical capacity” on page 156). An event of the configured severity is emitted once if the configured threshold value is exceeded, and an informational event is emitted when capacity recedes below the threshold minus the hysteresis.

For example, if a threshold is set at 85% and the hysteresis is set at 3%:

- a **SYSTEM_CAPACITY_USAGE_INCREASED** event is emitted when system capacity used in percent (per **system_capacity_list**) moves from a value below 85% to a value of 85% or more
- the matching **SYSTEM_CAPACITY_USAGE_DECREASED** event is emitted when system capacity used moves from a value greater than 82% down to a value of 82% or less.

The output includes the following fields:

- The ordinal of the threshold (between 1 and 8)
- Threshold value in percent (between 10 and 99)
- Severity of the event
- Hysteresis value (between 1 and 10, same for all thresholds)
- Indication whether the threshold is enabled or not

Example:

```
system_capacity_threshold_list
```

Output:

Ordinal	Threshold (%)	Severity	Hysteresis (%)	Enabled
1	70	Warning	3	yes
2	75	Minor	3	yes
3	80	Minor	3	yes
4	85	Major	3	yes
5	90	Major	3	yes
6	95	Critical	3	yes
7	97	Critical	3	yes
8	99	Critical	3	yes

Field ID	Field output	Default position
ordinal	Ordinal	1
threshold	Threshold (%)	2
severity	Severity	3
hysteresis	Hysteresis (%)	4
enabled	Enabled	5

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Changing a system capacity threshold

Use the **system_capacity_threshold_change** command to change a system capacity threshold.

```
system_capacity_threshold_change hysteresis=HysteresisValue |
< ordinal=Ordinal [ enabled=<yes|no> ] [ threshold=ThresholdValue ]
[ severity=<WARNING|MINOR|MAJOR|CRITICAL> ] >
```

The user can define progressive thresholds that will trigger events about physical capacity consumption. An event of the configured severity is issued once if the configured threshold value is exceeded, and an informational all-clear event is issued, when capacity drops below the threshold minus the hysteresis.

Parameters:

Name	Type	Description	Mandatory	Default
hysteresis	Integer	The hysteresis value in per cent (same for all thresholds).	N	N/A
ordinal	Integer	The ordinal of the threshold.	N	N/A
enabled	Boolean	Enable or disable system capacity threshold.	N	yes

Name	Type	Description	Mandatory	Default
threshold	Integer	The new threshold value in percent, strictly monotonically increasing across thresholds.	N	No threshold
severity	N/A	The new severity value, strictly monotonically increasing across thresholds.	N	No severity

Example:

```
system_capacity_threshold_change hysteresis=3
```

This command changes the hysteresis of the system capacity.

Example:

```
system_capacity_threshold_change ordinal=1 enabled=yes threshold=15 severity=WARNING
```

This command enables ordinal 1 and changes the threshold and severity parameters of the system capacity.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **SYSTEM_CAPACITY_DUPLICATE_THRESHOLD**
New threshold value is duplicating another threshold.
- **SYSTEM_CAPACITY_THRESHOLD_NOT_MONOTONIC**
Threshold value or severity must be monotonic.

Resuming the system's normal operation

Use the **system_resume_normal_operation** command to move a system back to read-write state after it ran out of physical space.

```
system_resume_normal_operation
```

Example:

```
system_resume_normal_operation
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_RESUME_NORMAL_OPERATION**
The system is still very close to full. Are you sure you want to resume normal operation?

Return codes

- **SYSTEM_IS_STILL_OUT_OF_PHYSICAL_SPACE**
The system is still out of physical space, normal operation cannot be resumed.
- **SYSTEM_ALREADY_OPERATING_NORMALLY**
The system is already operating normally.

Displaying the current time

Use the **time_list** command to display the current system time.

```
time_list
```

This command shows the current time, date and time zone.

Field ID	Field output	Default position
time	Time	1
date	Date	2
timezone	Time Zone	3
dst	Daylight Saving Time	4

Example:

```
time_list
```

Output:

Time	Date	Time Zone	Daylight Saving Time
10:09:47	2008-02-19	Asia/Jerusalem	no

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Setting the system's time

Use the **time_set** command to set the system's time in YYYY-MM-DD.HH:MM:SS format.

```
time_set time=Timestamp
```

Parameters

Name	Description	Mandatory
time	New current time.	Y

Example:

```
time_set time=2016-03-04.03:02:01
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **SYSTEM_TIME_NOT_CHANGED**
The system time has not changed.
Troubleshooting: Please try again.

- **FLASH_ENCLOSURE_TIME_UPDATE_FAILED**
Failed to update the flash enclosure time.
Troubleshooting: Please try again.
- **BAD_TIMESTAMP**
The timestamp cannot be deciphered.

Listing optional time zones

Use the **timezone_list** command to list all optional time zones.

```
timezone_list
```

Standard POSIX time zones are used. <http://www.timeanddate.com/worldclock/> provides a full description of all time zones.

Example:

```
timezone_list
```

Output:

```
Timezone
-----
Africa/Abidjan
Africa/Accra
...
WET
Zulu
```

Field ID	Field output	Default position
name	Timezone	1

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Setting the time zone

Use the **timezone_set** command to set the time zone of the system.

```
timezone_set timezone=TimeZone
```

Parameters

Name	Type	Description	Mandatory
timezone	String	New time zone of the system.	Y

See Listing optional time zones for a complete list of optional time zones.

Standard POSIX time zones are used. <http://www.timeanddate.com/worldclock/> provides a full description of all time zones.

Example:

```
timezone_set timezone=Etc/GMT+1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **BAD_TIMEZONE_NAME**

Timezone is not recognized by the system.

Printing the current system version

Use the **version_get** command to print the current version of the system.

```
version_get
```

Field ID	Field output	Default position
system_version	Version	1

Example:

```
version_get
```

Output:

```
Version  
10.2
```


Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Displaying the values of VPD parameters

Use the `vpd_config_get` command to display the values of VPD parameters.

```
vpd_config_get [ name=Name ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>name</code>	String	Name of the parameter to print.	N	All parameters.

Field ID	Field output	Default position
<code>name</code>	Name	1
<code>value</code>	Value	2

See Setting VPD parameters for a full list of available settings.

Example:

```
vpd_config_get name=site.city
```

Output:

```
Name      Value
-----
site.city Gotham
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **CONF_SERVER_UNREACHABLE**

The configuration server is unreachable.

- **UNRECOGNIZED_CONFIG_PARAMETER**

Unrecognized configuration parameter: 'name'.

Troubleshooting: Use a valid configuration parameter in the command syntax. For the list of valid configuration parameters, see the CLI Reference Guide.

Setting VPD parameters

Use the **vpd_config_set** command to set the values of VPD (Vital Product Data) parameters.

```
vpd_config_set name=Name value=ParamValue
```

Parameters

Name	Type	Description	Mandatory
name	String	Name of the parameter to set.	Y
value	String	Value of the parameter.	Y

This command sets the following values of VPD parameters, where only the name is mandatory.:

- customer.name
- customer.primary_contact.calling_hours
- customer.primary_contact.email
- customer.primary_contact.mobile_phone
- customer.primary_contact.name
- customer.primary_contact.office_phone
- customer.primary_contact.time_zone
- customer.secondary_contact.calling_hours
- customer.secondary_contact.email
- customer.secondary_contact.mobile_phone
- customer.secondary_contact.name
- customer.secondary_contact.office_phone
- customer.secondary_contact.time_zone
- hardware_info.hw_cable_bundle
- hardware_info.hw_door
- hardware_info.hw_patch_panel
- hardware_info.hw_patch_panel_label
- hardware_info.hw_power_cable_config
- hardware_info.hw_rack_type
- hardware_info.hw_rps
- interface_config.model
- machine_model
- machine_type

- main_ibm_contact.calling_hours
- main_ibm_contact.email
- main_ibm_contact.mobile_phone
- main_ibm_contact.name
- main_ibm_contact.office_phone
- main_ibm_contact.time_zone
- non_mutable_vpd_info.original_flashed_version
- non_mutable_vpd_info.original_flashing_date
- disk_size
- remote_support.customer_contact.calling_hours
- remote_support.customer_contact.email
- remote_support.customer_contact.mobile_phone
- remote_support.customer_contact.name
- remote_support.customer_contact.office_phone
- remote_support.customer_contact.time_zone
- remote_support.modem_phone_number
- remote_support.primary_ibm_ip
- remote_support.secondary_ibm_ip
- remote_support.special_instructions
- remote_support.vpn_ip_1
- remote_support.vpn_ip_2
- site.building_location
- site.city site.country
- site.name
- site.postal_code
- site.state
- site.street_address
- system_info.sys_ec_level
- system_info.sys_hw_level
- system_info.PID

Example:

```
vpd_config_set name= value=
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed

User Category	Permission
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **READ_ONLY_CONFIG_PARAMETER**

Configuration parameter: '*name*' is read-only.

Troubleshooting: Read-only parameters are not available for modifying.

- **UNRECOGNIZED_CONFIG_PARAMETER**

Unrecognized configuration parameter: '*name*'.

Troubleshooting: Use a valid configuration parameter in the command syntax. For the list of valid configuration parameters, see the CLI Reference Guide.

Displaying the system's MIB file

Use the **mib_get** command to display the system's MIB file.

```
mib_get
```

Field ID	Default position
line	1

In configurations that use IBM Netcool® Network Management for managing equipment, an enterprise (private) SNMP MIB from UC Davis is required. This MIB file can be downloaded from: <http://www.net-snmp.org/docs/mibs/UCD-SNMP-MIB.txt>.

After obtaining the a9000.mib file from the device with the **mib_get** command, note the following **IMPORTS** declaration line, which requires the parent **UCD-SNMP-MIB**:

```
IMPORTS
    MODULE-IDENTITY, OBJECT-TYPE,
        NOTIFICATION-TYPE,
            Gauge32, Integer32 FROM SNMPv2-SMI
            ucdavis FROM UCD-SNMP-MIB
    OBJECT-GROUP, NOTIFICATION-GROUP,
        MODULE-COMPLIANCE FROM SNMPv2-CONF
    sysName FROM SNMPv2-MIB

    TEXTUAL-CONVENTION, DisplayString
        FROM SNMPv2-TC;
```

When both MIB files (a9000.mib and UCD-SNMP-MIB) are imported into MIB Manager, the full OID path is properly defined by the combination of the declarations in each.

Example:

```
mib_get
```

Output:

```

-----
-----
-- -*- SNMP -*- mode for Emacs
XIV-MIB DEFINITIONS ::= BEGIN

IMPORTS
    MODULE-IDENTITY, OBJECT-TYPE,
    NOTIFICATION-TYPE,
    Gauge32, Integer32 FROM SNMPv2-SMI
    ucdavis FROM UCD-SNMP-MIB
    OBJECT-GROUP, NOTIFICATION-GROUP,
    MODULE-COMPLIANCE FROM SNMPv2-CONF

    TEXTUAL-CONVENTION, DisplayString
    FROM SNMPv2-TC;
...

```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **CANNOT_READ_FROM_FILE**
Cannot read from file '*Filename*'.
Troubleshooting: Contact IBM Support.

Retrieving the electronic license acceptance status

Use the **elicense_status_get** command to retrieve the electronic license acceptance status.

```
elicense_status_get
```

Example:

```
elicense_status_get
```

Output:

```
Status
-----
Accepted
```

Field ID	Field output	Default position
status	Status	1

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Retrieving a fragment of the electronic license file

Use the `elicense_blob_get` command to retrieve a fragment of the electronic license file.

```
elicense_blob_get beg=BeginIndex size=Number
```

Parameters

Name	Type	Description	Mandatory
<code>beg</code>	Positive integer	Beginning of the fragment in bytes.	Y
<code>size</code>	Positive integer	Length of the fragment in bytes. The maximum length allowed is 1000000.	Y

Example:

```
elicense_blob_get beg=0 size=20
```

Output:

```
<file_size value="1300473"/>  
<fragment value="425a6839314159265359ba94ca1106dd587f84fe"/>  
<fragment_size value="20"/>
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **CANNOT_READ_FROM_FILE**
Cannot read from file '*Filename*'.

Troubleshooting: Contact IBM Support.

Accepting the electronic license agreement

Use the **elicense_accept** command to accept the electronic license agreement.

```
elicense_accept version=Version [ approver_name=UserName ]
```

Parameters

Name	Type	Description	Mandatory	Default
version	String	The electronic license version. For the instructions on retrieving the correct electronic license version, see below.	Y	N/A
approver_name	String	The approver's name.	N	none

To retrieve the correct electronic license version, proceed as follows:

1. Run the command **elicense_status_get -x**.
2. In the command output, find the string **version value** and copy its value.

Example:

```
elicense_accept version=xiv_license_v11.6.2_with_ela approver_name=johndoe
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **ELICENSE_INCOMPATIBLE_VERSION**

The accepted version of the electronic license does not match the current version.

Troubleshooting: Please retrieve the current electronic license version and accept it.

- **ELICENSE_ALREADY_ACCEPTED**

The electronic license is already accepted

Troubleshooting: You do not need to accept the electronic license.

- **ELICENSE_DISABLED**

The electronic license check is disabled.

Troubleshooting: You do not need to accept the electronic license.

Enabling command auditing

Use the **audit_enable** command to enable CLI command auditing

```
audit_enable
```

This command is used by a security administrator to enable the auditing of user-entered CLI commands on an external auditing server. For this command to complete successfully, the current auditing state must be **DISABLED** (that is, the **audit_show** command returns a *no*), and at least one audit server must be configured successfully by the **audit_config_set** command.

Example:

```
xcli -u -c XIV1 audit_enable
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **AUDIT_ALREADY_ENABLED**
Command auditing is already enabled.
- **AUDIT_NO_AUDIT_SERVER_DEFINED**
No audit logging server is configured.

Disabling command auditing

Use the **audit_disable** command to disable CLI command auditing.

```
audit_disable
```

This command disables command auditing, provided that auditing is currently enabled, that is the **audit_show** command returns a *yes*.

Example:

```
audit_disable -y
```

Output:


```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **AUDIT_NOT_ENABLED**
Command auditing is not enabled.

Displaying the command audit state

Use the **audit_show** command to show the current state of CLI command auditing.

```
audit_show
```

Field ID	Field output	Default position
audit_enabled	Auditing Enabled	1

Example:

```
audit_show
```

Output:

```
Auditing Enabled  
-----  
yes
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Configuring audit servers

Use the **audit_config_set** command to configure CLI command auditing.

```
audit_config_set primary_server=Address [ primary_port=port ] [ secondary_server=Address ]  
[ secondary_port=port ] [ protocol=protocol ]
```

Parameters

Name	Type	Description	Mandatory	Default
primary_server	N/A	IP address of the primary auditing server.	Y	N/A
primary_port	Positive integer	IP port number of the primary auditing server.	N	Default for protocol
secondary_server	N/A	IP address of the secondary auditing server.	N	empty
secondary_port	Positive integer	IP port number of the secondary auditing server.	N	Default for protocol
protocol	Enumeration	Transport protocol. Only RFC-5424 Syslog over UDP is currently supported.	N	syslog

This command configures the primary and, optionally, the secondary auditing server for CLI command logging.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Checking the command audit state

Use the **audit_config_get** command to show the current configuration of CLI command auditing.

```
audit_config_get
```

Field ID	Field output	Default position
primary_server	Primary Server	1
primary_port	Primary Port	2
secondary_server	Secondary Server	3
secondary_port	Secondary Port	4

Field ID	Field output	Default position
audit_protocol	Protocol	5

Example:

```
audit_config_get
```

Output:

```

Primary Server  Primary Port  Secondary Server  Secondary Port  Protocol
-----
198.51.100.42  514           0                0                syslog

```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Retrieving the list of Flash VDisks

Use the **flash_vdisk_list** command to retrieve the list of Flash VDisks.

```
flash_vdisk_list
```

Example:

```
flash_vdisk_list
```

Output:

```

Name           Enclosure Id      Status  ID  Lun
-----
xiv_vdisk_2_0  1:Flash_Enclosure:2  OK     0   0000000000000000

Capacity(bytes)  Block Size
-----
5717176090624   512

```

Field ID	Field output	Default position
name	Name	1
enclosure_id	Enclosure Id	2
status	Raid Status	3
vdisk_id	ID	4
lun	Lun	5
capacity_in_gb	Capacity(GB)	6
block_size	Block Size(bytes)	7

Field ID	Field output	Default position
capacity_in_gib	Capacity(GiB)	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Enabling CIM service

Use the **cim_enable** command to enable the CIM service.

```
cim_enable
```

This command enables the CIM service and the associated SLP service. In order for this command to complete successfully, the current CIM service state must be DISABLED (that is, the **cim_show** command returns *no*).

Example:

```
cim_enable
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CIM_ALREADY_ENABLED**
The CIM port is already enabled.

Disabling the CIM service

Use the **cim_disable** command to disable the CIM service.

```
cim_disable
```

This command disables the CIM service and the associated SLP service. In order for this command to complete successfully, the current CIM service state must be **ENABLED** (that is, the **cim_show** command returns *yes*).

Example:

```
cim_disable
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CIM_NOT_ENABLED**
The CIM port is not enabled.

Displaying the CIM service state

Use the **cim_show** command to display the current state of CIM service.

```
cim_show
```

Field ID	Field output	Default position
cim_enabled	CIM Enabled	1

Example:

```
cim_show
```

Output:

```
CIM Enabled  
-----  
yes
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Chapter 9. Remote target connectivity commands

This section describes the command-line interface (CLI) for defining remote target connectivity.

Setting the threshold of a link disruption duration that triggers an event

Use the **target_change_connection_threshold** command to set the threshold of a link disruption that lasts more than a specified duration.

```
target_change_connection_threshold target=TargetName [ duration=duration ]
```

Parameters

Name	Type	Description	Mandatory	Default
duration	Integer	Duration for link down that will trigger an event, in seconds. Valid value is between 1 and 1000000 seconds.	N	30
target	Object name	The name of the target system for which the threshold is set.	Y	N/A

This command is used to set the duration of a link disruption that will trigger an event.

Example:

```
target_change_connection_threshold target="XIV MN00043" duration=25
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **TARGET_INVALID_CONNECTION_DURATION_THRESHOLD**

The target connection duration threshold should be in the [1,1000000] range.

Updating the target's mirroring configuration

Use the **target_config_sync_rates** command to change the target's mirroring configuration.

```
target_config_sync_rates target=TargetName
[ max_initialization_rate=MaxInitializationRate ]
[ max_syncjob_rate=MaxSyncjobRate ] [ max_resync_rate=MaxResyncRate ]
```

Parameters

Name	Type	Description	Mandatory	Default
target	Object name	The updated target.	Y	N/A
max_initialization_rate	Positive integer	Specifies the maximum rate for initial synchronization. Cannot be larger than max_syncjob_rate .	N	Unchanged
max_syncjob_rate	Positive integer	Specifies the default maximum rate for sync job synchronization. Cannot be larger than max_resync_rate .	N	Unchanged
max_resync_rate	Positive integer	Specifies the maximum rate for re-synchronization	N	Unchanged

This command changes the system ID of the remote target. The synchronization rate units are MB per second. The default rates are: 100 MB/sec for initialization rate, 300 MB/sec for resync rate. The default **system_id** is the value that is set with the **config_set** command.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **TARGET_ILLEGAL_RATE_VALUES**

The maximum initialization rate should be smaller than or equal to the maximum synchronization job rate. The maximum synchronization job rate should not be greater than the maximum resynchronization rate.

Activating connectivity to a remote target

Use the **target_connectivity_activate** command to activate connectivity between a port on the local storage system and a port on a remote target.

```
target_connectivity_activate target=TargetName
< ipaddress=IPAddress local_ipinterface=IPInterface > |
< fcaddress=wwpn local_port=PortID >
```

Parameters

Name	Type	Description	Mandatory
target	Object name	Remote target of the connectivity definition.	Y
ipaddress	N/A	IP address of the port on the remote target (iSCSI targets only).	N
local_ipinterface	Object name	Local IP interface to be connected to the remote port (iSCSI only)	N
fcaddress	N/A	FC address of the port on the remote target (FC targets only).	N
local_port	N/A	Port identifier.	N

Each connectivity definition can be either active or inactive. The system does not use inactive connectivity definitions. Target connectivity is active by default.

This command has no effect if the connectivity is already active.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **CONNECTIVITY_NOT_DEFINED**
No remote port is connected through this local port.
- **COMPONENT_IS_NOT_AN_FC_PORT**
An FC port must be specified for the component.
- **COMMAND_NOT_ALLOWED_ON_MANAGEMENT_OR_VPN_INTERFACE**

The operation is not allowed on the management or VPN IP Interface.

- **IPINTERFACE_DOES_NOT_EXIST**

This IP interface name does not exist.

- **TARGET_PORT_BAD_ADDRESS**

The remote port address is illegal or does not belong to the remote target.

- **BAD_LOCAL_IP_PORT**

The ID of a local IP port must be specified.

Deactivating connectivity to a remote target

Use the **target_connectivity_deactivate** command to deactivate connectivity between a port on the local storage system and a port on a remote target.

```
target_connectivity_deactivate target=TargetName  
< ipaddress=IPaddress local_ipinterface=IPInterface > |  
< fcaddress=wwpn local_port=PortID > [ force_on_olvm_peer=<yes|no> ]  
[ force_on_ha_peer=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
target	Object name	Remote target of the connectivity definition.	Y	N/A
ipaddress	N/A	IP address of the port on the remote target (iSCSI targets only).	N	N/A
local_ipinterface	Object name	Local IP interface that is connected to the remote port (iSCSI only).	N	N/A
fcaddress	N/A	FC address of the port on the remote target (FC targets only).	N	N/A
local_port	N/A	Port identifier.	N	N/A
force_on_olvm_peer	Boolean	Informs the system whether the command should be applied on an OLVm peer.	N	No
force_on_ha_peer	Boolean	Force the deactivation on a HyperSwap target.	N	No

This command deactivates connectivity.

Each connectivity definition can be either active or inactive. The system does not use inactive connectivity definitions. Target connectivity is active by default. Connectivity can be reactivated using **Activating connectivity to a remote target**.

This command has no effect if the connectivity is already deactivated.

Example:

```
target_connectivity_deactivate
target=Nextra2 local_module=101
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **COMMAND_NOT_ALLOWED_ON_MANAGEMENT_OR_VPN_INTERFACE**
The operation is not allowed on the management or VPN IP Interface.
- **CONNECTIVITY_NOT_DEFINED**
No remote port is connected through this local port.
- **COMPONENT_IS_NOT_AN_FC_PORT**
An FC port must be specified for the component.
- **TARGET_PORT_BAD_ADDRESS**
The remote port address is illegal or does not belong to the remote target.
- **BAD_LOCAL_IP_PORT**
The ID of a local IP port must be specified.
- **IPINTERFACE_DOES_NOT_EXIST**
This IP interface name does not exist.
- **TARGET_HAS_OLVM_RELATIONSHIP**
The target has an IBM Hyper-Scale Mobility relationship, and therefore cannot be deactivated or deleted.
- **TARGET_HAS_HA_RELATIONSHIP**
The target has an IBM HyperSwap relationship, and therefore cannot be deactivated or deleted.

Defining connectivity to a remote target

Use the **target_connectivity_define** command to define connectivity between a port on the local storage system and a port on a remote target.

```
target_connectivity_define target=TargetName
< ipaddress=IPaddress local_ipinterface=IPInterface > |
< fcaddress=wwpn local_port=PortID >
```

Parameters

Name	Type	Description	Mandatory
target	Object name	Remote target of the connectivity definition.	Y
ipaddress	N/A	IP address of the port on the remote target (iSCSI targets only).	N
local_ipinterface	Object name	Local IP interface to be connected to the remote port (iSCSI only).	N
fcaddress	N/A	FC address of the port on the remote target (FC targets only).	N
local_port	N/A	FC port (FC only).	N

Connectivity between a local and a target storage system is defined between a specific port on a local storage system and a port on the target storage system.

Each connectivity definition can be either active or inactive. The system does not use inactive connectivity definitions. Target connectivity is active by default. An option is provided to de-activate (**target_connectivity_deactivate**) and then re-activate (**target_connectivity_activate**) it, if required. Target connectivity can be deleted (Deleting connectivity to a remote target) and a list of target connectivity definitions (Listing target connectivity definitions) can be displayed.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **CONN_EXISTS**
A remote port is already connected through this local port.
- **MAX_CONNECTIONS_REACHED**
The maximum number of connections is already reached.
- **MAX_ISCSI_CONNECTIONS_PER_MODULE_REACHED**
The maximum number of iSCSI connectivities for that module is already reached.
- **COMPONENT_IS_NOT_AN_FC_PORT**
An FC port must be specified for the component.
- **COMPONENT_IS_NOT_FC_INITIATOR_PORT**
An FC initiator port must be specified for the component.
- **BAD_LOCAL_IP_PORT**

The ID of a local IP port must be specified.

- **COMMAND_NOT_ALLOWED_ON_MANAGEMENT_OR_VPN_INTERFACE**

The operation is not allowed on the management or VPN IP Interface.

- **IPINTERFACE_DOES_NOT_EXIST**

This IP interface name does not exist.

- **TARGET_PORT_BAD_ADDRESS**

The remote port address is illegal or does not belong to the remote target.

Deleting connectivity to a remote target

Use the **target_connectivity_delete** command to delete connectivity between a port on the local storage system and a port on a remote target.

```
target_connectivity_delete target=TargetName  
< ipaddress=IPAddress local_ipinterface=IPInterface > |  
< fcaddress=wwpn local_port=PortID > [ force_on_olvm_peer=<yes|no> ]  
[ force_on_ha_peer=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
target	Object name	Remote target of the connectivity definition.	Y	N/A
ipaddress	N/A	IP address of the port on the remote target (iSCSI targets only).	N	N/A
local_ipinterface	Object name	Local IP interface that is connected to the remote port (iSCSI only).	N	N/A
fcaddress	N/A	FC address of the port on the remote target (FC targets only).	N	N/A
local_port	N/A	Port number on the local module (FC only).	N	N/A
force_on_olvm_peer	Boolean	Informs the system whether the command should be applied on an IBM Hyper-Scale Mobility peer.	N	No
force_on_ha_peer	Boolean	Force the connectivity deletion on a HyperSwap target.	N	No

Only a previously defined connectivity definition can be deleted.

Example:

```
target_connectivity_delete target=XIV2 local_module=101
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **COMMAND_NOT_ALLOWED_ON_MANAGEMENT_OR_VPN_INTERFACE**
The operation is not allowed on the management or VPN IP Interface.
- **CONNECTIVITY_NOT_DEFINED**
No remote port is connected through this local port.
- **COMPONENT_IS_NOT_AN_FC_PORT**
An FC port must be specified for the component.
- **TARGET_PORT_BAD_ADDRESS**
The remote port address is illegal or does not belong to the remote target.
- **BAD_LOCAL_IP_PORT**
The ID of a local IP port must be specified.
- **IPINTERFACE_DOES_NOT_EXIST**
This IP interface name does not exist.
- **TARGET_HAS_OLVM_RELATIONSHIP**
The target has an IBM Hyper-Scale Mobility relationship, and therefore cannot be deactivated or deleted.
- **TARGET_HAS_HA_RELATIONSHIP**
The target has an IBM HyperSwap relationship, and therefore cannot be deactivated or deleted.

Listing target connectivity definitions

Use the **target_connectivity_list** command to list all the connectivity definitions of a remote target.

```
target_connectivity_list [ target=TargetName ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
target	Object name	Target name that is listed.	N	All targets

Name	Type	Description	Mandatory	Default
domain	Object name	The domain name.	N	All Domains

Field ID	Field output	Default position
target_name	Target Name	1
remote_port_address	Remote Port	2
local_fc_port	FC Port	3
local_ip_port	IP Interface	4
active	Active	5
up	Up	6

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Defining a remote target

Use the **target_define** command to define a new remote target for remote mirroring or data migration.

```
target_define target=TargetName protocol=<FC|iSCSI> [ iscsi_name=iSCSIName ]
[ xiv_features=<yes|no> ] [ system_id=SystemId ] [ domain=DomainList ]
[ quorum_witness=QW_Name ] [ uses_512b_sectors=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
target	Object name	Local name of the remote target.	Y	N/A
protocol	Enumeration	FC (Fiber Channel) or iSCSI, depending on the communication protocol supported by the remote host.	Y	N/A
iscsi_name	iSCSI initiator name	iSCSI name of the remote target. This field is mandatory for iSCSI hosts.	N	N/A

Name	Type	Description	Mandatory	Default
system_id	String	ID of the remote system. Should be the same as the output of the system_id parameter on the remote system (see Displaying the values of configuration parameters).	N	N/A
xiv_features	Boolean	Defines the remote system as an XIV system. Non-XIV systems are used only for data migration.	N	Yes
domain	N/A	The cluster will be attached to the specified domains. To define more than one domain, separate them with a comma. To specify all existing domains, use "*".	N	none
quorum_witness	Object name	The name of the quorum witness that is associated with the target.	N	none
uses_512b_sectors	Boolean	Optimize the asynchronous mirror data transfer for remote targets with 512B sector size.	N	No

This command defines the communication topology between a local storage system and a remote storage system to enable various features, such as remote mirroring. The local storage system can write to or read from the remote storage system, or allow the target storage system to write to or read from it.

The first step when defining a new target connectivity is to specify the name of the remote storage system and the protocol used to communicate with it. There are two possible protocols: Fiber Channel (FC) and iSCSI. Each remote target is available through only one of these protocols.

This step only defines the remote system object. No connectivity definitions are defined yet and no communications are performed yet.

Once you have defined a remote target, the only way to change its protocol type is to delete the remote target and define it again.

Example:

```
target_define target=Nextra2 protocol=FC
```

Output:

Command executed successfully.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DEFINE_ANOTHER_TARGET_ON_SYSTEM**

Defining more than one target to the same remote system is not supported, and may compromise the data on the secondary system. Are you sure the remote system is not already defined as a target?

Return codes

- **MAX_TARGETS_REACHED**

The maximum number of defined targets is already reached.

- **TARGET_NAME_EXISTS**

The target name is already assigned to another target.

- **TARGET_ISCSI_MUST_HAVE_A_NAME**

iSCSI Target must have an iscsi_name.

- **ISCSI_NAME_NOT_ALLOWED_FOR_FC**

The FC Target does not have an iscsi_name.

- **TARGET_BAD_SCSI_TYPE**

The target SCSI type does not exist.

- **DOMAIN_DOESNT_EXIST**

The domain does not exist.

- **QUORUM_WITNESS_BAD_NAME**

The quorum witness name does not exist.

- **QUORUM_WITNESS_IS_NOT_ACTIVATED**

The quorum witness is not activated.

- **QUORUM_WITNESS_CANNOT_BE_ADDED_TO_A_TARGET_OF_THIS_TYPE**

A quorum witness cannot be added to either iSCSI or non-Spectrum Accelerate target.

Deleting a remote target

Use the **target_delete** command to delete the definition of the specified remote target.

```
target_delete target=TargetName [ force_on_olvm_peer=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
target	Object name	Target that is deleted.	Y	N/A
force_on_olvm_peer	Boolean	Informs the system whether the command should be applied on an IBM Hyper-Scale Mobility peer.	N	No

A target that contains port definitions cannot be deleted. A target with remote mirroring or data migration definitions cannot be deleted.

Example:

```
target_delete target=Nextra2
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **TARGET_HAS_PORTS**
There are ports defined for this target.
- **TARGET_HAS_ASSOCIATIONS**
There are remote volumes defined on this target.
- **TARGET_HAS_OLVM_RELATIONSHIP**
The target has an IBM Hyper-Scale Mobility relationship, and therefore cannot be deactivated or deleted.
- **TARGET_HAS_HA_RELATIONSHIP**
The target has an IBM HyperSwap relationship, and therefore cannot be deactivated or deleted.

Listing remote targets

Use the **target_list** command to list a specified remote target definition, or all target definitions.

```
target_list [ target=TargetName ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
target	Object name	Target name that is listed.	N	All targets
domain	Object name	The domain name.	N	All Domains

The following is listed for each target: port groups, ports, active/inactive status for each port, and the following mirroring-related values: max initialization rate, max resync rate, and max sync job rate.

Field ID	Field output	Default position
name	Name	1
scsi_type	SCSI Type	2
connected	Mirror Connectivity	3
ha_connected	HA Connectivity	4
max_initialization_rate	Max Initialization Rate	5
max_resync_rate	Max Resync Rate	6
max_syncjob_rate	Max Syncjob Rate	7
machine_serial_number	Target Serial Number	8
system_id	System ID	N/A
quorum_witness	Quorum Witness	9
xiv_target	XIV Target	N/A
iscsi_name	iSCSI Name	N/A
num_ports	Number of Ports	N/A
creator	Creator	N/A
connectivity_lost_event_threshold	Connection Threshold	N/A
peer_health	Peer Health	N/A
peer_health_reason	Peer Health Reason	N/A
peer_qw_configuration	Peer QW Configuration	N/A
coordinated_qw_lapse	Coordinated QW Lapse	N/A
arch	Remote Arch	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed

User Category	Permission
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Allowing remote mirroring access

Use the **target_mirroring_allow** command to allow remote mirroring operations initiated from a remote target.

```
target_mirroring_allow target=TargetName
```

Parameters

Name	Type	Description	Mandatory
target	Object name	Remote target name.	Y

This command is performed on a local storage system in order to allow the target storage system to read, write, view, create volumes and define the existing volumes as slaves. This command is used when allowing remote mirroring operations. Otherwise, the target storage system cannot access the local storage system. This command also allows a remote target to read and write through the SCSI interface.

Once mirroring is allowed, this permission cannot be revoked.

This operation should also be run on the target storage system so that it gives permission to the local storage system to access it.

This step must be performed before mirroring is defined (**mirror_create**).

Example:

```
target_mirroring_allow target=Nextra2
```

Output:

```
Command executed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **TARGET_BAD_TYPE**
The target machine is not an XIV machine.

Activating a port

Use the **target_port_activate** command to activate a port on a remote target.

```
target_port_activate target=TargetName < ipaddress=IPAddress | fcaddress=wwpn >
```

Parameters

Name	Type	Description	Mandatory
target	Object name	Remote target of the port.	Y
ipaddress	N/A	IP address of the port on the remote target (iSCSI targets only).	N
fcaddress	N/A	FC address of the port on the remote target (FC targets only).	N

Each port in a remote system can be configured as either active or inactive. The system does not use inactive ports. After a port is defined, it is active by default. This command reactivates a port if it was deactivated (by using the **target_port_deactivate** command).

This command has no effect, if the port is already active.

Example:

```
target_port_activate  
target=Nextra2 fcaddress=10:00:00:17:38:27:ec:11
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_PORT_BAD_ADDRESS**
The remote port address is illegal or does not belong to the remote target.
- **TARGET_BAD_PORT_STATE**
The port is already in the requested activation state.
- **TARGET_BAD_NAME**
The target name does not exist.

Adding a new port to a remote target

Use the **target_port_add** command to add a port to a remote target.

```
target_port_add target=TargetName < ipaddress=IPaddress | fcaddress=wwpn >
```

Parameters

Name	Type	Description	Mandatory
target	Object name	Remote target to which to add the port.	Y
ipaddress	N/A	IP address of the port on the remote target (for iSCSI type targets only).	N
fcaddress	N/A	FC address of the remote port (for FC type targets only).	N

This command adds a new port to a specified target. A port can be either FC or iSCSI, and its type must conform to the remote target's communication protocol type.

Specify the IP address or the FC address according to communication protocol of the target.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **PORT_EXISTS**
The port is already defined.
- **MAX_PORTS_REACHED**
The maximum number of ports defined in the system is already reached.

- **TARGET_PORT_BAD_ADDRESS**
The remote port address is illegal or does not belong to the remote target.
- **ISCSI_HOST_ILLEGAL_PORT_NAME**
The port name for iSCSI Host is illegal.
Troubleshooting: Port names for iSCSI Hosts must contain only printable characters.
- **HOST_PORT_EXISTS**
A host with this port ID is already defined.

Deactivating a port

Use the **target_port_deactivate** command to deactivate a port of a remote target.

```
target_port_deactivate target=TargetName
< ipaddress=IPAddress | fcaddress=wwpn > [ force_on_olvm_peer=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
target	Object name	The remote target that includes the port to be deactivated.	Y	N/A
ipaddress	N/A	IP address of the port on the remote target (iSCSI targets only).	N	N/A
fcaddress	N/A	FC address of the port on the remote target (FC targets only).	N	N/A
force_on_olvm_peer	Boolean	Informs the system whether the command should be applied on an OLVN peer.	N	No
force_on_ha_peer	Boolean	Force the deactivation on a HyperSwap target.	N	No

Each port in a remote system can be configured as either active or in-active. The system does not use an inactive port. After a port is defined, it is active by default. To re-activate a port, issue the **target_port_activate** command (see Activating a port).

Example:

```
target_port_deactivate target=XIV2 fcaddress=10:00:00:17:38:27:ec:11
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **TARGET_PORT_BAD_ADDRESS**
The remote port address is illegal or does not belong to the remote target.
- **TARGET_BAD_PORT_STATE**
The port is already in the requested activation state.
- **TARGET_HAS_OLVM_RELATIONSHIP**
The target has an IBM Hyper-Scale Mobility relationship, and therefore cannot be deactivated or deleted.
- **TARGET_HAS_HA_RELATIONSHIP**
The target has an IBM HyperSwap relationship, and therefore cannot be deactivated or deleted.

Deleting a port from a remote system

Use the **target_port_delete** command to delete a port from the specified remote target.

```
target_port_delete target=TargetName < ipaddress=IPAddress | fcaddress=wwpn >  
[ force_on_ha_peer=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	
target	Object name	Remote target from which the port is that is deleted.	Y	
ipaddress	N/A	IP address of the port (for iSCSI targets only).	N	
fcaddress	N/A	FC address of the remote port (for FC targets only).	N	
force_on_ha_peer	Boolean	Force the deactivation on a HyperSwap target.	N	No

Example:


```
target_port_delete
target=Nextra2
faddress=10:00:00:17:38:27:ec:11
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **TARGET_PORT_BAD_ADDRESS**
The remote port address is illegal or does not belong to the remote target.
- **TARGET_PORT_HAS_CONNECTIVITY**
Connectivity to this port is already defined.
- **TARGET_HAS_OLVM_RELATIONSHIP**
The target has an IBM Hyper-Scale Mobility relationship, and therefore cannot be deactivated or deleted.
- **TARGET_HAS_HA_RELATIONSHIP**
The target has an IBM HyperSwap relationship, and therefore cannot be deactivated or deleted.

Listing the ports of a remote target

Use the `target_port_list` command to list all ports of a target.

```
target_port_list [ target=TargetName ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
target	Object name	Target for which all ports should be listed.	N	All systems
domain	Object name	The domain name.	N	All Domains

Field ID	Field output	Default position
target_name	Target Name	1

Field ID	Field output	Default position
scsi_type	Port Type	2
active	Active	3
fc_wwpn	WWPN	4
iscsi_ip_addr	iSCSI Address	5
iscsi_ip_port	iSCSI Port	6

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Renaming a remote target

Use the **target_rename** command to rename a remote target.

```
target_rename target=TargetName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
target	Object name	The target to be renamed.	Y
new_name	Object name	New name of the target.	Y

Example:

```
target_rename target=Nextra2 new_name=Nextra-DRP
```

Output:

```
Command executed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **TARGET_NAME_EXISTS**
The target name is already assigned to another target.

Updating the target configuration

Use the **target_update** command to update the target's configuration.

```
target_update target=TargetName [ system_id=SystemId ] [ uses_512b_sectors=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	
target	Object name	Target to be updated.	Y	
system_id	String	ID of the remote system. Should be the same as the output of <code>Displaying the values of configuration parameters of the <i>system_id</i> variable on the remote system.</code>	Y	
uses_512b_sectors	Boolean	Optimize the asynchronous mirror data transfer for remote targets with 512B sector size.	N	No

This command changes the system ID of the remote target.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **TARGET_HAS_QUORUM_WITNESS_UPDATE_NOT_ALLOWED**
Updating the target's system ID is not allowed when there is a quorum witness defined on the target.

Adding a Quorum Witness to a target

Use the **target_add_quorum_witness** command to attach a Quorum Witness to a remote target.

```
target_add_quorum_witness target=TargetName quorum_witness=QW_Name
```

Parameters

Name	Type	Description	Mandatory
target	Object name	The name of the target.	Y
quorum_witness	Object name	The name of the Quorum Witness that is associated with the target.	Y

Example:

```
target_add_quorum_witness target=t1 quorum=q1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **QUORUM_WITNESS_BAD_NAME**
The quorum witness name does not exist.
- **TARGET_HAS_A_QUORUM_WITNESS**
The target already has a Quorum Witness.
- **QUORUM_WITNESS_IS_NOT_ACTIVATED**
The quorum witness is not activated.
- **QUORUM_WITNESS_CANNOT_BE_ADDED_TO_A_TARGET_OF_THIS_TYPE**
A quorum witness cannot be added to either iSCSI or non-Spectrum Accelerate target.

Removing a Quorum Witness from a target

Use the `target_remove_quorum_witness` command to detach a Quorum Witness from a remote target.

```
target_remove_quorum_witness target=TargetName
```

Parameters

Name	Type	Description	Mandatory
<code>target</code>	Object name	The name of the target.	Y

Example:

```
target_remove_quorum_witness target=t1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **TARGET_BAD_NAME**
The target name does not exist.
- **TARGET_HAS_NO_QUORUM_WITNESS**
The local target does not have a quorum witness defined.
- **TARGET_HAS_ENABLED_HA**
There are HyperSwap relationships with enabled automatic failover configured with this target. Prior to changing the Quorum Witness, the automatic failover must be disabled.

Chapter 10. Remote mirroring commands

This section describes the command-line interface (CLI) for remote mirroring.

Another command relevant to this topic is: Setting the threshold of a link disruption duration that triggers an event.

Canceling a snapshot mirror (ad hoc sync job)

Use the **mirror_cancel_snapshot** command to cancel all snapshot mirrors ('ad-hoc' sync jobs) of a specified master volume or a master consistency group, that have not run yet.

```
mirror_cancel_snapshot <vol=VolName | cg=cgName> [ target=TargetName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Name of the (local) master volume whose non-started snapshot mirrors should be canceled.	N	N/A
cg	Object name	Name of the (local) master consistency group whose non-started snapshot mirrors should be canceled.	N	N/A
target	Object name	Target mirror name. Mandatory if 2 mirrors are defined on the volume.	N	[none]

Only sync jobs that have not started are canceled. The command does not delete the snapshots themselves.

Upon running the command:

- A warning message is presented to the user for confirmation.
- An event is generated.
- Non-started snapshot mirrors are canceled.

The command fails under the following conditions:

- The command is issued on a slave volume or consistency group.

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A

User Category	Permission	Condition
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	The volume is mapped to a host or a cluster associated with the user.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_CANCEL_SNAPSHOT_MIRRORS_FOR_THE_VOLUME**
Are you sure you want to delete snapshot mirrors for *Volume*?
- **ARE_YOU_SURE_YOU_WANT_TO_CANCEL_SNAPSHOT_MIRRORS_FOR_THE_CONSISTENCY_GROUP**
Are you sure you want to delete snapshot mirrors for *Consistency Group*?

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Creating a snapshot mirror (ad hoc sync job)

Use the `mirror_create_snapshot` command to create a snapshot mirror.

```
mirror_create_snapshot <vol=VolName | cg=cgName>  
[ target=TargetName ] < <name=Name [ delete_priority=del_value ] > | overwrite=Name>  
< < slave_name=SnapshotName [ slave_delete_priority=del_value ] >  
| slave_overwrite=SnapshotName>
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	The name of the volume to create a snapshot for.	N	N/A
cg	Object name	Local master consistency group name.	N	N/A
target	Object name	Target mirror name. Mandatory if 2 mirrors are defined on the volume.	N	[none]
name	Object name	The name of the new snapshot.	Y	N/A
overwrite	Object name	The name of an existing snapshot that will be overwritten.	N	N/A
slave_overwrite	Object name	The name of an existing snapshot on the slave system that will be overwritten.	N	N/A
delete_priority	Integer	The deletion priority of the volume's snapshot.	N	1
slave_name	Object name	The name of the new snapshot on the slave system.	N	N/A
slave_delete_priority	Integer	The deletion priority of the slave volume's snapshot.	N	1

In synchronous replication, this command takes a snapshot of the source peer (master) and the target peer (slave) at exactly the same time.

In asynchronous replication, the command establishes a process that takes a point-in-time snapshot of the source peer (master) and synchronizes that point-in-time with the slave. The process sets a new sync job to copy the differences between that snapshot and the most recent snapshot that is guaranteed to be synchronized with the target peer.

Prerequisite (for both synchronous and asynchronous mirroring):

- The coupling has to be operational.

Multiple snapshot mirrors:

- Multiple snapshot mirrors can be issued; each mandates the creation of a corresponding sync job.
- Corresponding sync jobs are queued one after another.

Prioritization of sync jobs:

- The snapshot mirror delays the execution of an interval-based mirror if it is running upon arrival of a new interval.
- The snapshot mirror does not, however, cancel the creation of the interval-based sync job. The interval-based mirror will be calculated based on the differences between the most recent snapshot and the last snapshot mirror.

Precedence of the last snapshot mirror over the last replicated snapshot:

- The last replicated snapshot of the master will be updated to reflect the completed snapshot mirror. Following the completion of the snapshot mirror, its snapshot is duplicated and the duplicate is named **last_replicated** (the previous last replicated snapshot is deleted).

Canceling a snapshot mirror:

- The administrator has the ability to cancel snapshot mirrors that have not yet started.

Important: The snapshots created concurrently on the master and slave are identical.

The snapshot mirror results with two last replicated snapshots that are different and denoted "Master" and "Slave" accordingly:

- On the slave, a snapshot is taken and named **last_replicated**
- On the master, the pertinent snapshot that is mirrored onto the slave is also named **last_replicated**

The outcome for the synchronous mirroring:

- The master blocks host I/O for the duration of creating the snapshots
- The master completes synchronizing pending writes
- A snapshot of the master and slave is taken
- The master no longer blocks host I/O
- An event is generated

Using the **overwrite** and **slave_overwrite** parameters:

It is possible to overwrite an existing snapshot or snapshot group either on the Master, the Slave, or both.

To specify a local snapshot or snapshot group to be overwritten, use the **overwrite** parameter. Use the **slave_overwrite** parameter to specify a remote snapshot or snapshot group to be overwritten.

The **overwrite** and **slave_overwrite** parameters cause the current content of the volume or consistency group to be copied into an existing snapshot or snapshot groups (indicated as the parameter's argument). The overwritten snapshot or snapshots retain the same SCSI device WWN and the same mapping. As a result, the hosts maintain a continuous mapping of the snapshots, and a rescan or similar operation is not needed. The overwritten snapshot or snapshot group must be an existing snapshot or snapshot group of the respective volume or consistency group.

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	The volume is mapped to a host or a cluster associated with the user.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **CONS_GROUP_MISMATCH**
The snapshot group does not match the consistency group volumes.
- **CONS_GROUP_EMPTY**
The operation is not allowed on an empty consistency group.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **MIRROR_IS_NOT_SYNCHRONIZED**
The mirror is not synchronized.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **MIRROR_IS_NON_OPERATIONAL**
The mirror is non-operational.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **OPERATION_NOT_ALLOWED_ON_LOOPBACK**
The requested operation is not allowed on a loopback target.
- **OVERWRITE_SNAPSHOT_BAD_NAME**
The snapshot name does not exist.
- **OVERWRITE_SNAPSHOT_GROUP_DOES_NOT_BELONG_TO_GIVEN_GROUP**
The snapshot group belongs to another consistency group.
- **POOL_SNAPSHOT_LIMIT_REACHED**
There is not enough space to create a snapshot.
- **REMOTE_POOL_SNAPSHOT_LIMIT_REACHED**
There is not enough space on the remote target for creating a snapshot.
- **REMOTE_MAX_VOLUMES_REACHED**
The maximum number of volumes on the remote machine is already reached.

- **REMOTE_MAX_SNAPSHOTS_FOR_VOLUME_REACHED**
The maximum allowed number of snapshots per volume is already reached on a remote machine whose version is not 10.2.4.
- **REMOTE_VOLUME_IS_MASTER**
A volume on the remote machine is already defined as primary.
- **REMOTE_VOLUME_IS_SNAPSHOT**
The secondary volume is a snapshot.
- **REMOTE_VOLUME_DATA_MIGRATION_UNSYNCHRONIZED**
Data Migration to the remote volume has not completed.
- **REMOTE_SNAPSHOT_NAME_EXISTS**
The remote snapshot name already exists.
- **REMOTE_SNAPSHOT_ILLEGAL_PRIORITY**
Illegal snapshot priority (remote); must be an integer between 1 and 4.
- **REMOTE_SNAPSHOT_GROUP_NAME_EXISTS**
The remote snapshot group name already exists.
- **REMOTE_SNAPSHOT_GROUP_ILLEGAL_PRIORITY**
Illegal snapshot group priority (remote); must be an integer between 1 and 4.
- **REMOTE_SNAPSHOT_GROUP_BAD_PREFIX**
The remote snapshot group name has a reserved prefix.
- **REMOTE_SNAPSHOT_BAD_PREFIX**
The remote snapshot name has a reserved prefix.
- **REMOTE_CONS_GROUP_EMPTY**
The operation is not allowed on an empty consistency group (remote).
- **REMOTE_CONS_GROUP_MISMATCH**
The remote snapshot group does not match the consistency group volumes.
- **SNAPSHOT_HAS_ACTIVE_SYNC_JOB**
The snapshot is currently the target of an active sync job.
Troubleshooting: Please wait for the sync job to complete.
- **SNAPSHOT_ILLEGAL_PRIORITY**
Illegal snapshot priority; must be an integer between 1 and 4.
- **SNAPSHOT_IS_INTERNAL**
Internal snapshots cannot be mapped, modified or deleted.
- **SNAPSHOT_GROUP_IS_INTERNAL**
Internal snapshots cannot be mapped, modified, or deleted.
- **SNAPSHOT_GROUP_NAME_EXISTS**
The snapshot group name already exists.
- **SNAPSHOT_GROUP_ILLEGAL_PRIORITY**
Illegal snapshot group priority; must be an integer between 1 and 4.
- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **SNAPSHOT_GROUP_BAD_PREFIX**
The snapshot group name has a reserved prefix.
- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The snapshot is part of a snapshot group.
- **SYNCHED_SNAPSHOTS_NOT_SUPPORTED_IN_TARGET**

The mirror's target does not support the synchronized snapshot capability.

- **VOLUME_BAD_PREFIX**
The volume name has a reserved prefix.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **VOLUME_DATA_MIGRATION_UNSYNCHRONIZED**
Data Migration to this volume has not completed.
- **VOLUME_EXISTS**
The volume name already exists.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
- **VOLUME_IS_NOT_CONSISTENT_SLAVE**
The operation not allowed on an inconsistent secondary volume.
- **VOLUME_IS_SNAPSHOT**
The operation is not permitted on snapshots.
- **VOLUME_IS_OLVM_PROXY**
The volume is in an IBM Hyper-Scale Mobility Proxy phase.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **OPERATION_DENIED_REMOTE_OBJECT_MANAGED**
The remote object is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **REMOTE_MIRROR_IS_STANDBY**
The remote mirror is marked as Standby.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **MAX_SNAPSHOTS_PER_VOLUME_REACHED**
The maximum allowed number of snapshots is already reached.
- **REMOTE_MAX_SNAPSHOTS_PER_VOLUME_REACHED**
The maximum allowed number of snapshots is already reached on the remote system.

- **TARGET_SNAPSHOT_GROUP_BAD_NAME**
The target snapshot group name does not exist.
- **REMOTE_DOMAIN_MAX_VOLUMES_REACHED**
The maximum number of volumes in the remote machine domain is already reached.
- **REMOTE_CONS_GROUP_BAD_NAME**
The remote consistency group name does not exist.
- **SNAPSHOT_CAN_NOT_BE_CREATED_REMOTE_CONS_GROUP_IO_IS_NOT_PAUSED**
The snapshot group will not be created since the remote consistency group is not in a stopped state.
- **SNAPSHOT_CAN_NOT_BE_CREATED_REMOTE_CONS_GROUP_DEFINITION_CHANGED**
The snapshot group will not be created since the volumes in the remote consistency group have changed since the `io_pause` command was issued.
- **REMOTE_OVERWRITE_SNAPSHOT_GROUP_DOES_NOT_BELONG_TO_GIVEN_GROUP**
The remote snapshot group belongs to another consistency group.
- **REMOTE_SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The subordinate snapshot is part of a snapshot group.
- **REMOTE_SNAPSHOT_IS_INTERNAL**
Internal snapshot cannot be mapped, modified or deleted.
- **REMOTE_SNAPSHOT_HAS_ACTIVE_SYNC_JOB**
The subordinate snapshot is currently the target of an active sync job.
Troubleshooting: Please wait for the sync job to complete.
- **REMOTE_OVERWRITE_SNAPSHOT_IS_MASTER_VOL**
The subordinate snapshot cannot be overwritten because it is a primary volume.
- **REMOTE_OVERWRITE_SNAPSHOT_BAD_NAME**
The subordinate snapshot name does not exist.
- **REMOTE_SNAPSHOT_OVERWRITE_MISMATCH**
The specified subordinate snapshot is not a snapshot of the specified volume.

Activating mirroring

Use the `mirror_activate` command to activate mirroring for a defined mirror coupling.

```
mirror_activate < vol=VolName | cg=cgName > [ target=TargetName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Master volume.	N	N/A
cg	Object name	Master consistency group name or a list of master consistency groups.	N	N/A
target	Object name	Target mirror name. Mandatory if 2 mirrors are defined on the volume.	N	[none]

This command activates the coupling - either volumes or consistency groups - and switches it to the Active state.

Requirements for a successful command completion:

- The specified target must exist
- The specified target must be mirrored
- The specified target is a volume that does not belong to a consistency group, or is a consistency group
- The specified target is not a master
- The Standby state was explicitly set by issuing the **mirror_deactivate** command on the same peer

If the new activation state is the same as the existing state, nothing is done and a success code is returned.

The mirroring cannot be activated:

- If the time stamps of the last replicated snapshots on the master and slave do not match.
- If the command is issued on a master that did not receive acknowledgment from the slave following the **cg_add_volume** or **cg_remove_volume** command (due to the command's timeout or to an unexpected failure), the command fails and the **MIRROR_CONS_GROUP_MEMBERSHIP_MISMATCH** code is returned. It means that the member lists of the mirror consistency group peers are not the same.
- If the command is issued on a master that did not receive acknowledgment from the slave following a **vol_resize** command (due to the command's timeout or to an unexpected failure), the command fails and the **MIRROR_CONS_GROUP_MEMBERSHIP_MISMATCH** code is returned. It means that the sizes of the mirror volume peers are not the same.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.

- **MIRROR_CONFIGURATION_ERROR**
The mirror's local configuration does not match its remote configuration.
- **REMOTE_MAX_VOLUMES_REACHED**
The maximum number of volumes on the remote machine is already reached.
- **SYNC_ALREADY_ACTIVE**
Synchronization is already active.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **MIRROR_CAN_NOT_BE_ACTIVATED**
Mirroring cannot be activated.
- **MIRROR_CONS_GROUP_MEMBERSHIP_MISMATCH**
The mirrored consistency group contains different volumes on the primary and secondary machines. This problem occurs whenever the `cg_add_vol` or `cg_remove_vol` commands were previously issued, and the primary machine did not receive an acknowledgment from the secondary machine until the command timed out, or due to any other unexpected failure.
- **MIRROR_SIZE_MISMATCH**
The secondary and primary volume sizes are different.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **VOLUME_TOO_MANY_ACTIVE_MIRRORS**
This command cannot be used if more than one mirror is active on the volume.
- **REMOTE_MIRROR_IS_STANDBY**
The remote mirror is marked as Standby.
- **REMOTE_DOMAIN_MAX_VOLUMES_REACHED**
The maximum number of volumes in the remote machine domain is already reached.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **REMOTE_DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier of the remote system is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **REMOTE_SYSTEM_OUT_OF_PHYSICAL_SPACE**

The operation not allowed while the remote system is out of physical space.

Changing the RPO for local or remote system

Use the `mirror_change_rpo` command to change a local or remote RPO for a mirror relation.

```
mirror_change_rpo <vol=VolName | cg=cgName> [ target=TargetName ] [ rpo=rpo ]  
[ remote_rpo=rpo ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local volume name. Must be specified if the command is applied to a volume.	N	N/A
cg	Object name	Consistency group name on the local system.	N	N/A
target	Object name	Target name of the mirror, mandatory if there are 2 mirrors defined on the volume.	N	[none]
remote_rpo	Integer	RPO on a remote system.	N	[Unchanged]
rpo	Integer	RPO on the local system	N	[Unchanged]

- The command must be run on the master.
- The RPO must be greater than the interval.
- The link has to be up.

Example:

```
mirror_change_rpo vol=volname rpo=100
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed

User Category	Permission
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **ASYNC_MIRROR_REMOTE_RPO_TOO_SHORT**
The specified remote RPO is too short.
- **ASYNC_MIRROR_RPO_TOO_LONG**
The specified RPO is too long.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **ASYNC_MIRROR_RPO_TOO_SHORT**
The specified RPO is too short.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **INTERVAL_SHOULD_BE_SHORTER_THAN_RPO**
The schedule interval must be shorter than the RPO.
- **ASYNC_MIRROR_REMOTE_RPO_TOO_LONG**
The specified remote RPO is too long.
- **LOCAL_IS_SLAVE**
The local mirror peer is not primary.
- **SYNC_MIRROR_HAS_NO_RPO**
The synchronous mirror does not have an RPO.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.
- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

Changing the designation of mirroring peers

Use the **mirror_change_designation** command to change the designation of mirroring peers: from primary to secondary, and vice versa.

```
mirror_change_designation < vol=VolName | cg=cgName > [ target=TargetName ]  
[ new_designation=<Primary|Secondary|None> ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Master volume name.	N	N/A
cg	Object name	Master consistency group name.	N	N/A
target	Object name	Target mirror name. Mandatory if 2 mirrors are defined on the volume.	N	[none]
new_designation	Enumeration	The new designation of the peer If not specified, the command swaps the designation of the primary and secondary peer.	N	none

The command is issued on the master peer and affects both peers. The coupling has to be operational.

The designation change implied by this command reflects a decision to reset the designation of the mirroring peers, in contrast with the operational role, which is denoted by the master/slave title.

There is no obligation to issue the command with a specification of the new designation. If the new designation is not specified, the command swaps the designations of both peers from their current value. The primary changes to secondary, and the secondary - to primary.

Example:

```
mirror_change_designation cg=reggie13_cg new_designation=Secondary
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
 - **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
 - **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
 - **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
 - **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
 - **MIRROR_DESIGNATION_NOT_SUPPORTED_BY_TARGET**
The mirror's target does not support mirror role designation.
 - **MIRROR_IS_NON_OPERATIONAL**
The mirror is non-operational.
 - **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
 - **TARGET_BAD_NAME**
The target name does not exist.
 - **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
 - **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
 - **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
 - **MIRROR_IS_STANDBY**
The mirror is marked as Standby.
 - **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
- Troubleshooting:** Contact IBM Support

Changing the mirroring schedule for remote slave peers

Use the `mirror_change_remote_schedule` command to change the replication schedule of a remote slave peer.

```
mirror_change_remote_schedule < vol=VolName | cg=cgName > [ target=TargetName ]
remote_schedule=Schedule
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local master volume name.	N	N/A
cg	Object name	Local master consistency group name.	N	N/A
target	Object name	Target mirror name. Mandatory if 2 mirrors are defined on the volume.	N	[none]
remote_schedule	Object name	A reference to a remote schedule that should be set for the remote slave peer, which corresponds with the master specified in the command.	Y	N/A

This command changes the replication schedule of an asynchronous coupling in order to make it effective after the role of a specified remote slave peer is changed to master.

Prerequisites:

- The coupling must be `ASYNC_INTERVAL`.

Following the command execution:

- The system displays a warning
- If the command is approved, it is executed
- An event is generated
- New sync jobs are generated according to the updated schedule
- Existing sync jobs are not affected (that is, they run according to the previous schedule)

Requirements for a successful command completion:

- The specified target exists
- The specified target is mirrored
- The specified target is not a volume that belongs to a mirrored consistency group
- The specified target is of sync type `ASYNC_INTERVAL`
- The specified target is a master
- The link is up

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **REMOTE_VOLUME_IS_MASTER**
A volume on the remote machine is already defined as primary.
- **REMOTE_CONS_GROUP_IS_MASTER**
The remote consistency group is defined as primary.
- **SCHEDULE_DOES_NOT_EXIST**
The specified schedule does not exist.
- **SYNC_MIRROR_DOES_NOT_USE_SCHEDULE**
A synchronous mirror definition does not require a schedule object.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **INTERVAL_SHOULD_BE_SHORTER_THAN_RPO**
The schedule interval must be shorter than the RPO.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **DOMAIN_HAS_NO_ACCESS_TO_SCHEDULE**
The domain has no access to the schedule.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

Changing the role of a mirrored volume

Use the **mirror_change_role** command to change the role of a local mirroring peer from Master to Slave or from Slave to Master.

```
mirror_change_role <vol=VolName | cg=cgName>
[ target=TargetName ] [ new_role=<Master|Slave|None> ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local volume name. Must be specified if the command is applied to a volume.	N	N/A
cg	Object name	Consistency group name. Must be specified if the command is applied to a consistency group.	N	N/A
target	Object name	Target mirror name. Mandatory if 2 mirrors are defined on the volume.	N	[none]
new_role	Enumeration	Role name of the peer. If not specified, the command swaps peer roles between Master and Slave.	N	none

This command changes the role of the local peer from Master to Slave or from Slave to Master when the coupling is non-operational. It is assumed that the command will be issued on both peers of the coupling before the coupling becomes operational again, so that upon reconnection there still will be one Master and one Slave.

For a successful command completion:

- Do not issue the command on a peer whose status is *Initializing*.
- Do not issue the command in the *Change Tracking* state.
- Do not issue the command on a volume that belongs to a mirrored consistency group, otherwise the command will return an error and fail.

Changing the roles in synchronous mirroring

When applied on a Master, the Master becomes a Slave, ceases serving host requests, and is set to accept replication from the other peer as a Slave.

When applied on a Slave, the Slave becomes a Master, starts accepting requests from hosts, and upon explicit activation starts replicating to the other peer (the original Master).

If the synchronous mirroring is interrupted in the middle of the re-synchronization process, the Slave volume may very probably be inconsistent. The last consistent image of the Slave volume is preserved in the **last_consistent** snapshot (LCS), which is automatically created immediately before the re-synchronization starts. If the LCS exists, the command emits a warning: *Are you sure you want the mirror/HyperSwap local peer to become primary? The local peer has a last-consistent snapshot.* In this case, the administrator must choose whether to use the existing contents of the previous Slave volume, which may be inconsistent, or revert the previous Slave volume to its **last_consistent** snapshot before issuing the **mirror_change_role** command.

Changing the roles in asynchronous mirroring

When successfully applied on a Master, the Master is reverted to the image recorded on the **last_replicated** snapshot of the mirror, and ceases accepting host requests.

When applied on a Slave:

- A warning is displayed.
- An event is generated.
- The new Master ceases accepting replication requests from the previous Master, and reverts to the **last_replicated** snapshot.
- The new Master starts accepting host requests.
- The process completion is recorded in the log.
- Explicit activation of mirroring is required.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **SOME_DATA_WILL_BE_LOST_ARE_YOU_SURE**
Are you sure you want the mirror/HyperSwap local peer to become secondary and lose the data that was not replicated?
- **ARE_YOU_SURE_YOU_WANT_TO_CHANGE_A_PEER_WITH_LCS_TO_MASTER**
Are you sure you want the mirror/HyperSwap local peer to become primary? The local peer has a last-consistent snapshot.

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **MIRROR_IS_INITIAL**
The operation is not permitted during the Initialization phase.
- **MIRROR_IS_ACTIVE**
Remote mirroring is currently active.
- **VOLUME_HAS_DATA_MIGRATION**
Data Migration is defined for this volume.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **MIRROR_HAS_NO_SYNCED_SNAPSHOT**
The mirror does not have a synchronized snapshot.
- **MASTER_CANNOT_BE_DEMOTED**
The primary volume cannot be demoted to secondary. Peer status mismatch.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_VOLUMES**
This command is not supported for IBM Hyper-Scale Mobility volumes.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **SYSTEM_OUT_OF_PHYSICAL_SPACE**
The operation not allowed while the system is out of physical space.

Changing a mirroring schedule for local peers

Use the `mirror_change_schedule` command to change the replication schedule for peers on the local system.

```
mirror_change_schedule < vol=VolName | cg=cgName > [ target=TargetName ] schedule=Schedule
```

Parameters

Name	Type	Description	Mandatory	Default
<code>vol</code>	Object name	Volume name on the local system.	N	N/A
<code>cg</code>	Object name	Consistency group name on the local system.	N	N/A
<code>target</code>	Object name	Target mirror name. Mandatory if 2 mirrors are defined on the volume.	N	[none]
<code>schedule</code>	Object name	A reference to a mirroring schedule	Y	N/A

This command changes the replication schedule for a peer on the local system. The new scheduling will become effective only if the peer is set as master.

Prerequisites:

- The coupling must be `ASYNC_INTERVAL`.
- The schedule's interval has to be shorter than the corresponding mirror's RPO.

The command fails under the following conditions:

- The specified target does not exist
- The specified target is non-mirrored
- The specified target is a volume that belongs to a mirrored consistency group
- The specified target synchronization type is not `ASYNC_INTERVAL`

Setting a scheduling reference:

- The system displays the following warning: Are you sure to change schedule?.
- An event is generated
- New sync jobs will be generated according to updated schedule. A running sync job is unaffected.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **SCHEDULE_DOES_NOT_EXIST**
The specified schedule does not exist.
- **SYNC_MIRROR_DOES_NOT_USE_SCHEDULE**
A synchronous mirror definition does not require a schedule object.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **INTERVAL_SHOULD_BE_SHORTER_THAN_RPO**
The schedule interval must be shorter than the RPO.
- **ILLEGAL_INTERVAL**
The specified interval value is not supported.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Creating a mirroring definition

Use the **mirror_create** command to create a remote mirroring coupling.

```
mirror_create < vol=VolName slave_vol=SlaveVolumeName  
[ create_slave=<yes|no> [ remote_pool=RemotePoolName ] ]  
[ init_type=<online|offline> ] > | <cg=cgName slave_cg=SlaveCgName>  
[ type=<SYNC_BEST_EFFORT|ASYNC_INTERVAL> ] target=TargetName  
[ rpo=rpo [ remote_rpo=rpo ] schedule=Schedule remote_schedule=Schedule ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local volume to be mirrored (the master).	N	N/A
slave_vol	Object name	The name of the slave volume on the remote storage system.	N	N/A
create_slave	Boolean	Determines whether to create a new slave volume or to use an existing one.	N	no
remote_pool	Object name	The storage pool on the remote system. Relevant only if creating a slave.	N	N/A
cg	Object name	Local consistency group to be mirrored (the master).	N	N/A
slave_cg	Object name	The name of the slave consistency group on the remote storage system.	N	N/A
type	Enumeration	The name of the replication type	N	SYNC_BEST_EFFORT
target	Object name	Remote target to contain the slave volume.	Y	N/A
rpo	Positive integer	A mirror recovery point objective value for the master. Ranges from 30 to 86400 seconds (that is, up to 24 hours) Is applicable and mandatory for asynchronous mirroring only.	N	[None]
remote_rpo	Positive integer	Mirror recovery point objective value for a remote peer that becomes master Is applicable and mandatory for asynchronous mirroring only.	N	[Master RPO]
schedule	Object name	A reference to a schedule object Is applicable and mandatory for asynchronous mirroring only.	N	[None]

Name	Type	Description	Mandatory	Default
remote_schedule	Object name	A reference to a schedule object on the remote machine. Is applicable and mandatory for asynchronous mirroring only.	N	[None]
init_type	Enumeration	Specifies the method requested to initialize the slave mirror.	N	[none]

Mirroring is the process of ensuring that both peers contain identical data at all times. This command defines a new mirroring coupling between a master and a slave peers.

The command supports the creation of an asynchronous mirroring coupling. Asynchronous mirroring is based on schedule-driven replication. The system also offers a predefined schedule object with a non-user-configurable interval of 20 seconds, named **min_interval**.

To create a mirroring coupling, an existing master peer must be specified together with a slave peer. Upon creation, the coupling is not active and the user needs to activate it explicitly in order to start the replication. This slave either already exists or is created by this command. Using an existing slave is allowed only if it is formatted. If the slave already exists, the command receives its name along with the remote system name. If it is created by this command, the input parameters specify the remote storage system name, the name of the slave that is created and the storage pool that will contain the newly created slave.

Mirroring is created in the standby state. The mirroring coupling must then be activated in order to start the initialization process, which copies the data from the master to the slave.

A storage system can have multiple mirroring definitions between pairs of peers on various remote systems. However, when the peers are consistency groups, all the volumes included in a specific consistency group must be mirrored between only one pair of storage systems. Therefore, when a volume peer on a storage system (for example: A) has a mirroring relationship with a volume on a remote storage system (for example: B), any other volume in the same consistency group on storage system A can only be defined in a remote mirroring relationship with a volume on storage system B. The same goes for volumes from storage system B to A. In addition, the mirrored consistency group has one sync job for all pertinent mirrored volumes within the consistency group.

Prior to issuing this command on a consistency group, make sure that the consistency group is empty.

The command fails if it finds conflicting mirroring snapshots (that were not removed during the deletion of a previous mirroring definition).

Initialization types:

- The `online` option (default) enables an over-the-wire initialization. In other words, it uses an inter-site link to replicate the master peer's initial state to the slave, starting once the mirror is first activated (`mirror_activate`). During initialization, the mirror status will be *Initialization*.
- If the `offline` option is selected, the system does not copy the entire contents of the master volume upon activation. Instead, the system compares the contents of the master and the slave, and copies only the data, that is found to be different. This option allows you to reduce the time of initial synchronization when a huge amount of data is to be mirrored or when there is not enough data transfer bandwidth between the master and the slave system. For example, make tape backup copies of master volumes, restore these onto slave volumes, and create mirror relationships along with this option. The `offline` option does not require the slave volume to be formatted as opposed to the `online` option.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **VOLUME_SIZE_VERY_LARGE_ARE_YOU_SURE**
The volume size is very large. It may not be possible to mirror this volume to older versions of the storage system. Are you sure?

Return codes

- **ASYNC_MIRROR_MISSING_RPO**
An asynchronous mirror definition must include the RPO.
- **ASYNC_MIRROR_REMOTE_RPO_TOO_LONG**
The specified remote RPO is too long.
- **ASYNC_MIRROR_REMOTE_RPO_TOO_SHORT**
The specified remote RPO is too short.
- **ASYNC_MIRROR_RPO_TOO_SHORT**
The specified RPO is too short.
- **ASYNC_MIRROR_RPO_TOO_LONG**
The specified RPO is too long.
- **ASYNC_NOT_SUPPORTED_IN_TARGET**
The specified target does not support asynchronous mirroring.
- **BAD_REMOTE_VOLUME_NAME**
The secondary volume name does not exist.
- **BAD_REMOTE_VOLUME_SIZE**
The primary and secondary volumes contain a different number of blocks.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_HAS_MIRROR**

Mirroring is defined for this consistency group.

- **CONS_GROUP_MIRRORING_NOT_SUPPORTED_IN_TARGET**
Consistency group mirroring is not supported by the target machine.
- **INTERVAL_SHOULD_BE_SHORTER_THAN_RPO**
The schedule interval must be shorter than the RPO.
- **ILLEGAL_INTERVAL**
The specified interval value is not supported.
- **MAX_MIRRORS_REACHED**
The maximum number of mirrors is already reached.
- **MAX_SYNC_MIRRORS_REACHED**
Maximum number of sync mirrors already defined
- **MAX_ASYNC_MIRRORS_REACHED**
The maximum number of async mirrors is already reached.
- **NOT_ENOUGH_SPACE_ON_REMOTE_MACHINE**
Not enough free space to set the requested size of the secondary volume.
- **NO_ASYNC_IN_THIN_PROVISIONED_POOL**
A thin-provisioned pool cannot contain volumes with asynchronous mirroring.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_IS_MASTER**
This local volume is already defined as a primary volume.
- **VOLUME_IS_SLAVE**
The volume is defined as a secondary volume.
- **REMOTE_VOLUME_EXISTS**
The secondary volume with the indicated name already exists. The name cannot be reused.
- **REMOTE_MAX_VOLUMES_REACHED**
The maximum number of volumes on the remote machine is already reached.
- **REMOTE_MAX_MIRRORS_REACHED**
Maximum number of mirrors already defined on remote machine
- **VOLUME_BAD_PREFIX**
The volume name has a reserved prefix.
- **REMOTE_POOL_DOES_NOT_EXIST**
The pool does not exist on the remote machine.
- **REMOTE_POOL_NOT_SPECIFIED**
Prior to creating a secondary volume, a pool must be defined on the remote machine.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **VOLUME_IS_SNAPSHOT**
The operation is not permitted on snapshots.
- **REMOTE_VOLUME_IS_SNAPSHOT**
The secondary volume is a snapshot.
- **TARGET_BAD_NAME**
The target name does not exist.

- **TARGET_BAD_TYPE**
The target machine is not an XIV machine.
- **TARGET_NO_ACCESS**
No access permissions to the secondary machine.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_VOLUME_LOCKED**
The secondary volume is locked.
- **TIMEOUT**
A remote operation was not completed in time.
- **VOLUME_HAS_MIRRORING_SNAPSHOTS**
The volume has snapshots created by a previous mirroring process.
- **SLAVE_VOLUME_NOT_FORMATTED**
The secondary volume is not formatted.
- **TARGET_DOES_NOT_ACCEPT_XIV_COMMANDS**
The target system does not accept XIV management commands.
- **SYNC_MIRROR_HAS_NO_RPO**
The synchronous mirror does not have an RPO.
- **REMOTE_CONS_GROUP_IS_MIRRORED**
Mirroring is defined for this remote consistency group.
- **REMOTE_SCHEDULE_DOES_NOT_EXIST**
The specified schedule does not exist on the remote machine.
- **SCHEDULE_DOES_NOT_EXIST**
The specified schedule does not exist.
- **REMOTE_CONS_GROUP_BAD_NAME**
The remote consistency group name does not exist.
- **REMOTE_VOLUME_IS_MASTER**
A volume on the remote machine is already defined as primary.
- **REMOTE_VOLUME_IS_SLAVE**
A volume on the remote machine is already defined as secondary.
- **REMOTE_MAX_MIRROR_CAPACITY_REACHED**
The maximum capacity for mirrored volumes is already reached on the remote machine.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **MIRRORING_INCOMPATIBLE_TARGET_VERSION**
Mirroring is not supported between the system versions of the specified peers.
- **MIRROR_TYPE_INCOMPATIBLE_WITH_TARGET**
A mirror of this type is not supported between the system versions of the specified peers.
- **NO_OFFLINE_INIT_TYPE_WITH_SLAVE_CREATION**
A new volume will be created as secondary. Offline initialization is meaningless.
- **ASYNC_WITH_OFFLINE_INIT_NOT_SUPPORTED_IN_TARGET**

The specified target does not support asynchronous mirroring with offline initialization.

- **VOLUME_SIZE_ABOVE_LIMIT**
The specified volume size is above the limit.
- **REMOTE_VOLUME_SIZE_ABOVE_LIMIT**
The specified volume size is above the limit of the remote machine.
- **INVALID_SLICE_OFFSET**
Slice offset is illegal.
- **VOLUME_IS_OLVM_PROXY**
The volume is in an IBM Hyper-Scale Mobility Proxy phase.
- **REMOTE_VOLUME_IS_OLVM_PROXY**
The remote volume is in an IBM Hyper-Scale Mobility Proxy phase.
- **ENCRYPTION_IN_PROGRESS**
The system is in the process of changing the encryption activation state.
- **MIRROR_OF_SAME_TYPE_EXISTS_ON_VOLUME**
A mirror of this type is already defined on this volume.
- **MIRROR_EXISTS_ON_TARGET**
The volume already has a mirror on this target.
- **REMOTE_VOLUME_IS_MIRROR_MASTER**
The volume is primary in a mirror relationship, and cannot be secondary!
- **REMOTE_VOLUME_TWO_SYNC_MIRRORS_NOT_ALLOWED**
Two synchronous mirrors were detected on the remote volume. This is not allowed.
- **REMOTE_VOLUME_MIRROR_LOOP_DETECTED**
A mirror loop was detected on the remote volume. This means that there is a mirror on the remote system, whose target is this system. Therefore, you cannot create a mirror with this target on this system.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **DOMAIN_MAX_MIRRORS_REACHED**
The domain exceeds the maximum allowed number of mirrors.
- **REMOTE_DOMAIN_MAX_VOLUMES_REACHED**
The maximum number of volumes in the remote machine domain is already reached.
- **REMOTE_DOMAIN_HAS_NO_ACCESS_TO_TARGET**
The secondary machine domain has no access to the target.
- **REMOTE_DOMAIN_HAS_NO_ACCESS_TO_SCHEDULE**
The secondary machine domain has no access to the schedule.
- **DOMAIN_HAS_NO_ACCESS_TO_TARGET**
The domain has no access to the target.
- **REMOTE_DOMAIN_MAX_MIRRORS_REACHED**
The maximum number of mirrors is already reached in the remote machine domain.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **REMOTE_VOLUME_HAS_DATA_MIGRATION**

Data migration is already defined for the secondary volume.

- **REMOTE_VOLUME_MASTER_ASYNC_MIRROR_DETECTED**
An asynchronous primary mirror was detected on the remote volume. The operation not allowed.
- **REMOTE_VOLUME_HAS_MIRRORING_SNAPSHOTS**
The remote volume has snapshots created by a previous mirroring process.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **SYSTEM_OUT_OF_PHYSICAL_SPACE**
The operation not allowed while the system is out of physical space.
- **REMOTE_DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier of the remote system is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **REMOTE_SYSTEM_OUT_OF_PHYSICAL_SPACE**
The operation not allowed while the remote system is out of physical space.
- **SLAVE_VOLUME_NOT_SAME_TYPE**
The primary and secondary volumes are not of the same type. Either one of them is compressed and the other is not, or they use different compression technologies.

Deactivating mirroring

Use the **mirror_deactivate** command to deactivate mirroring for a defined mirror coupling.

```
mirror_deactivate < vol=<vol1[,vol2]...> |  
cg=cgName > [ target=TargetName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Master volume name or a list of master volumes.	N	N/A
cg	Object name	Master consistency group name or a list of master consistency groups.	N	N/A
target	Object name	Target mirror name. Mandatory if 2 mirrors are defined on the volume.	N	[none]

This command deactivates a coupling and switches it to the Inactive state. While in the Inactive state, only the master volume is updated, as opposed to the Active state, where the slave volume is updated together with the master volume.

The command cannot be issued on a slave.

If the mirroring is already inactive, this command has no effect and a success code is returned.

If more than one volume is specified, mirroring on all the volumes is deactivated. Furthermore, the deactivation of all the volumes is performed as an atomic operation, so that the slave volumes remain consistent with each other.

Deactivating a consistency group affects all of its volumes.

The command fails under the following conditions:

- The specified target does not exist.
- The specified target is non-mirrored.
- The specified target is a volume that belongs to a consistency group (in this case, the entire consistency group must be deactivated).
- Some of the specified targets are masters and some are slaves.
 - Each instance of the command can be applied to either master(s) or slave(s), but not to both.
- The target is a slave, yet the link is up.
- If multiple volumes are specified in the command and some are already part of an inactive mirror, the command will fail for all mirrors, including those that were active. The relevant return code is: **SYNC_ALREADY_INACTIVE**.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **SYNC_ALREADY_INACTIVE**
Synchronization is already inactive.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.

Troubleshooting: Retry the command in a few seconds.

- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **REMOTE_MIRROR_IS_STANDBY**
The remote mirror is marked as Standby.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Deleting a remote mirroring definition

Use the **mirror_delete** command to delete a remote mirroring coupling definition.

```
mirror_delete < vol=VolName | cg=cgName > [ target=TargetName ] [ force_on_slave=<Yes|No> ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local master volume name.	N	N/A
cg	Object name	Local master consistency group name.	N	N/A
target	Object name	Target mirror name. Mandatory if 2 mirrors are defined on the volume.	N	[none]
force_on_slave	Boolean	Forces the deletion of the remote mirroring coupling definition even of a slave. Deleting a remote mirroring definition can be forced on the slave peer only when it is in the initialization phase.	N	no

When a coupling is initially created or after it is deactivated, it is in *standby* mode. Only a standby coupling can be deleted. The command can only be issued on the master.

After the remote mirroring is deleted, both peers are configured as *none*, meaning that they are no longer configured as either master or slave.

Only the remote mirroring coupling definition is deleted. Neither the volumes themselves, nor their snapshots are deleted.

The local object specified in the **vol** parameter, must be a master.

To delete a remote mirroring coupling, the communication must be established. If there is no communication, mirroring is only deleted on the master, and a configuration error appears on the slave once the communication resumes.

Command outcome:

- An event is generated
- Overall coupling statistics are captured
- The outstanding pertinent sync jobs are deleted
- The process completion is recorded in the log

Deleting the mirroring definition when the link is down:

- When the link is down, this command only deletes the mirroring definition on the master.
- To delete the mirroring definition from the slave:
 - Run the **mirror_change_role** command to turn the slave into the master
 - Run **mirror_delete**

The **force_on_slave** parameter:

- The parameter **force_on_slave** can be issued only if mirroring is in the initialization phase. In any other mode, the role can be changed to master and the peer mirror can be deleted.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_CG_MIRRORING**
Are you sure you want to delete the mirroring relationships of the consistency group and of all volumes in the consistency group?

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.

- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **MIRROR_IS_ACTIVE**
Remote mirroring is currently active.
- **FORCE_DELETE_NOT_ALLOWED_ON_MASTER**
Deletion needs to be forced on secondary mirrors only.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **MIRROR_IS_NOT_INITIALIZING**
The operation is permitted only during the Initialization phase.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **REMOTE_MIRROR_IS_STANDBY**
The remote mirror is marked as Standby.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **MIRROR_CONS_GROUP_MEMBERSHIP_MISMATCH**
The mirrored consistency group contains different volumes on the primary and secondary machines. This problem occurs whenever the `cg_add_vol` or `cg_remove_vol` commands were previously issued, and the primary machine did not receive an acknowledgment from the secondary machine until the command timed out, or due to any other unexpected failure.

Viewing the mirroring status

Use the `mirror_list` command to list the status and configuration of mirroring couplings.

```
mirror_list [ < [ vol=VolName ]
[ target=TargetName ] > | cg=cgName | < [ scope=<cg|volume> ]
[ sync_type=<sync_best_effort|async_interval> ] > ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>sync_type</code>	Enumeration	List type. The available options are: <code>sync_best_effort</code> , <code>async_interval</code> , or All (if no value is specified)	N	All (if no value is specified)
<code>scope</code>	Enumeration	List type: all mirrors, all volumes, all CGs	N	All (if no value is specified)
<code>vol</code>	Object name	Local volume name.	N	[none]
<code>cg</code>	Object name	Local consistency group name.	N	[none]
<code>target</code>	Object name	Remote target name.	N	[none]
<code>domain</code>	Object name	The domain name.	N	All Domains

This command shows current configuration and status for the remote mirroring of volumes or consistency groups. Size/part/time to synchronize are unknown if this is the slave and connection is broken.

The following default parameters are shown:

- **Name**
- **Mirror Type:** `sync_best_effort` or `async_interval`
- **Mirror Object:** CG or Volume
- **Role:** Master or Slave
- **Remote System:** target name
- **Remote Peer:** volume name
- **Active:** Yes or No
- **Status:** Initializing, Synchronized, Unsynchronized, Consistent, Inconsistent, RPO OK, RPO Lagging, or Change Tracking
- **Link Up:** Yes or No

The following optional parameters can be listed by explicitly specifying the proper columns:

- **Designation:** Primary or Secondary
- **Estimated Sync Time:** estimated time to synchronization in seconds
- **Size To Synchronize** (in MB)
- **Operational:** Yes or No
- **Sync Progress** (in %)

- **Mirror Error:** specifies the reason for mirroring deactivation: No_Error, Configuration_Error, Secondary_Pool_Exhausted, Master_Pool_Exhausted, or No_Thin_Provisioning_Resources
- **Schedule Name**
- **Last Replicated Snapshot Time:** the value is presented in yyyy-mm-dd hh:mm:ss format
- **Specified RPO:** the value is presented in h:mm:ss format

The following deactivation reasons can be read from the output list (available only in XML output format):

- INACTIVE_USER - No_Error
- INACTIVE_SECONDARY_LOCKED - Secondary_Pool_Exhausted
- INACTIVE_POOL_EXHAUSTED - Master_Pool_Exhausted
- INACTIVE_VOL_SIZE_MISMATCH - Remote_And_Local_Volume_Size_Mismatch
- INACTIVE_CONS_GROUP_MEMBERSHIP_MISMATCH - Cons_Group_Membership_Mismatch
- INACTIVE_POSSIBLE_VOL_SIZE_MISMATCH - Possible_Remote_And_Local_Volume_Size_Mismatch
- INACTIVE_POSSIBLE_CONS_GROUP_MEMBERSHIP_MISMATCH - Possible_Cons_Group_Membership_Mismatch
- INACTIVE_THIN_PROVISIONING - No_Thin_Provisioning_Resources
- INACTIVE_PEER_STATUS_MISMATCH - Peer_Status_Mismatch
- INACTIVE_UPGRADE - Temporarily_Deactivated_For_Upgrade

Field ID	Field output	Description	Default position
local_peer_name	Name	N/A	1
mirror_object	Mirror Object	N/A	3
designation	Designation	N/A	N/A
current_role	Role	N/A	4
target_name	Remote System	N/A	5
remote_peer_name	Remote Peer	N/A	6
active	Active	N/A	7
sync_state	Status	N/A	9
connected	Link Up	N/A	10
size_to_synchronize	Size To Sync (MiB)	N/A	N/A
operational	Operational	N/A	N/A
sync_progress	Sync Progress (%)	N/A	N/A
mirror_error	Mirror Error	No Error, Secondary pool exhausted, Configuration error or No thin provisioning resources	N/A
sync_type	Mirror Type	N/A	2
schedule_name	Schedule Name	N/A	N/A
last_replicated_snapshot_time	Last Replicated	N/A	N/A
last_replicated_snapshot_exists	Has Last Replicated Snapshot	N/A	N/A
specified_rpo	RPO	N/A	N/A
remote_rpo	Remote RPO	N/A	N/A
crash_consistent	Crash Consistency	N/A	N/A

Field ID	Field output	Description	Default position
validate	Validation	N/A	N/A
is_standby	Standby	N/A	8
arch	Remote Arch	N/A	N/A

Output:

```

<command id="0">
<administrator>
  <command>
    <changes_session_id value="1288716489394201:1:1288903896317961:1"/>
    <code value="SUCCESS"/>
    <last_change_index value="32289"/>
    <status value="0"/>
    <status_str value="Command completed successfully"/>
  </return>
  <mirror id="100777">
    <id value="100777"/>
    <creator value=""/>
    <creator_category value="none"/>
    <local_peer_id value="100776"/>
    <local_peer_name value="SYNC_vol_5"/>
    <schedule_name value=""/>
    <designation value="Secondary"/>
    <current_role value="Slave"/>
    <remote_mirror_id value="100872"/>
    <remote_peer_name value="SYNC_vol_4"/>
    <target_id value="100707"/>
    <target_name value="SYNC_target_2"/>
    <sync_type value="sync_best_effort"/>
    <sync_state value="Consistent"/>
    <active value="yes"/>
    <connected value="yes"/>
    <operational value="yes"/>
    <sync_progress value="100"/>
    <size_to_synchronize value="-1"/>
    <estimated_sync_time value="0"/>
    <mirror_error value="No_Error"/>
    <mirror_object value="Volume"/>
    <specified_rpo value=""/>
    <remote_rpo value=""/>
    <last_replicated_snapshot_time value=""/>
    <init_type value="online"/>
  </mirror>
</return>
</command>
</administrator>
<aserver status="DELIVERY_SUCCESSFUL"/>
</command>

```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Obtaining statistics on past sync jobs

Use the `mirror_statistics_get` command to present statistics that are automatically gathered by the system on past sync jobs per specified mirrored volume or consistency job.

```
mirror_statistics_get <vol=VolName | cg=cgName> [ target=TargetName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local volume name.	N	N/A
cg	Object name	Local consistency group name.	N	N/A
target	Object name	Target mirror name. Mandatory if 2 mirrors are defined on the volume.	N	[none]

The command output includes:

- Date and time created
- Date and time started to run
- Date and time finished
- Job size (MB)

Either a volume or consistency group must be specified.

Field ID	Field output	Default position
created_at	Created	1
started_at	Started	2
finished_at	Finished	3
job_size	Job Size (MiB)	4
duration	Job Duration (Sec)	5
avg_sync_rate	Average Sync Rate (MB/sec)	6

Example:

```
mirror_statistics_get vol=VolName
```

Output:

```
<job id="143">  
  <avg_sync_rate value="22.3333"/>  
  <created_at value="2011-03-22 11:19:30"/>  
  <duration value="6"/>  
  <finished_at value="2011-03-22 11:19:36"/>  
  <job_size value="134"/>  
  <started_at value="2011-03-22 11:19:30"/>  
</job>
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **MIRROR_HAS_NO_STATISTICS**
Job statistics were not collected for this mirror.
- **LOCAL_IS_SLAVE**
The local mirror peer is not primary.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **SYNC_MIRROR_HAS_NO_STATISTICS**
Job statistics do not exist for the synchronous mirror.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.

Switching roles between master and slave

Use the `mirror_switch_roles` command to switch roles between master and slave volumes.

```
mirror_switch_roles <vol=VolName | cg=cgName> [ target=TargetName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local volume name.	N	N/A
cg	Object name	Local consistency group name.	N	N/A
target	Object name	N/A	N	[none]

The command can only be issued if coupling is operational and only on the master. For synchronous mirroring it can only be issued when the coupling is synchronized; for asynchronous mirroring it can only be issued if there are no outstanding sync jobs and the volume and its last replicated snapshot are identical.

Following the execution of the command:

- The volume that was previously the master becomes the slave
- The volume that was previously the slave becomes the master

Before this command switches roles, the system stops accepting new writes to the local volume. With synchronous mirrors the system performs all pending writes, and only after all pending writes have been committed, the roles are switched.

After the command is executed, the mirror remains active.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **MIRROR_IS_NON_OPERATIONAL**
The mirror is non-operational.
- **MIRROR_IS_NOT_SYNCHRONIZED**
The mirror is not synchronized.

- **VOLUME_HAS_DATA_MIGRATION**
Data Migration is defined for this volume.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **MIRROR_HAS_SYNC_JOB**
The operation is not permitted on a mirror with active sync jobs.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **MIRROR_MASTER_DIFFERS_FROM_SLAVE**
The mirror's primary volume was written to after the last replicated snapshot was taken.
- **REMOTE_MIRROR_IS_NOT_ACTIVE**
Remote mirroring is currently inactive.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **REMOTE_MIRROR_IS_STANDBY**
The remote mirror is marked as Standby.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_VOLUMES**
This command is not supported for IBM Hyper-Scale Mobility volumes.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **SYSTEM_OUT_OF_PHYSICAL_SPACE**
The operation not allowed while the system is out of physical space.

Retrieving RPO thresholds

Use the **rpo_thresholds_get** command to list system RPO-related thresholds, that, once crossed, trigger the creation of a corresponding event.

```
rpo_thresholds_get
```

Example:

```
rpo_thresholds_get
```

Output:

```
Increase Percentage  Increase Absolute  
-----  
100                  3600
```

Field ID	Field output	Default position
increase_percentage	Increase Percentage	1
increase_absolute	Increase Absolute	2

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Setting an RPO threshold

Use the **rpo_thresholds_set** command to set system RPO-related thresholds, that, once crossed, trigger the creation of a corresponding event.

```
rpo_thresholds_set [ increase_percentage=percentage ] [ increase_absolute=absolute ]
```

Parameters

Name	Type	Description	Mandatory	Default
increase_percentage	Integer	The threshold for RPO increase (in per cent), beyond which an event should be created.	N	none
increase_absolute	Integer	The threshold for RPO increase, beyond which an event should be created.	N	none

Example:

```
rpo_thresholds_set increase_percentage=percentage
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **INVALID_RPO_THRESHOLD_PERCENTAGE**
The values should be in the [1,10000] range.
- **INVALID_RPO_THRESHOLD_ABSOLUTE**
The values should be in the [1,1000000] range.

Changing the interval of a schedule

Use the **schedule_change** command to change the interval of a schedule.

```
schedule_change schedule=Schedule interval=IntervalSize [ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
schedule	Object name	The name of the schedule.	Y	N/A
interval	N/A	The interval for asynchronous mirroring. Format: hh:mm [:ss].	Y	N/A
domain	N/A	The schedule will be attached to the specified domains. To specify several domains, separate them with a comma. To specify all existing domains, use "*".	N	none

This command updates the schedule definition. Such definition can be referenced to when specifying asynchronous mirroring couplings.

Limitation:

- Only the following values are allowed in a schedule: 00:00:20, 00:00:30, 00:00:40, 00:00:50, 00:01, 00:01:10, 00:01:20, 00:01:30, 00:01:40, 00:01:50, 00:02, 00:05, 00:10.
- A predefined schedule cannot be changed.

Outcome:

- If the update command is issued on a schedule that is not referenced by any object, a confirmation message is displayed.

- If the update command is issued on a schedule that is referenced to by an object (for example, mirroring couplings), a warning message is displayed.
- Sync jobs that are running will not be affected.
- Future sync jobs are scheduled based on the new schedule settings.

Example:

```
schedule_change interval=00:01 schedule=1min domain=* -y
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

• **ARE_YOU_SURE_YOU_WANT_TO_UPDATE_THE_SCHEDULE**

Are you sure you want to update this schedule? This change will affect all the mirrors using that schedule.

Return codes

• **SCHEDULE_DOES_NOT_EXIST**

The specified schedule does not exist.

• **BAD_SCHEDULE_TIME_FORMAT**

Time format for a schedule is HH:MM[:SS].

• **ILLEGAL_INTERVAL**

The specified interval value is not supported.

• **SCHEDULE_CAN_NOT_BE_UPDATED**

The specified schedule cannot be updated.

• **INTERVAL_SCHEDULE_REQUIRES_ONLY_ONE_INTERVAL**

Only one interval can be defined in an interval schedule.

• **SCHEDULE_EXCLUDE_TIMES_NOT_REQUIRED**

An exclusion period can be defined only if exclude_time is set.

• **ZERO_LENGTH_EXCLUSION_PERIOD**

An exclusion period's start time must be different from its end time.

• **DOMAIN_SCHEDULE_IN_USE**

The schedule is in use, and therefore cannot be moved to another domain.

• **DOMAIN_DOESNT_EXIST**

The domain does not exist.

- **ILLEGAL_TIME_SLOT_SPACE**

The defined value must be larger than the minimum time slot, but smaller than the interval.

Creating a schedule object

Use the **schedule_create** command to define a schedule for replication.

```
schedule_create schedule=Schedule [ interval=IntervalSize ]
[ type=<manual|interval|max|time> ] [ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
schedule	Object name	The name of the schedule	Y	N/A
interval	N/A	The interval for asynchronous mirroring. Format: hh:mm [:ss].	N	00:10[:00]
type	Enumeration	The schedule type for asynchronous mirroring. Can be manual or interval .	N	interval
domain	N/A	The schedule will be attached to the specified domains. To specify several domains, separate them with a comma. To specify all existing domains, use "*".	N	none

This command creates a schedule definition. Schedules can be referenced to when specifying asynchronous mirroring couplings.

Limitations:

- Only the following values are allowed in a schedule: 00:00:20, 00:00:30, 00:00:40,00:00:50, 00:01, 00:01:10, 00:01:20, 00:01:30, 00:01:40, 00:01:50, 00:02, 00:05, 00:10.
- The system features a predefined schedule object with a non-user-configurable interval of 1 minute, named **min_interval**.

The **type** parameter:

Prior to the introduction of this parameter, each asynchronous mirror could be configured with an automatic schedule, whose interval specified how often a replication point and the corresponding replication process (sync job) should be automatically created. It was also possible to instruct the system to create a manual replication point and a corresponding sync job for a mirror using the dedicated CLI command **mirror_create_snapshot**. Finally, a single predefined schedule named *Never* with no interval settings was provided for mirrors that only required manual sync job creation.

The **type** parameter enables you to define multiple custom, user-configurable manual schedules. The creation of consistent, identical replication points for all mirrors set with such schedule, as well as corresponding sync jobs can be triggered using the dedicated CLI command **schedule_create_tick**, that specifies the schedule name as an argument. This facilitates external/scripted replication control for mirrors sharing the same schedule, without requiring them to be interval-based.

When **type=interval**, synchronization jobs for a mirror associated with the schedule will be triggered automatically, based on the specified interval.

When **type>manual**, synchronization jobs for a mirror associated with the schedule can be triggered by the command **schedule_create_tick**.

Once set, the schedule type cannot be changed.

Example:

```
schedule_create interval=00:01 schedule=1min domain=*
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **SCHEDULE_EXISTS**
The schedule name exists.
- **BAD_SCHEDULE_TIME_FORMAT**
Time format for a schedule is HH:MM[:SS].
- **MAX_SYNC_SCHEDULES_REACHED**
The maximum number of schedule objects has been reached.
- **ILLEGAL_INTERVAL**
The specified interval value is not supported.
- **INTERVAL_SCHEDULE_REQUIRES_ONLY_ONE_INTERVAL**
Only one interval can be defined in an interval schedule.
- **ZERO_LENGTH_EXCLUSION_PERIOD**
An exclusion period's start time must be different from its end time.
- **SCHEDULE_EXCLUDE_TIMES_NOT_REQUIRED**
An exclusion period can be defined only if exclude_time is set.

- **ONLY_INTERVAL_SCHEDULE_MAY_HAVE_EXCLUSIONS**
An exclusion period may be defined only for an interval schedule.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **ILLEGAL_TIME_SLOT_SPACE**
The defined value must be larger than the minimum time slot, but smaller than the interval.

Triggering a schedule

Use the **schedule_create_tick** command to trigger a schedule-equivalent event for the couplings with the specified schedule.

```
schedule_create_tick schedule=Schedule
```

Parameters

Name	Type	Description	Mandatory
schedule	Object name	The name of an asynchronously mirrored schedule.	Y

This command triggers a schedule-equivalent, interval-arrived event for couplings with the specified schedule.

- The command triggers a new sync job for asynchronous mirror definitions that are configured with the manual schedule specified by the command. The command triggers a simultaneous event for all mirrors with the specified schedule (and only whenever the schedule is of a non-interval type) which is equivalent to the 'new-interval-arrived' event triggered automatically by the system for a mirror (with a schedule of type interval).
- The command is different from **mirror_create_snapshot** whereas it is applied to mirrors that do not have an interval-based schedule. Thus, even though an event is triggered immediately (as with **mirror_create_snapshot**), no sync job is created for a pertinent mirror with the specified schedule (in case such a mirror has an outstanding sync job, as one might expect for mirrors with an interval-based schedule, if a new interval arrives during an outstanding job).
- The event is triggered for all pertinent couplings at the same time.
- A warning is displayed, requiring a user confirmation.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **SCHEDULE_DOES_NOT_EXIST**
The specified schedule does not exist.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **SCHEDULE_IS_NOT_MANUAL**
The specified schedule does not allow an external trigger.

Deleting a schedule object

Use the **schedule_delete** command to delete a schedule for replication.

```
schedule_delete schedule=Schedule
```

Parameters

Name	Type	Description	Mandatory
schedule	Object name	The name of the schedule to be deleted.	Y

This command deletes a schedule definition.

The command can be issued successfully only if the schedule specified is not referenced by a mirror coupling, or if it is not a pre-defined schedule (**min_interval**).

Outcome:

- The command will delete the specified schedule.

Example:

```
schedule_delete schedule=hourly
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **SCHEDULE_IS_ASSIGNED**
The specified schedule is currently assigned to a mirror.
- **SCHEDULE_CAN_NOT_BE_DELETED**
The specified schedule cannot be deleted.
- **SCHEDULE_DOES_NOT_EXIST**
The specified schedule does not exist.

Listing a schedule object

Use the **schedule_list** command to list the schedule properties for the specified coupling.

```
schedule_list [ schedule=Schedule ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
schedule	Object name	The name of the schedule.	N	All
domain	Object name	The domain name.	N	All Domains

The following default parameters are listed:

- Name
- Interval

The following optional parameters can be listed:

- Predefined (is the schedule a predefined object)
- Last Tick (last timestamp the schedule was fired)

Field ID	Field output	Default position
name	Name	1
interval	Interval	2
predefined	Predefined	N/A

Example:

```
schedule_list
```

Output:

```
Name          Interval
never
min_interval  00:00:20
ASYNC_None_3 00:02:00
```

Access control

User Category	Permission
Storage administrator	Allowed

User Category	Permission
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Renaming a schedule

Use the **schedule_rename** command to rename a schedule object.

```
schedule_rename schedule=Schedule new_name=Name
```

Parameters

Name	Type	Description	Mandatory
schedule	Object name	The current name of the schedule.	Y
new_name	Object name	The new name for the schedule.	Y

It is not possible to rename a predefined schedule.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **SCHEDULE_DOES_NOT_EXIST**
The specified schedule does not exist.
- **SCHEDULE_NAME_EXISTS**
The new schedule name already exists.
- **SCHEDULE_CAN_NOT_BE_UPDATED**
The specified schedule cannot be updated.

Viewing sync job status

Use the **sync_job_list** command to list the statuses of queued and running sync jobs for asynchronous couplings

```
sync_job_list [ vol=VolName | cg=cgName ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local volume name.	N	[none]
cg	Object name	Local consistency group name.	N	[none]
domain	Object name	The domain name.	N	All Domains

The following parameters are displayed:

- Mirroring coupling (volume/consistency group)
- Job state: initialization, pending, running, complete
- Type: interval-initiated, Snapshot Mirror, initialization, initializing validate
- Schedule - name of the referenced schedule object
- Interval length (if applicable)
- Job size
- Job progress
- Date created
- Time created
- Date started to run
- Time started to run

Field ID	Field output	Default position
job_object	Job Object	1
mirror_peer	Local Peer	2
source_snap	Source	3
target_snap	Target	4
job_state	State	5
part_of_cg_job	Part of CG	6
job_type	Job Type	7
created_at	Created	N/A
started_at	Started	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Chapter 11. HyperSwap commands

This chapter describes the command line interface (CLI) for HyperSwap.

HyperSwap® delivers highly-available, non-disruptive storage service, through partial or complete system failures and disasters, in the same data center and between metro-distant data centers.

HyperSwap high availability is based on active-active pairing of storage systems per volume or per consistency group. Each volume or consistency group pair uses synchronous replication to keep both systems updated at all times.

When certain conditions apply, an automatic and completely transparent failover is performed, so that the applications experience no downtime. As soon as the actual failure is recovered, the pair is automatically resynchronized.

As in other high availability solutions, HyperSwap requires a quorum witness component, to avoid split-brain situations. HyperSwap Quorum Witness is constantly monitoring the status of the related storage systems, and, if necessary, acts as a tiebreaker for conflict resolution.

The HyperSwap solution relies on Asymmetrical Logical Unit Access (ALUA) support to inform the host about the optimized paths to the storage system, and minimize I/O latency.

FlashSystem A9000 and FlashSystem A9000R HyperSwap capability does not require additional special hardware or software, and does not require any additional licensing.

Important: Some terminology used in this section is inconsistent with the terminology in other IBM FlashSystem A9000 and A9000R documentation and in IBM Hyper-Scale Module. For legacy purposes, this section still refers to "Master" and "Slave" volumes, which are elsewhere referred to as "Primary" and "Secondary". The new terminology is more suitable to describe the common replication technology, for both high availability (HyperSwap) and disaster recovery (Synchronous and Asynchronous mirroring).

Creating a HyperSwap relationship

Use the **ha_create** command to create a HyperSwap relationship.

```
ha_create < vol=VolName [ create_slave=<yes|no> [ remote_pool=RemotePoolName ] ]  
[ init_type=<online|offline> ] > | <cg=cgName slave_cg=SlaveCgName> target=TargetName
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local volume to be replicated (the Master).	N	N/A

Name	Type	Description	Mandatory	Default
create_slave	Boolean	Determines whether to create a new Slave volume or to use an existing one. If an existing remote volume is used, its name must match the local volume name.	N	no
remote_pool	Object name	The storage pool on the remote system. Relevant only if creating a Slave volume.	N	N/A
cg	Object name	The local consistency group to be mirrored.	N	N/A
slave_cg	Object name	The name of the Slave consistency group on the remote storage system.	N	N/A
target	Object name	The remote target to contain the Slave volume.	Y	N/A
init_type	Enumeration	The initialization method of the Slave volume.	N	online

This command defines a new HyperSwap relationship between Master and Slave peers.

When you define a HyperSwap relationship, the following rules are enforced:

- The Slave volume is not mapped
- The Master and Slave peers must be configured with the same QW
- The Master and Slave connectivity to the QW must be healthy
- If the HyperSwap relationship includes an existing Slave volume, the Slave volume's name must match the Master volume's name

As part of the operation, Master volume metadata is copied to the Slave volume, and the Slave volume identity changes.

A HyperSwap relationship is created in the Standby state. It must then be activated in order to start the initialization process, which copies data from the Master to the Slave.

The following initialization methods are available:

- The `online` option (default) enables an over-the-wire initialization. In other words, it uses an inter-site link to replicate the Master's initial state to the Slave, starting once HyperSwap is first activated (**ha_activate**). During initialization, the HyperSwap relationship status will be *Initializing*.
- If the `offline` option is selected, the initialization of the Slave peer is not done by replicating the Master's initial image, but rather by creating its offline replica. In other words, it restores to the Slave a mirror image that is backed up on the Master. Once the relationship is activated, the contents of the volumes are

compared, and only modified data is synchronized over the wire. This process is usually much faster than online initialization.

During initialization, the HyperSwap relationship status will be *Initializing*.

A storage system can have multiple HyperSwap relationships between pairs of peers on various remote systems. However, when the peers have consistency group HyperSwap relationships, all the volumes included in a specific consistency group HyperSwap relationship can only be replicated between one pair of storage systems. Therefore, when a volume peer on a storage system (for example: A) has a HyperSwap relationship with a volume on a remote storage system (for example: B), any other volume in the same consistency group on storage system A can only be defined in a HyperSwap relationship with a volume on storage system B. The same is true for volumes from storage system B to A. In addition, the HyperSwap consistency group has one sync job for all pertinent HyperSwap volumes within the consistency group.

Prior to issuing this command on a consistency group, make sure that the consistency group is empty.

Example:

```
ha_create vol=regular_volume target=123 create_slave=yes remote_pool=333
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

• **VOLUME_SIZE_VERY_LARGE_ARE_YOU_SURE**

The volume size is very large. It may not be possible to mirror this volume to older versions of the storage system. Are you sure?

Return codes

• **BAD_REMOTE_VOLUME_NAME**

The secondary volume name does not exist.

• **BAD_REMOTE_VOLUME_SIZE**

The primary and secondary volumes contain a different number of blocks.

• **CONS_GROUP_BAD_NAME**

The consistency group name does not exist.

• **CONS_GROUP_HAS_MIRROR**

Mirroring is defined for this consistency group.

- **CONS_GROUP_MIRRORING_NOT_SUPPORTED_IN_TARGET**
Consistency group mirroring is not supported by the target machine.
- **LOCAL_MAX_HA_REACHED**
The maximum number of HyperSwap relationships is already reached on the local machine.
- **NOT_ENOUGH_SPACE_ON_REMOTE_MACHINE**
Not enough free space to set the requested size of the secondary volume.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_IS_MASTER**
This local volume is already defined as a primary volume.
- **VOLUME_IS_SLAVE**
The volume is defined as a secondary volume.
- **VOLUME_HAS_OLVM**
An IBM Hyper-Scale Mobility relationship is defined for this volume.
- **VOLUME_HAS_HA**
This operation is forbidden on a volume with a HyperSwap relationship.
- **TARGET_VOLUME_HAS_OLVM**
This target volume is part of an IBM Hyper-Scale Mobility relationship.
- **TARGET_VOLUME_HAS_HA**
This operation is forbidden, if the target volume is a peer in a HyperSwap relationship.
- **REMOTE_VOLUME_EXISTS**
The secondary volume with the indicated name already exists. The name cannot be reused.
- **REMOTE_MAX_VOLUMES_REACHED**
The maximum number of volumes on the remote machine is already reached.
- **REMOTE_MAX_HA_REACHED**
The maximum number of HyperSwap relationships is already reached on the remote machine.
- **VOLUME_BAD_PREFIX**
The volume name has a reserved prefix.
- **REMOTE_POOL_DOES_NOT_EXIST**
The pool does not exist on the remote machine.
- **REMOTE_POOL_NOT_SPECIFIED**
Prior to creating a secondary volume, a pool must be defined on the remote machine.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **VOLUME_IS_SNAPSHOT**
The operation is not permitted on snapshots.
- **REMOTE_VOLUME_IS_SNAPSHOT**
The secondary volume is a snapshot.
- **TARGET_BAD_NAME**
The target name does not exist.

- **TARGET_BAD_TYPE**
The target machine is not an XIV machine.
- **TARGET_NO_ACCESS**
No access permissions to the secondary machine.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_VOLUME_LOCKED**
The secondary volume is locked.
- **TIMEOUT**
A remote operation was not completed in time.
- **VOLUME_HAS_MIRRORING_SNAPSHOTS**
The volume has snapshots created by a previous mirroring process.
- **SLAVE_VOLUME_NOT_FORMATTED**
The secondary volume is not formatted.
- **TARGET_DOES_NOT_ACCEPT_XIV_COMMANDS**
The target system does not accept XIV management commands.
- **REMOTE_CONS_GROUP_IS_MIRRORED**
Mirroring is defined for this remote consistency group.
- **REMOTE_CONS_GROUP_BAD_NAME**
The remote consistency group name does not exist.
- **REMOTE_VOLUME_IS_MASTER**
A volume on the remote machine is already defined as primary.
- **REMOTE_VOLUME_IS_SLAVE**
A volume on the remote machine is already defined as secondary.
- **REMOTE_MAX_MIRROR_CAPACITY_REACHED**
The maximum capacity for mirrored volumes is already reached on the remote machine.
- **HA_RETRY_OPERATION**
An operation is in progress on this HyperSwap relationship.
Troubleshooting: Try issuing the command again in a few seconds.
- **HA_INCOMPATIBLE_TARGET_VERSION**
The automatic failover is not supported between the system versions of the specified peers.
- **NO_OFFLINE_INIT_TYPE_WITH_SLAVE_CREATION**
A new volume will be created as secondary. Offline initialization is meaningless.
- **VOLUME_SIZE_ABOVE_LIMIT**
The specified volume size is above the limit.
- **REMOTE_VOLUME_SIZE_ABOVE_LIMIT**
The specified volume size is above the limit of the remote machine.
- **INVALID_SLICE_OFFSET**
Slice offset is illegal.
- **VOLUME_IS_OLVM_PROXY**
The volume is in an IBM Hyper-Scale Mobility Proxy phase.
- **REMOTE_VOLUME_IS_OLVM_PROXY**
The remote volume is in an IBM Hyper-Scale Mobility Proxy phase.

- **ENCRYPTION_IN_PROGRESS**
The system is in the process of changing the encryption activation state.
- **MIRROR_OF_SAME_TYPE_EXISTS_ON_VOLUME**
A mirror of this type is already defined on this volume.
- **MIRROR_EXISTS_ON_TARGET**
The volume already has a mirror on this target.
- **REMOTE_VOLUME_IS_MIRROR_MASTER**
The volume is primary in a mirror relationship, and cannot be secondary!
- **REMOTE_VOLUME_TWO_SYNC_MIRRORS_NOT_ALLOWED**
Two synchronous mirrors were detected on the remote volume. This is not allowed.
- **REMOTE_VOLUME_MIRROR_LOOP_DETECTED**
A mirror loop was detected on the remote volume. This means that there is a mirror on the remote system, whose target is this system. Therefore, you cannot create a mirror with this target on this system.
- **DOMAIN_MAX_MIRRORS_REACHED**
The domain exceeds the maximum allowed number of mirrors.
- **REMOTE_DOMAIN_MAX_VOLUMES_REACHED**
The maximum number of volumes in the remote machine domain is already reached.
- **REMOTE_DOMAIN_HAS_NO_ACCESS_TO_TARGET**
The secondary machine domain has no access to the target.
- **DOMAIN_HAS_NO_ACCESS_TO_TARGET**
The domain has no access to the target.
- **REMOTE_DOMAIN_MAX_MIRRORS_REACHED**
The maximum number of mirrors is already reached in the remote machine domain.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **REMOTE_VOLUME_HAS_DATA_MIGRATION**
Data migration is already defined for the secondary volume.
- **REMOTE_VOLUME_MASTER_ASYNC_MIRROR_DETECTED**
An asynchronous primary mirror was detected on the remote volume. The operation not allowed.
- **REMOTE_VOLUME_HAS_MIRRORING_SNAPSHOTS**
The remote volume has snapshots created by a previous mirroring process.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **SYSTEM_OUT_OF_PHYSICAL_SPACE**
The operation not allowed while the system is out of physical space.
- **REMOTE_DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier of the remote system is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **REMOTE_SYSTEM_OUT_OF_PHYSICAL_SPACE**

The operation not allowed while the remote system is out of physical space.

- **SLAVE_VOLUME_IS_MAPPED**
The secondary volume is mapped.
- **TARGET_HAS_NO_QUORUM_WITNESS**
The local target does not have a quorum witness defined.
- **REMOTE_TARGET_HAS_NO_QUORUM_WITNESS**
The target on the remote system does not have a quorum witness defined.
- **HA_TARGET_QUORUM_WITNESS_IS_NOT_ACTIVATED**
The quorum witness associated with the target is deactivated.
- **HA_REMOTE_TARGET_QUORUM_WITNESS_IS_NOT_ACTIVATED**
The quorum witness associated with the remote target is deactivated.
- **HA_CONNECTIVITY_NOT_SUFFICIENT**
The connectivity between the systems is not sufficient for the automatic failover.
- **HA_LOCAL_PEER_HAS_NO_QUORUM_WITNESS_CONNECTIVITY**
The local peer connectivity to the QW is not operational.
- **HA_REMOTE_PEER_HAS_NO_QUORUM_WITNESS_CONNECTIVITY**
The remote peer connectivity to the QW is not operational.
- **MAX_NUM_OF_PROXY_VOLUME_REACHED**
Failed to create a mirror, because the maximum number of proxy volumes is exceeded.
- **REMOTE_MAX_NUM_OF_PROXY_VOLUME_REACHED**
Failed to create a mirror, because the maximum number of remote proxy volumes is exceeded.
- **REMOTE_MAX_METADATA_OBJECTS_REACHED**
The maximum number of metadata objects has been reached on a remote system.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **HA_PEER_QUORUM_WITNESS_CONFIGURATION_NOT_VERIFIED**
Connectivity between the peer and the Quorum Witness is not verified.
- **HA_REMOTE_PEER_QUORUM_WITNESS_CONFIGURATION_NOT_VERIFIED**
Connectivity between the remote peer and the Quorum Witness is not verified.
- **TARGET_PEER_NOT_HEALTHY**
The target peer is not identified as healthy.
Troubleshooting: Check the Quorum Witness configuration.
- **HOST_TYPE_IS_NOT_CONFIGURED**
Cannot associate a HyperSwap volume with a host of unconfigured type.
IMPORTANT: Please read the HyperSwap chapter in the 'Best Practice' document to understand the solution requirements.

Viewing the status of HyperSwap volumes and consistency groups

Use the **ha_list** command to display the status of HyperSwap volumes and consistency groups.

```
ha_list [ < [ vol=VolName ] [ target=TargetName ] > | cg=cgName | scope=<cg|volume> ]  
[ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
scope	Enumeration	List type: all HyperSwap mirrors, volumes and consistency groups.	N	All (if no value is specified)
vol	Object name	Local volume name.	N	[none]
cg	Object name	Local consistency group name.	N	[none]
target	Object name	Remote target name.	N	[none]
domain	Object name	The domain name.	N	All Domains

The size, part, and time to synchronize are unknown if this is the Slave and connection is broken.

The following default parameters are shown:

- **Name**
- **HA Object:** Volume or CG
- **Role:** Master or Slave
- **Remote System:** The name of the target storage system
- **Active:** Yes or No
- **Status:** Initializing, Synchronized, or Unsynchronized
- **Link Up:** Yes or No
- **Automatic Failover:** The ability of a Slave volume to perform automatic failover: Active, Inactive, or N/A. N/A is returned for a Master volume or consistency group, or for a volume that is part of a consistency group.

The following optional parameters can be listed by explicitly specifying the proper columns:

- **Designation:** Primary or Secondary
- **Estimated Sync Time:** Estimated time (in seconds) for synchronization to complete. This parameter is not available for a Slave volume or consistency group, if its **Link Up** status is No.
- **Size To Synchronize:** The amount of data (in MB) to synchronize. This parameter is not available for a Slave volume or consistency group, if its **Link Up** status is No.
- **Operational:** Yes or No
- **Synch Progress:** The amount of synchronized data (in %)
- **Automatic Failover Reason** indicates why an automatic failover has been performed: N/A, User setting, part of a CG, Unsynced, Quorum Witness issue
- **I/O Service** indicates the local peer ability to serve I/O: Active or Unavailable

Example:

```
ha_list
```

Output:

Name	HA Object	Role	Remote System	Active	Status	Link Up
ha_1	Volume	Master	target-3726085-0008	yes	Synchronized	yes
ha_2	Volume	Slave	target-3726085-0008	yes	Synchronized	yes
ha_3	Volume	Slave	target-3726085-0008	yes	Initializing	yes

Cont.:

Automatic Failover

N/A

Active

Inactive

Field ID	Field output	Description	Default position
local_peer_name	Name	N/A	1
ha_object	HA Object	N/A	2
current_role	Role	N/A	3
target_name	Remote System	N/A	4
active	Active	N/A	5
sync_state	Status	N/A	6
ha_connected	Link Up	N/A	7
automatic_failover	Automatic Failover	N/A	8
automatic_failover_reason	Automatic Failover Reason	N/A	N/A
remote_peer_name	Remote Peer	N/A	N/A
designation	Designation	N/A	N/A
size_to_synchronize	Size To Sync (MiB)	N/A	N/A
operational	Operational	N/A	N/A
sync_progress	Sync Progress (%)	N/A	N/A
mirror_error	Mirror Error	No Error, Secondary pool exhausted, Configuration error or No thin provisioning resources	N/A
crash_consistent	Crash Consistency	N/A	N/A
validate	Validation	N/A	N/A
ha_high_availability_state	HA High Availability State	N/A	N/A
ha_unavailable_reason	HA Unavailable Reason	N/A	N/A
ha_sync_state	HA Sync State	N/A	N/A
ha_object_state	HA object State	N/A	N/A
io_service	I/O Service	N/A	N/A
arch	Remote Arch	N/A	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed

User Category	Permission
Read-only users	Allowed
Technicians	Disallowed

Activating a HyperSwap relationship

Use the **ha_activate** command to activate a HyperSwap relationship of volumes or consistency groups.

```
ha_activate < vol=VolName | cg=cgName > [ target=TargetName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Master volume name.	N	N/A (either a volume or consistency group must be specified)
cg	Object name	Master consistency group name.	N	N/A (either a volume or consistency group must be specified)
target	Object name	Target HyperSwap relationship name.	N	[none]

The command updates the Quorum Witness about the state of the HyperSwap relationship after the operation. If HyperSwap is enabled, the command will fail if the Quorum Witness update fails. If HyperSwap is disabled, the command may succeed even if the Quorum Witness update fails.

The following is required for a successful command completion:

- The Master and Slave are configured on the same Quorum Witness
- The connectivity of Master and Slave to the Quorum Witness is healthy
- The specified volume is a Master
- The connectivity between Master and Slave is sufficient for HyperSwap (that is, the **link up** status in the **ha_list** command output is *yes*).

If the relationship is already in the Active state, nothing is done and a success code is returned.

A HyperSwap relationship cannot be activated, if:

- The command is issued on a Master that did not receive acknowledgment from the Slave following the **cg_add_volume** or **cg_remove_volume** command, due to the command's timeout or to an unexpected failure. In this case, the command fails and the **HA_CONFIGURATION_ERROR** code is returned. This means that the member lists of the HyperSwap consistency group peers are not the same.
- The command is issued on a Master that did not receive acknowledgment from the Slave following a **vol_resize** command, due to the command's timeout or to an unexpected failure. In this case, the command fails and the **HA_CONFIGURATION_ERROR** code is returned. This error means that the sizes of the HyperSwap volume peers are not the same.

Example:

```
ha_activate vol=regular_volume target=123
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **HA_CONFIGURATION_ERROR**
The HyperSwap relationship's local configuration does not match its remote configuration.
- **REMOTE_MAX_VOLUMES_REACHED**
The maximum number of volumes on the remote machine is already reached.
- **SYNC_ALREADY_ACTIVE**
Synchronization is already active.
- **VOLUME_BELONGS_TO_HA_CONS_GROUP**
This volume belongs to a HyperSwap consistency group. The operation can be carried out on a volume which is not part of a consistency group, or on the consistency group itself.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **HA_CAN_NOT_BE_ACTIVATED**
The automatic failover cannot be activated.
- **HA_CONS_GROUP_MEMBERSHIP_MISMATCH**
The HyperSwap consistency group contains different primary and secondary volumes. This may have happened because the `cg_add_vol` or `cg_remove_vol` command was previously issued, but the primary did not receive an acknowledgment from the secondary until the command timed out, or due to any other unexpected failure.
- **HA_SIZE_MISMATCH**
The sizes of the primary and secondary volumes in this HyperSwap relationship are different.

- **HA_RETRY_OPERATION**
An operation is in progress on this HyperSwap relationship.
Troubleshooting: Try issuing the command again in a few seconds.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **VOLUME_TOO_MANY_ACTIVE_MIRRORS**
This command cannot be used if more than one mirror is active on the volume.
- **REMOTE_DOMAIN_MAX_VOLUMES_REACHED**
The maximum number of volumes in the remote machine domain is already reached.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **REMOTE_DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier of the remote system is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **REMOTE_SYSTEM_OUT_OF_PHYSICAL_SPACE**
The operation not allowed while the remote system is out of physical space.
- **TARGET_PEER_NOT_HEALTHY**
The target peer is not identified as healthy.
Troubleshooting: Check the Quorum Witness configuration.
- **TARGET_HAS_NO_QUORUM_WITNESS**
The local target does not have a quorum witness defined.
- **REMOTE_TARGET_HAS_NO_QUORUM_WITNESS**
The target on the remote system does not have a quorum witness defined.
- **VOLUME_IS_NOT_HA**
This is not a HyperSwap volume.
- **CONS_GROUP_IS_NOT_HA**
The local consistency group does not have HyperSwap definitions.
- **HA_CONNECTIVITY_NOT_SUFFICIENT**
The connectivity between the systems is not sufficient for the automatic failover.
- **HA_PEER_QUORUM_WITNESS_CONFIGURATION_NOT_VERIFIED**
Connectivity between the peer and the Quorum Witness is not verified.
- **HA_REMOTE_PEER_QUORUM_WITNESS_CONFIGURATION_NOT_VERIFIED**
Connectivity between the remote peer and the Quorum Witness is not verified.
- **HA_TARGET_QUORUM_WITNESS_IS_NOT_ACTIVATED**
The quorum witness associated with the target is deactivated.
- **HA_REMOTE_TARGET_QUORUM_WITNESS_IS_NOT_ACTIVATED**
The quorum witness associated with the remote target is deactivated.

Deactivating a HyperSwap relationship

Use the **ha_deactivate** command to deactivate HyperSwap volumes or consistency groups.

```
ha_deactivate < vol=<vol1[,vol2]...> | cg=cgName > [ target=TargetName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Master volume name or a list of master volumes.	N	N/A (either a volume or consistency group must be specified)
cg	Object name	Master consistency group name or a list of master consistency groups.	N	N/A (either a volume or consistency group must be specified)
target	Object name	Target HyperSwap relationship name.	N	[none]

This command deactivates a HyperSwap relationship and changes its status to *Inactive*. While in the *Inactive* state, only the Master volume is updated, as opposed to the *Active* state, where the Slave volume is updated together with the Master volume.

Example:

```
ha_deactivate vol=regular_volume -y
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_IS_NOT_HA**
This is not a HyperSwap volume.
- **CONS_GROUP_BAD_NAME**

The consistency group name does not exist.

- **CONS_GROUP_IS_NOT_HA**

The local consistency group does not have HyperSwap definitions.

- **LOCAL_PEER_IS_NOT_MASTER**

The local peer is not primary.

- **SYNC_ALREADY_INACTIVE**

Synchronization is already inactive.

- **VOLUME_BELONGS_TO_HA_CONS_GROUP**

This volume belongs to a HyperSwap consistency group. The operation can be carried out on a volume which is not part of a consistency group, or on the consistency group itself.

- **HA_RETRY_OPERATION**

An operation is in progress on this HyperSwap relationship.

Troubleshooting: Try issuing the command again in a few seconds.

- **TARGET_BAD_NAME**

The target name does not exist.

- **VOLUME_TARGET_MISMATCH**

The volume and target do not match.

- **CONS_GROUP_BAD_TARGET**

The target name does not match the consistency group.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

Deleting a HyperSwap relationship

Use the **ha_delete** command to delete a HyperSwap relationship.

```
ha_delete < vol=VolName | cg=cgName > [ target=TargetName ] [ force_on_slave=<Yes|No> ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local Master volume name.	N	N/A (either a volume or consistency group must be specified)
cg	Object name	Local Master consistency group name.	N	N/A (either a volume or consistency group must be specified)
target	Object name	Target HyperSwap relationship name	N	[none]
force_on_slave	Boolean	Forces the deletion of the HyperSwap relationship on the Slave peer. Available only if the Slave is in the <i>Initializing</i> state.	N	no

The command can only be issued on the Master. It deletes only the definition of the HyperSwap relationship. Neither the volumes themselves, nor their snapshots are deleted.

To delete a HyperSwap relationship, the following preconditions must be met:

- The HyperSwap relationship is in the *Standby* state, in other words, it has just been created or deactivated.
- The communication is established. If there is no communication, the HyperSwap relationship is only deleted on the Master. When the communication resumes, a configuration error will be issued on the Slave.
- The Slave volume is not mapped.

After deleting a HyperSwap relationship, both its peers are labeled as *none*, meaning that they are no longer configured as either Master or Slave.

After the command's successful completion, the Slave volume's SCSI identification is replaced. The volume name, external ID, lock state, and metadata remain identical to the Master volume values.

Deletion when the HyperSwap relationship is inactive or when the connectivity has failed

On an active Master volume

On an active Master volume, the command can be executed as described above.

On an active Slave volume

Important: Never map the Slave volume to a host. If you need to read or update data, use the **vol_copy** command to copy the data to a new volume, and map this new volume to the host.

Deleting a HyperSwap relationship when the communication between the peers is down, deletes only the HyperSwap relationship from the Master. To delete the HyperSwap relationship from the Slave:

- Run the **ha_change_role** command to turn the Slave into the Master
- Run **ha_delete**.

The **force_on_slave** parameter can be used only if the HyperSwap relationship is in the *Initializing* phase. In any other state, change the Slave into the Master, and run **ha_delete**.

On a disconnected Master or Slave volume

To delete the HyperSwap relationship on a disconnected peer volume, re-connect the peer volume and run **ha_delete**.

If re-connecting the peer volume is not possible, contact IBM support.

Example:

```
ha_delete vol=regular_volume -y
```

Output:

Command completed successfully

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_CG_HA**

Are you sure you want to delete the HyperSwap relationships of the consistency group and of all the volumes in it?

Return codes

- **VOLUME_BAD_NAME**

The volume name does not exist.

- **VOLUME_IS_NOT_HA**

This is not a HyperSwap volume.

- **CONS_GROUP_IS_NOT_HA**

The local consistency group does not have HyperSwap definitions.

- **CONS_GROUP_BAD_NAME**

The consistency group name does not exist.

- **LOCAL_PEER_IS_NOT_MASTER**

The local peer is not primary.

- **HA_IS_ACTIVE**

The automatic failover is currently active.

- **FORCE_DELETE_NOT_ALLOWED_ON_MASTER**

Deletion needs to be forced on secondary mirrors only.

- **VOLUME_BELONGS_TO_HA_CONS_GROUP**

This volume belongs to a HyperSwap consistency group. The operation can be carried out on a volume which is not part of a consistency group, or on the consistency group itself.

- **HA_RETRY_OPERATION**

An operation is in progress on this HyperSwap relationship.

Troubleshooting: Try issuing the command again in a few seconds.

- **HA_IS_NOT_INITIALIZING**

Deleting a HyperSwap relationship is permitted only during the initialization phase.

- **TARGET_BAD_NAME**

The target name does not exist.

- **VOLUME_TARGET_MISMATCH**

The volume and target do not match.

- **CONS_GROUP_BAD_TARGET**

The target name does not match the consistency group.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **SLAVE_VOLUME_IS_MAPPED**

The secondary volume is mapped.

- **MIRROR_CONS_GROUP_MEMBERSHIP_MISMATCH**

The mirrored consistency group contains different volumes on the primary and secondary machines. This problem occurs whenever the `cg_add_vol` or `cg_remove_vol` commands were previously issued, and the primary machine did not receive an acknowledgment from the secondary machine until the command timed out, or due to any other unexpected failure.

- **VOLUME_IS_AN_UNAVAILABLE_HYPERSWAP_PEER**

The operation is not permitted on a HyperSwap target which is unavailable for IO.

Switching roles between Master and Slave volumes

Use the `ha_switch_roles` command to switch roles between Master and Slave volumes.

```
ha_switch_roles <vol=VolName | cg=cgName> [ target=TargetName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local volume name.	N	N/A (either a volume or consistency group must be specified)
cg	Object name	Local consistency group name.	N	N/A (either a volume or consistency group must be specified)
target	Object name	N/A	N	[none]

The command can only be issued on the Master volume, and only if the HyperSwap relationship is activated and synchronized.

When this command is issued, the system performs all pending writes, and only after all pending writes have been committed, the roles are switched.

Following the successful completion of the command:

- The volume that was previously the Master becomes the Slave
- The volume that was previously the Slave becomes the Master
- The HyperSwap relationship remains active.

Example:

```
ha_switch_roles <vol=VolName | cg=cgName> [ target=TargetName ]
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_SWITCH_THE_PEER_ROLES**
The system that owns the primary volume is currently not connected to the Quorum Witness. If you switch the peer roles, the automatic failover may become unavailable. Are you sure you want to continue?

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **HA_IS_NOT_SYNCHRONIZED**
The HyperSwap relationship is not synchronized.
- **VOLUME_HAS_DATA_MIGRATION**
Data Migration is defined for this volume.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **VOLUME_BELONGS_TO_HA_CONS_GROUP**
This volume belongs to a HyperSwap consistency group. The operation can be carried out on a volume which is not part of a consistency group, or on the consistency group itself.
- **HA_CONNECTIVITY_NOT_SUFFICIENT**
The connectivity between the systems is not sufficient for the automatic failover.
- **HA_RELATION_MASTER_COULD_NOT_UPDATE_QW_AFTER_RETURN_TO_GOOD_STATE**
The primary volume had control over the relationship during a past failure, and was unable to update the Quorum Witness after the recovery.
- **HA_HAS_SYNC_JOB**
This operation is not permitted on a HyperSwap relationship with active sync jobs.

- **HA_RETRY_OPERATION**
An operation is in progress on this HyperSwap relationship.
Troubleshooting: Try issuing the command again in a few seconds.
- **REMOTE_HA_IS_NOT_ACTIVE**
The remote peer in this HyperSwap relationship is not active.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_VOLUMES**
This command is not supported for IBM Hyper-Scale Mobility volumes.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **SYSTEM_OUT_OF_PHYSICAL_SPACE**
The operation not allowed while the system is out of physical space.
- **VOLUME_IS_NOT_HA**
This is not a HyperSwap volume.
- **CONS_GROUP_IS_NOT_HA**
The local consistency group does not have HyperSwap definitions.
- **REMOTE_MAY_NOT_HAVE_COMPLETED_THE_OPERATION**
The operation may be not yet completed on the remote target.

Changing a peer role in a HyperSwap volume

Use the **ha_change_role** command to change the role of a local HyperSwap relationship peer from Master to Slave or from Slave to Master.

```
ha_change_role <vol>=VolName | cg=cgName> [ target=TargetName ]
[ new_role=<Master|Slave|None> ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Local volume name. Must be specified if the command is applied to a volume.	N	N/A
cg	Object name	Consistency group name. Must be specified if the command is applied to a consistency group.	N	N/A
target	Object name	Target HyperSwap relationship name.	N	[none]

Name	Type	Description	Mandatory	Default
new_role	Enumeration	Role name of the peer. If not specified, the command swaps peer roles between Master and Slave.	N	none

This command changes the role of the local peer from Master to Slave or from Slave to Master when the HyperSwap relationship is not activated. The command should be issued on both peers before the relationship is activated again, so that upon reconnection there still will be one Master and one Slave.

The command is used during recovery after an automatic failover, or in order to perform a manual failover when the automatic failover did not take place.

For a successful role change from Master to Slave, the volume can be in any phase, except *Initializing*. The Master ceases serving host requests, and is set to accept replication from the other peer as a Slave.

To successfully change a Slave to a Master, the HyperSwap relationship must be deactivated.

Before changing a Slave to a Master:

- Make sure that the original Master is not available and cannot become available while the other peer is a Master. To verify this, run the **ha_list** command on the Master, and check the value of the attribute *IO Service*. Only if the returned value is *Unavailable*, proceed with issuing the **ha_change_role** command on the Slave.
- Stop the applications using the HyperSwap volume(s). Note that each application must be stopped completely and not merely paused in order to make sure that it does not use any cached state when accessing the volume for the first time after the role change.

Note: Failure to fulfill both of the above requirements may result in a data integrity issue.

After a Slave is successfully changed to a Master, the volume starts accepting requests from hosts. Upon explicit activation, it starts replicating to the other peer (the original Master).

If the synchronous mirroring is interrupted in the middle of the re-synchronization process, the Slave volume may very probably be inconsistent. The last consistent image of the Slave volume is preserved in the **last_consistent** snapshot (LCS), which is automatically created immediately before the re-synchronization starts. If the LCS exists, the command emits a warning: *Are you sure you want the mirror/HyperSwap local peer to become primary? The local peer has a last-consistent snapshot.* In this case, the administrator must choose whether to use the existing contents of the previous Slave volume, which may be inconsistent, or revert the previous Slave volume to its **last_consistent** snapshot before issuing the **ha_change_role** command.

Example:

```
ha_change_role vol=regular_volume
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **SOME_DATA_WILL_BE_LOST_ARE_YOU_SURE**
Are you sure you want the mirror/HyperSwap local peer to become secondary and lose the data that was not replicated?
- **ARE_YOU_SURE_YOU_WANT_TO_CHANGE_A_PEER_WITH_LCS_TO_MASTER**
Are you sure you want the mirror/HyperSwap local peer to become primary?
The local peer has a last-consistent snapshot.

Return codes

- **VOLUME_IS_NOT_HA**
This is not a HyperSwap volume.
- **CONS_GROUP_IS_NOT_HA**
The local consistency group does not have HyperSwap definitions.
- **HA_IS_ACTIVE**
The automatic failover is currently active.
- **HA_IS_INITIAL**
The operation is not permitted during the HyperSwap relationship initialization phase.
- **VOLUME_BELONGS_TO_HA_CONS_GROUP**
This volume belongs to a HyperSwap consistency group. The operation can be carried out on a volume which is not part of a consistency group, or on the consistency group itself.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **VOLUME_HAS_DATA_MIGRATION**
Data Migration is defined for this volume.
- **HA_RETRY_OPERATION**
An operation is in progress on this HyperSwap relationship.

Troubleshooting: Try issuing the command again in a few seconds.

- **HA_HAS_NO_SYNCED_SNAPSHOT**
This HyperSwap volume does not have a synchronized snapshot.
- **MASTER_CANNOT_BE_DEMOTED**
The primary volume cannot be demoted to secondary. Peer status mismatch.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_VOLUMES**
This command is not supported for IBM Hyper-Scale Mobility volumes.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **SYSTEM_OUT_OF_PHYSICAL_SPACE**
The operation not allowed while the system is out of physical space.

Restoring the availability of a Master volume

Use the **ha_restore_availability** command to restore the availability of a Master volume, that became unavailable due to a failure.

```
ha_restore_availability <vol=VolName | cg=cgName>
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	Local volume name. Must be specified if the command is applied to a volume.	N
cg	Object name	CG name Must be specified if the command is applied to a consistency group.	N

As a result of some failure scenarios, the Master may assume that the Slave has performed an automatic failover, and stop handling I/O. In such cases, the user can choose to disable the remote peer and manually restore the availability of the Master.

Prior to issuing this command, make sure that the remote target is a Slave. If it is a Master, make sure that it is not available. To verify this, run the **ha_list** command on the remote target, and check the value of the attribute *IO Service*. Only if the returned value is *Unavailable*, proceed with issuing the **ha_restore_availability** command.

Upon issuing this command, the following occurs:

- An event is generated
- The Master volume becomes available.

Example:

```
ha_restore_availability vol=regular_volume
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_IS_NOT_HA**
This is not a HyperSwap volume.
- **CONS_GROUP_IS_NOT_HA**
The local consistency group does not have HyperSwap definitions.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **HA_IS_ACTIVE**
The automatic failover is currently active.
- **VOLUME_BELONGS_TO_HA_CONS_GROUP**
This volume belongs to a HyperSwap consistency group. The operation can be carried out on a volume which is not part of a consistency group, or on the consistency group itself.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.

Creating a HyperSwap volume snapshot (ad hoc sync job)

Use the **ha_create_snapshot** command to simultaneously create snapshots on both peers of a HyperSwap relationship.

```
ha_create_snapshot <vol=VolName | cg=cgName> [ target=TargetName ]
name=Name [ slave_name=SnapshotName ] [ delete_priority=del_value ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	The name of the volume to create a snapshot for.	N	N/A
cg	Object name	Local master consistency group name.	N	N/A
target	Object name	Target HyperSwap relationship name.	N	[none]
name	Object name	The name of the new snapshot.	Y	N/A
slave_name	Object name	The name of the new snapshot on the slave.	N	[none]
delete_priority	Integer	The deletion priority of the volume's snapshot.	N	1

This command takes a snapshot of the source peer (Master) and the target peer (Slave) at exactly the same time. The snapshots created concurrently on the Master and Slave are identical.

Pre-requisite:

- The HyperSwap relationship is activated and synchronized.

The snapshots created by this command can be managed with regular snapshot commands. For example, to delete these snapshots, issue the **snapshot_delete** command at each peer.

Example:

```
ha_create_snapshot <vol=VolName | cg=cgName> [ target=TargetName ]
name=Name [ slave_name=SnapshotName ] [ delete_priority=del_value ]
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	The volume is mapped to a host or a cluster associated with the user.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **CONS_GROUP_MISMATCH**
The snapshot group does not match the consistency group volumes.
- **CONS_GROUP_EMPTY**
The operation is not allowed on an empty consistency group.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **VOLUME_IS_NOT_HA**
This is not a HyperSwap volume.
- **CONS_GROUP_IS_NOT_HA**
The local consistency group does not have HyperSwap definitions.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **HA_IS_NOT_SYNCHRONIZED**
The HyperSwap relationship is not synchronized.
- **HA_RETRY_OPERATION**
An operation is in progress on this HyperSwap relationship.
Troubleshooting: Try issuing the command again in a few seconds.
- **HA_IS_NON_OPERATIONAL**
This HyperSwap volume is not operational.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **OPERATION_NOT_ALLOWED_ON_LOOPBACK**
The requested operation is not allowed on a loopback target.
- **OVERWRITE_SNAPSHOT_BAD_NAME**
The snapshot name does not exist.
- **OVERWRITE_SNAPSHOT_GROUP_DOES_NOT_BELONG_TO_GIVEN_GROUP**
The snapshot group belongs to another consistency group.
- **POOL_SNAPSHOT_LIMIT_REACHED**
There is not enough space to create a snapshot.
- **REMOTE_POOL_SNAPSHOT_LIMIT_REACHED**
There is not enough space on the remote target for creating a snapshot.
- **REMOTE_MAX_VOLUMES_REACHED**
The maximum number of volumes on the remote machine is already reached.
- **REMOTE_MAX_SNAPSHOTS_FOR_VOLUME_REACHED**
The maximum allowed number of snapshots per volume is already reached on a remote machine whose version is not 10.2.4.
- **REMOTE_VOLUME_IS_MASTER**
A volume on the remote machine is already defined as primary.
- **REMOTE_VOLUME_IS_SNAPSHOT**
The secondary volume is a snapshot.
- **REMOTE_SNAPSHOT_NAME_EXISTS**
The remote snapshot name already exists.

- **REMOTE_SNAPSHOT_ILLEGAL_PRIORITY**
Illegal snapshot priority (remote); must be an integer between 1 and 4.
- **REMOTE_SNAPSHOT_GROUP_NAME_EXISTS**
The remote snapshot group name already exists.
- **REMOTE_SNAPSHOT_GROUP_ILLEGAL_PRIORITY**
Illegal snapshot group priority (remote); must be an integer between 1 and 4.
- **REMOTE_SNAPSHOT_GROUP_BAD_PREFIX**
The remote snapshot group name has a reserved prefix.
- **REMOTE_SNAPSHOT_BAD_PREFIX**
The remote snapshot name has a reserved prefix.
- **REMOTE_CONS_GROUP_EMPTY**
The operation is not allowed on an empty consistency group (remote).
- **REMOTE_CONS_GROUP_MISMATCH**
The remote snapshot group does not match the consistency group volumes.
- **SNAPSHOT_ILLEGAL_PRIORITY**
Illegal snapshot priority; must be an integer between 1 and 4.
- **SNAPSHOT_IS_INTERNAL**
Internal snapshots cannot be mapped, modified or deleted.
- **SNAPSHOT_GROUP_IS_INTERNAL**
Internal snapshots cannot be mapped, modified, or deleted.
- **SNAPSHOT_GROUP_NAME_EXISTS**
The snapshot group name already exists.
- **SNAPSHOT_GROUP_ILLEGAL_PRIORITY**
Illegal snapshot group priority; must be an integer between 1 and 4.
- **SNAPSHOT_GROUP_BAD_NAME**
The snapshot group name does not exist.
- **SNAPSHOT_GROUP_BAD_PREFIX**
The snapshot group name has a reserved prefix.
- **SNAPSHOT_IS_PART_OF_SNAPSHOT_GROUP**
The snapshot is part of a snapshot group.
- **VOLUME_BAD_PREFIX**
The volume name has a reserved prefix.
- **VOLUME_BELONGS_TO_HA_CONS_GROUP**
This volume belongs to a HyperSwap consistency group. The operation can be carried out on a volume which is not part of a consistency group, or on the consistency group itself.
- **VOLUME_EXISTS**
The volume name already exists.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_IS_NOT_CONSISTENT_SLAVE**
The operation not allowed on an inconsistent secondary volume.
- **VOLUME_IS_SNAPSHOT**
The operation is not permitted on snapshots.
- **CONS_GROUP_BAD_TARGET**

The target name does not match the consistency group.

- **TARGET_BAD_NAME**

The target name does not exist.

- **VOLUME_TARGET_MISMATCH**

The volume and target do not match.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **MAX_SNAPSHOTS_PER_VOLUME_REACHED**

The maximum allowed number of snapshots is already reached.

- **REMOTE_MAX_SNAPSHOTS_PER_VOLUME_REACHED**

The maximum allowed number of snapshots is already reached on the remote system.

- **REMOTE_DOMAIN_MAX_VOLUMES_REACHED**

The maximum number of volumes in the remote machine domain is already reached.

- **REMOTE_CONS_GROUP_BAD_NAME**

The remote consistency group name does not exist.

- **SNAPSHOT_CAN_NOT_BE_CREATED_REMOTE_CONS_GROUP_IO_IS_NOT_PAUSED**

The snapshot group will not be created since the remote consistency group is not in a stopped state.

- **SNAPSHOT_CAN_NOT_BE_CREATED_REMOTE_CONS_GROUP_DEFINITION_CHANGED**

The snapshot group will not be created since the volumes in the remote consistency group have changed since the `io_pause` command was issued.

- **REMOTE_OVERWRITE_SNAPSHOT_GROUP_DOES_NOT_BELONG_TO_GIVEN_GROUP**

The remote snapshot group belongs to another consistency group.

Changing the designation of HyperSwap relationship peers

Use the `ha_change_designation` command to change the designation of HyperSwap relationship peers from Primary to Secondary and vice versa.

```
ha_change_designation < vol=VolName | cg=cgName > [ target=TargetName ]  
[ new_designation=<Primary|Secondary|None> ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Master volume name.	N	N/A
cg	Object name	Master consistency group name.	N	N/A
target	Object name	The name of the target.	N	[none]

Name	Type	Description	Mandatory	Default
new_designation	Enumeration	The new designation of the peer. If not specified, the command swaps the designation of the Primary and Secondary peers.	N	none

The designation in a HyperSwap relationship reflects the user's decision where the Primary (Master) and the Secondary (Slave) peers should be located. The actual roles performed by the two peers at any given moment may differ from their designations, as a result of a manual role change or an automatic failover.

This command is issued on the Primary peer and affects both peers. For the command to be successfully completed, the HyperSwap relationship has to be activated.

Specifying the new designations is not mandatory. If they are not specified, the command swaps the designations of both peers: the Primary changes to Secondary, and the Secondary changes to Primary.

Example:

```
ha_change_designation vol=regular_volume new_designation=Secondary
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_IS_NOT_HA**
This is not a HyperSwap volume.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **CONS_GROUP_IS_NOT_HA**
The local consistency group does not have HyperSwap definitions.

- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **MIRROR_DESIGNATION_NOT_SUPPORTED_BY_TARGET**
The mirror's target does not support mirror role designation.
- **HA_IS_NON_OPERATIONAL**
This HyperSwap volume is not operational.
- **VOLUME_BELONGS_TO_HA_CONS_GROUP**
This volume belongs to a HyperSwap consistency group. The operation can be carried out on a volume which is not part of a consistency group, or on the consistency group itself.
- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_TARGET_MISMATCH**
The volume and target do not match.
- **CONS_GROUP_BAD_TARGET**
The target name does not match the consistency group.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Enabling automatic failover in a HyperSwap relationship

Use the `ha_high_availability_enable` command to enable automatic failover in a HyperSwap relationship.

```
ha_high_availability_enable < vol=VolName | cg=cgName >
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	Master volume.	N
cg	Object name	Master consistency group name or a list of master consistency groups.	N

Automatic failover must be enabled if it was disabled in the past. The actual state of the automatic failover, as reported in `ha_list`, depends on several factors, including the user enablement and data synchronization state. It is possible that even though automatic failover is enabled by this command, it remains inactive due to other factors.

The command requires that the HyperSwap relationship be active. It updates both peers, but must be issued only on the Master peer volume or consistency group.

Example:

```
ha_high_availability_enable vol=regular_volume
```

Output:

Command completed successfully

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **VOLUME_IS_NOT_HA**
This is not a HyperSwap volume.
- **CONS_GROUP_IS_NOT_HA**
The local consistency group does not have HyperSwap definitions.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **VOLUME_BELONGS_TO_HA_CONS_GROUP**
This volume belongs to a HyperSwap consistency group. The operation can be carried out on a volume which is not part of a consistency group, or on the consistency group itself.
- **HA_IS_NOT_OPERATIONAL**
This HyperSwap relationship is not operational. The operation cannot be carried out on a non-operational HyperSwap relationship.
- **HA_HIGH_AVAILABILITY_IS_ALREADY_ENABLED**
Automatic failover is already enabled (valid only for `ha_high_availability_enable`).
- **HA_PEER_QUORUM_WITNESS_CONFIGURATION_NOT_VERIFIED**
Connectivity between the peer and the Quorum Witness is not verified.
- **HA_REMOTE_PEER_QUORUM_WITNESS_CONFIGURATION_NOT_VERIFIED**
Connectivity between the remote peer and the Quorum Witness is not verified.

Disabling automatic failover in a HyperSwap relationship

Use the `ha_high_availability_disable` command to disable automatic failover in a HyperSwap relationship.

```
ha_high_availability_disable < vol=VolName | cg=cgName >
```

Parameters

Name	Type	Description	Mandatory
<code>vol</code>	Object name	Master volume.	N
<code>cg</code>	Object name	Master consistency group name or a list of master consistency groups.	N

The user may choose to disable automatic failover and thereby prevent it in some maintenance scenarios, notably when the Quorum Witness is being replaced.

The command updates both peers, but must be issued only on the Master peer volume or consistency group.

Example:

```
ha_high_availability_disable vol=regular_volume
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **VOLUME_IS_NOT_HA**
This is not a HyperSwap volume.
- **CONS_GROUP_IS_NOT_HA**
The local consistency group does not have HyperSwap definitions.
- **TARGET_NOT_CONNECTED**

There is currently no connection to the target system.

- **REMOTE_TARGET_NOT_CONNECTED**

There is currently no connection from the target system.

- **LOCAL_PEER_IS_NOT_MASTER**

The local peer is not primary.

- **VOLUME_BELONGS_TO_HA_CONS_GROUP**

This volume belongs to a HyperSwap consistency group. The operation can be carried out on a volume which is not part of a consistency group, or on the consistency group itself.

- **HA_IS_NOT_OPERATIONAL**

This HyperSwap relationship is not operational. The operation cannot be carried out on a non-operational HyperSwap relationship.

- **HA_HIGH_AVAILABILITY_IS_ALREADY_DISABLED**

Automatic failover is already disabled (valid only for `ha_high_availability_disable`).

Converting a HyperSwap relationship into a sync mirror

Use the `ha_convert_into_mirror` command to change a HyperSwap relationship into a sync mirror.

```
ha_convert_into_mirror < vol=VolName | cg=cgName >
```

Parameters

Name	Type	Description	Mandatory
<code>vol</code>	Object name	Master volume.	N
<code>cg</code>	Object name	Master consistency group name or a list of master consistency groups.	N

Pre-requisites:

- The Slave volume is not mapped
- The local peer role is Master
- If carried out on a Slave volume, the HyperSwap connectivity must be down (verified with the `target_list` command)

The operation modifies the Slave volume SCSI identity. The change affects the WWN and the serial, while the volume name, external ID, and metadata remain unchanged.

Once the HyperSwap relationship is converted into a sync mirror, it will no longer be retrieved by the `ha_list` command. Instead, it will appear in the output of the `mirror_list` command.

Example:

```
ha_convert_into_mirror vol=regular_volume
```

Output:

Command completed successfully

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **VOLUME_IS_NOT_HA**
This is not a HyperSwap volume.
- **CONS_GROUP_IS_NOT_HA**
The local consistency group does not have HyperSwap definitions.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **SLAVE_VOLUME_IS_MAPPED**
The secondary volume is mapped.
- **VOLUME_BELONGS_TO_HA_CONS_GROUP**
This volume belongs to a HyperSwap consistency group. The operation can be carried out on a volume which is not part of a consistency group, or on the consistency group itself.
- **HA_IS_NOT_OPERATIONAL**
This HyperSwap relationship is not operational. The operation cannot be carried out on a non-operational HyperSwap relationship.

Converting a sync mirror into a HyperSwap relationship

Use the `mirror_convert_into_ha` command to change a sync mirror into a HyperSwap relationship.

```
mirror_convert_into_ha < vol=VolName | cg=cgName >
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	Master volume.	N
cg	Object name	Master consistency group name or a list of master consistency groups.	N

Prerequisites:

- The remote volume is not mapped
- The mirror is a sync mirror
- The local mirror is the Master
- The target connectivity is active and sufficient for HyperSwap (verified with the **target_list** command)
- The peers are connected to a properly configured and active Quorum Witness
- Both volumes have the same name

The command is issued on the Master peer and affects both peers, that are converted to HyperSwap at the same time. The HyperSwap functionality requires certain configuration elements, such as Quorum Witness, and will fail if they do not exist or are not in the required state.

Once the command has successfully completed, the relationship will no longer be retrieved by the **mirror_list** command, but rather by the **ha_list** command.

The conversion process usually continues after the command completion event has been issued. While it continues, the indication of the high availability activation state *Automatic Failover is Inactive*, because metadata is still not synchronized. Once the conversion has completed, the HyperSwap volume can be mapped from the remote system and the new mapping can be used to perform I/O to that volume.

Example:

```
mirror_convert_into_ha vol=regular_volume
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **BAD_REMOTE_VOLUME_NAME**
The secondary volume name does not exist.

- **CONS_GROUP_BAD_NAME**
The consistency group name does not exist.
- **VOLUME_NO_MIRROR**
The local volume does not have remote mirroring definitions.
- **CONS_GROUP_NO_MIRROR**
The local consistency group does not have remote mirroring definitions.
- **MIRROR_IS_STANDBY**
The mirror is marked as Standby.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **SLAVE_VOLUME_IS_MAPPED**
The secondary volume is mapped.
- **VOLUME_BELONGS_TO_MIRRORED_CONS_GROUP**
The volume mirror is part of a consistency group mirror.
- **TARGET_HAS_NO_QUORUM_WITNESS**
The local target does not have a quorum witness defined.
- **REMOTE_TARGET_HAS_NO_QUORUM_WITNESS**
The target on the remote system does not have a quorum witness defined.
- **HA_LOCAL_PEER_HAS_NO_QUORUM_WITNESS_CONNECTIVITY**
The local peer connectivity to the QW is not operational.
- **HA_INCOMPATIBLE_TARGET_VERSION**
The automatic failover is not supported between the system versions of the specified peers.
- **MIRROR_TYPE_IS_NOT_SYNC**
Mirror type is not Sync Best Effort.
- **MIRROR_IS_NON_OPERATIONAL**
The mirror is non-operational.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **REMOTE_MAX_HA_REACHED**
The maximum number of HyperSwap relationships is already reached on the remote machine.
- **LOCAL_MAX_HA_REACHED**
The maximum number of HyperSwap relationships is already reached on the local machine.
- **VOLUME_HAS_OLVM**
An IBM Hyper-Scale Mobility relationship is defined for this volume.
- **VOLUME_HAS_HA**
This operation is forbidden on a volume with a HyperSwap relationship.
- **MAX_NUM_OF_PROXY_VOLUME_REACHED**

Failed to create a mirror, because the maximum number of proxy volumes is exceeded.

- **TARGET_VOLUME_HAS_OLVM**
This target volume is part of an IBM Hyper-Scale Mobility relationship.
- **TARGET_VOLUME_HAS_HA**
This operation is forbidden, if the target volume is a peer in a HyperSwap relationship.
- **REMOTE_MAX_METADATA_OBJECTS_REACHED**
The maximum number of metadata objects has been reached on a remote system.
- **LOCAL_AND_REMOTE_VOLUME_NAMES_ARE_DIFFERENT**
Local and remote volume names are different.
- **HA_TARGET_QUORUM_WITNESS_IS_NOT_ACTIVATED**
The quorum witness associated with the target is deactivated.
- **TARGET_PEER_NOT_HEALTHY**
The target peer is not identified as healthy.
Troubleshooting: Check the Quorum Witness configuration.
- **HA_CONNECTIVITY_NOT_SUFFICIENT**
The connectivity between the systems is not sufficient for the automatic failover.
- **HA_PEER_QUORUM_WITNESS_CONFIGURATION_NOT_VERIFIED**
Connectivity between the peer and the Quorum Witness is not verified.
- **HA_REMOTE_PEER_QUORUM_WITNESS_CONFIGURATION_NOT_VERIFIED**
Connectivity between the remote peer and the Quorum Witness is not verified.
- **HOST_TYPE_IS_NOT_CONFIGURED**
Cannot associate a HyperSwap volume with a host of unconfigured type.
IMPORTANT: Please read the HyperSwap chapter in the 'Best Practice' document to understand the solution requirements.

Creating a new Quorum Witness

Use the **quorum_witness_define** command to create a new Quorum Witness definition in the system and connect the system to the Quorum Witness.

```
quorum_witness_define name=qw_name certificate=qw_certificate address=qw_address
[ port=qw_port ] [ activate=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
name	Object name	The name of the Quorum Witness to be created.	Y	N/A
certificate	N/A	The public certificate of the Quorum Witness.	Y	N/A
address	N/A	The Quorum Witness address: IPv4, IPv6 (full format only) or DNS name.	Y	N/A

Name	Type	Description	Mandatory	Default
port	Positive integer	The port used for Quorum Witness communications.	N	8460
activate	Boolean	Defines whether to activate the Quorum Witness upon creation.	N	yes

This command defines a Quorum Witness to be used for HyperSwap relationships. Up to two Quorum Witness instances may be defined. Setting the **activate** parameter to *yes* will also activate the Quorum Witness and start the communication between the system and the Quorum Witness.

Example:

```
quorum_witness_define name=q1 certificate="Certificate" address=195.7.15.2
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **QUORUM_WITNESS_NAME_ALREADY_EXISTS**
The quorum witness name already exists.
- **QUORUM_WITNESS_ADDRESS_ALREADY_EXISTS**
The quorum witness IPv4/6 address or DNS name with same port number already exists.
Troubleshooting: Use the already configured quorum witness or change the address or port number.
- **QUORUM_WITNESS_MISSING_SERVICE_CERTIFICATE**
No valid certificate is defined for the quorum witness service.
Troubleshooting: Use PKI commands to define the certificate for the quorum witness service.
- **MAX_QUORUM_WITNESSES_REACHED**
Too many quorum witness instances are defined.
Troubleshooting: Delete one or more quorum witness instances and then try again.
- **MAX_ACTIVE_QUORUM_WITNESSES_REACHED**

The maximum number of active quorum witness instances is already reached.

Troubleshooting: Deactivate an active quorum witness and then try again.

- **SSL_CERTIFICATE_HAS_EXPIRED**
The SSL certificate has expired.
- **SSL_CERTIFICATE_ISSUER_NOT_FOUND**
The SSL certificate issuer was not found in the certificate chain.
- **SSL_CERTIFICATE_INVALID_FORMAT**
The SSL certificate format is invalid or corrupted.
- **SSL_CERTIFICATE_CHAIN_EMPTY**
No certificates were found in the input.
- **SSL_CERTIFICATE_VERIFICATION_INTERNAL_ERROR**
The SSL certificate verification has failed because of an internal system error.
- **SSL_CERTIFICATE_VERIFICATION_FAILED**
The SSL certificate chain verification failed.
- **SSL_CERTIFICATE_NOT_YET_VALID**
The SSL certificate is not yet valid.

Listing Quorum Witnesses

Use the **quorum_witness_list** command to list all Quorum Witnesses defined in the system, or only the specified one.

```
quorum_witness_list [ name=qw_name ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
name	Object name	The internal name of the Quorum Witness.	N	All Quorum Witnesses
domain	Object name	The domain name.	N	All domains

The command output includes the following fields:

- **name:** The Quorum Witness internal name
- **quorum_id:** A globally unique Quorum Witness ID
- **address:** The v6 or DNS address for communicating with the Quorum Witness
- **port:** The port for communicating with the Quorum Witness
- **state:** The state of the Quorum Witness in the system. The following values are available: *Activating*, *Activated*, *Deactivating*, and *Deactivated*.
- **connection:** The state of the connection with the Quorum Witness, accumulated across all Quorum Node connection statuses.
- **external_name:** The Quorum Witness external name
- **db_health:** The state of the Quorum Witness DB health. The following values are available:

Value	Meaning
OK	
Recovery needed	A problem was identified in the Quorum Witness DB, that prevents it from operating properly.

Value	Meaning
Restore pending	The Quorum Witness DB was initialized. Once the Quorum Witness is activated, the system will automatically re-register to the Quorum Witness, and restore the information pertaining to its HyperSwap relationships.

The following optional fields can be listed by explicitly specifying the proper columns:

- **heartbeats_ok**: Indicates whether heartbeats between the system and the Quorum Witness are properly sent and received
- **secure_connection**: The state of the security established on the connection. The possible values are:

Value	Meaning
None	Security is disabled on the Quorum Witness connectivity.
Verified	The connection security is verified.
Unauthorized	The system certificate was rejected by the Quorum Witness.

- **version**: The Quorum Witness software version
- **id**
- **certificate**
- **db_init**: The timestamp (in mono-time) of the last DB initialization
- **first_event_id**: The ID of the first relevant event
- **last_event_id**: The ID of the last relevant event

Example:

```
quorum_witness_list name=q1
```

Output:

```
Name      ID          Address    Port  State    Connection  External Name
-----
q1        quorum_witness_id  195.7.15.2  4567  Activated  Up          quorum_witness

Cont.:
Db Health
-----
OK
```

Field ID	Field output	Default position
name	Name	1
quorum_id	ID	2
address	Address	3
port	Port	4
state	State	5
connection	Connection	6
external_name	External Name	7
db_health	Db Health	8

Field ID	Field output	Default position
heartbeats_ok	Heartbeating	N/A
use_secure	Use Secure	N/A
secure_connection	Secure Connection	N/A
version	Version	N/A
id	ID	N/A
certificate	Certificate	N/A
db_init	DB Init	N/A
first_event_id	First Event Id	N/A
last_event_id	Last Event Id	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Updating a Quorum Witness definition

Use the `quorum_witness_update` command to update a Quorum Witness definition.

```
quorum_witness_update name=qw_name [ certificate=new_qw_certificate ]
[ address=new_qw_address ] [ port=new_qw_port ]
```

Parameters

Name	Type	Description	Mandatory	Default
name	Object name	The Quorum Witness internal name.	Y	N/A
certificate	N/A	A new public certificate of the Quorum Witness.	N	Current value.
address	N/A	The Quorum Witness address: IPv4, IPv6 (full format only) or DNS name.	N	Current value.
port	Positive integer	A new communication port of the Quorum Witness.	N	Current value.

As a prerequisite for successfully completing this command, the Quorum Witness must be deactivated.

Example:


```
quorum_witness_update name=q1 address=192.6.10.7
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **QUORUM_WITNESS_BAD_NAME**
The quorum witness name does not exist.
- **QUORUM_WITNESS_ADDRESS_ALREADY_EXISTS**
The quorum witness IPv4/6 address or DNS name with same port number already exists.
Troubleshooting: Use the already configured quorum witness or change the address or port number.
- **CANT_UPDATE_ACTIVATED_QUORUM_WITNESS**
Cannot update an activated quorum witness.
- **SSL_CERTIFICATE_HAS_EXPIRED**
The SSL certificate has expired.
- **SSL_CERTIFICATE_ISSUER_NOT_FOUND**
The SSL certificate issuer was not found in the certificate chain.
- **SSL_CERTIFICATE_INVALID_FORMAT**
The SSL certificate format is invalid or corrupted.
- **SSL_CERTIFICATE_CHAIN_EMPTY**
No certificates were found in the input.
- **SSL_CERTIFICATE_VERIFICATION_INTERNAL_ERROR**
The SSL certificate verification has failed because of an internal system error.
- **SSL_CERTIFICATE_VERIFICATION_FAILED**
The SSL certificate chain verification failed.
- **SSL_CERTIFICATE_NOT_YET_VALID**
The SSL certificate is not yet valid.

Renaming a Quorum Witness

Use the `quorum_witness_rename` command to rename a Quorum Witness.

```
quorum_witness_rename name=qw_name new_name=qw_new_name
```

Parameters

Name	Type	Description	Mandatory
name	Object name	The Quorum Witness internal name.	Y
new_name	Object name	A new internal name of the Quorum Witness.	Y

Example:

```
quorum_witness_rename name=q1 new_name=q2
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **QUORUM_WITNESS_BAD_NAME**
The quorum witness name does not exist.
- **QUORUM_WITNESS_NAME_ALREADY_EXISTS**
The quorum witness name already exists.

Deleting a Quorum Witness

Use the **quorum_witness_delete** command to delete a Quorum Witness.

```
quorum_witness_delete name=qw_name
```

Parameters

Name	Type	Description	Mandatory
name	Object name	The Quorum Witness internal name.	Y

The command can be issued only for a Quorum Witness that is not in use (attached to any target) and is deactivated or is being deactivated, that is its state is *Deactivated* or *Deactivating*.

Example:

```
quorum_witness_delete name=q1 -y
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_QUORUM_WITNESS**
Are you sure you want to delete quorum witness *Quorum Witness*?

Return codes

- **QUORUM_WITNESS_BAD_NAME**
The quorum witness name does not exist.
- **CANT_DELETE_AN_ACTIVATED_QUORUM_WITNESS**
Cannot delete an activated quorum witness.
Troubleshooting: Deactivate the quorum witness and then try again.
- **CANT_DELETE_QUORUM_WITNESS_IN_USE**
Cannot delete a quorum witness when it is in use by a target.

Activating a Quorum Witness

Use the **quorum_witness_activate** command to activate a Quorum Witness.

```
quorum_witness_activate name=qw_name
```

Parameters

Name	Type	Description	Mandatory
name	Object name	The Quorum Witness internal name.	Y

This commands activates a Quorum Witness and starts heartbeat and status communication between the system and the Quorum Witness. The command is asynchronous, its completion is tracked by return codes.

Example:

```
quorum_witness_activate name=q1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **MAX_ACTIVE_QUORUM_WITNESSES_REACHED**
The maximum number of active quorum witness instances is already reached.
Troubleshooting: Deactivate an active quorum witness and then try again.
- **QUORUM_WITNESS_BAD_NAME**
The quorum witness name does not exist.
- **QUORUM_WITNESS_IS_ALREADY_ACTIVE**
The quorum witness is already active or is being activated.
Troubleshooting: Wait for the activation process to complete. If this issue persists, contact IBM Support.
- **QUORUM_WITNESS_MISSING_SERVICE_CERTIFICATE**
No valid certificate is defined for the quorum witness service.
Troubleshooting: Use PKI commands to define the certificate for the quorum witness service.
- **SSL_CERTIFICATE_HAS_EXPIRED**
The SSL certificate has expired.

Deactivating a Quorum Witness

Use the **quorum_witness_deactivate** command to deactivate a Quorum Witness.

```
quorum_witness_deactivate name=qw_name
```

Parameters

Name	Type	Description	Mandatory
name	Object name	The Quorum Witness internal name.	Y

This commands deactivates a Quorum Witness and stops the heartbeat and status communication between the system and the Quorum Witness. It is not allowed to deactivate a Quorum Witness that is in use by an active HyperSwap relationship.

Example:

```
quorum_witness_deactivate name=q1 -y
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DEACTIVATE_QUORUM_WITNESS**
Are you sure you want to deactivate quorum witness *Quorum Witness*?

Return codes

- **QUORUM_WITNESS_BAD_NAME**
The quorum witness name does not exist.
- **QUORUM_WITNESS_IS_ALREADY_INACTIVE**
The quorum witness is already inactive or is being deactivated.
Troubleshooting: Wait for the deactivation process to complete. If this issue persists, contact IBM Support.
- **CANT_DEACTIVATE_QUORUM_WITNESS_IN_USE**
Cannot deactivate a quorum witness that is in use by a target with an active HyperSwap relationship.

Listing the Quorum Witness connection status

Use the **quorum_witness_connections_list** command to list the status of the connection with the Quorum Witness.

```
quorum_witness_connections_list [ name=qw_name ] [ module=module_id ]
```

Parameters

Name	Type	Description	Mandatory	Default
name	Object name	The internal name of the Quorum Witness to be listed.	N	All Quorum Witness connections.
module	N/A	The ID of the module to be listed.	N	All modules to which the Quorum Witness is connected.

The command output includes the following fields:

- **module_id**: The ID of the module to which the Quorum Witness is connected.
- **name**: The Quorum Witness internal name
- **connection**: The state of the connection with the Quorum Witness. The possible connection values are:

Value	Meaning
Connected	A Quorum Node is successfully connected to the Quorum Witness.
Failed to initialize	HTTP connection initialization failed.
Malformed URL	
Cannot resolve the proxy address	
Cannot resolve the host address	
Cannot connect to peer	
HTTP communication error	
Out of memory	
Connection timeout	The Quorum Witness may be down or the address/port pair is incorrect.
HTTP Post communication error	
Secure connection issue	See details in the secure_connection field below.
Too many redirects	
Bad content encoding	
Transient error	
Failed to chunk data	
Quorum node has failed	

- **secure_connection**: The state of the security established on the connection. The possible **secure_connection** values are::

Value	Meaning
None	Security is disabled on the Quorum Witness connectivity.
Verified	The connection security is verified.
Unauthorized	The system certificate was rejected by the Quorum Witness.
General SSL/TLS failure	
Peer verification failed	
Problem with local certificate	
Secure cipher error	
CA certificate is unusable	The provided Quorum Witness certificate is incorrect.
Failed initializing secure communication	
Could not load CACERT file, missing or wrong format	
Failed to shut down the SSL/TLS connection	
Could not load CRL file, missing or wrong format	
Issuer check failed	

- **heartbeating**: Indicates whether the module heartbeats are successfully processed by the Quorum Witness.

Example:

```
quorum_connection_list name=q1 module=1:Module:3
```

Output:

```
Module ID   Name   Connection   Secure Connection   Heartbeating
-----
1:Module:3  q1     Connected    Verified             yes
```

Field ID	Field output	Default position
module_id	Module ID	1
name	Name	2
connection	Connection	3
secure_connection	Secure Connection	4
heartbeats_ok	Heartbeating	5

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Getting Quorum Witness information

Use the **quorum_witness_info_get** command to get Quorum Witness information from a Quorum Witness.

```
quorum_witness_info_get name=qw_name
```

Parameters

Name	Type	Description	Mandatory
name	Object name	The Quorum Witness internal name.	Y

The command output includes the following fields:

- **internal_name**: The Quorum Witness internal name
- **quorum_id**: A globally unique Quorum Witness ID
- **name**: The Quorum Witness external name
- **version**: The Quorum Witness software version

The following optional fields can be listed by explicitly specifying the proper columns:

- **db_state**: JSON string (up to 256 bytes), representing the DB disk usage

- **host_info**: The type and the version of the host's operating system, on which the Quorum Witness is running
- **protocol**: The protocol version
- **network_load**: JSON string (up to 128 bytes), representing the count of connections and requests
- **cpu_load**: JSON string (up to 128 bytes), representing the CPU consumption percentage
- **last_event_id**: The ID of the last relevant event
- **db_init**: The timestamp (in mono-time) of the last DB initialization

Example:

```
quorum_witness_info_get name=q1
```

Output:

```
Name ID External Name Version
-----
q1 7f2f35834fea48b6b335aa09fd9179ae FVT-QW104 1.0.0
```

Field ID	Field output	Default position
internal_name	Name	1
quorum_id	ID	2
name	External Name	3
version	Version	4
db_state	DB state	N/A
host_info	Host	N/A
protocol	Protocol Version	N/A
network_load	Network Load	N/A
cpu_load	CPU Load	N/A
last_event_id	Last Event ID	N/A
db_init	DB Initialization Timestamp	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **QUORUM_WITNESS_BAD_NAME**
The quorum witness name does not exist.
- **QUORUM_WITNESS_RESPONSE_TIMEOUT**
No response from quorum witness *Quorum Witness* within the designated timeout period.

Chapter 12. Data migration commands

This section describes the command-line interface (CLI) for data migration.

Activating data migration

Use the **dm_activate** command to activate the data migration process.

```
dm_activate vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	The destination volume for data migration activation.	Y

This command activates the data migration process. This is either an initial activation or an activation after deactivation.

Upon activation, the data migration is tested in the same way as when using **dm_test** (see Testing the data migration definition), and this command fails if the data migration test fails.

This command has no effect if the process is already active.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_DM**
The local volume does not have Data Migration definitions.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_VOLUME_NO_LUN**
The remote volume's LUN is unavailable.
- **REMOTE_VOLUME_NO_READ_ACCESS**
The remote volume cannot be read.

- **REMOTE_VOLUME_NO_WRITE_ACCESS**
The remote volume is write-protected.
- **BAD_REMOTE_VOLUME_SIZE**
The primary and secondary volumes contain a different number of blocks.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Deactivating data migration

Use the **dm_deactivate** command to deactivate the data migration process.

```
dm_deactivate vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	The local volume on which the data migration process is to be deactivated.	Y

Hosts are not served while the data migration process is inactive.

This command has no effect if the data migration process is already inactive.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DEACTIVATE_DATA_MIGRATION**
Deactivation will stop all applications. After deactivation, data migration can be deleted.
- **ARE_YOU_SURE_YOU_WANT_TO_DEACTIVATE_SOURCE_UPDATING_DATA_MIGRATION**
Deactivation may cause loss of access to hosts, and will stop all applications. After deactivation, data migration can be deleted.

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_DM**
The local volume does not have Data Migration definitions.
- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

Defining data migration configuration

Use the **dm_define** command to define a data migration configuration.

```
dm_define vol=VolName target=TargetName lun=SourceLUN  
source_updating=<yes|no> [ create_vol=<yes|no> ] [ pool=PoolName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Data migration destination volume on the local system.	Y	N/A
target	Object name	Remote system containing the source volume.	Y	N/A
lun	Integer	LUN of the source volume.	Y	N/A
source_updating	Boolean	Specifies whether to use source volume updating.	Y	N/A
create_vol	Boolean	A Boolean that determines whether to create a new volume or to use an existing one.	N	No
pool	Object name	Name of the storage pool to contain the volume. Used only when creating a volume. Mandatory when creating a volume.	N	N/A

This command defines a data migration relationship between a local volume and a remote volume. According to this definition, the local volume should reflect the remote volume.

After this configuration has been defined, it can be tested using the **dm_test** command (see Testing the data migration definition) and then activated using the **dm_activate** command (see Activating data migration). After this activation, hosts can read and write to this volume, and these operations are reflected on the remote volume.

The remote volume may be inaccessible when the command is executed. In this case, the definition is only used when data migration is tested.

The local system acts as a host to the remote system. The remote system should be configured to make the remote volume accessible to the local system through the specified LUN.

If **source updating** is specified, each write to the local volume is reflected as a write to the remote volume. Otherwise, writes on the local volume are not reflected and the remote volume is not changed.

The local volume must be formatted.

If **create_vol** is set to *yes*, the volume is created. In this case the size of the newly created volume is identical to the size of the source volume. When creating a volume, a pool name must be specified. Creating a volume fails if there is no connectivity to the target since the volume's size is unknown.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **VOLUME_SIZE_VERY_LARGE_ARE_YOU_SURE**

The volume size is very large. It may not be possible to mirror this volume to older versions of the storage system. Are you sure?

Return codes

- **VOLUME_BAD_NAME**

The volume name does not exist.

- **TARGET_BAD_NAME**

The target name does not exist.

- **VOLUME_IS_SNAPSHOT**

The operation is not permitted on snapshots.

- **VOLUME_HAS_MIRROR**

A mirror is defined for this volume.

- **VOLUME_BELONGS_TO_CG**

The volume belongs to a consistency group.

- **VOLUME_HAS_DATA_MIGRATION**

Data Migration is defined for this volume.

- **VOLUME_HAS_SNAPSHOTS**

The volume has snapshots.

- **VOLUME_NOT_FORMATTED**

The local volume is not formatted.

- **VOLUME_EXISTS**

The volume name already exists.

- **POOL_DOES_NOT_EXIST**

The storage pool does not exist.

- **VOLUME_BAD_PREFIX**

The volume name has a reserved prefix.

- **NOT_ENOUGH_SPACE**
No space to allocate for the volume's current usage.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **REMOTE_VOLUME_NO_LUN**
The remote volume's LUN is unavailable.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **VOLUME_CANNOT_HAVE_ZERO_SIZE**
The volume size cannot be zero.
- **ILLEGAL_LUN**
The LUN is out of range.
- **TARGET_IS_MIRRORING**
The target machine is defined for remote mirroring only.
- **NO_ONLINE_MIGRATION_WITHOUT_SOURCE_UPDATING**
Data migration without automatic migration must be defined as a source update.
- **MIGRATION_ALREADY_DEFINED_FOR_LUN**
Data migration is already defined from lun *LUN* of target '*Target*'.
- **VOLUME_SIZE_ABOVE_LIMIT**
The specified volume size is above the limit.
- **INVALID_SLICE_OFFSET**
Slice offset is illegal.
- **ENCRYPTION_IN_PROGRESS**
The system is in the process of changing the encryption activation state.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **MAX_DMS_REACHED**
The maximum number of remote volumes (mirror/migration) is already reached.
Troubleshooting: Delete unnecessary Data Migration objects.
- **DOMAIN_MAX_DMS_REACHED**
The domain exceeds the maximum allowed number of data migrations.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **VOLUME_TOO_BIG**
No space to allocate to the volume.

Deleting a data migration process

Use the **dm_delete** command to delete a data migration process.

```
dm_delete vol=VolName
```

Parameters

Name	Type	Description	Mandatory	
vol	Object name	The name of the volume whose data migration process is to be deleted.	Y	
force_delete	Boolean	When set to <i>yes</i> , forces the deletion even if data migration is not complete.	N	no

This command stops the data migration process and deletes its configuration. After deleting a data migration process, the local volume must be explicitly deleted manually.

Using the **force_delete** parameter

The **force_delete** parameter allows deleting a data migration process in any synchronization state. This is mostly necessary if the data migration configuration is incorrect: a wrong source volume is selected or the defined volume (block) size is unsuitable.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_DM**
The local volume does not have Data Migration definitions.
- **DM_IS_NOT_SYNCHRONIZED**
The data migration process has not been completed.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **DM_OPERATION_NOT_ALLOWED_NEITHER_SOURCE_NOR_TARGET_CONTAIN_FULL_DATA**
Data Migration was set up without source update and synchronization has not completed yet. As a result, neither the source volume nor the target volume contains a full image of the data.

Listing data migration statuses

Use the **dm_list** command to list data migration configuration and status.

```
dm_list [ vol=VolName ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	The name of the volume to be listed.	N	All data migration volumes.
domain	Object name	The domain name.	N	All Domains

This command lists all data migration configuration and statuses, including the following information:

- Volume name
- Target name
- LUN
- Volume size (GB)
- Migration completed (GB)
- Migration activation (active/inactive)
- Migration status (synchronized, unsynchronized)
- Migration remaining (GB)
- Migration remaining (%)
- Estimated time to completion

Field ID	Field output	Default position
local_volume_name	Local Volume	1
target_name	Remote System	2
remote_volume_lun	Remote LUN	3
active	Active	4
sync_state	Status	5
connected	Target Connected	6
size_to_synchronize	Size To Sync (MiB)	N/A
operational	Operational	N/A
sync_progress	Sync Progress (%)	N/A
start_migration_automatically	Start Data Migration Automatically	N/A
arch	Remote Arch	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed

User Category	Permission
Technicians	Disallowed

Testing the data migration definition

Use the **dm_test** command to test the data migration configuration.

```
dm_test vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	Destination volume for data migration testing.	Y

Command return codes indicate the types of test failures that may occur. Once a test is successful, then data migration can be activated.

If source updating is not defined for this data migration, the writing is not tested.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NO_DM**
The local volume does not have Data Migration definitions.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_VOLUME_NO_LUN**
The remote volume's LUN is unavailable.
- **REMOTE_VOLUME_NO_READ_ACCESS**
The remote volume cannot be read.
- **REMOTE_VOLUME_NO_WRITE_ACCESS**
The remote volume is write-protected.
- **BAD_REMOTE_VOLUME_SIZE**
The primary and secondary volumes contain a different number of blocks.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Chapter 13. IBM Hyper-Scale Mobility commands

This section describes the command-line interface (CLI) for IBM Hyper-Scale Mobility.

Creating an IBM Hyper-Scale Mobility relation

Use the **olvm_create** command to define an IBM Hyper-Scale Mobility configuration.

```
olvm_create < vol=VolName remote_pool=RemotePoolName > target=TargetName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	An IBM Hyper-Scale Mobility volume on the local system.	Y
target	Object name	Remote system containing the destination volume.	Y
remote_pool	Object name	Name of the storage pool to contain the destination volume.	Y

This command creates an IBM Hyper-Scale Mobility relation through identifying the source volume and the destination system and storage pool.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **VOLUME_SIZE_VERY_LARGE_ARE_YOU_SURE**

The volume size is very large. It may not be possible to mirror this volume to older versions of the storage system. Are you sure?

Return codes

- **VOLUME_NOT_APPLICABLE_FOR_OLVM**

The volume is not applicable to IBM Hyper-Scale Mobility.

- **VOLUME_BAD_NAME**

The volume name does not exist.

- **VOLUME_IS_SNAPSHOT**

The operation is not permitted on snapshots.

- **TARGET_BAD_NAME**
The target name does not exist.
- **VOLUME_IS_MASTER**
This local volume is already defined as a primary volume.
- **TARGET_BAD_TYPE**
The target machine is not an XIV machine.
- **TARGET_NO_ACCESS**
No access permissions to the secondary machine.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **MAX_MIGRATIONS_REACHED**
The maximum number of migrations is already reached.
- **REMOTE_MAX_MIGRATIONS_REACHED**
The maximum number of migrations is already reached on the remote machine.
- **REMOTE_POOL_DOES_NOT_EXIST**
The pool does not exist on the remote machine.
- **BAD_REMOTE_VOLUME_SIZE**
The primary and secondary volumes contain a different number of blocks.
- **NOT_ENOUGH_SPACE_ON_REMOTE_MACHINE**
Not enough free space to set the requested size of the secondary volume.
- **REMOTE_VOLUME_EXISTS**
The secondary volume with the indicated name already exists. The name cannot be reused.
- **REMOTE_VOLUME_IS_MASTER**
A volume on the remote machine is already defined as primary.
- **REMOTE_VOLUME_IS_SLAVE**
A volume on the remote machine is already defined as secondary.
- **REMOTE_MAX_VOLUMES_REACHED**
The maximum number of volumes on the remote machine is already reached.
- **TIMEOUT**
A remote operation was not completed in time.
- **VOLUME_BAD_PREFIX**
The volume name has a reserved prefix.
- **REMOTE_VOLUME_HAS_DATA_MIGRATION**
Data migration is already defined for the secondary volume.
- **VOLUME_HAS_OLVM**
An IBM Hyper-Scale Mobility relationship is defined for this volume.
- **VOLUME_HAS_HA**
This operation is forbidden on a volume with a HyperSwap relationship.
- **TARGET_VOLUME_HAS_OLVM**
This target volume is part of an IBM Hyper-Scale Mobility relationship.
- **TARGET_VOLUME_HAS_HA**

This operation is forbidden, if the target volume is a peer in a HyperSwap relationship.

- **REMOTE_VOLUME_LOCKED**
The secondary volume is locked.
- **VOLUME_HAS_MIRRORING_SNAPSHOTS**
The volume has snapshots created by a previous mirroring process.
- **REMOTE_MAX_MIRROR_CAPACITY_REACHED**
The maximum capacity for mirrored volumes is already reached on the remote machine.
- **TARGET_DOES_NOT_ACCEPT_XIV_COMMANDS**
The target system does not accept XIV management commands.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **VOLUME_LOCKED**
The volume is locked.
- **NO_ASYNC_IN_THIN_PROVISIONED_POOL**
A thin-provisioned pool cannot contain volumes with asynchronous mirroring.
- **BAD_REMOTE_VOLUME_NAME**
The secondary volume name does not exist.
- **REMOTE_VOLUME_SIZE_ABOVE_LIMIT**
The specified volume size is above the limit of the remote machine.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **ELECTRONIC_LICENSE_NOT_APPROVED**
Operation blocked until Electronic license approval
Troubleshooting: Please retrieve Electronic license version and accept it
- **VOLUME_NOT_FORMATTED**
The local volume is not formatted.
- **MIRROR_TYPE_INCOMPATIBLE_WITH_TARGET**
A mirror of this type is not supported between the system versions of the specified peers.
- **VOLUME_TOO_BIG**
No space to allocate to the volume.
- **VOLUME_SIZE_ABOVE_LIMIT**
The specified volume size is above the limit.
- **INVALID_SLICE_OFFSET**
Slice offset is illegal.
- **VOLUME_IS_OLVM_PROXY**
The volume is in an IBM Hyper-Scale Mobility Proxy phase.
- **VOLUME_IS_SLAVE**
The volume is defined as a secondary volume.
- **REMOTE_VOLUME_IS_SNAPSHOT**
The secondary volume is a snapshot.
- **VOLUME_EXISTS**

The volume name already exists.

- **SLAVE_VOLUME_NOT_FORMATTED**
The secondary volume is not formatted.
- **VOLUME_BELONGS_TO_CG**
The volume belongs to a consistency group.
- **VOLUME_HAS_DATA_MIGRATION**
Data Migration is defined for this volume.
- **MAX_MIRRORS_REACHED**
The maximum number of mirrors is already reached.
- **VOLUME_CANNOT_HAVE_ZERO_SIZE**
The volume size cannot be zero.
- **ASYNC_MIRROR_REMOTE_RPO_TOO_SHORT**
The specified remote RPO is too short.
- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **REMOTE_VOLUME_NOT_APPLICABLE_FOR_OLVM**
The remote volume is not applicable to IBM Hyper-Scale Mobility.
- **REMOTE_SCHEDULE_DOES_NOT_EXIST**
The specified schedule does not exist on the remote machine.
- **OLVM_DOES_NOT_SUPPORT_ISCSI_TARGET**
IBM Hyper-Scale Mobility does not support iSCSI targets.
- **ASYNC_MIRROR_REMOTE_RPO_TOO_LONG**
The specified remote RPO is too long.
- **OPERATION_DENIED_OBJECT_MANAGED**
This is a managed object. Only the managing software and `xiv_maintenance / xiv_development` may perform this operation on this object.
- **ENCRYPTION_IN_PROGRESS**
The system is in the process of changing the encryption activation state.
- **MAX_OLVM_REACHED**
The maximum allowed number of IBM Hyper-Scale Mobility relationships is already reached.
- **DOMAIN_MAX_MIRRORS_REACHED**
The domain exceeds the maximum allowed number of mirrors.
- **REMOTE_DOMAIN_MAX_MIGRATIONS_REACHED**
The maximum number of migrations is already reached in the remote machine domain.
- **DOMAIN_HAS_NO_ACCESS_TO_TARGET**
The domain has no access to the target.
- **REMOTE_DOMAIN_HAS_NO_ACCESS_TO_TARGET**
The secondary machine domain has no access to the target.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **REMOTE_DOMAIN_MAX_VOLUMES_REACHED**
The maximum number of volumes in the remote machine domain is already reached.
- **REMOTE_VOLUME_TWO_SYNC_MIRRORS_NOT_ALLOWED**

Two synchronous mirrors were detected on the remote volume. This is not allowed.

- **REMOTE_VOLUME_IS_MIRROR_MASTER**

The volume is primary in a mirror relationship, and cannot be secondary!

- **REMOTE_VOLUME_MIRROR_LOOP_DETECTED**

A mirror loop was detected on the remote volume. This means that there is a mirror on the remote system, whose target is this system. Therefore, you cannot create a mirror with this target on this system.

- **REMOTE_VOLUME_MASTER_ASYNC_MIRROR_DETECTED**

An asynchronous primary mirror was detected on the remote volume. The operation not allowed.

- **REMOTE_VOLUME_HAS_MIRRORING_SNAPSHOTS**

The remote volume has snapshots created by a previous mirroring process.

- **VOLUME_HAS_MULTIPLE_MIRRORS**

The volume has multiple mirrors. The operation is not allowed, or a target must be specified.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **REMOTE_DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier of the remote system is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **SYSTEM_OUT_OF_PHYSICAL_SPACE**

The operation not allowed while the system is out of physical space.

- **REMOTE_SYSTEM_OUT_OF_PHYSICAL_SPACE**

The operation not allowed while the remote system is out of physical space.

- **TARGET_CONFIGURATION_AND_CODE_VERSION_DO_NOT_SUPPORT_OPERATION**

Target configuration and code version do not support operation.

Activating a volume migration

Use the **olvm_activate** command to activate an IBM Hyper-Scale Mobility migration for a defined an IBM Hyper-Scale Mobility relationship.

```
olvm_activate vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	IBM Hyper-Scale Mobility source volume.	Y

This command is issued on the source.

Access control

User Category	Permission
Storage administrator	Allowed

User Category	Permission
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_SOURCE_IN_THIS_STATE**
The source is in an unsupported IBM Hyper-Scale Mobility state.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **MIRROR_CONFIGURATION_ERROR**
The mirror's local configuration does not match its remote configuration.
- **MIRROR_CONS_GROUP_MEMBERSHIP_MISMATCH**
The mirrored consistency group contains different volumes on the primary and secondary machines. This problem occurs whenever the `cg_add_vol` or `cg_remove_vol` commands were previously issued, and the primary machine did not receive an acknowledgment from the secondary machine until the command timed out, or due to any other unexpected failure.
- **MIRROR_RETRY_OPERATION**
There is an operation in progress on this mirror.
Troubleshooting: Retry the command in a few seconds.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_DESTINATION_IN_THIS_STATE**
The destination is in an unsupported IBM Hyper-Scale Mobility state.
- **MIRROR_SIZE_MISMATCH**
The secondary and primary volume sizes are different.
- **REMOTE_VOLUME_IS_MASTER**
A volume on the remote machine is already defined as primary.
- **REMOTE_MAX_VOLUMES_REACHED**
The maximum number of volumes on the remote machine is already reached.
- **VOLUME_NOT_DEFINED_FOR_OLVM**
The volume does not have IBM Hyper-Scale Mobility definitions.
- **OLVM_ALREADY_ACTIVE**
The IBM Hyper-Scale Mobility relationship is already active.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **REMOTE_MIRROR_IS_STANDBY**
The remote mirror is marked as Standby.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **REMOTE_DOMAIN_MAX_VOLUMES_REACHED**

The maximum number of volumes in the remote machine domain is already reached.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **REMOTE_DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier of the remote system is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **REMOTE_SYSTEM_OUT_OF_PHYSICAL_SPACE**

The operation not allowed while the remote system is out of physical space.

Deactivating IBM Hyper-Scale Mobility migration

Use the **olvm_deactivate** command to deactivate IBM Hyper-Scale Mobility migration for a defined IBM Hyper-Scale Mobility relation.

```
olvm_deactivate vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	The source volume.	Y

This command is issued on the source.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DEACTIVATE_OLVM**

Are you sure you want to deactivate IBM Hyper-Scale Mobility?

Return codes

- **VOLUME_BAD_NAME**

The volume name does not exist.

- **REMOTE_VOLUME_IS_MASTER**

A volume on the remote machine is already defined as primary.

- **COMMAND_NOT_SUPPORTED_FOR_OLVM_SOURCE_IN_THIS_STATE**

The source is in an unsupported IBM Hyper-Scale Mobility state.

- **VOLUME_NOT_DEFINED_FOR_OLVM**

The volume does not have IBM Hyper-Scale Mobility definitions.

- **COMMAND_NOT_SUPPORTED_FOR_OLVM_DESTINATION_IN_THIS_STATE**

The destination is in an unsupported IBM Hyper-Scale Mobility state.

- **OLVM_ALREADY_INACTIVE**

The IBM Hyper-Scale Mobility relationship is already inactive.

- **REMOTE_MIRROR_IS_STANDBY**

The remote mirror is marked as Standby.

- **VOLUME_HAS_MULTIPLE_MIRRORS**

The volume has multiple mirrors. The operation is not allowed, or a target must be specified.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

Aborting a defined or activated IBM Hyper-Scale Mobility process

Use the **olvm_abort** command to abort a defined or activated IBM Hyper-Scale Mobility process.

```
olvm_abort < vol=VolName [ force_abort=<yes|no> | force_abort_on_destination=<yes|no> ] >
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	The source volume.	Y	N/A
force_abort	Boolean	Determines whether to delete an IBM Hyper-Scale Mobility relationship on the source.	N	No
force_abort_on_destination	Boolean	Determines whether to delete an IBM Hyper-Scale Mobility relationship on the destination.	N	No

This command is issued on the source and has the option to abort the IBM Hyper-Scale Mobility process either from the source or from the destination.

Once issued, the source and destination are no longer part of an IBM Hyper-Scale Mobility relationship. IBM Hyper-Scale Mobility attributes are deleted.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed

User Category	Permission
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_ABORT_OLVM_RELATIONSHIP_IN_THIS_PHASE**
Are you sure you want to abort the IBM Hyper-Scale Mobility relationship?
- **ARE_YOU_SURE_YOU_WANT_TO_FORCE_ABORT_OLVM_RELATIONSHIP_IN_THIS_PHASE**
Are you sure you want to force abort the IBM Hyper-Scale Mobility relationship?

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NOT_DEFINED_FOR_OLVM**
The volume does not have IBM Hyper-Scale Mobility definitions.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_SOURCE_IN_THIS_STATE**
The source is in an unsupported IBM Hyper-Scale Mobility state.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_DESTINATION_IN_THIS_STATE**
The destination is in an unsupported IBM Hyper-Scale Mobility state.
- **OLVM_IS_ACTIVE**
The IBM Hyper-Scale Mobility relationship is active.
- **FORCE_ABORT_NOT_ALLOWED**
A forced IBM Hyper-Scale Mobility abort is not allowed.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Moving the IBM Hyper-Scale Mobility source volume to a Proxy state

Use the **olvm_proxy** command to move the IBM Hyper-Scale Mobility source volume to a Proxy state.

```
olvm_proxy vol=VolName
```

Parameters

Name	Type	Description	Mandatory
vol	Object name	The source volume.	Y

This command moves the IBM Hyper-Scale Mobility source volume to a Proxy state where the source acts as a proxy to the destination.

The source becomes a proxy and the destination becomes the data 'owner'. Host writes are no longer written to the source and the volume data on the source is freed. The source volume and snapshot data are deleted.

This command is issued on the source.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_OLVM_PROXY**

Are you sure you want to move the volume *Volume* to the Proxy state? The source volume and all volume snapshots will be deleted.

Return codes

- **VOLUME_BAD_NAME**

The volume name does not exist.

- **COMMAND_NOT_SUPPORTED_FOR_OLVM_SOURCE_IN_THIS_STATE**

The source is in an unsupported IBM Hyper-Scale Mobility state.

- **COMMAND_NOT_SUPPORTED_FOR_OLVM_DESTINATION_IN_THIS_STATE**

The destination is in an unsupported IBM Hyper-Scale Mobility state.

- **VOLUME_NOT_DEFINED_FOR_OLVM**

The volume does not have IBM Hyper-Scale Mobility definitions.

- **OLVM_LINK_IS_NOT_UP**

The IBM Hyper-Scale Mobility link is not up. The mapping list cannot be updated.

- **OLVM_PROXY_MOVE_INITIATED**

IBM Hyper-Scale Mobility volume move to the Proxy state has started.

- **HOST_BAD_NAME**

The host name does not exist.

- **ISCSI_HOST_ILLEGAL_PORT_NAME**

The port name for iSCSI Host is illegal.

Troubleshooting: Port names for iSCSI Hosts must contain only printable characters.

- **MAX_PORTS_REACHED**

The maximum number of ports defined in the system is already reached.

- **HOST_PORT_EXISTS**

A host with this port ID is already defined.

- **REMOTE_MAX_VIRTUAL_HOSTS_REACHED**

The maximum number of defined remote virtual hosts is already reached.

- **OLVM_RETRY_OPERATION**

There is an operation in progress on this OLVM.

Troubleshooting: Retry the command in a few seconds.

- **VOLUME_HAS_MULTIPLE_MIRRORS**

The volume has multiple mirrors. The operation is not allowed, or a target must be specified.

- **MAX_METADATA_OBJECTS_REACHED**

The maximum number of metadata objects has been reached.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

Deleting an IBM Hyper-Scale Mobility relation

Use the `olvm_delete` command to delete an IBM Hyper-Scale Mobility relation and attributes.

```
olvm_delete vol=VolName [ force_delete=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>vol</code>	Object name	The volume for IBM Hyper-Scale Mobility abort.	Y	N/A
<code>force_delete</code>	Boolean	Determines whether to delete an IBM Hyper-Scale Mobility relationship on the destination.	N	No

This command is issued on the source. If there is no communication to the destination, the command can force delete the IBM Hyper-Scale Mobility relation.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_OLVM_RELATIONSHIP_IN_THIS_PHASE**

Are you sure you want to delete the IBM Hyper-Scale Mobility relationship?

- **ARE_YOU_SURE_YOU_WANT_TO_FORCE_DELETE_OLVM_RELATIONSHIP_IN_THIS_PHASE**

Are you sure you want to force delete the IBM Hyper-Scale Mobility relationship?

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **VOLUME_NOT_DEFINED_FOR_OLVM**
The volume does not have IBM Hyper-Scale Mobility definitions.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_SOURCE_IN_THIS_STATE**
The source is in an unsupported IBM Hyper-Scale Mobility state.
- **COMMAND_NOT_SUPPORTED_FOR_OLVM_DESTINATION_IN_THIS_STATE**
The destination is in an unsupported IBM Hyper-Scale Mobility state.
- **FORCE_DELETE_NOT_ALLOWED**
A forced deletion of the IBM Hyper-Scale Mobility relation is not allowed.
- **VOLUME_IS_MAPPED**
The volume mapped to a host cannot be deleted.
- **VOLUME_HAS_MULTIPLE_MIRRORS**
The volume has multiple mirrors. The operation is not allowed, or a target must be specified.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support

Listing the IBM Hyper-Scale Mobility status

Use the `olvm_list` command to list the IBM Hyper-Scale Mobility configuration and status.

```
olvm_list [ vol=VolName ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>vol</code>	Object name	The volume name to be listed.	N	Displays details for IBM Hyper-Scale Mobility relationships in the local system.
<code>domain</code>	Object name	The domain name.	N	All Domains

This command is issued on the source. The output includes the following information:

- Volume name
- Role (Source, Destination)
- Remote System
- Active (Yes, No)
- Phase (Migration, Proxy-Ready, Proxy)
- State
- Link Up

Field ID	Field output	Description	Default position
<code>name</code>	Volume name	N/A	1

Field ID	Field output	Description	Default position
role	Role	N/A	2
target_name	Remote System	N/A	3
active	Active	N/A	4
phase	Phase	N/A	5
state	State	N/A	6
connected	Link Up	N/A	7
sync_progress	Sync Progress (%)	N/A	N/A
size_to_synchronize	Size To Sync (MiB)	N/A	N/A
estimated_sync_time	Est. remaining time (sec)	N/A	N/A
mirror_error	Mirror Error	No Error, Secondary pool exhausted, Configuration error or No thin provisioning resources	N/A
arch	Remote Arch	N/A	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Chapter 14. Event handling commands

This section describes the command-line interface (CLI) for event handling, including listing events, filtering and sending notifications.

Generating a custom event

Use the **custom_event** command to generate a custom event.

```
custom_event description=Description  
[ severity=<INFORMATIONAL|WARNING|MINOR|MAJOR|CRITICAL> ]  
[ internal=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
description	String	Description of the event.	Y	N/A
severity	N/A	Severity of the event.	N	Informational
internal	Boolean	Defines whether this is an XIV internal custom event.	N	no

This command can be used to either generate an event from a user application or host side software, or to test the event notification procedures.

Example:

```
custom_event description="Test started"
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Generating a CSS product event

Use the `css_product_event` command to generate a CSS (Cloud Storage Solutions) custom event.

```
css_product_event product=Product version=Version server=Server platform=Platform
action=Action properties=Properties
[ severity=<INFORMATIONAL|WARNING|MINOR|MAJOR|CRITICAL> ]
```

Parameters

Name	Type	Description	Mandatory	Default
product	String	Product name.	Y	N/A
version	String	Version information.	Y	N/A
server	String	Server name.	Y	N/A
platform	String	Platform information.	Y	N/A
action	String	Action information.	Y	N/A
properties	String	Properties information.	Y	N/A
severity	N/A	Severity of the event.	N	Informational

This command can be used to either generate an event from a user application or host side software, or to test the event notification procedures.

Example:

```
css_product_event product=product_name version=version_info server=server_info
platform=platform_name action=action_name properties=properties_details
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Defining a new event notification destination

Use the **dest_define** command to define a new destination for event notifications.

```
dest_define
dest=DestName type=<SNMP|EMAIL|SMS|HTTPS>
< snmp_manager=SNMPManager | < uri=HTTPSaddress
[ proxy=ProxyAddress [ proxy_port=ProxyPortNum ] ]
> | email_address=email |
<area_code=AreaCode number=PhoneNumber> | user=UserName>
[ smtpgws=<SMTPGW1[,SMTPGW2]...|ALL> | msggws=<MSGGW1[,MSGGW2]...|ALL> ]
[ heartbeat_test_hour=HH:MM
[ heartbeat_test_days=Day ] ] [ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
dest	Object name	Destination name.	Y	N/A
type	Enumeration	Destination type for event notifications: be email, SMS, HTTPS or SNMP.	Y	N/A
snmp_manager	N/A	IP address or DNS name of the SNMP manager.	N	N/A
uri	N/A	IP address or DNS name of the HTTPS server. If a port different from the default should be used, specify it here.	N	N/A
proxy	N/A	IP address or DNS name of the proxy server to send HTTPS over.	N	None
proxy_port	Integer	Proxy port number to send HTTPS through. The default is 1080.	N	None
email_address	N/A	Email address.	N	N/A
smtpgws	Object name	List of SMTP gateways to be used.	N	ALL (all gateways).
area_code	N/A	Area code of the cellular number for SMS notification. Use digits, '-' or '.'	N	N/A
number	N/A	Cellular number for SMS notification. Use digits, '-' or '.'	N	N/A
msggws	Object name	SMS gateways to be used for this destination.	N	ALL (all gateways).
user	Object name	User name, where the user's email or phone are used.	N	N/A

Name	Type	Description	Mandatory	Default
heartbeat_test_hour	N/A	The hour for periodic heartbeat testing in the format HH:MM	N	No heartbeat
heartbeat_test_days	N/A	List of days for heartbeat testing; a comma-separated list of 3-letter day names (such as "mon", "mon,fri", etc.).	N	No heartbeat
domain	N/A	Attach the destination to the specified domains. To define more than one domain, separated them with a comma. To specify all existing domains, use "*".	N	none

This command defines a destination for event notifications. There are four types of destinations: email, SMS, HTTPS and SNMP.

- *Email* destinations are used for sending notifications via email. When defining a new destination of type Email, either the email address of the recipient must be specified in **email_address** or the user name must be specified in **user** (in this case the email address of that user is used).
- *SMS* destinations are used for sending notifications via SMS to cellular phones. When defining a new destination of type SMS, either the cellular phone number of the destination must be specified in **number** or the user name must be specified in **user** (in this case the cellular phone number of that user is used). To allow correct formatting, the area code must be separated from the local number.
- *SNMP* destinations are used for sending notifications by SNMP traps to SNMP managers. When defining a new destination of type SNMP, the IP address of the SNMP manager must be specified.
- *HTTPS* destinations are used for sending notifications to HTTPS servers. When defining a new destination of type HTTPS, the IP address of the HTTPS server must be specified.

By default, when sending an email notification, all SMTP gateways specified in the **smtpgw_prioritize** command (see Prioritizing SMTP gateways) are used, according to the order specified in that command. It is possible to define that sending emails to a specific destination will use specific SMTP gateway or gateways. This is done by specifying the **smtpgws** parameter.

The same logic applies to sending SMS messages. By default, SMS gateways specified in the **smtpgw_prioritize** command are used, according to the order specified in this command. It is possible to define that messages to a specific SMS destination will be sent through a specific SMS gateway or gateways.

Example:

```
dest_define dest=adminemail type=EMAIL
email_address=storageadmin@yourcompany.com
```

Output:

```
Command executed successfully.
```

Example:

```
dest_define dest=monitoringserver type=SNMP
snmp_manager=10.170.68.111
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DEST_MAX_REACHED**
The maximum allowed number of destinations is already reached.
- **DEST_NAME_ALREADY_EXISTS**
The destination name already exists.
- **DEST_NAME_IS_DESTGROUP_NAME**
The destination name already exists as a destination group name.
- **EMAIL_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have an email address.
- **GATEWAY_NAME_APPEARS_TWICE**
The gateway name appears twice on the list.
- **GATEWAY_NAME_DOES_NOT_EXIST**
The gateway name does not exist.
- **SMSGWS_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have SMS gateways.
- **SMTPGWS_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have SMTP gateways.
- **SNMP_MANAGER_MUST_BE_SPECIFIED_FOR_DEST_TYPE**
This type of destination must have an SNMP manager.
- **SNMP_MANAGER_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have an SNMP manager.
- **NO_SMS_GATEWAYS_ARE_DEFINED**
An SMS destination cannot be defined if no SMS gateways are defined.
- **HTTPS_ADDRESS_NOT_ALLOWED_FOR_DEST_TYPE**

This type of destination cannot have an HTTPS address.

- **PROXY_ADDRESS_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have a proxy address.
- **SNMP_DESTS_CANNOT_REFER_TO_USERS**
An SNMP destination cannot refer to a user.
- **HTTPS_DESTS_CANNOT_REFER_TO_USERS**
An HTTPS destination cannot refer to a user.
- **NO_SMTP_GATEWAYS_ARE_DEFINED**
An email destination cannot be defined if no SMTP gateways are defined.
- **USER_EMAIL_ADDRESS_IS_NOT_DEFINED**
The user's email address is not defined.
- **USER_PHONE_NUMBER_IS_NOT_DEFINED**
The user's phone number is not defined.
- **USER_NAME_DOES_NOT_EXIST**
The user name does not exist.
- **INTERNAL_DESTS_CANNOT_REFER_TO_USERS**
An internal destination cannot refer to a user.
- **DAY_APPEARS_TWICE**
The day 'Day' appears twice in the list.
Troubleshooting: Make sure that each day appears in the list only once.
- **HTTPS_ADDRESS_MUST_BE_SPECIFIED_FOR_DEST_TYPE**
This type of destination must have an HTTPS address.
- **DEST_TYPE_NOT_SUPPORTED**
This destination type is not supported.
Troubleshooting: Contact IBM Support
- **USER_IS_NOT_IN_DESTINATION_DOMAINS**
The user must be included in destination domains.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.

Deleting a destination

Use the **dest_delete** command to delete an event notification destination.

```
dest_delete dest=DestName
```

Parameters

Name	Type	Description	Mandatory
dest	Object name	Name of the destination to be deleted.	Y

Destinations that are part of a destination group or used by a rule cannot be deleted.

Destinations cannot be deleted while there are uncleared alerting events.

Example:

```
dest_delete dest=itmanager
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_DESTINATION**
Are you sure you want to delete destination *Destination*?

Return codes

- **DEST_NAME_DOES_NOT_EXIST**
The destination name does not exist.
- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **DEST_IS_PART_OF_DESTGROUP**
The destination cannot be deleted because it is part of a destination group.
- **DEST_APPEARS_IN_RULE**
The destination cannot be deleted because it appears in a rule.
Troubleshooting: To delete the destination, first delete the rule.

Listing event notification destinations

Use the **dest_list** command to list event notification destinations.

```
dest_list [ dest=DestName ] [ type=<SNMP|EMAIL|SMS|HTTPS> ] [ domain=DomainName ]  
[ internal=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
dest	Object name	Destinations to be listed.	N	All destinations.
type	Enumeration	Filter only destinations of the specified type.	N	All types.

Name	Type	Description	Mandatory	Default
internal	Enumeration	Filter destinations by their internal XIV attribute.	N	no
domain	Object name	The domain name.	N	All Domains

This command lists the configuration of all defined destinations, or of a specific destination.

Field ID	Field output	Default position
name	Name	1
type	Type	2
email_address	Email Address	3
area_code	Area Code	4
number	Phone Number	5
snmp_manager	SNMP Manager	6
uri	HTTPS Address	7
gateways	Gateways	N/A
user	User	8
heartbeat_test_days	Heartbeat Days	N/A
heartbeat_test_hour	Heartbeat Time	N/A
creator	Creator	N/A
proxy	proxy server address	N/A
proxy_port	proxy port number	N/A

Example:

```
dest_list
```

Output:

```
Name           Type  Email Address           Phone Number  Gateways
storagemanager EMAIL storagemanager@yourcompany.com
monitoringserver SNMP
```

Access control

User Category	Permission	Condition
Storage administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Storage integration administrator	Disallowed	N/A
Application administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Security administrator	Disallowed	N/A
Read-only users	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Technicians	Allowed	N/A

Renaming a destination

Use the **dest_rename** command to rename an event notification destination.

```
dest_rename dest=DestName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
dest	Object name	The destination to be renamed.	Y
new_name	Object name	New name of the destination.	Y

Example:

```
dest_rename dest=adminemail new_name=storagemanager
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **DEST_NAME_DOES_NOT_EXIST**
The destination name does not exist.
- **DEST_NAME_IS_DESTGROUP_NAME**
The destination name already exists as a destination group name.
- **DEST_NAME_ALREADY_EXISTS**
The destination name already exists.

Testing a destination

Use the **dest_test** command to send a test message to an event notification destination.

```
dest_test dest=DestName management_ip=IPAddress [ smtpgw=SMTPGatewayName ]  
[ msgw=MSGGatewayName ] [ internal=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
dest	Object name	Name of the destination to be tested.	Y	N/A
management_ip	N/A	Management IP used for sending the event notification.	Y	N/A
smtpgw	Object name	SMTP gateway to be tested.	N	Default system choice.
msgw	Object name	SMS gateway to be tested.	N	Default system choice.
internal	Boolean	Must be specified for XIV-internal destinations.	N	no

This command tests a destination by sending a test message, SMS or SNMP trap. Note that a successful return code from this command does not ensure notification delivery.

Some problems with SNMP, email, and SMS delivery may fail to be detected.

For email messages, the SMTP gateway must be specified (the destination is only tested through that gateway). The same applies to the SMS gateway.

Access control

User Category	Permission	Condition
Storage administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Storage integration administrator	Disallowed	N/A
Application administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Allowed	N/A

Return codes

- **DEST_NAME_DOES_NOT_EXIST**
The destination name does not exist.
- **DEST_TEST_NOT_PERFORMED_SYSTEM_BUSY**
The test of destination '*Destination Name*' was not performed because the system is busy.

- Troubleshooting:** Retry in a few seconds.
- **GATEWAY_NAME_DOES_NOT_EXIST**
The gateway name does not exist.
 - **SMSGWS_MUST_BE_SPECIFIED_FOR_DEST_TYPE**
This type of destination must have SMS gateways.
 - **SMSGWS_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have SMS gateways.
 - **SMTPGWS_MUST_BE_SPECIFIED_FOR_DEST_TYPE**
This type of destination must have SMTP gateways.
 - **SMTPGWS_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have SMTP gateways.
 - **DEST_TEST_FAILED**
The test of destination '*Destination Name*' failed.
 - **SYSTEM_HAS_NO_SUCH_EXTERNAL_IP**
The system has no such external IP address.
 - **MODULE_CANNOT_SEND_MESSAGES**
The selected module cannot send messages.
Troubleshooting: Contact IBM Support
 - **ONLY_TECHNICIAN_CAN_REFER_TO_INTERNAL_EVENT_OBJECTS**
Only technicians are allowed to refer to internal event objects.

Updating an event notification destination

Use the **dest_update** command to update a destination.

```
dest_update dest=DestName
[ snmp_manager=SNMPManager ] [ uri=HTTPSaddress ]
[ proxy=ProxyAddress ] [ proxy_port=ProxyPortNum ]
[ email_address=email ]
[ smtpgws=<SMTPGW1[,SMTPGW2]...|ALL> ] [ area_code=AreaCode ]
[ number=PhoneNumber ]
[ msgws=<SMSGW1[,SMSGW2]...|ALL> ]
[ user=UserName ] [ heartbeat_test_hour=HH:MM ]
[ heartbeat_test_days=Day ] [ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
dest	Object name	Destination name.	Y	N/A
snmp_manager	N/A	IP address or DNS name of the SNMP manager.	N	Keep unchanged.
uri	N/A	IP address or DNS name of HTTPS server.	N	Keep unchanged.
proxy	N/A	IP address or DNS name of proxy server to send HTTPS over.	N	Keep unchanged.
proxy_port	Integer	Proxy port number to send HTTPS through (1080 by default).	N	Keep unchanged.

Name	Type	Description	Mandatory	Default
domain	N/A	Attach the destination to the specified domains. To define more than one domain, separated them with a comma. To specify all existing domains, use "*".	N	Keep unchanged
email_address	N/A	Email address.	N	Keep unchanged.
smtpgws	Object name	List of SMTP gateways to be used.	N	Keep unchanged.
area_code	N/A	Area code of the cellular number for SMS notification.	N	Keep unchanged.
number	N/A	Cellular number for SMS notification.	N	Keep unchanged.
smsgws	Object name	SMS gateways to be used.	N	Keep unchanged.
user	Object name	User name, where the user's email or phone are used.	N	Keep unchanged.
heartbeat_test_hour	N/A	The hour of periodic heartbeat testing	N	Keep unchanged.
heartbeat_test_days	N/A	List of days for heartbeat testing; a comma-separated list of 3-letter day names (such as "mon", "mon,fri", and so on).	N	Keep unchanged.

The parameters of this command are identical to the Defining a new event notification destination command, except that the destination type cannot be changed. All relevant fields must be specified (not only the ones that are being changed).

Example:

```
dest_update dest=storagemanager
email_address=admin@yourcompany.com
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed

User Category	Permission
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DEST_NAME_DOES_NOT_EXIST**
The destination name does not exist.
- **AREA_CODE_MUST_BE_SPECIFIED_FOR_DEST_TYPE**
This type of destination must have an area code.
- **AREA_CODE_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have an area code.
- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **EMAIL_MUST_BE_SPECIFIED_FOR_DEST_TYPE**
This type of destination must have an email address.
- **EMAIL_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have an email address.
- **GATEWAY_NAME_APPEARS_TWICE**
The gateway name appears twice on the list.
- **GATEWAY_NAME_DOES_NOT_EXIST**
The gateway name does not exist.
- **NUMBER_MUST_BE_SPECIFIED_FOR_DEST_TYPE**
This type of destination must have a number.
- **NUMBER_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have a number.
- **MSGWS_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have SMS gateways.
- **SNMP_MANAGER_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have an SNMP manager.
- **NO_SMTP_GATEWAYS_ARE_DEFINED**
An email destination cannot be defined if no SMTP gateways are defined.
- **DEST_CANNOT_HAVE_A_USER_AND_AN_EMAIL_ADDRESS**
The destination cannot simultaneously have an email address and refer to a user.
- **DEST_CANNOT_HAVE_A_USER_AND_A_PHONE_NUMBER**
The destination cannot simultaneously have a phone number and refer to a user.
- **USER_PHONE_NUMBER_IS_NOT_DEFINED**
The user's phone number is not defined.
- **USER_NAME_DOES_NOT_EXIST**
The user name does not exist.
- **INTERNAL_DESTS_CANNOT_REFER_TO_USERS**
An internal destination cannot refer to a user.

- **DEST_HEARTBEAT_DAYS_BUT_NO_HOUR**
Destination heartbeat days are specified, but not heartbeat hour.
- **HTTPS_ADDRESS_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have an HTTPS address.
- **PROXY_ADDRESS_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have a proxy address.
- **SNMP_DESTS_CANNOT_REFER_TO_USERS**
An SNMP destination cannot refer to a user.
- **HTTPS_DESTS_CANNOT_REFER_TO_USERS**
An HTTPS destination cannot refer to a user.
- **USER_EMAIL_ADDRESS_IS_NOT_DEFINED**
The user's email address is not defined.
- **SMTPGWS_NOT_ALLOWED_FOR_DEST_TYPE**
This type of destination cannot have SMTP gateways.
- **DAY_APPEARS_TWICE**
The day '*Day*' appears twice in the list.
Troubleshooting: Make sure that each day appears in the list only once.
- **SNMP_MANAGER_MUST_BE_SPECIFIED_FOR_DEST_TYPE**
This type of destination must have an SNMP manager.
- **NO_SMS_GATEWAYS_ARE_DEFINED**
An SMS destination cannot be defined if no SMS gateways are defined.
- **HTTPS_ADDRESS_MUST_BE_SPECIFIED_FOR_DEST_TYPE**
This type of destination must have an HTTPS address.
- **DEST_TYPE_NOT_SUPPORTED**
This destination type is not supported.
Troubleshooting: Contact IBM Support
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **USER_IS_NOT_IN_DESTINATION_DOMAINS**
The user must be included in destination domains.
- **DESTINATION_IS_NOT_IN_RULE_DOMAINS**
The destination must be included in rule domains.
- **DESTINATION_IS_NOT_IN_DESTGROUP_DOMAINS**
The destination must be included in the destination group domains.

Adding a destination to a destination group

Use the **destgroup_add_dest** command to add an event notification destination to a destination group.

```
destgroup_add_dest destgroup=GroupName dest=DestName
```

Parameters

Name	Type	Description	Mandatory
destgroup	Object name	Destination group name to which to add the destination.	Y
dest	Object name	Destination to be added to the group.	Y

The command fails if the destination group already contains the destination.

The command cannot be executed while there are uncleared alerting events.

Example:

```
destgroup_add_dest destgroup=alladmins dest=john
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DESTGROUP_NAME_DOES_NOT_EXIST**
The destination group name does not exist.
- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **DEST_NAME_DOES_NOT_EXIST**
The destination name does not exist.
- **DESTGROUP_MAX_DESTS_REACHED**
The maximum allowed number of destinations is already reached in destination groups.
- **DESTGROUP_ALREADY_INCLUDES_DEST**
The destination group already includes this destination name.
- **DESTINATION_IS_NOT_IN_DESTGROUP_DOMAINS**
The destination must be included in the destination group domains.

Creating a destination group

Use the **destgroup_create** command to create an event notification destinations group.

```
destgroup_create destgroup=GroupName [ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
destgroup	Object name	Destination group name.	Y	N/A
domain	N/A	Attach the destination group to the specified domains. To define more than one domain, separated them with a comma. To specify all existing domains, use "*".	N	none

This command creates a destination group, which is used by rules to send notifications to the entire group without specifying all the destinations for each rule. You can also add or remove destinations from the group, which eliminates the need to change the configuration of each rule separately.

Upon creation, the destination group is empty. To add a destination to a destination group, use the Adding a destination to a destination group command.

Example:

```
destgroup_create destgroup=alladmins
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DESTGROUP_MAX_REACHED**
The maximum allowed number of destination groups is already reached.
- **DESTGROUP_NAME_ALREADY_EXISTS**

The destination group name already exists.

- **DESTGROUP_NAME_IS_DEST_NAME**

The destination group name already exists as a destination name.

- **DOMAIN_DOESNT_EXIST**

The domain does not exist.

Updating an event notification destination group

Use the **destgroup_update** command to update a destination group.

```
destgroup_update destgroup=GroupName domain=DomainList
```

Parameters

Name	Type	Description	Mandatory
destgroup	Object name	Destination group name.	Y
domain	N/A	Attach the destination group to the specified domains. To define more than one domain, separated them with a comma. To specify all existing domains, use "*".	Y

Example:

```
destgroup_update destgroup=alladmins domain=D1,D2
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DESTINATION_IS_NOT_IN_DESTGROUP_DOMAINS**

The destination must be included in the destination group domains.

- **DOMAIN_DOESNT_EXIST**

The domain does not exist.

- **DESTGROUP_IS_NOT_IN_RULE_DOMAINS**

The destination groups must be included in rule domains.

- **DESTGROUP_NAME_DOES_NOT_EXIST**
The destination group name does not exist.
- **INTERNAL_EVENT_OBJECTS_CANNOT_USE_SPECIFIC_DOMAINS**
Internal event objects cannot be defined on specific domains.

Deleting a destination group

Use the **destgroup_delete** command to delete an event notification destination group.

```
destgroup_delete destgroup=GroupName
```

Parameters

Name	Type	Description	Mandatory
destgroup	Object name	The name of the destination group to be deleted.	Y

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_DESTINATION_GROUP**
Are you sure you want to delete destination group *Destination Group*?

Return codes

- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **DESTGROUP_APPEARS_IN_RULE**
The destination group appears in a rule.
Troubleshooting: To delete the destination group, first delete the rule.
- **DESTGROUP_NAME_DOES_NOT_EXIST**
The destination group name does not exist.

Listing destination groups

Use the **destgroup_list** command to list destination groups.

```
destgroup_list [ destgroup=GroupName ] [ domain=DomainName ]
```


Parameters

Name	Type	Description	Mandatory	Default
destgroup	Object name	Destination group to be listed.	N	All groups.
domain	Object name	The domain name.	N	All Domains

This command lists all destination groups or a specific one. All the destinations are listed for each destination group.

Field ID	Field output	Default position
name	Name	1
dests	Destinations	2
creator	Creator	N/A

Example:

```
destgroup_list
```

Output:

```
Name      Destinations
itstaff   john,michael,linda,monitoringserver
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Removing a destination from a destination group

Use the **destgroup_remove_dest** command to remove an event notification destination from a destination group.

```
destgroup_remove_dest destgroup=GroupName dest=DestName
```

Parameters

Name	Type	Description	Mandatory
destgroup	Object name	Group name.	Y
dest	Object name	Destination to be removed from the group.	Y

This command cannot be executed while there are uncleared alerting events.

Example:

```
destgroup_remove_dest destgroup=alladmins dest=john
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DESTGROUP_NAME_DOES_NOT_EXIST**
The destination group name does not exist.
- **DEST_NAME_DOES_NOT_EXIST**
The destination name does not exist.
- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **DESTGROUP_DOES_NOT_INCLUDE_DEST**
The destination group does not include this destination name.

Renaming a destination group

Use the **destgroup_rename** command to rename an event notification destination group.

```
destgroup_rename destgroup=GroupName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
destgroup	Object name	Destination group to be renamed.	Y
new_name	Object name	New name of the destination group.	Y

This command cannot be executed while there are uncleared alerting events.

Example:

```
destgroup_rename destgroup=alladmins new_name=itstaff
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DESTGROUP_NAME_DOES_NOT_EXIST**
The destination group name does not exist.
- **DESTGROUP_NAME_ALREADY_EXISTS**
The destination group name already exists.
- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **DESTGROUP_NAME_IS_DEST_NAME**
The destination group name already exists as a destination name.

Clearing alerting events

Use the **event_clear** command to clear alerting events.

```
event_clear event_id=EventId [ all_preceding=<yes|no> ] [ internal=<yes|no|all> ]
```

Parameters

Name	Type	Description	Mandatory	Default
event_id	Positive integer	The ID number of the event to be cleared.	Y	N/A
all_preceding	Boolean	Clears all events preceding the specified event.	N	no
internal	Boolean	Clears XIV-internal events.	N	no

In order to ensure that an event was indeed received, an event notification may be sent repeatedly until it is cleared with a CLI command or from the GUI. Such

events are called *alerting* events. An event is defined as *alerting* if at the time of the event's generation it was matched by an *alerting* rule, meaning a rule that has either snooze or escalation definitions.

Notifications for the alerting event are sent until it is cleared by this command. The clearing operation does not imply that the problem has been solved. It only implies that the event has been noted by the relevant person who takes responsibility for fixing the problem.

The user may clear either a specific event or all alerting events.

Example:

```
event_clear event_id=87
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Storage integration administrator	Disallowed	N/A
Application administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Allowed	N/A

Return codes

- **ONLY_TECHNICIAN_CAN_REFER_TO_INTERNAL_EVENT_OBJECTS**
Only technicians are allowed to refer to internal event objects.

Listing events

Use the **event_list** command to list system events.

```
event_list [ max_events=MaxEventsToList ] [ after=TimeStamp ]
[ before=TimeStamp ] [ min_severity=<INFORMATIONAL|WARNING|MINOR|MAJOR|CRITICAL> ]
[ alerting=<yes|no|all> ] [ cleared=<yes|no|all> ] [ code=EventCode ]
[ object_type=<cons_group|destgroup|dest|dm|host|map| mirror|pool|rule|smsgw|smtpgw|
target|volume|cluster|ip_interface|ldap_conf|meta_data_object| sync_schedule|user|
user_group|ldap_server|modules_status|license|ipsec_connection|ipsec_tunnel|
cross_cons_group,...> ] [ internal=<yes|no|all> ] [ beg=BeginIndex ] [ end=EndIndex ]
[ count_all=<yes|no> ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
max_events	Positive integer	Maximum number of events to list.	N	300
after	N/A	Earliest time/date.	N	no filter

Name	Type	Description	Mandatory	Default
before	N/A	Latest time/date.	N	no filter
min_severity	Enumeration	Minimum severity.	N	no filter
alerting	Boolean	Filter alerting events.	N	no filter
cleared	Boolean	Filter cleared events.	N	no filter
code	N/A	Filter by a specific event code.	N	no filter
object_type	Enumeration	Filter events by the type of the related system object.	N	no filter
internal	Boolean	Filter XIV internal events.	N	no filter
beg	Integer	Index of the first event to list. If negative, then counts from the end.	N	1
end	Integer	Index of the last event to list (not inclusive). If negative, then counts from the end.	N	last event + 1
count_all	Boolean	If yes, it scans all the events between beginning and end for computing the number of events meeting the criteria.	N	no
domain	Object name	The domain name.	N	All Domains

This command lists system events according to specified criteria, such as minimum severity, event type, and so on. The event list displays the following information for each event: timestamp, severity, code, user and description.

Events are listed and sorted by time of creation, where the latest events are listed last. Events are listed by default in the user-readable textual form. Alternatively, the CLI option for comma-separated values can be used to generate output that can serve as input for other applications.

The syntax for the before and after fields is as follows: Y-M-D[. [h[:m[:s]]]], where the ranges are as follows:

- Y - year (four digit)
- M - month (1-12)
- D - day (1-31)
- h - hour (0-23, with 0 as default)
- m - minute (0-59, with 0 as default)
- s - second (0-59, with 0 as default)

The year, month and day are separated by dashes, while the optional hour, minute and second are separated by colons.

Field ID	Field output	Default position
timestamp	Timestamp	1
severity	Severity	2
code	Code	3
user_name	User	4
description	Description	5
index	Index	N/A
alerting	Alerting	N/A
cleared	Cleared	N/A
tshooting	Trouble Shooting	N/A

Example:

```
event_list max_events=10
```

Output:

```
Timestamp          Severity          Code
2009-05-12 15:10:16 Informational     START_WORK
2009-05-12 15:16:11 Informational     POOL_CREATE
2009-05-12 15:16:22 Critical         WOULD_BE_EMERGENCY_SHUTDOWN
2009-05-12 15:16:23 Informational     VOLUME_CREATE
```

Additional output fields
(lines are broken to fit the page width of this Guide):

```
User              Description
xiv_development  System has entered ON state.
                  Storage Pool of size 171GB was created with name
                  'p1_m'.
                  An emergency shutdown has been detected, but UPS control
                  is disabled.
xiv_development  Volume was created with name 'master' and size 17GB in
                  Storage Pool with name 'p1_m'.
```

Access control

User Category	Permission	Condition
Storage administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Storage integration administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Application administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Security administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Read-only users	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Technicians	Allowed	N/A

Return codes

- **UNRECOGNIZED_EVENT_CODE**

'String' is not a recognized return code.

Troubleshooting: Consult the manual for the list of valid return codes.

- **CANNOT_READ_EVENTS**
Cannot read events.
Troubleshooting: Contact IBM Support.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.

Listing uncleared alerting events

Use the **event_list_uncleared** command to list uncleared alerting events.

```
event_list_uncleared [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
domain	Object name	The domain name.	N	All Domains

Example:

```
event_list_uncleared
```

Output:

```

Index  Code           Severity
-----
318    VOLUME_CREATE  Informational
666    VOLUME_DELETE  Informational

```

Field ID	Field output	Default position
index	Index	1
code	Code	2
severity	Severity	3

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Setting the threshold for event notification

Use the **event_redefine_threshold** command to redefine the threshold of a parameterized event.

```
event_redefine_threshold code=EventCode
severity=<INFORMATIONAL|WARNING|MINOR|MAJOR|CRITICAL|NONE>
threshold=<ThresholdValue|NONE>
```

Parameters

Name	Type	Description	Mandatory
code	N/A	Event code.	Y
severity	Enumeration	Severity.	Y
threshold	Integer	Threshold value, or NONE to indicate that an event with this severity is not created.	Y

This command can be applied to parameterized events, that is events that are triggered when a certain parameter crosses a certain threshold. Using this command the user can change the threshold for event notification. Furthermore, multiple thresholds can be defined using multiple invocations of this command, one for each event severity. When the relevant parameter crosses a threshold, an event with the matching severity is created.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **EVENT_DOES_NOT_HAVE_THRESHOLDS**
The event does not have thresholds.
- **EVENT_THRESHOLD_IS_ILLEGAL**
An illegal value for the event threshold.
Troubleshooting: Event threshold values must be monotonic.
- **UNRECOGNIZED_EVENT_CODE**
'String' is not a recognized return code.
Troubleshooting: Consult the manual for the list of valid return codes.
- **LAST_EVENT_THRESHOLD_CANNOT_BE_DELETED**
The event must have at least one threshold value.

Listing thresholds

Use the `event_threshold_list` to list event thresholds.

```
event_threshold_list [ code=EventCode ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>code</code>	Enumeration	Filter by a specific event code.	N	no filter

Field ID	Field output	Default position
<code>code</code>	Code	1
<code>has_thresholds</code>	Has Thresholds?	N/A
<code>not_in_use</code>	Not In Use	N/A
<code>replaced_by</code>	Replaced By	N/A
<code>default_thresholds.0</code>	INFORMATIONAL(def)	7
<code>default_thresholds.1</code>	WARNING(def)	8
<code>default_thresholds.2</code>	MINOR(def)	9
<code>default_thresholds.3</code>	MAJOR(def)	10
<code>default_thresholds.4</code>	CRITICAL(def)	11
<code>thresholds.0</code>	INFORMATIONAL	2
<code>thresholds.1</code>	WARNING	3
<code>thresholds.2</code>	MINOR	4
<code>thresholds.3</code>	MAJOR	5
<code>thresholds.4</code>	CRITICAL	6

Example:

```
event_threshold_list
```

Output:

```
Code
-----
STORAGE_POOL_SNAPSHOT_USAGE_INCREASED  none          80          90

MAJOR  CRITICAL  INFORMATIONAL(def)  WARNING(def)  MINOR(def)  MAJOR(def)
-----
95     none     none              80           90          95

CRITICAL(def)
-----
none
```

Access control

User Category	Permission	Condition
Storage administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Storage integration administrator	Disallowed	N/A

User Category	Permission	Condition
Application administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Security administrator	Disallowed	N/A
Read-only users	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Technicians	Allowed	N/A

Activating a rule

Use the **rule_activate** command to activate an event notification rule.

```
rule_activate rule=RuleName
```

Parameters

Name	Type	Description	Mandatory
rule	Object name	The name of the rule to be activated.	Y

This command activates the specified rule. An active rule is matched against events and generates notifications. If the rule is already active, this command has no effect.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **EVENT_RULE_NAME_DOES_NOT_EXIST**
The event rule name does not exist.

Creating event notification rules

Use the **rule_create** command to create an event notification rule.

```
rule_create rule=RuleName [ min_severity=<INFORMATIONAL|WARNING|MINOR|MAJOR|CRITICAL|NONE> ]
[ codes=Codes | except_codes=EventCodes ] [ escalation_only=<yes|no> ]
dests=dest1,dest2,... [ snooze_time=SnoozeTime ]
[ escalation_time=EscalationTime escalation_rule=EscalationRule ] [ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
rule	Object name	The name of the new rule.	Y	N/A
min_severity	Enumeration	Minimal event severity for rule filtering.	N	All severities.
codes	N/A	Filter only events with these codes.	N	All events.
except_codes	N/A	Filter only events with other codes.	N	All events.
escalation_only	Boolean	Specifies that this rule can only be used for escalation.	N	no
dests	Object name	Comma-separated list of destinations and destination groups for event notification.	Y	N/A
snooze_time	Integer	Snooze time in minutes.	N	No snoozing.
escalation_rule	Object name	Escalation rule.	N	N/A
escalation_time	Integer	Escalation time in minutes. Escalation time should not be smaller than snooze time. Refer to <code>escalation_rule</code> above for more information.	N	No escalation.
domain	N/A	The rule will be attached to the specified domains. To define more than one domain, separate them with a comma. To specify all existing domains, use <code>"*"</code> .	N	none

This command defines a new event notification rule. An event notification rule determines which events should generate which notifications. When an event occurs, it is checked by all currently defined rules, based on which notifications are generated.

Each rule has a filtering and notification configuration.

The filtering configuration controls which events match this rule. The filtering can be based on the event's code, by specifying a minimum severity. When using this configuration, each event with a severity higher or equal to the rule's `min_severity` parameter matches this rule. Alternatively, the rule may match only a specific event code. Two filters can be combined for events whose severity depends on a run-time parameter.

The second part of a rule configuration is a list of destinations and destination groups that receive the notification when an event matches the filtering criteria. If a destination is included both in the rule and in one of the rule's destination groups, it still gets only one notification. The same applies if a destination is

included in two destination groups, or if the event matches the filtering criteria of several rules, all using the same destination.

A rule can be defined as *alerting*, which means that notifications are sent repeatedly until the matching events are cleared using the **event_clear** command (see Clearing alerting events).

Clearing the event does not mean that the problem has been solved. It only means that it was noticed and there is no need to continue sending notifications.

The repeated sending of notifications can be defined by two ways:

- The **snooze** parameter causes the notifications to be sent again and again to the same destinations. The time in minutes between the repeated transmissions is determined by the **snooze** parameter.
- The **escalation_time** and **escalation_rule** parameters cause the notifications to be sent to the destination list of the **escalation_rule** if it is not cleared within **escalation_time** minutes.

Rules can escalate only to alerting rules (that is, to rules that have snooze or escalation definitions) in order to prevent a situation where notifications are stopped from being sent.

A rule cannot escalate to itself, nor can it be defined in a cyclic escalation of rules.

The **escalation_only** parameter defines a rule without filters, which can only be used as an escalation for other rules.

The snooze time cannot be greater than the escalation time.

It is not permitted to define new rules while there are uncleared alerting events.

The following example sends alerts upon critical events to John's cellular number and to the emails of all the IT staff. The alerts will be resent every 20 minutes until the events are cleared.

Example:

```
xcli -u -c Nextra1 rule_create rule=critical_alerts min_severity=critical destinations=john-cell,itstaff snooze_time=20
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **EVENT_RULE_MAX_REACHED**
The maximum allowed number of event rules is already reached.
- **EVENT_RULE_CANNOT_ESCALATE_TO_NON_ALERTING_RULES**
An event rule cannot be escalated to a non-alerting rule.
Troubleshooting: An alerting rule can only be escalated to another escalation rule.
- **DEST_APPEARS_TWICE**
The destination or destination group appears twice.
- **EVENT_RULE_NAME_ALREADY_EXISTS**
The event rule name already exists.
- **EVENT_RULE_NAME_DOES_NOT_EXIST**
The event rule name does not exist.
- **NAME_IS_NEITHER_DEST_NOR_GROUP**
The specified name is neither a destination group name nor a destination name.
- **ESCALATION_TIME_MUST_BE_LARGER_THAN_SNOOZE_TIME**
Escalation time must be larger than snooze time.
- **RULE_MAX_DESTS_REACHED**
The maximum allowed number of destinations and destination groups in a rule is already reached.
- **EVENT_RULE_MUST_HAVE_FILTER**
An alerting event rule must have a filter represented by an event code or severity.
- **EVENT_RULE_CANNOT_REFER_TO_INTERNAL_EVENT_CODES**
A user event rule cannot refer to internal event codes.
- **ESCALATION_EVENT_RULE_CANNOT_HAVE_FILTER**
An escalation-only event rule cannot have code or min_severity specification.
- **ESCALATION_EVENT_RULE_MUST_BE_ALERTING**
An escalation-only event rule must be an alerting rule.
- **TOO_MANY_EVENT_CODES**
A maximum of *Maximum* return codes can be defined.
- **EVENT_CODE_APPEARS_TWICE**
The return code '*Code*' appears twice in the list.
Troubleshooting: Make sure that each return code appears in the list only once.
- **UNRECOGNIZED_EVENT_CODE**
'*String*' is not a recognized return code.
Troubleshooting: Consult the manual for the list of valid return codes.
- **EVENT_RULE_CANNOT_HAVE_A_CATEGORY**
A user event rule cannot have a category definition.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **DESTINATION_IS_NOT_IN_RULE_DOMAINS**
The destination must be included in rule domains.
- **DESTGROUP_IS_NOT_IN_RULE_DOMAINS**
The destination groups must be included in rule domains.

- **ESCALATION_RULE_NOT_IN_RULE_DOMAINS**
An escalation rule must belong to rule domains.
- **EVENT_RULE_MUST_NOT_HAVE_SNMP_DEST**
According to the current system configuration state (snmp_type = NONE), an event rule must not have an SNMP destination.

Deactivating a rule

Use the **rule_deactivate** command to deactivate an event notification rule.

```
rule_deactivate rule=RuleName
```

Parameters

Name	Type	Description	Mandatory
rule	Object name	The name of the rule to be deactivated.	Y

A deactivated rule is not matched against events and does not generate notifications. If the rule is already inactive, then this command has no effect.

Inactive rules cannot be used as escalation rules.

The rules of type `escalation_only` cannot be deactivated.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **EVENT_RULE_NAME_DOES_NOT_EXIST**
The event rule name does not exist.
- **ESCALATION_ONLY_RULES_ALWAYS_ACTIVE**
An escalation-only event rule cannot be deactivated or activated.

Deleting event notification rules

Use the **rule_delete** command to delete an event notification rule.

```
rule_delete rule=RuleName
```

Parameters

Name	Type	Description	Mandatory
<code>rule</code>	Object name	The rule to be deleted.	Y

Rules that are defined as the escalation of other rules cannot be deleted.

It is not permitted to delete a rule while there are uncleared alerting events.

Example:

```
rule_delete rule=emergency_alerts
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_RULE**
Are you sure you want to delete rule *Rule*?

Return codes

- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **EVENT_RULE_NAME_DOES_NOT_EXIST**
The event rule name does not exist.
- **EVENT_RULE_USED_FOR_ESCALATION_CAN_NOT_BE_DELETED**
The event rule is an escalation rule of another event rule. Therefore, it cannot be deleted.
Troubleshooting: Delete all escalation rules that refer to this rule as their escalation rule.

Listing event notification rules

Use the `rule_list` command to list event notification rules.

```
rule_list [ rule=RuleName ] [ internal=<yes|no> ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
rule	Object name	The rule to be listed.	N	All rules.
internal	Enumeration	Filters XIV internal rules.	N	no
domain	Object name	The domain name.	N	All Domains

Example:

```
rule_list
```

Output:

```
Name           Minimum Severity  Event Code  Destinations
-----
emergency_alerts  critical          all         john-cell,itstaff
```

Field ID	Field output	Default position
name	Name	1
min_severity	Minimum Severity	2
codes	Event Codes	3
except_codes	Except Codes	4
dests	Destinations	5
active	Active	6
escalation_time	Escalation Time	N/A
snooze_time	Snooze Time	N/A
escalation_rule	Escalation Rule	N/A
escalation_only	Escalation Only	7
category	Category	N/A
creator	Creator	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Renaming event notification rules

Use the **rule_rename** command to rename an event notification rule.

```
rule_rename rule=RuleName new_name=Name
```


Parameters

Name	Type	Description	Mandatory
rule	Object name	The rule to be renamed.	Y
new_name	Object name	The new name of the rule.	Y

Example:

```
rule_rename rule=critical_alerts new_name=emergency_alerts
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **EVENT_RULE_NAME_ALREADY_EXISTS**
The event rule name already exists.
- **EVENT_RULE_NAME_DOES_NOT_EXIST**
The event rule name does not exist.

Updating an event notification rule

Use the **rule_update** command to update an event notification rule.

```
rule_update rule=RuleName [ min_severity=<INFORMATIONAL|WARNING|MINOR|MAJOR|CRITICAL|NONE> ]  
[ codes=Codes ] [ except_codes=EventCodes ] [ escalation_only=<yes|no> ]  
[ dests=dest1,dest2,... ] [ snooze_time=SnoozeTime ] [ escalation_time=EscalationTime ]  
[ escalation_rule=EscalationRule ] [ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
rule	Object name	The name of the rule.	Y	N/A

Name	Type	Description	Mandatory	Default
min_severity	Enumeration	Minimum event severity for rule filtering.	N	Leave unchanged.
codes	N/A	Filter only events with this code.	N	Leave unchanged.
except_codes	N/A	Filter only events with other codes.	N	Leave unchanged.
escalation_only	Boolean	Specifies that this rule can only be used for escalation.	N	no
dests	Object name	Comma-separated list of destinations and destination groups for event notification.	N	Leave unchanged.
snooze_time	Integer	Snooze time in minutes.	N	Leave unchanged.
escalation_time	Integer	Escalation time in minutes.	N	Leave unchanged.
escalation_rule	Object name	Escalation rule.	N	Leave unchanged.
domain	N/A	The rule will be attached to the specified domains. To specify more than one domain, separate them with a comma. To specify all existing domains, use "*".	N	Leave unchanged.

This command updates the configuration of an event notification rule. All parameters and their descriptions are identical to the Creating event notification rules command.

Parameters which are not specified are not changed.

Example:

```
rule_update rule=critical_alerts min_severity=critical destinations=john-cell,itstaff
snooze_time=30
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **EVENT_RULE_NAME_DOES_NOT_EXIST**
The event rule name does not exist.
- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **EVENT_RULE_CANNOT_ESCALATE_TO_ITSELF**
An event rule cannot be its own escalation rule.
- **EVENT_RULE_CANNOT_ESCALATE_TO_NON_ALERTING_RULES**
An event rule cannot be escalated to a non-alerting rule.
Troubleshooting: An alerting rule can only be escalated to another escalation rule.
- **DEST_APPEARS_TWICE**
The destination or destination group appears twice.
- **EVENT_RULE_MISSING_ESCALATION_RULE**
An alerting event rule must have an escalation rule.
Troubleshooting: If escalation time is specified, then an escalation rule must be specified also.
- **EVENT_RULE_MISSING_ESCALATION_TIME**
An alerting event rule must have escalation time.
Troubleshooting: If an escalation rule is specified, then escalation time must be specified also.
- **NAME_IS_NEITHER_DEST_NOR_GROUP**
The specified name is neither a destination group name nor a destination name.
- **ESCALATION_TIME_MUST_BE_LARGER_THAN_SNOOZE_TIME**
Escalation time must be larger than snooze time.
- **RULE_MAX_DESTS_REACHED**
The maximum allowed number of destinations and destination groups in a rule is already reached.
- **EVENT_RULE_MUST_HAVE_FILTER**
An alerting event rule must have a filter represented by an event code or severity.
- **CYCLIC_ESCALATION_RULES_DEFINITION**
Event rule escalation cannot be cyclic.
- **EVENT_RULE_USED_FOR_ESCALATION_MUST_BE_ALERTING**
The event rule is an escalation rule of another event rule, and thus must be an alerting rule.
- **EVENT_RULE_CANNOT_REFER_TO_INTERNAL_EVENT_CODES**
A user event rule cannot refer to internal event codes.
- **ESCALATION_EVENT_RULE_CANNOT_HAVE_FILTER**
An escalation-only event rule cannot have code or min_severity specification.
- **EVENT_RULE_CANNOT_HAVE_A_CATEGORY**
A user event rule cannot have a category definition.
- **EVENT_RULE_CANNOT_HAVE_BOTH_CODES_AND_EXCEPTION_CODES**

An event rule cannot have both codes and exception codes.

- **ESCALATION_EVENT_RULE_MUST_BE_ALERTING**
An escalation-only event rule must be an alerting rule.
- **TOO_MANY_EVENT_CODES**
A maximum of *Maximum* return codes can be defined.
- **EVENT_CODE_APPEARS_TWICE**
The return code '*Code*' appears twice in the list.
Troubleshooting: Make sure that each return code appears in the list only once.
- **UNRECOGNIZED_EVENT_CODE**
'*String*' is not a recognized return code.
Troubleshooting: Consult the manual for the list of valid return codes.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **DESTINATION_IS_NOT_IN_RULE_DOMAINS**
The destination must be included in rule domains.
- **DESTGROUP_IS_NOT_IN_RULE_DOMAINS**
The destination groups must be included in rule domains.
- **ESCALATION_RULE_NOT_IN_RULE_DOMAINS**
An escalation rule must belong to rule domains.
- **EVENT_RULE_MUST_NOT_HAVE_SNMP_DEST**
According to the current system configuration state (`snmp_type = NONE`), an event rule must not have an SNMP destination.

Defining an SMS gateway

Use the `smsgw_define` command to define an SMS gateway.

```
smsgw_define smsgw=SMSSGatewayName email_address=email
subject_line=SubjectLineScheme email_body=EmailBodyScheme
[ smtpgw=<SMTPGW1[,SMTPGW2]...|ALL> ]
```

Parameters

Name	Type	Description	Mandatory	Default
smsgw	Object name	SMS gateway name.	Y	N/A
email_address	Token String	Format for the email address.	Y	N/A
subject_line	Token String	Format for the subject line.	Y	N/A
email_body	Token String	Format for the email body.	Y	N/A
smtpgw	Object name	List of SMTP gateways to be used.	N	The SMTP gateways defined in the <code>smtpgw_prioritize</code> command.

SMS gateways are used to send event notifications via SMS messages. SMS messages are sent via SMS-to-email servers. To define a new SMS gateway, it is necessary to know how SMS messages are encapsulated in the email message.

When the system sends an SMS message, it uses the actual message text that describes the event and the destination number. The destination number is comprised of an area code and the local number. Both are specified when the destination is defined as described in the Defining a new event notification destination command.

The message text and destination numbers can be embedded into various parts of the email message: destination address, subject line, or email body. This command defines how email messages are formatted, and how the information of the specific SMS is arranged.

When defining an SMS gateway, three parameters must be specified in order to define the formatting:

- **email_address**: This is the email address used for sending the SMS via the email-to-SMS gateway.
- **subject_line**: This is the subject line of the outgoing email that will be converted to an SMS.
- **email_body**: This is the body of the outgoing email that will be converted to an SMS.

For each of these parameters, the value can be either fixed text, or an event text, or the destination phone number. The information must be embedded into the following escape sequences:

- {areacode}. This escape sequence is replaced by the destination's cellular number area code.
- {number}. This escape sequence is replaced by the destination's cellular local number.
- {message}. This escape sequence is replaced by the text to be shown to the user.
- \{, \}, \\. These are replaced by the {, } or \ respectively.

By default, the email to the email-to-SMS server is sent through the defined SMTP servers, prioritized by the **smtpgw_prioritize** command (see Prioritizing SMTP gateways). If needed, the user may define a specific SMTP gateway or gateways for sending email to this email-to-SMS gateway.

The system will try each SMS gateway, in the order specified in the **smtpgw_prioritize** command, until it successfully connects to one of them. The specific SMS destination can be associated with the specific SMS gateway (see Defining a new event notification destination).

Example:

```
smsgw_define smsgw=SMSGW1
email_address={areacode}{number}@sms2emailserver.yourcompany.com
subject_line=SMS_email_body={message}
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **GATEWAY_MAX_REACHED**
The maximum allowed number of gateways is already reached.
- **SMSGW_CANNOT_BE_DEFINED_WITHOUT_SMTPGW**
The SMS gateway cannot be defined if no SMTP gateway is defined.
- **GATEWAY_NAME_DOES_NOT_EXIST**
The gateway name does not exist.
- **GATEWAY_NAME_APPEARS_TWICE**
The gateway name appears twice on the list.
- **GATEWAY_NAME_ALREADY_EXISTS**
The gateway name already exists.

Deleting an SMS gateway

Use the **smsgw_delete** command to delete an SMS gateway.

```
smsgw_delete smsgw=SMSSGatewayName
```

Parameters

Name	Type	Description	Mandatory
smsgw	Object name	SMS gateway to be deleted.	Y

A gateway cannot be deleted if it is part of a notification rule or if it is being used by a destination.

Before deleting an SMS gateway, make sure that all alerting events are cleared.

Example:

```
smsgw_delete smsgw=external-SMSGW
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_SMS_GATEWAY**
Are you sure you want to delete SMS gateway *Gateway*?

Return codes

- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **GATEWAY_NAME_DOES_NOT_EXIST**
The gateway name does not exist.
- **GATEWAY_USED_BY_DESTINATION**
The gateway is used by a destination.

Listing SMS gateways

Use the **msgw_list** command to list SMS gateways.

```
msgw_list [ msgw=SMSSGatewayName ]
```

Parameters

Name	Type	Description	Mandatory	Default
msgw	Object name	Name of SMS gateway to list.	N	All gateways.

The command lists all SMS gateways, or a specific one. For each SMS gateway, all of its configuration information is listed.

Field ID	Field output	Default position
name	Name	1
email_address	Email Address	2
gateways	SMTP Gateways	3
subject_line	Subject Line	N/A
email_body	Email Body	N/A
priority	Priority	N/A

Example:

```
smsgw_list
```

Output:

```
Name      Email Address                               SMTP Gateways
SMSGW1    {areacode}{number}@sms2emailserver.yourcompany.com  all
SMSGW2    {areacode}{number}@sms2emailservice.com             all
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Prioritizing SMS gateways

Use the **smsgw_prioritize** command to set the priorities of the SMS gateways for sending SMS messages.

```
smsgw_prioritize order=<gw1[,gw2]...>
```

Parameters

Name	Type	Description	Mandatory
order	Object name	List of all SMS gateways ordered by priority.	Y

SMS messages can be sent to cell phones through one of the email-to-SMS gateways in this list. This command determines the order in which the storage system attempts to use these SMS gateways.

Only one gateway is used and subsequent gateways are only tried if the preceding ones in this priority list return an error.

Specific SMS destinations may define their own SMS gateways to be used when sending SMS to these destinations, regardless of this list.

Example:

```
smsgw_prioritize order=SMSGW1,SMSGW2
```

Output:

```
Command completed successfully
```


Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **GATEWAY_NAME_APPEARS_TWICE**
The gateway name appears twice on the list.
- **GATEWAY_NAME_DOES_NOT_EXIST**
The gateway name does not exist.
- **GATEWAY_NAME_MISSING_FROM_LIST**
The gateway name is missing from the list.

Renaming an SMS gateway

Use the `smsgw_rename` command to rename an SMS gateway.

```
smsgw_rename smsgw=SMSSGatewayName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
<code>smsgw</code>	Object name	SMS gateway to be renamed.	Y
<code>new_name</code>	Object name	New name for the SMS gateway.	Y

Before renaming an SMS gateway, make sure that all alerting events are cleared.

Example:

```
smsgw_rename smsgw=SMSSGW2 new_name=external1-SMSGW
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**

Cannot change an event configuration while there are alerting events.

Troubleshooting: Clear all alerting events before changing an event configuration.

- **GATEWAY_NAME_ALREADY_EXISTS**

The gateway name already exists.

- **GATEWAY_NAME_DOES_NOT_EXIST**

The gateway name does not exist.

Updating an SMS gateway

Use the **smsgw_update** command to update an SMS gateway.

```
smsgw_update smsgw=SMSGatewayName [ email_address=email ]  
[ subject_line=SubjectLineScheme ] [ email_body=EmailBodyScheme ]  
[ smtpgw=<SMTPGW1[,SMTPGW2]...|ALL> ]
```

Parameters

Name	Type	Description	Mandatory	Default
smsgw	Object name	SMS gateway name.	Y	N/A
email_address	Token String	Format for email address.	N	Leave unchanged.
subject_line	Token String	Format for subject line.	N	Leave unchanged.
email_body	Token String	Format for the email's body.	N	Leave unchanged.
smtpgw	Object name	List of SMTP gateways to be used.	N	The SMTP gateways defined in the smtpgw_prioritize command.

This command updates the configuration information of an existing SMS gateway. For the exact description and documentation of each parameter, see the documentation of Defining an SMS gateway.

This command cannot be executed while there are uncleared alerting events.

Parameters that are not specified will not be changed.

Example:

```
smsgw_update smsgw=SMMSGW1
email_address={areacode}{number}@sms2emailserver.yourcompany.com

subject_line=NextraSMS
email_body={message}
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **GATEWAY_NAME_APPEARS_TWICE**
The gateway name appears twice on the list.
- **GATEWAY_NAME_DOES_NOT_EXIST**
The gateway name does not exist.

Defining a new SMTP gateway

Use the **smtpgw_define** command to define an SMTP gateway.

```
smtpgw_define smtpgw=SMTPGatewayName address=Address
[ from_address=<email|DEFAULT> ]
[ reply_to_address=<email|DEFAULT> ]
```

Parameters

Name	Type	Description	Mandatory	Default
smtpgw	Object name	SMTP gateway name.	Y	N/A
address	N/A	SMTP gateway address (IP or DNS name).	Y	N/A
from_address	N/A	Sender's email address used for outgoing emails sent through this SMTP server.	N	DEFAULT (system-wide sender's address that applies to all servers).

Name	Type	Description	Mandatory	Default
reply_to_address	N/A	The reply to address used for outgoing emails sent through this SMTP server.	N	DEFAULT (system-wide reply-to address that applies to all servers).

Several email gateways can be defined to enable notification of events by email or sending SMS messages via email-to-SMS gateways. By default, the system attempts to send each email notification through the first gateway according to the order that you specify. Subsequent gateways are only tried if the first in line returns an error. A specific email destination, or a specific SMS gateway may be defined to use only specific SMTP gateways.

The SMTP protocol dictates that every email message must specify the email address of the sender. This sender address must be a valid address for two reasons:

- Many SMTP gateways require a valid sender address, otherwise they will not forward the email, as a security measure in order to prevent unauthorized usage of the SMTP server. Often this sender address must be limited to a specific domain.
- The sender's address is used as the destination for error messages generated by the SMTP gateways, such as: incorrect email address, full email mailbox and so on.

If the sender's address is not specified for a specific SMTP gateway, a global system-wide sender's address specified in Setting configuration parameters is used.

The user can also configure a reply-to address which is different from the sender's address, if it is required that the return emails be sent to another destination.

Example:

```
smtpgw_define smtpgw=mailserver1 address=smtp.yourcompany.com
from_address=nextra@yourcompany.com
reply_to_address=nextraerrors@yourcompany.com
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **FROM_ADDRESS_NOT_DEFINED**
Neither the gateway's From Address nor the default From Address is defined.
- **GATEWAY_MAX_REACHED**
The maximum allowed number of gateways is already reached.
- **GATEWAY_NAME_ALREADY_EXISTS**
The gateway name already exists.

Deleting an SMTP gateway

Use the **smtpgw_delete** command to delete the specified SMTP gateway.

```
smtpgw_delete smtpgw=SMTPGatewayName
```

Parameters

Name	Type	Description	Mandatory
smtpgw	Object name	SMTP gateway to be deleted.	Y

A gateway cannot be deleted if it is part of a notification rule, is being used as an SMS gateway, or if it belongs to a destination.

Before deleting an SMTP gateway, make sure that all alerting events are cleared.

Example:

```
smtpgw_delete smtpgw=mailserverbackup
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_SMTP_GATEWAY**
Are you sure you want to delete SMTP gateway *Gateway*?

Return codes

- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **GATEWAY_NAME_DOES_NOT_EXIST**
The gateway name does not exist.
- **GATEWAY_USED_BY_DESTINATION**
The gateway is used by a destination.
- **GATEWAY_USED_BY_SMS_GATEWAY**
The gateway is used by an SMS Gateway.

Listing SMTP gateways

Use the **smtpgw_list** command to list SMTP gateways.

```
smtpgw_list [ smtpgw=SMTPGatewayName ] [ internal=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
smtpgw	Object name	Name of SMTP gateway to list.	N	no
internal	Enumeration	Filters gateways by their XIV-internal attribute.	N	no

This command lists defined SMTP gateways and their configuration information.

Field ID	Field output	Default position
name	Name	1
address	Address	2
priority	Priority	3
from_address	From Address	N/A
reply_to_address	Reply-to Address	N/A
failed	Failed	N/A
port	Port	N/A
creator	Creator	N/A

Example:

```
smtpgw_list
```

Output:

```
Name          Email Address      Port  Priority
-----
mailserver1  smtp.yourcompany.com  25   1
mailserver2  smtp.yourcompany.com  25   2
```

Access control

User Category	Permission	Condition
Storage administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Storage integration administrator	Disallowed	N/A
Application administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Security administrator	Disallowed	N/A
Read-only users	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Technicians	Allowed	N/A

Prioritizing SMTP gateways

Use the `smtpgw_prioritize` command to prioritize SMTP gateways.

```
smtpgw_prioritize order=<gw1[,gw2]...>
```

Parameters

Name	Type	Description	Mandatory
<code>order</code>	Object name	List of all the SMTP gateways in the order of their priority.	Y

Several email gateways can be defined to enable notification of events or the sending of SMS by email. By default, XIV attempts to send each email through the first gateway according to the order that is specified in this command. Only one gateway is used and subsequent gateways are only tried if the preceding ones in this priority list return an error.

These priorities are used only for email destinations and SMS gateways that did not specify their own SMTP gateways.

Example:

```
smtpgw_prioritize order=mailserver2,mailserver1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed

User Category	Permission
Technicians	Disallowed

Return codes

- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **GATEWAY_NAME_APPEARS_TWICE**
The gateway name appears twice on the list.
- **GATEWAY_NAME_DOES_NOT_EXIST**
The gateway name does not exist.
- **GATEWAY_NAME_MISSING_FROM_LIST**
The gateway name is missing from the list.

Renaming an SMTP gateway

Use the **smtpgw_rename** command to rename an SMTP gateway.

```
smtpgw_rename smtpgw=SMTPGatewayName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
smtpgw	Object name	SMTP gateway to be renamed.	Y
new_name	Object name	New name for the SMTP gateway.	Y

Example:

```
smtpgw_rename smtpgw=mailserver2 new_name=mailserverbackup
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **GATEWAY_NAME_ALREADY_EXISTS**
The gateway name already exists.
- **GATEWAY_NAME_DOES_NOT_EXIST**
The gateway name does not exist.

Updating an SMTP gateway

Use the **smtpgw_update** command to update the configuration of an SMTP gateway.

```
smtpgw_update smtpgw=SMTPGatewayName [ address=Address ]  
[ from_address=<email|DEFAULT> ]  
[ reply_to_address=<email|DEFAULT> ] [ internal=<yes|no> ]  
[ port=PortNumber ]
```

Parameters

Name	Type	Description	Mandatory	Default
smtpgw	Object name	SMTP gateway name.	Y	N/A
address	N/A	SMTP gateway address (IP or DNS name).	N	Leave unchanged.
internal	Boolean	For an XIV internal gateway, set to Yes.	N	NO
from_address	N/A	Sender's email address used for out-going emails sent through this SMTP server, or DEFAULT for the system-wide default.	N	Leave unchanged.
reply_to_address	N/A	The reply-to address used for outgoing emails sent through this SMTP server, or DEFAULT for the system-wide default.	N	Leave unchanged.
port	Integer	TCP port used in the gateway instead of the default port 25.	N	Leave unchanged.

This command updates the configuration of an existing SMTP gateway. Fields which are not specified are not changed.

Example:

```
smtpgw_update smtpgw=mailserver1 address=smt2.yourcompany.com
from_address=nextra@yourcompany.com
reply_to_address=nextraerrors@yourcompany.com
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Storage integration administrator	Disallowed	N/A
Application administrator	Conditionally Allowed	Allowed, unless the internal parameter is specified.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Allowed	N/A

Return codes

- **GATEWAY_NAME_DOES_NOT_EXIST**
The gateway name does not exist.
- **CANNOT_CHANGE_EVENT_CONF_WITH_ALERTING_EVENTS**
Cannot change an event configuration while there are alerting events.
Troubleshooting: Clear all alerting events before changing an event configuration.
- **FROM_ADDRESS_NOT_DEFINED**
Neither the gateway's From Address nor the default From Address is defined.

Generating an XMPNS admin control event

Use the `xmpns_admin_config_set` command to generate an `XMPNS_ADMIN_CONTROL` event.

```
xmpns_admin_config_set action=Action user=User
```

Parameters

Name	Type	Description	Mandatory
<code>action</code>	String	Action code text.	Y
<code>user</code>	String	User name.	Y

This command generates an `XMPNS_ADMIN_CONTROL` event which includes the `action_code` text in the event's description field. The username is also added to the action string sent in the description field.

Example:

```
xmpns_admin_config_set action user
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Chapter 15. IP configuration commands

This section describes the command-line interface (CLI) for IP configuration.

Creating a new IP interface

Use the **ipinterface_create** command to create a new IP interface for iSCSI.

```
ipinterface_create ipinterface=IPInterfaceName address=Address netmask=NetworkMask  
[ gateway=DefaultGateway ] [ mtu=MTU ] module=ModuleNumber port=PortNumber  
[ speed=<auto|10mb|100mb|1000mb|1gb|2500mb|2.5gb|10000mb|10gb> ]
```

Parameters

Name	Type	Description	Mandatory	Default
ipinterface	Object name	The name of the IP interface to be created. Do not use the names Management or VPN.	Y	N/A
address	N/A	IP address of the interface.	Y	N/A
netmask	N/A	Network mask of the interface.	Y	N/A
gateway	N/A	IP address of the default gateway for this interface. This parameter is optional.	N	None
mtu	Integer	Maximum Transmission Unit: The supported packet size by the connecting Ethernet switch. This is optional when the default equals 1536. MTU of up to 4500 is supported.	N	4500 for iSCSI and 1536 for Management and VPN.
module	N/A	Component identifier (rack and module) of the module containing Ethernet ports.	Y	N/A
port	Integer	Port Number	Y	N/A
speed	Enumeration	Interface's speed, either automatic or explicit. An explicit speed turns off auto-negotiation.	N	auto

This command defines a new IP interface for iSCSI traffic. Gateway, MTU, network mask and IP are the standard IP definitions.

Each iSCSI Ethernet port can be defined as an IP interface.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **IPINTERFACE_EXISTS**
This IP interface name is already in use.
- **ILLEGAL_PORT_NUMBER**
The port number is out of range.
- **PORT_IS_USED_IN_ANOTHER_IP_INTERFACE**
One of the physical ports specified is already assigned to an IP Interface.
- **IP_ADDRESS_ALREADY_USED_IN_ANOTHER_INTERFACE**
The IP address is already assigned to another interface.
- **IPADDRESS_AND_GATEWAY_ARE_NOT_ON_SAME_SUBNET**
The IP address specified for the default gateway is not in the subnet of the IP interface.
- **MTU_TOO_LARGE**
The specified MTU value is too large.
- **ILLEGAL_COMPONENT_ID**
This component ID is illegal.
- **ILLEGAL_IPADDRESS**
An illegal IP address was entered.
- **DUPLICATE_IPADDRESSES**
Duplicate IP addresses were specified.
- **ILLEGAL_GATEWAY_IPADDRESS**
An illegal IP address was specified for the default gateway.

Deleting IP interfaces

Use the **ipinterface_delete** command to delete an IP interface.

```
ipinterface_delete ipinterface=IPInterfaceName
```

Parameters

Name	Type	Description	Mandatory
ipinterface	Object name	The IP interface to be deleted.	Y

Only the interfaces defined for iSCSI traffic can be deleted. Management and VPN interfaces cannot be deleted.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **IPINTERFACE_DOES_NOT_EXIST**
This IP interface name does not exist.
- **COMMAND_NOT_ALLOWED_ON_MANAGEMENT_OR_VPN_INTERFACE**
The operation is not allowed on the management or VPN IP Interface.
- **IPINTERFACE_HAS_CONNECTIVITY**
The IP interface has connectivity defined to another machine.

Listing IP interface configuration

Use the **ipinterface_list** command to list the configuration of a specific IP interface or all IP interfaces.

```
ipinterface_list [ ipinterface=IPInterfaceName | address=Address | address6=IPv6address ]
```

Parameters

Name	Type	Description	Mandatory	Default
ipinterface	Object name	The IP interface to be listed.	N	All interfaces
address	N/A	IP address of the interface to be listed.	N	All interfaces
address6	N/A	IPv6 address of the interface to be listed.	N	All interfaces

This command lists configuration information for the specified IP interface, or for all IP interfaces (including management). The management or VPN name can only be used to view the configuration of the management of VPN interfaces.

The following information is listed:

- Name
- Type (iSCSI/management)
- IP address (or comma separated addresses for management and VPN)
- Network mask
- Default gateway
- CIDR address (or comma separated addresses for management and VPN)

- Default IPv6 gateway
- MTU
- Module (for iSCSI only)
- Comma separated list of ports (for iSCSI only)
- Interface desired speed information

Example:

```
ipinterface_list
```

Output:

```
Name          Type          IP Address    Network Mask  Default Gateway  IPv6 Address
-----
management    Management    9.151.154.239 255.255.248.0 9.151.159.254

Cont.:

IPv6 Gateway  MTU    Module      Port  IP access group name
-----
              1500   1:Module:12
```

Field ID	Field output	Default position
name	Name	1
type	Type	2
address	IP Address	3
netmask	Network Mask	4
gateway	Default Gateway	5
address6	IPv6 Address	6
gateway6	IPv6 Gateway	7
mtu	MTU	8
module	Module	9
port	Port	10
speed	Speed	N/A
access_group	IP access group name	11

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing IP interface addresses

Use the `ipinterface_list_ips` command to list the IP addresses configured on a specific IP interface or all IP interfaces.

```
ipinterface_list_ips [ ipinterface=IPInterfaceName |  
address=Address | address6=IPv6address | module=ModuleNumber ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>ipinterface</code>	Object name	The IP interface to be listed.	N	All interfaces
<code>address</code>	N/A	IP address of the interface to be listed.	N	All addresses
<code>address6</code>	N/A	IPv6 address of the interface to be listed.	N	All addresses
<code>module</code>	N/A	Limits the listing to a specific module.	N	All modules

This command lists IP addresses for the specified interface, or for the specified module, or for both (including Management). The Management or VPN name can only be used to view IP addresses configured for the management of VPN interfaces.

The following information is listed:

- IP Interface
- Interface Type (iSCSI/Management/VPN)
- Address (in CIDR format)
- Address type (Static IPv4/Static IPv6/Link Local IPv6/Site Local IPv6/Global IPv6)
- Module

Example:

```
ipinterface_list_ips
```

Output:

```
IP Interface  Interface Type  Address  
-----  
management  Management      2001:bf8:2000:5159:42f2:e9ff:feaf:ccb2/64  
management  Management      9.151.154.239/21  
management  Management      fe80::42f2:e9ff:feaf:ccb2/64  
  
Cont.:  
  
Address Type  Module          IP access group name  
-----  
Global IPv6   1:Module:12  
Static IPv4   1:Module:12  
Link Local IPv6 1:Module:12
```

Field ID	Field output	Default position
ipinterface	IP Interface	1
ipinterface_type	Interface Type	2
address	Address	3
address_type	Address Type	4
module	Module	5
access_group	IP access group name	6

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Showing the status and configuration of Ethernet ports

Use the **ipinterface_list_ports** command to list all Ethernet ports together with their configuration and status.

```
ipinterface_list_ports
```

All physical Ethernet ports used to connect to the user's network are listed. The list includes the following information:

- Component ID (Module number for iSCSI or switch number for management/field technician port)
- Port number on module/switch
- For management/VPN/field technician: "management"/"VPN"/"field technician"
- IP interface containing the ports (or none, if port is not configured as part of IP interface)
- Status up/down
- Auto-negotiation: Half-full duplex, 1000/100/10

Example:

```
ipinterface_list_ports
```

Output:

Index	Role	IP Interface	Connected Component	Link Up?
1	Component		1:Flash_Canister:4:1	yes
1	Component		1:Flash_Canister:4:2	yes
1	IPMI		1:Module:13	yes
1	IPMI		1:Module:14	yes
1	IPMI		1:Module:9	yes
1	Internal		1:IB_Switch:1:12	yes
1	Internal		1:IB_Switch:1:13	yes
1	Internal		1:IB_Switch:1:8	yes
1	Management			yes
1	iSCSI			unknown
1	iSCSI			unknown
1	iSCSI			unknown
2	IPMI		1:Module:11	yes
2	IPMI		1:Module:12	yes
2	IPMI		1:Module:7	yes
2	iSCSI			unknown
2	iSCSI			unknown
2	iSCSI			unknown

Cont.:

Negotiated Speed (Mb/s)	Full Duplex?	Module	RX Flow Control?	TX Flow Control?
1000	yes	1:Module:12	yes	yes
1000	yes	1:Module:13	yes	yes
1000	yes	1:Module:12	yes	yes
1000	yes	1:Module:13	yes	yes
1000	yes	1:Module:8	yes	yes
10000	yes	1:Module:12	yes	yes
10000	yes	1:Module:13	yes	yes
10000	yes	1:Module:8	yes	yes
1000	yes	1:Module:12	yes	yes
N/A	unknown	1:Module:12	yes	yes
N/A	unknown	1:Module:13	yes	yes
N/A	unknown	1:Module:8	yes	yes
1000	yes	1:Module:12	yes	yes
1000	yes	1:Module:13	yes	yes
1000	yes	1:Module:8	yes	yes
N/A	unknown	1:Module:12	yes	yes
N/A	unknown	1:Module:13	yes	yes
N/A	unknown	1:Module:8	yes	yes

Field ID	Field output	Default position
index	Index	1
role	Role	2
ip_interface_name	IP Interface	3
connected_component	Connected Component	4
is_link_up	Link Up?	5
negotiated_speed_Mbs	Negotiated Speed (Mb/s)	6
is_full_duplex	Full Duplex?	7
module_id	Module	8
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A
pause_autonegotiate	Flow control auto-negotiate?	N/A
pause_rx	RX Flow Control?	9
pause_tx	TX Flow Control?	10

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Renaming an IP interface

Use the `ipinterface_rename` command to rename an IP interface.

```
ipinterface_rename ipinterface=IPInterfaceName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
<code>ipinterface</code>	Object name	Original name of the IP interface.	Y
<code>new_name</code>	Object name	The new name of the IP interface.	Y

This command renames an IP interface. The IP interface must be unique in the system. This command cannot be applied to Management or VPN interfaces.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **IPINTERFACE_DOES_NOT_EXIST**
This IP interface name does not exist.
- **IPINTERFACE_EXISTS**
This IP interface name is already in use.
- **COMMAND_NOT_ALLOWED_ON_MANAGEMENT_OR_VPN_INTERFACE**
The operation is not allowed on the management or VPN IP Interface.

Printing the ARP database of an IP interface

Use the `ipinterface_run_arp` command to print the ARP database of the specified IP interface.

```
ipinterface_run_arp localipaddress=IPaddress | localipaddress6=IPv6address
```

Parameters

Name	Description	Mandatory
<code>localipaddress</code>	IP address of the IP interface for which the ARP database should be printed.	N
<code>localipaddress6</code>	IPv6 address of the IP interface for which the ARP database should be printed.	N

This command prints a list of the ARP database of an IP interface with its IP addresses and their associated Ethernet MAC addresses. The IP address must be one of the IP addresses defined for iSCSI IP interfaces, or the management or VPN name.

Field ID	Field output	Default position
<code>arp_output</code>	arp Output	1

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **NO_IP_INTERFACE_MATCHES_CRITERIA**
No IP Interface matches the defined criteria.
- **MORE_THAN_ONE_IP_INTERFACE_MATCHES**
More than one IP Interface matches the defined criteria.

Testing the traceroute to a remote IP

Use the `ipinterface_run_traceroute` to test connectivity to a remote IP node using the ICMP trace-route mechanism.

```
ipinterface_run_traceroute localipaddress=IPaddress remote=remoteHost
```

Parameters

Name	Description	Mandatory
localipaddress	IP address of the IP interface for which the traceroute command is run.	Y
remote	IP address or DNS for the traceroute test.	Y

This command runs a route trace to the specified remote host through the specified IP interface. The IP address must be one of the IP addresses defined for iSCSI IP interfaces or the Management or VPN name.

Field ID	Field output	Default position
traceroute_output	traceroute Output	1

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **NO_IP_INTERFACE_MATCHES_CRITERIA**
No IP Interface matches the defined criteria.
- **MORE_THAN_ONE_IP_INTERFACE_MATCHES**
More than one IP Interface matches the defined criteria.

Testing the traceroute to a remote IP

Use the **ipinterface_run_traceroute6** command to test connectivity to a remote IP node using the ICMP trace-route mechanism.

```
ipinterface_run_traceroute6 localipaddress6=IPv6address remote6=remoteHost
```

Parameters

Name	Description	Mandatory
localipaddress6	IPv6 address of the IP interface for which the traceroute6 command is run.	Y
remote6	IPv6 address or DNS for the traceroute test.	Y

This command runs a route trace to the specified remote host through the specified IP interface. The IP address must be one of the IP addresses defined for iSCSI IP interfaces or the Management or VPN name.

Field ID	Field output	Default position
traceroute_output	traceroute Output	1

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **NO_IP_INTERFACE_MATCHES_CRITERIA**
No IP Interface matches the defined criteria.
- **MORE_THAN_ONE_IP_INTERFACE_MATCHES**
More than one IP Interface matches the defined criteria.

Updating an IP interface

Use the **ipinterface_update** command to update the configuration of an IP interface.

```
ipinterface_update ipinterface=IPInterfaceName [ address=Address ] [ netmask=NetworkMask ]
[ gateway=DefaultGateway ] [ address6=IPv6address ] [ gateway6=DefaultIPv6Gateway ]
[ mtu=MTU ] [ access_group=IPAccessGroupName ]
```

Parameters

Name	Type	Description	Mandatory	Default
ipinterface	Object name	The name of the IP interface to be updated.	Y	N/A
address	N/A	IP address of the interface or a list of addresses for the Management and VPN interfaces.	N	Leaves the address unchanged.
netmask	N/A	Network mask of the interface.	N	Leaves the network mask unchanged.
gateway	N/A	IP address of the default gateway for this interface.	N	Leaves unchanged.
address6	N/A	IPv6 address of the interface or a list of addresses for the Management and VPN interfaces.	N	Leaves the address unchanged.

Name	Type	Description	Mandatory	Default
gateway6	N/A	IPv6 address of the default gateway for this interface.	N	Leaves unchanged.
mtu	Integer	Maximum Transmission Unit: The packet size that is supported by the connecting Ethernet switch.	N	Keep unchanged.
access_group	Object name	The name of the IP access group used for IP filtering.	N	Keep unchanged.

This command updates the configuration of an existing IP interface.

Fields that are not specified do not change their values.

The name of the interface may either be one of the previously defined IP interfaces for iSCSI, or Management for the management IP interface, or VPN for the VPN interface.

Management ports are dedicated for CLI and GUI communications, as well as for outgoing SNMP and SMTP connections. For management interfaces, the user must specify three IP addresses (equal to the number of potential managers, minus the number of management ports).

For VPN interfaces, the user must specify two IP addresses (equal to the number of VPN ports). All VPN addresses must reside on the same subnet.

Example:

```
ipinterface_update ipinterface=management
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **IPINTERFACE_DOES_NOT_EXIST**
This IP interface name does not exist.
- **IP_ADDRESS_ALREADY_USED_IN_ANOTHER_INTERFACE**

The IP address is already assigned to another interface.

- **IPADDRESS_AND_GATEWAY_ARE_NOT_ON_SAME_SUBNET**

The IP address specified for the default gateway is not in the subnet of the IP interface.

- **IPINTERFACE_MANAGEMENT_DIFFERENT_SUBNET**

All IP addresses management modules must be in the same subnet.

- **IPINTERFACE_MANAGEMENT_MISSING_IPS**

The number of IP addresses specified is smaller than the number of management modules.

- **IPINTERFACE_MANAGEMENT_TOO_MANY_IPS**

The number of IP addresses specified is larger than the number of management modules.

- **MTU_TOO_LARGE**

The specified MTU value is too large.

- **ILLEGAL_IPADDRESS**

An illegal IP address was entered.

- **DUPLICATE_IPADDRESSES**

Duplicate IP addresses were specified.

- **ILLEGAL_GATEWAY_IPADDRESS**

An illegal IP address was specified for the default gateway.

- **ILLEGAL_IPV6ADDRESS**

An illegal IPv6 address was entered.

- **DUPLICATE_IPV6ADDRESSES**

Duplicate IPv6 addresses were specified.

- **ILLEGAL_GATEWAY_IPV6_ADDRESS**

An illegal IPv6 address was specified for the default gateway.

- **IPV6ADDRESS_AND_GATEWAY_ARE_NOT_ON_SAME_SUBNET**

The IPv6 address specified for the default gateway is not in the subnet of the IP interface.

- **IPV6_ADDRESS_ALREADY_USED_IN_ANOTHER_INTERFACE**

The IPv6 address is already assigned to another interface.

- **IPINTERFACE_MANAGEMENT_MISSING_IPV6S**

The number of IPv6 addresses specified is smaller than the number of management modules.

- **IPINTERFACE_MANAGEMENT_TOO_MANY_IPV6S**

The number of IPv6 addresses specified is larger than the number of management modules.

- **IPINTERFACE_MANAGEMENT_DIFFERENT_IPV6_SUBNET**

All IPv6 addresses management modules must be in the same subnet.

- **IP_ACCESS_GROUP_DOES_NOT_EXIST**

IP access group with such name doesn't exist

- **IP_ACCESS_INVALID_INTERFACE_TYPE**

IP filtering is applied to an invalid interface (should be management or VPN).

Defining a new IPsec connection

Use the `ipsec_connection_add` command to add a new IPsec connection.

```
ipsec_connection_add ipsec_connection=ConnectionName left=IPInterfaceName  
[ right_ip=RightIpAddress ] < passkey=PassKey | certificate=PemCertificate >
```

Parameters

Name	Type	Description	Mandatory	Default
<code>ipsec_connection</code>	N/A	The name of the IPsec connection to be added.	Y	N/A
<code>left</code>	Object name	The name of the IP interface to be used as the left side: management or VPN.	Y	N/A
<code>right_ip</code>	N/A	IP address of the right side.	N	Any
<code>passkey</code>	N/A	Secret password.	N	N/A
<code>certificate</code>	N/A	The content of a .pem file, with asterisks (*) instead of newlines. In Windows, drag-and-drop the .pem file from the Windows Explorer to the appropriate location in the XCLI session window; the content will be added automatically.	N	N/A

This command defines a new IPsec connection between an IP interface and the right side.

IP interface can be either management or VPN. If specified:

- the address of the right side is IPv4 or IPv6; otherwise the right side can be any
- the secret password must be shared between the left and the right sides
- the certificate must contain a public key of the right side

Example:

```
ipsec_connection_add ipsec_connection=MySec left=management passkey="MyPass123"
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed

User Category	Permission
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **IPSEC_CONNECTION_EXISTS**
The IPsec connection already exists.
- **IPSEC_CONNECTION_BETWEEN_ENDPOINTS_EXISTS**
A connection between these endpoints already exists.
- **LEFT_INTERFACE_NOT_FOUND**
The specified left side interface was not found.
- **MAX_IPSEC_CONNECTIONS_REACHED**
The maximum allowed number of configured IPsec connections is already reached.
- **IPSEC_UNSUPPORTED_FOR_ISCSI**
IPsec is not supported for iSCSI ports.
- **SSL_CERTIFICATE_CHAIN_EMPTY**
No certificates were found in the input.
- **SSL_CERTIFICATE_HAS_EXPIRED**
The SSL certificate has expired.
- **SSL_CERTIFICATE_INVALID_FORMAT**
The SSL certificate format is invalid or corrupted.
- **SSL_CERTIFICATE_ISSUER_NOT_FOUND**
The SSL certificate issuer was not found in the certificate chain.
- **SSL_CERTIFICATE_NOT_YET_VALID**
The SSL certificate is not yet valid.
- **SSL_CERTIFICATE_VERIFICATION_FAILED**
The SSL certificate chain verification failed.
- **SSL_CERTIFICATE_VERIFICATION_INTERNAL_ERROR**
The SSL certificate verification has failed because of an internal system error.

Updating an existing IPsec connection

Use the **ipsec_connection_update** command to update an existing IPsec connection.

```
ipsec_connection_update ipsec_connection=ConnectionName [ left=IPInterfaceName ]
[ right_ip=RightIpAddress ] [ passkey=PassKey | certificate=PemCertificate ]
```

Parameters

Name	Type	Description	Mandatory	Default
ipsec_connection	Object name	The name of the IPsec connection to be updated.	Y	N/A

Name	Type	Description	Mandatory	Default
left	Object name	The name of the IP interface to be used as left side: management or VPN.	N	None
right_ip	N/A	The IP address of the right side.	N	None
passkey	N/A	Pre-shared key.	N	None
certificate	N/A	The content of a .pem file, with asterisks (*) instead of newlines. In Windows, drag-and-drop the .pem file from the Windows Explorer to the appropriate location in the XCLI session window; the content will be added automatically.	N	None

This command updates an existing IPsec connection between an IP interface and the right side.

IP interface can be either management or VPN. If specified:

- the address of the right side is IPv4 or IPv6; otherwise the right side can be any
- the pre-shared key must be shared between the left and the right sides
- the certificate must contain a public key of the right side.

Example:

```
ipsec_connection_update ipsec_connection=MySec passkey="MyNewPass!@#"
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **IPSEC_CONNECTION_DOES_NOT_EXIST**
The specified IPsec connection does not exist.
- **IPSEC_CONNECTION_EXISTS**
The IPsec connection already exists.
- **LEFT_INTERFACE_NOT_FOUND**

The specified left side interface was not found.

- **IPSEC_UNSUPPORTED_FOR_ISCSI**
IPSec is not supported for iSCSI ports.
- **SSL_CERTIFICATE_CHAIN_EMPTY**
No certificates were found in the input.
- **SSL_CERTIFICATE_HAS_EXPIRED**
The SSL certificate has expired.
- **SSL_CERTIFICATE_INVALID_FORMAT**
The SSL certificate format is invalid or corrupted.
- **SSL_CERTIFICATE_ISSUER_NOT_FOUND**
The SSL certificate issuer was not found in the certificate chain.
- **SSL_CERTIFICATE_NOT_YET_VALID**
The SSL certificate is not yet valid.
- **SSL_CERTIFICATE_VERIFICATION_FAILED**
The SSL certificate chain verification failed.
- **SSL_CERTIFICATE_VERIFICATION_INTERNAL_ERROR**
The SSL certificate verification has failed because of an internal system error.

Removing an existing IPSec connection

Use the `ipsec_connection_remove` command to remove an existing IPSec connection.

```
ipsec_connection_remove ipsec_connection=ConnectionName
```

Parameters

Name	Type	Description	Mandatory
<code>ipsec_connection</code>	Object name	The name of the IPSec connection to be updated.	Y

Example:

```
xcli.py ipsec_connection_remove ipsec_connection=connect1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **IPSEC_CONNECTION_DOES_NOT_EXIST**

The specified IPsec connection does not exist.

Listing IPsec connections

Use the **ipsec_connection_list** command to list all or specific IPsec connections.

```
ipsec_connection_list [ ipsec_connection=ConnectionName ]
```

Parameters

Name	Type	Description	Mandatory	Default
ipsec_connection	Object name	The IPsec connection(s) to be listed.	N	All IPsec connections

Field ID	Field output	Default position
name	IPsec Connection	1
type	Type	2
left	Left Interface	3
right_ip	Right Address	4

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing IPsec tunnels

Use the **ipsec_list_tunnels** command to list all or specific IPsec tunnels.

```
ipsec_list_tunnels [ ipsec_connection=ConnectionName ] [ left=IPInterfaceName ]  
[ left_ip=InterfaceIpAddress ] [ right_ip=RightIpAddress ] [ module=ComponentId ]
```

Parameters

Name	Type	Description	Mandatory	Default
ipsec_connection	Object name	Lists all IPsec tunnels of this IPsec connection.	N	IPsec tunnels of all IPsec connections
left	Object name	Lists all IPsec tunnels from this interface.	N	IPsec tunnels from any interface

Name	Type	Description	Mandatory	Default
left_ip	N/A	Lists all IPSec tunnels from this left IP.	N	IPsec tunnels from any left IP
right_ip	N/A	Lists all IPSec tunnels from this right IP.	N	IPsec tunnels to any right IP
module	N/A	Limits the listing to a specific module.	N	All modules

Field ID	Field output	Default position
name	IPSec Connection	1
type	Type	2
status	Status	3
left	Left Interface	4
left_ip	Left Address	5
right_ip	Right Address	6
module	Module	7

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Connecting to a support center

Use the **support_center_connect** command to connect to a support center.

```
support_center_connect
[ < timeout=Timeout [ idle_timeout=IdleTimeout ] > | always_on=<yes|no> ]
[ module=ModuleNumber ] [ password=Password ]
```

Parameters

Name	Type	Description	Mandatory	Default
timeout	N/A	Specifies the duration of the session. After the duration elapses, the session will be disconnected. Time is specified in hh:mm format.	N	none

Name	Type	Description	Mandatory	Default
idle_timeout	N/A	Specifies the idle time for the session after which it will be disconnected. Time is specified in hh:mm format.	N	[timeout]
module	N/A	The module from which the connection to the support center should be initiated	N	[the module that handled the CLI request]
password	String	A password set by the customer, that needs to be submitted by support services, in order to start a remote support session Format: string, must be 6-12 alpha-numeric characters, and is case-insensitive.	N	none
always_on	Boolean	Enables a constant connection to the support center (rather than an on-demand connection).	N	none

If the support center is not defined, the command will fail.

To control the duration of the session, use the parameters **timeout** and **idle_disconnect**.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **NO_SUPPORT_CENTERS_ARE_DEFINED**
No support centers are defined.
- **IDLE_TIMEOUT_MUST_BE_LOWER_THAN_TIMEOUT**
The idle timeout must be smaller than the regular timeout.
- **MODULE_HAS_NO_SUPPORT_CENTER_PORT**
The specified module does not have a port from which the support center can connect.
- **NO_MODULE_WITH_SUPPORT_CENTER_PORT**

No module has a port from which the support center can connect.

- **REMOTE_SUPPORT_CLIENT_ALREADY_RUNNING**
The Remote Support Client is already running.
- **REMOTE_SUPPORT_CLIENT_AUTOMATICALLY_CONNECT_IS_RUNNING**
The Remote Support Client is running in automatically connect mode.
Troubleshooting: Run `support_center_disconnect` to stop it.

Defining a support center

Use the `support_center_define` command to define a support center.

```
support_center_define support_center=SupportCenterName address=Address [ port=port ]  
[ priority=priority ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>support_center</code>	Object name	The name of the support center server	Y	N/A
<code>address</code>	N/A	The IP address of the support center server	Y	N/A
<code>port</code>	Positive integer	The TCP port to connect to on the support center	N	22
<code>priority</code>	N/A	The priority of the support center (support centers with a higher priority will be connected first)	N	0

Example:

```
xcli.py support_center_define support_center=somewhere address=1.1.1.1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **MAX_SUPPORT_CENTERS_DEFINED**

The maximum number of defined support centers is already reached.

Deleting a support center

Use the **support_center_delete** command to delete a support center.

```
support_center_delete support_center=SupportCenterName
```

Parameters

Name	Type	Description	Mandatory
support_center	Object name	The name of the support center to delete.	Y

Sessions that belong to this support center are disconnected, even if they are open at the time of deletion.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Warnings

- **ARE_YOU_SURE_TO_DELETE_THE_SUPPORT_CENTER**

Are you sure you want to delete the support center?.

Return codes

- **SUPPORT_CENTER_NOT_DEFINED**

The support center is not defined.

- **CANNOT_DELETE_WHILE_SUPPORT_CENTER_IS_RUNNING**

The support center is running. Disconnect it before deleting.

Disconnecting from a support center

Use the **support_center_disconnect** command to disconnect the storage system from a support center.

```
support_center_disconnect
```

Example:

```
support_center_disconnect
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DISCONNECT_BUSY_REMOTE_SUPPORT**
Are you sure you want to disconnect the busy remote support connection?

Return codes

- **REMOTE_SUPPORT_CLIENT_NOT_RUNNING**
The Remote Support Client is not running.

Listing support centers

Use the **support_center_list** command to list support centers.

```
support_center_list
```

This command displays the following information about all defined support centers:

- Name
- IP Address
- Port
- Priority

Field ID	Field output	Default position
name	Name	1
address	Address	2
port	Port	3
priority	Priority	4

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Allowed

User Category	Permission
Technicians	Allowed

Listing the status of all support centers

Use the **support_center_status** command to list information about all defined support centers.

```
support_center_status
```

Example:

```
support_center_status
```

Output:

```
State           Connected sessions  Timeout (min)  Module  Connected since
-----
no connection   0                  no timeout
Cont.:
Destination     Connect-on-restart active
-----
no
```

Field ID	Field output	Default position
state	State	1
connected_support_sessions	Connected sessions	2
minutes_to_timeout	Timeout (min)	3
running_from_module	Module	4
start_time	Connected since	5
destination	Destination	6
automatically_connect_mode	Auto Connect Active	7
stop_automatically_connect	Stop support center automatically connect	N/A
always_on	Always On	8

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Configuring the support center connection to enable automatic connect on restart

Use the **support_center_config** command to configure the automatic connection to the support center on restart.

```
support_center_config automatically_connect=<yes|no> [ connect_through_module1=module ]  
[ connect_through_module2=module ] [ connect_through_module3=module ] [ password=Password ]
```

Parameters

Name	Type	Description	Mandatory	Default
automatically_connect	Boolean	Enables the automatic connection to the support center.	Y	N/A
connect_through_module1	N/A	The first module from which to establish a connection to the support center automatically.	N	Module with first management port
connect_through_module2	N/A	The second module from which to establish a connection to the support center automatically.	N	Module with second management port
connect_through_module3	N/A	The third module from which to establish a connection to the support center automatically.	N	Module with third management port
password	String	A password set by the customer, that needs to be submitted by support services, in order to start a remote support session. Password format: case-insensitive string of 6-12 alphanumeric characters.	N	none

Example:

```
support_center_config automatically_connect=yes
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **MODULE_HAS_NO_SUPPORT_CENTER_PORT**
The specified module does not have a port from which the support center can connect.
- **NO_MODULE_WITH_SUPPORT_CENTER_PORT**
No module has a port from which the support center can connect.

Listing the configuration of the automatic connection to a support center

Use the **support_center_config_list** command to display the configuration of the automatic connection to a support center.

```
support_center_config_list
```

Example:

```
support_center_config_list
```

Output:

```
Enable Auto Conn  First Module  Second Module  Third Module
-----
yes                1                2                -1
```

Field ID	Field output	Default position
enable_auto_conn	Enable Auto Conn	1
module1_id	First Module	2
module2_id	Second Module	3
module3_id	Third Module	4
automatically_connect_reason	Auto Conn Reason	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed

User Category	Permission
Read-only users	Allowed
Technicians	Allowed

Creating a new IP access group

Use the **ip_access_group_create** command to create a new IP access group.

```
ip_access_group_create access_group=IPAccessGroupName
```

Parameters

Name	Type	Description	Mandatory
access_group	Object name	The name of the IP access group to be created.	Y

The group may contain up to 20 addresses and can be used to limit network access to a management/VPN interface.

Example:

```
ip_access_group_create access_group=IPAccessGroup1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **IP_ACCESS_GROUP_ALREADY_EXISTS**
An IP access group with such a name already exists.
- **IP_ACCESS_MAXIMUM_NUMBER_OF_GROUPS_IS_REACHED**
The maximum number of IP access groups is already reached.

Removing an address from an IP access group

Use the `ip_access_group_remove_address` command to delete the IP address of an access group.

```
ip_access_group_remove_address access_group=IPAccessGroupName address=Address
```

Parameters

Name	Type	Description	Mandatory
<code>access_group</code>	Object name	The name of the IP access group.	Y
<code>address</code>	N/A	The address that should be deleted from the IP access group.	Y

As a prerequisite for completing this command, the IP address must be defined for the group.

Example:

```
ip_access_group_remove_address access_group=IPAccessGroup1 address=172.30.214.202
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **IP_ACCESS_GROUP_DOES_NOT_EXIST**
An IP access group with the specified name does not exist.
- **IP_ACCESS_ADDRESS_IS_NOT_VALID**
The given address is not valid.
- **IP_ACCESS_ADDRESS_IS_NOT_IN_GROUP**
The specified address is not in the group.

Adding a new address to an IP access group

Use the `ip_access_group_add_address` command to add a new IP to an access group.

```
ip_access_group_add_address access_group=IPAccessGroupName  
address=Address [ netmask=NetworkMask ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>access_group</code>	Object name	The name of an IP access group.	Y	N/A
<code>address</code>	N/A	A valid IP4 address or FQDN to be added to the IP access group.	Y	N/A
<code>netmask</code>	N/A	The network mask for a network address range.	N	Single IP address range (255.255.255.255).

The address can be an IP4 address with or without a netmask, or a valid host name (FQDN).

Example:

```
ip_access_group_add_address access_group=IPAccessGroup1 address=172.30.214.202
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **IP_ACCESS_GROUP_DOES_NOT_EXIST**
An IP access group with the specified name does not exist.
- **IP_ACCESS_REMOTE_RESOLVE_ADDRESS_CALL_HAS_FAILED**
The remote call to resolve an address has failed.
- **IP_ACCESS_MAXIMUM_NUMBER_OF_ADDRESSES_IN_GROUP_IS_REACHED**
The maximum number of addresses in the IP access group is already reached.

Deleting an existing IP access group

Use the **ip_access_group_delete** command to delete an IP access group.

```
ip_access_group_delete access_group=IPAccessGroupName
```

Parameters

Name	Type	Description	Mandatory
access_group	Object name	The name of the IP access group to be deleted.	Y

Example:

```
ip_access_group_delete access_group=DBGroupNew
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **IP_ACCESS_GROUP_DOES_NOT_EXIST**
An IP access group with the specified name does not exist.
- **IP_ACCESS_GROUP_IN_USE**
The group is used for IP filtering.

Renaming an existing IP access group

Use the **ip_access_group_rename** command to rename an existing IP access group.

```
ip_access_group_rename access_group=IPAccessGroupName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
access_group	Object name	Name of the IP access group to be renamed.	Y
new_name	Object name	A new name of the IP access group.	Y

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **IP_ACCESS_GROUP_DOES_NOT_EXIST**
An IP access group with the specified name does not exist.
- **IP_ACCESS_GROUP_ALREADY_EXISTS**
An IP access group with the specified name already exists.

Listing IP access groups

Use the **ip_access_group_list** command to list IP access groups.

```
ip_access_group_list
```

Field ID	Field output	Default position
name	Group Name	1
addresses.0	Address 1	N/A
addresses.1	Address 2	N/A
addresses.2	Address 3	N/A
addresses.3	Address 4	N/A
addresses.4	Address 5	N/A
addresses.5	Address 6	N/A
addresses.6	Address 7	N/A
addresses.7	Address 8	N/A
addresses.8	Address 9	N/A
addresses.9	Address 10	N/A
addresses.10	Address 11	N/A
addresses.11	Address 12	N/A
addresses.12	Address 13	N/A
addresses.13	Address 14	N/A
addresses.14	Address 15	N/A
addresses.15	Address 16	N/A
addresses.16	Address 17	N/A
addresses.17	Address 18	N/A
addresses.18	Address 19	N/A
addresses.19	Address 20	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Disallowed

Listing IP access groups

Use the **ip_access_group_address_list** command to list IP access group addresses.

```
ip_access_group_address_list
```

This command lists IP access groups and address lists for these groups.

Example:

```
ip_access_group_address_list
```

Output:

```
Group Name      Address
-----
DBGroup         192.168.1.10
IPAccessGroup1 172.30.214.202
```

Field ID	Field output	Default position
access_group	Group Name	1
address	Address	2

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Disallowed

Chapter 16. PKI configuration commands

This section describes the command-line interface (CLI) for PKI configuration.

Listing PKI items

Use the **pki_list** command to list PKI items.

```
pki_list
```

The storage system allows you to install certificates generated by your own certificate authority (CA) for the different services that use digital certificates (SSL authentication, IPSec, and so on). When you install a certificate, it is associated with a name that you provide, which is used for managing it.

Certificates can be installed in one of two ways, depending on your site PKI policy:

- System generated: This method does not expose the system private key
 - The system generates a public-private keypair
 - The public key is exported in a certificate signing request (CSR) file using the **pki_generate_private_key_and_csr** command.
 - CA generated: The CA signs this file, returning a .PEM file that is then imported into the storage system using the **pki_set_pem** command.
- The CA generates both the key pair and associated certificate. Both are provided in a password-protected PKCS#12 file.
 - This file is imported into the system using the **pki_set_pkcs12** command.

The **pki_list** command lists the following information:

- Name
- Fingerprint
- Has signed certificate
- Services

Field ID	Field output	Default position
name	Name	1
fingerprint	Fingerprint	2
authenticated	Has signed certificate	3
services	Services	4

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed

User Category	Permission
Technicians	Disallowed

Generating a certificate signing request

Use the **pki_generate_csr** command to generate a certificate signing request.

```
pki_generate_csr name=Name subject=Subject
```

Parameters

Name	Type	Description	Mandatory
name	String	The certificate's symbolic name.	Y
subject	N/A	The subject name for the generated certificate request. The argument must be formatted as /type0=value0/type1=value1/type2=... .	Y

Example:

```
pki_generate_csr name subject
```

Field ID	Field output	Default position
csr	CSR	1

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **FAILED_CREATING_CERTIFICATE_SIGNING_REQUEST**

Failed to generate a certificate signing request.

Troubleshooting: Generate a certificate signing request with a correct subject (for example, '/C=US/CN=IBM').

- **CERTIFICATE_NAME_DOES_NOT_EXIST**

A certificate with the indicated name was not found.

Troubleshooting: Enter a different name.

Generating a private key and CSR

Use the `pki_generate_private_key_and_csr` command to generate a private key and CSR.

```
pki_generate_private_key_and_csr name=Name subject=Subject [ bits=Bits ]
```

Parameters

Name	Type	Description	Mandatory	Default
bits	Integer	The private key size in bits. It can be between 1024 to 4096.	N	2048
name	String	The certificate's symbolic name.	Y	N/A
subject	N/A	The subject name for the generated certificate request. The argument must be formatted as /type0=value0/ type1=value1/ type2=... .	Y	N/A

Example:

```
pki_generate_private_key_and_csr name="my_cert"  
subject="/C=US/CN=IBM" bits=1024
```

Field ID	Field output	Default position
csr	CSR	1

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **FAILED_CREATING_CERTIFICATE_SIGNING_REQUEST**
Failed to generate a certificate signing request.
Troubleshooting: Generate a certificate signing request with a correct subject (for example, '/C=US/CN=IBM').
- **FAILED_CREATING_PRIVATE_KEY**
Failed to create a private key.
- **CERTIFICATE_NAME_ALREADY_EXIST**

A certificate with the indicated name already exists.

Troubleshooting: Enter a different name.

- **CERTIFICATE_CONTAINER_FULL**

Cannot add any more certificates, the maximum number is already reached.

Troubleshooting: Delete a certificate.

Deleting the PKI content

Use the **pki_remove** command to delete the PKI content.

```
pki_remove name=Name
```

Parameters

Name	Type	Description	Mandatory
name	String	The certificate's symbolic name.	Y

Example:

```
pki_remove name="my_cert"
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_CERTIFICATE**

Are you sure you want to delete certificate?

Return codes

- **CERTIFICATE_NAME_DOES_NOT_EXIST**

A certificate with the indicated name was not found.

Troubleshooting: Enter a different name.

- **DEFAULT_CERTIFICATE_CANNOT_BE_DELETED**

The default certificate cannot be deleted.

Changing a PKI symbolic name

Use the **pki_rename** command to change a PKI symbolic name.

```
pki_rename name=Name new_name=Name
```


Parameters

Name	Type	Description	Mandatory
name	String	The current symbolic name.	Y
new_name	String	The new symbolic name.	Y

Example:

```
pki_rename name="current_name" new_name="my_new_name"
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **CERTIFICATE_NAME_ALREADY_EXIST**
A certificate with the indicated name already exists.
Troubleshooting: Enter a different name.
- **CERTIFICATE_NAME_DOES_NOT_EXIST**
A certificate with the indicated name was not found.
Troubleshooting: Enter a different name.

Importing a signed certificate

Use the **pki_set_pem** command to import a signed certificate in PEM format.

```
pki_set_pem certificate=SignedCertificate [ services=<xcli [ ,cim ]  
[ ,ipsec ] ... | ALL | NONE> ]
```

Parameters

Name	Description	Mandatory	Default
services	A comma-separated list of services that use this certificate.	N	none

Name	Description	Mandatory	Default
certificate	The content of signed certificate in .pem file format. Asterisks (*) can be used instead of newlines. In Windows, drag-and-drop the .pem file from the Windows Explorer to the appropriate location in the XCLI session window; the content will be added automatically.	Y	N/A

As a security precaution, use the **pki_show_security** command to view the certificate in plain text, and make sure that the certificate text under *Signature Algorithm* does not include the string *MD5*. This will help you avoid a "transcript collision" attack, that can force a hash-construction downgrade to MD5 and reduce expected security. For the vulnerability summary, see the National Vulnerability Database.

Example:

```
pki_set_pem certificate=validCertificateChain
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **SERVICE_IS_USING_OTHER_CERTIFICATE**
Service '*services*' is using another certificate.
Troubleshooting: Edit the certificate previously used by the service.
- **PRIVATE_KEY_ALREADY_HAS_OTHER_CERTIFICATE**
The private key matching this certificate already has another certificate.
Troubleshooting: To replace the certificate, use the `pki_update` command.
- **CERTIFICATE_KEY_WAS_NOT_FOUND**
Failed to set the certificate.
Troubleshooting: Make sure the certificate parameters are correct.
- **SSL_CERTIFICATE_CHAIN_EMPTY**

No certificates were found in the input.

- **SSL_CERTIFICATE_HAS_EXPIRED**
The SSL certificate has expired.
- **SSL_CERTIFICATE_INVALID_FORMAT**
The SSL certificate format is invalid or corrupted.
- **SSL_CERTIFICATE_ISSUER_NOT_FOUND**
The SSL certificate issuer was not found in the certificate chain.
- **SSL_CERTIFICATE_NOT_YET_VALID**
The SSL certificate is not yet valid.
- **SSL_CERTIFICATE_VERIFICATION_FAILED**
The SSL certificate chain verification failed.
- **SSL_CERTIFICATE_VERIFICATION_INTERNAL_ERROR**
The SSL certificate verification has failed because of an internal system error.

Importing a PKCS#12 certificate

Use the **pki_set_pkcs12** command to import a PKCS#12 certificate.

```
pki_set_pkcs12 name=Name password=Password certificate=Base64Data  
[ services=<xcli [ ,cim ] [ ,ipsec ] ... | ALL | NONE> ]
```

Parameters

Name	Type	Description	Mandatory	Default
services	N/A	A comma-separated list of services that use this certificate.	N	none
password	String	The PKCS#12 file password.	Y	N/A
name	String	The certificate's symbolic name.	Y	N/A
certificate	N/A	The PKCS#12 content in one-line base64 format. Such input can be created, for example, by a base64 utility: base64 -w0 myCert.pfx	Y	N/A

As a security precaution, use the **pki_show_security** command to view the certificate in plain text, and make sure that the certificate text under *Signature Algorithm* does not include the string *MD5*. This will help you avoid a "transcript collision" attack, that can force a hash-construction downgrade to MD5 and reduce expected security. For the vulnerability summary, see the National Vulnerability Database.

Example:

```
pki_set_pkcs12 name=myPki password=pkiPassword certificate=pkiCertificateBase64
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **SERVICE_IS_USING_OTHER_CERTIFICATE**
Service '*services*' is using another certificate.
Troubleshooting: Edit the certificate previously used by the service.
- **CANNOT_VALIDATE_PKCS12_FILE**
Failed validating PKCS#12 file.
Troubleshooting: Make sure that the PKCS#12 file content is encoded to base64, and the password is correct.
- **DEFAULT_CERTIFICATE_ALREADY_EXIST**
Other default certificate already exist.
Troubleshooting: Remove the default certificate, or make it not default.
- **CERTIFICATE_NAME_ALREADY_EXIST**
A certificate with the indicated name already exists.
Troubleshooting: Enter a different name.
- **BAD_BASE64_DATA**
Data cannot be decoded as base-64 data.
- **FAILED_GETTING_PRIVATE_KEY_FINGERPRINT**
Failed to retrieve a private key fingerprint.
- **FAILED_ENCRYPTING_PRIVATE_KEY**
Failed to encrypt a private key.
- **CERTIFICATE_CONTAINER_FULL**
Cannot add any more certificates, the maximum number is already reached.
Troubleshooting: Delete a certificate.

Displaying the details of a signed certificate

Use the **pki_show_certificate** command to display the details of a signed certificate.

```
pki_show_certificate name=Name
```

Parameters

Name	Type	Description	Mandatory
name	String	The certificate's symbolic name.	Y

As a security precaution, use this command to view the certificate in plain text, and make sure that the certificate text under *Signature Algorithm* does not include the string *MD5*. This will help you avoid a "transcript collision" attack, that can force a hash-construction downgrade to MD5 and reduce expected security. For the vulnerability summary, see the National Vulnerability Database.

Example:

```
pki_show_certificate name=ibm
```

Field ID	Field output	Default position
certificate	Certificate	1

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **FAILED_PARSING_CERTIFICATE**
Failed parsing the certificate.
- **KEY_HAS_NO_CERTIFICATE**
The key has no signed certificate defined.
- **CERTIFICATE_NAME_DOES_NOT_EXIST**
A certificate with the indicated name was not found.
Troubleshooting: Enter a different name

Updating a PKI certificate or services

Use the **pki_update** command to update a PKI certificate or services.

```
pki_update name=Name [ services=<xcli [ ,cim ] [ ,ipsec ] ... | ALL | NONE> ]  
[ certificate=SigendCertificate ]
```

Parameters

Name	Type	Description	Mandatory	Default
services	N/A	Comma-separated list of services that need to use this certificate.	N	none
name	String	The certificate's symbolic name.	Y	N/A
certificate	N/A	If this parameter is defined, the certificate will be replaced.	N	none

Example:

```
pki_update name=cert services=xcli,cim
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **SERVICE_IS_USING_OTHER_CERTIFICATE**
Service '*services*' is using another certificate.
Troubleshooting: Edit the certificate previously used by the service.
- **NO_PKI_UPDATE_PARAMETERS_SPECIFIED**
No parameters were specified for the update.
- **CERTIFICATE_DOES_NOT_MATCH_PRIVATE_KEY**
The certificate does not match the private key.
Troubleshooting: Use another certificate.
- **CANNOT_SET_SERVICES_BEFORE_SETTING_CERTIFICATE**
Cannot set services before setting the certificate.
Troubleshooting: Set the certificate first.
- **DEFAULT_CERTIFICATE_ALREADY_EXIST**
The default certificate already exists.
Troubleshooting: Delete the default certificate or make it not default.
- **CERTIFICATE_KEY_WAS_NOT_FOUND**
Failed to set the certificate.
Troubleshooting: Make sure the certificate parameters are correct.
- **CERTIFICATE_NAME_DOES_NOT_EXIST**
A certificate with the indicated name was not found.
Troubleshooting: Enter a different name.

- **SSL_CERTIFICATE_CHAIN_EMPTY**
No certificates were found in the input.
- **SSL_CERTIFICATE_HAS_EXPIRED**
The SSL certificate has expired.
- **SSL_CERTIFICATE_INVALID_FORMAT**
The SSL certificate format is invalid or corrupted.
- **SSL_CERTIFICATE_ISSUER_NOT_FOUND**
The SSL certificate issuer was not found in the certificate chain.
- **SSL_CERTIFICATE_NOT_YET_VALID**
The SSL certificate is not yet valid.
- **SSL_CERTIFICATE_VERIFICATION_FAILED**
The SSL certificate chain verification failed.
- **SSL_CERTIFICATE_VERIFICATION_INTERNAL_ERROR**
The SSL certificate verification has failed because of an internal system error.

Chapter 17. InfiniBand commands

This section describes the command-line interface (CLI) for InfiniBand fabric management.

Listing the configured InfiniBand ports

Use the **ib_port_list** command to list the configured InfiniBand ports.

```
ib_port_list [ ib_port=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
ib_port	The InfiniBand port to be listed.	N	All IB ports

Example:

```
ib_port_list
```

Field ID	Field output	Default position
port	Port	1
component_id	Connected Component	2
status	Status	3
skip_miswire	Allow Any GUID	4
saved_info.peer_guid	GUID	5
saved_info.last_state	State	6
saved_info.is_cm_ok	CM OK	N/A
saved_info.port_down_reason	Failure Reason	7
saved_info.last_state_change	Last State Change	N/A
saved_info.last_cm_check	Last CM Check	N/A
pending_ia_cmd	Component Operation	N/A
currently_functioning	Currently Functioning	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing data counters for the enabled InfiniBand switch ports

Use the `ib_port_counter_list` command to list data counters for the enabled InfiniBand switch ports.

```
ib_port_counter_list [ ib_port=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
<code>ib_port</code>	The InfiniBand switch port to be listed.	N	All IB switch ports

Example:

```
ib_port_counter_list
```

Output:

```
Port                TX Data            RX Data            TX Pkt
-----
1:IB_Switch_Port:1:12  32110694059954    34132513631987    252139221702
1:IB_Switch_Port:1:13  10294316107140    13659311859037    72287616839

RX Pkt              XmtWait
-----
251995529475        752259049
322306678848        41571936
```

Field ID	Field output	Default position
<code>port</code>	Port	1
<code>XmtData</code>	TX Data	2
<code>RcvData</code>	RX Data	3
<code>XmtPkts</code>	TX Pkt	4
<code>RcvPkts</code>	RX Pkt	5
<code>XmtWait</code>	XmtWait	6

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing error counters for enabled InfiniBand switch ports

Use the `ib_port_error_list` command to list error counters for the enabled InfiniBand switch ports.

```
ib_port_error_list [ ib_port=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
<code>ib_port</code>	The InfiniBand switch port to be listed.	N	All IB switch ports

Example:

```
xccli -u -c XIV1 ib_port_error_list
```

Output:

```

Port
-----
1:IB_Switch_Port:1:12  0      0      134    0      0      31778
1:IB_Switch_Port:1:13  0      0      134    0      0      5514

XmtDisc  XmtCErr  RcvCErr  LinkIErr  ExcBOEre  VL15Dr
-----
20237    0         0         0          0          0
35740    0         0         0          0          0

```

Field ID	Field output	Default position
<code>port</code>	Port	1
<code>SymbolErrors</code>	SymErr	2
<code>LinkRecovers</code>	LinkRec	3
<code>LinkDowned</code>	LinkDown	4
<code>RcvErrors</code>	RcvErr	5
<code>RcvRemotePhysErrors</code>	RcvRPErr	6
<code>RcvSwRelayErrors</code>	RcvSRErr	7
<code>XmtDiscards</code>	XmtDisc	8
<code>XmtConstraintErrors</code>	XmtCErr	9
<code>RcvConstraintErrors</code>	RcvCErr	10
<code>LinkIntegrityErrors</code>	LinkIErr	11
<code>ExcBufOvrrunErrors</code>	ExcBOEre	12
<code>VL15Dropped</code>	VL15Dr	13

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed

User Category	Permission
Technicians	Allowed

Listing the status of the enabled InfiniBand switch ports

Use the **ib_port_info_list** command to list the status of the enabled InfiniBand switch ports.

```
ib_port_info_list [ ib_port=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
ib_port	The InfiniBand switch port to be listed.	N	All IB switch ports

Example:

```
xcli -u -c XIV1 ib_port_info_list
```

Output:

```

Port                IB Log State  IB Phys State  Link Speed  Link Width
-----
1:IB_Switch_Port:1:12  ACTIVE       LINK UP       14.0625 Gbps  X4
1:IB_Switch_Port:1:13  ACTIVE       LINK UP       14.0625 Gbps  X4

```

Field ID	Field output	Default position
port	Port	1
log_state	IB Log State	2
phys_state	IB Phys State	3
link_speed	Link Speed	4
link_width	Link Width	5
link_width_sup	Link Width Sup	N/A
link_speed_sup	Link Speed Sup	N/A
link_speed_enabled	Link Speed Ena	N/A
link_width_enabled	Link Width Ena	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing data counters for the enabled InfiniBand HCA ports

Use the `ib_hca_counter_list` command to list data counters for InfiniBand HCA ports, enabled on modules and flash enclosures.

```
ib_hca_counter_list [ hca_port=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
<code>hca_port</code>	The InfiniBand HCA port to be listed.	N	All IB HCA ports

Example:

```
ib_hca_counter_list
```

Output:

```

Port
-----
1:IB_FlashSystem_Port:4:1  0          0          0
1:IB_FlashSystem_Port:4:3  0          0          0
1:IB_FlashSystem_Port:4:5  0          0          0
1:IB_FlashSystem_Port:4:7  0          0          0
1:IB_Module_Port:12:1     254584779527  252260909954  2055238854
1:IB_Module_Port:12:2     0            0            0
1:IB_Module_Port:13:1     252395242864  254798454598  2061534883
1:IB_Module_Port:13:2     0            0            0
1:IB_Module_Port:8:1      254003578209  254027205845  2055494787
1:IB_Module_Port:8:2      0            0            0

RX Pkt      XmtWait
-----
0           0
0           0
0           0
0           0
2058771428  103686442
0           0
2060782961  94235849
0           0
2059021166  103031319
0           0

```

Field ID	Field output	Default position
<code>port</code>	Port	1
<code>XmtData</code>	TX Data	2
<code>RcvData</code>	RX Data	3
<code>XmtPkts</code>	TX Pkt	4
<code>RcvPkts</code>	RX Pkt	5
<code>XmtWait</code>	XmtWait	6

Access control

User Category	Permission
Storage administrator	Allowed

User Category	Permission
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing error counters for the enabled InfiniBand HCA ports.

Use the `ib_hca_error_list` command to list error counters for InfiniBand HCA ports, enabled on modules and flash enclosures.

```
ib_hca_error_list [ hca_port=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
<code>hca_port</code>	The InfiniBand HCA port to be listed.	N	All IB HCA ports

Example:

```
ib_hca_error_list
```

Field ID	Field output	Default position
<code>port</code>	Port	1
<code>SymbolErrors</code>	SymErr	2
<code>LinkRecovers</code>	LinkRec	3
<code>LinkDowned</code>	LinkDown	4
<code>RcvErrors</code>	RcvErr	5
<code>RcvRemotePhysErrors</code>	RcvRPErr	6
<code>RcvSwRelayErrors</code>	RcvSRErr	7
<code>XmtDiscards</code>	XmtDisc	8
<code>XmtConstraintErrors</code>	XmtCErr	9
<code>RcvConstraintErrors</code>	RcvCErr	10
<code>LinkIntegrityErrors</code>	LinkIErr	11
<code>ExcBuf0verrunErrors</code>	ExcBOEre	12
<code>VL15Dropped</code>	VL15Dr	13

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing the statuses of the enabled InfiniBand HCA ports

Use the `ib_hca_info_list` command to list the statuses of InfiniBand HCA ports, enabled on modules and flash enclosures.

```
ib_hca_info_list [ hca_port=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
<code>hca_port</code>	The InfiniBand HCA port to be listed.	N	All IB HCA ports

Example:

```
ib_hca_info_list
```

Output:

```
Port                               IB Log State  IB Phys State
-----
1:IB_FlashSystem_Port:4:1         NOT SAMPLED   NOT SAMPLED
1:IB_FlashSystem_Port:4:3         NOT SAMPLED   NOT SAMPLED
1:IB_FlashSystem_Port:4:5         NOT SAMPLED   NOT SAMPLED
1:IB_FlashSystem_Port:4:7         NOT SAMPLED   NOT SAMPLED
1:IB_Module_Port:12:1             ACTIVE        LINK UP
1:IB_Module_Port:12:2             INIT          LINK UP
1:IB_Module_Port:13:1             ACTIVE        LINK UP
1:IB_Module_Port:13:2             INIT          LINK UP
1:IB_Module_Port:8:1              ACTIVE        LINK UP
1:IB_Module_Port:8:2              INIT          LINK UP

Link Speed   Link Width
-----
NOT SAMPLED  NOT SAMPLED
NOT SAMPLED  NOT SAMPLED
NOT SAMPLED  NOT SAMPLED
NOT SAMPLED  NOT SAMPLED
14.0625 Gbps X4
14.0625 Gbps X4
14.0625 Gbps X4
14.0625 Gbps X4
14.0625 Gbps X4
14.0625 Gbps X4
```

Field ID	Field output	Default position
<code>port</code>	Port	1
<code>log_state</code>	IB Log State	2
<code>phys_state</code>	IB Phys State	3
<code>link_speed</code>	Link Speed	4
<code>link_width</code>	Link Width	5
<code>link_width_sup</code>	Link Width Sup	N/A
<code>link_speed_sup</code>	Link Speed Sup	N/A
<code>link_speed_enabled</code>	Link Speed Ena	N/A
<code>link_width_enabled</code>	Link Width Ena	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing the configured InfiniBand switches

Use the **switch_list** command to list the configured InfiniBand switches.

```
switch_list [ switch=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
switch	IB switch to list.	N	All IB switches

Example:

```
switch_list
```

Output:

```
Switch          Switch GUID      Status  MGMT OK  Ports OK  Power OK  BBU OK
-----
1:IB_Switch:1  E41D2D03003C9900  OK      yes      yes      yes      yes
1:IB_Switch:2  E41D2D03003C9A80  OK      yes      yes      yes      yes

Cont.:

Fan OK  Temp OK  Volt OK  Boot Time          FW          Serial
-----
yes     yes     yes     04/04/2016 10:51:18  3.5.0500  MT1523X09088
yes     yes     yes     27/03/2016 15:28:31  3.5.0500  MT1523X09091
```

Field ID	Field output	Default position
component_id	Switch	1
status	Status	3
sw_mgmt_status	MGMT Status	N/A
num_of_down_ports	Down Ports	N/A
mgmt_ok	MGMT OK	4
ports_ok	Ports OK	5
power_ok	Power OK	6
bbu_ok	BBU OK	7
fan_ok	Fan OK	8
temp_ok	Temp OK	9
volt_ok	Volt OK	10
fw	FW	12

Field ID	Field output	Default position
mgmt_serial_number	Serial	13
mgmt_part_number	Part No	N/A
mgmt_asic_rev	ASIC Rev	N/A
mgmt_hw_rev	HW Rev	N/A
cpld_tor	CPLD Tor	N/A
cpld_port1	CPLD Port1	N/A
cpld_switch_brd	CPLD Switch Brd	N/A
chassis_serial_number	Chassis Serial	N/A
chassis_part_number	Chassis Part No	N/A
chassis_asic_rev	Chassis ASIC Rev	N/A
chassis_hw_rev	Chassis HW Rev	N/A
original_mgmt_serial_number	Original Serial	N/A
original_mgmt_part_number	Original Part No	N/A
original_mgmt_asic_rev	Original ASIC Rev	N/A
original_mgmt_hw_rev	Original HW Rev	N/A
original_chassis_serial_number	Original Chassis Serial	N/A
original_chassis_part_number	Original Chassis Part No	N/A
original_chassis_asic_rev	Original Chassis ASIC Rev	N/A
original_chassis_hw_rev	Original Chassis HW Rev	N/A
currently_functioning	Currently Functioning	N/A
mgmt_guid	Management GUID	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A
fabric_switch_info.miss_count	Miss Count	N/A
fabric_switch_info.num_of_ports	Ports	N/A
fabric_switch_info.image_guid	FW GUID	N/A
fabric_switch_info.node_guid	Switch GUID	2
fabric_switch_info.dev_id	Device ID	N/A
fabric_switch_info.dev_rev	Device Revision	N/A
fabric_switch_info.vendor_id	Vendor ID	N/A
fabric_switch_info.name	Name	N/A
fabric_switch_info.mlx_dev_id	Ext Device ID	N/A
fabric_switch_info.mlx_hw_rev	Ext Device Revision	N/A
fabric_switch_info.boot_time	Boot Time	11
fabric_switch_info.uptime_seconds	Uptime	N/A
fabric_switch_info.fw_build_id	FW BUILD ID	N/A
fabric_switch_info.fw_rev	FW Ver	N/A
fabric_switch_info.fw_build_date	FW Build Date	N/A
fabric_switch_info.psid	PSID	N/A
used_power	Total Power Used	N/A
power_capacity	Total Power Capacity	N/A
power_available	Total Power Available	N/A
projected_max_used_power	Projected Max User Power	N/A

Field ID	Field output	Default position
bbu_runtime	Battery Runtime	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing the configured InfiniBand switch management addresses

Use the `switch_mgmt_ip_list` command to list the configured InfiniBand switch management addresses.

```
switch_mgmt_ip_list [ switch=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
switch	IB switch to list.	N	All IB switches

Example:

```
switch_mgmt_ip_list
```

Output:

```
Switch      Type      NAT IP      Router      Real IP      Status
-----
1:IB_Switch:1  IPOIB    14.10.255.1  1:IB_Switch:1  14.10.255.1  OK
1:IB_Switch:1  MGMT1    14.10.254.1  1:Module:1     192.168.0.254  OK
1:IB_Switch:1  MGMT2    14.10.253.1  1:Module:4     192.168.1.254  OK
1:IB_Switch:1  SERIAL   14.10.10.3   1:Module:3     14.10.10.3     OK
1:IB_Switch:2  IPOIB    14.10.255.2  1:IB_Switch:2  14.10.255.2   OK
1:IB_Switch:2  MGMT1    14.10.254.2  1:Module:2     192.168.0.254  OK
1:IB_Switch:2  MGMT2    14.10.253.2  1:Module:3     192.168.1.254  OK
1:IB_Switch:2  SERIAL   14.10.10.4   1:Module:4     14.10.10.4     OK
```

Field ID	Field output	Default position
switch_id	Switch	1
type	Type	2
nat_ip	NAT IP	3
router	Router	4
real_ip	Real IP	5
status	Status	6

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing the configured InfiniBand switch firmware versions

Use the **switch_fw_list** command to list the configured InfiniBand switch firmware versions.

```
switch_fw_list [ switch=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
switch	IB switch to list.	N	All IB switches

Example:

```
switch_fw_list
```

Output:

```
Switch      Type      Version
-----
1:IB_Switch:1  ASIC      9.3.7170
1:IB_Switch:1  BBU1      703
1:IB_Switch:1  BBU2      703
1:IB_Switch:1  BIOS      4.6.5
1:IB_Switch:1  CPLD_PORT1  4
1:IB_Switch:1  CPLD_SWITCH_BRD  7
1:IB_Switch:1  CPLD_TOR   9
1:IB_Switch:1  MGMT      3.5.0500
1:IB_Switch:1  PSU1      404
1:IB_Switch:1  PSU2      404
1:IB_Switch:2  ASIC      9.3.7170
1:IB_Switch:2  BBU1      703
1:IB_Switch:2  BBU2      703
1:IB_Switch:2  BIOS      4.6.5
1:IB_Switch:2  CPLD_PORT1  4
1:IB_Switch:2  CPLD_SWITCH_BRD  7
1:IB_Switch:2  CPLD_TOR   9
1:IB_Switch:2  MGMT      3.5.0500
1:IB_Switch:2  PSU1      404
1:IB_Switch:2  PSU2      404
```

Field ID	Field output	Default position
switch_id	Switch	1
type	Type	2
version	Version	3
original_version	Original Version	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing the configured InfiniBand switch power values

Use the **switch_power_list** command to list the configured InfiniBand switch power values for PSUs and BBUs.

```
switch_power_list [ switch=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
switch	IB switch to list.	N	All IB switches

Example:

```
switch_power_list
```

Output:

Switch	Type	Power W	Voltage V	Current A	Capacity W	Feed	Status
1:IB_Switch:1	BBU1	N/A	N/A	N/A	330.00	NA	OK
1:IB_Switch:1	BBU2	N/A	N/A	N/A	330.00	NA	OK
1:IB_Switch:1	PS1	46.00	12.11	2.56	400.00	AC	OK
1:IB_Switch:1	PS2	44.00	12.19	2.75	400.00	AC	OK
1:IB_Switch:2	BBU1	N/A	N/A	N/A	330.00	NA	OK
1:IB_Switch:2	BBU2	N/A	N/A	N/A	330.00	NA	OK
1:IB_Switch:2	PS1	47.00	12.05	2.56	400.00	AC	OK
1:IB_Switch:2	PS2	44.00	12.14	2.81	400.00	AC	OK

Field ID	Field output	Default position
switch_id	Switch	1
type	Type	2
power	Power W	3
voltage	Voltage V	4
current	Current A	5
capacity	Capacity W	6
feed	Feed	7
status	Status	8

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing the configured InfiniBand switch voltage values

Use the **switch_voltage_list** command to list the configured InfiniBand switch voltage values.

```
switch_voltage_list [ switch=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
switch	IB switch to list.	N	All IB switches

Example:

```
switch_voltage_list
```

Output:

Switch	Type	Expected	Actual	Status	High	Low
1:IB_Switch:1	1.05V LAN	1.50	1.49	OK	1.72	1.27
1:IB_Switch:1	Asic 1.2V	1.20	1.20	OK	1.38	1.02
1:IB_Switch:1	Asic 1.8V	1.80	1.81	OK	2.06	1.53
1:IB_Switch:1	Asic 3.3V	3.30	3.31	OK	3.79	2.80
1:IB_Switch:1	BBU1	12.00	12.50	OK	13.80	10.19
1:IB_Switch:1	BBU2	12.00	12.50	OK	13.80	10.19
1:IB_Switch:1	CPU 0.9V	0.90	0.85	OK	1.03	0.77
1:IB_Switch:1	CPU 1.05V	1.05	1.03	OK	1.21	0.89
1:IB_Switch:1	CPU 1.8V	1.80	1.78	OK	2.06	1.53
1:IB_Switch:1	CPU/PCH 1.05V	1.05	1.00	OK	1.10	0.81
1:IB_Switch:1	DDR3 0.675V	0.68	0.66	OK	0.78	0.56
1:IB_Switch:1	DDR3 1.35V	1.35	1.34	OK	1.55	1.14
1:IB_Switch:1	PS1 vout 12V	12.00	12.11	OK	13.80	10.19
1:IB_Switch:1	PS2 vout 12V	12.00	12.19	OK	13.80	10.19
1:IB_Switch:1	SYS 3.3V	3.30	3.31	OK	3.79	2.80
1:IB_Switch:1	USB 5V	5.00	5.01	OK	5.75	4.25
1:IB_Switch:1	Vcore SX	0.95	0.96	OK	1.09	0.81
1:IB_Switch:2	1.05V LAN	1.50	1.52	OK	1.72	1.27
1:IB_Switch:2	Asic 1.2V	1.20	1.21	OK	1.38	1.02
1:IB_Switch:2	Asic 1.8V	1.80	1.81	OK	2.06	1.53
1:IB_Switch:2	Asic 3.3V	3.30	3.32	OK	3.79	2.80
1:IB_Switch:2	BBU1	12.00	12.50	OK	13.80	10.19
1:IB_Switch:2	BBU2	12.00	12.50	OK	13.80	10.19
1:IB_Switch:2	CPU 0.9V	0.90	0.86	OK	1.03	0.77
1:IB_Switch:2	CPU 1.05V	1.05	1.06	OK	1.21	0.89
1:IB_Switch:2	CPU 1.8V	1.80	1.83	OK	2.06	1.53
1:IB_Switch:2	CPU/PCH 1.05V	1.05	1.02	OK	1.10	0.81
1:IB_Switch:2	DDR3 0.675V	0.68	0.68	OK	0.78	0.56
1:IB_Switch:2	DDR3 1.35V	1.35	1.37	OK	1.55	1.14
1:IB_Switch:2	PS1 vout 12V	12.00	12.05	OK	13.80	10.19
1:IB_Switch:2	PS2 vout 12V	12.00	12.14	OK	13.80	10.19
1:IB_Switch:2	SYS 3.3V	3.30	3.41	OK	3.79	2.80
1:IB_Switch:2	USB 5V	5.00	5.16	OK	5.75	4.25
1:IB_Switch:2	Vcore SX	0.95	0.96	OK	1.09	0.81

Field ID	Field output	Default position
switch_id	Switch	1
type	Type	2
expected	Expected	3
actual	Actual	4
status	Status	5
high_margin	High	6
low_margin	Low	7

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing the configured InfiniBand switch temperature values

Use the `switch_temp_list` command to list the configured InfiniBand switch temperature values.

```
switch_temp_list [ switch=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
<code>switch</code>	IB switch to list.	N	All IB switches

Example:

```
switch_temp_list
```

Output:

Switch	Type	Actual	Alert	Critical	Status
1:IB_Switch:1	BBU1	19.60	60.00	60.00	OK
1:IB_Switch:1	BBU2	19.50	60.00	60.00	OK
1:IB_Switch:1	MGMT_AMB	20.50	120.00	120.00	OK
1:IB_Switch:1	MGMT_CPU	25.00	120.00	120.00	OK
1:IB_Switch:1	MGMT_CPU1	22.00	120.00	120.00	OK
1:IB_Switch:1	MGMT_CPU2	25.00	120.00	120.00	OK
1:IB_Switch:1	MGMT_PORTS	22.00	120.00	120.00	OK
1:IB_Switch:1	MGMT_SX	28.00	105.00	110.00	OK
1:IB_Switch:1	PS1	24.00	120.00	120.00	OK
1:IB_Switch:1	PS2	24.00	120.00	120.00	OK
1:IB_Switch:2	BBU1	20.00	60.00	60.00	OK
1:IB_Switch:2	BBU2	19.89	60.00	60.00	OK
1:IB_Switch:2	MGMT_AMB	21.00	120.00	120.00	OK
1:IB_Switch:2	MGMT_CPU	26.00	120.00	120.00	OK
1:IB_Switch:2	MGMT_CPU1	25.00	120.00	120.00	OK
1:IB_Switch:2	MGMT_CPU2	19.00	120.00	120.00	OK
1:IB_Switch:2	MGMT_PORTS	22.50	120.00	120.00	OK
1:IB_Switch:2	MGMT_SX	28.00	105.00	110.00	OK
1:IB_Switch:2	PS1	24.00	120.00	120.00	OK
1:IB_Switch:2	PS2	25.00	120.00	120.00	OK

Field ID	Field output	Default position
<code>switch_id</code>	Switch	1
<code>type</code>	Type	2
<code>actual</code>	Actual	3
<code>alert</code>	Alert	4
<code>critical</code>	Critical	5
<code>status</code>	Status	6

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed

User Category	Permission
Read-only users	Allowed
Technicians	Allowed

Listing the configured InfiniBand switch fan parts

Use the `switch_fan_part_list` command to list the configured InfiniBand switch fan parts.

```
switch_fan_part_list [ switch=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
<code>switch</code>	IB switch to list.	N	All IB switches

Example:

```
switch_fan_part_list
```

Output:

Switch	Type	Part No	Serial No	HW Rev	Speed	Status
1:IB_Switch:1	FAN1-F1	MTEF-FANF-B	MT1523X09083	A2	10608.00	OK
1:IB_Switch:1	FAN1-F2	MTEF-FANF-B	MT1523X09083	A2	8998.00	OK
1:IB_Switch:1	FAN2-F1	MTEF-FANF-B	MT1523X09075	A2	10526.00	OK
1:IB_Switch:1	FAN2-F2	MTEF-FANF-B	MT1523X09075	A2	8939.00	OK
1:IB_Switch:1	FAN3-F1	MTEF-FANF-B	MT1523X09082	A2	10608.00	OK
1:IB_Switch:1	FAN3-F2	MTEF-FANF-B	MT1523X09082	A2	8998.00	OK
1:IB_Switch:1	FAN4-F1	MTEF-FANF-B	MT1523X09077	A2	10691.00	OK
1:IB_Switch:1	FAN4-F2	MTEF-FANF-B	MT1523X09077	A2	9242.00	OK
1:IB_Switch:1	PSU1	MTEF-PSF-AC-B	MT1523X09040	A5	14464.00	OK
1:IB_Switch:1	PSU2	MTEF-PSF-AC-B	MT1523X09044	A5	14592.00	OK
1:IB_Switch:2	FAN1-F1	MTEF-FANF-B	MT1523X09065	A2	10526.00	OK
1:IB_Switch:2	FAN1-F2	MTEF-FANF-B	MT1523X09065	A2	9118.00	OK
1:IB_Switch:2	FAN2-F1	MTEF-FANF-B	MT1523X09072	A2	10445.00	OK
1:IB_Switch:2	FAN2-F2	MTEF-FANF-B	MT1523X09072	A2	9118.00	OK
1:IB_Switch:2	FAN3-F1	MTEF-FANF-B	MT1523X09062	A2	10445.00	OK
1:IB_Switch:2	FAN3-F2	MTEF-FANF-B	MT1523X09062	A2	8998.00	OK
1:IB_Switch:2	FAN4-F1	MTEF-FANF-B	MT1523X09073	A2	10526.00	OK
1:IB_Switch:2	FAN4-F2	MTEF-FANF-B	MT1523X09073	A2	8998.00	OK
1:IB_Switch:2	PSU1	MTEF-PSF-AC-B	MT1523X09035	A5	14464.00	OK
1:IB_Switch:2	PSU2	MTEF-PSF-AC-B	MT1523X09033	A5	14464.00	OK

Field ID	Field output	Default position
<code>switch_id</code>	Switch	1
<code>type</code>	Type	2
<code>part_no</code>	Part No	3
<code>serial_no</code>	Serial No	4
<code>hw_rev</code>	HW Rev	5
<code>speed</code>	Speed	6
<code>status</code>	Status	7

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing the configured InfiniBand switch PSUs

Use the **switch_psu_list** command to list the configured InfiniBand switch PSUs.

```
switch_psu_list [ switch_psu=ComponentId ] [ switch=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
switch_psu	IB switch PSU to list.	N	All IB switch PSUs
switch	IB switch whose BBUs are to be listed.	N	All IB switches

Example:

```
switch_psu_list
```

Output:

```
Component ID      Status  Sensor Status  Power W  Voltage V
-----
1:IB_Switch_PSU:1:1  OK      OK              46.00   12.11
1:IB_Switch_PSU:1:2  OK      OK              44.00   12.19
1:IB_Switch_PSU:2:1  OK      OK              47.00   12.05
1:IB_Switch_PSU:2:2  OK      OK              44.00   12.14

Cont.:

Current A  Capacity W
-----
2.94      400.00
2.50      400.00
2.69      400.00
3.25      400.00
```

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
sensor_status	Sensor Status	3
power	Power W	4
voltage	Voltage V	5
current	Current A	6
capacity	Capacity W	7
temperature	Temperature	N/A

Field ID	Field output	Default position
fan_speed	Fan Speed	N/A
fan_sensor_status	Fan Status	N/A
serial_number	Serial No	N/A
original_serial_number	Original Serial No	N/A
part_number	Part No	N/A
original_part_number	Original Part No	N/A
hw_rev	HW Rev	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A
currently_functioning	Currently Functioning	N/A
switch_id	Switch ID	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing the configured InfiniBand switch BBUs

Use the **switch_bbu_list** command to list the configured InfiniBand switch BBUs.

```
switch_bbu_list [ switch_bbu=ComponentId ] [ switch=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
switch_bbu	IB switch BBU to list.	N	All IB switch BBUs
switch	IB switch to list the BBUs of.	N	All IB switches

Example:

```
switch_bbu_list
```

Output:

Component ID	Status	Sensor Status	Remaining capacity	Full charged capacity
1:IB_Switch_BBU:1:1	OK	OK	71520 mWh	80660 mWh
1:IB_Switch_BBU:1:2	OK	OK	46060 mWh	55520 mWh
1:IB_Switch_BBU:2:1	OK	OK	80800 mWh	80800 mWh
1:IB_Switch_BBU:2:2	OK	OK	77840 mWh	80120 mWh
Cont.:				
Percent Charged	Charger Status	Calibration Status	Last Recondition Date	
100%	Fully charged	N/A	N/A	
100%	Fully charged	N/A	N/A	
100%	Fully charged	N/A	N/A	
100%	Fully charged	N/A	N/A	

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
sensor_status	Sensor Status	3
relative_capacity	Remaining capacity	4
absolute_capacity	Full charged capacity	5
relative_capacity_percent	Percent Charged	6
charging_state	Charger Status	7
remaining_charging_time	Remaining Charging Time	N/A
calibration_status	Calibration Status	8
last_calibration_date	Last Recondition Date	9
fw_version	FW	N/A
serial_number	Serial No	N/A
original_serial_number	Original Serial No	N/A
part_number	Part No	N/A
original_part_number	Original Part No	N/A
voltage	Voltage	N/A
exp_voltage	Expected Voltage	N/A
temperature	Temperature	N/A
manufacture_date	Manufacture Date	N/A
designed_capacity	Designed Capacity	N/A
absolute_charge	Absolute Charge	N/A
test_status	Test Status	N/A
last_test_date	Last Test Date	N/A
can_charge	Charge	N/A
can_discharge	Discharge	N/A
charge_rate	Charge Rate	N/A
max_error	Max Error	N/A
hw_rev	HW Rev	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A
currently_functioning	Currently Functioning	N/A
switch_id	Switch ID	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing the configured InfiniBand switch fans

Use the **switch_fan_list** command to list the configured InfiniBand switch fans.

```
switch_fan_list [ switch_fan=ComponentId ] [ switch=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
switch_fan	IB switch fan to list.	N	All IB switch fans
switch	IB switch whose BBUs are to be listed.	N	All IB switches

Example:

```
switch_fan_list
```

Output:

Component ID	Status	Speed	Sensor Status	Peer Speed	Peer Sensor Status
1:IB_Switch_Fan:1:1	OK	10608.00	OK	8998.00	OK
1:IB_Switch_Fan:1:2	OK	10526.00	OK	8939.00	OK
1:IB_Switch_Fan:1:3	OK	10608.00	OK	8998.00	OK
1:IB_Switch_Fan:1:4	OK	10691.00	OK	9242.00	OK
1:IB_Switch_Fan:2:1	OK	10526.00	OK	9118.00	OK
1:IB_Switch_Fan:2:2	OK	10445.00	OK	9118.00	OK
1:IB_Switch_Fan:2:3	OK	10445.00	OK	8998.00	OK
1:IB_Switch_Fan:2:4	OK	10526.00	OK	8998.00	OK

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
speed	Speed	3
sensor_status	Sensor Status	4
peer_speed	Peer Speed	5
peer_sensor_status	Peer Sensor Status	6
serial_number	Serial No	N/A
original_serial_number	Original Serial No	N/A
part_number	Part No	N/A
original_part_number	Original Part No	N/A
hw_rev	HW Rev	N/A

Field ID	Field output	Default position
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A
currently_functioning	Currently Functioning	N/A
switch_id	Switch ID	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Chapter 18. Access control commands

This section describes the command-line interface (CLI) for user access control.

Adding an access control definition

Use the **access_define** command to define an association between a user group and a host.

```
access_define user_group=UserGroup < host=HostName | cluster=ClusterName >
```

Parameters

Name	Type	Description	Mandatory
user_group	Object name	User group to be associated with the host or cluster.	Y
host	Object name	Host to be associated with the user group.	N
cluster	Object name	Cluster to be associated with the user group.	N

This command associates a user group with a host or a cluster. Hosts and clusters can only be associated with a single user group.

Example:

```
access_define host=host1 user_group=usergroup1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **USER_GROUP_NAME_DOES_NOT_EXIST**
The user group name does not exist.
- **CLUSTER_BAD_NAME**
The cluster name does not exist.

- **HOST_BAD_NAME**
The host name does not exist.
- **HOST_BELONGS_TO_CLUSTER**
This host already belongs to a cluster.

Deleting an access control definition

Use the **access_delete** command to delete an access control definition.

```
access_delete user_group=UserGroup < host=HostName | cluster=ClusterName >
```

Parameters

Name	Type	Description	Mandatory
user_group	Object name	The user group specified in the access control definition that should be deleted.	Y
host	Object name	The host specified in the access control definition that should be deleted.	N
cluster	Object name	The cluster specified in the access control definition that should be deleted.	N

This command deletes an association between the user group and host or cluster. The operation fails if no such access definition exists. When a host is removed from a cluster, the host's associations become the cluster's associations. This allows a continued mapping of operations, so that all scripts continue to work.

Example:

```
access_delete user_group=usergroup1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **USER_GROUP_NAME_DOES_NOT_EXIST**
The user group name does not exist.

- **USER_GROUP_DOES_NOT_HAVE_ACCESS_TO_CLUSTER**
User Group does not have access to cluster.
- **CLUSTER_BAD_NAME**
The cluster name does not exist.
- **HOST_BAD_NAME**
The host name does not exist.
- **HOST_BELONGS_TO_CLUSTER**
This host already belongs to a cluster.
- **USER_GROUP_DOES_NOT_HAVE_ACCESS_TO_HOST**
User Group does not have access to host.

Listing access control definitions

Use the **access_list** command to list access control definitions.

```
access_list [ user_group=UserGroup ] [ host=HostName | cluster=ClusterName ]
```

Parameters

Name	Type	Description	Mandatory	Default
user_group	Object name	Filters the access control listing to display only this user group.	N	All user groups.
host	Object name	Filters the access control listing to display only this host.	N	All hosts.
cluster	Object name	Filters the access control listing to display only this cluster.	N	All clusters.

The list can be displayed for all access control definitions, or it can be filtered for a specific user group, host/cluster, or both.

Field ID	Field output	Default position
type	Type	1
name	Name	2
user_group	User Group	3

Example:

```
access_list host=buffyvam
```

Output:

```
Type  Name      User Group
host  buffyvam  testing
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Return codes

- **HOST_BAD_NAME**
The host name does not exist.
- **CLUSTER_BAD_NAME**
The cluster name does not exist.
- **USER_GROUP_NAME_DOES_NOT_EXIST**
The user group name does not exist.

Adding an LDAP server definition

Use the `ldap_add_server` command to add an LDAP server definition.

```
ldap_add_server fqdn=Fqdn [ address=Address ]  
base_dn=LdapDn [ certificate=PemCertificate ] [ port=PortNum ] [ secure_port=PortNum ]
```

Parameters

Name	Type	Description	Mandatory	Default
fqdn	N/A	FQDN of the LDAP server.	Y	N/A
address	N/A	IP address of the LDAP server. Only required when DNS is not available for FQDN to IP address resolution.	N	none
base_dn	N/A	Base_DN of the LDAP server. Serves as the starting reference point for searches.	Y	N/A

Name	Type	Description	Mandatory	Default
certificate	N/A	The content of a .pem file, with asterisks (*) instead of newlines. In Windows, drag-and-drop the .pem file from the Windows Explorer to the appropriate location in the XCLI session window; the content will be added automatically.	N	no certificate
port	Integer	The port number.	N	389
secure_port	Integer	The secure port number.	N	636

Example:

```
ldap_add_server fqdn=ldap.example.com address=1.2.3.4
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **MAX_LDAP_SERVERS_REACHED**
The number of defined LDAP servers already reached the maximum.
- **ADDRESS_CURRENTLY_ASSOCIATED_WITH_ANOTHER_LDAP_SERVER**
The specified IP address is currently associated with another LDAP server.
- **LDAP_SERVER_EXISTS**
LDAP server with the specified FQDN already exists.
- **SSL_CERTIFICATE_CHAIN_EMPTY**
No certificates were found in the input.
- **SSL_CERTIFICATE_HAS_EXPIRED**
The SSL certificate has expired.
- **SSL_CERTIFICATE_INVALID_FORMAT**
The SSL certificate format is invalid or corrupted.

- **SSL_CERTIFICATE_ISSUER_NOT_FOUND**
The SSL certificate issuer was not found in the certificate chain.
- **SSL_CERTIFICATE_NOT_YET_VALID**
The SSL certificate is not yet valid.
- **SSL_CERTIFICATE_VERIFICATION_FAILED**
The SSL certificate chain verification failed.
- **SSL_CERTIFICATE_VERIFICATION_INTERNAL_ERROR**
The SSL certificate verification has failed because of an internal system error.

Testing an LDAP configuration

Use the **ldap_test** command to authenticate the specified user against an LDAP server, based on the existing configuration.

```
ldap_test [ fqdn=Fqdn ] user=UserName password=Password
```

Parameters

Name	Type	Description	Mandatory	Default
fqdn	N/A	FQDN of an LDAP server.	N	All servers
user	String	The username of the tested user.	Y	N/A
password	String	The password of the tested user.	Y	N/A

Example:

```
xccli.py ldap_test user=user1 password=pass1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **NO_LDAP_SERVERS_ARE_DEFINED**
No LDAP servers are defined in the system
- **LDAP_SERVER_NOT_DEFINED**
LDAP server *Server FQDN* is not defined in the system.

- **LDAP_IS_NOT_FULLY_CONFIGURED**
LDAP is not fully configured.
Troubleshooting: Check LDAP settings.
- **NO_LDAP_SERVERS_WITH_CERTIFICATE_ARE_DEFINED**
No LDAP servers with an LDAP certificate are defined in the system.
- **SSL_CERTIFICATE_HAS_EXPIRED_FOR_SERVER**
SSL certificate of LDAP server '*Server FQDN*' expired on *Expiration Date*.
- **USER_IS_PREDEFINED_IN_THE_SYSTEM**
The user is predefined in the system.
- **LOGIN_FAILURE_USER_CANNOT_BE_UNIQUELY_AUTHENTICATED_BY_LDAP_SERVER**
User *User Name* was not uniquely authenticated by LDAP server '*Server FQDN*'.
- **LOGIN_FAILURE_LDAP_SERVER_UNREACHABLE**
No LDAP server can be reached.
- **LOGIN_FAILURE_XIV_USER_NOT_AUTHENTICATED_BY_LDAP_SERVER**
XIV User '*XIV User*' was not authenticated by LDAP server '*Server FQDN*'.
- **LOGIN_FAILURE_LDAP_SERVER_UNREACHABLE_OR_USER_NOT_FOUND**
User *User Name* was not found in LDAP servers '*Servers FQDN*'.
- **LOGIN_FAILURE_INVALID_BASE_DN**
The base dn of server '*Server FQDN*' is invalid.
- **LOGIN_FAILURE_USER_NOT_AUTHENTICATED_BY_LDAP_SERVER**
User *User Name* was not authenticated by LDAP server '*Server FQDN*'.
- **LOGIN_FAILURE_USER_HAS_NO_RECOGNIZED_ROLE**
User *User Name* has no recognized LDAP role.
- **LOGIN_FAILURE_USER_HAS_MORE_THAN_ONE_RECOGNIZED_ROLE**
User *User Name* has more than one recognized LDAP role.
- **LOGIN_FAILURE_USER_MISSING_ID_ATTRIBUTE**
User *User Name* is missing the LDAP ID attribute '*Attribute*'.
- **LOGIN_FAILURE_USER_MISSING_GROUP_ATTRIBUTE**
User *User Name* is missing the group attribute '*Attribute*'.
- **LOGIN_FAILURE_USER_NOT_FOUND_IN_LDAP_SERVERS**
User *User Name* was not found in LDAP servers.
- **LDAP_ROLE_UNRECOGNIZED**
The LDAP role for the user is not recognized in the system.
- **LDAP_SERVER_NOT_FOUND**
No LDAP server with the specified FQDN is defined in the system.
- **LDAP_AUTHENTICATION_IS_NOT_ACTIVE**
LDAP authentication is not active.

Listing LDAP configuration parameters

Use the `ldap_config_get` command to display system parameters that control user authentication against a specified LDAP server.

```
ldap_config_get
```

A successful execution of this command depends on connecting to a valid LDAP server.

The output of the command does not list LDAP servers. For the list of LDAP servers, use the **ldap_list_servers** command.

The **xiv_password** parameter is not listed.

Example:

```
ldap_config_get
```

Output:

```
Name                Value
current_server
base_dn
version             3
xiv_group_attrib
storage_admin_role
read_only_role
session_cache_period 20
bind_time_limit     20
user_id_attrib      objectSid
first_expiration_event 30
second_expiration_event 14
third_expiration_event 7
use_ssl             no
xiv_user
```

Field ID	Field output	Default position
name	Name	1
value	Value	2

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Configuring LDAP in the system

Use the `ldap_config_set` command to configure general system parameters that control user authentication against LDAP servers.

```
ldap_config_set [ user_name_attr=LdapAttrib ] [ xiv_group_attr=LdapAttrib ]
[ storage_admin_role=LdapRole ] [ read_only_role=LdapRole ]
[ security_admin_role=LdapRole ] [ storage_integration_admin_role=LdapRole ]
[ xiv_host_profiler_role=LdapRole ] [ use_ssl=<yes|no> ] [ user_id_attr=LdapAttrib ]
[ session_cache_period=Minutes ] [ bind_time_limit=Seconds ]
[ first_expiration_event=Days ] [ second_expiration_event=Days ]
[ third_expiration_event=Days ] [ version=LdapVersion ] [ xiv_user=LdapAttrib ]
[ xiv_password=LdapAttrib ]
[ server_type=<SUN DIRECTORY|MICROSOFT ACTIVE DIRECTORY|OPEN LDAP> ]
[ group_search_depth=Depth ] [ group_search_max_queries=Number ]
[ group_search_stop_when_found=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>user_name_attr</code>	String	User name attribute for queries. If not specified, it is set to <code>uid</code> for SUN Directory servers and <code>userPrincipalName</code> for Microsoft Active Directory servers.	N	According to server type
<code>xiv_group_attr</code>	String	LDAP attribute designated to hold system-mapped roles.	N	none
<code>storage_admin_role</code>	String	LDAP value mapped to the Storage Administrator role. Multiple (up to 8) values are supported and must be separated with a semicolon (;). Multiple roles are not available for SUN Directory LDAP Servers.	N	none
<code>read_only_role</code>	String	LDAP value mapped to the Read Only role. Multiple (up to 8) values are supported and must be separated with a semicolon (;).	N	none

Name	Type	Description	Mandatory	Default
security_admin_role	String	LDAP value mapped to the Security Administrator role. Multiple (up to 8) values are supported and must be separated with a semicolon (;).	N	none
storage_integration_admin_role	String	LDAP value mapped to the Storage Integration Administrator role. Multiple (up to 8) values are supported and must be separated with a semicolon (;).	N	none
xiv_host_profiler_role	String	LDAP value mapped to the XIV Host Profiler role. Multiple (up to 8) values are supported and must be separated with a semicolon (;).	N	none
use_ssl	Boolean	Indicates whether secure LDAP is mandatory.	N	no
user_id_attr	String	The LDAP attribute set to identify the user (in addition to user DN) when recording user operations in the event log.	N	objectSiD
session_cache_period	Positive integer	Duration of keeping user credentials before attempting to re-login the user.	N	20
bind_time_limit	Positive integer	The duration after which the next LDAP server on the LDAP server list will be called.	N	0. If set to the default, the LDAP server is contacted for every command. Performance issues depend on its availability.
first_expiration_event	Positive integer	The number of days before the expiration of certificate, when the first alert is issued (severity: warning).	N	30/14/7 (third is smallest)

Name	Type	Description	Mandatory	Default
second_expiration_event	Positive integer	The number of days before the expiration of certificate, when the second alert is issued (severity: warning).	N	30/14/7 (third is smallest)
third_expiration_event	Positive integer	The number of days before the expiration of certificate, when the third alert is issued (severity: warning).	N	30/14/7 (third is smallest)
version	Positive integer	Version of LDAP used (only version 3 is supported).	N	3
xiv_user	String	The user for LDAP queries.	N	none
xiv_password	String	The password of user for LDAP queries.	N	none
server_type	Enumeration	Type of the LDAP server.	N	none
group_search_depth	Positive integer	The depth of group hierarchy to search in.	N	0
group_search_max_queries	Positive integer	Maximum number of group queries to perform per server.	N	39
group_search_stop_when_found	Boolean	Stop the group search when a group match is found.	N	yes

LDAP access permissions are not enforced for predefined users. These predefined users are authenticated by the IBM storage system and not by LDAP even if LDAP authentication is enabled.

Predefined user names are:

- admin
- technician
- xiv_development
- xiv_maintenance

When an LDAP user, whose user name is identical with a predefined name, attempts to log into the system with LDAP authentication enabled, access will normally be denied, because:

- the user is not authenticated against LDAP, but rather against the storage system
- the user's (LDAP) password most likely does not match the storage system password.

However, if the user attempts to log into the system using the password of the corresponding predefined user, he or she will be granted the rights of the

corresponding predefined user regardless of LDAP settings (for example, the user's association with the Application Administrator role), because LDAP authentication for predefined users is not required.

Example:

```
ldap_config_set storage_admin_role="CN=EXMPLAdmins,OU=EXMPLLab,DC=CROSSQA,DC=COM"
read_only_role="CN=EXMPL0pers,OU=EXMPLLab,DC=CROSSQA,DC=COM"
user_id_attr=sAMAccountName user_name_attr=sAMAccountName
xiv_group_attr=memberOf xiv_user="CN=allmighty,CN=Users,DC=CROSSQA,DC=COM"
xiv_password=the_password
security_admin_role="CN=EXMPLSecAdmins,OU=EXMPLLab,DC=CROSSQA,DC=COM"
```

Output:

Command executed successfully.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **LDAP_IS_NOT_FULLY_CONFIGURED**
LDAP is not fully configured.
Troubleshooting: Check LDAP settings.
- **LDAP_CONFIG_CHANGE_IS_ILLEGAL_WHEN_AUTHENTICATION_IS_ACTIVE**
This LDAP configuration change is invalid when LDAP-based authentication is active.
Troubleshooting: Disable the LDAP-based authentication and then change the LDAP configuration.
- **LDAP_ROLE_ALREADY_USED**
This LDAP role is already in use in the LDAP configuration or in a user group.
- **NO_LDAP_SERVERS_WITH_CERTIFICATE_ARE_DEFINED**
No LDAP servers with an LDAP certificate are defined in the system.
- **INVALID_EXPIRATION_EVENT_DATES**
The dates for expiration events must be in ascending order.
- **LDAP_READ_ONLY_ROLE_HAS_WRONG_NUMBER_OF_PARTS**
Too many parts in the LDAP read-only role.
Troubleshooting: Role parts are divided by the ';' symbol. The number of parts should be between 0 and 8.
- **LDAP_ROLE_HAS_DUPLICATED_PARTS**
The LDAP role contains duplicated parts.
- **LDAP_STORAGE_ADMIN_ROLE_HAS_WRONG_NUMBER_OF_PARTS**
Too many parts in the LDAP storage administrator role.

Troubleshooting: Role parts are divided by the ';' symbol. The number of parts should be between 0 and 8.

- **LDAP_SECURITY_ADMIN_ROLE_HAS_WRONG_NUMBER_OF_PARTS**

Too many parts in the LDAP security administrator role.

Troubleshooting: Role parts are divided by the ';' symbol. The number of parts should be between 0 and 8.

- **LDAP_STORAGE_INTEGRATION_ADMIN_ROLE_HAS_WRONG_NUMBER_OF_PARTS**

Too many parts in the LDAP storage integration administrator role.

Troubleshooting: Role parts are divided by the ';' symbol. The number of parts should be between 0 and 8.

- **LDAP_XIV_HOST_PROFILER_ROLE_HAS_WRONG_NUMBER_OF_PARTS**

Too many parts in the LDAP XIV host profiler role.

Troubleshooting: Role parts are divided by the ';' symbol. The number of parts should be between 0 and 8.

Listing LDAP servers defined in the system

Use the `ldap_list_servers` command to list LDAP servers defined in the system.

```
ldap_list_servers [ fqdn=Fqdn ]
```

Parameters

Name	Description	Mandatory	Default
<code>fqdn</code>	FQDN of a specific server to list.	N	All servers.

This command lists the LDAP servers defined in the system along with their type description and the indication whether they are mandatory.

Example:

```
ldap_list_servers fqdn
```

Output:

```
<code value="SUCCESS"/>
  <empty_table_message value="No LDAP servers are defined in the system"/>
  <last_change_index value="367896"/>
  <status value="0"/>
  <status_str value="Command completed successfully"/>
```

Field ID	Field output	Default position
<code>fqdn</code>	FQDN	1
<code>address</code>	Address	2
<code>base_dn</code>	Base DN	3
<code>has_certificate</code>	Has Certificate	4
<code>expiration_date</code>	Expiration Date	5
<code>valid_certificate</code>	Valid Certificate	N/A
<code>accessible</code>	Accessible	N/A
<code>port</code>	Port	6

Field ID	Field output	Default position
secure_port	Secure Port	7

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Listing LDAP server users

Use the `ldap_user_list` command to list LDAP server users.

```
ldap_user_list role=Category [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
role	Enumeration	The role of the users to be retrieved from the LDAP server. The available roles are: storageadmin and readonly.	Y	N/A
domain	Object name	The domain name.	N	All Domains

This command retrieves a list of users from the LDAP server by a specific role.

Field ID	Field output	Default position
user_name	User Name	1
user_role	Role	2

Example:

```
ldap_user_list role=storageadmin
```

Output:

```
User Name      Role
-----
readonly_user  Read Only
restldapread  Read Only
test_readonly  Read Only
xivreadonly    Read Only
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **LDAP_AUTHENTICATION_IS_NOT_ACTIVE**
LDAP authentication is not active.
- **LDAP_IS_NOT_FULLY_CONFIGURED**
LDAP is not fully configured.
Troubleshooting: Check LDAP settings.
- **NO_LDAP_SERVERS_ARE_DEFINED**
No LDAP servers are defined in the system
- **NO_LDAP_SERVERS_WITH_CERTIFICATE_ARE_DEFINED**
No LDAP servers with an LDAP certificate are defined in the system.
- **LOGIN_FAILURE_XIV_USER_NOT_AUTHENTICATED_BY_LDAP_SERVER**
XIV User 'XIV User' was not authenticated by LDAP server '*Server FQDN*'.
- **LOGIN_FAILURE_LDAP_SERVER_UNREACHABLE**
No LDAP server can be reached.
- **LOGIN_FAILURE_INVALID_BASE_DN**
The base dn of server '*Server FQDN*' is invalid.

Listing LDAP-based authentication mode

Use the `ldap_mode_get` command to list LDAP-based authentication mode.

```
ldap_mode_get
```

The command succeeds regardless of whether the LDAP server is accessible.

Example:

```
ldap_mode_get
```

Output:

```
Mode  
Inactive
```

Field ID	Field output	Default position
mode	Mode	1

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Enabling or disabling LDAP-based authentication mode

Use the `ldap_mode_set` command to enable or disable LDAP-based authentication mode.

```
ldap_mode_set mode=Mode
```

Parameters

Name	Type	Description	Mandatory
<code>mode</code>	Boolean	The required state of LDAP authentication. Available values: Active, Inactive.	Y

Example:

```
ldap_mode_set mode=active
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **USERS_ASSOCIATED_TO_DOMAIN_ARE_YOU_SURE_YOU_WANT_TO_ENABLE_LDAP_AUTHENTICATION**
There are users associated with domains. Are you sure you want to enable LDAP authentication?
- **ARE_YOU_SURE_YOU_WANT_TO_ENABLE_LDAP_AUTHENTICATION**
Are you sure you want to enable LDAP authentication?

- **ARE_YOU_SURE_YOU_WANT_TO_DISABLE_LDAP_AUTHENTICATION**
Are you sure you want to disable LDAP authentication?

Return codes

- **LDAP_IS_NOT_FULLY_CONFIGURED**
LDAP is not fully configured.
Troubleshooting: Check LDAP settings.
- **NO_LDAP_SERVERS_WITH_CERTIFICATE_ARE_DEFINED**
No LDAP servers with an LDAP certificate are defined in the system.
- **NO_LDAP_SERVERS_ARE_DEFINED**
No LDAP servers are defined in the system

Updating an LDAP server definition

Use the `ldap_update_server` command to update an existing server configuration.

```
ldap_update_server fqdn=Fqdn [ address=Address ] [ base_dn=LdapDn ] [ port=PortNum ]
[ secure_port=PortNum ] [ certificate=PemCertificate | remove_certificate=<no|yes> ]
```

Parameters

Name	Type	Description	Mandatory	Default
fqdn	N/A	FQDN of the LDAP server.	Y	N/A
address	N/A	IP address of the LDAP server.	N	none
certificate	N/A	The content of a .pem file, with asterisks (*) instead of newlines. In Windows, drag-and-drop the .pem file from the Windows Explorer to the appropriate location in the XCLI session window; the content will be added automatically.	N	no certificate
remove_certificate	Boolean	Defines whether to remove the certificate.	N	no
base_dn	N/A	Base_DN of the LDAP directory.	N	none
port	Integer	The port number.	N	none
secure_port	Integer	The secure port number.	N	none

Example:

```
ldap_update_server fqdn=ldap.example.com address=1.2.3.4
remove_certificate=yes
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_UPDATE_LDAP_SERVER**
Are you sure you want to update the LDAP server configuration?

Return codes

- **LDAP_SERVER_NOT_FOUND**
No LDAP server with the specified FQDN is defined in the system.
- **ADDRESS_CURRENTLY_ASSOCIATED_WITH_ANOTHER_LDAP_SERVER**
The specified IP address is currently associated with another LDAP server.
- **NO_UPDATE_PARAMETERS_SPECIFIED**
No LDAP server parameters were specified for the update.
- **SSL_CERTIFICATE_CHAIN_EMPTY**
No certificates were found in the input.
- **SSL_CERTIFICATE_HAS_EXPIRED**
The SSL certificate has expired.
- **SSL_CERTIFICATE_INVALID_FORMAT**
The SSL certificate format is invalid or corrupted.
- **SSL_CERTIFICATE_ISSUER_NOT_FOUND**
The SSL certificate issuer was not found in the certificate chain.
- **SSL_CERTIFICATE_NOT_YET_VALID**
The SSL certificate is not yet valid.
- **SSL_CERTIFICATE_VERIFICATION_FAILED**
The SSL certificate chain verification failed.
- **SSL_CERTIFICATE_VERIFICATION_INTERNAL_ERROR**
The SSL certificate verification has failed because of an internal system error.

Removing an LDAP server definition

Use the `ldap_remove_server` command to remove an LDAP server definition.

```
ldap_remove_server fqdn=Fqdn
```


Parameters

Name	Description	Mandatory
fqdn	FQDN of the server to remove.	Y

Example:

```
ldap_remove_server fqdn=cloud.xivldap2.com
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_REMOVE_LDAP_SERVER**
Are you sure you want to remove the LDAP server?

Return codes

- **LDAP_SERVER_NOT_FOUND**
No LDAP server with the specified FQDN is defined in the system.
- **LDAP_IS_ACTIVE_BUT_THIS_IS_THE_LAST_SERVER**
Deleting the last LDAP server is illegal when LDAP authentication is active.
- **LDAP_USES_SSL_BUT_THIS_IS_THE_LAST_SERVER_WITH_CERTIFICATE**
Deleting the last LDAP server with a valid SSL certificate is illegal when LDAP authentication is active and uses SSL.

Launching the ldapsearch utility

Use the `ldap_search` command to launch the ldapsearch utility.

```
ldap_search user=UserName fqdn=Fqdn [ second_cmd=<yes|no> password=Password ]
```

Parameters

Name	Type	Description	Mandatory	Default
user	Object name	The username to search for.	Y	N/A
password	N/A	The user password to search for.	N	empty

Name	Type	Description	Mandatory	Default
second_cmd	Boolean	Defines whether to invoke the second lsearch command.	N	no
fqdn	N/A	FQDN of LDAP server to query.	Y	N/A

There are 2 LDAP search commands executed in the authentication process. The second one can be issued by setting the **second_cmd** parameter to yes.

Example:

```
ldap_search fqdn user password
```

Output:

```

Name          Index  Value
-----
command_line  0      ldapsearch -H ldap://ldapwin2003.xiv1dap2.com:389...
returncode    0      0
stderr        0
stdout        0      dn: CN=employee,CN=Users,DC=xiv1dap2,DC=com
stdout        1      description: Group One
stdout        2      objectSid:: AQUAAAAAAAAUVAAYcKhShmt01IPSuAbQQAAA==
stdout        3
stdout        4

```

Field ID	Field output	Default position
name	Name	1
index	Index	2
value	Value	3

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **LOGIN_FAILURE_USER_NOT_AUTHENTICATED_BY_LDAP_SERVER**
User *User Name* was not authenticated by LDAP server '*Server FQDN*'.
- **LOGIN_FAILURE_USER_MISSING_GROUP_ATTRIBUTE**
User *User Name* is missing the group attribute '*Attribute*'.
- **LDAP_SERVER_NOT_FOUND**
No LDAP server with the specified FQDN is defined in the system.
- **LOGIN_FAILURE_LDAP_SERVER_UNREACHABLE**
No LDAP server can be reached.

- **LDAP_SERVER_NOT_DEFINED**
LDAP server *Server FQDN* is not defined in the system.
- **LDAP_ROLE_UNRECOGNIZED**
The LDAP role for the user is not recognized in the system.
- **LOGIN_FAILURE_USER_HAS_NO_RECOGNIZED_ROLE**
User *User Name* has no recognized LDAP role.
- **LOGIN_FAILURE_USER_CANNOT_BE_UNIQUELY_AUTHENTICATED_BY_LDAP_SERVER**
User *User Name* was not uniquely authenticated by LDAP server '*Server FQDN*'.
- **LOGIN_FAILURE_XIV_USER_NOT_AUTHENTICATED_BY_LDAP_SERVER**
XIV User '*XIV User*' was not authenticated by LDAP server '*Server FQDN*'.
- **LOGIN_FAILURE_USER_HAS_MORE_THAN_ONE_RECOGNIZED_ROLE**
User *User Name* has more than one recognized LDAP role.
- **LOGIN_FAILURE_USER_MISSING_ID_ATTRIBUTE**
User *User Name* is missing the LDAP ID attribute '*Attribute*'.
- **USER_IS_PREDEFINED_IN_THE_SYSTEM**
The user is predefined in the system.
- **LOGIN_FAILURE_INVALID_BASE_DN**
The base dn of server '*Server FQDN*' is invalid.
- **LDAP_AUTHENTICATION_IS_NOT_ACTIVE**
LDAP authentication is not active.

Defining a new user

Use the **user_define** command to define a new user.

```
user_define user=UserName password=Password password_verify=Password
category=Category
[ email_address=email ]
[ area_code=AreaCode number=PhoneNumber ]
[ domain=DomainList [ exclusive=<yes|no> ] ]
```

Parameters

Name	Type	Description	Mandatory	Default
user	Object name	User name. User names are lower case.	Y	N/A
password	N/A	Password of the user to be created. The password must have between 6 and 12 characters. Any symbols are allowed, except the following: <ul style="list-style-type: none"> • double quotation (") • single quotation or apostrophe (') • grave accent (`) Passwords are case sensitive.	Y	N/A

Name	Type	Description	Mandatory	Default
password_verify	N/A	Password verification, which must be equal to the value of password.	Y	N/A
category	Enumeration	The role of the user to be created. Available roles: storageadmin, applicationadmin, operationsadmin, securityadmin, readonly and opsadmin.	Y	N/A
email_address	N/A	Email address of this user. The email address specified here can be used for event notification. Entering this address is optional. The email address format is any legal email address.	N	N/A
number	N/A	Cellular phone number of the user for event notification via SMS, excluding the area code. Phone numbers and area codes can be a maximum of 63 digits, dashes (-) and periods (.)	N	N/A
area_code	N/A	Area code of the cellular phone number of the user. Phone numbers and area codes can be a maximum of 63 digits, dashes (-) and periods (.)	N	N/A
domain	N/A	The cluster will be attached to the specified domains. To specify more than one domain, separate them with a comma. To specify all existing domains, use "*".	N	none
exclusive	Boolean	Use yes to restrict the user to domain's objects.	N	yes

Email address and phone number are optional and can be used for event notification. The category (user role) may be only one of those specified above (other categories contain only a single predefined user).

The maximum number of users is 128.

Two predefined users are set system-wide: Admin and Technician.

Example:

```
user_define user=xiv_user1 password=s0mePassw0rd password_verify=s0mePassw0rd
category=applicationadmin
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **USER_NAME_ALREADY_EXISTS**
The user name already exists.
- **MAX_USERS_REACHED**
The number of defined users already reached the maximum.
- **PASSWORDS_DO_NOT_MATCH**
Make sure that passwords are identical.
- **USER_PHONE_NUMBER_MUST_ACCOMPANY_AREA_CODE**
The phone number must be indicated together with the area code.
- **LDAP_AUTHENTICATION_IS_ACTIVE**
This command is not available while LDAP authentication is active.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **NON_EXCLUSIVE_USER_NOT_SECURITY_ADMIN**
Only a security administrator can add a user to a domain non-exclusively.
- **USER_CANNOT_BE_ADDED_TO_A_DOMAIN**
The specified user cannot be associated with a domain.
- **SIA_MUST_BE_ASSOCIATED_WITH_A_DOMAIN**
The storage integration administrator must be associated with a domain.

Deleting a user

Use the **user_delete** command to delete a user.

```
user_delete user=UserName
```

Parameters

Name	Type	Description	Mandatory
user	Object name	User to be deleted.	Y

Existing objects created by this user will retain an empty user reference after the user has been deleted.

Two predefined users are set system-wide: Admin and Technician. Predefined users cannot be deleted or renamed.

Example:

```
user_delete user=user1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **LDAP_AUTHENTICATION_IS_ACTIVE**
This command is not available while LDAP authentication is active.
- **USER_NAME_DOES_NOT_EXIST**
The user name does not exist.
- **USER_CANNOT_BE_DELETED**
The user cannot be deleted.
- **USER_IS_REFERRED_TO_BY_DEST**
The user is referred to by an event destination and therefore cannot be deleted.
- **USER_OWNS_RECOVERY_KEY**
The user owns a recovery key and therefore cannot be deleted or renamed.
- **REMOVAL_WOULD_CREATE_UNRESOLVABLE_REFERENCE_BETWEEN_USER_AND_USERGROUP**
Completing this operation will result in a user referring to a user group that is not in its domain.
Troubleshooting: Remove the reference explicitly and re-run the command.

Adding users to user groups

Use the `user_group_add_user` command to add a user to a user group.

```
user_group_add_user user_group=UserGroup user=UserName
```

Parameters

Name	Type	Description	Mandatory
<code>user_group</code>	Object name	User group into which the user is to be added.	Y
<code>user</code>	Object name	User to be added to the user group.	Y

A user group can contain up to eight users.

A user may belong to only one user group.

Only users defined as Application Administrators can be assigned to a group.

This command fails when the user already belongs to the user group.

Example:

```
user_group_add_user user_group=ug1 user=user1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **USER_GROUP_NAME_DOES_NOT_EXIST**
The user group name does not exist.
- **USER_NAME_DOES_NOT_EXIST**
The user name does not exist.
- **USER_ALREADY_INCLUDED_IN_ANOTHER_GROUP**
The user is included into another user group.
- **USER_GROUP_ALREADY_INCLUDES_USER**
The user group already includes a user.
- **ONLY_APPLICATION_ADMIN_USERS_CAN_BE_GROUPED**

User groups can only contain application administrators.

- **USER_GROUP_HAS_MAXIMUM_NUMBER_OF_USERS**

The user group already contains the maximum number of users.

- **LDAP_AUTHENTICATION_IS_ACTIVE**

This command is not available while LDAP authentication is active.

Creating user groups

Use the **user_group_create** command to create a user group.

```
user_group_create user_group=UserGroup [ access_all=<yes|no> ] [ ldap_role=LdapRole ]  
[ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
user_group	Object name	Name of the user group to be created.	Y	N/A
access_all	Boolean	Allows application administrators to perform their specified operations on all volumes and not just on a subset of the specific volumes.	N	no
ldap_role	String	The value representing the user group in LDAP.	N	[none]
domain	N/A	The user_group will be attached to the specified domains. To specify more than one domain, separate them with a comma. To specify all the existing domains, use "*".	N	none

A user group is a group of application administrators who share the same set of snapshot creation limitations. After user groups are created, the limitations of all the users in a user group can be updated with a single command. These limitations are enforced by associating the user groups with hosts or clusters.

Storage administrators create user groups and control the various application administrator's permissions. Hosts and clusters can be associated with only a single user group. When a user belongs to a user group that is associated with a host, it is possible to manage snapshots of the volumes mapped to that host.

User groups have the following limitations:

- Only users who are defined as application administrators can be assigned to a group.

- A user can belong to only a single user group.
- A user group can contain up to eight users.

User and host associations have the following properties:

- User groups can be associated with both hosts and clusters. This allows limiting application administrator access to specific volumes.
- A host that is part of a cluster cannot also be associated with a user group.
- When a host is added to a cluster the host's associations are broken. Limitations on the management of volumes mapped to the host is controlled by the cluster's association.
- When a host is removed from a cluster, the host's associations become the cluster's associations, this allows continued mapping of operations so that all scripts continue to work.

Application administrator access level:

- The **access_all** parameter can be specified for application administrators only. When it is specified, it means that the user has an application administrator access level to all volumes, and can perform operations on all volumes and not just on a subset of the specific volume.

Example:

```
user_group_create user_group=ug1 ldap_role="App Admin 1" access_all=yes
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **USER_GROUP_NAME_ALREADY_EXISTS**
The user group name already exists.
- **MAX_USER_GROUPS_REACHED**
The number of defined user groups already reached the maximum.
- **LDAP_ROLE_ALREADY_USED**
This LDAP role is already in use in the LDAP configuration or in a user group.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.

Deleting a user group

Use the **user_group_delete** command to delete a user group.

```
user_group_delete user_group=UserGroup
```

Parameters

Name	Type	Description	Mandatory
user_group	Object name	User group to be deleted.	Y

A user group can be deleted, even when it is associated with hosts or clusters. It can be deleted while in LDAP Authentication mode.

A user group can be deleted, even when it contains users. Deleting the user group does not delete the users contained in this group.

Example:

```
user_group_delete user_group=ug1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_LDAP_USER_GROUP**
One or more LDAP users might be associated with this user group. Are you sure you want to delete the user group?
- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_USER_GROUP**
Are you sure you want to delete the user group?
- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_POPULATED_USER_GROUP**
One or more internal users are associated with this user group. Are you sure you want to delete the user group?

Return codes

- **USER_GROUP_NAME_DOES_NOT_EXIST**
The user group name does not exist.

Listing user groups

Use the **user_group_list** command to list all user groups or a specific one.

```
user_group_list [ user_group=UserGroup ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
user_group	Object name	The user group to be listed.	N	All user groups.
domain	Object name	The domain name.	N	All Domains

All the users included in the user group are listed.

Field ID	Field output	Default position
name	Name	1
access_all	Access All	2
ldap_role	LDAP Role	3
users	Users	4
creator	Creator	N/A

Example:

```
user_group_list
```

Output:

```
Name      Access All  LDAP Role  Users
myug1    yes        Group1
myOtherUG yes        OtherGroup
ug1      yes        App Admin 1
ug2      yes        App Admin 2
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Removing a user from a user group

Use the **user_group_remove_user** command to remove a user from a user group.

```
user_group_remove_user user_group=UserGroup user=UserName
```

Parameters

Name	Type	Description	Mandatory
<code>user_group</code>	Object name	User group.	Y
<code>user</code>	Object name	User to be removed.	Y

This command fails when the user does not belong to the user group.

Deleting the user group's mapping is done by removing the role association. The user group itself is not deleted.

Example:

```
user_group_remove_user user_group=ug1 user=user1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_REMOVE_USER**

Are you sure you want to remove the user from the user group?

Return codes

- **USER_GROUP_NAME_DOES_NOT_EXIST**

The user group name does not exist.

- **USER_NAME_DOES_NOT_EXIST**

The user name does not exist.

- **USER_GROUP_DOES_NOT_INCLUDE_USER**

The user group does not include any user.

- **LDAP_AUTHENTICATION_IS_ACTIVE**

This command is not available while LDAP authentication is active.

Renaming user groups

Use the `user_group_rename` command to rename a user group.

```
user_group_rename user_group=UserGroup new_name=Name
```

Parameters

Name	Type	Description	Mandatory
user_group	Object name	User group to be renamed.	Y
new_name	Object name	New name of the user group.	Y

Example:

```
user_group_rename user_group=ug1 new_name=ug2
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **USER_GROUP_NAME_DOES_NOT_EXIST**
The user group name does not exist.
- **USER_GROUP_NAME_ALREADY_EXISTS**
The user group name already exists.

Updating a user group

Use the **user_group_update** command to update a user group.

```
user_group_update user_group=UserGroup [ ldap_role=LdapRole ] [ access_all=<yes|no> ]  
[ domain=DomainList ]
```

Parameters

Name	Type	Description	Mandatory	Default
user_group	Object name	The name of the user group to be updated.	Y	N/A
ldap_role	String	The value representing the user group in LDAP.	N	Keep current LDAP role.

Name	Type	Description	Mandatory	Default
access_all	Boolean	Assigns application administration access level for all volumes.	N	no
domain	N/A	The user_group will be attached to the specified domains. To specify more than one domain, separate them with a comma. To specify all the existing domains, use "*".	N	none

Example:

```
user_group_update user_group=ug1 ldap_role="App Admin 1" access_all=yes
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **USER_GROUP_NAME_DOES_NOT_EXIST**
The user group name does not exist.
- **LDAP_ROLE_ALREADY_USED**
This LDAP role is already in use in the LDAP configuration or in a user group.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **REMOVAL_WOULD_CREATE_UNRESOLVABLE_REFERENCE_BETWEEN_HOST_AND_USERGROUP**
Completing this operation will result in a host referring to a user group that is not in its domain.
Troubleshooting: Remove the reference explicitly and re-run the command.
- **REMOVAL_WOULD_CREATE_UNRESOLVABLE_REFERENCE_BETWEEN_CLUSTER_AND_USERGROUP**
Completing this operation will result in a cluster referring to a user group that is not in its domain.
Troubleshooting: Remove the reference explicitly and re-run the command.

- **REMOVAL_WOULD_CREATE_UNRESOLVABLE_REFERENCE_BETWEEN_USER_AND_USERGROUP**
Completing this operation will result in a user referring to a user group that is not in its domain.
Troubleshooting: Remove the reference explicitly and re-run the command.

Listing users

Use the **user_list** command to list all users or a specific user.

```
user_list [ user=UserName | show_users=<all|active> ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
user	Object name	The user to be listed.	N	All users.
show_users	Enumeration	Indicates whether all internal users will be listed, or only internal users that are active.	N	active
domain	Object name	The domain name.	N	All Domains

The following information is listed:

- User name: Lower case
- Category
- Email address
- Phone number
- Phone area code
- Containing user group

Passwords are not shown in the list.

Field ID	Field output	Default position
name	Name	1
category	Category	2
group	Group	3
active	Active	4
email_address	Email Address	5
area_code	Area Code	6
number	Phone Number	7
access_all	Access All	8
id	ID	N/A
creator	Creator	N/A
creator_category	Creator Category	N/A

Example:

```
user_list
```

Output:

Name	Category	Group
xiv_development	xiv_development	yes
xiv_maintenance	xiv_maintenance	yes
admin	storageadmin	yes
technician	technician	yes

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Disallowed

Renaming users

Use the **user_rename** command to rename a user.

```
user_rename user=UserName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
user	Object name	The user to be renamed. User names are lowercase.	Y
new_name	Object name	New name of the user.	Y

This command renames a user.

Example:

```
user_rename user=admin new_name=storage_admin
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **USER_NAME_DOES_NOT_EXIST**
The user name does not exist.
- **USER_NAME_ALREADY_EXISTS**
The user name already exists.
- **USER_CANNOT_BE_RENAMED**
The user cannot be renamed.
- **LDAP_AUTHENTICATION_IS_ACTIVE**
This command is not available while LDAP authentication is active.
- **USER_OWNS_RECOVERY_KEY**
The user owns a recovery key and therefore cannot be deleted or renamed.
- **OPERATION_NOT_ALLOWED_ON_DESIGNATED_MSM_USER**
The designated MSM user cannot be renamed and cannot be exclusively associated with a domain.

Updating a user definition

Use the **user_update** command to update a user definition.

```
user_update user=UserName [ password=Password password_verify=Password ]  
[ email_address=email ] [ area_code=AreaCode ]  
[ number=PhoneNumber ] [ exclusive=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
user	Object name	The name of the user to be updated. User names are lower case.	Y	N/A
password	N/A	New password. Users can only change their own passwords. The password must have between 6 and 12 characters. Any symbols are allowed, except the following: <ul style="list-style-type: none">• double quotation (")• single quotation or apostrophe (')• grave accent (`) Passwords are case sensitive.	N	Retains the current password.
password_verify	N/A	Verification of the password: Must be equal to the password.	N	Retains the current password.
email_address	N/A	Email address of this user (for event notification).	N	Leaves the current email address.

Name	Type	Description	Mandatory	Default
number	N/A	Cellular phone number of the user (for event notification via SMS) excluding the area code.	N	Leaves the current number.
area_code	N/A	Area code of the cellular phone number of the user.	N	Leaves the current area code.
exclusive	Boolean	This parameter can be set only by security administrator. If set to "yes", the user will be removed from the global domain. If set to "no", the user will get permissions on the global domain.	N	Leaves the current value.

A user with the predefined password admin can change the passwords of other users. The category (role) of a user cannot be changed. The user Technician does not require a phone number or email address. Limitations on password changes are as follows:

- Any user can change his/her own password.
- The predefined admin user can change all passwords, excluding the user Technician.
- Passwords are case sensitive.

Example:

```
user_update user=admin password=Passw0rd password_verify=Passw0rd
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Conditionally Allowed	A user other than admin may only change its own configuration.
Storage integration administrator	Disallowed	N/A
Application administrator	Conditionally Allowed	A user of this category may only change its own configuration.
Security administrator	Conditionally Allowed	A user of this category may only change its own configuration.
Read-only users	Conditionally Allowed	A user other than admin may only change its own configuration.
Technicians	Disallowed	N/A

Return codes

- **USER_NAME_DOES_NOT_EXIST**
The user name does not exist.
- **PASSWORDS_DO_NOT_MATCH**
Make sure that passwords are identical.
- **USER_PHONE_NUMBER_MUST_ACCOMPANY_AREA_CODE**
The phone number must be indicated together with the area code.
- **ADMIN_CAN_NOT_CHANGE_TECHNICIAN_USER**
The administrator is not allowed to modify the details of a technician.
- **SMS_DESTINATION_REFERS_TO_USER**
An SMS destination refers to the user and therefore must be defined by a phone number and an area code.
- **EMAIL_DESTINATION_REFERS_TO_USER**
An email destination refers to the user, and therefore must be defined by an email address.
- **USER_NOT_ALLOWED_TO_CHANGE_OTHER_USERS**
This user is not allowed to modify the details of other users.
- **USER_NOT_ALLOWED_TO_HAVE_PHONE_NUMBER**
This user is not allowed to have a phone number.
- **USER_NOT_ALLOWED_TO_HAVE_EMAIL_ADDRESS**
This user is not allowed to have an email address.
- **USER_NOT_ALLOWED_TO_CHANGE_PASSWORDS**
This user cannot change passwords of other users.
- **USER_CANNOT_BE_UPDATED_WHILE_LDAP_AUTHENTICATION_IS_ACTIVE**
The user cannot be updated while LDAP authentication is active.
- **NON_EXCLUSIVE_USER_NOT_SECURITY_ADMIN**
Only a security administrator can add a user to a domain non-exclusively.
- **PREDEFINED_USER_CANNOT_BE_RESTRICTED_TO_DOMAIN**
The specified user cannot be exclusively associated with a domain.
- **SIA_MUST_BE_ASSOCIATED_WITH_A_DOMAIN**
The storage integration administrator must be associated with a domain.
- **USER_IS_REFERRED_TO_BY_DEST**
The user is referred to by an event destination and therefore cannot be deleted.
- **OPERATION_NOT_ALLOWED_ON_DESIGNATED_MSM_USER**
The designated MSM user cannot be renamed and cannot be exclusively associated with a domain.
- **REMOVAL_WOULD_CREATE_UNRESOLVABLE_REFERENCE_BETWEEN_USER_AND_USERGROUP**
Completing this operation will result in a user referring to a user group that is not in its domain.
Troubleshooting: Remove the reference explicitly and re-run the command.

Creating a new domain

Use the **domain_create** command to create a domain.

```
domain_create domain=DomainName [ size=GB ] [ max_pools=MaxPools ]  
[ max_volumes=MaxVolumes ] [ max_cgs=MaxCGs ] [ max_mirrors=MaxMirrors ]  
[ max_dms=MaxDataMigrations ] [ perf_class=perfClassName ] [ ldap_id=LdapRole ]
```

Parameters

Name	Type	Description	Mandatory	Default
domain	Object name	The name of the domain to be created.	Y	N/A
size	Integer	Defines the sum of the sizes of all the pools associated with the domain, in gigabytes.	N	0
max_pools	Positive integer	The maximum number of pools that can be associated with this domain.	N	0
max_volumes	Positive integer	The maximum number of volumes that can be associated with all the pools in this domain.	N	0
max_cgs	Integer	The maximum number of consistency groups that can be associated with this domain.	N	512
max_mirrors	Positive integer	The maximum number of mirrors that can be associated with this domain.	N	0
max_dms	Positive integer	The maximum number of data migrations that can be associated with this domain.	N	0
perf_class	Object name	Name of a performance class.	N	none
ldap_id	String	The name to be associated with this domain in LDAP.	N	The domain name

Example:

```
domain_create domain=d1 size=1000
```

Output:

Command executed successfully.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **DO_YOU_WANT_TO_SHARE_LDAP_ID**
The specified LDAP ID is already in use. Are you sure you want to share the same LDAP ID?
- **DOMAIN_SIZE_SMALL**
The domain size is smaller than the minimal pool size. Are you sure?

Return codes

- **DOMAIN_ALREADY_EXISTS**
A domain with this name already exists.
- **DOMAIN_MAX_REACHED**
The maximum allowed number of domain objects is already reached.
- **PERF_CLASS_BAD_NAME**
The performance class does not exist.
- **PERF_CLASS_ASSOCIATED_WITH_HOSTS**
Performance class *Performance Class* is already being used by a host.
- **PERF_CLASS_ASSOCIATED_WITH_VOLUMES**
Performance class *Performance Class* is already being used by a volume.
- **DOMAIN_INSUFFICIENT_CAPACITY**
There is not enough capacity available for the domain.
- **DOMAIN_INSUFFICIENT_VOLUMES**
There are not enough volumes available for the domain.
- **DOMAIN_INSUFFICIENT_POOLS**
There are not enough pools available for the domain.
- **DOMAIN_INSUFFICIENT_CGS**
There are not enough consistency groups available for the domain.
- **DOMAIN_INSUFFICIENT_MIRRORS**
There are not enough mirrors available for the domain.
- **DOMAIN_INSUFFICIENT_DMS**
There are not enough data migrations available for the domain.

Updating a domain definition

Use the **domain_update** command to update a domain definition.

```
domain_update domain=DomainName [ size=GB ] [ max_pools=MaxPools ]  
[ max_volumes=MaxVolumes ] [ max_cgs=MaxCGs ] [ max_mirrors=MaxMirrors ]  
[ max_dms=MaxDataMigrations ] [ perf_class=perfClassName ] [ ldap_id=LdapRole ]
```

Parameters

Name	Type	Description	Mandatory	Default
domain	Object name	The name of the domain to be updated.	Y	N/A
size	Integer	Defines the sum of the sizes of all the pools associated with the domain, in gigabytes.	N	Current value.
max_pools	Positive integer	The maximum number of pools that can be associated with this domain.	N	Current value.
max_volumes	Positive integer	The maximum number of volumes that can be associated with all the pools in this domain.	N	Current value.
max_cgs	Integer	The maximum number of consistency groups that can be associated with this domain.	N	Current value.
max_mirrors	Positive integer	The maximum number of mirrors that can be associated with this domain.	N	Current value.
max_dms	Positive integer	The maximum number of data migrations that can be associated with this domain.	N	Current value.
perf_class	Object name	Name of a performance class.	N	Current value.
ldap_id	String	The name to be associated with this domain in LDAP.	N	Current value.

Example:

```
domain_update domain=d1 size=10000 max_pools=5 max_volumes=100
```

Output:

Command executed successfully.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **DO_YOU_WANT_TO_SHARE_LDAP_ID**
The specified LDAP ID is already in use. Are you sure you want to share the same LDAP ID?
- **DOMAIN_SIZE_SMALL**
The domain size is smaller than the minimal pool size. Are you sure?

Return codes

- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **PERF_CLASS_BAD_NAME**
The performance class does not exist.
- **PERF_CLASS_ASSOCIATED_WITH_HOSTS**
Performance class *Performance Class* is already being used by a host.
- **PERF_CLASS_ASSOCIATED_WITH_VOLUMES**
Performance class *Performance Class* is already being used by a volume.
- **DOMAIN_SIZE_TOO_SMALL**
The domain usage exceeds the requested size.
- **DOMAIN_MAX_VOLUMES_TOO_SMALL**
The actual number of volumes in the domain already exceeds the specified number.
- **DOMAIN_MAX_MIRRORS_TOO_SMALL**
The actual number of mirrors in the domain already exceeds the specified number.
- **DOMAIN_MAX_DMS_TOO_SMALL**
The actual number of data migrations in the domain already exceeds the specified number.
- **DOMAIN_MAX_CGS_TOO_SMALL**
The actual number of consistency groups in the domain already exceeds the specified number.
- **DOMAIN_MAX_POOLS_TOO_SMALL**
The actual number of pools in the domain already exceeds the specified number.
- **DOMAIN_INSUFFICIENT_CAPACITY**
There is not enough capacity available for the domain.

- **DOMAIN_INSUFFICIENT_VOLUMES**
There are not enough volumes available for the domain.
- **DOMAIN_INSUFFICIENT_POOLS**
There are not enough pools available for the domain.
- **DOMAIN_INSUFFICIENT_MIRRORS**
There are not enough mirrors available for the domain.
- **DOMAIN_INSUFFICIENT_CGS**
There are not enough consistency groups available for the domain.
- **DOMAIN_INSUFFICIENT_DMS**
There are not enough data migrations available for the domain.

Renaming a domain

Use the **domain_rename** command to rename a domain.

```
domain_rename domain=DomainName new_name=Name
```

Parameters

Name	Type	Description	Mandatory
new_name	Object name	Name of the domain.	Y
domain	Object name	New name of the domain.	Y

Example:

```
domain_rename domain=domain1 new_name=domain2
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DOMAIN_ALREADY_EXISTS**
A domain with this name already exists.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.

Deleting a domain

Use the **domain_delete** command to delete a domain.

```
domain_delete domain=DomainName
```

Parameters

Name	Type	Description	Mandatory
domain	Object name	The name of the domain to delete.	Y

Example:

```
domain_delete domain=domain1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DELETE_DOMAIN**
Are you sure you want to delete the domain *Domain*?

Return codes

- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **DOMAIN_HAS_POOL**
One or more pools are still in the domain.
- **DOMAIN_HAS_USER_GROUP**
One or more user groups are associated with this domain.
- **DOMAIN_HAS_USER**
One or more users are associated with this domain.
- **DOMAIN_HAS_SCHEDULE**
One or more schedules are associated with this domain.
- **DOMAIN_HAS_DEST**
One or more destinations are associated with this domain.
- **DOMAIN_HAS_DESTGROUP**

One or more destination groups are associated with this domain.

Listing domains

Use the **domain_list** command to list all domains or the specified one.

```
domain_list [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
domain	Object name	Name of a domain.	N	All domains.

When the **domain** parameter is provided, only the specified domain is listed.

Example:

```
domain_list domain=d1
```

Output:

Tabular output

Name	DN	Soft	Free	Soft	Hard	Free	Hard
Domain1	Domain1	1703	0		1703	0	
Domain2	Domain2	1703	1703		1703	1703	
Domain3	Domain3	1703	1600		1703	1600	
Domain4	Domain4	1703	1703		1703	1703	
Domain5	Domain5	1703	1703		1703	1703	

XML output

```
<domain id="4e414e00000">
  <id value="4e414e00000"/>
  <name value="Domain1"/>
  <hard_capacity value="1703"/>
  <soft_capacity value="1703"/>
  <free_soft_capacity value="0"/>
  <free_hard_capacity value="0"/>
  <max_pools value="25"/>
  <used_pools value="1"/>
  <max_volumes value="100"/>
  <used_volumes value="2"/>
  <max_cgs value="100"/>
  <used_cgs value="1"/>
  <max_sync_mirrors value="70"/>
  <used_sync_mirrors value="0"/>
  <ax_async_mirrors value="70"/>
  <used_async_mirrors value="0"/>
  <perf_class_uid value="50713d00000"/>
  <perf_class value="QoS1"/>
  <dn value="Domain1"/>
</domain>
```

Field ID	Field output	Default position
name	Name	1
ldap_id	LDAP ID	2
size	Size	3
size_MiB	Size (MiB)	N/A
total_pool_size	Total Pools (GB)	4

Field ID	Field output	Default position
total_pool_size_MiB	Total Pools (MiB)	N/A
empty_space	Empty (GB)	5
empty_space_MiB	Empty (MiB)	N/A
max_pools	Max Pools	6
used_pools	Pools	7
max_volumes	Max Volumes	8
used_volumes	Volumes	9
max_mirrors	Max Mirrors	10
used_mirrors	Mirrors	11
max_dms	Max Data Migrations	12
used_dms	Data Migrations	13
max_cgs	Max CGs	14
used_cgs	CGs	15
perf_class	Performance Class	16
managed	Managed	17
id	ID	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Disallowed

Listing users per domain

Use the **domain_list_users** command to list users associated with domain(s).

```
domain_list_users [ domain=DomainName ] [ user=UserName ] [ category=Category ]
[ show_users=<all|active> ]
```

Parameters

Name	Type	Description	Mandatory	Default
domain	Object name	Name of a domain.	N	All domains.
user	Object name	Name of a user.	N	All users.
category	Enumeration	The roles of the users to be listed. Available options are: storageadmin, readonly, applicationadmin and storageintegrationadmin.	N	All categories.

Name	Type	Description	Mandatory	Default
show_users	Enumeration	Indicates whether to list all internal users, or only active internal users.	N	active

Example:

```
domain_list_users domain=d1
```

Output:

```
Domain  User      Category
-----
d1      d1_domain  storageadmin
```

Field ID	Field output	Default position
domain_name	Domain	1
user_name	User	2
category	Category	3

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **DOMAIN_DOESNT_EXIST**
The domain does not exist.

Listing objects in domains

Use the **domain_list_objects** command to list objects attached to domain(s).

```
domain_list_objects [ domain=DomainName ] [ type=ObjectType [ name=ObjectName ] ]
```

Parameters

Name	Type	Description	Mandatory	Default
domain	Object name	Name of a domain.	N	All domains.

Name	Type	Description	Mandatory	Default
type	Enumeration	The object type to list: target, host, cluster, schedule, usergroup, dest, destgroup or rule.	N	All object types.
name	Object name	Name of an object.	N	All object names.

This command is used for listing objects in the system per domain.

Example:

```
domain_list_objects domain=d1
```

Output:

```
Domain  Type      Object
-----
d1      cluster   c1
d1      host      MyHost
d1      schedule  min_interval
d1      schedule  never
```

Field ID	Field output	Default position
domain_name	Domain	1
object_type	Type	2
object_name	Object	3

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **TOO_MANY_OBJECTS**
There are too many objects to output. Re-run the command by using the command's parameters to filter the output by domain or object type.

Listing the global domain

Use the **domain_global_list** to list the global domain.

```
domain_global_list
```

Example:

```
domain_global_list
```

Field ID	Field output	Default position
name	Name	1
ldap_id	LDAP ID	2
size	Size	3
size_MiB	Size (MiB)	N/A
total_pool_size	Total Pools (GB)	4
total_pool_size_MiB	Total Pools (MiB)	N/A
empty_space	Empty (GB)	5
empty_space_MiB	Empty (MiB)	N/A
max_pools	Max Pools	6
used_pools	Pools	7
max_volumes	Max Volumes	8
used_volumes	Volumes	9
max_mirrors	Max Mirrors	10
used_mirrors	Mirrors	11
max_dms	Max Data Migrations	12
used_dms	Data Migrations	13
max_cgs	Max CGs	14
used_cgs	CGs	15
perf_class	Performance Class	16
managed	Managed	17
id	ID	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Attaching an object to a domain

Use the **domain_attach_object** command to associate an object with a domain.

```
domain_attach_object domain=DomainName type=ObjectType name=ObjectName
```

Parameters

Name	Type	Description	Mandatory
domain	Object name	The name of the domain.	Y

Name	Type	Description	Mandatory
type	Enumeration	The object type to attach to the domain. It can be: target, host, cluster, schedule, usergroup, dest, destgroup or rule.	Y
name	Object name	The object name.	Y

Example:

```
domain_attach_object domain=d1 type=host name=MyHost
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **TARGET_BAD_NAME**
The target name does not exist.
- **HOST_BAD_NAME**
The host name does not exist.
- **CLUSTER_BAD_NAME**
The cluster name does not exist.
- **USER_GROUP_NAME_DOES_NOT_EXIST**
The user group name does not exist.
- **SCHEDULE_DOES_NOT_EXIST**
The specified schedule does not exist.
- **DEST_NAME_DOES_NOT_EXIST**
The destination name does not exist.
- **DESTGROUP_NAME_DOES_NOT_EXIST**
The destination group name does not exist.
- **EVENT_RULE_NAME_DOES_NOT_EXIST**
The event rule name does not exist.
- **USER_IS_NOT_IN_DESTINATION_DOMAINS**
The user must be included in destination domains.

- **DESTINATION_IS_NOT_IN_DESTGROUP_DOMAINS**
The destination must be included in the destination group domains.
- **DESTINATION_IS_NOT_IN_RULE_DOMAINS**
The destination must be included in rule domains.
- **DESTGROUP_IS_NOT_IN_RULE_DOMAINS**
The destination groups must be included in rule domains.
- **ESCALATION_RULE_NOT_IN_RULE_DOMAINS**
An escalation rule must belong to rule domains.
- **CLUSTER_HAS_HOSTS_UNASSOCIATED_WITH_DOMAIN**
The cluster cannot be attached, because it includes hosts that are not in the specified domain.
- **RESOURCE_ALREADY_ASSOCIATED_WITH_THIS_DOMAIN**
The resource is already associated with this domain.

Disassociating object from a domain

Use the **domain_detach_object** command to disassociate object from a domain.

```
domain_detach_object domain=DomainName type=ObjectType name=ObjectName
```

Parameters

Name	Type	Description	Mandatory
domain	Object name	The name of the domain.	Y
type	Enumeration	The object type to disassociate from the domain. It can be: target, host, cluster, schedule, usergroup, dest, destgroup, or rule.	Y
name	Object name	The object name.	Y

The object is disassociated from mapped or bound objects that belong to the domain.

Example:

```
domain_detach_object domain=d1 type=host name=MyHost
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed

User Category	Permission
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **RESOURCE_NOT_ASSOCIATED_WITH_THIS_DOMAIN**
The resource is not associated with this domain.
- **DOMAIN_VOLUME_MAPPED_TO_HOST**
A domain volume is mapped to this host.
- **DOMAIN_VOLUME_MAPPED_TO_CLUSTER**
Cluster has a volume in the domain mapped to it.
- **REMOVAL_WOULD_CREATE_UNRESOLVABLE_REFERENCE_BETWEEN_HOST_AND_USERGROUP**
Completing this operation will result in a host referring to a user group that is not in its domain.
Troubleshooting: Remove the reference explicitly and re-run the command.
- **REMOVAL_WOULD_CREATE_UNRESOLVABLE_REFERENCE_BETWEEN_CLUSTER_AND_USERGROUP**
Completing this operation will result in a cluster referring to a user group that is not in its domain.
Troubleshooting: Remove the reference explicitly and re-run the command.
- **HOST_PART_OF_ATTACHED_CLUSTER**
The host is part of a cluster and cannot be handled individually.
- **DOMAIN_TARGET_IN_USE**
The target domain cannot be removed, because it includes a volume used in a mirror, data migration, or OLVM relationship.
- **DOMAIN_VOLUME_BOUND_TO_HOST**
A domain volume is bound to this host via an ALU.
- **TARGET_BAD_NAME**
The target name does not exist.
- **HOST_BAD_NAME**
The host name does not exist.
- **CLUSTER_BAD_NAME**
The cluster name does not exist.
- **USER_GROUP_NAME_DOES_NOT_EXIST**
The user group name does not exist.
- **SCHEDULE_DOES_NOT_EXIST**
The specified schedule does not exist.
- **DEST_NAME_DOES_NOT_EXIST**
The destination name does not exist.
- **DESTGROUP_NAME_DOES_NOT_EXIST**
The destination group name does not exist.
- **EVENT_RULE_NAME_DOES_NOT_EXIST**
The event rule name does not exist.
- **DETACH_WOULD_MAKE_OBJECT_INACCESSIBLE**

Detaching the object will render it unassociated with any domain, and therefore inaccessible.

Troubleshooting: Delete the object, if it is no longer needed.

- **USER_IS_NOT_IN_DESTINATION_DOMAINS**
The user must be included in destination domains.
- **DESTINATION_IS_NOT_IN_RULE_DOMAINS**
The destination must be included in rule domains.
- **DESTINATION_IS_NOT_IN_DESTGROUP_DOMAINS**
The destination must be included in the destination group domains.
- **REMOVAL_WOULD_CREATE_UNRESOLVABLE_REFERENCE_BETWEEN_USER_AND_USERGROUP**
Completing this operation will result in a user referring to a user group that is not in its domain.
Troubleshooting: Remove the reference explicitly and re-run the command.
- **DESTGROUP_IS_NOT_IN_RULE_DOMAINS**
The destination groups must be included in rule domains.
- **ESCALATION_RULE_NOT_IN_RULE_DOMAINS**
An escalation rule must belong to rule domains.
- **DOMAIN_SCHEDULE_IN_USE**
The schedule is in use, and therefore cannot be moved to another domain.
- **DOMAIN_PROXY_VOLUME_MAPPED_TO_HOST**
A proxy domain volume is mapped to this host.
- **DOMAIN_PROXY_VOLUME_MAPPED_TO_CLUSTER**
A proxy domain volume is mapped to this cluster.

Associating users to a domain

Use the **domain_add_user** command to associate a user to a domain.

```
domain_add_user domain=DomainName user=UserName [ exclusive=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
domain	Object name	The name of the domain.	Y	N/A
user	Object name	The name of the user.	Y	N/A
exclusive	Boolean	Set to Yes to restrict the user to domain's objects.	N	yes

Example:

```
domain_add_user domain=d1 user=d1_admin
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **LDAP_AUTHENTICATION_IS_ACTIVE**
This command is not available while LDAP authentication is active.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **USER_NAME_DOES_NOT_EXIST**
The user name does not exist.
- **NON_EXCLUSIVE_USER_NOT_SECURITY_ADMIN**
Only a security administrator can add a user to a domain non-exclusively.
- **USER_CANNOT_BE_ADDED_TO_A_DOMAIN**
The specified user cannot be associated with a domain.
- **PREDEFINED_USER_CANNOT_BE_RESTRICTED_TO_DOMAIN**
The specified user cannot be exclusively associated with a domain.
- **DOMAIN_USER_EXIST**
This user is already added to the domain.
- **USER_IS_REFERRED_TO_BY_DEST**
The user is referred to by an event destination and therefore cannot be deleted.
- **OPERATION_NOT_ALLOWED_ON_DESIGNATED_MSM_USER**
The designated MSM user cannot be renamed and cannot be exclusively associated with a domain.
- **SIA_MUST_BE_ASSOCIATED_WITH_A_DOMAIN**
The storage integration administrator must be associated with a domain.
- **REMOVAL_WOULD_CREATE_UNRESOLVABLE_REFERENCE_BETWEEN_USER_AND_USERGROUP**
Completing this operation will result in a user referring to a user group that is not in its domain.
Troubleshooting: Remove the reference explicitly and re-run the command.

Removing a user from a domain

Use the **domain_remove_user** command to remove a user from a domain.

```
domain_remove_user domain=DomainName user=UserName
```

Parameters

Name	Type	Description	Mandatory
domain	Object name	The name of the domain.	Y

Name	Type	Description	Mandatory
user	Object name	The name of the user.	Y

Example:

```
domain_remove_user domain=d1 user=d1_admin
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **USER_WILL_BE_DELETED**

The user is associated with this domain only. This will delete the user from the system. Are you sure?

Return codes

- **USER_NAME_DOES_NOT_EXIST**

The user name does not exist.

- **DOMAIN_DOESNT_HAVE_THE_USER**

The user is not attached to this domain.

- **DOMAIN_DOESNT_EXIST**

The domain does not exist.

- **LDAP_AUTHENTICATION_IS_ACTIVE**

This command is not available while LDAP authentication is active.

- **REMOVAL_WOULD_CREATE_UNRESOLVABLE_REFERENCE_BETWEEN_USER_AND_USERGROUP**

Completing this operation will result in a user referring to a user group that is not in its domain.

Troubleshooting: Remove the reference explicitly and re-run the command.

- **DOMAIN_USER_CANNOT_REMOVE_HIMSELF**

Users cannot remove themselves from a domain.

- **USER_IS_REFERRED_TO_BY_DEST**

The user is referred to by an event destination and therefore cannot be deleted.

Adding a pool to a domain

Use the **domain_add_pool** command to add a pool to a domain.

```
domain_add_pool domain=DomainName pool=PoolName [ adjust=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
domain	Object name	The name of the domain.	Y	N/A
pool	Object name	The pool name.	Y	N/A
adjust	Boolean	Adjust domain resources. If 'adjust' is set to true, the resources of the global domain and destination domain are adjusted to accommodate the pool being moved.	N	no

Example:

```
domain_add_pool domain=d1 pool=p1
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **NO_FREE_CAPACITY_IN_DOMAIN**
There is not enough free space in the domain.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **POOL_ALREADY_ASSOCIATED_WITH_A_DOMAIN**
The pool is already associated with a domain.
- **DOMAIN_MAX_POOLS_REACHED**

The maximum allowed number of domain pools is already reached.

- **DOMAIN_MAX_MIRRORS_REACHED**
The domain exceeds the maximum allowed number of mirrors.
- **DOMAIN_MAX_DMS_REACHED**
The domain exceeds the maximum allowed number of data migrations.
- **DOMAIN_MAX_CONS_GROUPS_REACHED**
The domain exceeds the maximum allowed number of consistency groups.
- **DOMAIN_MAX_VOLUMES_REACHED**
The domain exceeds the maximum allowed number of volumes.
- **DOMAIN_USED_TARGET_NOT_IN_DESTINATION**
A target that is used by mirror in the pool is not associated with the target domain.
- **DOMAIN_USED_SCHEDULE_NOT_IN_DESTINATION**
A schedule used by a mirror in the pool is not associated with the target domain.
- **MAPPED_HOSTS_NOT_IN_DESTINATION**
A host that is mapped to a volume in the pool is not associated with the target domain.
- **MAPPED_CLUSTERS_NOT_IN_DESTINATION**
A cluster that is mapped to a volume in the pool is not associated with the target domain.
- **NO_SPACE**
The system does not have enough free space for the requested storage pool size.

Removing a pool from a domain

Use the `domain_remove_pool` command to remove a pool from a domain.

```
domain_remove_pool domain=DomainName pool=PoolName [ adjust=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>domain</code>	Object name	The name of the domain.	Y	N/A
<code>pool</code>	Object name	The pool name.	Y	N/A
<code>adjust</code>	Boolean	Adjust domain resources. If set to True, the resources of the global domain and destination domain are adjusted to accommodate the pool being moved.	N	no

Example:

```
domain_remove_pool domain=d1 pool=p1
```

Output:

Command executed successfully.

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **DOMAIN_DOESNT_HAVE_THE_POOL**
The pool is not attached to this domain.
- **MAX_POOLS_REACHED**
The maximum allowed number of storage pools is already reached.
- **MAX_MIRRORS_REACHED**
The maximum number of mirrors is already reached.
- **MAX_CONS_GROUPS_REACHED**
The maximum allowed number of consistency groups is already reached.
- **MAX_VOLUMES_REACHED**
The maximum allowed number of volumes is already reached.
- **MAX_DMS_REACHED**
The maximum number of remote volumes (mirror/migration) is already reached.
Troubleshooting: Delete unnecessary Data Migration objects.
- **NO_SPACE**
The system does not have enough free space for the requested storage pool size.
- **DOMAIN_USED_SCHEDULE_NOT_IN_DESTINATION**
A schedule used by a mirror in the pool is not associated with the target domain.

Moving a pool from one domain to another

Use the `domain_move_pool` command to move a pool from one domain to another.

```
domain_move_pool pool=PoolName src_domain=DomainName dst_domain=DomainName  
[ adjust=<yes|no> ]
```

Parameters

Name	Type	Description	Mandatory	Default
pool	Object name	The name of the pool to be moved.	Y	N/A
src_domain	Object name	The source domain name.	Y	N/A
dst_domain	Object name	The destination domain name.	Y	N/A
adjust	Boolean	Adjust domain resources. If set to Yes, the resources of the domains are adjusted to accommodate the pool being moved.	N	no

Example:

```
domain_move_pool pool=p1 src_domain=d1 dst_domain=d2
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **SOURCE_DOMAIN_DOES_NOT_EXIST**
The source domain does not exist.
- **DESTINATION_DOMAIN_DOES_NOT_EXIST**
The destination domain does not exist.
- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **POOL_NOT_ASSOCIATED_WITH_SOURCE_DOMAIN**
The pool is not associated with the source domain.
- **DOMAIN_MAX_POOLS_REACHED**
The maximum allowed number of domain pools is already reached.
- **MAPPED_HOSTS_NOT_IN_DESTINATION**
A host that is mapped to a volume in the pool is not associated with the target domain.
- **MAPPED_CLUSTERS_NOT_IN_DESTINATION**

A cluster that is mapped to a volume in the pool is not associated with the target domain.

- **NO_FREE_CAPACITY_IN_DOMAIN**

There is not enough free space in the domain.

- **DOMAIN_USED_SCHEDULE_NOT_IN_DESTINATION**

A schedule used by a mirror in the pool is not associated with the target domain.

- **DOMAIN_USED_TARGET_NOT_IN_DESTINATION**

A target that is used by mirror in the pool is not associated with the target domain.

- **DOMAIN_MAX_MIRRORS_REACHED**

The domain exceeds the maximum allowed number of mirrors.

- **DOMAIN_MAX_DMS_REACHED**

The domain exceeds the maximum allowed number of data migrations.

- **DOMAIN_MAX_CONS_GROUPS_REACHED**

The domain exceeds the maximum allowed number of consistency groups.

- **DOMAIN_MAX_VOLUMES_REACHED**

The domain exceeds the maximum allowed number of volumes.

- **OPERATION_DENIED_OBJECT_MANAGED**

This is a managed object. Only the managing software and xiv_maintenance / xiv_development may perform this operation on this object.

- **SOURCE_AND_DESTINATION_DOMAINS_MUST_BE_DIFFERENT**

The source and destination domains must be different.

- **DOMAIN_CONTAINS_OLVM_VOLUME**

The domain contains a volume in the OLVM process.

- **NO_SPACE**

The system does not have enough free space for the requested storage pool size.

Setting the domain attribute

Use the **domain_manage** command to set or clear the Managed attribute of a domain.

```
domain_manage domain=DomainName managed=<yes|no>
```

Parameters

Name	Type	Description	Mandatory
domain	Object name	The domain name.	Y
managed	Boolean	The Managed attribute. If set to Yes, the domain will be marked as managed.	Y

Example:

```
domain_mmanage domain=d1 managed=yes
```

Output:

Command executed successfully.

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Allowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **DOMAIN_DOESNT_EXIST**
The domain does not exist.
- **DOMAIN_HAS_POOL**
One or more pools are still in the domain.
- **DOMAIN_HAS_SCHEDULE**
One or more schedules are associated with this domain.
- **DOMAIN_HAS_DEST**
One or more destinations are associated with this domain.
- **DOMAIN_HAS_DESTGROUP**
One or more destination groups are associated with this domain.
- **DOMAIN_HAS_USER_GROUP**
One or more user groups are associated with this domain.

Setting domain-related policies

Use the **domain_policy_set** command to set domain-related policies.

```
domain_policy_set name=Name value=ParamValue
```

Parameters

Name	Type	Description	Mandatory
name	String	Name of the parameter to set.	Y
value	String	Value of the parameter.	Y

This command is used for setting domain related policies.

- **name=access** defines whether non-domain-specific users can access domain-specific resources (*value=open*) or not (*value=closed*).
- **name=host_management** defines whether domain administrators can create their own hosts (*value=extended*), or are restricted to hosts assigned to their domains by NDSO administrators (*value=basic*).

Example:

```
domain_policy_set name=access value=closed
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **UNRECOGNIZED_CONFIG_PARAMETER**

Unrecognized configuration parameter: '*name*'.

Troubleshooting: Use a valid configuration parameter in the command syntax. For the list of valid configuration parameters, see the CLI Reference Guide.

Displaying domain-related policies

Use the **domain_policy_get** command to display domain-related policies.

```
domain_policy_get [ name=Name ]
```

Parameters

Name	Type	Description	Mandatory	Default
name	String	Name of the parameter to get.	N	All parameters.

- **name=access** defines whether non-domain-specific users can access domain-specific resources (*value=open*) or not (*value=closed*).
- **name=host_management** defines whether domain administrators can create their own hosts (*value=extended*), or are restricted to hosts assigned to their domains by NDSO administrators (*value=basic*).

Field ID	Field output	Default position
name	Name	1
value	Value	2

Example:

```
domain_policy_get name=access
```

Output:

Name	Value
-----	-----
access	OPEN

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **UNRECOGNIZED_CONFIG_PARAMETER**

Unrecognized configuration parameter: '*name*'.

Troubleshooting: Use a valid configuration parameter in the command syntax. For the list of valid configuration parameters, see the CLI Reference Guide.

- **CONF_SERVER_UNREACHABLE**

The configuration server is unreachable.

Specifying a user associated with IBM Hyper-Scale Manager

Use the **designate_msm_user_set** command to specify the name of the user that is associated with the IBM Hyper-Scale Manager.

```
designate_msm_user_set name=UserName
```

Parameters

Name	Type	Description	Mandatory
name	Object name	The designated user.	Y

This command specifies which XIV user is defined in the IBM Hyper-Scale Manager Server in the activation step. This can be either a local or LDAP user, depending on whether LDAP authentication is used.

Example:

```
designate_msm_user_set name=xiv_msms
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **USER_NAME_DOES_NOT_EXIST**
The user name does not exist.
- **USER_IS_ONLY_DOMAIN_ADMIN**
The user is associated with one or more domains, and cannot view the entire system.

Retrieving the user associated with the IBM Hyper-Scale Manager

Use the **designate_msm_user_get** command to retrieve the name of the user associated with the IBM Hyper-Scale Manager.

```
designate_msm_user_get
```

Example:

```
designate_msm_user_get
```

Output:

```
xiv_msms
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **NO_DESIGNATED_MSM_USER**
There is no designated IBM Hyper-Scale user.

Setting the application administrator's scope of commands

Use the **appadmin_capabilities_set** command to define whether an Application Administrator is authorized to perform the basic or advanced set of commands.

```
appadmin_capabilities_set value=<basic|advanced>
```

Parameters

Name	Type	Description	Mandatory
value	Enumeration	The set of commands that an Application Administrator is authorized to perform.	Y

Example:

```
appadmin_capabilities_set value=basic
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Getting the application administrator's scope of commands

Use the **appadmin_capabilities_get** command to display the state of the Application Administrator's capabilities.

```
appadmin_capabilities_get
```

Example:

```
appadmin_capabilities_get
```

Output:

```
BASIC
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Chapter 19. Fibre channel and iSCSI configuration and status commands

This section describes the command-line interface (CLI) for fibre channel port configuration.

Discovering FC hosts

Use the **fc_connectivity_list** command to discover FC hosts and targets on the FC network.

```
fc_connectivity_list [ role=<dual|initiator|target> ] [ wwpn=WWPN ]  
[ module=ModuleNumber | fc_port=ComponentId ]
```

Parameters

Name	Type	Description	Mandatory	Default
role	Enumeration	Specifies whether to discover initiators or targets.	N	List all - targets and/or initiators.
wwpn	N/A	Limits the output only to this specific address.	N	All addresses
module	N/A	Limits the output to the enabled connectivity to this module.	N	All modules
fc_port	N/A	Limits the output to this specific XIV port.	N	All ports

This command lists FC hosts on the network.

role=initiator detects initiators on the network. When **role=initiator**, the *non-logged-in* option can only be used to debug hosts that are on the network, but did not log in.

role=target detects targets. When **role=target**, the *non-logged-in* option can only be used to debug targets that rejected the storage system login. This command returns an error for an attempt to list targets from a target-only port, or to list initiators from an initiator-only port. Each output line contains the following information:

- Component ID (of the module)
- Storage system port number (within the module)
- WWPN
- Port ID (can be correlated with the switch database)
- Role: Initiator, Target, Dual
- Initiator/target (is the same for all lines of the same command)
- Login status (Yes/No)

Field ID	Field output	Default position
component_id	Component ID	1
wwpn	WWPN	2
port_id	Port ID	3
role	Role	4

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Changing FC port configuration

Use the **fc_port_config** command to configure FC ports.

```
fc_port_config fc_port=ComponentId [ enabled=<yes|no> ]
[ role=<target|initiator> ] [ rate=<2|4|8|16|auto> ]
```

Parameters

Name	Type	Description	Mandatory	Default
fc_port	N/A	Port identifier.	Y	N/A
enabled	Boolean	Allows you to enable or disable the port.	N	yes
role	Enumeration	Port role: target, initiator or both.	N	Leaves the role unchanged.
rate	Enumeration	Line rate or auto for auto-negotiated rate.	N	Leaves the rate unchanged.

Example:

```
fc_port_config fc_port=1:FC_Port:1:1 enabled=yes role=Target rate=auto
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed

User Category	Permission
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **COMPONENT_IS_NOT_AN_FC_PORT**
An FC port must be specified for the component.
- **FC_PORT_DOES_NOT_EXIST**
The specified FC port does not exist.
- **FC_PORT_TEST_IN_PROGRESS**
The FC port test is already in progress.

Listing FC ports

Use the **fc_port_list** command to list the status and configuration of the system's FC ports.

```
fc_port_list [ module=ModuleNumber | fcport=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to a specific module.	N	All ports in all modules.
fcport	Lists only a specific port.	N	All ports in all modules.

This command lists all or some FC ports on the system. When no parameters are specified, all ports are listed. If a module is specified without a port, all ports on that module are listed. If a port is specified, a single port is listed.

The following information is provided for each port:

- Component ID of the module Port number (internal to module) 1-N
- WWPN
- Port ID
- Role (Initiator, Target, Dual)
- User-enabled (Yes/No)
- Maximum support rate: 2GB, 4GB, 8GB; constant - function of the HBA's capability
- Configured rate: 2GB, 4GB, 8GB, auto-negotiation; cannot be greater than the maximum supported rate
- Current active rate: 2GB, 4GB, 8GB; equal to the configured rate, unless the configured rate is auto-negotiation
- Port state: Online, Offline, Loopback, Link Down (physical connection is on, but no logical connection exists)
- Error counts
- Link type: Fabric Direct Attach, Private Loop, Point-to-Point, Public Loop, Unknown

Example:

fc_port_list

Output:

```

Component ID      Status      Currently Functioning      WWPN      Port ID      Role
-----
1:FC_Port:12:1   OK         yes                        5001738035C601C0  FFFFFFFF    Target
1:FC_Port:12:2   OK         yes                        5001738035C601C1  FFFFFFFF    Target
1:FC_Port:12:3   OK         yes                        5001738035C601C2  FFFFFFFF    Target
1:FC_Port:12:4   OK         yes                        5001738035C601C3  00EF009A    Target
1:FC_Port:13:1   OK         yes                        5001738035C601D0  FFFFFFFF    Target
1:FC_Port:13:2   OK         yes                        5001738035C601D1  FFFFFFFF    Target
1:FC_Port:13:3   OK         yes                        5001738035C601D2  FFFFFFFF    Target
1:FC_Port:13:4   OK         yes                        5001738035C601D3  FFFFFFFF    Target
1:FC_Port:8:1    OK         yes                        5001738035C60180  FFFFFFFF    Target
1:FC_Port:8:2    OK         yes                        5001738035C60181  FFFFFFFF    Target
1:FC_Port:8:3    OK         yes                        5001738035C60182  FFFFFFFF    Target
1:FC_Port:8:4    OK         yes                        5001738035C60183  00163AC0    Target

```

Cont.:

```

User Enabled      Current Rate (GBaud)      Port State      Link Type
-----
yes              Auto                      Link Problem    None
yes              Auto                      Link Problem    None
yes              Auto                      Link Problem    None
yes              8                          Online          Fabric Direct Attach
yes              Auto                      Link Problem    None
yes              Auto                      Link Problem    None
yes              Auto                      Link Problem    None
yes              Auto                      Link Problem    None
yes              Auto                      Link Problem    None
yes              Auto                      Link Problem    None
yes              Auto                      Link Problem    None
yes              16                         Online          Fabric Direct Attach

```

Cont.:

```

Error Count      Active Firmware
-----
0                8.3.40
0                8.3.40
0                8.3.40
0                8:3:40
0                8.3.40
0                8.3.40
0                8.3.40
0                8.3.40
0                8.3.40
0                8.3.40
0                8.3.40
0                8.3.40
0                8.3.40

```

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
port_num	Port Number	N/A
wwpn	WWPN	4
port_id	Port ID	5
role	Role	6
user_enabled	User Enabled	7

Field ID	Field output	Default position
max_supported_rate	Maximum Supported Rate (GBaud)	N/A
configured_rate	Configured Rate (GBaud)	N/A
current_rate	Current Rate (GBaud)	8
port_state	Port State	9
link_type	Link Type	10
error_count	Error Count	11
active_firmware	Active Firmware	12
credit	Credit	N/A
hba_vendor	HBA Vendor	N/A
is_enabled	Enabled	N/A
module	Module	N/A
serial	Serial	N/A
temperature	Temperature	N/A
part_number	Part Number	N/A
original_serial	Original Serial	N/A
model	Model	N/A
original_model	Original Model	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A
start_statstime	Timestamp of Link Statistics	N/A
link_failure	Link Failure	N/A
loss_of_sync	Loss of Sync	N/A
loss_of_signal	Loss of Signal	N/A
primit_seq_prot_error	Primitive Sequence Protocol Error	N/A
invalid_tx_word	Invalid Transmission Word	N/A
invalid_crc	Invalid CRC	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing FC port tests

Use the **fc_port_test_list** command to list the status of the system's FC port tests.

```
fc_port_test_list [ fc_port=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
fc_port	Lists only a specific port.	N	All ports in all modules.

This command lists all or some FC port tests running on the system. When no parameters are specified, all tests are listed. If a port is specified, a single test is listed.

Example:

```
fc_port_test_list
```

Output:

```

Component ID      Status      Start Time      Duration (Sec)      Transfer Length      CRC
-----
1:FC_Port:14:1  not active  NA              0                   0                   0
1:FC_Port:14:2  not active  NA              0                   0                   0
1:FC_Port:14:3  not active  NA              0                   0                   0
1:FC_Port:14:4  not active  NA              0                   0                   0
1:FC_Port:3:1   not active  NA              0                   0                   0
1:FC_Port:3:2   not active  NA              0                   0                   0
1:FC_Port:3:3   not active  NA              0                   0                   0
1:FC_Port:3:4   not active  NA              0                   0                   0
1:FC_Port:5:1   not active  NA              0                   0                   0
1:FC_Port:5:2   not active  NA              0                   0                   0
1:FC_Port:5:3   not active  NA              0                   0                   0
1:FC_Port:5:4   not active  NA              0                   0                   0
1:FC_Port:6:1   not active  NA              0                   0                   0
1:FC_Port:6:2   not active  NA              0                   0                   0
1:FC_Port:6:3   not active  NA              0                   0                   0
1:FC_Port:6:4   not active  NA              0                   0                   0

Cont.:

Frame Length Error  Disparity  Loopback Mode  Data Pattern  Data Size  Test Count
-----
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0
0                   0          internal       0000         0          0

Cont.:

Abort On Error
-----
no
no
no
no
no
no
no
no
no
no
no
no
no
no
no
no
no
no
no
no

```

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
start_time	Start Time	3
duration	Duration (Sec)	4
transfer_length	Transfer Length	5
crc	CRC	6

Field ID	Field output	Default position
frame_length_error	Frame Length Error	7
disparity	Disparity	8
loopback_mode	Loopback Mode	9
pattern	Data Pattern	10
data_size	Data Size	11
test_count	Test Count	12
increment	Test Increment	N/A
abort_on_error	Abort On Error	13

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Starting an FC port test

Use **fc_port_test_start** to run a test of the FC port.

```
fc_port_test_start fc_port=ComponentId [ loopback=<internal|external> ] [ pattern=PATTERN ]
[ data_size=DATA_SIZE ] [ frames=FRAMES ] [ increment=INCREMENT ]
[ abort_on_error=<no|yes> ]
```

Parameters

Name	Type	Description	Mandatory	Default
fc_port	N/A	Port identifier.	Y	N/A
loopback	Enumeration	Loopback mode to use.	N	internal
pattern	String	Data pattern.	N	1414
data_size	Positive integer	Data size.	N	2048
frames	Positive integer	Number of frames.	N	10000
increment	Positive integer	Test increment.	N	1
abort_on_error	Boolean	Abort the test in case of an error.	N	no

Example:

```
xcli.py fc_port_test_start fc_port=1:FC_Port:1:1
```

Output:

```
Command completed successfully
```


Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **COMPONENT_IS_NOT_AN_FC_PORT**
An FC port must be specified for the component.
- **FC_PORT_DOES_NOT_EXIST**
The specified FC port does not exist.
- **COMPONENT_DOES_NOT_EXIST**
The component does not exist.
- **TEST_NOT_ALLOWED_IN_CURRENT_STATUS**
This component cannot be tested in its current status.
- **FC_PORT_TEST_IN_PROGRESS**
The FC port test is already in progress
- **INVALID_FC_PORT_TEST_DATA_PATTERN**
The data pattern for the FC port test is invalid.

Aborting an FC port test

Use **fc_port_test_abort** to abort a currently running FC port test.

```
fc_port_test_abort fc_port=ComponentId
```

Parameters

Name	Description	Mandatory
fc_port	Port identifier.	Y

Example:

```
xccli.py fc_port_test_abort fc_port=1:FC_Port:1:1
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed

User Category	Permission
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **COMPONENT_IS_NOT_AN_FC_PORT**
An FC port must be specified for the component.
- **FC_PORT_DOES_NOT_EXIST**
The specified FC port does not exist.
- **COMPONENT_DOES_NOT_EXIST**
The component does not exist.
- **NO_FC_PORT_TEST_IN_PROGRESS**
The FC port test is currently not running.

Listing connectivity to hosts

Use the **host_connectivity_list** command to list FC and iSCSI-level connectivity to a pre-defined host.

```
host_connectivity_list [ host=HostName | fc_host_port=WWPN ]
[ module=ModuleNumber | fcport=ComponentId ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
host	Object name	Limits viewing to the ports of a specific host.	N	All hosts.
fc_host_port	N/A	Limits viewing to this specific port.	N	All ports
module	N/A	Limits output only to the enabled connectivity to this module.	N	All modules
fcport	N/A	Limits output to a specific storage system's port.	N	All ports
domain	Object name	The domain name.	N	All Domains

This command shows the connectivity status between a storage system port and a defined host. The output can be limited to a specific port, module or storage system port. Hosts can attach to the FC and iSCSI either directly (point-to-point), via an FC fabric or via a Gigabit Ethernet switch. Connectivity refers to both physical connectivity and SCSI login. Each output line contains the following information:

- Host (name)
- Host port (WWPN)
- Module ID, preceded by the rack ID
- Port number (within the module)

Example:

```
host_connectivity_list host=demo_host_fc0 fc_host_port=1:FC_Port:5:1
```

Output:

```
Host          Host Port      Module      Local FC port  Local iSCSI port  Type
-----
demo_host_fc0 100000062B151A98 1:Module:5  1:FC_Port:5:1                               FC
```

Field ID	Field output	Default position
host	Host	1
host_port	Host Port	2
module	Module	3
local_fc_port	Local FC port	4
local_iscsi_port	Local iSCSI port	5
type	Type	6

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Chapter 20. Flash enclosure maintenance commands

This section describes the command-line interface (CLI) for maintaining flash enclosures.

Listing Flash enclosure status

Use the **flash_enclosure_list** command to list special flash enclosure statuses.

```
flash_enclosure_list [ flash_enclosure=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
flash_enclosure	Flash enclosure for which special statuses are to be listed.	N	All Flash Enclosures.

This command lists the status of each Flash enclosure, including:

- Component generic status
- Online canister
- Total number of canisters

Example:

```
flash_enclosure_list
```

Output:

```
Component ID      Status  Currently Functioning  Control Path Status
-----
1:Flash_Enclosure:4  OK      yes                    OK

Cont.:

Cluster IP      Redundancy State  FW level      Has Spare  Array Rebuild Percentage
-----
14.10.204.239  online            1.4.1.0-195.0  yes        None

Cont.:

Encryption State
-----
Enrolled
```

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
control_path_status	Control Path Status	4
cluster_ip	Cluster IP	5

Field ID	Field output	Default position
redundancy_state	Redundancy State	6
fw_level	FW level	7
has_spare	Has Spare	8
array_rebuild_percentage	Array Rebuild Percentage	9
machine_model	Machine Model	11
array_status	Array Status	N/A
fru_part_number	FRU Part Number	N/A
fru_identity	FRU Identity	N/A
temperature_state	Temperature State	N/A
required_service	Requires Service	N/A
service_reason	Service Reason	N/A
enabled	Enabled	N/A
cluster_id	Cluster ID	N/A
serial_number	Serial Number	N/A
encrypted	Encrypted	N/A
key_needed	Key Needed	N/A
encryption_state	Encryption State	10
base_guid	Base GUID	N/A
charging	Charging	N/A
flash_status	Flash Status	N/A
fw_upgrade_status	FW Upgrade Status	N/A
fw_upgrade_progress	FW Upgrade Progress	N/A
target_fw_version	Target FW. Version	N/A
fw_file_name	FW File Name	N/A
utility_file_name	Utility File Name	N/A
cr_key_last_modified_time	CR Key Last Modified Time	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Listing a Flash canister status

Use the **flash_canister_list** command to list special Flash canister statuses.

```
flash_canister_list [ canister=ComponentId | flash_enclosure=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
canister	Flash Canister for which special statuses are to be listed.	N	All Flash canisters.
flash_enclosure	Flash Enclosure for which special statuses are to be listed.	N	All Flash enclosures.

This command lists the statuses of the Flash canisters, including:

- Component generic status
- Canister ID
- Node ID
- Node name

Example:

```
flash_canister_list
```

Output:

```

Component ID      Status  Currently Functioning  Service IP  Raid Status
-----
1:Flash_Canister:4:1  OK     yes                   14.10.204.205  OK
1:Flash_Canister:4:2  OK     yes                   14.10.204.238  OK

Cont.:

Control Path Status  Serial Connected  MgmtNode
-----
OK                   1:Module:12      no
OK                   1:Module:13      yes

```

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
service_ip	Service IP	4
raid_status	Raid Status	5
control_path_status	Control Path Status	6
serial_connected	Serial Connected	7
active	MgmtNode	8
fru_part_number	FRU Part Number	N/A
fru_identity	FRU Identity	N/A
temperature_state	Temperature State	N/A
fw_level	FW Level	N/A
mac_addresses	MAC Addresses	N/A
required_service	Requires Service	N/A
service_reason	Service Reason	N/A
canister_degraded	Canister Degraded	N/A
canister_missing	Canister Missing	N/A
status_led	Status Led	N/A

Field ID	Field output	Default position
check_log_led	Check Log Led	N/A
identify_led	Identify Led	N/A
controller_fault_led	Controller Fault Led	N/A
fault_led	Fault Led	N/A
dump_led	Dump Led	N/A
canister_mode	Canister Mode	N/A
service_mode	Service Mode	N/A
miswired	Miswired	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Listing a Flash card status

Use the **flash_card_list** command to list special Flash card statuses.

```
flash_card_list [ flash_card=ComponentId | flash_enclosure=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
flash_card	Flash card for which special statuses are to be listed.	N	All Flash cards.
flash_enclosure	Flash enclosure for which special statuses are to be listed.	N	All Flash enclosures.

This command lists the statuses of the TMS, including:

- Component generic status
- Slot ID
- Capacity
- Health State
- Flash type

Example:

```
flash_card_list flash_card=1:Flash_Card:4:5
```

Output:

Component ID	Status	Currently Functioning	Slot ID	Capacity(GB)	Health State
1:Flash_Card:4:5	OK	yes	5	5717	good
Cont.:					
Usage	Missing				
member	no				

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
slot_id	Slot ID	4
capacity	Capacity(GB)	5
health_state	Health State	6
drive_use	Usage	7
missing	Missing	8
fru_part_number	FRU Part Number	N/A
fru_identity	FRU Identity	N/A
temperature_state	Temperature State	N/A
fw_level	FW Level	N/A
required_service	Requires Service	N/A
service_reason	Service Reason	N/A
flash_type	Type	N/A
fault_led	Fault LED	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Retrieving the list of Flash fans

Use the **flash_fan_list** command to retrieve the list of Flash fans.

```
flash_fan_list [ flash_fan=ComponentId | flash_enclosure=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
flash_fan	Flash fan component ID	N	all
flash_enclosure	Flash enclosure component ID	N	all

Example:

```
flash_fan_list
```

Output:

```
Component ID      Status
-----
1:Flash_Fan:2:1  OK
1:Flash_Fan:2:2  OK
1:Flash_Fan:2:3  OK
1:Flash_Fan:2:4  OK
```

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
fru_part_number	FRU Part Number	N/A
fru_identity	FRU Identity	N/A
temperature_state	Temperature State	N/A
fw_level	FW Level	N/A
required_service	Requires Service	N/A
service_reason	Service Reason	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Retrieving the list of Flash IB adapters

Use the **flash_ib_adapter_list** command to retrieve the list of Flash IB adapters.

```
flash_ib_adapter_list [ flash_ib_adapter=ComponentId | flash_enclosure=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
flash_ib_adapter	Flash IB adapter component ID	N	all
flash_enclosure	Flash Enclosure component ID	N	all

Example:

```
flash_ib_adapter_list
```

Output:

```
Component ID      Status
-----
1:Flash_IB_Adapter:2:1  OK
1:Flash_IB_Adapter:2:2  OK
1:Flash_IB_Adapter:2:3  OK
1:Flash_IB_Adapter:2:4  OK
```

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
canister_id	Canister_name	4
fru_part_number	FRU Part Number	N/A
fru_identity	FRU Identity	N/A
temperature_state	Temperature State	N/A
required_service	Requires Service	N/A
service_reason	Service Reason	N/A
fw_level	FW Level	N/A
port1_id	Port 1 Component ID	N/A
port1_guid	Port 1 GUID	N/A
port2_id	Port 2 Component ID	N/A
port2_guid	Port 2 GUID	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Retrieving the Flash control connectivity list

Use the **flash_control_connectivity_list** command to retrieve the Flash control connectivity list.

```
flash_control_connectivity_list [ canister=ComponentId | flash_enclosure=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
canister	Canister component ID	N	all

Name	Description	Mandatory	Default
flash_enclosure	Flash enclosure Component ID	N	all

The connectivity for Flash control is provided via Ethernet.

Example:

```
flash_control_connectivity_list
```

Output:

Component ID	Path1	IPAddr1	P1Status	Path2	IPAddr2	
1:Flash_Canister:1:1	1:Module:1	14.10.204.1	yes	1:Module:2	14.10.204.33	
1:Flash_Canister:1:2	1:Module:1	14.10.204.2	yes	1:Module:2	14.10.204.34	
P2Status	Path3	IPAddr3	P3Status	Path4	IPAddr4	P4Status
yes	1:Module:3	14.10.204.65	yes	1:Module:4	14.10.204.97	yes
yes	1:Module:3	14.10.204.66	yes	1:Module:4	14.10.204.98	yes

Field ID	Field output	Default position
component_id	Component ID	1
virtual_ips.0.path	Path1	2
virtual_ips.0.pathAddr	PathAddr1	3
virtual_ips.0.status	P1Status	4
virtual_ips.0.state	P1State	N/A
virtual_ips.1.path	Path2	5
virtual_ips.1.pathAddr	PathAddr2	6
virtual_ips.1.status	P2Status	7
virtual_ips.1.state	P2State	N/A
virtual_ips.2.path	Path3	8
virtual_ips.2.pathAddr	PathAddr3	9
virtual_ips.2.status	P3Status	10
virtual_ips.2.state	P3State	N/A
virtual_ips.3.path	Path4	11
virtual_ips.3.pathAddr	PathAddr4	12
virtual_ips.3.status	P4Status	13
virtual_ips.3.state	P4State	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Retrieving the list of Flash PSUs

Use the `flash_psu_list` command to retrieve the list of Flash PSUs.

```
flash_psu_list [ flash_psu=ComponentId | flash_enclosure=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
<code>flash_psu</code>	Flash PSU component ID	N	all
<code>flash_enclosure</code>	Flash Enclosure component ID	N	all

Example:

```
flash_psu_list
```

Output:

```
Component ID      Status
-----
1:Flash_PSU:2:1  OK
1:Flash_PSU:2:2  OK
```

Field ID	Field output	Default position
<code>component_id</code>	Component ID	1
<code>status</code>	Status	2
<code>currently_functioning</code>	Currently Functioning	3
<code>input_failed</code>	Input Failed	4
<code>output_failed</code>	Output Failed	5
<code>fru_part_number</code>	FRU Part Number	N/A
<code>fru_identity</code>	FRU Identity	N/A
<code>temperature_state</code>	Temperature State	N/A
<code>fw_level</code>	FW Level	N/A
<code>required_service</code>	Requires Service	N/A
<code>service_reason</code>	Service Reason	N/A
<code>fan_failed</code>	Fan Failed	N/A
<code>fault_led</code>	Fault LED	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Retrieving the list of Flash PIBs

Use the **flash_pib_list** command to retrieve the list of Flash PIBs.

```
flash_pib_list [ flash_pib=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
flash_pib	Flash PIB component ID	N	all

Example:

```
flash_pib_list
```

Output:

```
Component ID      Status
-----
1:Flash_PIB:2:1  OK
```

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
fru_part_number	FRU Part Number	N/A
fru_identity	FRU Identity	N/A
temperature_state	Temperature State	N/A
fw_level	FW Level	N/A
required_service	Requires Service	N/A
service_reason	Service Reason	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Retrieving the list of Flash LED cards

Use the **flash_led_card_list** command to retrieve the list of Flash LED cards.

```
flash_led_card_list [ flash_led_card=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
<code>flash_led_card</code>	Flash LED card component ID	N	all

Example:

```
flash_led_card_list
```

Output:

```
Component ID      Status
-----
1:Flash_LED_Card:2:1  OK
```

Field ID	Field output	Default position
<code>component_id</code>	Component ID	1
<code>status</code>	Status	2
<code>currently_functioning</code>	Currently Functioning	3
<code>fru_part_number</code>	FRU Part Number	N/A
<code>fru_identity</code>	FRU Identity	N/A
<code>temperature_state</code>	Temperature State	N/A
<code>fw_level</code>	FW Level	N/A
<code>required_service</code>	Requires Service	N/A
<code>service_reason</code>	Service Reason	N/A
<code>power_led</code>	Power Led	N/A
<code>fault_led</code>	Fault Led	N/A
<code>check_log_led</code>	Check Log Led	N/A
<code>identify_led</code>	Identify Led	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing Flash BBU components

Use the `flash_bbu_list` command to list Flash BBU components.

```
flash_bbu_list [ flash_bbu=ComponentId | flash_enclosure=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
flash_bbu	Flash BBU component ID	N	all
flash_enclosure	Flash Enclosure component ID	N	all

Example:

```
flash_bbu_list
```

Output:

Component ID	Status	Charging Status	Percent Charged	Recondition Needed
1:Flash_BBU:2:1	OK	idle	94	no
1:Flash_BBU:2:2	OK	idle	89	no

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
percent_charged	Percent Charged	4
recondition_needed	Recondition Needed	5
charging_status	Charging Status	6
last_recondition_time	Last Recondition Time	7
temperature_state	Temperature State	N/A
fw_level	FW Level	N/A
required_service	Requires Service	N/A
service_reason	Service Reason	N/A
fru_part_number	FRU Part Number	N/A
fru_identity	FRU Identity	N/A
fault_led	Fault LED	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Retrieving the serial number of a Flash enclosure 1S

Use the `flash_enclosure_1s_get` command to retrieve the serial number of a Flash enclosure 1S.

```
flash_enclosure_1s_get flash_enclosure=ComponentId
```

Parameters

Name	Description	Mandatory
<code>flash_enclosure</code>	Flash enclosure component ID	Y

Example:

```
flash_enclosure_1s_get
```

Field ID	Field output	Default position
<code>full_serial</code>	Serial	1
<code>mtm</code>	Mtm	N/A
<code>serial</code>	Serial	N/A

Example:

```
flash_enclosure_1s_get
```

Output:

```
Serial
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **COMMAND_IS_NOT_VALID_DURING_FLASH_FW_UPDATE**
The requested command cannot be invoked while a flash system update is running.
- **FLASH_ENCLOSURE_DOES_NOT_EXIST**
Flash enclosure does not exist in the system

Chapter 21. Hardware maintenance commands

This section describes the command-line interface (CLI) for maintaining hardware components.

Monitoring the redistribution process

Use the **monitor_redist** command to monitor the status of the redistribution process.

```
monitor_redist
```

This command outputs the current redistribution process running on a module. The command does not yield information about a Flash enclosure.

The command may inform you that no such process exists. If such a process exists, the following information is shown:

- Type (adding new capacity, replacing failed component, phase-out, redistribution after failure)
- Initial capacity to copy
- Time started
- Capacity remaining to copy
- Time elapsed
- Percent completed
- Estimated time to completion

Field ID	Field output	Default position
type	Type	1
partitions_total	Initial Partitions	2
partitions_left	Partitions Remaining	3
percent_done	% Done	4
time_started	Time Started	5
estimated_time_to_finish	Estimated Time to Finish	6
time_elapsed	Time Elapsed	7

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Displaying the system's average power consumption

Use the **system_average_power_consumption** command to display the system's average power consumption.

```
system_average_power_consumption
```

Field ID	Field output	Default position
value	Value	1
timestamp	Timestamp	2

Example:

```
system_average_power_consumption
```

Output:

```
Value      Timestamp
-----
1553      31-Aug-2016 16:25:01
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Getting the values for calculating the system's average power consumption

Use the **system_average_power_prepare** command to fetch all the values needed to calculate the system's average power consumption.

```
system_average_power_prepare
```

Example:

```
system_average_power_prepare
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Return codes

- **HOT_UPGRADE_IS_IN_PROGRESS**
The command is not allowed during hot upgrade.
Troubleshooting: Wait for the hot upgrade to complete and try again.
- **ALREADY_GETTING_FLASH_CANISTER_SNAP**
Already getting a flash canister snap.
- **FAILED_GETTING_FLASH_CANISTER_SNAP**
Failed getting a flash canister snap.
- **COMPONENT_DOES_NOT_EXIST**
The component does not exist.
- **COMMAND_IS_NOT_VALID_DURING_FLASH_FW_UPDATE**
The requested command cannot be invoked while a flash system update is running.
- **SYSTEM_POWER_PREPARE_ALREADY_IN_PROGRESS**
There is already a system power prepare command in progress.

Displaying the system's average temperature

Use the `system_average_temperature` command to display the system's average temperature.

```
system_average_temperature
```

Field ID	Field output	Default position
<code>value</code>	Value	1
<code>timestamp</code>	Timestamp	2

Example:

```
system_average_temperature
```

Output:

```
Value      Timestamp
-----
17         31-Aug-2016 16:21:51
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Enabling XIV Support access

Use the **xiv_support_enable** command to enable XIV Support access for a specific period of time limiting access from the specific address.

```
xiv_support_enable [ start=TimeStamp ]  
< finish=TimeStamp | timeout=Timeout > from=<IPaddress1[,IPaddress2]...> comment=Comment
```

Parameters

Name	Type	Description	Mandatory	Default
start	N/A	Start time for allowing XIV Support access.	N	Immediately.
finish	N/A	End time for allowing XIV Support access.	N	N/A
timeout	N/A	Timeout for allowing XIV Support access in either hh:mm format, or a number of minutes. The timeout cannot exceed 23 hours and 59 minutes. The word unlimited denotes unexpired timeout.	N	N/A
from	N/A	The source address to which XIV Support access is limited. It may be either IPv4 or IPv6 address, or any, or technician denoting laptop port.	Y	N/A
comment	String	Reason why XIV Support access is enabled.	Y	N/A

This command enables XIV Support access for a specific period of time limiting access from the specific address.

Example:

```
xiv_support_enable finish=2012-2-3.16:30 from=1.2.3.4 comment="Some reason"
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_ENABLE_XIV_SUPPORT**
Are you sure you want to enable XIV support?

Return codes

- **XIV_SUPPORT_WORK_INVALID_TIMEOUT**
Timeout must be a positive number and define a time greater than the current time.
- **XIV_SUPPORT_WORK_INVALID_FINISH**
The end time must be greater than the start time and the current time.
- **XIV_SUPPORT_WORK_INVALID_FROM**
From must be a valid IPv4 or IPv6 address.
- **LIST_WITH_MIXED_IPV6_AND_IPV4_NOT_ALLOWED**
All IP addresses in the list should be of the same type - either IPv4 or IPv6.
- **LIST_WITH_ANY_OPTION_AND_SPECIFIC_IP_ADDRESSES_NOT_ALLOWED**
All IP addresses in the list should be unicast or Any. Mixing unicast and Any in the same list is not allowed.

Disabling XIV Support access

Use the **xiv_support_disable** command to disable XIV Support access.

```
xiv_support_disable
```

Example:

```
xiv_support_disable
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Displaying the XIV Support window

Use the `xiv_support_show` command to display the XIV Support window.

```
xiv_support_show
```

The following information is listed:

- From (IPv4 or IPv6 addresses, or "any address", or "technician port")
- Start (timestamp or "unlimited")
- Finish (timestamp or "unlimited")
- Comment

Example:

```
xiv_support_show
```

Output:

```
Enabled  Start                Finish                Comment
-----
yes      2012-03-28 12:55:21    2012-03-30 00:00:00  some work

Cont:
From 0   From 1   From 2   From 3   From 4
-----
1.2.3.4
```

Field ID	Field output	Default position
enabled	Enabled	1
start	Start	2
finish	Finish	3
comment	Comment	4
from.0	From 0	5
from.1	From 1	6
from.2	From 2	7
from.3	From 3	8
from.4	From 4	9

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Listing system components

Use the **component_list** command to list system components and their status.

```
component_list [ component=ComponentId ] [ filter=<ALL|FAILED|NOTOK> ]
```

Parameters

Name	Type	Description	Mandatory	Default
component	N/A	Lists only this component.	N	All components.
filter	Enumeration	Filters the list to show only failed or only non-OK components.	N	ALL

The list can be filtered to show only a specific component, all failed components or all components in a non-OK state.

For status and configuration of specific component types, refer to the **_list** commands for specific components, such as: **module_list** or **switch_list**.

Example:

```
component_list
```

Output:

Component ID	Status	Currently Functioning
1:BBU:12:1	Failed	no
1:Boot_Media:12:1	OK	yes
1:Boot_Media:12:2	OK	yes
1:CNA:12:1	OK	yes
1:CNA:13:1	OK	yes
1:CNA:8:1	OK	yes
1:CPU:12:1	OK	yes
1:CPU:12:2	OK	yes
1:DIMM:12:1	OK	yes
1:DIMM:12:10	OK	yes
1:Data:12	OK	yes
1:Data:13	OK	yes
1:Data:8	OK	yes
1:Data_Reduction:12	OK	yes
1:Data_Reduction:13	OK	yes
1:Data_Reduction:8	OK	yes
1:FC_Port:12:1	OK	yes
1:FC_Port:12:2	OK	yes
1:Fan:12:1	OK	yes
1:Fan:12:2	OK	yes
1:Flash_BBU:4:1	OK	yes
1:Flash_BBU:4:2	OK	yes
1:Flash_Canister:4:1	OK	yes
1:Flash_Canister:4:2	OK	yes
1:Flash_Card:4:1	Failed	no
1:Flash_Enclosure:4	OK	yes
1:Flash_Fan:4:1	OK	yes
1:Flash_Fan:4:2	OK	yes
1:Flash_Fan:4:3	OK	yes
1:Flash_Fan:4:4	OK	yes
1:Flash_IB_Adapter:4:1	OK	yes
1:Flash_IB_Adapter:4:2	OK	yes
1:Flash_IB_Adapter:4:3	OK	yes
1:Flash_IB_Adapter:4:4	OK	yes
1:Flash_LED_Card:4:1	OK	yes
1:Flash_PIB:4:1	OK	yes
1:Flash_PSU:4:1	OK	yes
1:Flash_PSU:4:2	OK	yes
1:IB_FlashSystem_Port:4:1	OK	yes
1:IB_FlashSystem_Port:4:3	OK	yes
1:IB_FlashSystem_Port:4:5	OK	yes
1:IB_FlashSystem_Port:4:7	OK	yes
1:IB_Module_Port:12:1	OK	yes

Cont:

```

1:IB_Module_Port:12:2      Failed      no
1:IB_Module_Port:13:1      OK          yes
1:IB_Module_Port:13:2      Failed      no
1:IB_Module_Port:8:1       OK          yes
1:IB_Module_Port:8:2       Failed      no
1:IB_Switch:1              OK          yes
1:IB_Switch:2              OK          yes
1:IB_Switch_BBU:1:1        Initializing yes
1:IB_Switch_BBU:1:2        Initializing yes
1:IB_Switch_BBU:2:1        Initializing yes
1:IB_Switch_BBU:2:2        Initializing yes
1:IB_Switch_Fan:1:1        Initializing yes
1:IB_Switch_PSU:1:1        Initializing yes
1:IB_Switch_PSU:1:2        Initializing yes
1:IB_Switch_PSU:2:1        Initializing yes
1:IB_Switch_PSU:2:2        Initializing yes
1:IB_Switch_Port:1:12      OK          yes
1:IB_Switch_Port:1:13      OK          yes
1:IB_Switch_Port:1:20      OK          yes
1:Interface:12             OK          yes
1:Interface:13             OK          yes
1:Interface:8              OK          yes
1:Module:12                OK          yes
1:Module:13                OK          yes
1:Module:8                 OK          yes
1:NIC:12:1                 OK          yes
1:NIC:12:2                 OK          yes
1:PSU:12:1                 OK          yes
1:PSU:12:2                 OK          yes
1:PSU:13:1                 OK          yes
1:PSU:13:2                 OK          yes
1:PSU:8:1                  OK          yes
1:PSU:8:2                  OK          yes
1:Remote:12                OK          yes
1:Remote:13                OK          yes
1:Remote:8                 OK          yes
1:Vault_Device:12:1        OK          yes
1:Vault_Device:12:2        OK          yes
1:Vault_Device:13:1        OK          yes
1:Vault_Device:13:2        OK          yes
1:Vault_Device:8:1         OK          yes
1:Vault_Device:8:2         OK          yes

```

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing module configuration

Use the `module_list` command to list the configuration of all or specified modules.

```
module_list [ module=ModuleNumber ]
```

Parameters

Name	Description	Mandatory	Default
<code>module</code>	Lists the configuration of the specified module.	N	All modules

The following modules are available in FlashSystem A9000 and FlashSystem A9000R:

- BBU, also referred to or known as battery module
- Boot media, also referred to or known as hard disk drive (HDD)
- Compute module, also referred to or known as grid controller or module
- IB Switch, also referred to or known as InfiniBand switch
- Module, also referred to or known as grid controller or compute module.

This command lists the following information for each module:

- Generic component status
- Module type
- Number of boot media
- Number of vault devices
- Number of FC ports
- Number of Ethernet ports for iSCSI

Additional information is available through running `module_list -t all` :

- Serial
- Original serial
- Part number
- Original part number

Example:

```
module_list
```

Output:

```
Component ID  Status  Currently Functioning  Target Status  Type
-----
1:Module:12  OK      yes                    g4.0_compute_enclosure
1:Module:13  OK      yes                    g4.0_compute_enclosure
1:Module:8   OK      yes                    g4.0_compute_enclosure

Cont.:

Boot Media Disks  Vault Devices  FC Ports  iSCSI Ports  Temperature
-----
2                 2             4         2             22
2                 2             4         2             22
2                 2             4         2             22
```

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
target_status	Target Status	4
type	Type	5
boot_media_disks	Boot Media Disks	6
vault_devices	Vault Devices	7
fc_port_count	FC Ports	8
ethernet_port_count	iSCSI Ports	9
temperature	Temperature	10
enclosure_id	Enclosure ID	11
avg_power	Avg Power	N/A
serial	Serial	N/A
original_serial	Original Serial	N/A
part_number	Part Number	N/A
original_part_number	Original Part Number	N/A
sas_version	SAS	N/A
infiniband_hca_version.0	InfiniBand HCA 1	N/A
infiniband_hca_version.1	InfiniBand HCA 2	N/A
cna_version.0	CNA 1	N/A
cna_version.1	CNA 2	N/A
compression_adapter_firmware.0	Compression Adapter 1	N/A
compression_adapter_firmware.1	Compression Adapter 2	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A
memory_gb	Mem	N/A
module_11s_number	11S Number	N/A
megaraid_serial_number	MegaRAID Serial	N/A
megaraid_product_name	MegaRAID Product Name	N/A
megaraid_package_version	MegaRAID Package Version	N/A
megaraid_flash_components.0	MegaRAID Flash Component 1	N/A
megaraid_flash_components.1	MegaRAID Flash Component 2	N/A
megaraid_flash_components.2	MegaRAID Flash Component 3	N/A
megaraid_flash_components.3	MegaRAID Flash Component 4	N/A
megaraid_flash_components.4	MegaRAID Flash Component 5	N/A
megaraid_flash_components.5	MegaRAID Flash Component 6	N/A
megaraid_flash_components.6	MegaRAID Flash Component 7	N/A
megaraid_flash_components.7	MegaRAID Flash Component 8	N/A
imm_version	IMM Version	N/A
uefi_version	UEFI Version	N/A
dsa_version	DSA Version	N/A
me_version	ME Version	N/A
mcu_version	MCU Version	N/A
board_serial	Board Serial	N/A

Field ID	Field output	Default position
board_part_number	Board Part Number	N/A
board_mfg_date	Board MFG Date	N/A
dasd_board_serial	Backplane Serial	N/A
dasd_board_part_number	Backplane Part Number	N/A
dasd_board_manufacturer	Backplane Manufacturer	N/A
dasd_board_mfg_date	Backplane MFG Date	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing the internal temperature of modules

Use the **module_temperature_list** command to list the modules' internal temperatures in the storage system.

```
module_temperature_list [ module=ModuleNumber ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to a specific module.	N	All temperatures in all modules.

Example:

```
module_temperature_list -f all
```

Output:

```

xcli.py module_temperature_list -f all
Module      Ambient  PCH   RS1   RS2   MID1  MID2  RAID  DIMM AB VR  DIMM CD VR
-----
1:Module:1  16      44   32   38   31    31    34    27          27
1:Module:11 16      46   35   40   34    33    35    26          28
1:Module:2  16      43   34   38   33    32    33    26          27
1:Module:4  16      43   34   37   33    32    34    25          26

DIMM EF VR  DIMM GH VR  CPU1   CPU2   InfiniBand HCA  PSU FR  Fibre Channel Port fc-0
-----
28          27          52    55    53              28      0
27          32          58    68    56              32      0
28          27          51    53    53              28      0
29          30          51    55    53              29      0

Fibre Channel Port fc-2  CNA=0  CNA-1  Boot Device 0  Boot Device 1  Vault Device 0
-----
0                        50     46     23              21           20
0                        51     52     27              25           21
0                        50     49     22              22           20
0                        48     52     24              23           20

Vault Device 1  BBU1  BBU2  CPU1 VR  CPU2 VR  Fibre Channel Port fc-1  Fibre Channel Port fc-3
-----
21             18    18    35      36      0                        0
21             17    16    37      40      0                        0
20             18    17    35      37      0                        0
20             17    17    35      37      0                        0

```

Field ID	Field output	Default position
component_id	Module	1
sdr_temperatures.0	Ambient	2
sdr_temperatures.1	PCH	3
sdr_temperatures.2	RS1	4
sdr_temperatures.3	RS2	5
sdr_temperatures.4	MID1	6
sdr_temperatures.5	MID2	7
sdr_temperatures.6	RAID	8
sdr_temperatures.8	CPU1 VR	N/A
sdr_temperatures.9	CPU2 VR	N/A
sdr_temperatures.10	DIMM AB VR	9
sdr_temperatures.11	DIMM CD VR	10
sdr_temperatures.12	DIMM EF VR	11
sdr_temperatures.13	DIMM GH VR	12
sdr_temperatures.14	CPU1	13
sdr_temperatures.15	CPU2	14
ib_hca_temperature	InfiniBand HCA	15
sdr_temperatures.7	PSU FR	16
fc_adapter_temperature.0	Fibre Channel Port fc-0	17
fc_adapter_temperature.1	Fibre Channel Port fc-1	N/A
fc_adapter_temperature.2	Fibre Channel Port fc-2	18
fc_adapter_temperature.3	Fibre Channel Port fc-3	N/A
cna_temperature.0	CNA=0	19
cna_temperature.1	CNA-1	20
boot_device_temperature.0	Boot Device 0	21

Field ID	Field output	Default position
boot_device_temperature.1	Boot Device 1	22
vault_device_temperature.0	Vault Device 0	23
vault_device_temperature.1	Vault Device 1	24
bbu_temperature.0	BBU1	25
bbu_temperature.1	BBU2	26

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing boot media devices in the system

Use the **boot_media_list** command to list boot media devices in the storage system.

```
boot_media_list [ module=ModuleNumber | boot_media=BootMediaDevice ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to the specific module.	N	Boot media devices in a specific module.
boot_media	Limits the listing to a specific boot media.	N	A specific boot media device.

Example:

```
boot_media_list -f all
```

Output:

Component ID	Status	Currently Functioning	Hardware Status	Vendor	
1:Boot_Media:11:1	OK	yes	OK	IBM-ESXS	
1:Boot_Media:11:2	OK	yes	OK	IBM-ESXS	
1:Boot_Media:1:1	OK	yes	OK	IBM-ESXS	
1:Boot_Media:1:2	OK	yes	OK	IBM-ESXS	
1:Boot_Media:2:1	OK	yes	OK	IBM-ESXS	
1:Boot_Media:2:2	OK	yes	OK	IBM-ESXS	
1:Boot_Media:4:1	OK	yes	OK	IBM-ESXS	
1:Boot_Media:4:2	OK	yes	OK	IBM-ESXS	
Model	Serial	FW	Temperature	Original Serial	Part #
HUC101860CS420 X	03V0E75K	J5H2	26	03V0E75K	
HUC101860CS420 X	03V0LPEK	J5H2	25	03V0LPEK	
HUC101860CS420 X	03V0X90H	J5H2	21	03V0X90H	
HUC101860CS420 X	03V0AHME	J5H2	20	03V0AHME	
HUC101860CS420 X	03V117XE	J5H2	22	03V117XE	
HUC101860CS420 X	03V0DAGK	J5H2	21	03V0DAGK	
HUC101860CS420 X	03V0DJ4K	J5H2	23	03V0DJ4K	
HUC101860CS420 X	03V0H38K	J5H2	22	03V0H38K	
Original Part #	Size (GB)	Requires Service	Service Reason		
	600 GB				
	600 GB				
	600 GB				
	600 GB				
	600 GB				
	600 GB				
	600 GB				
	600 GB				
Rebuild Progress	Rebuild Time (sec.)				
N/A	N/A				
N/A	N/A				
N/A	N/A				
N/A	N/A				
N/A	N/A				
N/A	N/A				
N/A	N/A				
N/A	N/A				
N/A	N/A				

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
hardware_status	Hardware Status	4
vendor	Vendor	5
model	Model	6
serial	Serial	7
fw_revision	FW	8
temperature	Temperature	N/A
original_serial	Original Serial	N/A
part_number	Part #	N/A
original_part_number	Original Part #	N/A
fru_pn	FRU PN	N/A
original_fru_pn	Original FRU PN	N/A
size	Size	N/A
requires_service	Requires Service	N/A

Field ID	Field output	Default position
service_reason	Service Reason	N/A
rebuild_progress	Rebuild Progress	N/A
rebuild_time	Rebuild Time	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Viewing vault devices in the system

Use the **vault_device_list** command to view the status of special vault devices.

```
vault_device_list [ module=ModuleNumber | vault_device=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to a specific module.	N	All vault devices in all modules.
vault_device	Vault devices for which special statuses are to be listed.	N	All vault devices.

Example:

```
vault_device_list
```

Output:

Component ID	Status	Currently Functioning	Capacity	Target Status	Vendor
1:Vault_Device:10:1	OK	yes	250GB		LENOVO-X
1:Vault_Device:10:2	OK	yes	250GB		LENOVO-X
1:Vault_Device:11:1	OK	yes	250GB		LENOVO-X
1:Vault_Device:11:2	OK	yes	250GB		LENOVO-X
1:Vault_Device:7:1	OK	yes	250GB		LENOVO-X
1:Vault_Device:7:2	OK	yes	250GB		LENOVO-X
1:Vault_Device:9:1	OK	yes	250GB		LENOVO-X
1:Vault_Device:9:2	OK	yes	250GB		LENOVO-X
Cont.:					
Model	Serial	Firmware	FRU	Temperature	Encryption State
HUSMR1625ASS20E	0PVGJTPA	P4C9	00NA685	22	Ready
HUSMR1625ASS20E	0PVGHN6A	P4C9	00NA685	22	Ready
HUSMR1625ASS20E	0PVJ2PEA	P4C9	00NA685	21	Ready
HUSMR1625ASS20E	0PVJ251A	P4C9	00NA685	21	Ready
HUSMR1625ASS20E	0PVJ99UA	P4C9	00NA685	20	Ready
HUSMR1625ASS20E	0PVJRB5A	P4C9	00NA685	21	Ready
HUSMR1625ASS20E	0PVJS39A	P4C9	00NA685	20	Ready
HUSMR1625ASS20E	0PVJ9RAA	P4C9	00NA685	21	Ready

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
capacity_in_bytes	Capacity	N/A
capacity	Capacity	4
target_status	Target Status	5
vendor	Vendor	6
original_vendor	Original Vendor	N/A
model	Model	7
original_model	Original Model	N/A
serial	Serial	8
original_serial	Original Serial	N/A
firmware	Firmware	9
original_firmware	Original Firmware	N/A
part_number	FRU	10
original_part_number	Original FRU	N/A
temperature	Temperature	11
encryption_state	Encryption State	12
hw_mon_node_id	Hw Node Owner	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A
revision	Revision	N/A
drive_pn	Drive P/N	N/A
original_drive_pn	Original Drive P/N	N/A
fru_pn	FRU P/N	N/A
original_fru_pn	Original FRU P/N	N/A
desc.bgd_scan	Background Scan	N/A
desc.disk_id	Device ID	N/A
desc.last_sample_serial	Last Sample Serial	N/A

Field ID	Field output	Default position
desc.last_sample_time	Last Sample Time	N/A
desc.power_is_on	Power On	N/A
desc.power_on_hours	Power On Hours	N/A
desc.power_on_minutes	Power On Minutes	N/A
desc.last_time_pom_was_mod	Last Time Power On Minutes Was Modified	N/A
desc.read_fail	Read Fail	N/A
desc.smart_code	SMART Code	N/A
desc.smart_fail	SMART Fail	N/A
desc.temperature_status.reported_severity	Reported Temperature Severity	N/A
desc.temperature_status.reported_temperature	Reported Temperature	N/A
desc.temperature_status.temperature	Device Temperature	N/A
desc.sw_encryption_active	Software-Based Encryption Active	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Listing BBUs in the system

Use the `module_bbu_list` command to list the BBUs in the storage system modules.

```
module_bbu_list [ module=ModuleNumber | module_bbu=BbuNumber ]
```

Parameters

Name	Description	Mandatory	Default
<code>module</code>	Limits the listing to a specific module.	N	All BBUs in all modules.
<code>module_bbu</code>	Limits the listing to a specific BBU.	N	All BBUs.

Example:

```
module_bbu_list -f all
```

Output:

Component ID	Status	Curr Functioning	State	Hardware Status	Remaining Capacity
1:BBU:14:1	OK	yes	Full	OK	891
1:BBU:14:2	OK	yes	Full	OK	877
1:BBU:3:1	OK	yes	Full	OK	787
1:BBU:3:2	OK	yes	Full	OK	860
1:BBU:5:1	OK	yes	Full	OK	792
1:BBU:5:2	OK	yes	Full	OK	898
1:BBU:6:1	OK	yes	Full	OK	817
1:BBU:6:2	OK	yes	Full	OK	814

Cont.:

Full Charge Capacity	Charged %	Time to Empty	Time to Full	Charger State
891	100	1600200	0	in progress
877	100	0	0	in progress
787	100	0	0	in progress
860	100	0	0	in progress
792	100	0	0	in progress
898	100	0	0	in progress
817	100	2944800	0	in progress
814	100	0	0	in progress

Cont.:

Calibration State	Calibration Time
Idle	0
Idle	0
Idle	0
Idle	0
Idle	0
Idle	0
Idle	0
Idle	0

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Curr Functioning	3
required_service	Requires Service	N/A
service_reason	Service Reason	N/A
bbu_state	State	4
bbu_status	Hardware Status	5
remaining_capacity	Remaining Capacity	6
full_charge_capacity	Full Charge Capacity	7
percent_charged	Charged %	8
time_to_empty	Time to Empty	9
time_to_full	Time to Full	10
charger_state	Charger State	11
calib_state	Calibration State	12
calib_requested	Calibration Needed	N/A
last_succ_calib_date	Successful Calibration Time	N/A
last_calib_date	Calibration Time	13
last_calib_result	Calibration Result	N/A
insertion_date	Inserted	N/A
manuf_date	Manufactured	N/A
fw	FW Version	N/A

Field ID	Field output	Default position
epow_cable_present	EPOW Cable Present	N/A
power_sense_cable_present	Power Sense Cable Present	N/A
epow_simulate	EPOW Simulate	N/A
epow_asserted	EPOW Asserted	N/A
cycle_count	Cycles	N/A
temperature_tenths_celsius	Temp /10C	N/A
charger_enabled	Charger Enabled	N/A
slow_charge_enabled	Slow Charge Enabled	N/A
discharge_enabled	Discharge Enabled	N/A
ps2_present	PS2 Present	N/A
charge_now	Nominal Available Capacity mAh	N/A
voltage_now	Voltage Now mV	N/A
current_now	Current Now mA	N/A
power_avg	Power Average mW	N/A
charge_full	Full Available Capacity mAh	N/A
charge_full_design	Design Charge	N/A
energy_now	Energy now uWh	N/A
at_rate	At Rate	N/A
at_rate_tte	At Rate Time to Empty	N/A
charge_now_sufficient	Charge Now Sufficient	N/A
endurance_start_monotonic_time	Endurance Start Monotonic Time	N/A
serial	Serial	N/A
original_serial	Original Serial	N/A
part_number	Part #	N/A
original_part_number	Original Part #	N/A
fru	FRU	N/A
runtime	Runtime	N/A
full_power_runtime	Full Power Runtime	N/A
half_power_runtime	Half Power Runtime	N/A
module_runtime	Module Runtime	N/A
state_of_health	Health	N/A
charge_voltage	Charge Voltage mV	N/A
charge_current	Charge Current mA	N/A
test_calib_en	Test/Calib. Enabled	N/A
fhd_enabled	FHD Enabled	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed

User Category	Permission
Technicians	Allowed

Listing PSUs in a module

Use the `module_psu_list` command to list PSUs in the specified module.

```
module_psu_list [ module=ModuleNumber | psu=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
<code>module</code>	Limits the listing to a specific module.	N	All PSUs in all modules.
<code>psu</code>	Lists only a specific PSU.	N	A specific PSU.

Example:

```
xccli.py module_psu_list -f all
```

Output:

```
Component ID  Status  Currently Functioning  Location
-----
1:PSU:1:1    Failed  no                    Power Supply 1
1:PSU:1:2    OK      yes                   Power Supply 2
1:PSU:2:1    OK      yes                   Power Supply 1
1:PSU:2:2    Failed  no                    Power Supply 2
1:PSU:4:1    OK      yes                   Power Supply 1
1:PSU:4:2    Failed  no                    Power Supply 2

Sensor status                               Serial number  Part number
-----
Presence NOT detected                       N/A           N/A
Presence detected                           K115148J01L   94Y8143
Presence detected                           K115148B06E   94Y8143
Presence detected, Power Supply AC lost     K115148B01P   94Y8143
Presence detected                           K115148B0AP   94Y8143
Presence detected, Power Supply AC lost     K115148J01B   94Y8143

Requires Service  Service Reason
-----
REPLACE           MODULE_PSU__NOT_DETECTED

COMPONENT_TEST    MODULE_PSU__BAD_POWER_INPUT

COMPONENT_TEST    MODULE_PSU__BAD_POWER_INPUT
```

Field ID	Field output	Default position
<code>component_id</code>	Component ID	1
<code>status</code>	Status	2
<code>currently_functioning</code>	Currently Functioning	3
<code>location</code>	Location	4
<code>sensor_statuses</code>	Sensor statuses	5
<code>requires_service</code>	Requires Service	N/A
<code>service_reason</code>	Service Reason	N/A

Field ID	Field output	Default position
serial	Serial number	N/A
part_number	Part number	N/A
manufacturer	Manufacturer	N/A
mfg_date	Manufacturing Date	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing compression adapters in the system

Use the **compression_adapter_list** command to list compression adapters in the system.

```
compression_adapter_list [ module=ModuleNumber | compression_adapter=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to a specific module.	N	All compression adapters in all modules.
compression_adapter	Lists only a specific compression adapter.	N	A specific compression adapter.

Compression adapters are used to increase the speed of I/O transfers to and from compressed volumes.

Example:

```
compression_adapter_list
```

Output:

```
Component ID          Status  Currently Functioning  Firmware  Hardware
-----
1:Compression_Adapter:6:1  OK      yes                    1.0.12    A0 SKU3
1:Compression_Adapter:6:2  OK      yes                    1.0.12    A0 SKU3

Driver
-----
1.0.12 3d60d12
1.0.12 3d60d12
```

Field ID	Field output	Default position
component_id	Component ID	1

Field ID	Field output	Default position
status	Status	2
currently_functioning	Currently Functioning	3
serial	Serial	4
firmware_version	Firmware	5
hardware_version	Hardware	6
driver_version	Driver	7
type	Type	N/A
mmp_version	MMP	N/A
pci_address	PCI Address	N/A
quick_assist_api_cy_version	QuickAssist API CY	N/A
quick_assist_api_dc_version	QuickAssist API DC	N/A
threading_mode	Threading Mode	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing fans in a module

Use the **fan_list** command to list fans in the specified module.

```
fan_list [ module=ModuleNumber | fan=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to a specific module.	N	All fans in all modules.
fan	Lists only a specific fan.	N	A specific fan.

Example:

```
fan_list
```

Output:

Component ID	Status	Currently Functioning	Location	Speed
1:Fan:14:1	OK	yes	1A	4012
1:Fan:14:10	OK	yes	5B	3780
1:Fan:14:11	OK	yes	6A	3953
1:Fan:14:12	OK	yes	6B	3780
1:Fan:14:2	OK	yes	1B	3717
1:Fan:14:3	OK	yes	2A	4012
1:Fan:14:4	OK	yes	2B	3780
1:Fan:14:5	OK	yes	3A	4012
1:Fan:14:6	OK	yes	3B	3780
1:Fan:14:7	OK	yes	4A	4012
1:Fan:14:8	OK	yes	4B	3780
1:Fan:14:9	OK	yes	5A	3894
1:Fan:3:1	OK	yes	1A	3894
1:Fan:3:10	OK	yes	5B	3717
1:Fan:3:11	OK	yes	6A	3953
1:Fan:3:12	OK	yes	6B	3843
1:Fan:3:2	OK	yes	1B	3717
1:Fan:3:3	OK	yes	2A	4012
1:Fan:3:4	OK	yes	2B	3780
1:Fan:3:5	OK	yes	3A	3953
1:Fan:3:6	OK	yes	3B	3780
1:Fan:3:7	OK	yes	4A	3953
1:Fan:3:8	OK	yes	4B	3717
1:Fan:3:9	OK	yes	5A	3894
1:Fan:5:1	OK	yes	1A	3953
1:Fan:5:10	OK	yes	5B	3528
1:Fan:5:11	OK	yes	6A	3953
1:Fan:5:12	OK	yes	6B	3780
1:Fan:5:2	OK	yes	1B	3780
1:Fan:5:3	OK	yes	2A	3953
1:Fan:5:4	OK	yes	2B	3780
1:Fan:5:5	OK	yes	3A	3894
1:Fan:5:6	OK	yes	3B	3780
1:Fan:5:7	OK	yes	4A	3953
1:Fan:5:8	OK	yes	4B	3780
1:Fan:5:9	OK	yes	5A	3953
1:Fan:6:1	OK	yes	1A	3953
1:Fan:6:10	OK	yes	5B	3780
1:Fan:6:11	OK	yes	6A	3894
1:Fan:6:12	OK	yes	6B	3717
1:Fan:6:2	OK	yes	1B	3780
1:Fan:6:3	OK	yes	2A	3953
1:Fan:6:4	OK	yes	2B	3654
1:Fan:6:5	OK	yes	3A	3953
1:Fan:6:6	OK	yes	3B	3843
1:Fan:6:7	OK	yes	4A	3953
1:Fan:6:8	OK	yes	4B	3780
1:Fan:6:9	OK	yes	5A	4012

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
location_a	Location	N/A
rpm_a	Speed	4
min_rpm_a	Min Speed	N/A
max_rpm_a	Max Speed	N/A
location_b	Peer Location	N/A
rpm_b	Peer Speed	5
min_rpm_b	Peer Min Speed	N/A
max_rpm_b	Peer Max Speed	N/A
requires_service	Requires Service	N/A

Field ID	Field output	Default position
service_reason	Service Reason	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing NICs in the system

Use the **nic_list** command to list the NICs in the storage system.

```
nic_list [ module=ModuleNumber | nic=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to a specific module.	N	All NICs in all modules.
nic	Lists only a specific NIC.	N	A specific NIC.

Example:

```
nic_list -f all
```

Output:

```

root@nextera-6013742-module-9:~# xcli.py nic_list -f all
root@nextera-6013742-module-9:~# xcli.py nic_list -Ud -f all
Component ID      Status      Currently Functioning  Hardware Status  Device Name
-----
1:NIC:10:1      OK         yes                   OK               eth0
1:NIC:10:2      OK         yes                   OK               eth1
1:NIC:10:3      OK         yes                   OK               eth2
1:NIC:10:4      OK         yes                   OK               eth3
1:NIC:10:5      OK         yes                   OK               eth4
1:NIC:10:6      OK         yes                   OK               eth5
1:NIC:11:1      OK         yes                   OK               eth0
1:NIC:11:2      OK         yes                   OK               eth1
1:NIC:11:3      OK         yes                   OK               eth2
1:NIC:11:4      OK         yes                   OK               eth3
1:NIC:11:5      OK         yes                   OK               eth4
1:NIC:11:6      OK         yes                   OK               eth5
1:NIC:7:1       OK         yes                   OK               eth0
1:NIC:7:2       OK         yes                   OK               eth1
1:NIC:7:3       OK         yes                   OK               eth2
1:NIC:7:4       OK         yes                   OK               eth3
1:NIC:9:1       OK         yes                   OK               eth0
1:NIC:9:2       OK         yes                   OK               eth1
1:NIC:9:3       OK         yes                   OK               eth2
1:NIC:9:4       OK         yes                   OK               eth3
1:NIC:9:5       OK         yes                   OK               eth4
1:NIC:9:6       OK         yes                   OK               eth5

Cont.:

Serial           Original Serial      Part #
-----
40:f2:e9:af:26:b0  40:f2:e9:af:26:b0  14e4_1657_40f2e9af26b0_5719-v1.38
40:f2:e9:af:26:b1  40:f2:e9:af:26:b1  14e4_1657_40f2e9af26b1_5719-v1.38
40:f2:e9:af:26:b2  40:f2:e9:af:26:b2  14e4_1657_40f2e9af26b2_5719-v1.38
40:f2:e9:af:26:b3  40:f2:e9:af:26:b3  14e4_1657_40f2e9af26b3_5719-v1.38
f4:52:14:6e:8f:70  f4:52:14:6e:8f:70  15b3_1007_708f6e00031452f4_2.35.5100
f4:52:14:6e:8f:71  f4:52:14:6e:8f:71  15b3_1007_708f6e00031452f4_2.35.5100
40:f2:e9:af:24:48  40:f2:e9:af:24:48  14e4_1657_40f2e9af2448_5719-v1.38
40:f2:e9:af:24:49  40:f2:e9:af:24:49  14e4_1657_40f2e9af2449_5719-v1.38
40:f2:e9:af:24:4a  40:f2:e9:af:24:4a  14e4_1657_40f2e9af244a_5719-v1.38
40:f2:e9:af:24:4b  40:f2:e9:af:24:4b  14e4_1657_40f2e9af244b_5719-v1.38
f4:52:14:6e:8d:30  f4:52:14:6e:8d:30  15b3_1007_308d6e00031452f4_2.35.5100
f4:52:14:6e:8d:31  f4:52:14:6e:8d:31  15b3_1007_308d6e00031452f4_2.35.5100
40:f2:e9:af:2a:90  40:f2:e9:af:2a:90  14e4_1657_40f2e9af2a90_5719-v1.38
40:f2:e9:af:2a:91  40:f2:e9:af:2a:91  14e4_1657_40f2e9af2a91_5719-v1.38
40:f2:e9:af:2a:92  40:f2:e9:af:2a:92  14e4_1657_40f2e9af2a92_5719-v1.38
40:f2:e9:af:2a:93  40:f2:e9:af:2a:93  14e4_1657_40f2e9af2a93_5719-v1.38
40:f2:e9:af:23:b8  40:f2:e9:af:23:b8  14e4_1657_40f2e9af23b8_5719-v1.38
40:f2:e9:af:23:b9  40:f2:e9:af:23:b9  14e4_1657_40f2e9af23b9_5719-v1.38
40:f2:e9:af:23:ba  40:f2:e9:af:23:ba  14e4_1657_40f2e9af23ba_5719-v1.38
40:f2:e9:af:23:bb  40:f2:e9:af:23:bb  14e4_1657_40f2e9af23bb_5719-v1.38
f4:52:14:6e:8f:20  f4:52:14:6e:8f:20  15b3_1007_208f6e00031452f4_2.35.5100
f4:52:14:6e:8f:21  f4:52:14:6e:8f:21  15b3_1007_208f6e00031452f4_2.35.5100

```

Cont.:

Original Part Number	Requires Service	Service Reason
14e4_1657_40f2e9af26b0_5719-v1.38		
14e4_1657_40f2e9af26b1_5719-v1.38		
14e4_1657_40f2e9af26b2_5719-v1.38		
14e4_1657_40f2e9af26b3_5719-v1.38		
15b3_1007_708f6e00031452f4_2.35.5100		
15b3_1007_708f6e00031452f4_2.35.5100		
14e4_1657_40f2e9af2448_5719-v1.38		
14e4_1657_40f2e9af2449_5719-v1.38		
14e4_1657_40f2e9af244a_5719-v1.38		
14e4_1657_40f2e9af244b_5719-v1.38		
15b3_1007_308d6e00031452f4_2.35.5100		
15b3_1007_308d6e00031452f4_2.35.5100		
14e4_1657_40f2e9af2a90_5719-v1.38		
14e4_1657_40f2e9af2a91_5719-v1.38		
14e4_1657_40f2e9af2a92_5719-v1.38		
14e4_1657_40f2e9af2a93_5719-v1.38		
14e4_1657_40f2e9af23b8_5719-v1.38		
14e4_1657_40f2e9af23b9_5719-v1.38		
14e4_1657_40f2e9af23ba_5719-v1.38		
14e4_1657_40f2e9af23bb_5719-v1.38		
15b3_1007_208f6e00031452f4_2.35.5100		
15b3_1007_208f6e00031452f4_2.35.5100		

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
hardware_status	Hardware Status	4
device_name	Device Name	5
serial	Serial	N/A
original_serial	Original Serial	N/A
part_number	Part #	N/A
original_part_number	Original Part Number	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing DIMMs in the modules

Use the **dimmm_list** command to list the DIMMs in the modules.

```
dimmm_list [ module=ModuleNumber | dimm=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to a specific module.	N	All DIMMs in all modules.
dim	Lists only a specific DIMM.	N	A specific DIMM.

The memory modules (DIMMs) run the microcode and the data cache in the grid controller.

Example:

```
dim_list -f all
```

Output:

Component ID	Status	Currently Functioning	Hardware Status	DIMM Id	CPU
1:DIMM:7:1	OK	yes	OK	1	1
1:DIMM:7:10	OK	yes	OK	10	1
1:DIMM:7:11	OK	yes	OK	11	1
1:DIMM:7:12	OK	yes	OK	12	1
1:DIMM:7:13	OK	yes	OK	13	2
1:DIMM:7:14	OK	yes	OK	14	2
1:DIMM:7:15	OK	yes	OK	15	2
1:DIMM:7:16	OK	yes	OK	16	2
1:DIMM:7:17	OK	yes	OK	17	2
1:DIMM:7:18	OK	yes	OK	18	2
1:DIMM:7:19	OK	yes	OK	19	2
1:DIMM:7:2	OK	yes	OK	2	1
1:DIMM:7:20	OK	yes	OK	20	2
1:DIMM:7:21	OK	yes	OK	21	2
1:DIMM:7:22	OK	yes	OK	22	2
1:DIMM:7:23	OK	yes	OK	23	2
1:DIMM:7:24	OK	yes	OK	24	2
1:DIMM:7:3	OK	yes	OK	3	1
1:DIMM:7:4	OK	yes	OK	4	1
1:DIMM:7:5	OK	yes	OK	5	1
1:DIMM:7:6	OK	yes	OK	6	1
1:DIMM:7:7	OK	yes	OK	7	1
1:DIMM:7:8	OK	yes	OK	8	1
1:DIMM:7:9	OK	yes	OK	9	1
1:DIMM:9:1	OK	yes	OK	1	1
1:DIMM:9:10	OK	yes	OK	10	1
1:DIMM:9:11	OK	yes	OK	11	1
1:DIMM:9:12	OK	yes	OK	12	1
1:DIMM:9:13	OK	yes	OK	13	2
1:DIMM:9:14	OK	yes	OK	14	2
1:DIMM:9:15	OK	yes	OK	15	2
1:DIMM:9:16	OK	yes	OK	16	2
1:DIMM:9:17	OK	yes	OK	17	2
1:DIMM:9:18	OK	yes	OK	18	2
1:DIMM:9:19	OK	yes	OK	19	2
1:DIMM:9:2	OK	yes	OK	2	1
1:DIMM:9:20	OK	yes	OK	20	2
1:DIMM:9:21	OK	yes	OK	21	2
1:DIMM:9:22	OK	yes	OK	22	2
1:DIMM:9:23	OK	yes	OK	23	2
1:DIMM:9:24	OK	yes	OK	24	2
1:DIMM:9:3	OK	yes	OK	3	1
1:DIMM:9:4	OK	yes	OK	4	1
1:DIMM:9:5	OK	yes	OK	5	1
1:DIMM:9:6	OK	yes	OK	6	1
1:DIMM:9:7	OK	yes	OK	7	1
1:DIMM:9:8	OK	yes	OK	8	1
1:DIMM:9:9	OK	yes	OK	9	1

Cont.:

Size(Mb)	Speed(MHz)	Configured Clock Speed(MHz)	Manufacturer	Serial
16384	2133	2133	Hynix	505F63F9
16384	2133	2133	Samsung	39542977
16384	2133	2133	Samsung	3953EA6C
16384	2133	2133	Samsung	3953F39A
16384	2133	2133	Samsung	3953F240
16384	2133	2133	Samsung	39542562
16384	2133	2133	Samsung	3954300B
16384	2133	2133	Samsung	39546472
16384	2133	2133	Samsung	39540BB2
16384	2133	2133	Samsung	3953FB59
16384	2133	2133	Samsung	3954074A
16384	2133	2133	Samsung	3953F241
16384	2133	2133	Samsung	395404E0
16384	2133	2133	Samsung	395425D8
16384	2133	2133	Samsung	39542BF2
16384	2133	2133	Samsung	395426EF
16384	2133	2133	Samsung	3953EB61
16384	2133	2133	Samsung	39542AD0
16384	2133	2133	Samsung	39542973
16384	2133	2133	Samsung	39542ACF
16384	2133	2133	Samsung	3953E982
16384	2133	2133	Samsung	39542568
16384	2133	2133	Samsung	3953EA4A
16384	2133	2133	Samsung	3953E993
16384	2133	2133	Hynix	804AC8C2
16384	2133	2133	Hynix	707387FA
16384	2133	2133	Hynix	7073895C
16384	2133	2133	Hynix	3077315A
16384	2133	2133	Hynix	90655EDF
16384	2133	2133	Hynix	7073885E
16384	2133	2133	Hynix	30772789
16384	2133	2133	Hynix	707388BB
16384	2133	2133	Hynix	90655FC6
16384	2133	2133	Hynix	70738960
16384	2133	2133	Hynix	70738871
16384	2133	2133	Hynix	7073881A
16384	2133	2133	Hynix	307C97D6
16384	2133	2133	Hynix	7073880D
16384	2133	2133	Hynix	70738819
16384	2133	2133	Hynix	30773136
16384	2133	2133	Hynix	30772FF8
16384	2133	2133	Hynix	70738850
16384	2133	2133	Hynix	3079B2CD
16384	2133	2133	Hynix	307A04D2
16384	2133	2133	Hynix	70738951
16384	2133	2133	Hynix	70738939
16384	2133	2133	Hynix	70738A0B
16384	2133	2133	Hynix	70738823

Cont.:

Original Serial	Part #	Original Part Number
505F63F9	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
39542977	M393A2G40DB0-CPB	M393A2G40DB0-CPB
3953EA6C	M393A2G40DB0-CPB	M393A2G40DB0-CPB
3953F39A	M393A2G40DB0-CPB	M393A2G40DB0-CPB
3953F240	M393A2G40DB0-CPB	M393A2G40DB0-CPB
39542562	M393A2G40DB0-CPB	M393A2G40DB0-CPB
3954300B	M393A2G40DB0-CPB	M393A2G40DB0-CPB
39546472	M393A2G40DB0-CPB	M393A2G40DB0-CPB
39540BB2	M393A2G40DB0-CPB	M393A2G40DB0-CPB
3953FB59	M393A2G40DB0-CPB	M393A2G40DB0-CPB
3954074A	M393A2G40DB0-CPB	M393A2G40DB0-CPB
3953F241	M393A2G40DB0-CPB	M393A2G40DB0-CPB
395404E0	M393A2G40DB0-CPB	M393A2G40DB0-CPB
395425D8	M393A2G40DB0-CPB	M393A2G40DB0-CPB
39542BF2	M393A2G40DB0-CPB	M393A2G40DB0-CPB
395426EF	M393A2G40DB0-CPB	M393A2G40DB0-CPB
3953EB61	M393A2G40DB0-CPB	M393A2G40DB0-CPB
39542AD0	M393A2G40DB0-CPB	M393A2G40DB0-CPB
39542973	M393A2G40DB0-CPB	M393A2G40DB0-CPB
39542ACF	M393A2G40DB0-CPB	M393A2G40DB0-CPB
3953E982	M393A2G40DB0-CPB	M393A2G40DB0-CPB
39542568	M393A2G40DB0-CPB	M393A2G40DB0-CPB
3953EA4A	M393A2G40DB0-CPB	M393A2G40DB0-CPB
3953E993	M393A2G40DB0-CPB	M393A2G40DB0-CPB
804AC8C2	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
707387FA	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
7073895C	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
3077315A	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
90655EDF	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
7073885E	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
30772789	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
707388BB	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
90655FC6	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
70738960	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
70738871	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
7073881A	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
307C97D6	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
7073880D	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
70738819	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
30773136	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
30772FF8	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
70738850	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
3079B2CD	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
307A04D2	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
70738951	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
70738939	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
70738A0B	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF
70738823	HMA42GR7MFR4N-TF	HMA42GR7MFR4N-TF

Cont.:

Requires Service	Service Reason
-----	-----

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
hardware_status	Hardware Status	4
dimmm_id	DIMM Id	N/A
cpu	CPU	N/A
size	Size(Mb)	N/A

Field ID	Field output	Default position
speed	Speed(MHz)	N/A
configured_speed	Configured Clock Speed(MHz)	N/A
manufacturer	Manufacturer	N/A
serial	Serial	N/A
original_serial	Original Serial	N/A
part_number	Part #	N/A
original_part_number	Original Part Number	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing CPUs in the modules

Use the **cpu_list** command to list the central processing units (CPU) in the modules.

```
cpu_list [ module=ModuleNumber | cpu=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to a specific module.	N	All CPUs in all modules.
cpu	Lists only a specific CPU.	N	A specific CPU.

Example:

```
cpu_list
```

Output:

Component ID	Status	Currently Functioning	Hardware Status	CPU Number	Family
1:CPU:10:1	OK	yes	OK	1	Xeon
1:CPU:11:1	OK	yes	OK	1	Xeon
1:CPU:12:1	OK	yes	OK	1	Xeon
1:CPU:13:1	OK	yes	OK	1	Xeon
1:CPU:1:1	OK	yes	OK	1	Xeon
1:CPU:2:1	OK	yes	OK	1	Xeon
1:CPU:3:1	OK	yes	OK	1	Xeon
1:CPU:4:1	OK	yes	OK	1	Xeon
1:CPU:5:1	OK	yes	OK	1	Xeon
1:CPU:6:1	OK	yes	OK	1	Xeon
1:CPU:7:1	OK	yes	OK	1	Xeon
1:CPU:8:1	OK	yes	OK	1	Xeon
1:CPU:9:1	OK	yes	OK	1	Xeon

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
hardware_status	Hardware Status	4
number	CPU Number	5
family_string	Family	6
type_string	Type	N/A
id	ID	N/A
type	Type Code	N/A
family	Family Code	N/A
model	Model Code	N/A
stepping	Stepping	N/A
max_speed	Max Speed(MHz)	N/A
current_speed	Current Speed(MHz)	N/A
status_string	Status	N/A
manufacturer	Manufacturer	N/A
version	Version	N/A
model_string	Model	N/A
signature	Signature	N/A
core_count	Cores	N/A
core_enabled	Enabled Cores	N/A
thread_count	Threads	N/A
serial	Serial	N/A
original_serial	Original Serial	N/A
part_number	Part #	N/A
original_part_number	Original Part Number	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed

User Category	Permission
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing InfiniBand host card adapters in the storage system

Use the `hca_list` command to list the InfiniBand host card adapters (HCAs) in the storage system's modules.

```
hca_list [ module=ModuleNumber | hca=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
<code>module</code>	Limits the listing to a specific module.	N	All InfiniBand HCA adapters in all modules.
<code>hca</code>	Lists only a specific HCA.	N	A specific InfiniBand HCA.

Example:

```
hca_list
```

Output:

```
Component ID  Status  Currently Functioning  Board Description
-----
1:HCA:10:1   OK      yes                   CB194A - Connect-IB QSFP
1:HCA:7:1    OK      yes                   CB194A - Connect-IB QSFP
1:HCA:9:1    OK      yes                   CB194A - Connect-IB QSFP

Cont.:

Board ID      Part Number
-----
MT_1210110019 46W0572
MT_1210110019 46W0572
MT_1210110019 46W0572
```

Field ID	Field output	Default position
<code>component_id</code>	Component ID	1
<code>status</code>	Status	2
<code>currently_functioning</code>	Currently Functioning	3
<code>version</code>	Version	N/A
<code>board_description</code>	Board Description	4
<code>original_board_description</code>	Original Board Description	N/A
<code>board_id</code>	Board ID	5
<code>original_board_id</code>	Original Board ID	N/A
<code>board_type</code>	Board Type	N/A
<code>original_board_type</code>	Original Board Type	N/A
<code>serial</code>	Serial	N/A

Field ID	Field output	Default position
original_serial	Original Serial	N/A
part_number	Part Number	6
original_part_number	Original Part Number	N/A
hardware_revision	Hardware Revision	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A
adapter_id	HCA Id	N/A
guid	GUID	N/A
vendor_part_id	Vendor Part ID	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing CNA adapters in the system

Use the **cna_list** command to list CNA adapters in the storage system.

```
cna_list [ module=ModuleNumber | cna=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to a specific module.	N	All CNA adapters in all modules.
cna	Lists only a specific CNA.	N	A specific CNA.

A converged network adapter (CNA) is a single network interface card that contains both a Fibre Channel host bus adapter and a TCP/IP Ethernet NIC. It connects servers to FC-based storage area networks (SANs) and Ethernet-based local area networks (LANs).

Example:

```
cna_list
```

Output:

Component ID	Status	Currently Functioning	Board Description
1:CNA:10:1	OK	yes	CX312B - ConnectX-3 Pro SFP+
1:CNA:9:1	OK	yes	CX312B - ConnectX-3 Pro SFP+
Board ID	Part Number		
MT_1200111023	MCX312B-XCCT		
MT_1200111023	MCX312B-XCCT		

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
version	Version	N/A
board_description	Board Description	4
original_board_description	Original Board Description	N/A
board_id	Board ID	5
original_board_id	Original Board ID	N/A
board_type	Board Type	N/A
original_board_type	Original Board Type	N/A
serial	Serial	N/A
original_serial	Original Serial	N/A
part_number	Part Number	6
original_part_number	Original Part Number	N/A
hardware_revision	Hardware Revision	N/A
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A
adapter_id	HCA Id	N/A
guid	GUID	N/A
vendor_part_id	Vendor Part ID	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing module LEDs in the system

Use the `module_led_list` command to display the module LED state in the system.

```
module_led_list [ module=ModuleNumber ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to a specific module.	N	All LEDs in all modules.

Example:

```
module_led_list
```

Output:

Module	LED	State	Color
1:Module:14	Battery	Off	na
1:Module:14	CPU 1	Off	na
1:Module:14	CPU 2	Off	na
1:Module:14	CPU Mismatch	Off	na
1:Module:14	Check Log	Off	na
1:Module:14	DIMM 1	Off	na
1:Module:14	DIMM 10	Off	na
1:Module:14	DIMM 11	Off	na
1:Module:14	DIMM 12	Off	na
1:Module:14	DIMM 13	Off	na
1:Module:14	DIMM 14	Off	na
1:Module:14	DIMM 15	Off	na
1:Module:14	DIMM 16	Off	na
1:Module:14	DIMM 17	Off	na
1:Module:14	DIMM 18	Off	na
1:Module:14	DIMM 19	Off	na
1:Module:14	DIMM 2	Off	na
1:Module:14	DIMM 20	Off	na
1:Module:14	DIMM 21	Off	na
1:Module:14	DIMM 22	Off	na
1:Module:14	DIMM 23	Off	na
1:Module:14	DIMM 24	Off	na
1:Module:14	DIMM 3	Off	na
1:Module:14	DIMM 4	Off	na
1:Module:14	DIMM 5	Off	na
1:Module:14	DIMM 6	Off	na
1:Module:14	DIMM 7	Off	na
1:Module:14	DIMM 8	Off	na
1:Module:14	DIMM 9	Off	na
1:Module:14	Fan 1	Off	na
1:Module:14	Fan 2	Off	na
1:Module:14	Fan 3	Off	na
1:Module:14	Fan 4	Off	na
1:Module:14	Fan 5	Off	na
1:Module:14	Fan 6	Off	na
1:Module:14	Fan Riser1	Off	na
1:Module:14	Fan Riser2	Off	na
1:Module:14	Fault	Off	na
1:Module:14	IMM2 Heartbeat	Blink	Green
1:Module:14	Identify	Off	na
1:Module:14	Internal RAID	Off	na
1:Module:14	PCI 1	Off	na
1:Module:14	PCI 2	Off	na
1:Module:14	PCI 3	Off	na
1:Module:14	PCI 4	Off	na
1:Module:14	PCI 5	Off	na
1:Module:14	PCI 6	Off	na
1:Module:14	PCI 7	Off	na
1:Module:14	PCI 8	Off	na
1:Module:14	Power	On	Green
1:Module:14	SysBrd Fault	Off	na
1:Module:3	Battery	Off	na
1:Module:3	CPU 1	Off	na
1:Module:3	CPU 2	Off	na
1:Module:3	CPU Mismatch	Off	na
1:Module:3	Check Log	Off	na
1:Module:3	DIMM 1	Off	na
1:Module:3	DIMM 10	Off	na
1:Module:3	DIMM 11	Off	na
1:Module:3	DIMM 12	Off	na
1:Module:3	DIMM 13	Off	na
1:Module:3	DIMM 14	Off	na
1:Module:3	DIMM 15	Off	na
1:Module:3	DIMM 16	Off	na
1:Module:3	DIMM 17	Off	na
1:Module:3	DIMM 18	Off	na
1:Module:3	DIMM 19	Off	na
1:Module:3	DIMM 2	Off	na
1:Module:3	DIMM 20	Off	na

Module	LED	State	Color
1:Module:3	DIMM 21	Off	na
1:Module:3	DIMM 22	Off	na
1:Module:3	DIMM 23	Off	na
1:Module:3	DIMM 24	Off	na
1:Module:3	DIMM 3	Off	na
1:Module:3	DIMM 4	Off	na
1:Module:3	DIMM 5	Off	na
1:Module:3	DIMM 6	Off	na
1:Module:3	DIMM 7	Off	na
1:Module:3	DIMM 8	Off	na
1:Module:3	DIMM 9	Off	na
1:Module:3	Fan 1	Off	na
1:Module:3	Fan 2	Off	na
1:Module:3	Fan 3	Off	na
1:Module:3	Fan 4	Off	na
1:Module:3	Fan 5	Off	na
1:Module:3	Fan 6	Off	na
1:Module:3	Fan Riser1	Off	na
1:Module:3	Fan Riser2	Off	na
1:Module:3	Fault	Off	na
1:Module:3	IMM2 Heartbeat	Blink	Green
1:Module:3	Identify	Off	na
1:Module:3	Internal RAID	Off	na
1:Module:3	PCI 1	Off	na
1:Module:3	PCI 2	Off	na
1:Module:3	PCI 3	Off	na
1:Module:3	PCI 4	Off	na
1:Module:3	PCI 5	Off	na
1:Module:3	PCI 6	Off	na
1:Module:3	PCI 7	Off	na
1:Module:3	PCI 8	Off	na
1:Module:3	Power	On	Green
1:Module:3	SysBrd Fault	Off	na
1:Module:5	Battery	Off	na
1:Module:5	CPU 1	Off	na
1:Module:5	CPU 2	Off	na
1:Module:5	CPU Mismatch	Off	na
1:Module:5	Check Log	Off	na
1:Module:5	DIMM 1	Off	na
1:Module:5	DIMM 10	Off	na
1:Module:5	DIMM 11	Off	na
1:Module:5	DIMM 12	Off	na
1:Module:5	DIMM 13	Off	na
1:Module:5	DIMM 14	Off	na
1:Module:5	DIMM 15	Off	na
1:Module:5	DIMM 16	Off	na
1:Module:5	DIMM 17	Off	na
1:Module:5	DIMM 18	Off	na
1:Module:5	DIMM 19	Off	na
1:Module:5	DIMM 2	Off	na
1:Module:5	DIMM 20	Off	na
1:Module:5	DIMM 21	Off	na
1:Module:5	DIMM 22	Off	na
1:Module:5	DIMM 23	Off	na
1:Module:5	DIMM 24	Off	na
1:Module:5	DIMM 3	Off	na
1:Module:5	DIMM 4	Off	na
1:Module:5	DIMM 5	Off	na
1:Module:5	DIMM 6	Off	na
1:Module:5	DIMM 7	Off	na
1:Module:5	DIMM 8	Off	na
1:Module:5	DIMM 9	Off	na
1:Module:5	Fan 1	Off	na
1:Module:5	Fan 2	Off	na
1:Module:5	Fan 3	Off	na
1:Module:5	Fan 4	Off	na
1:Module:5	Fan 5	Off	na
1:Module:5	Fan 6	Off	na
1:Module:5	Fan Riser1	Off	na
1:Module:5	Fan Riser2	Off	na
1:Module:5	Fault	Off	na

Module	LED	State	Color
1:Module:5	IMM2 Heartbeat	Blink	Green
1:Module:5	Identify	On	Amber
1:Module:5	Internal RAID	Off	na
1:Module:5	PCI 1	Off	na
1:Module:5	PCI 2	Off	na
1:Module:5	PCI 3	Off	na
1:Module:5	PCI 4	Off	na
1:Module:5	PCI 5	Off	na
1:Module:5	PCI 6	Off	na
1:Module:5	PCI 7	Off	na
1:Module:5	PCI 8	Off	na
1:Module:5	Power	On	Green
1:Module:5	SysBrd Fault	Off	na
1:Module:6	Battery	Off	na
1:Module:6	CPU 1	Off	na
1:Module:6	CPU 2	Off	na
1:Module:6	CPU Mismatch	Off	na
1:Module:6	Check Log	Off	na
1:Module:6	DIMM 1	Off	na
1:Module:6	DIMM 10	Off	na
1:Module:6	DIMM 11	Off	na
1:Module:6	DIMM 12	Off	na
1:Module:6	DIMM 13	Off	na
1:Module:6	DIMM 14	Off	na
1:Module:6	DIMM 15	Off	na
1:Module:6	DIMM 16	Off	na
1:Module:6	DIMM 17	Off	na
1:Module:6	DIMM 18	Off	na
1:Module:6	DIMM 19	Off	na
1:Module:6	DIMM 2	Off	na
1:Module:6	DIMM 20	Off	na
1:Module:6	DIMM 21	Off	na
1:Module:6	DIMM 22	Off	na
1:Module:6	DIMM 23	Off	na
1:Module:6	DIMM 24	Off	na
1:Module:6	DIMM 3	Off	na
1:Module:6	DIMM 4	Off	na
1:Module:6	DIMM 5	Off	na
1:Module:6	DIMM 6	Off	na
1:Module:6	DIMM 7	Off	na
1:Module:6	DIMM 8	Off	na
1:Module:6	DIMM 9	Off	na
1:Module:6	Fan 1	Off	na
1:Module:6	Fan 2	Off	na
1:Module:6	Fan 3	Off	na
1:Module:6	Fan 4	Off	na
1:Module:6	Fan 5	Off	na
1:Module:6	Fan 6	Off	na
1:Module:6	Fan Riser1	Off	na
1:Module:6	Fan Riser2	Off	na
1:Module:6	Fault	Off	na
1:Module:6	IMM2 Heartbeat	Blink	Green
1:Module:6	Identify	Off	na
1:Module:6	Internal RAID	Off	na
1:Module:6	PCI 1	Off	na
1:Module:6	PCI 2	Off	na
1:Module:6	PCI 3	Off	na
1:Module:6	PCI 4	Off	na
1:Module:6	PCI 5	Off	na
1:Module:6	PCI 6	Off	na
1:Module:6	PCI 7	Off	na
1:Module:6	PCI 8	Off	na
1:Module:6	Power	On	Green
1:Module:6	SysBrd Fault	Off	na

Field ID	Field output	Default position
module	Module	1

Field ID	Field output	Default position
led	LED	2
state	State	3
color	Color	4
reported	Event Active	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing data disk devices in the system

Use the **disk_list** command to list special vault device statuses.

```
disk_list [ module=ModuleNumber | disk=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
module	Limits the listing to a specific module.	N	All data disk devices in all modules.
disk	Data disk devices for which special statuses are to be listed.	N	All data disk devices.

This command lists the statuses of data disk devices, including:

- Component generic status
- Data disk device capacity
- Model
- Serial

Example:

```
disk_list
```

Output:

Component ID	Status	Currently Functioning	Capacity	Target Status	Vendor
1:disk:14:1	OK	yes	250GB		LENOVO-X
1:disk:14:2	OK	yes	250GB		LENOVO-X
1:disk:3:1	OK	yes	250GB		LENOVO-X
1:disk:3:2	OK	yes	250GB		LENOVO-X
1:disk:5:1	OK	yes	250GB		LENOVO-X
1:disk:5:2	OK	yes	250GB		LENOVO-X
1:disk:6:1	OK	yes	250GB		LENOVO-X
1:disk:6:2	OK	yes	250GB		LENOVO-X
Cont.:					
Model	Serial	Firmware	FRU	Temperature	Encryption State
HUSMR1625ASS20E	0PVGJTPA	P4C9	00NA685	22	Ready
HUSMR1625ASS20E	0PVGHN6A	P4C9	00NA685	22	Ready
HUSMR1625ASS20E	0PVJ2PEA	P4C9	00NA685	21	Ready
HUSMR1625ASS20E	0PVJ251A	P4C9	00NA685	21	Ready
HUSMR1625ASS20E	0PVJ99UA	P4C9	00NA685	20	Ready
HUSMR1625ASS20E	0PVJRB5A	P4C9	00NA685	21	Ready
HUSMR1625ASS20E	0PVJS39A	P4C9	00NA685	20	Ready
HUSMR1625ASS20E	0PVJ9RAA	P4C9	00NA685	21	Ready

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
capacity_in_bytes	Capacity	N/A
capacity	Capacity	4
target_status	Target Status	5
vendor	Vendor	6
original_vendor	Original Vendor	N/A
model	Model	7
original_model	Original Model	N/A
serial	Serial	8
original_serial	Original Serial	N/A
firmware	Firmware	9
original_firmware	Original Firmware	N/A
part_number	FRU	10
original_part_number	Original FRU	N/A
temperature	Temperature	11
encryption_state	Encryption State	12
requires_service	Requires Service	N/A
service_reason	Service Reason	N/A
revision	Revision	N/A
drive_pn	Drive P/N	N/A
original_drive_pn	Original Drive P/N	N/A
fru_pn	FRU P/N	N/A
original_fru_pn	Original FRU P/N	N/A
desc.bgd_scan	Background Scan	N/A
desc.disk_id	Device ID	N/A
desc.last_sample_serial	Last Sample Serial	N/A
desc.last_sample_time	Last Sample Time	N/A

Field ID	Field output	Default position
desc.power_is_on	Power On	N/A
desc.power_on_hours	Power On Hours	N/A
desc.power_on_minutes	Power On Minutes	N/A
desc.last_time_pom_was_mod	Last Time Power On Minutes Was Modified	N/A
desc.read_fail	Read Fail	N/A
desc.smart_code	SMART Code	N/A
desc.smart_fail	SMART Fail	N/A
desc.temperature_status.reported_severity	Reported Temperature Severity	N/A
desc.temperature_status.reported_temperature	Reported Temperature	N/A
desc.temperature_status.temperature	Device Temperature	N/A
desc.sw_encryption_active	Software-Based Encryption Active	N/A

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Listing service statuses

Use the **service_list** command to list all service specific statuses.

```
service_list [ service=ComponentId ]
```

Parameters

Name	Description	Mandatory	Default
service	The service to be listed.	N	All services

This command lists the statuses that apply to services. The list includes the following information:

- Component generic status
- Service on/failed
- Comment (optional)

Example:

```
service_list
```

Output:

Component ID	Status	Currently Functioning	Target Status
1:Data:10	OK	yes	
1:Data:11	OK	yes	
1:Data:7	OK	yes	
1:Data:9	OK	yes	
1:Data_Reduction:10	OK	yes	
1:Data_Reduction:11	OK	yes	
1:Data_Reduction:7	OK	yes	
1:Data_Reduction:9	OK	yes	
1:Interface:10	OK	yes	
1:Interface:11	OK	yes	
1:Interface:9	OK	yes	
1:Remote:10	OK	yes	
1:Remote:11	OK	yes	
1:Remote:9	OK	yes	

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
target_status	Target Status	4

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing system components that require service

Use the **component_service_required_list** command to list system components and their status.

```
component_service_required_list [ component=ComponentId ] [ filter=<ALL|FAILED|NOTOK> ]
```

Parameters

Name	Type	Description	Mandatory	Default
component	N/A	Lists only this component.	N	All components.
filter	Enumeration	Filters the list to show only failed or only non-OK components.	N	ALL

The list can be filtered to show only a specific component, all failed components, or all components in a non-OK state.

For status and configuration of specific component types, refer to the `_list` commands for specific components, such as: `module_list` or `switch_list`.

Example:

```
component_service_required_list
```

Output:

```
Component ID          Status  Currently Functioning  Requires Service
-----
1:IB_Module_Port:12:2  Failed  no                    COMPONENT_TEST
1:IB_Module_Port:13:2  Failed  no                    COMPONENT_TEST
1:IB_Module_Port:8:2   Failed  no                    COMPONENT_TEST
1:IB_Switch_Port:2:12  Failed  no                    COMPONENT_TEST
1:IB_Switch_Port:2:13  Failed  no                    COMPONENT_TEST
1:IB_Switch_Port:2:8   Failed  no                    COMPONENT_TEST

Cont.:

Service Reason
-----
IB_SWITCH_PHY_PORT_NOT_UP
IB_SWITCH_PHY_PORT_NOT_UP
IB_SWITCH_PHY_PORT_NOT_UP
IB_SWITCH_PHY_PORT_NOT_UP
IB_SWITCH_PHY_PORT_NOT_UP
IB_SWITCH_PHY_PORT_NOT_UP
```

Field ID	Field output	Default position
component_id	Component ID	1
status	Status	2
currently_functioning	Currently Functioning	3
requires_service	Requires Service	4
service_reason	Service Reason	5

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Listing trace snapshot on a module

Use the `traces_snapshot_list` command to list trace snapshots on a module.

```
traces_snapshot_list module=ModuleNumber
```

Parameters

Name	Description	Mandatory
module	Component ID of the module to query.	Y

Field ID	Field output	Default position
snapshot	Snapshot Directories	1

Example:

```
traces_snapshot_list module=1:Module:9
```

Output:

```
Snapshots Directories
-----
1_20120802_1653_20120802_1713
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Creating a trace snapshot

Use the **traces_snapshot** command to create a trace snapshot.

```
traces_snapshot [ snapshot_back_time=MINUTES ] [ snapshot_delay_time=MINUTES ]
```

Parameters

Name	Type	Description	Mandatory	Default
snapshot_delay_time	Integer	Max delay between the request and snapshot creation.	N	no. Uses configuration misc.internal.auto_snapshot_trace.last_snapshot_minutes_delay field.
snapshot_back_time	Integer	Time back from the request time to include in the snapshot.	N	no. Uses configuration misc.internal.auto_snapshot_trace.snapshot_back_time field.

Example:


```
xcli.py traces_snapshot snapshot_back_time=60 snapshot_delay_time=1
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Allowed

Chapter 22. Statistics commands

This section describes the command-line interface (CLI) for getting system statistics.

Getting performance statistics

Use the **statistics_get** command to retrieve performance statistics from the storage system.

```
statistics_get [ perf_class=perfClassName | host=HostName | host_iscsi_name=initiatorName |
host_fc_port=WWPN | target=RemoteTarget | remote_fc_port=WWPN | remote_ipaddress=IPAddress |
vol=VolName | domain=DomainName | ipinterface=IPInterfaceName | local_fc_port=ComponentId ]
< start=TimeStamp | end=TimeStamp > [ module=ModuleNumber ]
count=N interval=IntervalSize resolution_unit=<minute|hour|day|week|month>
```

Parameters

Name	Type	Description	Mandatory	Default
host	Object name	Limits statistics to the specific host only.	N	All hosts
host_fc_port	N/A	FC address of the host port.	N	All ports.
target	Object name	Limits statistics to I/O generated by the specified remote target only (due to remote mirroring).	N	All targets.
remote_fc_port	N/A	Limits statistics to the specified host/remote FC port only.	N	All ports.
remote_ipaddress	N/A	IP address of the remote target port.	N	All ports.
host_iscsi_name	iSCSI initiator name	Limits statistics to the specified iSCSI initiator only.	N	All ports.
ipinterface	Object name	Limits statistics to the specified IP interface (relevant for iSCSI only).	N	All interfaces.
module	N/A	Limits statistics to the specified module only.	N	All modules.
local_fc_port	N/A	Limits statistics to I/O performed on the specified FC port only.	N	All ports.
vol	Object name	Limits statistics to the specified volume only.	N	All volumes.
domain	Object name	Limits statistics to the specified domain only.	N	All domains.

Name	Type	Description	Mandatory	Default
start	N/A	Starting point for the statistics report.	N	N/A
end	N/A	Ending point for the statistics report.	N	N/A
count	Positive integer	Number of time points reported.	Y	N/A
interval	Positive integer	The length of time in each statistic's time point. The resolution of this number is set in <i>resolution_unit</i> .	Y	N/A
resolution_unit	Enumeration	Sets the unit of measurement for the length of each bin.	Y	N/A
perf_class	Object name	Displays performance class aggregated statistics for bandwidth and IOPS.	N	All Performance classes.

This command lists I/O statistics. The **count** parameter sets the number of lines in the statistics report. The combination of the **interval** and **resolution_unit** parameters sets the length of time for each statistics line. Either start or end timestamp must be provided. These timestamps set the time for the statistics report. Other parameters restrict statistics to a specific host, host port, volume, domain, interface port and so on.

For each line of statistics, 48 numbers are reported, which represent all the combinations of reads/writes, hits/misses and I/O size reporting for each of the 16 options for bandwidth, IOPS and latency. Statistics collection is limited to 32 pools and 200 volumes.

The syntax for the **start** and **end** fields is as follows: Y-M-D[. [h[:m[:s]]]], where the ranges are as follows:

- Y - year (four digit)
- M - month (1-12)
- D - day (1-31)
- h - hour (0-23, with 0 as default)
- m - minute (0-59, with 0 as default)
- s - second (0-59, with 0 as default)

The year, month and day are separated by dashes, and the optional hours, minutes and seconds are separated by colons.

Output units:

- Very Large blocks are >512KB
- Large blocks - 64-512KB
- Medium blocks - 8-64KB
- Small blocks - 0-8KB

- The latency is in Microseconds
- The bandwidth is in KB

Field ID	Field output	Default position
time	Time	1
failures	Failures	N/A
aborts	Aborts	N/A
read_hit_very_large_iops	Read Hit Very large - IOps	2
read_hit_very_large_latency	Read Hit Very large - Latency	3
read_hit_very_large_internal_latency	Read Hit Very large - Internal Latency	75
read_hit_very_large_throughput	Read Hit Very large - Throughput	4
read_hit_very_large_remotely_served	Read Hit Very large - Remotely Served IOs	63
read_hit_large_iops	Read Hit Large - IOps	5
read_hit_large_latency	Read Hit Large - Latency	6
read_hit_large_internal_latency	Read Hit Large - Internal Latency	76
read_hit_large_throughput	Read Hit Large - Throughput	7
read_hit_large_remotely_served	Read Hit Large - Remotely Served IOs	64
read_hit_medium_iops	Read Hit Medium - IOps	8
read_hit_medium_latency	Read Hit Medium - Latency	9
read_hit_medium_internal_latency	Read Hit Medium - Internal Latency	77
read_hit_medium_throughput	Read Hit Medium - Throughput	10
read_hit_medium_remotely_served	Read Hit Medium - Remotely Served IOs	65
read_hit_small_iops	Read Hit Small - IOps	11
read_hit_small_latency	Read Hit Small - Latency	12
read_hit_small_internal_latency	Read Hit Small - Internal Latency	78
read_hit_small_throughput	Read Hit Small - Throughput	13
read_hit_small_remotely_served	Read Hit Small - Remotely Served IOs	66
read_miss_very_large_iops	Read Miss Very large - IOps	14
read_miss_very_large_latency	Read Miss Very large - Latency	15
read_miss_very_large_internal_latency	Read Miss Very large - Internal Latency	79
read_miss_very_large_throughput	Read Miss Very large - Throughput	16
read_miss_very_large_remotely_served	Read Miss Very large - Remotely Served IOs	67
read_miss_large_iops	Read Miss Large - IOps	17
read_miss_large_latency	Read Miss Large - Latency	18
read_miss_large_internal_latency	Read Miss Large - Internal Latency	80
read_miss_large_throughput	Read Miss Large - Throughput	19
read_miss_large_remotely_served	Read Miss Large - Remotely Served IOs	68
read_miss_medium_iops	Read Miss Medium - IOps	20

Field ID	Field output	Default position
read_miss_medium_latency	Read Miss Medium - Latency	21
read_miss_medium_internal_latency	Read Miss Medium - Internal Latency	81
read_miss_medium_throughput	Read Miss Medium - Throughput	22
read_miss_medium_remotely_served	Read Miss Medium - Remotely Served IOs	69
read_miss_small_iops	Read Miss Small - IOps	23
read_miss_small_latency	Read Miss Small - Latency	24
read_miss_small_internal_latency	Read Miss Small - Internal Latency	82
read_miss_small_throughput	Read Miss Small - Throughput	25
read_miss_small_remotely_served	Read Miss Small - Remotely Served IOs	70
write_hit_very_large_iops	Write Hit Very large - IOps	26
write_hit_very_large_latency	Write Hit Very large - Latency	27
write_hit_very_large_internal_latency	Write Hit Very large - Internal Latency	83
write_hit_very_large_throughput	Write Hit Very large - Throughput	28
write_hit_large_iops	Write Hit Large - IOps	29
write_hit_large_latency	Write Hit Large - Latency	30
write_hit_large_internal_latency	Write Hit Large - Internal Latency	84
write_hit_large_throughput	Write Hit Large - Throughput	31
write_hit_medium_iops	Write Hit Medium - IOps	32
write_hit_medium_latency	Write Hit Medium - Latency	33
write_hit_medium_internal_latency	Write Hit Medium - Internal Latency	85
write_hit_medium_throughput	Write Hit Medium - Throughput	34
write_hit_small_iops	Write Hit Small - IOps	35
write_hit_small_latency	Write Hit Small - Latency	36
write_hit_small_internal_latency	Write Hit Small - Internal Latency	86
write_hit_small_throughput	Write Hit Small - Throughput	37
write_miss_very_large_iops	Write Miss Very large - IOps	38
write_miss_very_large_latency	Write Miss Very large - Latency	39
write_miss_very_large_internal_latency	Write Miss Very large - Internal Latency	87
write_miss_very_large_throughput	Write Miss Very large - Throughput	40
write_miss_large_iops	Write Miss Large - IOps	41
write_miss_large_latency	Write Miss Large - Latency	42
write_miss_large_internal_latency	Write Miss Large - Internal Latency	88
write_miss_large_throughput	Write Miss Large - Throughput	43
write_miss_medium_iops	Write Miss Medium - IOps	44
write_miss_medium_latency	Write Miss Medium - Latency	45
write_miss_medium_internal_latency	Write Miss Medium - Internal Latency	89

Field ID	Field output	Default position
<code>write_miss_medium_throughput</code>	Write Miss Medium - Throughput	46
<code>write_miss_small_iops</code>	Write Miss Small - IOps	47
<code>write_miss_small_latency</code>	Write Miss Small - Latency	48
<code>write_miss_small_internal_latency</code>	Write Miss Small - Internal Latency	90
<code>write_miss_small_throughput</code>	Write Miss Small - Throughput	49
<code>read_memory_hit_very_large_iops</code>	Read Memory-Hit Very large - IOps	50
<code>read_memory_hit_very_large_latency</code>	Read Memory-Hit Very large - Latency	51
<code>read_memory_hit_very_large_internal_latency</code>	Read Memory-Hit Very large - Internal Latency	91
<code>read_memory_hit_very_large_throughput</code>	Read Memory-Hit Very large - Throughput	52
<code>read_memory_hit_very_large_remotely_served</code>	Read Memory-Hit Very large - Remotely Served IOs	71
<code>read_memory_hit_large_iops</code>	Read Memory-Hit Large - IOps	53
<code>read_memory_hit_large_latency</code>	Read Memory-Hit Large - Latency	54
<code>read_memory_hit_large_internal_latency</code>	Read Memory-Hit Large - Internal Latency	92
<code>read_memory_hit_large_throughput</code>	Read Memory-Hit Large - Throughput	55
<code>read_memory_hit_large_remotely_served</code>	Read Memory-Hit Large - Remotely Served IOs	72
<code>read_memory_hit_medium_iops</code>	Read Memory-Hit Medium - IOps	56
<code>read_memory_hit_medium_latency</code>	Read Memory-Hit Medium - Latency	57
<code>read_memory_hit_medium_internal_latency</code>	Read Memory-Hit Medium - Internal Latency	93
<code>read_memory_hit_medium_throughput</code>	Read Memory-Hit Medium - Throughput	58
<code>read_memory_hit_medium_remotely_served</code>	Read Memory-Hit Medium - Remotely Served IOs	73
<code>read_memory_hit_small_iops</code>	Read Memory-Hit Small - IOps	59
<code>read_memory_hit_small_latency</code>	Read Memory-Hit Small - Latency	60
<code>read_memory_hit_small_internal_latency</code>	Read Memory-Hit Small - Internal Latency	94
<code>read_memory_hit_small_throughput</code>	Read Memory-Hit Small - Throughput	61
<code>read_memory_hit_small_remotely_served</code>	Read Memory-Hit Small - Remotely Served IOs	74
<code>time_in_seconds</code>	Time (s)	62

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed

User Category	Permission
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Return codes

- **BAD_TIME_FORMAT**
Bad time format. Should be YYYY-MM-DD[.HH[:MM[:SS]]].
- **TARGET_PORT_BAD_ADDRESS**
The remote port address is illegal or does not belong to the remote target.
- **VOLUME_BAD_NAME**
The volume name does not exist.
- **STATS_TOO_MANY_SAMPLES**
The requested number of statistics samples is too high.
- **TARGET_BAD_NAME**
The target name does not exist.
- **COMPONENT_DOES_NOT_EXIST**
The component does not exist.
- **HOST_BAD_NAME**
The host name does not exist.
- **HOST_PORT_DOES_NOT_EXIST**
The port ID is not defined.
- **IPINTERFACE_DOES_NOT_EXIST**
This IP interface name does not exist.
- **PERF_CLASS_BAD_NAME**
The performance class does not exist.
- **COMMAND_AMBIGUOUS**
The user belongs to more than one domain. Please specify a domain or an object.
- **DOMAIN_DOESNT_EXIST**
The domain does not exist.

Retrieving usage history

Use the **usage_get** command to display the usage history of a volume or a storage pool.

```
usage_get < vol=VolName | pool=PoolName > [ start=TimeStamp | start_in_seconds=StartTime ]
[ end=TimeStamp ] [ max=MaxEntries ]
```

Parameters

Name	Type	Description	Mandatory	Default
vol	Object name	Volume for which usage statistics are retrieved.	N	N/A

Name	Type	Description	Mandatory	Default
pool	Object name	Storage pool for which usage statistics are retrieved.	N	N/A
start	N/A	Starting time for usage history retrieval.	N	Creation time of the object.
end	N/A	Ending time for usage history retrieval.	N	Current time.
max	Integer	Maximum number of entries to retrieve.	N	No limit.
start_in_seconds	Integer	Starting time for usage history retrieval, in seconds since 12:00:00 AM, 1 January 1970.	N	Creation time of the object.

This command retrieves the usage history of a storage pool or volume in megabytes (MB).

Example:

```
usage_get pool=DBPool
```

Output:

```
Time                Volume Usage (MiB)  Snapshot Usage (MiB)
-----
2016-03-29 12:00:00  0                   0
2016-03-29 13:00:00  0                   0
2016-03-29 14:00:00  0                   0
```

Field ID	Field output	Default position
time	Time	1
volume_usage	Volume Usage (MiB)	2
snapshot_usage	Snapshot Usage (MiB)	3

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Return codes

- **VOLUME_BAD_NAME**
The volume name does not exist.
- **POOL_DOES_NOT_EXIST**
The storage pool does not exist.
- **BAD_TIME_FORMAT**
Bad time format. Should be YYYY-MM-DD[.HH[:MM[:SS]]].
- **END_BEFORE_START**
The end time cannot precede the start time.
- **VOLUME_IS_SNAPSHOT**
The operation is not permitted on snapshots.

Chapter 23. Metadata commands

This section describes the command-line interface (CLI) for handling metadata.

Setting metadata

Use the **metadata_set** command to set metadata of an object.

```
metadata_set object_type=Object name=Name key=Key value=Value
```

Parameters

Name	Type	Description	Mandatory
object_type	Enumeration	An object type. Available values: cg, cluster, dest, destgroup, host, performanceclass, pool, rule, schedule, msgw, smtpgw, target, user, user_group, vol.	Y
name	Object name	An object name.	Y
key	String	Metadata key.	Y
value	String	Metadata value.	Y

This command sets a new metadata key value for the specified object. The new value overrides the previous one, if it exists.

The value can be an empty string. Up to 16 values are allowed, each limited to 128 bytes.

Example:

```
metadata_set object_type=host name=Host1 key=01 value=Host
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A

User Category	Permission	Condition
Application administrator	Conditionally Allowed	Metadata can be set for only volumes, snapshots, snapshot groups, clusters or hosts, and only for objects associated with the application administrator executing the command. Hosts or clusters should be associated with the user. Volumes should be mapped to a host or a cluster associated with the user. Snapshots or snapshot groups should be ones created by application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **OBJECT_BAD_NAME**
The referenced object does not exist.
- **MAX_METADATA_OBJECTS_REACHED**
The maximum number of metadata objects has been reached.
- **REMOTE_MAX_METADATA_OBJECTS_REACHED**
The maximum number of metadata objects has been reached on a remote system.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.
- **REMOTE_TARGET_NOT_CONNECTED**
There is currently no connection from the target system.
- **HA_IS_NOT_OPERATIONAL**
This HyperSwap relationship is not operational. The operation cannot be carried out on a non-operational HyperSwap relationship.

Deleting metadata

Use the **metadata_delete** command to delete an object's metadata.

```
metadata_delete object_type=Object name=Name key=Key
```

Parameters

Name	Type	Description	Mandatory
object_type	Enumeration	Type of object. Available values: cg, cluster, dest, destgroup, host, performanceclass, pool, rule, schedule, msgw, smtpgw, target, user, user_group, vol.	Y

Name	Type	Description	Mandatory
name	Object name	The name of the target object.	Y
key	String	Metadata key.	Y

This command deletes a metadata key value for the specified object.

The command will fail if the key is not defined.

Example:

```
metadata_delete object_type=host name=Host1 key=01
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission	Condition
Storage administrator	Allowed	N/A
Storage integration administrator	Allowed	N/A
Application administrator	Conditionally Allowed	Metadata can be set for only volumes, snapshots, snapshot groups, clusters or hosts, and only for objects associated with the application administrator executing the command. Hosts or clusters should be associated with the user. Volumes should be mapped to a host or a cluster associated with the user. Snapshots or snapshot groups should be ones created by application administrator.
Security administrator	Disallowed	N/A
Read-only users	Disallowed	N/A
Technicians	Disallowed	N/A

Return codes

- **OBJECT_BAD_NAME**
The referenced object does not exist.
- **METADATA_OBJECT_KEY_NOT_FOUND**
The specified metadata object does not exist.
- **LOCAL_PEER_IS_NOT_MASTER**
The local peer is not primary.
- **HA_IS_NOT_OPERATIONAL**
This HyperSwap relationship is not operational. The operation cannot be carried out on a non-operational HyperSwap relationship.
- **TARGET_NOT_CONNECTED**
There is currently no connection to the target system.

- **REMOTE_TARGET_NOT_CONNECTED**

There is currently no connection from the target system.

Listing metadata

Use the **metadata_list** command to list an object's metadata.

```
metadata_list [ object_type=Object ] [ name=Name ] [ key=Key ] [ domain=DomainName ]
```

Parameters

Name	Type	Description	Mandatory	Default
object_type	Enumeration	Type of object.	N	Type of object. Available values: cg, cluster, dest, destgroup, host, performanceclass, pool, rule, schedule, smsgw, smtpgw, target, user, user_group, vol.
name	Object name	The name of the target object.	N	All objects
key	String	Metadata key.	N	List all keys and values.
domain	Object name	The domain name.	N	All Domains

This command lists all the value key pairs for this object, or a specific one. The command fails if no key is defined.

Example:

```
metadata_list object_type=host
```

Output:

```
Object Type  Name  Key  Value
-----
Host         Host1  01   Host
```

Field ID	Field output	Default position
object_type	Object Type	1
name	Name	2
key	Key	3
value	Value	4

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Allowed
Application administrator	Allowed

User Category	Permission
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Allowed

Setting user metadata

Use the **user_metadata_set** command to set user metadata by section and key.

```
user_metadata_set section=Section key=Key value=Value
```

Parameters

Name	Type	Description	Mandatory
section	Enumeration	Metadata section.	Y
key	String	Metadata key.	Y
value	String	Metadata value.	Y

Example:

```
user_metadata_set section=GUI key=GUI_10.2 value=Ubuntu_2.6
```

Output:

```
(Command returns no output)
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **USER_METADATA_FULL**

Maximal number of user metadata objects has been reached.

Listing user metadata

Use the **user_metadata_list** command to list user metadata.

```
user_metadata_list [ section=Section ]
```

Parameters

Name	Type	Description	Mandatory	Default
section	Enumeration	User metadata section.	N	"

Example:

```
user_metadata_list
```

Output:

```
Time                Section Key      Value
-----
2004-11-22 18:08:23 TA       GUI_0.2  Ubuntu_2.2
2007-11-22 18:08:22 GUI     GUI_10.1 Ubuntu_2.6
2007-11-22 18:08:23 GUI     GUI_10.2 Ubuntu_2.6
```

Field ID	Field output	Default position
time	Time	1
section	Section	2
key	Key	3
value	Value	4

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Allowed
Security administrator	Disallowed
Read-only users	Allowed
Technicians	Disallowed

Deleting user metadata

Use the **user_metadata_delete** command to delete user metadata by user section and key.

```
user_metadata_delete section=Section key=Key
```

Parameters

Name	Type	Description	Mandatory
section	Enumeration	Meta data section.	Y
key	String	Metadata key.	Y

Example:

```
user_metadata_delete section=GUI key=GUI_10.2
```


Output:

(Command returns no output)

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Disallowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **USER_METADATA_OBJECT_KEY_NOT_FOUND**

The specified user metadata object does not exist.

Chapter 24. Encryption enablement and support commands

This section describes the command-line interface (CLI) for encryption configuration.

Disabling encryption

Use the **encrypt_disable** command to disable the data protection feature.

```
encrypt_disable
```

This command disables the data protection feature.

In order for this command to complete successfully, all of the following prerequisites must be fulfilled:

- The system is fully redundant
- None of the present and active SSDs, Flash cards, or Flash canisters has failed
- No Flash enclosure is undergoing CCL

When data protection is disabled, a cryptographic erase is performed on all protected bands (ensuring that all existing user data is no longer accessible). After the command successfully completes, all bands are left in the unlocked state.

Disabling encryption when the encryption state is other than Active (displayed as Enabled in **state_list**) will result in an error.

Example:

```
encrypt_disable -y
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_DISABLE_ENCRYPTION**

Are you sure you want to disable encryption on this system?

Troubleshooting: To proceed with issuing the command, enter -y.

Return codes

- **CANNOT_DISABLE_ENCRYPTION_WHILE_NOT_IN_FULLY_PROTECTED_STATE**
Cannot disable encryption while not in a fully protected state.
Troubleshooting: Resolve any issues preventing system from reaching full data protection state. Contact IBM Support.
- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **ENCRYPT_NOT_ENABLED**
Encryption is not enabled.
Troubleshooting: Make sure that encryption is enabled and re-run the command.
- **VOLUME(S)_DEFINED**
There are volumes defined, cannot disable encryption.
Troubleshooting: All volumes must be removed before encryption is disabled.
- **CANNOT_UNMOUNT_STATISTIC_VOLUME**
Failed to unmount the statistics volume for disabling encryption.
Troubleshooting: Contact IBM Support.
- **DATA_REDUCTION_RECOVERY_IS_RUNNING**
Data reduction recovery is running, the operation is not allowed.
Troubleshooting: Wait for data reduction recovery to complete.
- **DATA_REDUCTION_TIER_IS_OFFLINE**
The data reduced tier is offline, the operation is not allowed.
Troubleshooting: Contact IBM Support
- **SECURE_ERASE_IS_RUNNING**
The operation not allowed while secure erase is running.
Troubleshooting: Wait for the secure erase process to complete.
- **FLASH_CCL_IN_PROGRESS**
The requested command cannot be invoked while Flash Enclosure CCL is in progress.
Troubleshooting: Wait for Flash CCL to complete.
- **ENCRYPTION_CANNOT_UNENROLL_SOME_VAULT_DEVICES**
Some vault devices cannot be un-enrolled due to failed components.
Troubleshooting: Contact IBM Support.
- **ENCRYPTION_CANNOT_UNENROLL_SOME_FLASH_ENCLOSURES**
Not all flash enclosures are phased in before un-enrollment.
Troubleshooting: Contact IBM Support.
- **ENCRYPTION_IS_NOT_IN_A_STABLE_STATE**
Encryption is not in a stable state.
Troubleshooting: Wait for the encryption process to complete.

Enabling encryption

Use the **encrypt_enable** command to enable the data protection feature.

```
encrypt_enable [ recovery_keys=<yes|no> ] [ key_scheme=KeyScheme ]
```

Parameters

Name	Type	Description	Mandatory	Default
recovery_keys	Boolean	Defines whether recovery keys are required for encryption activation.	N	yes
key_scheme	Enumeration	Defines which key scheme to use for encryption activation: external or local.	N	external

This command enables the data protection feature. In order for this command to complete successfully, all of the following prerequisites must be fulfilled:

- The system is fully redundant
- None of the present and active SSDs, Flash cards, or Flash canisters has failed
- No Flash enclosure is undergoing CCL

Example:

```
encrypt_enable recovery_keys=yes key_scheme=local -y
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_ENABLE_ENCRYPTION**

Are you sure you want to enable encryption on this system?

Troubleshooting: To proceed with issuing the command, enter -y.

- **ARE_YOU_SURE_YOU_WANT_TO_ENABLE_LOCAL_KEY_MANAGEMENT_ENCRYPTION**

Are you sure you want to enable encryption with local key management on this system?

Troubleshooting: To proceed with issuing the command, enter -y.

Return codes

- **CANNOT_ENABLE_ENCRYPTION_WHILE_NOT_IN_FULLY_PROTECTED_STATE**

Cannot enable encryption while not in a fully protected state.

Troubleshooting: Resolve any issues preventing the system from reaching a full data protection state, and contact IBM Support.

- **UNSUPPORTED_HARDWARE**

Cannot encrypt on unsupported hardware.

Troubleshooting: Contact IBM support to verify encryption status.

- **INVALID_RECOVERY_KEY_STATE**

The recovery key state is inconsistent with the specified option.

Troubleshooting: Check the recovery key state using the `encrypt_recovery_key_status` command.

- **ENCRYPTION_ALREADY_ENABLED**

Encryption has already been enabled.

Troubleshooting: Check the output of the `state_list` command.

- **SYSTEM_IS_REDISTRIBUTING**

The operation is not allowed during rebuild or phase-in.

- **NO_LIVE_KEYSERVER_GATEWAY_NODE**

There is no live key server gateway node in the system.

Troubleshooting: Restart the key server gateway node and try again.

- **NO_MASTER_KEYSERVER_DEFINED**

No master key server is defined in the system.

Troubleshooting: Define a master key server by invoking `encrypt_key_server_update` and try again.

- **KEYSERVER_COMMUNICATION_GENERIC_ERROR**

Cannot connect to an active key server.

Troubleshooting: Invoke `encrypt_keyserver_list` and `event_list` for more details.

- **DATA_REDUCTION_TIER_IS_OFFLINE**

The data reduced tier is offline, the operation is not allowed.

Troubleshooting: Contact IBM Support

- **ENCRYPTION_CANNOT_ENROLL_SOME_FLASH_ENCLOSURES**

Not all flash enclosures are phased in before enrollment.

Troubleshooting: Contact IBM Support.

- **ENCRYPTION_CANNOT_ENROLL_SOME_VAULT_DEVICES**

Some vault devices cannot be enrolled due to failed components.

Troubleshooting: Contact IBM Support.

- **DATA_REDUCTION_RECOVERY_IS_RUNNING**

Data reduction recovery is running, the operation is not allowed.

Troubleshooting: Wait for data reduction recovery to complete.

- **FLASH_CCL_IN_PROGRESS**

The requested command cannot be invoked while Flash Enclosure CCL is in progress.

Troubleshooting: Wait for Flash CCL to complete.

- **RECOVERY_MISMATCH_KEY_SCHEME**

The recovery key scheme does not match the current scheme.

Troubleshooting: Check the recovery key scheme using the `encrypt_key_scheme_get` command.

Defining a key server

Use the **encrypt_keyserver_define** command to define a key server to be used by the system.

```
encrypt_keyserver_define name=Name [ ipv4=Address ] [ ipv6=Address ] [ port=PortNumber ]  
[ master=<yes|no> ] [ keyserver_type=KeyserverType ] certificate=PemCertificate
```

Parameters

Name	Type	Description	Mandatory	Default
name	String	The name of the key server being added.	Y	N/A
certificate	N/A	The public certificate of the key server being added.	Y	N/A
master	Boolean	Defines whether this key server is the primary key server used for key retrieval.	N	no
ipv4	N/A	The IPv4 address of the key server being added. Either one IPv4 and/or one IPv6 must be used.	N	NONE
ipv6	N/A	The IPv6 address of the key server being added. Either one IPv4 and/or one IPv6 must be used.	N	NONE
port	Integer	Port used for key server communication.	N	5696
keyserver_type	Enumeration	The type of the key server to communicate with.	N	TKLM

This command defines a key server to be used by the system upon startup or encryption activation to retrieve the key material required to cryptographically unlock the disks. At least one key server (but preferably two, and no more than four) must be defined and accessible in order for **encrypt_enable** to succeed. Only one of the key servers may be defined as master.

Example:

```
encrypt_keyserver_define  
name=snocone ipv4=snocone.ibm.com ipv6=2002::a5a7  
certificate="----BEGIN CERTIFICATE---*MIICyTCCAbGgAwIBAgIXLSiyd2FPMA0GCSqGSIb3IiEBCwUAMBQx  
EjAQAgNVBVuTCXNrbG5pdHNv*.....  
*erD5HgQHSkfr3FEM+b6EBOUPFIBrys8rKtLRbWvovobq*---END CERTIFICATE----"
```

Note: To input the certificate as one line, make sure to add asterisks (*) at the beginning and the end of each line.

Output:

Command executed successfully.

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **ENCRYPTION_TOO_MANY_KEYSERVERS**
Too many key servers are already defined, cannot add another one.
Troubleshooting: Delete a key server and try again.
- **ENCRYPTION_UNSUPPORTED_KEYSERVER_TYPE**
Unsupported key server type.
- **ENCRYPTION_KEYSERVER_NAME_EXISTS**
The key server name already exists.
Troubleshooting: Check the currently defined key servers.
- **ENCRYPTION_KEYSERVER_MUST_HAVE_ADDRESS**
A key server must have at least one address (IPv4/IPv6).
Troubleshooting: Make sure the command includes the ipv4= or ipv6= argument.
- **ENCRYPTION_KEYSERVER_IPV4_ALREADY_EXISTS**
The IPv4 address or host name already exists.
Troubleshooting: Check the currently defined key servers.
- **ENCRYPTION_KEYSERVER_IPV6_ALREADY_EXISTS**
The IPv6 address or host name already exists.
Troubleshooting: Check the currently defined key servers.
- **SSL_CERTIFICATE_HAS_EXPIRED**
The SSL certificate has expired.
- **SSL_CERTIFICATE_VERIFICATION_FAILED**
The SSL certificate chain verification failed.
- **SSL_CERTIFICATE_INVALID_FORMAT**
The SSL certificate format is invalid or corrupted.
- **SSL_CERTIFICATE_NOT_YET_VALID**
The SSL certificate is not yet valid.
- **SSL_CERTIFICATE_VERIFICATION_INTERNAL_ERROR**
The SSL certificate verification has failed because of an internal system error.

- **SSL_CERTIFICATE_ISSUER_NOT_FOUND**
The SSL certificate issuer was not found in the certificate chain.
- **SSL_CERTIFICATE_CHAIN_EMPTY**
No certificates were found in the input.

Removing a key server

Use the **encrypt_keyserver_delete** command to remove a key server used by the system.

```
encrypt_keyserver_delete name=Name
```

Parameters

Name	Type	Description	Mandatory
name	String	The name of a defined key server.	Y

Example:

```
encrypt_keyserver_delete name=snocone
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **ENCRYPTION_UNKNOWN_KEYSERVER**
Unknown key server name.
Troubleshooting: Check the currently defined key servers.
- **ENCRYPTION_DELETE_MASTER_KEYSERVER**
Removal of the master key server is not permitted.
Troubleshooting: A new master key server must be defined before removing the current master.
- **ENCRYPTION_LAST_DEFINED_KEYSERVER**

Cannot delete the last key server.

Troubleshooting: Define another master key server before attempting to delete this one.

Displaying key server status

Use the **encrypt_keyserver_list** command to list the key servers currently defined in the system along with their connectivity status.

```
encrypt_keyserver_list
```

Example:

```
encrypt_keyserver_list
```

Output:

```
Module  Name      App/Key Status  Last time checked  Master  Port
3       nachos  NOAPP      2013/03/27 20:18:43  yes    5696
3       nachos  UNKNOWN   2013/03/27 20:18:43  yes    5696
3       snocone UNKNOWN   2013/03/27 20:18:43  no     5696
3       snocone ACTIVE    2013/03/27 20:18:43  no     5696
3       TKLM-SA BAD_CERT  2013/03/27 20:18:43  no     5696
```

```
Address
9.11.236.1
2002::1
snocone.tucson.ibm.com
2002:90b:e006:238:209:6bff:fe00:a5a7
tklm-sa.ibm.com
```

Field ID	Field output	Default position
module_id	Module	1
label	Name	2
heartbeat_keyserver_status	App/Key Status	3
last_heartbeat	Last time checked	4
master	Master	5
port	Port	6
address	Address	7
keyserver_type	Keyserver Type	8

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **UNSUPPORTED_HARDWARE**

Cannot encrypt on unsupported hardware.

Troubleshooting: Contact IBM support to verify encryption status.

Checking key server status

Use the **encrypt_keyserver_check_status** command to check connectivity status of the key servers currently defined in the system.

```
encrypt_keyserver_check_status
```

This command initiates the async check of the connectivity status of the key servers currently defined in the system. To get the current status, use the **encrypt_keyserver_list** CLI command.

Example:

```
encrypt_keyserver_check_status
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **UNSUPPORTED_HARDWARE**

Cannot encrypt on unsupported hardware.

Troubleshooting: Contact IBM support to verify encryption status.

- **CERTIFICATE_FOR_XIV_IS_NOT_INSTALLED**

An XIV encryption certificate is not installed.

Troubleshooting: Check the output of `pki_list` for a certificate named XIV and contact IBM Support.

- **ENCRYPTION_NOT_IN_EXTERNAL_SCHEME**

Encryption key management is not set to the external scheme.

Troubleshooting: Check the output of the `encrypt_key_scheme_get` command.

Obtaining a new master key

Use the **encrypt_keyserver_rekey** command to initiate a rekey against the master key server.

```
encrypt_keyserver_rekey
```

This command initiates a rekeying (getting new cryptographic material) with the master key server.

Example:

```
encrypt_keyserver_rekey
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **ENCRYPT_NOT_ENABLED**
Encryption is not enabled.
Troubleshooting: Make sure that encryption is enabled and re-run the command.
- **CANNOT_GET_XIV_MASTER_KEY**
Problem obtaining XIV master key from the key server.
Troubleshooting: Make sure that the key service is active and serving keys (obtained from the key server or stored locally). Otherwise, contact IBM Support.
- **CANNOT_GET_NEW_KEY_REQUEST**
Error requesting encryption keys from the key server gateway node.
Troubleshooting: Make sure that the key server is actively serving keys.
- **CANNOT_UPDATE_KEY_METADATA**
Cannot update metadata in the key repository for a new key.
Troubleshooting: Contact IBM Support.
- **CANNOT_CANNOT_GENERATE_EXMK_ESKH**
Problem generating EXMK and ESKH.

- Troubleshooting:** Contact IBM Support.
- **CANNOT_WRITE_TO_KEY_REPOSITORY**
Failed writing keys to the key repository.
Troubleshooting: Contact IBM Support.
- **CANNOT_COPY_KEYS_IN_KEY_REPOSITORY**
Problem copying current keys to the location of the old keys in the key repository.
Troubleshooting: Contact IBM Support
- **ENCRYPTION_KR_WRITE_FAILED**
Error writing to the key repository.
Troubleshooting: Contact IBM Support.
- **ENCRYPTION_KR_READ_FAILED**
Error reading the key repository.
Troubleshooting: Contact IBM Support.
- **NO_LIVE_KEYSERVER_GATEWAY_NODE**
There is no live key server gateway node in the system.
Troubleshooting: Restart the key server gateway node and try again.
- **NO_MASTER_KEYSERVER_DEFINED**
No master key server is defined in the system.
Troubleshooting: Define a master key server by invoking `encrypt_key server_update` and try again.
- **KEYSERVER_COMMUNICATION_GENERIC_ERROR**
Cannot connect to an active key server.
Troubleshooting: Invoke `encrypt_keyserver_list` and `event_list` for more details.
- **ENCRYPTION_NOT_IN_EXTERNAL_SCHEME**
Encryption key management is not set to the external scheme.
Troubleshooting: Check the output of the `encrypt_key_scheme_get` command.

Renaming a key server

Use the `encrypt_keyserver_rename` command to change the name of a defined key server.

```
encrypt_keyserver_rename name=Name new_name=Name
```

Parameters

Name	Type	Description	Mandatory
<code>new_name</code>	String	The new name of the key server.	Y
<code>name</code>	String	The current name of a defined key server.	Y

Example:

```
encrypt_keyserver_rename name=nachos new_name=snocone
```

Output:

Command executed successfully.

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **UNSUPPORTED_HARDWARE**

Cannot encrypt on unsupported hardware.

Troubleshooting: Contact IBM support to verify encryption status.

- **ENCRYPTION_UNKNOWN_KEYSERVER**

Unknown key server name.

Troubleshooting: Check the currently defined key servers.

- **ENCRYPTION_KEYSERVER_NAME_EXISTS**

The key server name already exists.

Troubleshooting: Check the currently defined key servers.

Changing key server properties

Use the **encrypt_keyserver_update** command to change a key server's IP address and/or port.

```
encrypt_keyserver_update name=Name [ ipv4=Address ] [ ipv6=Address ] [ port=PortNumber ]  
[ master=<yes|no> ] [ certificate=PemCertificate ]
```

Parameters

Name	Type	Description	Mandatory	Default
name	String	Name of the key server to be updated.	Y	N/A
certificate	N/A	The public certificate of the key server to be updated.	N	none
master	Enumeration	Indicates whether this key server is the master.	N	no
ipv4	N/A	The IPv4 address.	N	none
ipv6	N/A	The IPv6 address.	N	none
port	Integer	Port number for communications.	N	5696

This command is used to update a key server's address, port, or certificate.

Example:

```
encrypt_keyserver_update name=nachos master=yes ipv4=10.0.0.1  
ipv6=2001::2 port=1010 certificate=''
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **ENCRYPTION_UNKNOWN_KEYSERVER**
Unknown key server name.
Troubleshooting: Check the currently defined key servers.
- **ENCRYPTION_KEYSERVER_IPV4_ALREADY_EXISTS**
The IPv4 address or host name already exists.
Troubleshooting: Check the currently defined key servers.
- **ENCRYPTION_KEYSERVER_IPV6_ALREADY_EXISTS**
The IPv6 address or host name already exists.
Troubleshooting: Check the currently defined key servers.
- **SSL_CERTIFICATE_HAS_EXPIRED**
The SSL certificate has expired.
- **SSL_CERTIFICATE_VERIFICATION_FAILED**
The SSL certificate chain verification failed.
- **SSL_CERTIFICATE_INVALID_FORMAT**
The SSL certificate format is invalid or corrupted.
- **SSL_CERTIFICATE_NOT_YET_VALID**
The SSL certificate is not yet valid.
- **SSL_CERTIFICATE_VERIFICATION_INTERNAL_ERROR**
The SSL certificate verification has failed because of an internal system error.
- **SSL_CERTIFICATE_ISSUER_NOT_FOUND**
The SSL certificate issuer was not found in the certificate chain.
- **SSL_CERTIFICATE_CHAIN_EMPTY**
No certificates were found in the input.

Entering a recovery key

Use the **encrypt_recovery_key_enter** command to unlock encrypted disks when the system reboots and cannot access any of the defined key servers, and when recovery keys are defined.

```
encrypt_recovery_key_enter key=Key
```

Parameters

Name	Description	Mandatory
key	The 64-character hexadecimal recovery key.	Y

This command is used to unlock encrypted disks when the system reboots and cannot access any of the defined key servers. To unlock the disks, the **min_req number** (defined by the **encrypt_recovery_key_generate** command) of security administrators must all successfully enter their recovery key (as presented to them via **recovery_key_get**). After the minimum required keys have been entered, the storage administrator must change the state from Maintenance to On by issuing **state_change target_state=on**. When this command is issued with the machine in the On state, it has no effect, and can be used to check the validity of the recovery key.

Example:

```
encrypt_recovery_key_enter  
key=CBC9B398373FDE79CD38B23192DABACADB5DA63A915CBF5CA8C4E0C212819DE6
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **INVALID_RECOVERY_KEY_FRAGMENT**
The provided recovery key fragment does not match the stored key.
Troubleshooting: Make sure that the proper key (share) has been used.

- **GENERIC_FAILED**
Generic encryption failure.
Troubleshooting: Contact IBM Support.
- **INVALID_RECOVERY_KEY_USER**
The user is not a valid recovery key administrator.
Troubleshooting: Make sure that the provided usernames are valid.
- **NO_LIVE_KEYSERVER_GATEWAY_NODE**
There is no live key server gateway node in the system.
Troubleshooting: Restart the key server gateway node and try again.
- **CANNOT_READ_FROM_KEY_REPOSITORY**
Failed reading keys from the key repository.
Troubleshooting: Contact IBM Support.
- **RK_FAILED_VERIFY_SLEEP**
Too many failed verify attempts.
Troubleshooting: Wait a little and try again.
- **ENCRYPTION_KR_WRITE_FAILED**
Error writing to the key repository.
Troubleshooting: Contact IBM Support.
- **RK_ENTER_SYSTEM_STATE_INVALID**
The command is supported in maintenance mode only.
Troubleshooting: Switch the system state to maintenance mode.
- **INVALID_RECOVERY_KEY_STATE**
The recovery key state is inconsistent with the specified option.
Troubleshooting: Check the recovery key state using the `encrypt_recovery_key_status` command.
- **RECOVERY_KEY_ALREADY_VERIFIED**
The recovery key has already been verified.
Troubleshooting: Check the recovery key state using the `encrypt_recovery_key_list` command.

Generating recovery keys

Use the `encrypt_recovery_key_generate` command to specify which security administrators will receive recovery key shares, and to define the minimum number of recovery key shares that need to be entered.

```
encrypt_recovery_key_generate users=Users [ min_req=MinRequired ] [ key_scheme=KeyScheme ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>min_req</code>	Integer	Minimum number of required security administrator recovery key shares.	N	2
<code>users</code>	Object name	User names of the security administrators.	Y	N/A

Name	Type	Description	Mandatory	Default
key_scheme	Enumeration	Defines which key scheme to use for encryption activation external or local.	N	external

This command is used to specify which security administrator will receive recovery keys (or, more accurately, "shares"), and to define the minimum number of recovery keys that need to be entered (using the **encrypt_recovery_key_enter** command) in order to unlock the encrypted keys. Once this command has been entered, all the specified security administrators are expected to retrieve and verify their recovery keys, using **encrypt_recovery_key_get** and **encrypt_recovery_key_verify**, respectively. This command can only be run when **encryption_state** is DISABLED.

Example:

```
xcli -u secadmin1 -p password -m ${HOST} encrypt_recovery_key_generate users=secadmin1,secadmin2,secadmin3,secadmin4 min_req=2
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **NO_LIVE_KEYSERVER_GATEWAY_NODE**
There is no live key server gateway node in the system.
Troubleshooting: Restart the key server gateway node and try again.
- **CANNOT_WRITE_TO_KEY_REPOSITORY**
Failed writing keys to the key repository.
Troubleshooting: Contact IBM Support.
- **CANNOT_GET_NEW_KEY_REQUEST**
Error requesting encryption keys from the key server gateway node.
Troubleshooting: Make sure that the key server is actively serving keys.
- **KEYSERVER_COMMUNICATION_GENERIC_ERROR**

Cannot connect to an active key server.

Troubleshooting: Invoke `encrypt_keyserver_list` and `event_list` for more details.

- **INSUFFICIENT_RK_ADMIN_THRESHOLD**

Recovery key creation requires at least two security administrators.

Troubleshooting: Re-run the command by indicating at least two security administrators.

- **ENCRYPTION_KR_WRITE_FAILED**

Error writing to the key repository.

Troubleshooting: Contact IBM Support.

- **ENCRYPTION_ALREADY_ENABLED**

Encryption has already been enabled.

Troubleshooting: Check the output of the `state_list` command.

- **NO_MASTER_KEYSERVER_DEFINED**

No master key server is defined in the system.

Troubleshooting: Define a master key server by invoking `encrypt_keyserver_update` and try again.

- **INVALID_RECOVERY_KEY_STATE**

The recovery key state is inconsistent with the specified option.

Troubleshooting: Check the recovery key state using the `encrypt_recovery_key_status` command.

- **INSUFFICIENT_RK_ADMINS**

The number of users must be greater than or equal to the minimal required number.

Troubleshooting: Re-run the command by providing at least the minimal number of required users.

- **CANNOT_GENERATE_KEYS_ON_KEYSERVER_GATEWAY**

Failed to generate XMK and hashes on a key server gateway node.

Troubleshooting: Contact IBM Support.

- **ENCRYPTION_KR_READ_FAILED**

Error reading the key repository.

Troubleshooting: Contact IBM Support.

- **CANNOT_UPDATE_KEY_METADATA**

Cannot update metadata in the key repository for a new key.

Troubleshooting: Contact IBM Support.

Retrieving the security administrator's recovery key

Use the `encrypt_recovery_key_get` command to retrieve the recovery key share generated for the current user.

```
encrypt_recovery_key_get
```

This command retrieves the recovery key generated for the current user (by issuing `encrypt_recovery_key_generate` or `encrypt_recovery_key_rekey`) to be stored in a secure manner. After running this command, the user needs to 'prove' that they have the key by entering it via the `encrypt_recovery_key_verify` command. Once

this is completed successfully, **encrypt_recovery_key_get** will no longer present the user's key. Using **encrypt_recovery_key_get** more than once will return the same value again.

Example:

```
encrypt_recovery_key_get
```

Output:

```
Command executed successfully.
key=B07C4374AC26C4DD3EC2E755EB3FAAF04EC792C8BE0D0CB1C1BAC79998EBEC6D
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **INVALID_RECOVERY_KEY_USER**
The user is not a valid recovery key administrator.
Troubleshooting: Make sure that the provided usernames are valid.
- **NO_LIVE_KEYSERVER_GATEWAY_NODE**
There is no live key server gateway node in the system.
Troubleshooting: Restart the key server gateway node and try again.
- **CANNOT_READ_FROM_KEY_REPOSITORY**
Failed reading keys from the key repository.
Troubleshooting: Contact IBM Support.
- **CANNOT_GET_NEW_KEY_REQUEST**
Error requesting encryption keys from the key server gateway node.
Troubleshooting: Make sure that the key server is actively serving keys.
- **KEYSERVER_COMMUNICATION_GENERIC_ERROR**
Cannot connect to an active key server.
Troubleshooting: Invoke `encrypt_keyserver_list` and `event_list` for more details.
- **NO_MASTER_KEYSERVER_DEFINED**
No master key server is defined in the system.
Troubleshooting: Define a master key server by invoking `encrypt_keyserver_update` and try again.
- **INVALID_RECOVERY_KEY_STATE**
The recovery key state is inconsistent with the specified option.

Troubleshooting: Check the recovery key state using the `encrypt_recovery_key_status` command.

- **RECOVERY_KEY_ALREADY_VERIFIED**

The recovery key has already been verified.

Troubleshooting: Check the recovery key state using the `encrypt_recovery_key_list` command.

Rekeying the security administrators

Use the `encrypt_recovery_key_rekey` command to restart the recovery key generation process.

```
encrypt_recovery_key_rekey [ users=Users ] [ min_req=MinRequired ]
```

Parameters

Name	Type	Description	Mandatory	Default
<code>min_req</code>	Integer	Minimum number of required security administrator recovery key shares.	N	0
<code>users</code>	Object name	Comma delimited list of security administrator to rekey.	N	N/A

This command restarts the recovery key generation process, described in the section on the `encrypt_recovery_key_generate` command. The only difference is that the parameters `users` and `min_required` are optional, and will default to the values specified in the last call to `encrypt_recovery_key_generate`. Note that none of the new recovery keys will take effect until the last user has verified his or her recovery key. Until then, if recovery is required, the previous keys will remain valid.

Example:

```
encrypt_recovery_key_rekey users=secadmin1,secadmin2,secadmin3,secadmin4 min_req=3
```

Output:

```
Command completed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **NO_LIVE_KEYSERVER_GATEWAY_NODE**
There is no live key server gateway node in the system.
Troubleshooting: Restart the key server gateway node and try again.
- **CANNOT_READ_FROM_KEY_REPOSITORY**
Failed reading keys from the key repository.
Troubleshooting: Contact IBM Support.
- **INSUFFICIENT_RK_ADMIN_THRESHOLD**
Recovery key creation requires at least two security administrators.
Troubleshooting: Re-run the command by indicating at least two security administrators.
- **ENCRYPTION_KR_WRITE_FAILED**
Error writing to the key repository.
Troubleshooting: Contact IBM Support.
- **NO_MASTER_KEYSERVER_DEFINED**
No master key server is defined in the system.
Troubleshooting: Define a master key server by invoking `encrypt_key server_update` and try again.
- **INVALID_RECOVERY_KEY_STATE**
The recovery key state is inconsistent with the specified option.
Troubleshooting: Check the recovery key state using the `encrypt_recovery_key_status` command.
- **INSUFFICIENT_RK_ADMINS**
The number of users must be greater than or equal to the minimal required number.
Troubleshooting: Re-run the command by providing at least the minimal number of required users.
- **CANNOT_GENERATE_KEYS_ON_KEYSERVER_GATEWAY**
Failed to generate XMK and hashes on a key server gateway node.
Troubleshooting: Contact IBM Support.
- **KEYSERVER_COMMUNICATION_GENERIC_ERROR**
Cannot connect to an active key server.
Troubleshooting: Invoke `encrypt_keyserver_list` and `event_list` for more details.

Displaying recovery key status

Use the `encrypt_recovery_key_status` command to display status information for recovery keys.

```
encrypt_recovery_key_status
```

This command shows status information regarding recovery keys, specifically: Which user has verified his or her recovery key before `encrypt_enable` or in the

recovery key rekey process. When using the recovery key to unlock the disks, which user has entered his or her recovery key. For information about the number of shares defined and the minimum number required for recovery, issue the **encrypt_recovery_key_list** command.

Example:

```
encrypt_recovery_key_status
```

Output:

```
Mon Aug 12 20:04:43 IDT 2013
Date Created      User      Status
2013-01-03 18:54:46 secadmin1 Verified
2013-01-03 18:54:46 secadmin2 Verified
2013-01-03 18:54:46 secadmin3 Verified
2013-01-03 18:54:46 secadmin4 Verified
2013-01-03 19:00:03 secadmin1 Unverified
2013-01-03 19:00:03 secadmin2 Unverified
2013-01-03 19:00:03 secadmin3 Unverified
2013-01-03 19:00:03 secadmin4 Unverified

When entering keys to unlock the disks:
Date Created      User      Status
2013-01-03 19:00:03 secadmin1 Accepted
2013-01-03 19:00:03 secadmin2 Accepted
2013-01-03 19:00:03 secadmin3 Pending
2013-01-03 19:00:03 secadmin4 Pending
```

Field ID	Field output	Default position
create_date	Date Created	1
user	User	2
status	Status	3

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **CANNOT_READ_FROM_KEY_REPOSITORY**
Failed reading keys from the key repository.
Troubleshooting: Contact IBM Support.

Recovering key verification

Use the **encrypt_recovery_key_verify** command to confirm that the current user has correctly copied the recovery key share retrieved by the **encrypt_recovery_key_get** command.

```
encrypt_recovery_key_verify key=Key
```

Parameters

Name	Description	Mandatory
key	The 64 character hexadecimal recovery key.	Y

This command is used by security administrators to confirm that they have correctly copied the recovery key presented by the **encrypt_recovery_key_get** command. Encryption can be enabled (or a rekey can be completed) only when all security administrators have confirmed their respective recovery keys using this command.

Example:

```
encrypt_recovery_key_verify  
key=B07C4374AC26C4DD3EC2E755EB3FAAF04EC792C8BE0D0CB1C1BAC79998EBEC6D
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **INVALID_RECOVERY_KEY_FRAGMENT**
The provided recovery key fragment does not match the stored key.
Troubleshooting: Make sure that the proper key (share) has been used.
- **GENERIC_FAILED**
Generic encryption failure.
Troubleshooting: Contact IBM Support.
- **INVALID_RECOVERY_KEY_USER**

The user is not a valid recovery key administrator.

Troubleshooting: Make sure that the provided usernames are valid.

- **CANNOT_READ_FROM_KEY_REPOSITORY**

Failed reading keys from the key repository.

Troubleshooting: Contact IBM Support.

- **RK_FAILED_VERIFY_SLEEP**

Too many failed verify attempts.

Troubleshooting: Wait a little and try again.

- **ENCRYPTION_KR_WRITE_FAILED**

Error writing to the key repository.

Troubleshooting: Contact IBM Support.

- **INVALID_RECOVERY_KEY_STATE**

The recovery key state is inconsistent with the specified option.

Troubleshooting: Check the recovery key state using the `encrypt_recovery_key_status` command.

- **RECOVERY_KEY_ALREADY_VERIFIED**

The recovery key has already been verified.

Troubleshooting: Check the recovery key state using the `encrypt_recovery_key_list` command.

Recovering key share information

Use the `encrypt_recovery_key_list` command to list recovery key share information.

```
encrypt_recovery_key_list
```

This command lists information regarding recovery keys, specifically: How many parts was the recovery key shared across, and how many are needed for the recovery process. When the currently valid recovery keys were created. To retrieve per-user information about the status of each key share, use the `encrypt_recovery_key_status` command.

Example:

```
encrypt_recovery_key_list
```

Output:

```
Recovery Key Initial Generation:
Date created      Number of Shares  Min Required
-----
2013-03-11 16:00      3                  2

Recovery Key Rekeyed:
Date created      Number of Shares  Min Required
-----
2013-03-11 16:00      3                  2
2013-03-20 16:05      4                  2
```

Field ID	Field output	Default position
<code>create_date</code>	Key Created	1
<code>number_of_shares</code>	Number of Shares	2
<code>min_req</code>	Min Required	3

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Return codes

- **UNSUPPORTED_HARDWARE**
Cannot encrypt on unsupported hardware.
Troubleshooting: Contact IBM support to verify encryption status.
- **CANNOT_READ_FROM_KEY_REPOSITORY**
Failed reading keys from the key repository.
Troubleshooting: Contact IBM Support.

Finishing the recovery process

Use the **encrypt_recovery_finish** command to finish the recovery process and move the system to the On state.

```
encrypt_recovery_finish
```

Upon entering the recovery keys, this command finishes the recovery process and moves the system to the On state, provided that no more issues exist.

Example:

```
encrypt_recovery_finish
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed

User Category	Permission
Read-only users	Disallowed
Technicians	Disallowed

Return codes

- **ENCRYPT_NOT_ENABLED**

Encryption is not enabled.

Troubleshooting: Make sure that encryption is enabled and re-run the command.

- **RK_ENTER_SYSTEM_STATE_INVALID**

The command is supported in maintenance mode only.

Troubleshooting: Switch the system state to maintenance mode.

Obtaining a new master key

Use the **encrypt_local_rekey** command to initiate rekeying (getting new cryptographic material) from the local key management.

```
encrypt_local_rekey
```

Example:

```
encrypt_local_rekey
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_REKEY**

Are you sure you want to change the local key?

Troubleshooting: To proceed with issuing the command, enter -y.

Return codes

- **ENCRYPT_NOT_ENABLED**

Encryption is not enabled.

Troubleshooting: Make sure that encryption is enabled and re-run the command.

- **CANNOT_GET_XIV_MASTER_KEY**
Problem obtaining XIV master key from the key server.
Troubleshooting: Make sure that the key service is active and serving keys (obtained from the key server or stored locally). Otherwise, contact IBM Support.
- **CANNOT_GET_NEW_KEY_REQUEST**
Error requesting encryption keys from the key server gateway node.
Troubleshooting: Make sure that the key server is actively serving keys.
- **CANNOT_UPDATE_KEY_METADATA**
Cannot update metadata in the key repository for a new key.
Troubleshooting: Contact IBM Support.
- **CANNOT_CANNOT_GENERATE_EXMK_ESKH**
Problem generating EXMK and ESKH.
Troubleshooting: Contact IBM Support.
- **CANNOT_WRITE_TO_KEY_REPOSITORY**
Failed writing keys to the key repository.
Troubleshooting: Contact IBM Support.
- **CANNOT_COPY_KEYS_IN_KEY_REPOSITORY**
Problem copying current keys to the location of the old keys in the key repository.
Troubleshooting: Contact IBM Support
- **ENCRYPTION_KR_WRITE_FAILED**
Error writing to the key repository.
Troubleshooting: Contact IBM Support.
- **ENCRYPTION_KR_READ_FAILED**
Error reading the key repository.
Troubleshooting: Contact IBM Support.
- **NO_LIVE_KEYSERVER_GATEWAY_NODE**
There is no live key server gateway node in the system.
Troubleshooting: Restart the key server gateway node and try again.
- **ENCRYPTION_NOT_IN_LOCAL_SCHEME**
Encryption key management is not set to a local scheme.
Troubleshooting: Check the output of the `encrypt_key_scheme_get` command.

Changing the key management scheme

Use the **encrypt_change_key_scheme** command to change the key management scheme.

```
encrypt_change_key_scheme key_scheme=KeyScheme
```

Parameters

Name	Type	Description	Mandatory
key_scheme	Enumeration	Defines which key management scheme (external or local) to use for encryption activation.	Y

This command only supports the change from an external to a local scheme.

Example:

```
encrypt_change_key_scheme key_scheme=local
```

Output:

```
Command executed successfully.
```

Access control

User Category	Permission
Storage administrator	Disallowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Warnings

- **ARE_YOU_SURE_YOU_WANT_TO_CHANGE_KEY_SCHEME**
Are you sure you want to change the key management scheme? This operation is irreversible.
Troubleshooting: To proceed with issuing the command, enter -y.

Return codes

- **ENCRYPT_NOT_ENABLED**
Encryption is not enabled.
Troubleshooting: Make sure that encryption is enabled and re-run the command.
- **CANNOT_GET_XIV_MASTER_KEY**
Problem obtaining XIV master key from the key server.
Troubleshooting: Make sure that the key service is active and serving keys (obtained from the key server or stored locally). Otherwise, contact IBM Support.
- **CANNOT_GET_NEW_KEY_REQUEST**
Error requesting encryption keys from the key server gateway node.
Troubleshooting: Make sure that the key server is actively serving keys.
- **CANNOT_UPDATE_KEY_METADATA**
Cannot update metadata in the key repository for a new key.
Troubleshooting: Contact IBM Support.
- **CANNOT_CANNOT_GENERATE_EXMK_ESKH**
Problem generating EXMK and ESKH.
Troubleshooting: Contact IBM Support.
- **CANNOT_WRITE_TO_KEY_REPOSITORY**
Failed writing keys to the key repository.
Troubleshooting: Contact IBM Support.
- **CANNOT_COPY_KEYS_IN_KEY_REPOSITORY**

Problem copying current keys to the location of the old keys in the key repository.

Troubleshooting: Contact IBM Support

- **ENCRYPTION_KR_WRITE_FAILED**

Error writing to the key repository.

Troubleshooting: Contact IBM Support.

- **ENCRYPTION_KR_READ_FAILED**

Error reading the key repository.

Troubleshooting: Contact IBM Support.

- **NO_LIVE_KEYSERVER_GATEWAY_NODE**

There is no live key server gateway node in the system.

Troubleshooting: Restart the key server gateway node and try again.

- **ENCRYPTION_NOT_IN_EXTERNAL_SCHEME**

Encryption key management is not set to the external scheme.

Troubleshooting: Check the output of the `encrypt_key_scheme_get` command.

Viewing the key scheme

Use the `encrypt_key_scheme_get` command to view the key scheme defined in the system.

```
encrypt_key_scheme_get
```

Example:

```
encrypt_key_scheme_get
```

Output:

```
Command executed successfully.  
encrypt_key_scheme = "LOCAL"
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Allowed
Technicians	Allowed

Chapter 25. Security configuration commands

This chapter describes the command line interface (CLI) for security configuration.

Listing configuration parameters for a communication protocol

Use the **protocol_config_list** command to list configuration parameters per communication protocol.

```
protocol_config_list [ protocol=<xcli|kmip|cim> ]
```

Parameters

Name	Type	Description	Mandatory	Default
protocol	Enumeration	The available options are: XCLI, KMIP, CIM, or All (if no value is specified).	N	All (if no value is specified).

The following default parameters are shown:

- Protocol Name (XCLI, KMIP, CIM)
- Minimal TLS Version (TLS1.0, TLS1.1, TLS1.2)

Example:

```
protocol_config_list
```

Output:

```
Protocol Name          Minimal TLS Version
-----
CIM                    TLS1.2
KMIP                   TLS1.2
XCLI                   TLS1.2
```

Field ID	Field output	Default position
protocol_name	Protocol Name	1
min_tls_level	Minimal TLS Version	2

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Setting configuration parameters for a communication protocol

Use the **protocol_config_set** command to set configuration parameters for a specific communication protocol or for all protocols.

```
protocol_config_set [ protocol=<xcli|kmip|cim> ] min_tls_level=<tls1.0|tls1.1|tls1.2>
```

Parameters

Name	Type	Description	Mandatory	Default
protocol	Enumeration	The available options are: XCLI, KMIP, CIM (case insensitive), or All (if no value is specified).	N	All (if no value is specified).
min_tls_level	Enumeration	The available options are: TLS1.0, TLS1.1, or TLS1.2 (case insensitive).	Y	N/A

This command sets the value of the following parameter:

- **min_tls_level** - minimal TLS version to support.

Example:

```
protocol_config_set protocol=KMIP min_tls_level=TLS1.2
```

Output:

```
Command completed successfully
```

Access control

User Category	Permission
Storage administrator	Allowed
Storage integration administrator	Disallowed
Application administrator	Disallowed
Security administrator	Allowed
Read-only users	Disallowed
Technicians	Disallowed

Chapter 26. Events

VOLUME_CREATE

Severity	Description
informational	Volume was created with name ' <i>volume.name</i> ' and size <i>volume.sizeGB</i> in Storage Pool with name ' <i>volume.pool_name</i> '.

VOLUME_CREATE_FAILED_TOO_MANY

Severity	Description	Troubleshooting
warning	Volume with name ' <i>name</i> ' could not be created. You are attempting to add more volumes than the system permits.	Delete volumes to allow new ones to be created.

VOLUME_RENAME

Severity	Description
informational	Volume with name ' <i>old_name</i> ' was renamed ' <i>volume.name</i> '.

SUBORDINATE_VOLUME_RENAME

Severity	Description
informational	Remote volume with name ' <i>old_name</i> ' was renamed ' <i>volume.name</i> ' by local system'.

VOLUME_RESIZE

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was resized from <i>old_sizeGB</i> to <i>volume.sizeGB</i> .

SECONDARY_VOLUME_RESIZE

Severity	Description
informational	Secondary volume with name ' <i>volume.name</i> ' was resized by primary machine from <i>old_sizeGB</i> to <i>volume.sizeGB</i> .

VOLUME_DELETE

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was deleted and its data is no longer accessible.

VOLUME_FORMAT

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was formatted.

VOLUME_COPY

Severity	Description
informational	Volume with name ' <i>source.name</i> ' was copied to volume with name ' <i>target.name</i> '.

VOLUME_COPY_DIFF

Severity	Description
informational	Volume with name ' <i>source.name</i> ' was diff-copied from base ' <i>base.name</i> ' to volume with name ' <i>target.name</i> '.

VOLUME_LOCK

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was locked and set to 'read-only'.

VOLUME_UNLOCK

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was unlocked and set to 'writable'.

SUBORDINATE_VOL_LOCK

Severity	Description
informational	Remote volume with name ' <i>volume.name</i> ' was locked and set to 'read-only' by local machine'.

SUBORDINATE_VOL_UNLOCK

Severity	Description
informational	Remote volume with name ' <i>volume.name</i> ' was unlocked and set to 'writable' by local machine.

VOLUME_MOVE

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' has been moved from Storage Pool ' <i>orig_pool.name</i> ' to Pool ' <i>pool.name</i> '.

OLVM_CREATE

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was defined as an IBM Hyper-Scale Mobility.

OLVM_OWNER_CREATE

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was defined as an OWNER IBM Hyper-Scale Mobility.

OLVM_OWNER_ACTIVATED

Severity	Description
informational	IBM Hyper-Scale Mobility Owner Volume with name ' <i>volume.name</i> ' was activated.

OLVM_ACTIVATE

Severity	Description
informational	IBM Hyper-Scale Mobility Volume with name ' <i>volume.name</i> ' was activated.

OLVM_DEACTIVATE

Severity	Description
informational	IBM Hyper-Scale Mobility Volume with name ' <i>volume.name</i> ' was deactivated.

OLVM_REMOTE_ACTIVATE

Severity	Description
informational	IBM Hyper-Scale Mobility Volume with name ' <i>volume.name</i> ' was activated.

OLVM_REMOTE_DEACTIVATE

Severity	Description
informational	IBM Hyper-Scale Mobility Volume with name ' <i>volume.name</i> ' was deactivated.

OLVM_PROXY_INITIATED

Severity	Description
informational	IBM Hyper-Scale Mobility Volume with name ' <i>volume.name</i> ' move to Proxy state started.

OLVM_PROXY

Severity	Description
informational	IBM Hyper-Scale Mobility Volume with name ' <i>volume.name</i> ' entered Proxy state. Volume data on the system is freed.

OLVM_DELETE

Severity	Description	Troubleshooting
informational	IBM Hyper-Scale Mobility Volume process with name ' <i>name</i> ' was deleted.	Delete volumes to allow new ones to be created.

OLVM_ABORT

Severity	Description
informational	IBM Hyper-Scale Mobility Volume process with name ' <i>volume.name</i> ' was aborted.

OLVM_OWNER_DELETE

Severity	Description
informational	IBM Hyper-Scale Mobility Owner Volume process with name ' <i>volume.name</i> ' was deleted.

OLVM_OWNER_ABORT

Severity	Description
informational	IBM Hyper-Scale Mobility Owner Volume process with name ' <i>volume.name</i> ' was aborted.

OLVM_SYNC_STARTED

Severity	Description
informational	IBM Hyper-Scale Mobility Synchronization of volume ' <i>name</i> ' has started.

OLVM_SYNC_ENDED

Severity	Description
informational	IBM Hyper-Scale Mobility Synchronization of volume ' <i>name</i> ' has ended.

QUORUM_WITNESS_DEFINED

Severity	Description
informational	Quorum witness ' <i>Quorum Witness Name</i> ' defined.

QUORUM_WITNESS_DELETED

Severity	Description
informational	Quorum witness ' <i>Quorum Witness Name</i> ' deleted.

QUORUM_WITNESS_UPDATED

Severity	Description
informational	Quorum witness ' <i>Quorum Witness Name</i> ' updated.

QUORUM_WITNESS_RENAMED

Severity	Description
informational	Quorum witness with name ' <i>Old Name</i> ' was renamed ' <i>New Name</i> '.

QUORUM_WITNESS_ACTIVATION_START

Severity	Description
informational	Quorum witness ' <i>Quorum Witness Name</i> ' activation started.

QUORUM_WITNESS_ACTIVATION_SUCCESSFUL

Severity	Description
informational	Quorum witness ' <i>Quorum Witness Name</i> ' activated successfully.

QUORUM_WITNESS_ACTIVATION_FAILED

Severity	Description
minor	Quorum witness ' <i>Quorum Witness Name</i> ' activation failed.

QUORUM_WITNESS_DEACTIVATION_START

Severity	Description
informational	Quorum witness ' <i>Quorum Witness Name</i> ' deactivation started.

QUORUM_WITNESS_DEACTIVATION_SUCCESSFUL

Severity	Description
informational	Quorum witness ' <i>Quorum Witness Name</i> ' deactivated successfully.

QUORUM_WITNESS_DEACTIVATION_FAILED

Severity	Description
minor	Quorum witness ' <i>Quorum Witness Name</i> ' deactivation failed.

QUORUM_WITNESS_COMMUNICATION_DOWN

Severity	Description
major	Communication with quorum witness ' <i>Quorum Witness Name</i> ' is down.

QUORUM_WITNESS_COMMUNICATION_UP

Severity	Description
informational	Communication with quorum witness ' <i>Quorum Witness Name</i> ' is up.

QUORUM_WITNESS_HEARTBEATS_OPERATIONAL

Severity	Description
informational	Successfully sending heartbeats to quorum witness ' <i>Quorum Witness Name</i> '.

QUORUM_WITNESS_HEARTBEATS_FAILING

Severity	Description
major	Failing to send heartbeats to quorum witness ' <i>Quorum Witness Name</i> '.

QUORUM_WITNESS_CERTIFICATE_ABOUT_TO_EXPIRE

Severity	Description
variable	Quorum witness ' <i>Quorum Witness Name</i> ' certificate is about to expire on <i>Expiration Date</i> (Counter notification).

QUORUM_WITNESS_CERTIFICATE_HAS_EXPIRED

Severity	Description
critical	Quorum witness ' <i>Quorum Witness Name</i> ' certificate has expired.

QUORUM_WITNESS_EXTERNAL_NAME_CHANGED

Severity	Description
informational	Quorum witness ' <i>Quorum Witness Name</i> ' has acquired a new external name ' <i>External Name</i> '.

QUORUM_WITNESS_EVENT_REPORT

Severity	Description
variable	Event reported from quorum witness ' <i>Quorum Witness Name</i> ': <i>Event Description</i> (System ID).

QUORUM_WITNESS_MISSING_EVENTS

Severity	Description
informational	The events from 'First' through 'Last' are missing from quorum witness 'Quorum Witness Name'.

QUORUM_WITNESS_DB_RECOVERY_NEEDED

Severity	Description
critical	Quorum witness 'Quorum Witness Name' db has failed. Recovery is needed.

QUORUM_WITNESS_DB_RESTORE_PENDING

Severity	Description
critical	Quorum witness 'Quorum Witness Name' db restore is pending. The db will be restored when the quorum witness is activated.

QUORUM_WITNESS_DB_RECOVERED

Severity	Description
major	Quorum witness 'Quorum Witness Name' db was successfully recovered.

QUORUM_WITNESS_LOG_AUTHENTICATION_SET

Severity	Description
informational	Quorum witness 'Quorum Witness Name' authentication for log retrieval was set.

QUORUM_WITNESS_LOG_AUTHENTICATION_SET_FAILED

Severity	Description
minor	Quorum witness 'Quorum Witness Name' authentication for log retrieval setup failed, 'Failure Reason'.

QUORUM_WITNESS_LOG_AUTHENTICATION_RESET

Severity	Description
informational	Quorum witness 'Quorum Witness Name' authentication for log retrieval was reset.

QUORUM_WITNESS_LOG_AUTHENTICATION_RESET_FAILED

Severity	Description
minor	Quorum witness 'Quorum Witness Name' authentication reset for log retrieval setup failed, 'Failure Reason'.

HA_CREATE

Severity	Description
informational	A HA relation was defined for Volume ' <i>local volume name</i> ' on Target ' <i>target name</i> '.

HA_CREATE_SLAVE

Severity	Description
informational	A HA relation was defined by Target ' <i>target name</i> ' for Volume ' <i>local volume name</i> '.

HA_ACTIVATE

Severity	Description
informational	The HA relation of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' was activated.

HA_SLAVE_ACTIVATE

Severity	Description
informational	The HA relation on peer ' <i>local peer name</i> ' was activated by target ' <i>target name</i> '.

HA_SLAVE_DEACTIVATE

Severity	Description
informational	The HA relation on peer ' <i>local peer name</i> ' was deactivated by target ' <i>target name</i> '.

HA_INCOMPATIBLE_VERSION_FOR_UNMAP_SUPPORT

Severity	Description
warning	A HA of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' cannot support unmap, remote machine has incompatible version.

CG_HA_CREATE

Severity	Description
informational	High availability mirror was defined for Consistency Group ' <i>local CG name</i> ' on Target ' <i>target name</i> '. Remote Consistency Group is ' <i>remote CG name</i> '.

CG_HA_CREATE_SLAVE

Severity	Description
informational	High availability mirror was defined by Target ' <i>target name</i> ' for CG ' <i>local CG name</i> '. Remote CG is ' <i>remote CG name</i> '.

HA_SYNC_STARTED

Severity	Description
informational	Synchronization of remote ha relation of volume ' <i>local volume name</i> ' on Target ' <i>target name</i> ' has started.

HA_SYNC_ENDED

Severity	Description
informational	Synchronization of remote ha relation of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' has ended.

HA_DEACTIVATE

Severity	Description
informational	The HA relation of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' was deactivated.

HA_DELETE

Severity	Description
informational	The HA relation of peer ' <i>local peer name</i> ' to a peer on Target ' <i>target name</i> ' was deleted.

HA_SWITCH_ROLES_TO_SLAVE

Severity	Description
informational	Local peer ' <i>local peer name</i> ' is now Slave of a peer on Target ' <i>target name</i> '.

HA_SWITCH_ROLES_TO_MASTER

Severity	Description
informational	Local peer ' <i>local peer name</i> ' is now Master of a peer on Target ' <i>target name</i> '.

HA_REVERSE_ROLE_TO_SLAVE

Severity	Description
informational	Local peer ' <i>local peer name</i> ' is now Slave of a peer on Target ' <i>target name</i> '.

HA_REVERSE_ROLE_TO_MASTER

Severity	Description
informational	Local peer ' <i>local peer name</i> ' is now Master of a peer on Target ' <i>target name</i> '.

HA_AVAILABILITY_RESTORED

Severity	Description
informational	Local peer ' <i>local peer name</i> ' was made available.

HA_SNAPSHOT_CREATE

Severity	Description
informational	HA Snapshot named ' <i>snapshot.name</i> ' was created for volume named ' <i>volume.name</i> '.

HA_SNAPSHOT_CREATE_FAILED

Severity	Description
minor	HA Remote snapshot named ' <i>snapshot name</i> ' was not created successfully. Error code is ' <i>error</i> '

HA_SNAPSHOT_OVERWRITE

Severity	Description
informational	HA Snapshot named ' <i>snapshot.name</i> ' was overwritten for volume named ' <i>volume.name</i> '.

HA_SLAVE_SNAPSHOT_CREATE

Severity	Description
informational	HA Snapshot named ' <i>snapshot.name</i> ' was created for volume named ' <i>volume.name</i> '.

HA_SLAVE_SNAPSHOT_OVERWRITE

Severity	Description
informational	HA Snapshot named ' <i>snapshot.name</i> ' was overwritten for volume named ' <i>volume.name</i> '.

HA_HIGH_AVAILABILITY_ENABLED

Severity	Description
informational	HA relation on peer ' <i>local peer name</i> ' high availability is enabled.

HA_HIGH_AVAILABILITY_DISABLED

Severity	Description
informational	HA relation on peer ' <i>local peer name</i> ' high availability is disabled by user.

HA_CONVERTED_INTO_MIRROR

Severity	Description
informational	HA relation of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' was converted into mirror.

HA_CONVERTED_INTO_MIRROR_SLAVE

Severity	Description
informational	HA relation of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' was converted into mirror.

TARGET_CONNECTION_HA_SUFFICIENT

Severity	Description
informational	Target named ' <i>target.name</i> ' is ha sufficient connected.

TARGET_CONNECTION_HA_INSUFFICIENT

Severity	Description
critical	Target named ' <i>target.name</i> ' is ha insufficient connected.

TARGET_IS_HA_HEALTHY

Severity	Description
informational	Target named ' <i>target.name</i> ' is HA healthy according to quorum witness.

TARGET_IS_HA_UNHEALTHY

Severity	Description
major	Target named ' <i>target.name</i> ' is HA unhealthy according to quorum witness.

TARGET_DATA_SERVICE_FAILURE

Severity	Description
major	Target named ' <i>target.name</i> ' has data service failure. Reason: <i>Reason</i> .

TARGET_RESUMED_NORMAL_OPERATION

Severity	Description
informational	Target named ' <i>target.name</i> ' resumed normal operation.

HA_AUTOMATIC_FAILOVER_SUCCESSFUL

Severity	Description
warning	HA Slave relation on peer ' <i>local peer name</i> ' has completed failover.

HA_MASTER_REMAINS_AVAILABLE

Severity	Description
informational	HA Master relation on peer ' <i>local peer name</i> ' remains available. Reason: <i>Reason</i> .

HA_MASTER_AVAILABLE

Severity	Description
informational	HA Master relation on peer ' <i>local peer name</i> ' is available.

HA_MASTER_UNAVAILABLE

Severity	Description
major	HA Master relation on peer ' <i>local peer name</i> ' is unavailable. Reason: <i>Unavailable Reason</i> .

HA_SLAVE_AVAILABLE

Severity	Description
informational	HA Slave relation on peer ' <i>local peer name</i> ' is available.

HA_SLAVE_UNAVAILABLE

Severity	Description
major	HA Slave relation on peer ' <i>local peer name</i> ' is unavailable. Reason: <i>Unavailable Reason</i> .

HA_MASTER_RELEASED_CONTROL

Severity	Description
informational	HA Master released control on relation ' <i>local peer name</i> '.

HA_SLAVE_RELEASED_CONTROL

Severity	Description
informational	HA Slave released control on relation ' <i>local peer name</i> '.

MIRROR_CONVERT_INTO_HA_STARTED

Severity	Description
informational	Remote mirror of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' conversion into HA started.

MIRROR_CONVERT_INTO_HA_STARTED_SLAVE

Severity	Description
informational	Remote mirror of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' conversion into HA started.

MIRROR_CONVERT_INTO_HA_ENDED

Severity	Description
informational	Remote mirror of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' conversion into HA ended.

MIRROR_CONVERT_INTO_HA_ENDED_SLAVE

Severity	Description
informational	Remote mirror of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' conversion into HA ended.

HA_REESTABLISH_FAILED_CONFIGURATION_ERROR

Severity	Description	Troubleshooting
major	HyperSwap reestablish failed. Either configuration of remote HyperSwap of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' does not match local configuration.	Make sure configuration on both machines is compatible and activate the HyperSwap. If problem persists contact IBM support.

HA_END_SYNC_FAILED_CONFIGURATION_ERROR

Severity	Description	Troubleshooting
major	Configuration of remote HyperSwap of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' does not match local configuration.	Make sure configuration on both machines is compatible and activate the HyperSwap. If problem persists contact IBM support.

HA_CHANGE_DESIGNATION

Severity	Description
informational	Local peer ' <i>local peer name</i> ' switched its designated role with peer on Target ' <i>target name</i> '. It is now <i>designation</i> .

TARGET_QUORUM_WITNESS_NOT_LAPSED

Severity	Description
informational	Target ' <i>target.name</i> ' Quorum Witness ' <i>quorum_witness.name</i> ' is not lapsed.

TARGET_QUORUM_WITNESS_LAPSED

Severity	Description
Critical	Target ' <i>target.name</i> ' Quorum Witness ' <i>quorum_witness.name</i> ' is lapsed.

DATA_REBUILD_STARTED

Severity	Description
informational	Rebuild process started because system data is not protected. <i>data_percent%</i> of the data must be rebuilt.

DATA_REBUILD_COMPLETED

Severity	Description
informational	Rebuild process completed. System data is now protected.

DATA_REDIST_STARTED

Severity	Description
informational	Starting data transfer to new disks.

DATA_REDIST_COMPLETED

Severity	Description
informational	Completed data transfer to new disks.

DATA_REBUILD_COMPLETED_REDIST_STARTED

Severity	Description
informational	Rebuild process completed. System data is now protected. Starting data transfer to new disks.

DATA_REDIST_TIME_LIMIT_EXCEEDED

Severity	Description
warning	Data redistribution is taking too long. <i>data_percent%</i> of the required redistribution still remains to be done.

DATA_REDIST_BLOCKED

Severity	Description
informational	Blocking data transfer to new phased in media for <i>delay_in_seconds</i> seconds.

DATA_REDIST_ALLOWED

Severity	Description
informational	Allowing data transfer to new phased in media.

STORAGE_POOL_EXHAUSTED

Severity	Description	Troubleshooting
major	Pool ' <i>pool</i> ' is full. All volumes are locked.	Enlarge Storage Pool or move or delete volumes or Clones with Clone Deletion Priority 0.

STORAGE_POOL_UNLOCKED

Severity	Description
major	Pool ' <i>pool</i> ' has empty space. All volumes are unlocked.

STORAGE_POOL_SNAPSHOT_USAGE_INCREASED

Severity	Description
variable	Usage by snapshots of Storage Pool with name ' <i>pool.name</i> ' has reached <i>current</i> %.

STORAGE_POOL_SNAPSHOT_USAGE_DECREASED

Severity	Description
informational	Usage by snapshots of Storage Pool with name ' <i>pool.name</i> ' has decreased to <i>current</i> %.

HOST_CONNECTED

Severity	Description
informational	Host ' <i>host</i> ' has connected to the system.

HOST_DISCONNECTED

Severity	Description
warning	Host ' <i>host</i> ' has disconnected from the system.

HOST_MULTIPATH_OK

Severity	Description
informational	Host ' <i>host</i> ' has redundant connections to the system. #paths= <i>npaths</i>

HOST_NO_MULTIPATH_ONLY_ONE_PORT

Severity	Description
warning	Host ' <i>host</i> ' is connected to the system through only one of its ports. #paths= <i>npaths</i>

HOST_NO_MULTIPATH_ONLY_ONE_MODULE

Severity	Description
informational	Host ' <i>host</i> ' is connected to the system through only one interface module. #paths= <i>npaths</i>

SYSTEM_CAPACITY_USAGE_INCREASED

Severity	Description
variable	Usage of system physical capacity increased to <i>current%</i> .

SYSTEM_CAPACITY_USAGE_DECREASED

Severity	Description
informational	Usage of system physical capacity decreased to <i>current%</i> .

POOL_CREATE

Severity	Description
informational	Storage Pool of size <i>pool.sizeGBsparse_type</i> was created with name ' <i>pool.name</i> '.

POOL_CREATE_FAILED_TOO_MANY

Severity	Description	Troubleshooting
warning	Storage Pool with name ' <i>name</i> ' could not be created. You are attempting to add more Storage Pools than the system permits.	Delete Storage Pools to allow new ones to be created.

POOL_RENAME

Severity	Description
informational	Storage Pool with name ' <i>old_name</i> ' was renamed ' <i>pool.name</i> '.

POOL_RESIZE

Severity	Description
informational	Storage Pool with name ' <i>pool.name</i> ' was resized from size <i>old_sizeGBold_sparse_type</i> to <i>pool.sizeGBsparse_type</i> .

POOL_RESIZE_SNAPSHOTS

Severity	Description
informational	Snapshot size of Storage Pool with name ' <i>pool.name</i> ' was resized from size <i>old_sizeGB</i> to <i>pool.snapshot_sizeGB</i> .

POOL_CHANGE_LOCK_BEHAVIOR

Severity	Description
informational	Lock Behavior of Storage Pool with name ' <i>pool.name</i> ' is now ' <i>state</i> '.

POOL_CONVERTED_TO_SPARSE

Severity	Description
informational	Storage Pool with name ' <i>pool.name</i> ' was converted to sparse.

POOL_CONVERTED_TO_REGULAR

Severity	Description
informational	Storage Pool with name ' <i>pool.name</i> ' was converted to regular.

POOL_CHANGE_PERF_CLASS

Severity	Description
informational	Performance Class of Storage Pool with name ' <i>pool.name</i> ' is now ' <i>pool.perf_class</i> '.

POOL_CONFIG_SNAPSHOTS

Severity	Description
informational	Management policy of Mirroring snapshots of Storage Pool with name ' <i>pool.name</i> ' has changed'.

POOL_DELETE

Severity	Description
informational	Storage Pool with name ' <i>pool.name</i> ' was deleted.

FLASH_VDISK_TOO_SMALL

Severity	Description
major	Flash vdisk <i>name</i> on <i>Flash Enclosure</i> is too small.

FLASH_VDISK_LARGER_THAN_EXPECTED

Severity	Description
warning	Flash vdisk <i>name</i> on <i>Flash Enclosure</i> is larger than expected.

DATA_REDUCTION_TIER_IS_OFFLINE

Severity	Description
critical	Data reduction tier moved to offline mode

DATA_REDUCTION_RECOVERY_STARTED

Severity	Description
Informational	Data reduction recovery process started

DATA_REDUCTION_RECOVERY_FINISHED

Severity	Description
Informational	Data reduction recovery process ended

DATA_REDUCTION_RECOVERY_FAILED

Severity	Description
Minor	Data reduction recovery process failed with reason: ' <i>reason</i> '

DATA_REDUCTION_RECOVERY_ABORT_STARTED

Severity	Description
Informational	Data reduction recovery abort started

DATA_REDUCTION_RECOVERY_ABORT_FINISHED

Severity	Description
Informational	Data reduction recovery abort finished

DATA_REDUCTION_TIER_IS_ONLINE

Severity	Description
informational	Data reduction tier moved to online state

DATA_REDUCTION_TIER_BECOMING_OFFLINE

Severity	Description
major	Data reduction tier is transitioning to offline mode

DATA_REDUCTION_RESUME_ONLINE_START

Severity	Description
informational	Data reduction is resuming from offline mode

DATA_REDUCTION_RESUME_ONLINE_FAILED

Severity	Description
warning	Data reduction failed resuming from offline mode

DATA_REDUCTION_COMPRESSION_ADAPTER_FAILED

Severity	Description
Major	Data Reduction node <i>reporting_node</i> reported about compression adapter failure and will be killed.

FLASH_COMPONENT_INITIALIZING

Severity	Description	Troubleshooting
informational	<i>Flash Component ID</i> initializing.	Contact IBM Support

FLASH_COMPONENT_OK

Severity	Description	Troubleshooting
informational	<i>Flash Component ID</i> status ok.	Contact IBM Support

FLASH_COMPONENT_FAILED

Severity	Description	Troubleshooting
variable	<i>Flash Component ID</i> has failed.	Contact IBM Support

FLASH_COMPONENT_REPLACED

Severity	Description	Troubleshooting
informational	<i>Component ID</i> was replaced. New serial <i>New Serial</i> Old serial <i>Old Serial</i>	Contact IBM Support

FLASH_FW_HOT_UPGRADE_STARTED

Severity	Description
informational	Start upgrade to version <i>version</i> . Enclosure id <i>component id</i>

FLASH_FW_HOT_UPGRADE_FINISHED

Severity	Description
informational	Finished upgrade to version <i>version</i> . Enclosure id <i>component id</i>

FLASH_UPGRADE_RESUMED

Severity	Description
informational	Finished upgrade resumed. Enclosure id <i>component id</i>

FLASH_FW_HOT_UPGRADE_RESUMED

Severity	Description
informational	Finished upgrade resumed. Enclosure id <i>component id</i>

FLASH_UPGRADE_STOPPED

Severity	Description
major	Flash upgrade stopped after <i>percents%</i> , reason: <i>reason</i> . Enclosure id <i>component id</i>

FLASH_FW_HOT_UPGRADE_STOPPED

Severity	Description
major	Flash upgrade stopped after <i>percents%</i> , reason: <i>reason</i> . Enclosure id <i>component id</i>

FLASH_FW_HOT_UPGRADE_FAILED

Severity	Description
major	Flash firmware hot upgrade failed, reason: <i>reason</i> . error: <i>ccl_error</i> . Enclosure id <i>component id</i>

FLASH_FW_HOT_UPGRADE_TIMEOUT

Severity	Description
major	Timeout while upgrading <i>component id</i> , progress: <i>percents</i>

FLASH_RAID_STATUS_CHANGED

Severity	Description
variable	Flash array raid status changed to <i>status</i> . Enclosure id <i>component id</i> .

FLASH_ARRAY_STATUS_CHANGED

Severity	Description
variable	Flash array status changed to <i>status</i> . Enclosure id <i>component id</i> .

FLASH_ENCRYPTION_STATUS_CHANGED

Severity	Description
informational	Encryption enabled changed to <i>encrypted</i> . Enclosure id <i>component id</i> .

FLASH_ENCRYPTION_ENABLE_NOT_ALLOWED

Severity	Description
major	Encryption enable not allowed: <i>reason</i> . Enclosure id <i>component id</i> .

FLASH_ENCRYPTION_DISABLE_NOT_ALLOWED

Severity	Description
major	Encryption disable not allowed: <i>reason</i> . Enclosure id <i>component id</i> .

ENCRYPT_ENABLE_FLASH_ENCLOSURE_FAILED

Severity	Description
major	Encryption enable failed for <i>component id</i> : <i>reason</i>

ENCRYPT_DISABLE_FLASH_ENCLOSURE_FAILED

Severity	Description
major	Encryption disable failed for <i>component id</i> : <i>reason</i>

FLASH_ENCRYPTION_UNLOCK_FAILED

Severity	Description
major	Flash Encryption unlock failed. Enclosure: <i>component id</i> .

FLASH_ENCLOSURE_WIPEOUT_FAILED

Severity	Description
major	Wipeout failed for <i>component id</i> : <i>reason</i>

FLASH_BBU_CHARGING_STATUS_CHANGED

Severity	Description
informational	BBU charging status changed to <i>status</i> . BBU: <i>component id</i> .

FLASH_BBU_CALIBRATION_STARTED

Severity	Description
informational	BBU calibration started, BBU: <i>component id</i> .

FLASH_BBU_CALIBRATION_STOPPED

Severity	Description
informational	BBU calibration stopped, BBU: <i>component id</i> .

FLASH_BBU_CALIBRATION_FAILED

Severity	Description
minor	BBU calibration failed, BBU: <i>component id</i> .

FLASH_CANISTER_CONNECTED_VIA_SERIAL_CABLE

Severity	Description
informational	Established serial connection with <i>component id</i> .

FLASH_CANISTER_CONNECTION_VIA_SERIAL_OK

Severity	Description
informational	Established serial connection with <i>component id</i> .

NO_CONNECTION_TO_FLASH_CANISTER_VIA_SERIAL

Severity	Description	Troubleshooting
warning	Failed to connect to <i>component id</i> via serial.	Contact IBM Support

FLASH_CANISTER_NO_CONNECTION_VIA_SERIAL

Severity	Description	Troubleshooting
warning	Failed to connect to <i>component id</i> via serial.	Contact IBM Support

NO_CONNECTION_TO_FLASH_CANISTER_VIA_ETH

Severity	Description	Troubleshooting
warning	Failed to connect to <i>component id</i> via ethernet.	Contact IBM Support

FLASH_CANISTER_NO_CONNECTION_VIA_ETH

Severity	Description	Troubleshooting
warning	Failed to connect to <i>component id</i> via ethernet.	Contact IBM Support

FLASH_CANISTER_CONNECTION_VIA_ETH_OK

Severity	Description	Troubleshooting
informational	Established connection to <i>component id</i> via ethernet.	Contact IBM Support

FLASH_CANISTER_IP_CHANGED

Severity	Description	Troubleshooting
informational	Changed connected ip of <i>component id</i> to <i>IP</i> .	Contact IBM Support

NO_CONNECTION_TO_FLASH_CANISTER_VIA_GW

Severity	Description	Troubleshooting
warning	Failed to connect to <i>component id</i> via <i>module id</i> .	Contact IBM Support

FLASH_CANISTER_NO_CONNECTION_VIA_GW

Severity	Description	Troubleshooting
warning	Failed to connect to <i>component id</i> via <i>module id</i> .	Contact IBM Support

FLASH_CANISTER_CONNECTED_VIA_GATEWAY

Severity	Description	Troubleshooting
informational	Established connection to <i>component id</i> via <i>module id</i> .	Contact IBM Support

FLASH_CANISTER_CONNECTION_VIA_GW_OK

Severity	Description	Troubleshooting
informational	Established connection to <i>component id</i> via <i>module id</i> .	Contact IBM Support

FLASH_CANISTER_ETH_LINK_MISWIRE

Severity	Description	Troubleshooting
minor	Flash canister <i>component id</i> is miswired.	Contact IBM Support

FLASH_CANISTER_ETH_LINK_WIRING_OK

Severity	Description	Troubleshooting
informational	Flash canister <i>component id</i> is no longer miswired.	Contact IBM Support

FLASH_CANISTER_GET_CONF_FAILED

Severity	Description	Troubleshooting
minor	Failed to get the configuration from <i>component id</i> .	Contact IBM Support

FLASH_CANISTER_GET_CONF_OK

Severity	Description	Troubleshooting
informational	Succeeded to get the configuration from <i>component id</i> .	Contact IBM Support

FLASH_CANISTER_IN_SERVICE_MODE

Severity	Description	Troubleshooting
major	Flash canister is in service mode <i>service</i> , canister: <i>component id</i> .	Contact IBM Support

FLASH_CANISTER_NO_LONGER_IN_SERVICE_MODE

Severity	Description
informational	Flash canister is no longer in service mode: <i>component id</i> .

FLASH_COMPONENT_TEMPERATURE_OK

Severity	Description
informational	Flash component <i>component id</i> temperature is within allowed limits.

FLASH_COMPONENT_TEMPERATURE_ABOVE_NORMAL

Severity	Description
warning	Flash component <i>component id</i> temperature is above normal.

FLASH_COMPONENT_TEMPERATURE_HIGH

Severity	Description
major	Flash component <i>component id</i> temperature is high, it exceeds operational level.

FLASH_COMPONENT_TEMPERATURE_CRITICALLY_HIGH

Severity	Description
critical	Flash component <i>component id</i> temperature is critical.

FLASH_ENCLOSURE_STATUS_CHANGED

Severity	Description	Troubleshooting
informational	<i>component id</i> status changed to <i>New Status</i> .	Contact IBM Support

FLASH_PSU_FAN_FAILED

Severity	Description
minor	<i>component id</i> fan has failed.

FLASH_PSU_FAN_OK

Severity	Description
informational	<i>component id</i> is ok.

FLASH_PSU_HAS_NO_INPUT_POWER

Severity	Description
major	PSU power supply has no input (AC) power. PSU id <i>component id</i> .

FLASH_PSU_HAS_INPUT_POWER

Severity	Description
informational	PSU power supply has input (AC) power. PSU id <i>component id</i> .

FLASH_ENCLOSURE_VERSION_IS_UNEXPECTED

Severity	Description
major	<i>component id</i> version is <i>version</i> , expected version is <i>expected</i> .

FLASH_ENCLOSURE_NEWER_VERSION_EXISTS

Severity	Description
minor	<i>component id</i> version <i>version</i> is supported. newer version <i>expected</i> exists.

FLASH_PSU_COMMUNICATION_ERROR

Severity	Description
minor	PSU communication error. PSU id <i>component id</i> .

FLASH_BBU_VPD_IS_NOT_VALID

Severity	Description
major	BBU VPD is not valid. BBU id <i>component id</i> .

FLASH_CARD_UNSUPPORTED

Severity	Description
warning	Flash card is unsupported. Flash card id <i>component id</i> .

FLASH_BBU_END_OF_LIFE

Severity	Description
warning	Battery is at end of life. BBU id <i>component id</i> .

FLASH_CARD_COMMUNICATION_ERROR

Severity	Description
minor	Flash card communication error. Flash card id <i>component id</i> .

FLASH_FAN_COMMUNICATION_ERROR

Severity	Description
minor	Fan communication error. Fan: <i>component id</i> .

FLASH_ENCLOSURE_THERMAL_THRESHOLD_EXCEEDED

Severity	Description
critical	Flash enclosure <i>component id</i> has shutdown after exceeding the thermal threshold.

FLASH_ENCLOSURE_ARRAY_OFFLINE

Severity	Description
critical	Flash enclosure <i>component id</i> array is offline.

FLASH_ENCLOSURE_STARTED_PHASEOUT

Severity	Description
informational	System started phasing out <i>Component ID</i> .

FLASH_ENCLOSURE_FINISHED_PHASEOUT

Severity	Description
informational	System finished phasing out <i>Component ID</i> .

FLASH_ENCLOSURE_STARTED_PHASEIN

Severity	Description
informational	System started phasing in <i>Component ID</i> .

FLASH_ENCLOSURE_FINISHED_PHASEIN

Severity	Description
informational	System finished phasing in <i>Component ID</i> .

FLASH_CR_KEY_SETUP_FAILED

Severity	Description
major	Failed to set challenge-response key on ' <i>Component ID</i> '.

FLASH_CR_KEY_SETUP_OK

Severity	Description
informational	Challenge-response key was successfully set on ' <i>Component ID</i> '.

FLASH_CR_KEY_SETUP_STARTED

Severity	Description
informational	Challenge-response key set started on ' <i>Component ID</i> '.

FC_PORT_HAS_FAILED

Severity	Description	Troubleshooting
major	FC port service <i>port</i> has failed due to <i>code</i> (attempt number <i>Number of retries</i>)	Contact IBM Support

NTP_SERVER_TIME_DIFFERENCE_TOO_BIG

Severity	Description	Troubleshooting
warning	NTP server <i>NTP Server</i> sent a transaction with time difference of <i>Delta</i> seconds which exceeds the maximal difference of <i>Max Allowed</i> seconds. Transaction will be ignored, please check NTP server's and system's times.	Please contact your Administrator.

IPSEC_TUNNEL_OPENED

Severity	Description
informational	The IPSec tunnel named ' <i>name</i> ' between module <i>Module</i> and <i>Right IP</i> was opened

IPSEC_TUNNEL_CLOSED

Severity	Description
informational	The IPSec tunnel named ' <i>name</i> ' between module <i>Module</i> and <i>Right IP</i> was closed

IP_ACCESS_CANNOT_RESOLVE_ADDRESS

Severity	Description
informational	Cannot resolve address ' <i>address</i> ' added to the IP access group <i>IP access group name</i> .

IP_ACCESS_FAILED_SETTING_RULES

Severity	Description
informational	Failed setting IP access rules.

USB_ETHERNET_INTERFACE_OK

Severity	Description
informational	USB ethernet interface on module <i>Module</i> was reset successfully and is now OK.

USB_ETHERNET_INTERFACE_IS_STILL_DOWN

Severity	Description	Troubleshooting
minor	USB ethernet interface on module <i>Module</i> is down and failed to reset.	Contact IBM Support

USB_ETHERNET_INTERFACE_FAILED

Severity	Description	Troubleshooting
warning	USB ethernet interface on module <i>Module</i> failed.	Contact IBM Support

MIRROR_CREATE

Severity	Description
informational	A remote mirror was defined for Volume ' <i>local volume name</i> ' on Target ' <i>target name</i> '. Remote Volume is ' <i>remote volume name</i> '.

CG_MIRROR_CREATE

Severity	Description
informational	A remote mirror was defined for Consistency Group ' <i>local CG name</i> ' on Target ' <i>target name</i> '. Remote Consistency Group is ' <i>remote CG name</i> '.

MIRROR_CREATE_SLAVE

Severity	Description
informational	A remote mirror was defined by Target ' <i>target name</i> ' for Volume ' <i>local volume name</i> '. Remote Volume is ' <i>remote volume name</i> '.

CG_MIRROR_CREATE_SLAVE

Severity	Description
informational	A remote mirror was defined by Target ' <i>target name</i> ' for CG ' <i>local CG name</i> '. Remote CG is ' <i>remote CG name</i> '.

MIRROR_SCHEDULE_CHANGE

Severity	Description
informational	Schedule of remote mirror of ' <i>local peer name</i> ' is now ' <i>schedule name</i> '.

MIRROR_CREATE_FAILED_TARGET_NOT_CONNECTED

Severity	Description	Troubleshooting
warning	Target could not be reached. Target with name ' <i>target.name</i> ' is currently not connected.	Connect the target system to this system.

REMOTE_OPERATION_FAILED_TIMED_OUT

Severity	Description	Troubleshooting
warning	Operation on remote machine timed out. Invoking ' <i>Function Name</i> ' on target ' <i>Target Name</i> ' timed out.	Retry operation. If problem persists contact IBM support.

MIRROR_RESYNC_FAILED

Severity	Description	Troubleshooting
major	Synchronization of meta data with mirror failed. Configuration of remote mirror of volume ' <i>local volume name</i> ' on target ' <i>target name</i> ' does not match local configuration.	Make sure configuration on both machines is compatible and activate the mirror. If problem persists contact IBM support.

MIRROR_RESYNC_FAILED_DUE_TO_THIN_PROVISIONING

Severity	Description	Troubleshooting
major	Synchronization of bitmaps with mirror failed. Not enough hard capacity left in Pool of volume ' <i>mirror.local_volume_name</i> '.	Delete unnecessary volumes in pool or enlarge the pool's hard size.

MIRROR_SYNC_STARTED

Severity	Description
informational	Synchronization of remote mirror of volume ' <i>local volume name</i> ' on Target ' <i>target name</i> ' has started.

MIRROR_SYNC_ENDED

Severity	Description
informational	Synchronization of remote mirror of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' has ended.

MIRROR_CANNOT_CREATE_SYNC_JOB_TOO_MANY_VOLUMES

Severity	Description
major	Synchronization of remote mirror of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' can not be synced , insufficient volume available for this operation.

MIRROR_CANNOT_CREATE_LRS_TOO_MANY_VOLUMES

Severity	Description
major	Synchronization of remote mirror of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' can not be synced , insufficient volume available for this operation.

MIRROR_REESTABLISH_FAILED_CONFIGURATION_ERROR

Severity	Description	Troubleshooting
major	Mirror reestablish failed. Either configuration of remote mirror of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' does not match local configuration.	Make sure configuration on both machines is compatible and activate the mirror. If problem persists contact IBM support.

MIRROR_ACTIVATE

Severity	Description
informational	The Remote Mirror of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' was activated.

MIRROR_DEACTIVATE

Severity	Description
informational	The Remote Mirror of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' was deactivated.

MIRROR_SLAVE_ACTIVATE

Severity	Description
informational	The mirror of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' was activated.

MIRROR_SLAVE_DEACTIVATE

Severity	Description
informational	The mirror of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' was deactivated.

MIRROR_DEACTIVATE_SECONDARY_LOCKED

Severity	Description
minor	The Remote Mirror of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' was deactivated since the Pool on the secondary machine was locked.

MIRROR_DEACTIVATE_CONFIGURATION_ERROR

Severity	Description
minor	The Remote Mirror of peer ' <i>local peer name</i> ' on Target ' <i>target name</i> ' was deactivated since the Mirror configuration on the slave machine has changed.

MIRROR_DELETE

Severity	Description
informational	The Remote Mirror relation of peer ' <i>local peer name</i> ' to a peer on Target ' <i>target name</i> ' was deleted.

MIRROR_REVERSE_ROLE_TO_SLAVE

Severity	Description
informational	Local peer ' <i>local peer name</i> ' is now Slave of a peer on Target ' <i>target name</i> '.

MIRROR_REVERSE_ROLE_TO_MASTER

Severity	Description
informational	Local peer ' <i>local peer name</i> ' is now Master of a peer on Target ' <i>target name</i> '.

MIRROR_REVERSE_ROLE_OF_PEER_WITH_LCS_TO_MASTER

Severity	Description
informational	Local peer ' <i>local peer name</i> ' is now Master of a peer on Target ' <i>target name</i> ' external last consistent snapshot should be deleted manually .

MIRROR_SWITCH_ROLES_TO_SLAVE

Severity	Description
informational	Local peer ' <i>local peer name</i> ' switched roles with peer on Target ' <i>target name</i> '. It is now Slave.

MIRROR_SWITCH_ROLES_TO_MASTER

Severity	Description
informational	Local peer ' <i>local peer name</i> ' switched roles with peer on Target ' <i>target name</i> '. It is now Master.

MIRROR_REESTABLISH_FAILED_TOO_MANY_VOLUMES

Severity	Description	Troubleshooting
major	Last Consistent Snapshot of Slave peer ' <i>local peer name</i> ' could not be created. Maximal number of Volumes are already defined.	Delete Volumes to allow new ones to be created. Activate Mirror on the Master Machine.

MIRROR_END_SYNC_FAILED_CONFIGURATION_ERROR

Severity	Description	Troubleshooting
major	Configuration of remote mirror of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' does not match local configuration.	Make sure configuration on both machines is compatible and activate the mirror. If problem persists contact IBM support.

MIRROR_CHANGE_DESIGNATION

Severity	Description
informational	Local peer ' <i>local peer name</i> ' switched its designated role with peer on Target ' <i>target name</i> '. It is now <i>designation</i> .

MIRROR_CANCEL_SNAPSHOT

Severity	Description
informational	All mirrored snapshots which were created for Mirror of peer ' <i>local peer name</i> ' and were not yet synchronized will not be mirrored in the remote machine.

DM_DEFINE

Severity	Description
informational	Data Migration was defined to Volume ' <i>local volume name</i> ' from Target ' <i>target name</i> '.

DM_SYNC_STARTED

Severity	Description
informational	Migration to volume ' <i>local volume name</i> ' from Target ' <i>target name</i> ' has started.

DM_SYNC_ENDED

Severity	Description
informational	Migration to volume ' <i>local volume name</i> ' from target ' <i>target name</i> ' is complete.

DM_SYNC_ENDED_WITH_ERRORS

Severity	Description
Critical	Migration to volume ' <i>local volume name</i> ' from target ' <i>target name</i> ' has completed with <i>medium_errors_in_data_migration</i> error(s). Check previous events related to this volume for the list of affected LBAs.'

DM_ACTIVATE

Severity	Description
informational	Migration to Volume ' <i>local volume name</i> ' from Target ' <i>target name</i> ' was activated.

DM_DEACTIVATE

Severity	Description
informational	Migration to Volume ' <i>local volume name</i> ' from Target ' <i>target name</i> ' was deactivated.

DM_DEACTIVATE_LUN_UNAVAILABLE

Severity	Description
minor	Migration to Volume ' <i>local volume name</i> ' from Target ' <i>target name</i> ' was deactivated since LUN is not available on one of the active paths to the target.

DM_DELETE

Severity	Description
informational	Definition of Data Migration to Volume ' <i>local volume name</i> ' from Target ' <i>target name</i> ' was deleted.

SCHEDULE_CREATE

Severity	Description
informational	Schedule was created with name ' <i>schedule name</i> '.

SCHEDULE_UPDATE

Severity	Description
informational	Schedule with name ' <i>schedule name</i> ' was updated.

SCHEDULE_RENAME

Severity	Description
informational	Schedule with name ' <i>old_name</i> ' was renamed ' <i>schedule name</i> '.

SCHEDULE_DELETE

Severity	Description
informational	Schedule with name ' <i>schedule name</i> ' was deleted.

MIRROR_RPO_OK

Severity	Description
informational	Mirror of local peer ' <i>local peer name</i> ' is now ahead of its specified RPO.

MIRROR_RPO_LAGGING

Severity	Description
informational	Mirror of local peer ' <i>local peer name</i> ' is now behind its specified RPO.

MIRROR_CHANGE_RPO

Severity	Description
informational	RPO or Mirror of local peer ' <i>local peer name</i> ' is now <i>RPO</i> .

MIRROR_IS_LAGGING_BEYOND_PERCENT_THRESHOLD

Severity	Description
warning	Last Replication Time of Mirror of local peer ' <i>local peer name</i> ' is <i>Last Replication Time</i> .

MIRROR_AUTO_FIX_REACHED_LIMIT

Severity	Description
warning	A remote checksum diff for mirror ' <i>local peer name</i> ' cannot be fixed automatically because we reached the auto fix limit.

MIRROR_IS_LAGGING_BEYOND_ABSOLUTE_THRESHOLD

Severity	Description
warning	Last Replication Time of Mirror of local peer ' <i>local peer name</i> ' is <i>Last Replication Time</i> .

MIRROR_INCOMPATIBLE_VERSION_FOR_UNMAP_SUPPORT

Severity	Description
warning	Mirror of peer ' <i>local peer name</i> ' on target ' <i>target name</i> ' cannot support unmap, remote machine has incompatible version.

XMIRROR_DEFINE

Severity	Description
informational	A xmirror master ' <i>xmirror name</i> ' was defined for volume ' <i>local volume name</i> '.

XMIRROR_DEFINE_SLAVE

Severity	Description
informational	A xmirror slave ' <i>xmirror name</i> ' was defined for volume ' <i>local volume name</i> '.

XMIRROR_DEFINE_SMMASTER

Severity	Description
informational	A xmirror smaster ' <i>xmirror name</i> ' was defined for volume ' <i>local volume name</i> '.

XMIRROR_ACTIVATE

Severity	Description
informational	Xmirror ' <i>xmirror name</i> ' was activated.

XMIRROR_DEACTIVATE

Severity	Description
informational	Xmirror ' <i>xmirror name</i> ' was deactivated.

XMIRROR_DELETE

Severity	Description
informational	Xmirror ' <i>xmirror name</i> ' was deleted.

XMIRROR_CHANGE_SLAVE_ROLE_TO_MASTER

Severity	Description
informational	Xmirror ' <i>xmirror name</i> ' was changed to standalone.

XMIRROR_CHANGE_MASTER_ROLE_TO_SLAVE

Severity	Description
informational	Xmirror ' <i>xmirror name</i> ' was changed to slave.

XMIRROR_CHANGE_SMASTER_ROLE_TO_MASTER

Severity	Description
informational	Xmirror ' <i>xmirror name</i> ' was changed to master.

XMIRROR_CHANGE_MASTER_ROLE_TO_SMASTER

Severity	Description
informational	Xmirror ' <i>xmirror name</i> ' was changed to smaster.

XMIRROR_STANDBY_MIRROR_REGISTERED

Severity	Description
informational	Xmirror ' <i>xmirror name</i> ' registered a standby mirror on SMASTER system

XMIRROR_COMPROMISED

Severity	Description
warning	Xmirror ' <i>xmirror name</i> ' is compromised, reason: <i>Compromise Reason</i>

XMIRROR_RESTORED

Severity	Description
informational	Xmirror ' <i>xmirror name</i> ' restored after being compromised

XMIRROR_RENAMED

Severity	Description
informational	Xmirror ' <i>Old Xmirror Name</i> ' was renamed to ' <i>xmirror name</i> '.

MAP_VOLUME

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was mapped to LUN ' <i>LUN</i> ' for <i>host_or_cluster</i> with name ' <i>host</i> '.

MAP_PROXY_VOLUME

Severity	Description
informational	IBM Hyper-Scale Mobility Volume with name ' <i>name</i> ' was mapped to LUN ' <i>LUN</i> ' for <i>host_or_cluster</i> with name ' <i>host</i> '.

UNMAP_VOLUME

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was unmapped from <i>host_or_cluster</i> with name ' <i>host</i> '.

UNMAP_PROXY_VOLUME

Severity	Description
informational	IBM Hyper-Scale Mobility Volume with name ' <i>name</i> ' was unmapped from <i>host_or_cluster</i> with name ' <i>host</i> '.

SPECIAL_TYPE_SET

Severity	Description
informational	Type of <i>host_or_cluster</i> with name ' <i>host</i> ' was set to ' <i>type</i> '.

SERVICE_HAS_FAILED

Severity	Description	Troubleshooting
variable	<i>Component ID</i> has failed.	Contact IBM Support

SERVICE_FAILED_TO_PHASEIN

Severity	Description	Troubleshooting
major	<i>Component ID</i> failed to phase-in.	Contact IBM Support

SERVICE_FAILED_TO_RESTART

Severity	Description	Troubleshooting
major	<i>Component ID</i> failed to restart.	Contact IBM Support

MODULE_FAILED

Severity	Description	Troubleshooting
critical	<i>Component ID</i> failed.	Contact IBM Support

DISK_HAS_FAILED

Severity	Description	Troubleshooting
variable	Disk <i>Component ID</i> Failed.	Please contact your Administrator.

SSD_HAS_FAILED

Severity	Description	Troubleshooting
major	SSD <i>Component ID</i> Failed.	Please contact your Administrator.

VAULT_DEVICE_HAS_FAILED

Severity	Description	Troubleshooting
minor	Vault device <i>Component ID</i> Failed.	Please contact your Administrator.

COMPONENT_TEST_OF_DISK_HAS_FAILED

Severity	Description	Troubleshooting
major	Test of <i>Component ID</i> has failed with error <i>Error</i> .	Please contact your Administrator.

COMPONENT_TEST_OF_SSD_HAS_FAILED

Severity	Description	Troubleshooting
major	Test of <i>Component ID</i> has failed with error <i>Error</i> .	Please contact your Administrator.

COMPONENT_TEST_OF_BOOT_MEDIA_HAS_FAILED

Severity	Description	Troubleshooting
major	Test of <i>Component ID</i> has failed with error <i>Error</i> .	Please contact your Administrator.

COMPONENT_TEST_OF_VAULT_DEVICE_HAS_FAILED

Severity	Description	Troubleshooting
major	Test of <i>Component ID</i> has failed with error <i>Error</i> .	Please contact your Administrator.

BOOT_MEDIA_COMPONENT_TEST_FAILED

Severity	Description	Troubleshooting
major	Test of <i>Component ID</i> has failed with error <i>Error</i> .	Please contact your Administrator.

DISK_STARTED_PHASEOUT

Severity	Description
informational	System started phasing out <i>Component ID</i> .

DISK_STARTED_PHASEIN

Severity	Description
informational	System started phasing in <i>Component ID</i> .

DISK_FINISHED_PHASEIN

Severity	Description
informational	System finished phasing in <i>Component ID</i> .

DISK_FINISHED_PHASEOUT

Severity	Description
informational	System finished phasing out <i>Component ID</i> .

DISK_RECOVERED

Severity	Description
critical	Disk <i>Component ID</i> is functioning again.

MODULE_STARTED_PHASEOUT

Severity	Description
informational	System started phasing out <i>Component ID</i> .

MODULE_FINISHED_PHASEOUT

Severity	Description
informational	System finished phasing out <i>Component ID</i> .

MODULE_STOPPED_PHASEOUT_DUE_TO_MANAGEMENT_REQUIREMENT

Severity	Description
major	System stopped phasing out <i>Component ID</i> due to management requirement.

START_WORK

Severity	Description
informational	System has entered ON state.

SYSTEM_HAS_ENTERED_MAINTENANCE_MODE

Severity	Description
warning	System has entered MAINTENANCE state [Reason]

SYSTEM_LEFT_CHARGING_STATE

Severity	Description
informational	System is sufficiently charged.

USER_SHUTDOWN

Severity	Description
major	System is shutting down due to a user request.

EMERGENCY_SHUTDOWN_NOW

Severity	Description	Troubleshooting
critical	System is shutting down in emergency shutdown mode due to: <i>Emergency Shutdown Reason</i> .	Please contact your Administrator.

SHOULD_HAVE_BEEN_EMERGENCY_SHUTDOWN

Severity	Description
critical	An emergency shutdown has been detected, but emergency shutdown is disabled for the detected reason. Shutdown reason: <i>Shutdown Reason</i> .

DATA_SERVICE_STARTED_PHASEOUT

Severity	Description
informational	System started phasing out <i>Component ID</i> .

DATA_SERVICE_STARTED_PHASEIN

Severity	Description
informational	System started phasing in <i>Component ID</i> .

DATA_SERVICE_FINISHED_PHASEIN

Severity	Description
informational	System finished phasing in <i>Component ID</i> .

DATA_SERVICE_FINISHED_PHASEOUT

Severity	Description
informational	System finished phasing out <i>Component ID</i> .

TXN_REBUILD_STARTED

Severity	Description
informational	Start rebuild process of txns.

TXN_REBUILD_ENDED

Severity	Description
informational	End rebuild process for txns.

TXN_REDIST_STARTED

Severity	Description
informational	Start redist process for txns.

TXN_REDIST_ENDED

Severity	Description
informational	End redist process for txns.

DISK_MARKED_TO_PHASEOUT

Severity	Description
informational	System started phasing out <i>Component ID</i> .

DISK_MARKED_TO_PHASEIN

Severity	Description
informational	System started phasing out <i>Component ID</i> .

CANNOT_CREATE_NEW_DATA_DISTRIBUTION

Severity	Description
informational	System cannot phaseout disks for storage medium <i>Storage Medium</i> .

CANNOT_RESIZE_FLASH_MEDIUM_POOLS

Severity	Description
informational	System failed to resize flash medium pools for TMS phaseout.

DATA_PROTECTION_STATUS_CHANGED

Severity	Description
variable	Data protection status has changed from 'old_status' to 'new_status'

VAULT_DEVICE_SECURE_ERASE_PROCESS_SUCCESSFUL

Severity	Description
informational	Vault device secure erase process successful.

VAULT_DEVICE_SECURE_ERASE_PROCESS_FAILED

Severity	Description
major	Vault device secure erase process failed [Reason]

VAULT_DEVICE_FAILED_SECURE_ERASE

Severity	Description
major	Secure erase for <i>Component ID</i> failed. [Reason].

SYSTEM_PHYSICAL_CAPACITY_CHANGED

Severity	Description
informational	System physical capacity is now <i>CapacityGB</i> .

SYSTEM_EFFECTIVE_CAPACITY_CHANGED

Severity	Description
informational	System effective capacity is now <i>CapacityGB</i> .

SYSTEM_OUT_OF_PHYSICAL_SPACE

Severity	Description
critical	System has run out of physical capacity. All volumes are now write-protected.

SYSTEM_NORMAL_OPERATION_RESUMED

Severity	Description
informational	Normal operation is resumed. Volumes have been restored to their original write-protection state.

ENCRYPT_ENABLE_STARTED

Severity	Description
informational	Starting encryption activation. This process can take several minutes to complete.

ENCRYPT_ENABLE_COMPLETED

Severity	Description
informational	Encryption is in effect.

ENCRYPT_ENABLE_NOT_COMPLETED

Severity	Description	Troubleshooting
major	Cannot complete encryption activation because <i>reason</i> . <i>Count</i> vault device(s) and <i>Count</i> flash enclosure(s) could not be enrolled.	Please contact technical support

ENCRYPT_DISABLE_STARTED

Severity	Description
informational	Starting encryption deactivation. This process can take several minutes to complete.

ENCRYPT_DISABLE_COMPLETED

Severity	Description
informational	Encryption is no longer in effect.

ENCRYPT_DISABLE_NOT_COMPLETED

Severity	Description	Troubleshooting
major	Cannot complete encryption deactivation because <i>reason</i> . <i>Count</i> vault device(s) and <i>Count</i> flash enclosure(s) could not be crypto erased.	Please contact technical support

ENCRYPT_KEYSERVER_ADDED

Severity	Description
informational	A key server named ' <i>Key Server Name</i> ' was added.

ENCRYPT_KEYSERVER_DELETED

Severity	Description
informational	Key server ' <i>Key Server Name</i> ' was deleted.

ENCRYPT_KEYSERVER_EDITED

Severity	Description
informational	Details of key server ' <i>Key Server Name</i> ' were modified.

ENCRYPT_KEYSERVER_RENAMED

Severity	Description
informational	Key server ' <i>Old Name</i> ' was renamed to ' <i>New Name</i> '.

ENCRYPT_KEYSERVER_CHECK_STATUS_STARTED

Severity	Description
informational	Start checking connectivity status of the keyserver currently defined in the system. This process can take several minutes to complete.

ENCRYPT_KEYSERVER_CHECK_STATUS_COMPLETED

Severity	Description
informational	Completed checking connectivity status of the keyserver currently defined in the system.

ENCRYPT_KEYSERVER_REKEY_COMPLETED

Severity	Description
informational	Key server ' <i>Key Server Name</i> ' rekey completed.

ENCRYPT_LOCAL_REKEY_COMPLETED

Severity	Description
informational	Local key rekey completed.

ENCRYPT_CHANGE_KEY_SCHEME_COMPLETED

Severity	Description
informational	Change key scheme from external to local key completed.

ENCRYPT_CHANGE_KEY_SCHEME_FAILED

Severity	Description
major	Change key scheme from external to local key failed because <i>failure reason</i> .

ENCRYPT_CHANGE_KEY_SCHEME_ROLLBACK_FAILED

Severity	Description
major	Cannot rollback change key scheme.

ENCRYPT_UNABLE_TO_UPDATE_KEY_DURING_DEACTIVATE_ON_KEYSERVER

Severity	Description
major	Could not update key server ' <i>Keyserver Name</i> ' regarding encryption deactivation. Please check key server status.

ENCRYPT_KEYSERVER_REKEY_FAILED

Severity	Description
major	Cannot complete rekey with key server ' <i>Key Server Name</i> '.

ENCRYPT_LOCAL_REKEY_FAILED

Severity	Description
major	Local key rekey failed because <i>failure reason</i> .

ENCRYPT_KEYSERVER_REKEY_ROLLBACK_FAILED

Severity	Description
major	Cannot rollback failed rekey with key server ' <i>Key Server Name</i> '.

ENCRYPT_LOCAL_REKEY_ROLLBACK_FAILED

Severity	Description
major	Cannot rollback failed local key rekey.

ENCRYPT_RECOVERY_KEY_ENTERED

Severity	Description
informational	Valid recovery key share was entered by user ' <i>User Name</i> '.

ENCRYPT_INVALID_RECOVERY_KEY_ENTERED

Severity	Description
major	Invalid recovery key share was entered by user ' <i>User Name</i> '.

ENCRYPT_RECOVERY_KEYS_GENERATED

Severity	Description
informational	Recovery keys created.

ENCRYPT_RECOVERY_KEY_REKEY_SUCCESS

Severity	Description
informational	Recovery key rekey was successful.

ENCRYPT_RECOVERY_KEY_REKEY_FAIL

Severity	Description
major	Recovery key rekey failed.

ENCRYPT_RECOVERY_KEY_VERIFIED

Severity	Description
informational	Recovery key verified successfully for user ' <i>User Name</i> '.

ENCRYPT_RECOVERY_KEY_VERIFY_FAILED

Severity	Description
major	Recovery key verification failed for user ' <i>User Name</i> '.

ENCRYPT_RECOVERY_KEY_ALL_SHARES_VERIFIED

Severity	Description
informational	All recovery key shares have been verified.

ENCRYPT_KR_WRITE_FAILED

Severity	Description	Troubleshooting
critical	Key repository write failed with error code: <i>rc</i> .	Please contact technical support

ENCRYPT_KR_READ_FAILED

Severity	Description	Troubleshooting
major	Key repository read failed with error code: <i>rc</i> .	Please contact technical support

ENCRYPT_UNABLE_TO_RETRIEVE_KEY_FROM_KEYSERVER

Severity	Description
major	Failed to retrieve key from key server ' <i>Keyserver Name</i> ' via <i>TEXT</i> on module <i>node id</i> . Please verify that the key server type and version are supported. If so, please check its status.

ENCRYPT_RECOVERY_KEY_RECOVER_SUCCESSFUL

Severity	Description
informational	Key recovery was successful, unlocking system.

ENCRYPTION_CERTIFICATE_FOR_XIV_IS_NOT_INSTALLED

Severity	Description	Troubleshooting
critical	XIV certificate is not installed.	Check output of <code>pki_list</code> for a certificate named XIV and contact technical support

ENCRYPT_UNABLE_TO_DELETE_MASTER_KEYSERVER

Severity	Description
informational	Deletion of master key server ' <i>Keyserver Name</i> ' is not allowed. Please define another key server as master first'.

ENCRYPTION_SKMIP_ERROR

Severity	Description	Troubleshooting
major	Module <i>Module</i> reported <i>Keyserver Name</i> returned error: <i>error code</i> - <i>TEXT</i>	Please contact the next level of support.

WIPEOUT_STARTED

Severity	Description
informational	Starting the wipeout process. This process may take several minutes to complete.

WIPEOUT_COMPLETED

Severity	Description
informational	The wipeout process finished successfully.

WIPEOUT_NOT_COMPLETED

Severity	Description	Troubleshooting
major	Cannot complete the wipeout process because <i>reason</i> . <i>Count</i> vault device(s) and <i>Count</i> flash enclosure(s) could not be crypto erased.	Contact IBM Support

DIMM_FAILED

Severity	Description	Troubleshooting
major	<i>Component ID</i> has failed. Hardware status: <i>Status</i> .	Contact IBM Support

CPU_FAILED

Severity	Description	Troubleshooting
major	<i>Component ID</i> has failed. Hardware status: <i>Status</i> .	Contact IBM Support

NIC_FAILED

Severity	Description	Troubleshooting
major	<i>Component ID</i> has failed. Hardware status: <i>Status</i> .	Contact IBM Support

MODULE_BBU_FAILED

Severity	Description	Troubleshooting
major	<i>BBU id</i> has failed. Hardware status: ' <i>Status</i> '. BBU state: ' <i>State</i> '.	Contact IBM Support

MODULE_BBU_OK

Severity	Description
informational	<i>BBU id</i> is now OK.

DIMM_WAS_REMOVED

Severity	Description	Troubleshooting
minor	The DIMM with serial number ' <i>Serial</i> ' was removed from <i>ModuleId</i> .	Was this DIMM actually removed?

PSU_CHANGE_DETECTED

Severity	Description	Troubleshooting
informational	<i>Component ID</i> has been changed from a serial number ' <i>old_serial</i> ', part number ' <i>old_part_number</i> ', to serial number ' <i>new_serial</i> ' and part number ' <i>new_part_number</i> '.	Was this PSU actually replaced?

PSU_WAS_REMOVED

Severity	Description	Troubleshooting
warning	<i>Component ID</i> with a serial number ' <i>Serial</i> ' and part number ' <i>Part Number</i> ' was removed from the system.	Was this PSU actually removed?

PSU_MISSING_FROM_INSTALL

Severity	Description	Troubleshooting
major	System was installed without <i>Component ID</i> .	This PSU was not in the system at install time.

PSU_WAS_INSTALLED

Severity	Description	Troubleshooting
informational	<i>Component ID</i> with a serial number ' <i>Serial</i> ' and part number ' <i>Part Number</i> ' was installed in the system.	Was this PSU actually installed?

NIC_CHANGE_DETECTED

Severity	Description	Troubleshooting
major	<i>Component ID</i> has been changed from a serial of <i>old_serial</i> to <i>new_serial</i> .	Was this NIC actually replaced?

MODULE_BBU_IS_TOO_OLD

Severity	Description
major	<i>BBU id</i> installed more than <i>max use time</i> months ago on <i>insert time</i> .

MODULE_BBU_SHELF_TIME_EXCEEDED

Severity	Description
major	<i>BBU id</i> installed more than <i>max shelf time</i> months after manufacturing date <i>manufacturing date</i> .

TECHNICIAN_WORK_STARTED

Severity	Description
informational	Technician work has started, expected to end at <i>End Time</i> . Comment: <i>Comment</i> .

TECHNICIAN_WORK_ENDED

Severity	Description
informational	Technician work has ended after <i>Elapsed Time</i> minutes. Comment: <i>Comment</i> .

TECHNICIAN_WORK_TIMED_OUT

Severity	Description
warning	Technician work has timed out after <i>Elapsed Time</i> minutes. Comment: <i>Comment</i> .

XIV_SUPPORT_ENABLED

Severity	Description
informational	XIV support access from <i>From</i> is enabled from <i>Start Time</i> until <i>Finish Time</i> . Comment: <i>Comment</i> .

XIV_SUPPORT_ENABLED_NO_TIME_LIMIT

Severity	Description
informational	XIV support access from <i>From</i> is enabled from <i>Start Time</i> until explicitly disabled. Comment: <i>Comment</i> .

XIV_SUPPORT_DISABLED

Severity	Description
informational	XIV support access is disabled.

XIV_SUPPORT_WINDOW_TIMEOUT

Severity	Description
informational	XIV support work window timeout is expired.

HOST_DEFINE

Severity	Description
informational	Host of type <i>host.type</i> was defined with name ' <i>host.name</i> '.

HOST_UPDATE

Severity	Description
informational	Host named ' <i>host.name</i> ' was updated.

CLUSTER_CREATE

Severity	Description
informational	Cluster was defined with name ' <i>cluster.name</i> '.

HOST_DEFINE_FAILED_TOO_MANY

Severity	Description	Troubleshooting
warning	Host with name ' <i>name</i> ' could not be defined. You are attempting to define more hosts than the system permits.	Delete Hosts to allow new ones to be defined.

CLUSTER_CREATE_FAILED_TOO_MANY

Severity	Description	Troubleshooting
warning	Cluster with name ' <i>name</i> ' could not be defined. You are attempting to define more Clusters than the system permits.	Delete Clusters to allow new ones to be defined.

HOST_RENAME

Severity	Description
informational	Host with name ' <i>old_name</i> ' was renamed ' <i>host.name</i> '.

CLUSTER_RENAME

Severity	Description
informational	Cluster with name ' <i>old_name</i> ' was renamed ' <i>cluster.name</i> '.

HOST_DELETE

Severity	Description
informational	Host with name ' <i>host.name</i> ' was deleted.

CLUSTER_DELETE

Severity	Description
informational	Cluster with name ' <i>cluster.name</i> ' was deleted.

HOST_ADD_PORT

Severity	Description
informational	Port of type <i>type</i> and ID ' <i>port_name</i> ' was added to Host with name ' <i>host.name</i> '.

CLUSTER_ADD_HOST

Severity	Description
informational	Host with name ' <i>host.name</i> ' was added to Cluster with name ' <i>cluster.name</i> '.

HOST_REMOVE_PORT

Severity	Description
informational	Port of type <i>type</i> and ID ' <i>port_name</i> ' was removed from Host with name ' <i>host.name</i> ' was deleted.

CLUSTER_REMOVE_HOST

Severity	Description
informational	Host with name ' <i>host.name</i> ' was removed from Cluster with name ' <i>cluster.name</i> '.

DESTINATION_DEFINE

Severity	Description
informational	Destination with name ' <i>name</i> ' was defined.

DESTINATION_UPDATE

Severity	Description
informational	Destination with name ' <i>name</i> ' was updated.

DESTINATION_DELETE

Severity	Description
informational	Destination with name ' <i>name</i> ' was deleted.

DESTINATION_RENAME

Severity	Description
informational	Destination with name ' <i>old name</i> ' was renamed ' <i>new name</i> '.

DESTINATION_GROUP_CREATE

Severity	Description
informational	Destination Group with name ' <i>name</i> ' was created.

DESTINATION_GROUP_UPDATE

Severity	Description
informational	Destination Group with name ' <i>name</i> ' was updated.

DESTINATION_GROUP_DELETE

Severity	Description
informational	Destination Group with name ' <i>name</i> ' was deleted.

DESTINATION_GROUP_RENAME

Severity	Description
informational	Destination Group with name ' <i>old name</i> ' was renamed ' <i>new name</i> '.

DESTINATION_GROUP_ADD_DESTINATION

Severity	Description
informational	Destination with name ' <i>destination name</i> ' was added to destination group ' <i>destgroup name</i> '.

DESTINATION_GROUP_REMOVE_DESTINATION

Severity	Description
informational	Destination with name ' <i>destination name</i> ' was removed from destination group ' <i>destgroup name</i> '.

RULE_CREATE

Severity	Description
informational	Rule with name ' <i>name</i> ' was created.

RULE_UPDATE

Severity	Description
informational	Rule with name ' <i>name</i> ' was updated.

RULE_DELETE

Severity	Description
informational	Rule with name ' <i>name</i> ' was deleted.

RULE_RENAME

Severity	Description
informational	Rule with name ' <i>old name</i> ' was renamed ' <i>new name</i> '.

SMTP_GATEWAY_DEFINE

Severity	Description
informational	SMTP gateway with name ' <i>name</i> ' was defined.

SMTP_GATEWAY_UPDATE

Severity	Description
informational	SMTP gateway with name ' <i>name</i> ' was updated.

SMTP_GATEWAY_DELETE

Severity	Description
informational	SMTP gateway with name ' <i>name</i> ' was deleted.

SMTP_GATEWAY_RENAME

Severity	Description
informational	SMTP gateway with name ' <i>old name</i> ' was renamed ' <i>new name</i> '.

SMTP_GATEWAY_PRIORITIZE

Severity	Description
informational	SMTP gateways were prioritized; the new order is <i>order</i> .

CALL_HOME_CONNECTION_OK

Severity	Description
informational	Events are sent to the Call Home server by SMTP gateway ' <i>name</i> '.

CALL_HOME_CONNECTION_PROBLEM

Severity	Description	Troubleshooting
major	Events are not sent to the Call Home server by SMTP gateway ' <i>name</i> '. Reason: <i>Event Reason</i> .	Please contact IBM support.

SMTP_GATEWAY_FAILED

Severity	Description
major	SMTP gateway with name ' <i>name</i> ' has failed. It will not be used until <i>Retry Time</i> .

SMTP_GATEWAY_VIA_NODE_FAILED

Severity	Description
warning	Sending event <i>Event Code (Event Index)</i> through <i>SMTP Gateway</i> via <i>Module ID</i> has failed; Error message: ' <i>Error Message</i> '.

SMS_GATEWAY_DEFINE

Severity	Description
informational	SMS gateway with name ' <i>name</i> ' was defined.

SMS_GATEWAY_UPDATE

Severity	Description
informational	SMS gateway with name ' <i>name</i> ' was updated.

SMS_GATEWAY_DELETE

Severity	Description
informational	SMS gateway with name ' <i>name</i> ' was deleted.

SMS_GATEWAY_RENAME

Severity	Description
informational	SMS gateway with name ' <i>old name</i> ' was renamed ' <i>new name</i> '.

SMS_GATEWAY_PRIORITIZE

Severity	Description
informational	SMS gateways were prioritized; the new order is <i>order</i> .

CONS_GROUP_CREATE

Severity	Description
informational	Consistency Group with name ' <i>cg.name</i> ' was created.

CONS_GROUP_CREATE_FAILED_TOO_MANY

Severity	Description	Troubleshooting
warning	Consistency Group with name ' <i>name</i> ' could not be created. You are attempting to add more Consistency Groups than the system permits.	Delete Consistency Groups to allow new ones to be created.

CONS_GROUP_RENAME

Severity	Description
informational	Consistency Group with name ' <i>old_name</i> ' was renamed ' <i>cg.name</i> '.

SECONDARY_CONS_GROUP_RENAME

Severity	Description
informational	Consistency Group with name ' <i>old_name</i> ' was renamed ' <i>cg.name</i> ' by primary machine.

CONS_GROUP_DELETE

Severity	Description
informational	Consistency Group with name ' <i>cg.name</i> ' was deleted.

CONS_GROUP_ADD_VOLUME

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was added to Consistency Group with name ' <i>cg.name</i> '.

SLAVE_CONS_GROUP_ADD_VOLUME

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was added to Consistency Group with name ' <i>cg.name</i> ' by its remote peer.

CONS_GROUP_REMOVE_VOLUME

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was removed from Consistency Group with name ' <i>cg.name</i> '.

SLAVE_CONS_GROUP_REMOVE_VOLUME

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was removed from Consistency Group with name ' <i>cg.name</i> ' by its remote peer.

CONS_GROUP_SNAPSHOTS_CREATE

Severity	Description
informational	Snapshot Group for Consistency Group with name ' <i>cg.name</i> ' was created with name ' <i>sg.name</i> '.

CONS_GROUP_SNAPSHOTS_CREATE_FAILED_TOO_MANY

Severity	Description	Troubleshooting
warning	Snapshot Group for Consistency Group ' <i>cg.name</i> ' could not be created. You are attempting to add more Volumes than the system permits.	Delete Volumes to allow new ones to be created.

CONS_GROUP_SNAPSHOTS_OVERWRITE

Severity	Description
informational	Snapshot Group named ' <i>sg.name</i> ' was overridden for Consistency Group with name ' <i>cg.name</i> '.

SLAVE_CONS_GROUP_SNAPSHOTS_CREATE

Severity	Description
informational	Mirrored Snapshot Group for Consistency Group with name ' <i>cg.name</i> ' was created with name ' <i>sg.name</i> '.

HA_SLAVE_CONS_GROUP_SNAPSHOTS_CREATE

Severity	Description
informational	HyperSwap Snapshot Group for Consistency Group with name ' <i>cg.name</i> ' was created with name ' <i>sg.name</i> '.

SLAVE_CONS_GROUP_SNAPSHOTS_OVERWRITE

Severity	Description
informational	Mirrored Snapshot Group named ' <i>sg.name</i> ' was overridden for Consistency Group with name ' <i>cg.name</i> '.

HA_SLAVE_CONS_GROUP_SNAPSHOTS_OVERWRITE

Severity	Description
informational	HyperSwap Snapshot Group named ' <i>sg.name</i> ' was overridden for Consistency Group with name ' <i>cg.name</i> '.

MIRROR_CONS_GROUP_SNAPSHOTS_CREATE

Severity	Description
informational	Mirrored Snapshot Group for Consistency Group with name ' <i>cg.name</i> ' was created with name ' <i>sg.name</i> '.

HA_CONS_GROUP_SNAPSHOTS_CREATE

Severity	Description
informational	HyperSwap Snapshot Group for Consistency Group with name ' <i>cg.name</i> ' was created with name ' <i>sg.name</i> '.

MIRROR_CONS_GROUP_SNAPSHOTS_OVERWRITE

Severity	Description
informational	Mirrored Snapshot Group named ' <i>sg.name</i> ' was overridden for Consistency Group with name ' <i>cg.name</i> '.

HA_CONS_GROUP_SNAPSHOTS_OVERWRITE

Severity	Description
informational	HyperSwap Snapshot Group named ' <i>sg.name</i> ' was overridden for Consistency Group with name ' <i>cg.name</i> '.

REMOTE_MIRROR_CONS_GROUP_SNAPSHOTS_NOT_CREATED_YET

Severity	Description
minor	Remote Mirrored Snapshot Group for Consistency Group with name ' <i>remote CG name</i> ' with name ' <i>cg_sync_job.remote_snapgroup</i> ' on Target ' <i>target name</i> ' were not created yet.

MIRROR_SNAPGROUP_CREATE_FAILED

Severity	Description
minor	Remote snapshot group named ' <i>snapshot group name</i> ' was not created successfully. Error code is ' <i>error</i> '

SNAPSHOT_GROUP_RESTORE

Severity	Description
informational	Volumes were restored from Snapshot Group with name ' <i>sg.name</i> '.

SNAPSHOT_GROUP_RENAME

Severity	Description
informational	Snapshot Group with name ' <i>old_sg.name</i> ' were renamed to ' <i>sg.name</i> '.

SNAPSHOT_GROUP_DUPLICATE

Severity	Description
informational	All Snapshots in Snapshot Group with name ' <i>sg.name</i> ' were duplicated. Duplicate Snapshot Group is named ' <i>sg.name</i> '.

SNAPSHOT_GROUP_FORMAT

Severity	Description
informational	All Snapshots in Snapshot Group with name ' <i>sg.name</i> ' were formatted.

SNAPSHOT_GROUP_DELETE

Severity	Description
informational	All Snapshots in Snapshot Group with name ' <i>sg.name</i> ' were deleted.

SNAPSHOT_GROUP_CHANGE_PRIORITY

Severity	Description
informational	Deletion Priority of all Snapshots in Snapshot Group with name ' <i>sg.name</i> ' were changed from ' <i>old priority</i> ' to ' <i>new priority</i> '.

SNAPSHOT_GROUP_LOCK

Severity	Description
informational	All Snapshots in Snapshot Group with name ' <i>sg.name</i> ' were locked.

SNAPSHOT_GROUP_UNLOCK

Severity	Description
informational	All Snapshots in Snapshot Group with name ' <i>sg.name</i> ' were unlocked.

SNAPSHOT_GROUP_DELETED_DUE_TO_POOL_EXHAUSTION

Severity	Description
informational	All Snapshots in Snapshot Group with name ' <i>snapshot.sg_name</i> ' have been deleted because Storage Pool with name ' <i>snapshot.pool_name</i> ' is full.

SNAPSHOT_GROUP_DISBAND

Severity	Description
informational	Snapshot Group with name ' <i>sg.name</i> ' was dismantled. All Snapshots which belonged to that Snapshot Group should be accessed directly.

CONS_GROUP_MOVE

Severity	Description
informational	Consistency Group with name ' <i>cg.name</i> ' has been moved from Storage Pool ' <i>orig_pool.name</i> ' to Pool ' <i>pool.name</i> '.

XCG_CREATE

Severity	Description
informational	Cross Consistency Group with name ' <i>xcg</i> ' was created.

XCG_DELETE

Severity	Description
informational	Cross Consistency Group with name ' <i>xcg</i> ' was deleted.

XCG_ADD_CG

Severity	Description
informational	CG with name ' <i>cg.name</i> ' was added to Cross Consistency Group with name ' <i>xcg</i> '.

XCG_REMOVE_CG

Severity	Description
informational	CG with name ' <i>cg.name</i> ' was removed from Cross Consistency Group with name ' <i>xcg</i> '.

TARGET_DEFINE

Severity	Description
informational	Target was defined named ' <i>target.name</i> '.

TARGET_DEFINE_FAILED_TOO_MANY

Severity	Description	Troubleshooting
warning	Target could not be defined. You are attempting to define more targets than the system permits.	Delete targets to allow new ones to be defined.

TARGET_RENAME

Severity	Description
informational	Target named ' <i>old_name</i> ' was renamed ' <i>target.name</i> '.

TARGET_DELETE

Severity	Description
informational	Target named ' <i>target.name</i> ' was deleted.

TARGET_ALLOW_ACCESS

Severity	Description
informational	Target ' <i>target.name</i> ' is allowed to access this machine.

TARGET_PORT_ADD

Severity	Description
informational	Port ' <i>port_name</i> ' was added to target named ' <i>target.name</i> '.

TARGET_PORT_REMOVE

Severity	Description
informational	Port ' <i>port_name</i> ' was removed from target named ' <i>target.name</i> '.

TARGET_PORT_ACTIVATE

Severity	Description
informational	Port ' <i>port_name</i> ' in target named ' <i>target.name</i> ' was activated.

TARGET_PORT_DEACTIVATE

Severity	Description
informational	Port ' <i>port_name</i> ' was deactivated in target named ' <i>target.name</i> '.

TARGET_CONNECTIVITY_CREATE

Severity	Description
informational	Port ' <i>Connection Remote Port Address</i> ' of target named ' <i>Connection Target Name</i> ' is connected to the system through <i>Local FC Port</i> .

TARGET_ISCSI_CONNECTIVITY_CREATE

Severity	Description
informational	Port ' <i>Connection Remote Port Address</i> ' of target named ' <i>Connection Target Name</i> ' is connected to the system through ip interface ' <i>Local IP interface</i> '.

TARGET_CONNECTIVITY_CREATE_FAILED_TOO_MANY

Severity	Description	Troubleshooting
warning	Port could not be connected to the system. You are attempting to define more connections than the system permits.	Delete Connections to allow new ones to be created.

TARGET_CONNECTIVITY_DELETE

Severity	Description
informational	Port ' <i>Connection Remote Port Address</i> ' of target named ' <i>Connection Target Name</i> ' was disconnected from <i>Local FC Port</i> .

TARGET_ISCSI_CONNECTIVITY_DELETE

Severity	Description
informational	Port ' <i>Connection Remote Port Address</i> ' of target named ' <i>Connection Target Name</i> ' was disconnected from ip interface ' <i>Local IP interface</i> '.

TARGET_CONNECTIVITY_ACTIVATE

Severity	Description
informational	Connectivity between Port ' <i>Connection Remote Port Address</i> ' of target named ' <i>Connection Target Name</i> ' and <i>Local FC Port</i> was activated.

TARGET_ISCSI_CONNECTIVITY_ACTIVATE

Severity	Description
informational	Connectivity between Port ' <i>Connection Remote Port Address</i> ' of target named ' <i>Connection Target Name</i> ' and ip interface ' <i>Local IP interface</i> ' was activated.

TARGET_CONNECTIVITY_DEACTIVATE

Severity	Description
informational	Connectivity between Port ' <i>Connection Remote Port Address</i> ' of target named ' <i>Connection Target Name</i> ' and <i>Local FC Port</i> was deactivated.

TARGET_ISCSI_CONNECTIVITY_DEACTIVATE

Severity	Description
informational	Connectivity between Port ' <i>Connection Remote Port Address</i> ' of target named ' <i>Connection Target Name</i> ' and ip interface ' <i>Local IP interface</i> ' was deactivated.

TARGET_CONNECTIVITY_CONFLICT_DETECTED

Severity	Description
major	Connectivity between Port ' <i>Connection Remote Port Address</i> ' of target named ' <i>Connection Target Name</i> ' and FC port ' <i>Local IP interface</i> ' will be deleted due to a connectivity conflict.

TARGET_ISCSI_CONNECTIVITY_CONFLICT_DETECTED

Severity	Description
major	Connectivity between Port ' <i>Connection Remote Port Address</i> ' of target named ' <i>Connection Target Name</i> ' and IP interface ' <i>Local IP interface</i> ' will be deleted due to a connectivity conflict.

TARGET_CONNECTION_ESTABLISHED

Severity	Description
informational	Target named ' <i>target.name</i> ' is accessible through remote service <i>module_id</i> .

TARGET_CONNECTION_DISCONNECTED

Severity	Description
minor	Target named ' <i>target.name</i> ' is no longer accessible through remote service <i>module_id</i> .

TARGET_DISCONNECTED

Severity	Description
major	Target named ' <i>target.name</i> ' is no longer accessible through any gateway module.

TARGET_CLOCK_SKEW_ABOVE_LIMIT

Severity	Description
warning	Target ' <i>target.name</i> ' has clock skew above the allowed limit relative to local machine.

TARGET_CLOCK_SKEW_RESOLVED

Severity	Description
informational	Target named ' <i>target.name</i> ' clock skew has been resolved.

TARGET_LINK_DOWN_BEYOND_THRESHOLD

Severity	Description
major	Target named ' <i>target.name</i> ' is not accessible for a long time.

OLVM_DELETE_ALL_REFERENCES_TO_SOURCE

Severity	Description
major	Target named ' <i>target.name</i> ' was released from all IBM Hyper-Scale Mobility relationships.

TARGET_SYNC_RATE_CHANGED

Severity	Description
informational	Target ' <i>target.name</i> ' sync rate changed. max_initialization_rate: ' <i>target.max_initialization_rate</i> ', max_resync_rate: ' <i>target.max_resync_rate</i> ', max_syncjob_rate: ' <i>target.max_syncjob_rate</i> '.

TARGET_ADD_QUORUM_WITNESS

Severity	Description
Informational	Target ' <i>target_name</i> ' added quorum witness ' <i>quorum_witness_name</i> '.

TARGET_REMOVE_QUORUM_WITNESS

Severity	Description
Informational	Target ' <i>target_name</i> ' removed quorum witness ' <i>quorum_witness_name</i> '.

TARGET_SYSTEM_DETAILS_UPDATED

Severity	Description
Informational	Target named ' <i>target_name</i> ' has updated details: old system id ' <i>old_system_id</i> ', old machine serial ' <i>old_machine_serial</i> ', new system id ' <i>new_system_id</i> ', new machine serial ' <i>new_machine_serial</i> '.

TARGET_HANDSHAKE_COMPLETED

Severity	Description
Informational	Target named ' <i>target_name</i> ' has completed handshake.

TARGET_HANDSHAKE_FAILED

Severity	Description
Major	Target named ' <i>target_name</i> ' handshake failed with reason ' <i>Failure Reason</i> '

TARGET_HANDSHAKE_REINITIATED

Severity	Description
Informational	Target named ' <i>target_name</i> ' reinitiated handshake process.

SNAPSHOT_CREATE

Severity	Description
informational	Snapshot named ' <i>snapshot.name</i> ' was created for volume named ' <i>volume.name</i> '.

SNAPSHOT_DELETE

Severity	Description
informational	Snapshot with name ' <i>snapshot.name</i> ' was deleted.

SNAPSHOT_OVERWRITE

Severity	Description
informational	Snapshot named ' <i>snapshot.name</i> ' was overridden for volume named ' <i>volume.name</i> '.

SNAPSHOT_FORMAT

Severity	Description
informational	Snapshot named ' <i>snapshot.name</i> ' was formatted.

SNAPSHOT_CREATE_FAILED_TOO_MANY

Severity	Description	Troubleshooting
warning	Snapshot for volume named ' <i>volume.name</i> ' could not be created. You are attempting to add more volumes than the system permits.	Delete volumes to allow new ones to be created.

SNAPSHOT_DUPLICATE

Severity	Description
informational	Snapshot named ' <i>snapshot.name</i> ' was created as duplicate of Snapshot named ' <i>original_snapshot.name</i> '.

SNAPSHOT_DUPLICATE_FAILED_TOO_MANY

Severity	Description	Troubleshooting
warning	Snapshot named ' <i>snapshot.name</i> ' could not be duplicated. You are attempting to add more volumes than the system permits.	Delete volumes to allow new ones to be created.

SNAPSHOT_RESTORE

Severity	Description
informational	Volume named ' <i>volume.name</i> ' was restored from Snapshot named ' <i>snapshot.name</i> '.

SNAPSHOT_CHANGE_PRIORITY

Severity	Description
informational	Snapshot Delete Priority of Snapshot named ' <i>snapshot.name</i> ' was changed from ' <i>old_priority</i> ' to ' <i>snapshot.delete_priority</i> '.

SNAPSHOT_DELETED_DUE_TO_POOL_EXHAUSTION

Severity	Description
warning	Snapshot named ' <i>snap.name</i> ' has been deleted because Storage Pool named ' <i>snap.pool_name</i> ' is full.

MIRROR_SNAPSHOT_CREATE

Severity	Description
informational	Mirrored Snapshot named ' <i>snapshot.name</i> ' was created for volume named ' <i>volume.name</i> '.

MIRROR_SNAPSHOT_CREATE_FAILED

Severity	Description
minor	Remote snapshot named ' <i>snapshot name</i> ' was not created successfully. Error code is ' <i>error</i> '

MIRROR_SNAPSHOT_OVERWRITE

Severity	Description
informational	Mirrored Snapshot named ' <i>snapshot.name</i> ' was overridden for volume named ' <i>volume.name</i> '.

MIRROR_SLAVE_SNAPSHOT_CREATE

Severity	Description
informational	Mirrored Snapshot named ' <i>snapshot.name</i> ' was created for volume named ' <i>volume.name</i> '.

MIRROR_SLAVE_SNAPSHOT_OVERWRITE

Severity	Description
informational	Mirrored Snapshot named ' <i>snapshot.name</i> ' was overridden for volume named ' <i>volume.name</i> '.

MEDIUM_ERROR_IN_DATA_MIGRATION

Severity	Description	Troubleshooting
critical	Medium error in data migration into volume ' <i>Volume Name</i> ' at LBA <i>LBA</i> for <i>Length</i> blocks.	Remote machine indicated Medium Error when read.

TRANSACTION_NODE_DOES_NOT_USE_OPTIMAL_SRP_PATH

Severity	Description	Troubleshooting
warning	Data service ' <i>service</i> ' does not use the optimal path to ' <i>enclosure</i> '.	Contact IBM Support

TRANSACTION_NODE_USES_OPTIMAL_SRP_PATH

Severity	Description	Troubleshooting
informational	Data service ' <i>service</i> ' uses the optimal path to ' <i>enclosure</i> '.	Contact IBM Support

USER_DEFINED

Severity	Description
informational	A user with name ' <i>Name</i> ' and category <i>Category</i> was defined.

USER_DELETED

Severity	Description
informational	A user with name ' <i>Name</i> ' and category <i>Category</i> was deleted.

USER_RENAMED

Severity	Description
informational	User with name ' <i>Old Name</i> ' was renamed ' <i>New Name</i> '.

USER_UPDATED

Severity	Description
informational	User with name ' <i>Name</i> ' was updated.

USER_ADDED_TO_USER_GROUP

Severity	Description
informational	User ' <i>User Name</i> ' was added to user group ' <i>User Group Name</i> '.

USER_REMOVED_FROM_USER_GROUP

Severity	Description
informational	User ' <i>User Name</i> ' was removed from user group ' <i>User Group Name</i> '.

USER_GROUP_CREATED

Severity	Description
informational	A user group with name ' <i>Name</i> ' was created.

USER_GROUP_DELETED

Severity	Description
informational	A user group with name ' <i>Name</i> ' was deleted.

USER_GROUP_RENAMED

Severity	Description
informational	User group with name ' <i>Old Name</i> ' was renamed ' <i>New Name</i> '.

LDAP_AUTHENTICATION_ACTIVATED

Severity	Description
informational	LDAP authentication activated.

LDAP_AUTHENTICATION_DEACTIVATED

Severity	Description
warning	LDAP authentication deactivated.

LDAP_CONFIGURATION_CHANGED

Severity	Description
warning	LDAP configuration has changed.

LDAP_CONFIGURATION_RESET

Severity	Description
warning	LDAP configuration has reset.

USER_LOGIN_HAS_SUCCEEDED

Severity	Description
informational	User ' <i>User Name</i> ' from IP ' <i>Client Address</i> ' successfully logged into the system.

USER_LOGIN_HAS_FAILED

Severity	Description
warning	User ' <i>User Name</i> ' from IP ' <i>Client Address</i> ' failed logging into the system.

USER_HAS_FAILED_TO_RUN_COMMAND

Severity	Description
warning	User ' <i>User Name</i> ' from IP ' <i>Client Address</i> ' failed authentication when trying to run command ' <i>Command Line</i> '.

LDAP_SERVER_INACCESSIBLE

Severity	Description
minor	LDAP server <i>FQDN</i> is inaccessible.

LDAP_SERVER_ACCESSIBLE

Severity	Description
informational	LDAP server <i>FQDN</i> is now accessible.

LDAP_SSL_CERTIFICATE_ABOUT_TO_EXPIRE

Severity	Description
variable	SSL Certificate of LDAP server ' <i>Server FQDN</i> ' is about to expire on <i>Expiration Date</i> (Counter notification).

LDAP_SERVER_WAS_ADDED

Severity	Description
informational	LDAP server ' <i>Server FQDN</i> ' was added to the system.

LDAP_SERVER_WAS_REMOVED

Severity	Description
informational	LDAP server ' <i>Server FQDN</i> ' was removed from the system.

DESIGNATED_MSM_USER

Severity	Description
informational	<i>Description</i>

DOMAIN_POLICY_SET

Severity	Description
informational	Domain policy for <i>Parameter Name</i> set to ' <i>Parameter Value</i> '

USER_ADDED_TO_DOMAIN

Severity	Description
informational	User <i>User Name</i> was added to domain <i>Domain Name (Exclusive)</i> .

USER_REMOVED_FROM_DOMAIN

Severity	Description
informational	User <i>User Name</i> was removed from domain <i>Domain Name</i> .

APPADMIN_CAPABILITIES_SET

Severity	Description
informational	Application admin capabilities have been set to <i>Capabilities</i>

ACCESS_TO_HOST_GRANTED_TO_USER_GROUP

Severity	Description
informational	User group ' <i>User Group Name</i> ' was granted access to host ' <i>Host Name</i> '.

ACCESS_OF_USER_GROUP_TO_HOST_REMOVED

Severity	Description
informational	Access of User group ' <i>User Group Name</i> ' to host ' <i>Host Name</i> ' was removed.

ACCESS_TO_CLUSTER_GRANTED_TO_USER_GROUP

Severity	Description
informational	User group ' <i>User Group Name</i> ' was granted access to cluster ' <i>Cluster Name</i> '.

ACCESS_OF_USER_GROUP_TO_CLUSTER_REMOVED

Severity	Description
informational	Access of User group ' <i>User Group Name</i> ' to cluster ' <i>Cluster Name</i> ' was removed.

COMPONENT_TEST_HAS_FAILED

Severity	Description	Troubleshooting
variable	Test of <i>Component ID</i> has failed. Failure reason: <i>Failure Reason</i> .	Contact IBM Support

COMPONENT_TEST_SUCCEEDED

Severity	Description	Troubleshooting
informational	Test of <i>Component ID</i> succeeded.	Contact IBM Support

MODULE_COMPONENT_TEST_STARTED

Severity	Description
informational	Test of <i>Component ID</i> started.

DISK_COMPONENT_TEST_STARTED

Severity	Description
informational	Test of <i>Component ID</i> started.

IB_SWITCH_COMPONENT_TEST_STARTED

Severity	Description
informational	Test of <i>Component ID</i> started.

SSD_COMPONENT_TEST_STARTED

Severity	Description
informational	Test of <i>Component ID</i> started.

VAULT_DEVICE_COMPONENT_TEST_STARTED

Severity	Description
informational	Test of <i>Component ID</i> started.

BOOT_MEDIA_COMPONENT_TEST_STARTED

Severity	Description
informational	Test of <i>Component ID</i> started.

FLASH_COMPONENT_TEST_STARTED

Severity	Description
informational	Test of <i>Component ID</i> started.

BOOT_MEDIA_FAILED

Severity	Description	Troubleshooting
major	<i>Component ID</i> has failed. Hardware status: <i>Status</i> .	Contact IBM Support

MODULE_BBU_TEST_STARTED

Severity	Description
informational	Test of <i>Component ID</i> started.

MODULE_BBU_TEST_WILL_CONTINUE

Severity	Description
warning	Test of <i>Component ID</i> will continue. After waiting <i>Minutes</i> minutes, capacity is still <i>Capacity</i> %.

COMPONENT_WAS_PHASED_OUT

Severity	Description
informational	<i>Component ID</i> was phased-out.

COMPONENT_WAS_FAILED

Severity	Description
variable	Component <i>Component ID</i> was marked as failed.

COMPONENT_FAILURE_WAS_CANCELED

Severity	Description
informational	Component <i>Component ID</i> failure status was reset.

COMPONENT_WAS_PHASED_IN

Severity	Description
informational	<i>Component ID</i> was phased-in.

COMPONENT_WAS_EQIPPED

Severity	Description
informational	<i>Component ID</i> was equipped.

INTERFACE_SERVICES_ACTIVATED

Severity	Description
informational	Interface services of <i>Module ID</i> were activated.

COMPONENT_FIRMWARE_UPGRADE_ABORTING

Severity	Description
warning	Aborting <i>Upgrade type</i> upgrade of <i>Firmware type</i> firmware, version <i>Label</i> , on <i>Scope</i> . Abort reason: <i>Reason</i> . Waiting for current upgrade item to complete.

COMPONENT_FIRMWARE_UPGRADE_ABORTED

Severity	Description
warning	Aborted <i>Upgrade type</i> upgrade of <i>Firmware type</i> firmware, version <i>Label</i> , on <i>Scope</i> . Abort reason: <i>Reason</i> . Progress <i>Attempted/Total</i> , <i>Successes</i> succeeded, <i>Failures</i> failed, <i>No-Ops</i> no-ops.

COMPONENT_FIRMWARE_UPGRADE_DONE

Severity	Description
informational	Finished <i>Upgrade type</i> upgrade of <i>Firmware type</i> firmware, version <i>Label</i> , on <i>Scope</i> . <i>Successes</i> succeeded, <i>Failures</i> failed, <i>No-Ops</i> no-ops.

COMPONENT_FIRMWARE_UPGRADE_STARTED

Severity	Description
informational	Starting <i>Upgrade type</i> upgrade of <i>Firmware type</i> firmware, version <i>Label</i> , on <i>Scope</i> .

COMPONENT_FIRMWARE_CANNOT_PHASEOUT_COMPONENT

Severity	Description
minor	Cannot phase out <i>Component ID</i> : <i>Error</i> . Firmware upgrade result was: <i>Upgrade result</i> .

COMPONENT_FIRMWARE_CANNOT_FAIL_COMPONENT

Severity	Description
minor	Cannot fail <i>Component ID</i> : <i>Error</i> . Firmware upgrade result was: <i>Upgrade result</i> .

MIRRORING_CONNECTIVITY_TO_NON_XIV_TARGET

Severity	Description	Troubleshooting
warning	Gateway Node # <i>Node ID</i> : connection to <i>target name:target's connection index</i> mirroring connection was established, but being ignored because the remote end is not an XIV target or is not properly configured	Please make sure the target's designation is correct, that the connection's parameters identify the intended system and that the intended system has a <i>target_port</i> defined for this system.

DM_CONNECTIVITY_TO_XIV_TARGET

Severity	Description	Troubleshooting
warning	Gateway Node # <i>Node ID</i> : connection to <i>target name:target's connection index</i> DM connection was established, but being ignored because the remote end is an XIV target configured for mirroring, rather than a host	Please make sure the target's designation is correct, that the connection's parameters identify the intended system and that the intended system has a host defined for this system (and not a <i>target_port</i>).

EMERGENCY_ROOT_ACCESS

Severity	Description
warning	Emergency login to 'root' account on module ' <i>Component ID</i> ' from ' <i>IP Address</i> ' using key number ' <i>Authorized Key Number</i> '.

EMERGENCY_CONSOLE_ACCESS

Severity	Description
warning	Emergency login to ' <i>Unix Account Name</i> ' account on module ' <i>Component ID</i> ' from tty ' <i>TTY Device</i> '.

CR_BYPASS_ACCESS

Severity	Description
warning	<i>Command that bypasses CR mechanism</i> access to ' <i>Unix Account Name</i> ' account on module ' <i>Component ID</i> ' from ' <i>IP Address</i> '.

CR_KEY_SETUP_OK

Severity	Description
informational	Challenge-response key was successfully set on all modules in the system.

CR_KEY_UPGRADE_NOT_DONE

Severity	Description
warning	Challenge-response key was not upgraded on the system since a valid key has been previously set.

CR_KEY_SETUP_FAILED

Severity	Description
major	Failed to set challenge-response key on module ' <i>Component ID</i> '.

SSH_REVOKE_KEY_OK

Severity	Description
informational	Authorized SSH key ending with ' <i>Tail of Authorized SSH key</i> ' was successfully revoked for user ' <i>Unix Account Name</i> ' on all modules in the system.

SSH_REVOKE_KEY_FAILED

Severity	Description
major	Failed to revoke authorized SSH key ending with ' <i>Tail of Authorized SSH key</i> ' for user ' <i>Unix Account Name</i> ' on module ' <i>Component ID</i> '.

IB_SWITCH_PHASEOUT_STARTED

Severity	Description
informational	System started phasing out <i>Component ID</i> .

IB_SWITCH_PHASEIN_STARTED

Severity	Description
informational	System started phasing in <i>Component ID</i> .

IB_SWITCH_PHASEIN_FAILED

Severity	Description
warning	<i>Component ID</i> has failed to phase-in.

IB_SWITCH_CONFIG_FAILED

Severity	Description	Troubleshooting
warning	<i>Component ID</i> could not be configured	Contact IBM Support

IB_SWITCH_FIRMWARE_INCOMPATIBLE

Severity	Description	Troubleshooting
warning	The firmware version of <i>Component ID</i> is ' <i>New Version</i> '. It should be ' <i>Old Version</i> '.	None

IB_SWITCH_CPLD_INCOMPATIBLE

Severity	Description	Troubleshooting
warning	The CPLD version of <i>Component ID</i> is invalid.	None

IB_SWITCH_FIRMWARE_UPDATE_IN_PROGRESS

Severity	Description	Troubleshooting
informational	Firmware version of <i>Component ID</i> is ' <i>Old Version</i> '. It should be ' <i>New Version</i> '. Firmware will be updated. It may take a while.	Wait for IB switch to complete initialization.

IB_SWITCH_FIRMWARE_UPDATED

Severity	Description	Troubleshooting
informational	The firmware version of <i>Component ID</i> was updated to ' <i>New Version</i> '.	None.

IB_SWITCH_LOG_COLLECT_OK

Severity	Description
informational	Log collection for IB switch ' <i>switch_id</i> ' completed successfully. Log can be found in module ' <i>log_module</i> ' in the following directory: ' <i>log_location</i> '.

IB_SWITCH_LOG_COLLECT_FAILED

Severity	Description
warning	Log collection for IB switch ' <i>switch_id</i> ' failed. Failure reason: ' <i>failure_reason</i> '.

IB_SWITCH_MGMT_LINK_AVAILABLE

Severity	Description
informational	Management link <i>Type of Component ID</i> is available.

IB_SWITCH_MGMT_LINK_UNAVAIL

Severity	Description
warning	Management link <i>Type of Component ID</i> is unavailable.

IB_SWITCH_MGMT_LINK_MISWIRED

Severity	Description	Troubleshooting
warning	Management link <i>Type of Component ID</i> is connected to <i>Router</i> instead of <i>Expected Router</i> .	Check wiring

IB_SWITCH_MGMT_AVAILABLE

Severity	Description
informational	Management of <i>Component ID</i> is available.

IB_SWITCH_MGMT_UNAVAIL

Severity	Description
major	Management of <i>Component ID</i> is unavailable.

IB_SWITCH_PSU_OK

Severity	Description
informational	<i>Component ID</i> has returned to normal state.

IB_SWITCH_PSU_MONITOR_FAILED

Severity	Description
minor	<i>Component ID</i> sensor cannot be read.

IB_SWITCH_PSU_IS_MISSING

Severity	Description
minor	<i>Component ID</i> is not present.

IB_SWITCH_PSU_FAIL

Severity	Description
major	<i>Component ID</i> failed.

IB_SWITCH_BBU_OK

Severity	Description
informational	<i>Component ID</i> has returned to normal state.

IB_SWITCH_BBU_MONITOR_FAILED

Severity	Description
minor	<i>Component ID</i> sensor cannot be read.

IB_SWITCH_BBU_IS_MISSING

Severity	Description
minor	<i>Component ID</i> is not present.

IB_SWITCH_BBU_FAIL

Severity	Description
major	<i>Component ID</i> failed.

IB_SWITCH_FAN_OK

Severity	Description
informational	<i>Component ID</i> has returned to normal state.

IB_SWITCH_FAN_MONITOR_FAILED

Severity	Description
minor	<i>Component ID</i> sensor cannot be read.

IB_SWITCH_FAN_IS_MISSING

Severity	Description
minor	<i>Component ID</i> is not present.

IB_SWITCH_FAN_FAIL

Severity	Description
major	<i>Component ID</i> failed.

IB_SWITCH_PSU_FAN_OK

Severity	Description
informational	<i>Component ID</i> has returned to normal state.

IB_SWITCH_PSU_FAN_MONITOR_FAILED

Severity	Description
minor	<i>Component ID</i> sensor cannot be read.

IB_SWITCH_PSU_FAN_IS_MISSING

Severity	Description
minor	<i>Component ID</i> is not present.

IB_SWITCH_PSU_FAN_FAIL

Severity	Description
major	<i>Component ID</i> failed.

IB_SWITCH_VOLTAGE_MONITOR_FAILED

Severity	Description
minor	<i>Component ID</i> voltage sensor <i>Sensor Type</i> cannot be read.

IB_SWITCH_VOLTAGE_CHANGE

Severity	Description
informational	<i>Component ID</i> voltage sensor <i>Sensor Type</i> changed from <i>Old Status</i> to <i>Status</i> .

IB_SWITCH_PSU_VOLTAGE_MONITOR_FAILED

Severity	Description
minor	<i>Component ID voltage sensor cannot be read.</i>

IB_SWITCH_PSU_VOLTAGE_CHANGE

Severity	Description
informational	<i>Component ID voltage sensor changed from Old Status to Status.</i>

IB_SWITCH_BBU_VOLTAGE_MONITOR_FAILED

Severity	Description
minor	<i>Component ID voltage sensor cannot be read.</i>

IB_SWITCH_BBU_VOLTAGE_CHANGE

Severity	Description
informational	<i>Component ID voltage sensor changed from Old Status to Status.</i>

IB_SWITCH_TEMPERATURE_MONITOR_FAILED

Severity	Description
minor	<i>Component ID sensor Sensor Type temperature cannot be read.</i>

IB_SWITCH_TEMPERATURE_OK

Severity	Description
informational	<i>Component ID sensor Sensor Type temperature has returned to normal state.</i>

IB_SWITCH_TEMPERATURE_HIGH

Severity	Description
minor	<i>Component ID sensor Sensor Type temperature is high.</i>

IB_SWITCH_TEMPERATURE_CRITICAL

Severity	Description
major	<i>Component ID sensor Sensor Type temperature is critical.</i>

IB_SWITCH_PSU_TEMPERATURE_MONITOR_FAILED

Severity	Description
minor	<i>Component ID temperature cannot be read.</i>

IB_SWITCH_PSU_TEMPERATURE_OK

Severity	Description
informational	<i>Component ID</i> temperature has returned to normal state.

IB_SWITCH_PSU_TEMPERATURE_HIGH

Severity	Description
minor	<i>Component ID</i> temperature is high.

IB_SWITCH_PSU_TEMPERATURE_CRITICAL

Severity	Description
major	<i>Component ID</i> temperature is critical.

IB_SWITCH_BBU_TEMPERATURE_MONITOR_FAILED

Severity	Description
minor	<i>Component ID</i> temperature cannot be read.

IB_SWITCH_BBU_TEMPERATURE_OK

Severity	Description
informational	<i>Component ID</i> temperature has returned to normal state.

IB_SWITCH_BBU_TEMPERATURE_HIGH

Severity	Description
minor	<i>Component ID</i> temperature is high.

IB_SWITCH_BBU_TEMPERATURE_CRITICAL

Severity	Description
major	<i>Component ID</i> temperature is critical.

IB_PORT_MOVED

Severity	Description
informational	Infiniband module port ' <i>module_port</i> ' moved from ' <i>from_port</i> ' to ' <i>to_port</i> '.

SYSTEM_TEMPERATURE_IS_ABOVE_NORMAL

Severity	Description	Troubleshooting
warning	System temperature is <i>System TemperatureC</i> , which is above the normal temperature.	Cool the system down.

SYSTEM_TEMPERATURE_IS_HIGH

Severity	Description	Troubleshooting
minor	System temperature is <i>System TemperatureC</i> , which is high.	Cool the system down.

SYSTEM_TEMPERATURE_IS_CRITICALLY_HIGH

Severity	Description	Troubleshooting
critical	System temperature is <i>System TemperatureC</i> , which exceeds operational level. Please initiate shutdown sequence. Without further action, the system will automatically shut itself down if it reaches <i>Shutdown ThresholdC</i> .	Cool the system down immediately or shut down the system using 'shutdown -y' and contact IBM support.

SYSTEM_TEMPERATURE_IS_CRITICALLY_HIGH_SHUTTING_DOWN

Severity	Description	Troubleshooting
critical	System temperature is <i>System TemperatureC</i> , which is critically high. Shutting down the system.	Shut down the system using 'shutdown -y' and contact IBM support.

SYSTEM_TEMPERATURE_IS_TOO_HIGH

Severity	Description	Troubleshooting
major	System temperature is <i>System TemperatureC</i> . It approaches the maximal allowable value.	Cool the system down and contact IBM support.

SYSTEM_TEMPERATURE_IS_TOO_LOW

Severity	Description	Troubleshooting
major	System temperature is <i>System TemperatureC</i> , which is lower than the minimal allowable value.	Contact IBM Support

SYSTEM_TEMPERATURE_IS_OK_NOW

Severity	Description
informational	System temperature is <i>System TemperatureC</i> , which is within allowed limits.

SYSTEM_AVERAGE_POWER_PREPARATION_STARTED

Severity	Description
informational	System average power consumption preparation has started, when it's over the up-to-date value will be available.

SYSTEM_AVERAGE_POWER_PREPARATION_OVER

Severity	Description
informational	System average power consumption preparation is over, you can now read the up-to-date value.

SYSTEM_AVERAGE_POWER_PREPARATION_FAILED

Severity	Description
warning	System average power consumption preparation has failed, try again later.

ENCRYPT_ENABLE_DRIVE_FAILED

Severity	Description	Troubleshooting
major	Failed to enable encryption for <i>Component ID</i> . Error code: <i>Failure Reason</i> .	Contact IBM Support

ENCRYPT_ENABLE_VAULT_DEVICE_FAILED

Severity	Description	Troubleshooting
major	Failed to enable encryption for <i>Component ID</i> . Error code: <i>Failure Reason</i> .	Contact IBM Support

VAULT_DEVICE_ENCRYPTING_ENABLE_FAILED

Severity	Description	Troubleshooting
major	Failed to enable encryption for <i>Component ID</i> . Error code: <i>Failure Reason</i> .	Contact IBM Support

VAULT_DEVICE_SECURE_ERASE_FAILED

Severity	Description	Troubleshooting
major	Failed to secure erase <i>Component ID</i> . Error code: <i>Failure Reason</i> .	Contact IBM Support

VAULT_DEVICE_SECURE_ERASE_SUCCESSFUL

Severity	Description	Troubleshooting
informational	Secure erase was successful for <i>Component ID</i> .	Contact IBM Support

VAULT_DEVICE_SECURE_ERASE_NOT_DONE

Severity	Description	Troubleshooting
informational	Secure erase was not done for <i>Component ID</i> as it is unsecured.	Contact IBM Support

MODULE_BBU_OVERHEATING

Severity	Description	Troubleshooting
major	<i>bbu</i> reached a temperature of <i>tempC</i> , above <i>critical_setC</i> . BBU will be disconnected until it cools down below <i>critical_releaseC</i> .	Contact IBM Support

MODULE_BBU_IS_DISCHARGING

Severity	Description
informational	<i>BBU id</i> changed state from ' <i>old_state</i> ' to ' <i>new state</i> '.

MODULE_BBU_STOPPED_DISCHARGING

Severity	Description
informational	<i>BBU id</i> changed state from ' <i>old_state</i> ' to ' <i>new state</i> '.

MODULE_BBU_CHARGING_WAS_EXPLICITLY_ENABLED

Severity	Description
minor	<i>BBU id</i> was not charging, it had to be reset explicitly.

MODULE_BBU_NOT_CHARGING_AFTER_RESET

Severity	Description
major	<i>BBU id</i> is still not charging after <i>Reset Attempts</i> reset attempts.

MODULE_BBU_NOT_CHARGED_AFTER_RESET

Severity	Description
major	<i>BBU id</i> was reset and it is charging, but after <i>Minutes</i> minutes it is still only <i>Percent Charged%</i> charged, which is not enough.

MODULE_BBU_STILL_NOT_SUFFICIENTLY_CHARGED

Severity	Description
major	<i>BBU id</i> is charging, but after <i>Minutes</i> minutes it is still only <i>Percent Charged%</i> charged, which is not enough.

MODULE_BBU_DISCHARGING_WAS_EXPLICITLY_ENABLED

Severity	Description
minor	<i>BBU id</i> was in discharge disabled mode, it had to be enabled explicitly.

MODULE_BBU_IS_CHARGING

Severity	Description
informational	BBU id changed state from 'old_state' to 'new state'.

MODULE_BBU_IS_FULL

Severity	Description
informational	BBU id changed state from 'old_state' to 'new state'.

MODULE_BBU_DRIVER_NOT_LOADED

Severity	Description	Troubleshooting
major	BBU driver is not loaded in module <i>Component</i> . modprobe ruby	Contact IBM Support

MODULE_BBU_CONTROLLER_NOT_PRESENT

Severity	Description	Troubleshooting
major	BBU controller board not detected in module <i>Component</i> .	Contact IBM Support

MODULE_IS_MISSING_EPOW_CABLE

Severity	Description	Troubleshooting
major	The EPOW cable in the BBU controller board on module <i>Component</i> is not detected.	Contact IBM Support

MODULE_EPOW_CABLE_OK_NOW

Severity	Description
informational	The EPOW cable in the BBU controller board on module <i>Component</i> is now OK.

MODULE_IS_MISSING_POWER_SENSE_CABLE

Severity	Description	Troubleshooting
major	The power sense cable in the BBU controller board on module <i>Component</i> is not detected.	Contact IBM Support

MODULE_POWER_SENSE_CABLE_OK_NOW

Severity	Description
informational	The power sense cable in the BBU controller board on module <i>Component</i> is now OK.

MODULE_BBU_CALIBRATION_STARTED

Severity	Description
informational	<i>BBU id</i> started calibration.

MODULE_BBU_CALIBRATION_ENDED

Severity	Description
informational	<i>BBU id</i> ended calibration with status ' <i>result</i> '.

MODULE_BBU_TEMPERATURE_TOO_HIGH_FOR_CALIBRATION

Severity	Description	Troubleshooting
major	<i>BBU id</i> temperature is <i>Temperature.Temperature TenthsC</i> which is too high. Calibration is stopped.	Contact IBM Support

MODULE_BBU_TEST_IN_CHARGING_MODE

Severity	Description
informational	Test of <i>Component ID</i> is pending and will resume once it gets to a capacity of <i>Target Capacity%</i> . The current capacity is <i>Current Capacity%</i> .

SDR_PSU_STATUS_OK

Severity	Description
informational	<i>Psu</i> (location <i>Location</i>) is now OK. Changed from ' <i>previous_sdr_status</i> ' to ' <i>sdr_status</i> '.

SDR_PSU_STATUS_BAD

Severity	Description
warning	<i>PSU</i> (location <i>Location</i>) is failed or off. Changed from ' <i>previous_sdr_status</i> ' to ' <i>current_sdr_status</i> '.

INVALID_PSU_PART_NUMBER

Severity	Description	Troubleshooting
major	<i>PSU</i> has an invalid part number ' <i>PN</i> '.	Please contact IBM support and have the PSU replaced.

CMOS_BATTERY_TOO_WEAK

Severity	Description	Troubleshooting
major	The CMOS battery on <i>Module</i> is too weak.	Please contact IBM support and have the battery replaced.

CMOS_BATTERY_IS_OK

Severity	Description
informational	The CMOS battery on <i>Module</i> is now OK.

FC_LINK_IS_NOW_DOWN

Severity	Description	Troubleshooting
major	FC port <i>Component</i> Active Firmware <i>Firmware version</i> - link disconnected.	Contact IBM Support

FC_LINK_IS_NOW_UP

Severity	Description	Troubleshooting
informational	FC port <i>Component</i> - link regained.	Contact IBM Support

FC_LINK_SYNC_ERROR

Severity	Description	Troubleshooting
major	FC port <i>Component</i> - errors on the physical layer: <i>Reason</i> .	Please contact support.

FC_PORT_TEST_STARTED

Severity	Description
informational	FC port <i>Component</i> - test started

FC_PORT_TEST_NOT_STARTED

Severity	Description	Troubleshooting
informational	FC port <i>Component</i> - test not started.	Check port state

FC_PORT_TEST_FAILED

Severity	Description	Troubleshooting
major	FC port <i>Component</i> - test failed.	Contact IBM Support

FC_PORT_TEST_SUCCESS

Severity	Description
informational	FC port <i>Component</i> - test success.

FC_PORT_TEST_ABORTED

Severity	Description
informational	FC port <i>Component</i> - test aborted.

COMPONENT_NETWORK_LINK_IS_DOWN

Severity	Description	Troubleshooting
major	Network interface to <i>Connected Component</i> on <i>Component ID</i> - link disconnected.	Contact IBM Support

COMPONENT_NETWORK_LINK_IS_UP

Severity	Description	Troubleshooting
informational	Network interface to component <i>Connected Component</i> on <i>Component ID</i> - link regained.	Contact IBM Support

MODULE_IS_MISSING_REQUIRED_MEMORY

Severity	Description	Troubleshooting
major	<i>Component ID</i> has less memory (<i>actual_mem</i> GB) than is defined for use (<i>req_mem</i> GB).	Please contact your Administrator.

POD_IB_MISWIRE

Severity	Description	Troubleshooting
warning	POD module miswired: <i>Module ID</i> .	Contact IBM Support

POD_IB_MISWIRE_CORRECTED

Severity	Description
informational	POD module miswire corrected: <i>Module ID</i> .

IMM_USB_INTERFACE_FAILED

Severity	Description	Troubleshooting
minor	IMM USB interface on module <i>Module</i> failed and can't be reset.	Contact IBM Support

MODULE_SET_LED_LOCATOR_FAILED

Severity	Description
warning	Failed to set LED locator on <i>module</i> .

MODULE_SET_LED_LOCATOR_COMPLETED

Severity	Description
informational	LED locator set successfully on <i>module</i> .

PERF_CLASS_RESOURCE_EXHAUSTION

Severity	Description
warning	Exhausted all allowed resources for performance classes on <i>Module Id</i> , BUSY until resources available.

CONNECTED_HOSTS_LIMIT_REACHED

Severity	Description
informational	Number of connected Hosts was reached for port ' <i>port_id</i> ' in Module <i>Module Id</i> .

QoS_HAS_BEEN_TRIGGERED

Severity	Description
informational	Queues on port ' <i>port_id</i> ' in Module <i>Module Id</i> caused QoS to be activated.

PERF_CLASS_RATE_AT_LIMIT

Severity	Description
informational	Performance class ' <i>perf_class</i> ' on <i>Module Id</i> reached its limit of <i>Limit Limit Name</i> , IOs being throttled.

INDEPENDENT_PERF_CLASS_RATE_AT_LIMIT

Severity	Description
informational	Performance class ' <i>perf_class</i> ' object <i>type:name</i> on <i>Module Id</i> reached its limit of <i>Limit Limit Name</i> , IOs being throttled.

PORT_PREP_FOR_UPGRADE_TIMED_OUT

Severity	Description
warning	Preparation of <i>port_type</i> port ' <i>local_port_name</i> ' for hot-upgrade timed out due to host ' <i>host_name</i> ' port ' <i>host_port_name</i> ' <i>host_port_addr</i>

INTERFACE_DISCONNECTED_FROM_TARGET

Severity	Description
major	Interface node on module <i>module</i> cannot access target ' <i>target</i> ' through any gateway module.

INTERFACE_RECONNECTED_TO_TARGET

Severity	Description
major	Interface node on module <i>module</i> can access target ' <i>target</i> '.

METADATA_SERVICE_DB_CREATE

Severity	Description
informational	Database <i>DB</i> was created

METADATA_SERVICE_DB_DELETE

Severity	Description
informational	Database <i>DB</i> was deleted

IPINTERFACE_CREATE

Severity	Description
informational	A new iscsi IP interface was defined with name ' <i>interface name</i> ' on module <i>module</i> with port ' <i>port list</i> ' and IP address <i>IP address</i>

IPINTERFACE_DELETE

Severity	Description
informational	ISCSI IP interface with name ' <i>interface name</i> ' was deleted

IPINTERFACE_RENAME

Severity	Description
informational	ISCSI IP interface with name ' <i>old name</i> ' and was renamed ' <i>interface name</i> '

IPINTERFACE_UPDATE

Severity	Description
informational	ISCSI IP interface with name ' <i>interface name</i> ' was updated. Its IP address is <i>IP address</i>

IPINTERFACE_UPDATE_MANAGEMENT

Severity	Description
informational	Management IP interfaces were updated. Management IPs are <i>IP addresses</i>

IPINTERFACE_UPDATE_MANAGEMENT_IPV6

Severity	Description
informational	Management IP interfaces were updated. Management IPv6 addresses are <i>IPv6 addresses</i>

IPINTERFACE_UPDATE_VPN

Severity	Description
informational	VPN IP interfaces were updated. VPN IPs are <i>IP addresses</i>

IPINTERFACE_UPDATE_VPN_IPV6

Severity	Description
informational	VPN IPv6 interfaces were updated. VPN IPv6 addresses are <i>IP addresses</i>

AUXILIARY_INTERNAL_PORTS_ENABLED

Severity	Description
informational	<i>Port Count</i> auxiliary internal Ethernet ports were enabled

AUXILIARY_INTERNAL_PORTS_DISABLED

Severity	Description
informational	<i>Port Count</i> auxiliary internal Ethernet ports were disabled

IPSEC_ENABLED

Severity	Description
informational	IPSec was enabled

IPSEC_DISABLED

Severity	Description
informational	IPSec was disabled

IPSEC_CONNECTION_ADDED

Severity	Description
informational	A new IPSec connection named ' <i>name</i> ' was added

IPSEC_CONNECTION_UPDATED

Severity	Description
informational	The IPSec connection named ' <i>name</i> ' was updated

IPSEC_CONNECTION_REMOVED

Severity	Description
informational	The IPSec connection named ' <i>name</i> ' was removed

PRIVATE_KEY_ADDED

Severity	Description
informational	A new private key named ' <i>name</i> ' with fingerprint ' <i>fingerprint</i> ' and size <i>key_size</i> bits was added.

CERTIFICATE_REMOVED

Severity	Description
informational	The certificate named ' <i>name</i> ' was removed.

PKCS12_CERTIFICATE_ADDED

Severity	Description
informational	A new PKCS#12 named ' <i>name</i> ' with fingerprint ' <i>fingerprint</i> ' was added.

PKI_RENAME

Severity	Description
informational	PKI with the name ' <i>old name</i> ' was renamed to ' <i>new name</i> '

PKI_UPDATED

Severity	Description
informational	PKI with the name ' <i>name</i> ' and fingerprint ' <i>fingerprint</i> ' was updated

PROTOCOL_CONFIGURATION_CHANGED

Severity	Description
informational	Protocol configuration changed for protocol ' <i>Protocol Type</i> '.

EMAIL_HAS_FAILED

Severity	Description	Troubleshooting
variable	Sending event <i>Event Code (Event Index)</i> to <i>Destination List</i> via <i>SMTP Gateway</i> failed. Module: <i>Module ID</i> ; Error message: ' <i>Error Message</i> '; timeout expired: <i>Timeout Expired?</i> .	Contact IBM Support

BULK_EMAIL_HAS_FAILED

Severity	Description	Troubleshooting
variable	Sending bulk email with <i>Events Number</i> events to <i>Destination List</i> via <i>SMTP Gateway</i> failed. Module: <i>Module ID</i> ; Error message: ' <i>Error Message</i> '; timeout expired: <i>Timeout Expired?</i> .	Contact IBM Support

SMS_HAS_FAILED

Severity	Description	Troubleshooting
variable	Sending event <i>Event Code (Event Index)</i> to <i>Destination List</i> via <i>SMS Gateway</i> and <i>SMTP Gateway</i> failed. Module: <i>Module ID</i> ; Error message: ' <i>Error Message</i> '; timeout expired: <i>Timeout Expired?</i> .	Contact IBM Support

HTTPS_HAS_FAILED

Severity	Description	Troubleshooting
variable	Sending event <i>Event Code (Event Index)</i> to <i>Destination List</i> via <i>HTTPS address</i> failed. Module: <i>Module ID</i> ; Error message: ' <i>Error Message (HTTP error code)</i> '; timeout expired: <i>Timeout Expired?</i> .	Contact IBM Support

EMAIL_NOT_SENT

Severity	Description	Troubleshooting
variable	Sending event <i>Event Code (Event Index)</i> to <i>Destination List</i> via <i>SMTP Gateway</i> was waived because of failed SMTP gateway. It will be not be used until <i>Retry Time</i> .	Contact IBM Support

SMS_NOT_SENT

Severity	Description	Troubleshooting
variable	Sending event <i>Event Code (Event Index)</i> to <i>Destination List</i> via <i>SMS Gateway</i> and <i>SMTP Gateway</i> was waived because of failed SMTP gateway. It will be not be used until <i>Retry Time</i> .	Contact IBM Support

HEARTBEAT_EMAIL_HAS_FAILED

Severity	Description	Troubleshooting
minor	Sending heartbeat to <i>Destination Name</i> via <i>SMTP Gateway</i> failed. Module: <i>Module ID</i> ; Error message: ' <i>Error Message</i> '; timeout expired: <i>Timeout Expired?</i> .	Contact IBM Support

HEARTBEAT_SMS_HAS_FAILED

Severity	Description	Troubleshooting
minor	Sending heartbeat to <i>Destination Name</i> via <i>SMS Gateway</i> and <i>SMTP Gateway</i> failed. Module: <i>Module ID</i> ; Error message: ' <i>Error Message</i> '; timeout expired: <i>Timeout Expired?</i> .	Contact IBM Support

TEST_EMAIL_HAS_FAILED

Severity	Description	Troubleshooting
minor	Sending test to <i>Destination Name</i> via <i>SMTP Gateway</i> failed. Module: <i>Module ID</i> ; Error message: ' <i>Error Message</i> '; timeout expired: <i>Timeout Expired?</i> .	Contact IBM Support

TEST_SMS_HAS_FAILED

Severity	Description	Troubleshooting
minor	Sending test to <i>Destination Name</i> via <i>SMS Gateway</i> and <i>SMTP Gateway</i> failed. Module: <i>Module ID</i> ; Error message: ' <i>Error Message</i> '; timeout expired: <i>Timeout Expired?</i> .	Contact IBM Support

CUSTOM_EVENT

Severity	Description
variable	<i>Description</i>

UPGRADE_SOFTWARE_DOWNLOAD_FINISHED

Severity	Description
informational	Finished downloading software needed for upgrade to version <i>version</i> . Upgrade consequence is <i>consequence</i>

UPGRADE_FILE_LIST_RETRIEVAL_FAILED

Severity	Description	Troubleshooting
critical	Could not receive new version's file list from repository. Error code is <i>error</i> .	Contact IBM Support

UPGRADE_STARTS

Severity	Description
informational	System starting an upgrade.

PRE_UPGRADE

Severity	Description
informational	System preparing an upgrade procedure type <i>type</i> .

UPGRADE_IS_OVER

Severity	Description
informational	System went up after an upgrade.

IOS_RESTORED_AFTER_HOT_UPGRADE

Severity	Description
informational	System is able to perform I/Os after a hot upgrade.

UPGRADE_NO_NEW_FILES_FOR_UPGRADE

Severity	Description	Troubleshooting
warning	Repository version does not contain any new files. current version <i>current_version</i> new version is <i>new_version</i>	Contact IBM Support

UPGRADE_DOWNLOAD_REPOSITORY_COPY

Severity	Description	Troubleshooting
critical	Mirroring needed files from repository failed. Mirroring module is <i>mirroring_module</i> error is <i>error</i>	Contact IBM Support

UPGRADE_LOCAL_VERSION_DOWNLOAD_FAILED

Severity	Description	Troubleshooting
critical	Failure to distribute new software internally. Error code is <i>error</i> .	Contact IBM Support

UPGRADE_WAS_CANCELLED

Severity	Description	Troubleshooting
informational	Upgrade was canceled with reason <i>reason</i> .	Contact IBM Support

HOT_UPGRADE_ABORTED

Severity	Description	Troubleshooting
critical	Hot upgrade aborted with reason <i>reason</i> .	Contact IBM Support

HOT_UPGRADE_HAS_FAILED

Severity	Description	Troubleshooting
critical	Hot upgrade failed while <i>erroneous_state</i> .	Contact IBM Support

PRE_UPGRADE_SCRIPT_INVOCATION_FAILED

Severity	Description	Troubleshooting
critical	Invocation of pre-upgrade script failed with error <i>error</i> .	Contact IBM Support

POST_UPGRADE_SCRIPT_INVOCATION_FAILED

Severity	Description	Troubleshooting
critical	Invocation of post-upgrade script failed with error <i>error</i> .	Contact IBM Support

UPGRADE_IS_NOT_ALLOWED

Severity	Description	Troubleshooting
critical	One or more of the pre-upgrade validations failed.	Fix the problems pointed out in previous events and revalidate.

PRE_UPGRADE_VALIDATION_FAILED

Severity	Description	Troubleshooting
critical	One of the pre-upgrade validations failed with status <i>error</i> .	Contact IBM Support

POST_UPGRADE_SCRIPT_STARTED

Severity	Description
informational	Post-upgrade script started.

POST_UPGRADE_SCRIPT_FINISHED

Severity	Description
informational	Post-upgrade script finished successfully.

PRE_UPGRADE_SCRIPT_DISAPPROVES

Severity	Description	Troubleshooting
critical	Upgrade cannot commence because some of the validations in the pre-upgrade script failed. Explanation: <i>explanation</i> .	Correct the system state according to the explanation and try again

POST_UPGRADE_SCRIPT_REPORTED_FAILURE

Severity	Description	Troubleshooting
critical	Post upgrade script reported failure. Script output: <i>explanation</i> .	Correct the system state according to the explanation and try again

POWER_PROBLEM_CAUSING_MAINTENANCE_MODE

Severity	Description
warning	Power state causing system to enter maintenance mode.

SYSTEM_ENTERED_CHARGING_STATE

Severity	Description
informational	System cannot start work until it is sufficiently charged.

POWER_PROBLEM_CAUSING_MODULE_PHASEOUT

Severity	Description
critical	Module <i>module</i> was phased out due to a power problem.

POWER_REPORT_PROBLEM_CAUSING_MODULE_PHASEOUT

Severity	Description
critical	Module <i>module</i> did not report power status on time and hence it was phased out.

POWER_PROBLEM_CAUSING_SYSTEM_SHUTDOWN

Severity	Description
critical	Power state causing system to shutdown due to: <i>Power Emergency Shutdown Reason</i> .

DELAYING_BACKUP_POWER_FAILURE_HANDLING

Severity	Description
informational	Delaying backup power failure handling at module <i>Module</i>

NO_DELAYED_BACKUP_POWER_FAILURE

Severity	Description
informational	No delayed backup power failure

MODULE_PHASEOUT_FAILED

Severity	Description
informational	Phase out of module <i>Module</i> failed

METADATA_SET

Severity	Description
warning	<i>Object type</i> with name ' <i>Object name</i> ' has new metadata value.

METADATA_DELETE

Severity	Description
warning	Metadata object deleted for <i>Object type</i> with name ' <i>Object name</i> '.

SUBORDINATE_METADATA_SET

Severity	Description
warning	Remote <i>Object type</i> with name ' <i>Object name</i> ' was assigned a new metadata value by local system.

SUBORDINATE_METADATA_DELETE

Severity	Description
warning	Remote metadata object was deleted by local system for <i>Object type</i> with name ' <i>Object name</i> '.

PATCH_SCRIPT_ADDED

Severity	Description	Troubleshooting
informational	Added patch <i>Patch Name</i> .	Was patch supposed to have been added.

PATCH_SCRIPT_UPDATED

Severity	Description
informational	Updated patch <i>Patch Name</i> .

PATCH_SCRIPT_DELETED

Severity	Description
informational	Deleted patch <i>Patch Name</i> .

MODULE_FAILED_TO_FETCH_PATCH_SCRIPT

Severity	Description
warning	Module <i>Module</i> failed to fetch patch script <i>Patch Name</i> .

PATCH_SCRIPT_FAILED_TO_EXECUTE

Severity	Description
informational	Patch script <i>Patch Name</i> execution failed on module <i>Module</i>

PATCH_SCRIPT_EXECUTION_STARTED

Severity	Description
informational	Patch script <i>Patch Name</i> execution on module <i>Module</i> started with pid <i>Process ID</i>

PATCH_SCRIPT_EXECUTION_ENDED

Severity	Description
informational	Patch script <i>Patch Name</i> execution on module <i>Module</i> with pid <i>Process ID</i> ended with return code <i>Return Code</i>

DOMAIN_CREATED

Severity	Description
informational	Domain <i>domain_name</i> has been created.

DOMAIN_UPDATED

Severity	Description
informational	Domain <i>domain_name</i> has been updated.

DOMAIN_RENAMED

Severity	Description
informational	Domain <i>old_name</i> has been renamed to <i>domain_name</i> .

DOMAIN_DELETED

Severity	Description
informational	Domain <i>domain_name</i> has been deleted.

POOL_ADDED_TO_DOMAIN

Severity	Description
informational	Pool <i>pool_name</i> has been added to domain <i>domain_name</i> .

POOL_REMOVED_FROM_DOMAIN

Severity	Description
informational	Pool <i>pool_name</i> has been removed from domain <i>domain_name</i> .

POOL_MOVED_BETWEEN_DOMAINS

Severity	Description
informational	Pool <i>pool_name</i> has been moved from domain <i>domain_name</i> to domain <i>domain_name</i> .

DOMAINS_AUTO_SHIFT_RESOURCES

Severity	Description
informational	Resources from domain <i>domain_name</i> to domain <i>domain_name</i> have been auto shifted.

OBJECT_ATTACHED_TO_DOMAIN

Severity	Description
informational	Object <i>object_name</i> of type <i>object_type</i> has been added to domain <i>domain_name</i> .

OBJECT_REMOVED_FROM_DOMAIN

Severity	Description
informational	Object <i>object_name</i> of type <i>object_type</i> has been removed from domain <i>domain_name</i> .

DOMAIN_MANAGED_ATTRIBUTE_SET

Severity	Description
informational	Domain <i>domain_name</i> managed attribute was set to <i>managed_attribute</i> .

REMOTE_SUPPORT_CONNECTED

Severity	Description
informational	System connected to remote support center <i>Destination</i> .

UNABLE_TO_CONNECT_TO_REMOTE_SUPPORT

Severity	Description
minor	System is unable to connect to any remote support center.

REMOTE_SUPPORT_CONNECTION_LOST

Severity	Description
variable	Connection to remote support center <i>Destination</i> failed while the connection was in state <i>Disconnected Session State</i> .

REMOTE_SUPPORT_TIMEOUT

Severity	Description
variable	Connection to remote support center <i>Destination</i> timed out while the connection was in state <i>Disconnected Session State</i> .

REMOTE_SUPPORT_IMMINEENT_TIMEOUT

Severity	Description
minor	System is about to disconnect busy connection to remote support center <i>Destination</i> .

REMOTE_SUPPORT_DEFINED

Severity	Description
informational	Defined remote support center <i>Name</i> with IP address <i>Address</i> and port <i>Port</i> .

REMOTE_SUPPORT_DELETED

Severity	Description
informational	Deleted remote support center <i>Name</i> .

REMOTE_SUPPORT_DISCONNECTED

Severity	Description
variable	System disconnected from remote support center <i>Destination</i> while the connection was in state <i>Disconnected Session State</i> .

REMOTE_SUPPORT_CLIENT_MOVED

Severity	Description
informational	The remote support client moved from <i>Old Module</i> to <i>New Module</i> .

REMOTE_SUPPORT_CLIENT_NO_AVAILABLE_MODULES

Severity	Description
minor	No live modules with <i>Port Type</i> ports are available to run the remote support client.

TIMEZONE_SET

Severity	Description
informational	Timezone of the system was set to <i>Timezone</i> .

TIME_SET

Severity	Description	Troubleshooting
informational	On <i>Previous Time and Date</i> date and time of the system were set to <i>Time and Date</i> .	If date and/or time setting was intended, there is no problem.

TRANSACTION_ROLLED_BACK

Severity	Description
warning	Configuration transaction was rolled back due to module failure. Preceding events may reflect changes that were not committed.

ELICENSE_ACCEPTED

Severity	Description
informational	Electronic license was accepted by ' <i>Approver Name</i> '.

ELICENSE_VIOLATION

Severity	Description	Troubleshooting
warning	Latest version of the electronic license was not approved.	Please approve the electronic license.

AUDIT_ENABLED

Severity	Description
informational	CLI command auditing activated.

AUDIT_DISABLED

Severity	Description
warning	CLI command auditing deactivated.

IB_PORT_ENABLE

Severity	Description
informational	Switch port <i>switch_port</i> has been enabled.

IB_PORT_DISABLE

Severity	Description
informational	Switch port <i>switch_port</i> has been disabled.

IB_PORT_MISWIRE

Severity	Description	Troubleshooting
warning	Switch port miswired: <i>switch_port</i> shall connect to <i>expected_component</i> but connects to <i>component</i> with GUID <i>guid</i> .	Contact IBM Support

IB_PORT_MISWIRE_CORRECTED

Severity	Description
informational	Miswire on switch port <i>switch_port</i> has been corrected.

IB_PORT_SHUTDOWN

Severity	Description	Troubleshooting
warning	Infiniband port <i>component</i> has been shutdown with reason <i>shutdown_reason</i> .	Contact IBM Support

IB_PORT_TEST_FAILED

Severity	Description	Troubleshooting
warning	Infiniband port <i>component</i> has failed component test with reason <i>reason</i> .	Contact IBM Support

IB_PORT_TEST_SUCCESS

Severity	Description	Troubleshooting
informational	Infiniband port <i>component</i> completes component test.	Contact IBM Support

IB_PORT_PHASEIN_FAILED

Severity	Description	Troubleshooting
warning	Infiniband port <i>component</i> has failed to phase-in with reason <i>reason</i> .	Contact IBM Support

IB_PORT_PHASEIN_SUCCESS

Severity	Description	Troubleshooting
informational	Infiniband port <i>component</i> completes phase-in.	Contact IBM Support

IB_LINK_DOWN

Severity	Description
warning	Link on <i>switch_port</i> (that connects to <i>component</i>) is down.

IB_LINK_UP

Severity	Description
informational	Link on <i>switch_port</i> (that connects to <i>component</i>) is up.

IB_SWITCH_MISSING

Severity	Description	Troubleshooting
warning	Switch <i>ib_switch</i> is missing.	Contact IBM Support

IB_SWITCH_LOST

Severity	Description	Troubleshooting
warning	Switch <i>ib_switch</i> that was missing is considered lost.	Contact IBM Support

IB_MISSING_SWITCH_FOUND

Severity	Description
informational	A previously missing switch <i>ib_switch</i> is now found.

IB_CONFIGURE_COMMAND_ERROR

Severity	Description
warning	Infiniband configuration command <i>command</i> has failed on <i>component</i> .

IB_PERF_COUNTER_RESET

Severity	Description
informational	Performance counter <i>counter</i> will be reset on <i>component</i> .

POD_IB_PORT_MISWIRE

Severity	Description	Troubleshooting
warning	POD module port miswired: <i>module_port</i> shall connect to <i>expected_component</i> but connects to <i>component</i> with GUID <i>guid</i> .	Please contact support.

POD_IB_PORT_MISWIRE_CORRECTED

Severity	Description
informational	POD module port <i>module_port</i> connected to <i>component</i> miswire corrected.

IB_SWITCH_REBOOT_DETECTED

Severity	Description	Troubleshooting
warning	IB switch ' <i>switch_id</i> ' has rebooted.	Contact IBM Support

IB_CONNECTION_SERVICES_UNAVAILABLE

Severity	Description	Troubleshooting
warning	Connection services unavailable on port ' <i>port</i> '.	Contact IBM Support

IB_CONNECTION_SERVICES_AVAILABLE

Severity	Description	Troubleshooting
informational	Connection services now available on port ' <i>port</i> '.	Contact IBM Support

PERF_CLASS_MAX_IO_RATE_UPDATED

Severity	Description
informational	Performance Class <i>name</i> max IO rate was changed to <i>IO rate</i> IOPS

PERF_CLASS_MAX_BW_RATE_UPDATED

Severity	Description
informational	Performance Class <i>name</i> max BW rate was changed to <i>BW rate</i> MB/sec

PERF_CLASS_CREATE

Severity	Description
informational	Performance Class with name ' <i>name</i> ' was created

PERF_CLASS_DELETE

Severity	Description
informational	Performance Class with name ' <i>name</i> ' was deleted

PERF_CLASS_ADD_HOST

Severity	Description
informational	Host with name ' <i>host_name</i> ' was added to Performance Class with name ' <i>name</i> '

PERF_CLASS_REMOVE_HOST

Severity	Description
informational	Host with name ' <i>host_name</i> ' was removed from Performance Class with name ' <i>name</i> '

PERF_CLASS_ADD_POOL

Severity	Description
informational	Pool with name ' <i>pool.name</i> ' was added to Performance Class with name ' <i>pool.perf_class</i> '

PERF_CLASS_REMOVE_POOL

Severity	Description
informational	Pool with name ' <i>pool.name</i> ' was removed from Performance Class with name ' <i>name</i> '

PERF_CLASS_ADD_VOLUME

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was added to Performance Class with name ' <i>volume.perf_class</i> '

PERF_CLASS_REMOVE_VOLUME

Severity	Description
informational	Volume with name ' <i>volume.name</i> ' was removed from Performance Class with name ' <i>name</i> '

PERF_CLASS_ADD_DOMAIN

Severity	Description
informational	Domain <i>domain_name</i> was added to Performance Class <i>name</i>

PERF_CLASS_REMOVE_DOMAIN

Severity	Description
informational	Domain <i>domain_name</i> was removed from Performance Class <i>name</i>

VOLUME_MODIFIED_DURING_IO_PAUSE

Severity	Description	Troubleshooting
warning	Volume ' <i>vol_name</i> ' of CG ' <i>cg_name</i> ' was modified during Pause IO with token ' <i>token</i> '	Retry after completing CG changes.

CONS_GROUP_MODIFIED_DURING_IO_PAUSE

Severity	Description	Troubleshooting
warning	CG ' <i>cg_name</i> ' was modified during Pause IO with token ' <i>token</i> '	Retry after completing CG changes.

IO_PAUSED_FOR_CONS_GROUP

Severity	Description
Informational	Pause IO on CG with name ' <i>cg_name</i> ' was started with <i>timeoutms</i> timeout . Token is ' <i>token</i> '.

IO_RESUMED_FOR_CONS_GROUP_EXPLICITLY

Severity	Description
Informational	Pause IO on CG with name ' <i>cg_name</i> ' and token ' <i>token</i> ' was resumed by user request.

IO_RESUMED_FOR_CONS_GROUP_AUTOMATICALLY

Severity	Description
Informational	Pause IO on CG with name ' <i>cg_name</i> ' and token ' <i>token</i> ' was resumed after snapgroup creation.

IO_RESUMED_FOR_CONS_GROUP_UPON_SYSTEM_ERROR

Severity	Description
warning	Pause IO on CG with name ' <i>cg_name</i> ' and token ' <i>token</i> ' was resumed after system error.

IO_RESUMED_FOR_CONS_GROUP_UPON_TIMEOUT_EXPIRATION

Severity	Description	Troubleshooting
warning	Pause IO on CG with name ' <i>cg_name</i> ' and token ' <i>token</i> ' was canceled after timeout.	Use longer timeout value or require less time for performing action.

ALU_CREATE

Severity	Description
informational	ALU was defined with name ' <i>ALU name</i> ' associated with host ' <i>ALU host name</i> ' lun ' <i>ALU lun</i> '.

ALU_DELETE

Severity	Description
informational	ALU with name ' <i>ALU name</i> ' associated with host ' <i>ALU host name</i> ' lun ' <i>ALU lun</i> ' was deleted.

ALU_UNBOUND_ALL

Severity	Description
informational	All SLUs of ALU with name ' <i>ALU name</i> ' were unbound.

TXN_NODE_FLASH_CONNECTION_LOST

Severity	Description
warning	TXN node on ' <i>module</i> ' is disconnected from flash system ' <i>flash system</i> '.

TXN_NODE_FLASH_CONNECTED

Severity	Description
informational	TXN node on ' <i>module</i> ' is fully connected to flash system ' <i>flash system</i> '.

POD_IB_LINK_DETECTION_LINK_PERSISTENTLY_DISCONNECTED

Severity	Description
critical	IB link from <i>Source</i> to <i>Target</i> has reported as persistently disconnected

POD_IB_LINK_DETECTION_LINK_PERSISTENTLY_CONNECTED

Severity	Description
informational	IB link from <i>Source</i> to <i>Target</i> has detected as persistently connected

Chapter 27. Return codes

This section contains descriptions of CLI return codes.

Return Code	Error Description
0	Success.
1	Command execution failed.
2	No connection to the system.
3	Password is required.
4	Password does not match system password.
7	Command not allowed from this client.
8	Bad XCLI option.
9	Internal XCLI error.

Notices

These legal notices pertain to the information in this IBM Storage product documentation.

This information was developed for products and services offered in the US. This material may be available from IBM in other languages. However, you may be required to own a copy of the product or product version in that language in order to access it.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing
IBM Corporation
North Castle Drive, MD-NC119
Armonk, NY 10504-1785
USA*

For license inquiries regarding double-byte character set (DBCS) information, contact the IBM Intellectual Property Department in your country or send inquiries, in writing, to:

*Intellectual Property Licensing
Legal and Intellectual Property Law
IBM Japan Ltd.
19-21, Nihonbashi-Hakozakicho, Chuo-ku
Tokyo 103-8510, Japan*

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Licensees of this program who wish to have information about it for the purpose of enabling: (i) the exchange of information between independently created programs and other programs (including this one) and (ii) the mutual use of the information which has been exchanged, should contact:

*IBM Director of Licensing
IBM Corporation
North Castle Drive, MD-NC119
Armonk, NY 10504-1785
USA*

Such information may be available, subject to appropriate terms and conditions, including in some cases, payment of a fee.

The licensed program described in this document and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement, IBM International Program License Agreement or any equivalent agreement between us.

The performance data discussed herein is presented as derived under specific operating conditions. Actual results may vary.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

All statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

Trademarks

IBM, the IBM logo, and ibm.com are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the Copyright and trademark information website (www.ibm.com/legal/us/en/copytrade.shtml).

Other product and service names might be trademarks of IBM or other companies.



Printed in USA

SC27-8711-08

