


Altitude sensor SBS-01A

Instruction Manual

Thank you for purchasing Futaba's SBS-01A Altitude Sensor. This sensor, used in conjunction with a telemetry enabled transmitter/receiver, is used to indicate the altitude of the item to which it is attached. To maximize your enjoyment, and to ensure proper sensing, please read through this manual thoroughly. We also encourage you to retain the manual for future reference should the need arise.

● The SBS-01A is designed for use with Futaba telemetry systems.

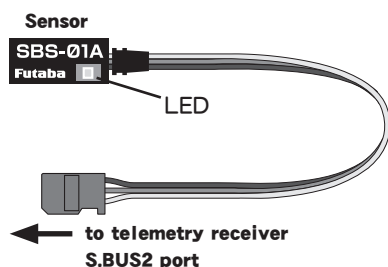

SBS-01A

Weather

This sensor calculates the altitude from atmospheric pressure. Atmospheric pressure will get lower as you go up in altitude, using this the sensor will estimate the altitude. Please understand that an exact advanced display cannot be performed if atmospheric pressure changes in a weather situation.

(Example) A high atmospheric pressure approaches.

→ It indicates that the display altitude fell.

Slot Number Setup

SBS-01A uses three continuous slots. Please note that the proper default start slot for this accessory is number 3. When setup-changing or adding, it is the following numbers that are made to a start slot.


1, 2, 3, 4, 5, 8, 9, 10, 11, 12, 13, 16, 17, 18, 19, 20, 21, 24, 25, 26, 27, 28, 29

Information on how to change the slot assignment is included in the transmitter's manual.

Use : Altitude sensor (from atmospheric pressure) with Vario meter
Range :
[Altitude] about -700 ~ 5,500 m (sensor spec)
[Vario meter] -150m/s ~ +150m/s
Length : 175mm
Weight : 2.6g
Voltage : DC 3.7 ~ 7.4V

Wiring

The SBS-01A may only be used with telemetry enabled receivers that offer S.BUS 2 port(s). Please refer to the manual(s) that accompanied your transmitter and/or receiver for proper connection methodology.

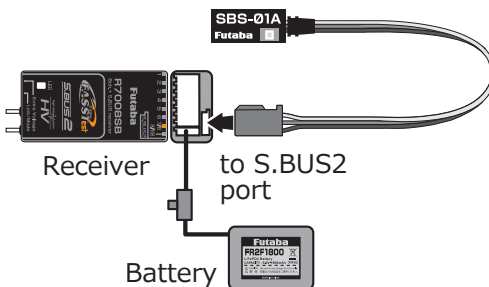


LED Indication

| | |
|---------------------------|--------------------------|
| Green | Normal operation |
| Red | No signal reception |
| Green/Red | When setting up the slot |
| Green/Red Alternate blink | Unrecoverable error |

Relative Altitude

Data when a power supply is turned on shall be 0 m, and it displays the altitude which changed from there. Even if the altitude of an airfield is high, that shall be 0 m and the altitude difference from an airfield is displayed.

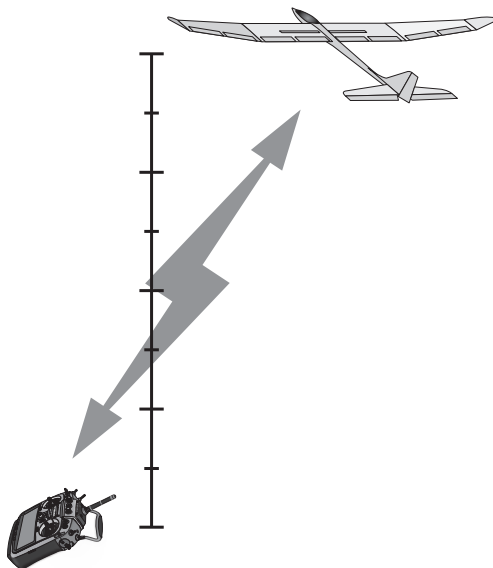

WARNING

Failure to follow these safety precautions may result in severe injury to yourself and others.

❗ To utilize the SBS-01A altitude sensor, connect it to the S.BUS2 port of the Futaba telemetry enabled receivers.

• The SBS-01A will not function properly if connected to an S.BUS port or other channel ports.

❗ Ensure that the unit is connected properly to the receiver. Failure to do so could result in damage to the sensor.

❗ Ensure that the unit is mounted in an area that will eliminate exposure to fuel, water and vibration.

• As with any electronic components, proper precautions are urged to prolong the life and increase the performance of the SBS-01A.

❗ To ensure that the SBS-01A is functioning as desired, please test accordingly.


• Do not fly until inspection is complete.

❗ Allow a slight amount of slack in the SBS-01A cables and fasten them at a suitable location to prevent any damage from vibration during flight.


⊘ Do not use the SBS-01A with anything other than an R/C model.

Mounting Precautions

Do not install in a location where the wind/ air flow can hit the sensor. Also, do not put in a sealed location as atmospheric pressure will not change in a sealed location.

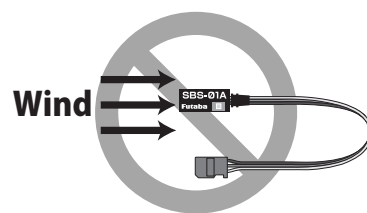

Do not install in a location where the wind/ air flow can hit the sensor.

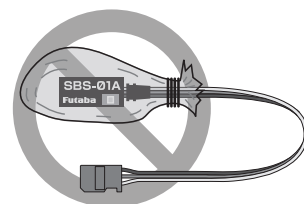

Do not put in a sealed location.

