

Panasonic®


This product is eligible for the P2HD 5 Year Warranty Repair Program. For details, see page 7.

Operating Instructions

Memory Card Camera-Recorder

Model No. **AJ-HPX3100G**

P2HD

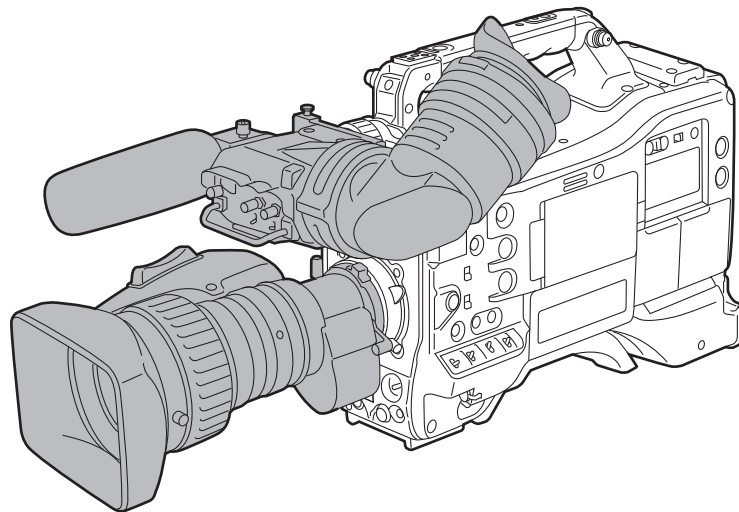

AVC INTRA **DVC PRO HD** **DVC PRO 50** **DVC PRO** **DX**

Before operating this product, please read the instructions carefully and save this manual for future use.

Read this first!



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER SERVICEABLE PARTS INSIDE.
REFER TO SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (service) instructions in the literature accompanying the appliance.

WARNING:

- To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.
- To reduce the risk of fire or electric shock, keep this equipment away from all liquids. Use and store only in locations which are not exposed to the risk of dripping or splashing liquids, and do not place any liquid containers on top of the equipment.

WARNING:

Always keep memory cards (optional accessory) or accessories (Front Audio Level control knob, screw, AUDIO connector cap, XLR connector cap, GPS connector cap) out of the reach of babies and small children.

CAUTION:

To reduce the risk of fire or electric shock and annoying interference, use the recommended accessories only.

CAUTION:

In order to maintain adequate ventilation, do not install or place this unit in a bookcase, built-in cabinet or any other confined space. To prevent risk of electric shock or fire hazard due to overheating, ensure that curtains and any other materials do not obstruct the ventilation.

CAUTION:

Excessive sound pressure from earphones and headphones cause hearing loss.

CAUTION:

A coin type battery is installed inside of the unit. Do not store the unit in temperatures over 60 °C (140 °F). Do not leave the unit in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

CAUTION:

Do not jar, swing, or shake the unit by its handle. Any strong jolt to the handle may damage the unit or result in personal injury.

Declaration of Conformity

Model Number: AJ-HPX3100G
Trade Name: Panasonic
Responsible Party: Panasonic Corporation of North America
Support contact: 1-800-524-1448

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Note:

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The user may find the booklet "Something About Interference" available from FCC local regional offices helpful.

Warning :

To assure continued FCC emission limit compliance, follow the attached installation instructions and the user must use only shielded interface cables when connecting to host computer or peripheral devices. Also any unauthorized changes or modifications to this equipment could void the user's authority to operate this device.

CAUTION:

To reduce the risk of fire or electric shock, refer mounting of the optional interface boards to qualified service personnel.

CAUTION:

Do not leave the unit in direct contact with the skin for long periods of time when in use. Low temperature burn injuries may be suffered if the high temperature parts of this unit are in direct contact with the skin for long periods of time. When using the equipment for long periods of time, make use of the tripod.

CAUTION:

Do not lift the unit by its handle while the tripod is attached. When the tripod is attached, its weight will also affect the unit's handle, possibly causing the handle to break and hurting the user. To carry the unit while the tripod is attached, take hold of the tripod.

 indicates safety information.

EMC NOTICE FOR THE PURCHASER/USER OF THE APPARATUS

1. Applicable standards and operating environment (AJ-HPX3100G)

The apparatus is compliant with:

- standards EN55103-1 and EN55103-2 1996.11, and
- electromagnetic environments E1, E2, E3, E4, and E5.

2. Pre-requisite conditions to achieving compliance with the above standards

<1> Peripheral equipment to be connected to the apparatus and special connecting cables

- The purchaser/user is urged to use only equipment which has been recommended by us as peripheral equipment to be connected to the apparatus.
- The purchaser/user is urged to use only the connecting cables described below.

<2> For the connecting cables, use shielded cables which suit the intended purpose of the apparatus.

- Video signal connecting cables
Use double shielded coaxial cables, which are designed for 75-ohm type high-frequency applications, for SDI (Serial Digital Interface).
Coaxial cables, which are designed for 75-ohm type high-frequency applications, are recommended for analog video signals.
- Audio signal connecting cables
If your apparatus supports AES/EBU serial digital audio signals, use cables designed for AES/EBU.
Use shielded cables, which provide quality performance for high-frequency transmission applications, for analog audio signals.
- Other connecting cables (USB)
Use shielded cables, which provide quality performance for high-frequency applications, as connecting cables.
- If your apparatus is supplied with ferrite core(s), they must be attached on cable(s) following instructions in this manual.

3. Performance level

The performance level of the apparatus is equivalent to or better than the performance level required by these standards.

However, the apparatus may be adversely affected by interference if it is being used in an EMC environment, such as an area where strong electromagnetic fields are generated (by the presence of signal transmission towers, cellular phones, etc.). In order to minimize the adverse effects of the interference on the apparatus in cases like this, it is recommended that the following steps be taken with the apparatus being affected and with its operating environment:

1. Place the apparatus at a distance from the source of the interference.
2. Change the direction of the apparatus.
3. Change the connection method used for the apparatus.
4. Connect the apparatus to another power outlet where the power is not shared by any other appliances.

A rechargeable battery that is recyclable powers the product you have purchased.
Une batterie rechargeable et recyclable alimente le produit que vous avez acheté.

<For USA-California Only>

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material — special handling may apply.
See www.dtsc.ca.gov/hazardouswaste.perchlorate.

Caution regarding laser beams

The CCD may be damaged if it is subjected to light from a laser beam.

When using the camera-recorder in locations where laser irradiation equipment is used, be careful not to allow the laser beam to shine directly on the lens.



To remove the battery

Main Power Battery (Ni-Cd / Ni-MH / Li-ion Battery)

- To detach the battery, please proceed in the reverse order of the installation method described in this manual. (Refer to page 108 for the detail.)
- If a battery made by any other manufacturer is to be used, check the Operating Instructions accompanying the battery.

Back-up Battery (Lithium Battery)

- For the removal of the battery for disposal at the end of its service life, please consult your dealer.

PLEASE NOTE:

- When preparing to record important images, always shoot some advance test footage, to verify that both pictures and sound are being recorded normally.
- Should video or audio recording fail due to a malfunction of this camera-recorder or the P2 cards used, we will not assume liability for such failure.
- If the unit is operated continuously with the fan stopped due to a failure, camera images may not be output, recorded, or played back properly.
- Please note that a beat signal may interfuse into the video signal occasionally when under an intense electric field (such as directly under a radio tower).

What to remember when throwing memory cards away or transferring them to others

Formatting memory cards or deleting data using the functions of the unit or a computer will merely change the file management information: it will not completely erase the data on the cards. When throwing these cards away or transferring them to others, either physically destroy them or use a data deletion program for computers (commercially available) to completely erase the data. Users are responsible for managing the data on their memory cards.

Precautions when installing USB drivers

Select "AJ-HPX3100" when installing USB drivers from the CD-ROM that comes with this unit (AJ-HPX3100) onto a personal computer.

EEE Yönetmeliğine Uygundur.
EEE Complies with Directive of Turkey.

Pursuant to at the directive 2004/108/EC, article 9(2)

Panasonic Testing Centre

Panasonic Service Europe, a division of Panasonic Marketing Europe GmbH

Winsbergring 15, 22525 Hamburg, F.R. Germany

Contents

	Read this first!	2
<hr/>		
General	Features of Camera unit	9
	Features of Recorder/player unit	10
	Features of the Input/Output unit	12
	Other features	12
	Dimensions drawing.....	13
	Color TV Standard Settings (Settings for frame frequency).....	14
	System Configuration.....	15
<hr/>		
Parts and their Functions	Power Supply and Accessory Mounting Section	16
	Audio (input) Function Section.....	18
	Audio (output) Function Section.....	20
	Shooting and Recording/Playback Functions Section	21
	Menu Operation Section	25
	Time Code Section	26
	Warning and Status Display Functions	27
	Display Window Functions.....	28
	LCD Monitor.....	29
	Viewfinder	30
<hr/>		
Recording and Playback	P2 Cards	32
	How to handle data recorded on P2 cards.....	34
	Basic Procedures.....	35
	Normal Recording	37
	PRE-RECORDING function.....	38
	Loop Recording.....	39
	Interval Recording.....	39
	ONE CLIP REC Function.....	42
	Recording Review Function	44
	Normal and Variable Speed Playback	45
	Text Memo Function	45
	Shot Mark Function.....	46
	Recording Setting and Operation Mode.....	46
<hr/>		
Adjustments and Settings for Recording	Multi Format	47
	Adjusting the White balance and Black Balance.....	49
	Setting the Electronic Shutter	53

	Assigning Functions to USER Buttons.....	55
	Selecting Audio Input Signals and Adjusting Recording Levels.....	57
	Setting External Reference Signal and GENLOCK	61
	Setting Time Data	62
	Viewfinder Screen Status Displays	75
	Adjusting and setting the LCD monitor	87
	Selection of video output signals	88
	Handling data.....	90
	Chromatic Aberration Compensation (CAC).....	104
<hr/>		
Preparation	Power Supply.....	108
	Mounting the Lens and Performing the Flange Back and White Shading Adjustments.....	111
	Preparing for Audio Input	114
	Mounting the Camera on a Tripod	115
	Attaching the Shoulder Strap	116
	Attaching the Rain Cover	116
	Attaching the F.AUDIO LEVEL control Knob	117
	Connection of the DC OUT connector and the external REC strat/stop switch.....	117
<hr/>		
Manipulating Clips with Thumbnails	Thumbnail Manipulations Overview	118
<hr/>		
Connection with external device	Connection with external devices using the USB 2.0 port	136
	Connection using the SDI IN connector.....	142
	Connection of the remote control unit (AJ-RC10G)	143
	Connection of the extension control unit (AG-EC4G)	145
<hr/>		
Maintenance and Inspections	Inspections Before Shooting.....	146
	Maintenance	148
	Warning System.....	153
<hr/>		
Menu	Menu Configuration.....	158
	Menu Description Tables	162
<hr/>		
Updating the Firmware incorporated into the unit.....		199
Specifications.....		200

- The SD card logo is a registered trademark.
- SDHC Logo is a trademark of SD-3C, LLC.
- MMC (Multi Media Card) is a registered trademark of Infineon Technologies AG.
- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Screenshots are used in accordance with Microsoft Corporation guidelines.
- Apple is trademark or registered trademarks of Apple Inc. in the United States and/or other countries.
- Unislot is a registered trademark of Ikegami Tsushinki Co., LTD.
- Other model names, company names, and product names listed in these operating instructions are trademarks or registered trademarks of their respective companies.
- This product is licensed under the AVC Patent Portfolio License for the personal and non-commercial use of a consumer, and no license is granted or shall be implied for any use other than the personal uses detailed below.
 - To encode video in compliance with the AVC standard (“AVC Video”)
 - To decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity
 - To decode AVC Video that was obtained from a video provider licensed to provide AVC Video
 - Additional information may be obtained from MPEG LA, LLC (<http://www.mpegla.com>).

Note concerning illustrations in these instructions

- Illustrations (camera-recorder, menu screens, etc.) in these operating instructions differ slightly from the actual camera-recorder.

References

- References are shown as (page 00).

Terminology

- Both SD Memory Cards and SDHC Memory Cards as referred to as “SD Memory Cards” in these operating instructions.
- Memory cards that have the “P2” logo (e.g., AJ-P2C064AG, an optional accessory) are referred to as “P2 cards” in these operating instructions.
- Video that is created during a single recording operation is referred to as a “clip” in these operating instructions.


P2HD 5 Year Warranty Repair Program ^{*1}


Thank you for purchasing this Panasonic P2HD device.
 Register as a user for this device to receive a special service warranty up to five years of free warranty repairs.


Customers who register as users on the website will receive an extended warranty repair valid for up to five years.


	1 st year	2 nd year	3 rd year	4 th year	5 th year ^{*5}
P2HD device ^{*2}	Basic warranty ^{*3}	Extended warranty repair ^{*4}			

*1: Please note that this extended warranty is not available in some countries/regions. *2: Not all models eligible for extended warranty coverage.
 *3: The basic warranty period may vary depending on the country/region. *4: Not all repair work is covered by this extended warranty.
 *5: The maximum warranty period may be adjusted depending on the number of hours the device has been used.


 Purchase P2 product


 Register online within 1 month


 "Registration Notice" e-mail sent



Free 5 years of Warranty Repairs

Make sure to save the "Registration Notice" e-mail during the warranty period.

Details about user registration and the extended warranty: http://panasonic.biz/sav/pass_e

Please note, this is a site that is not maintained by Panasonic Canada Inc. The Panasonic Canada Inc. privacy policy does not apply and is not applicable in relation to any information submitted. This link is provided to you for convenience.

General

Attention

Adjust the following two settings when using the unit for the first time.

- Adjust the black-balance setting when using the unit for the first time. (Refer to page 52)
- The unit is delivered from the factory with the color TV standard not yet specified. To revise the settings for frame frequency according to the TV standard, refer to the procedures described on page 14.

The unit is a solid CCD camera-recorder integrating 2/3-inch 2.2-megapixel components that support interlaced/progressive drive (reading all pixels) and record/playback that supports the compression format for AVC-Intra100, AVC-Intra50 and DVCPRO HD, DVCPRO50, DVCPRO and DV.

The unit supports the HD and SD methods shown in the following table. The unit is also equipped with CAC (chromatic aberration correction function for the magnification ratio chromatic aberration of lenses), Scan Reverse (corrects images when Anamo lenses or lenses for film applications are used), and the film-like gamma function.

For recording, the compression and recording methods are selectable among AVC-Intra100, AVC-Intra50, DVCPRO HD, DVCPRO50, DVCPRO and DV. Since minimal image deterioration occurs when recording with AVC-Intra 100 compression in particular, high image quality can be retained.

Supported formats

Mode	SYSTEM MODE	Shooting/Recording method	
HD	1080-59.94i	AVC-Intra100	59.94i
		AVC-Intra50	29.97P (Native) 23.98P (Native)
		DVCPRO HD	59.94i 29.97P Over 59.94i 23.98P Over 59.94i (2-3 Pull down) 23.98PA Over 59.94i (2-3-3-2 Pull down)
	1080-50i	AVC-Intra100	50i
		AVC-Intra50	25P (Native)
		DVCPRO HD	50i 25P over 50i
SD	480-59.94i	DVCPRO50	59.94i
		DVCPRO DV	29.97P Over 59.94i 23.98P Over 59.94i (2-3 Pull down) 23.98PA Over 59.94i (2-3-3-2 Pull down)
	576-50i	DVCPRO50	50i
		DVCPRO DV	25P Over 50i

Features of Camera unit

■ Multi-format

By applying the interlace drive/progressive drive (reading all pixels) to the 2.2-mega pixel CCD, the unit supports a variety of recording methods. (Refer to page 48)

■ Chromatic Aberration Compensation function

The unit is equipped with a function to correct the magnification ratio chromatic aberration of lenses caused by the fact that the refractive index in lenses varies with the wavelength of light (hereinafter referred to as chromatic aberration). By using this function, chromatic aberration around the lens can be corrected and high definition images can be obtained. However, a lens supporting chromatic aberration compensation is must be used. (Refer to page 104)

■ Scan Reverse function

The Scan Reverse function, as standard configuration, cancels the image inversion that occurs when a lens adapter from Canon or Angenieux is used, and it can be switched through the Menu settings. (Refer to page 162)

■ Film-like Gamma function

In order to obtain film tone in Varicam (AJ-HDC27 series), the unit is equipped with the FILM-REC gamma almost equivalent to Varicam.

■ 2-disk 4-type configuration optical filters

The unit is equipped with CC filters for 3200K, 4300K, 5600K, and 6300K. The 5600K filter for outdoor recording is standard. (Refer to page 21)

■ 14-bit A/D conversion digital signal processing

Analog video signals are processed into digital data by a 14-bit A/D converter with sampling frequencies of 74 MHz. It is possible to reproduce images that are more finely detailed.

■ Storage type high-sensitivity function (DS. GAIN)

The unit uses the storage type gain increase function by driving the CCD progressively. With this function, it is possible to obtain brighter pictures without increasing noise under low light conditions.

This is a function that makes it possible to achieve higher sensitivity of up to 34 dB above the regular gain increase. Furthermore, this function can also be used as picture effects. (Refer to page 185)

In addition, this function operates when shooting in 59.94i and 50i. SHUTTER mode turns off when in this state.

■ DRS (Dynamic Range Stretcher) function

With this function, the dynamic range of high brightness areas that may be skipped with white blanks in an ordinary recording method can be expanded by compressing images and maintaining the contrast. (Refer to page 55)

■ Lens file function

The unit has 8 lens files. By using an SD memory card, 64 lens files can be stored. (Refer to page 99)

■ Focus assist function

The unit will display a marker to help with focusing when shooting videos. This function provides a visual cue for focusing. (Refer to page 55)

■ Data management function

Within the unit, one user data file and four sets of scene file data can be saved.

By using an SD memory card as the setup card, up to eight sets of setup data can be stored. (Refer to page 90)

■ Color bar

The unit employs the SMPTE color bar, ARIB color bar, Split color bar for SNG (Satellite News Gathering) as well as the conventional color bar, which is useful for adjusting the color monitor. (Refer to page 184)

Features of Recorder/player unit

■ Multiple Slots

AJ-HPX3100 is equipped with 2 slots for P2 cards. 2 cards may be inserted in these slots for continuous recording. They also provide new recording capabilities specific to memory cards.

● Hot-Swap recording

The Hot-Swap capability allows cards not in use to be replaced without interrupting recording. This facilitates continuous recording.

● LOOP REC

AJ-HPX3100 can retain a certain amount of previously recorded material by continuously loop-recording data into a specified recording area.

● INTERVAL REC/ONE SHOT REC

The AJ-HPX3100 features interval recording at minimum one-frame intervals. This function is particularly suited to shooting science and nature programs. Frame-by-frame shooting is simple with the one-shot recording function.

● PRE-RECORDING function

In standby status, AJ-HPX3100 always stores video and sound input to the camera for up to 8 seconds. This means that the PRE-RECORDING function, when turned on, records the video and sound for a preceding duration preset by the user. This feature recovers critical moments that you might have missed. For DVCPRO and DV, video and sound can be recorded for up to 15 seconds.

● ONE CLIP REC Function

This function compiles multiple recordings into a combined clip and does not isolate single recordings (from REC START to STOP) to single clips. The combined clip can be handled with ease with transferring or copying etc., as the clip can be treated as a single thumbnail or when editing. Up to a maximum of 99 recordings can be combined into this single clip.

● Data protection

Data on P2 cards will not be lost due to overwriting unless the files are deleted or the cards are initialised. Recordings are written only to free space.

■ HD: Format AVC-I 100/AVC-I 50/DVCPRO HD

SD: Format DVCPRO50/DVCPRO/DV

Recorded video is compressed through a component digital recording method that uses a state-of-the-art compression technology, and sound is recorded using the non-compression PCM recording method, which excels in such areas as S/N ratio, frequency bands, waveform properties and reproducibility of fine areas. These methods further enhance the quality of images and sound.

And it is also possible to select AVC (Advance Video Coding) compression of the ISO/IEC14496-10 standard in addition to DVCPRO HD in HD mode. The unit performs the in-frame compression.

In SD mode, you can select a recording format appropriate for your purpose. For example, choose DVCPRO50 to give higher priority to image quality or DVCPRO if cost efficiency is a high priority.

◆ Note

When the clip is played back in the format not selected on the menu, the picture may be disturbed until the format is detected.

■ 4-channel Digital Audio Recording (all formats)

In HD (1080i) mode, 4-channel digital audio recording is used. Also, you can record at 24 bits when selecting AVC-Intra format.

All formats in SD mode also support 4-channel digital audio recording with high-quality sound (48 kHz/16 bits).

■ Clip Thumbnailing

● Automatic generation of thumbnails

AJ-HPX3100 automatically generates a thumbnail for each recording cut (clip). It is possible to make use of this on the camera-recorder as well as for non-linear editing purposes, and after uploading to a server.

● Thumbnail display on the LCD monitor

The 81.28 mm (3.2 inches) color LCD side of the your video camera-recorder can provide a multi-screen view of 12 clip thumbnails. You can choose a desired clip to playback instantly.

● Seamless playback of selected clips

You can select more than one clip from the thumbnail view for continuous playback and output of seamless video.

◆ Note

During continuous playback of clips in different recording formats, seamless playback is not available.

● Display of clip information

By selecting clips, information added to clips, such as the recording time, Text Memo, Shot Marks and metadata can be checked.

Text Memos & Shot Marks

Each clip can incorporate comments, in the form of text memo added to the thumbnail associated with the time code, together with shot marks which, for example, can help you distinguish OK cuts from reject cuts.

Both text memos and shot marks can be added to selected clips during and after a recording. This is helpful for editing recorded video.

In addition, you can use the copy function for each text memo block to take only the necessary portions out of a clip.

Front-mounted Sound Level Control Mechanism

AJ-HPX3100 features a front-mounted control for fine adjustment of the sound recording level. This control is particularly effective for adjusting the sound level when you are shooting without a sound recordist. The control can be disabled. (Refer to page 19)

Support for Built-in Unislot Wireless Receiver

AJ-HPX3100 is designed to support an optional slot-in wireless receiver. (Refer to page 114 and 191) The unit also supports 2-channel wireless receivers.

Recording Review Capability

This capability automatically plays back the last 2 to 10 seconds of recorded video, allowing you to quickly check the recorded contents.

Built-in Time Code Generator/reader

A special-purpose Subcode track can be used to record and reproduce time code information.

Support for Metadata

AJ-HPX3100 is capable of recording positional information (latitudes, longitudes and altitudes), as UMID information (metadata), from the GPS unit AJ-GPS910G (optional accessory). Names/titles can also be recorded, e.g. the camera person, the reporter, or the program which was registered on the SD memory card in advance. This information is also useful in managing information on clips. Regarding SD memory cards, please also see <Cautions in using SD memory cards> (page 22).

P2 cards that can be used with this unit

You can use P2 cards from 4 GB to 64 GB, like the optional AJ-P2C064AG (64 GB) and the AJ-P2E032XG (32 GB). (As of October, 2010)

Notes

- The AJ-P2C002SG (2 GB) is disabled.
- Depending on the type of P2 card, you need to update the firmware installed on this unit.
 - [Updating the Firmware incorporated into the unit] (page 199)
- For the latest information not available in the operating Instructions, visit the P2 Support Desk at the following Web sites.
 - <http://pro-av.panasonic.net/>

Recording Time on P2 Cards (When one 64 GB card is used)

HD Mode

Image system	Recording method and Recording time		
	DVCPRO HD	AVC-Intra100	AVC-Intra50
1080-59.94i/50i *1	Approx. 64 minutes	Approx. 64 minutes	Approx. 128 minutes
1080-30PN/25PN (Native)	—	Approx. 64 minutes	Approx. 128 minutes
1080-24PN (Native)	—	Approx. 80 minutes	Approx. 160 minutes

*1 Including 30P, 24P, and 25P pull down of the DVCPRO HD

SD Mode

Image system	Recording method and Recording time		
	DVCPRO 50	DVCPRO *2	DV *2
480-59.94i/576-50i *3	Approx. 128 minutes	Approx. 256 minutes	Approx. 256 minutes

*2 For 2ch audio recording

*3 Including 30P, 24P, and 25P pull down

◆ Note

The values for 32 GB cards are 1/2, the values for 16 GB cards are 1/4 and the values for 8 GB cards are 1/8 those of 64 GB cards shown above.

On splitting clips recorded on P2 cards

If the one-time continuous recording exceeds the duration which is given in the table below when a P2 card with a memory capacity of 8 GB or more is used in AJ-HPX3100, the recording is automatically continued on a separate clip. When performing thumbnail operations (such as display, delete, repair or copy) for these kinds of clips using a P2 device, it is possible to perform the operations for the entire recording as a single clip. However, with nonlinear editing software or a personal computer, the recording may be displayed as separate clips.

Recording method (except for native)	Continuous recording time
DVCPRO HD	Approx. 5 minutes
AVC-Intra100	
AVC-Intra50	Approx. 10 minutes
DVCPRO50	
DVCPRO	Approx. 20 minutes
DV	

Features of the Input/Output unit

■ Independent Dual HD SDI output equipped as standard

The HD SDI signals output from the SDI OUT connector and the MON OUT connector are each independent. Embedded audio is superimposed on HD SDI output. Also, in SD mode, independent dual SD SDI signals can be output from the SDI OUT connector and the MON OUT connector.

■ Features USB2.0 port (HOST/DEVICE)

By connecting with a PC via USB2.0, a P2 card inserted in AJ-HPX3100 can be used as a bulk storage device. It is also possible to store data on a P2 card onto a USB 2.0-connected external hard disk equipped with USB host capability as well as view clips stored on hard disks and write them to P2 cards. (Refer to page 136)

■ Down converter output provided as a standard configuration

When in HD mode, the MON OUT connector can output down converter signals (SD SDI signals or analog composite signals).

■ Remote control connector

By connecting the remote control unit (AJ-RC10G) or the extension control unit (AG-EC4G), which is available as an optional accessory, the unit can be controlled remotely. (Refer to page 143)

■ Confirmation of return video signals

With the viewfinder, you can check the return video signal (analog HD-Y signal) supplied to the GENLOCK IN connector of this unit or the HD SDI signal input to the SDI IN connector. And you can use them to check programs.

Only video signals from the same record format can be confirmed. Also, in SD mode, you can check only the SD SDI signal input to the SDI IN connector.

■ DC OUT connector

The DC OUT connector of the unit produces 1.5 A of electrical current.

By connecting an external switch to this connector, it is possible to control REC start/stop.

Since a tally lamp can be used by connecting the LED to this connector, it is useful for shooting video when fixing the camera on a crane. (Refer to page 117)

■ HD/SD SDI input function

You can record SDI signals input from the SDI IN connector.

However, what you can record is limited to the SDI signal with the same recording format as this unit.

■ LIGHT connector

You can connect to Anton/Bauer Ultralight 2. You can use bulbs up to 50 W.

For batteries, because sometimes there isn't enough power for lighting, use batteries with an ample power margin.

Other features

■ Viewfinder connection

From the viewfinder connector of the unit, 1080-59.94i or 1080-50i signals are output.

Furthermore, signals are output for switching the frequencies of the connected viewfinder.

Confirm images in multi formats by connecting the viewfinder (AJ-HVF21KG, AJ-CVF100G), which is available as an optional accessory. (Refer to page 30)

■ User button

On the side panel of the unit, five user buttons (USER MAIN/USER1/USER2/SHOT MARK/TEXT MEMO) are available.

Each button can be assigned the on/off function for any frequently used feature selected from among the many features of the unit, such as slot select and Y get (Refer to page 55).


■ Camera extension system

By combining the camera adapter (AG-CA300G) and the base station (AG-BS300P/E) which are optional, you can employ this unit as a camera extension system. In addition to consulting the instruction manual for each device regarding connection methods and precautions for these devices, use them according to the AJ-HPX3000G guidelines.

This unit is compatible with the HD viewfinder, so it is not possible to check the return video image in the viewfinder on systems where the SYSTEM MODE menu option is set to "480-59.94i" or "576-50i", with the VF Interface box (AG-YA500G) connected. You can select the SYSTEM MODE menu option from the <SYSTEM MODE> screen of the SYSTEM SETTING page.

Dimensions drawing

Unit: mm (inch)

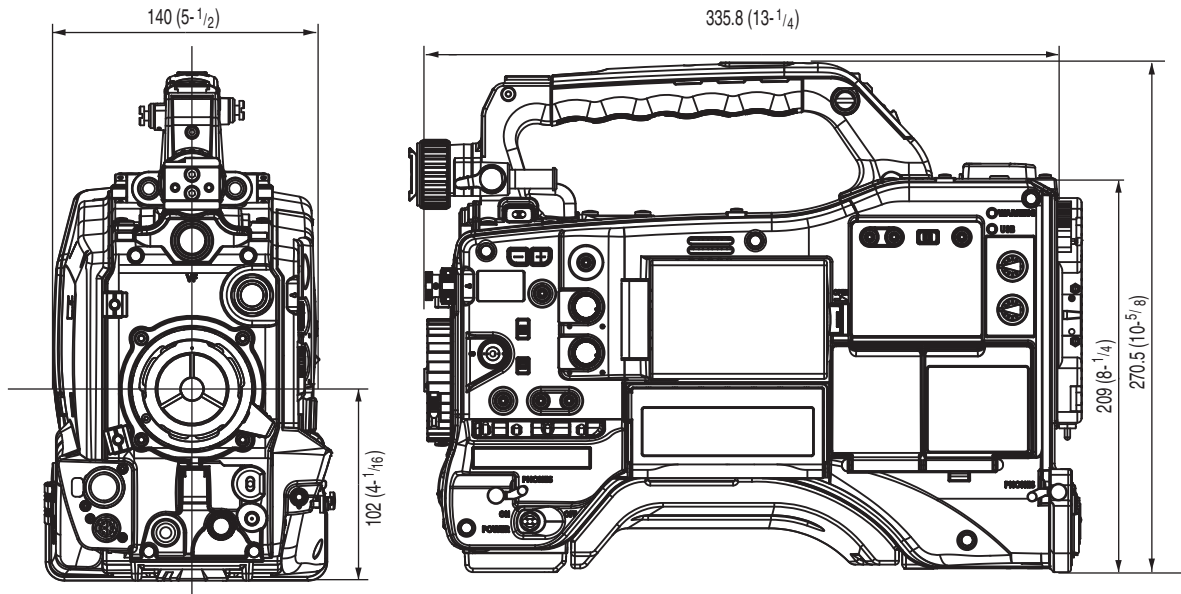


General

Color TV Standard Settings (Settings for frame frequency)


The unit is delivered with the color TV standard not yet specified. To revise the settings for frame frequency according to the preferred standard, refer to the procedures described below.

1 After connecting the unit to the power supply and then turning on the power, press the MENU SW button while pressing the LIGHT SW button to open OPTION MENU.

2 Turn the JOG dial button to move the cursor (arrow) to the AREA SELECT item, and then press the JOG dial button. The menu item AREA SELECT is found in the <AREA SETTING> screen on the OPTION MENU page.

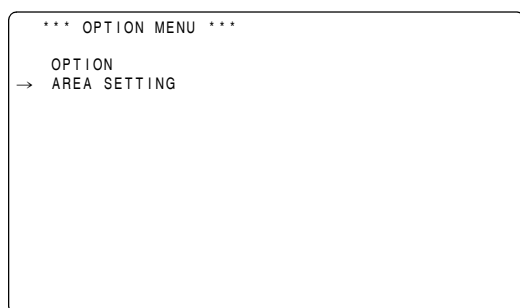

3 Select the area among NTSC, NTSC(J), and PAL. After selecting the area by turning the JOG dial button, press the JOG dial button.

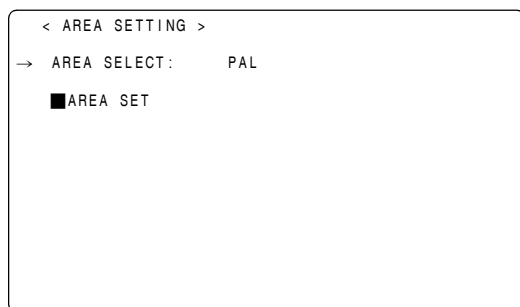

4 Move the cursor (arrow) to ■ AREA SET by turning the JOG dial button, and then press the JOG dial button. The following window appears.



5 Move the arrow (→) to YES and press the JOG dial button. The settings selected in Step 3 above are reflected in FACTORY and CURRENT DATA on the screen.

6 Turn off the power supply once and then turn on it again.

◆ Notes

- The settings are not saved unless SET is executed even if NTSC, NTSC(J), or PAL is selected in the AREA SELECT.
- When AREA SELECT is revised, the "■ AREA SET" blinks.
- When these items are set when the unit is used for the first time, only the following 11 items are revised. When the other settings of the unit are set in MAIN MENU, the MENU setting values for items other than the following 8 are ones that were set at the factory.


	Factory settings	NTSC	NTSC(J)	PAL
SYSTEM MODE	1080-59.94i	1080-59.94i	1080-59.94i	1080-50i
REC FORMAT	AVC-I 100/60i	AVC-I 100/60i	AVC-I 100/60i	AVC-I 100/50i
CAMERA MODE	60i	60i	60i	50i
SET UP *1	7.5%A	7.5%A	0%	0%
SET UP (D/C) *2	7.5%	7.5%	0%	0%
REAR LINE IN LVL	+4dB	+4dB	+4dB	0dB
AUDIO OUT LVL	+4dB	+4dB	+4dB	0dB
HEAD ROOM	20dB	20dB	20dB	18dB
GUI metadata language indication	American English	American English	Japanese/ For Japan	American English
LANGUAGE	Not displayed	Not displayed	ENGLISH JAPANESE	Not displayed
DATE FORMAT *3	MDY	MDY	YMD	DMY

*1 SET UP of the SYSTEM MODE menu (Enabled only for 480-59.94i)

*2 SET UP of the DOWNCON SETTING menu (Enabled only for 1080-59.94i)

*3 Select THUMBNAIL → SETUP → DATE FORMAT from the thumbnail menu.
→ [Setting the Thumbnail Display Mode] (page 132).

System Configuration

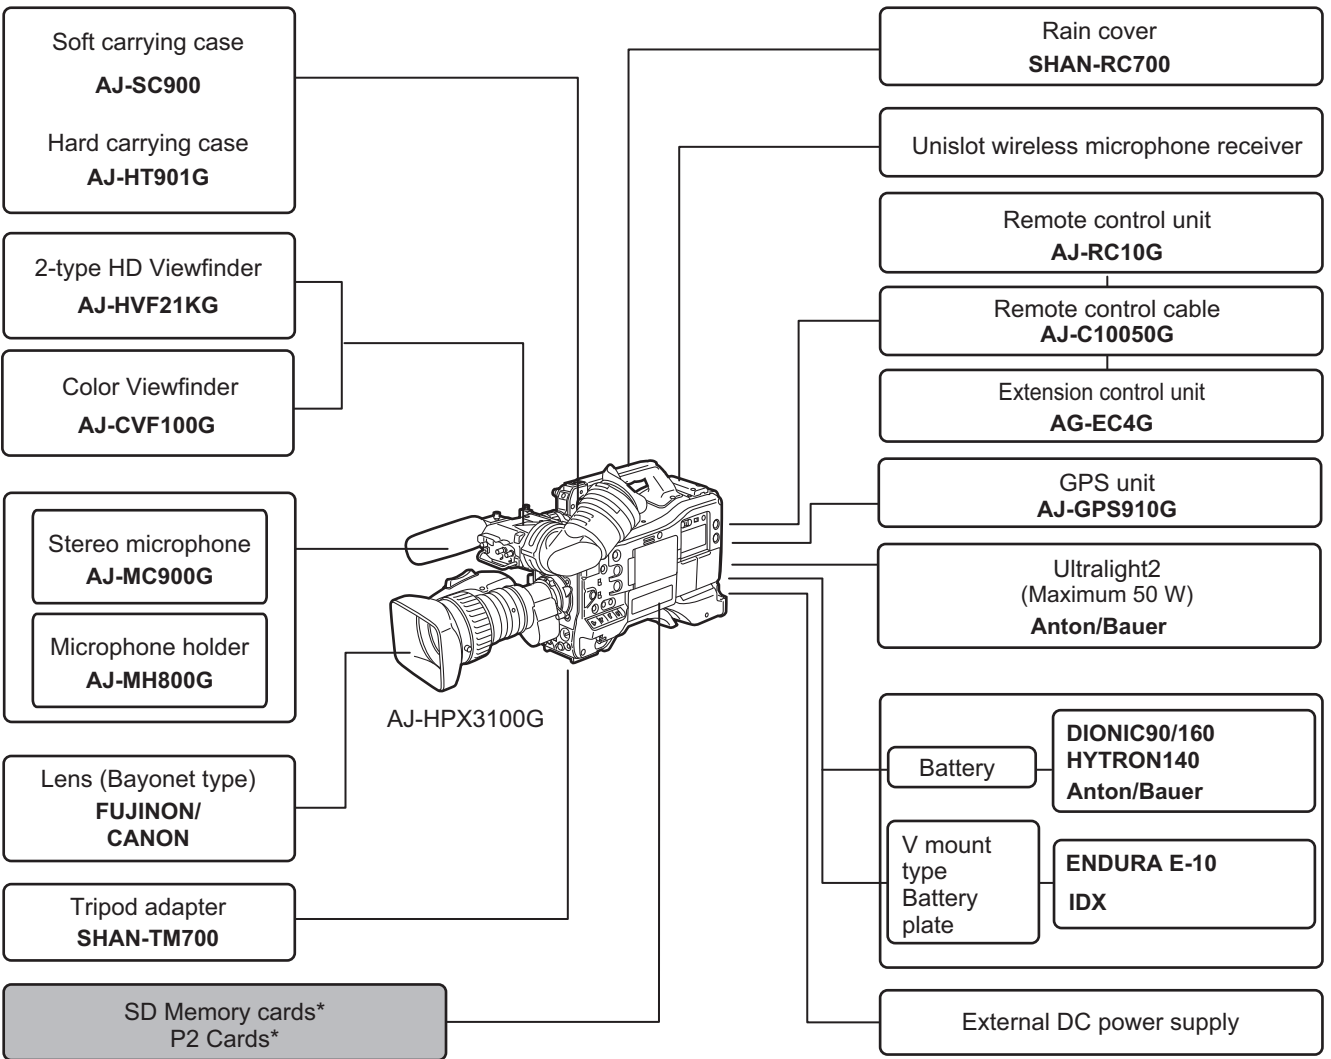



◆ Note

All of the devices and accessories other than the unit, which are shown in this system configuration, are optionally available. To use these devices and accessories, refer to the respective operation manuals.

* For the latest information on P2 cards and SD memory cards not available in the operating Instructions, visit the P2 Support Desk at the following Web sites.
<http://pro-av.panasonic.net/>

Parts and their Functions

Power Supply and Accessory Mounting Section

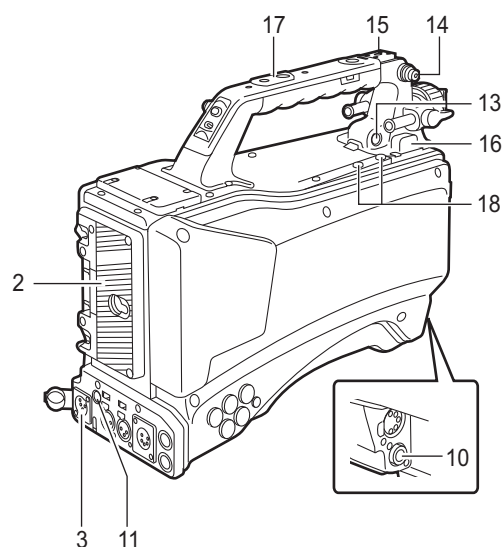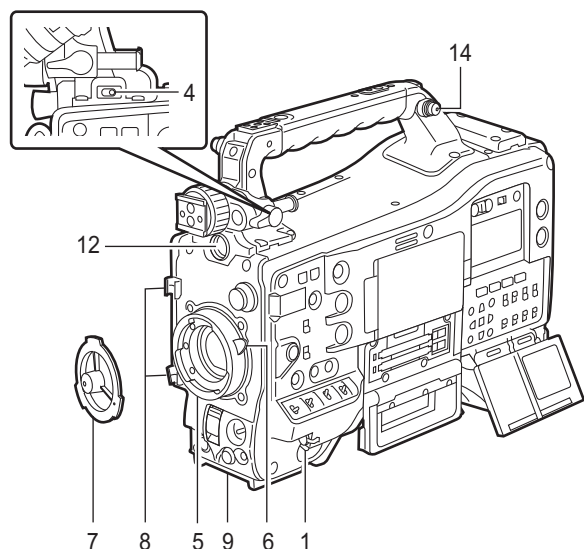

1. POWER switch

Used to turn on/off the power.

2. Battery mount

A battery pack from Anton/Bauer is mounted here.

→ [Mounting the Battery and Setting the Battery Type] (page 109)

3. DC IN (external power input) socket (XLR, 4P)

camera-recorder is connected to an external DC power supply.

→ [Use of the external DC power supply] (page 110)

4. LIGHT switch

Choose a way to turn the video light connected to the 16.LIGHT connector ON/OFF.

AUTO: If you leave the video light POWER switch ON, then the light will light at the same time that this unit starts recording, and the light will go out at the same time recording stops.

MANUAL: The light will light according to whether the video light POWER switch is ON/OFF.

5. Lens mount (bayonet 2/3-type)

The lens is attached here.

→ [Mounting the Lens and Performing the Flange Back and White Shading Adjustments] (page 111)

6. Lens lever

Lower this lever to lock the lens to the lens mount.

→ [Mounting the Lens and Performing the Flange Back and White Shading Adjustments] (page 111)

7. Lens mount cap

To remove the cap, raise the 6. lens lever.

When the lens is not mounted, replace the cap.

8. Lens cable/microphone cable clamp

This clamp secures the lens and microphone cables.

→ [Mounting the Lens and Performing the Flange Back and White Shading Adjustments] (page 111)

9. Tripod mount

When you want to mount camera-recorder on a tripod, the optional tripod adapter (SHAN-TM700) is attached here.

→ [Mounting the Camera on a Tripod] (page 115)

10. LENS jack (12-pin)

The lens connection cord is connected here. For a detailed description of your lens, see the relevant manufacturer's instruction manual.

11. DC OUT (DC power supply) output socket

This output socket is designed for 12-VDC. It provides a maximum current of 1.5 A.

Connect an external switch to this socket to control REC starts and stops or an LED for use as a tally lamp.

→ [Connection of the DC OUT connector and the external REC strat/stop switch] (page 117)

◆ Note

Confirm the pin arrangements of the DC output connector of the external DC power supply and the DC IN socket on the unit, and connect the proper polarities to each other. If the 12 V power supply is connected to the GND connector in error, it may cause a fire or failure of the unit.

12. VF connector (20 Pin)

Installs the viewfinder (AJ-HVF21KG, AJ-CVF100G, which are optional).

→ [Viewfinder] (page 30)

◆ Note

Please be aware that when the SYSTEM MODE is set at 480/59.94i or 576/50i the image quality displayed on the viewfinder screen, and the image quality actually recorded and output from this unit will be different.

13. GPS connector

This connects the optional GPS unit AJ-GPS910G.

14. Shoulder strap fittings

The shoulder strap is attached here.

→ [Attaching the Shoulder Strap] (page 116)

15. Light shoe

A video light or similar accessory can be attached here.

The mounting hole size is 1/4-20UNC (screw length less than 6 mm).

16. LIGHT connector

You can connect an Anton/Bauer Ultralight 2 or equivalent product under 50 W for the video light. Also, when the light is lit, the battery charge level goes down sharply.

When using the light, we recommend using a battery above 90 Wh.

17. Accessory mounting holes



Attach the accessories. Do not use for any purpose except to attach the accessories.

There are two types of mounting hole size: 1/4-20UNC (screw length less than 10 mm) and 3/8-16UNC (screw length less than 10 mm).

18. Microphone holder mounting screw

The screws are for mounting the AJ-MH800G microphone holder (optional) and the AG-YA500G VF interface box (optional).

Audio (input) Function Section

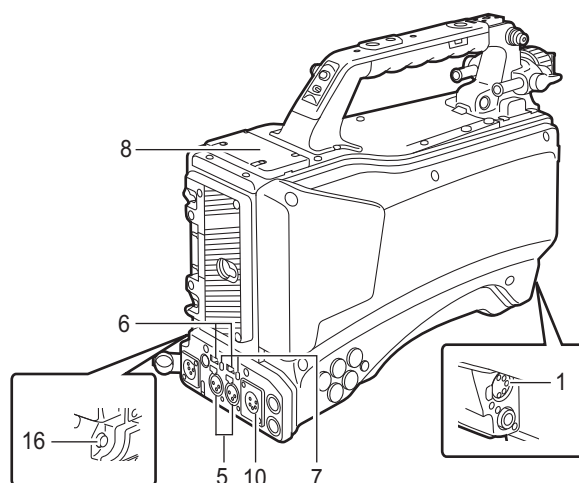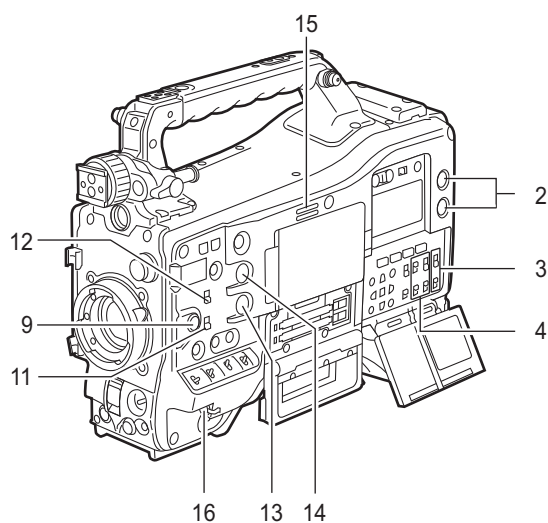

1. MIC IN (microphone input) jack (XLR, 5-pin)

A microphone (optional accessory) is connected here. Power for the microphone comes from this jack.

A remote microphone may be connected. When a microphone is used, set the power to ON through the menu option FRONT MIC POWER.

The menu item FRONT MIC POWER is found in the <MIC/AUDIO> screen on the MAIN OPERATION page.

→ [Preparing for Audio Input] (page 114)

2. AUDIO LEVEL CH1/3 / CH2/4 (audio channel 1 / 3 / 2/4 recording level adjustment) controls

With the 3.AUDIO SELECT CH1/3 / CH2/4 (audio channel 1/3 / 2/4 automatic/manual level adjustment selector) switch positioned to [MAN], these controls can be used to adjust the recording levels for Audio Channels 1/2 (With the menu settings 3/4).

Note that the controls are designed to be locked. For adjustment, each control must be depressed while turning.

3. AUDIO SELECT CH1/3 / CH2/4 (audio channel 1/3 / 2/4 automatic/manual level adjustment selector) switch

Use this switch to select recording level control mode for Audio Channels 1/2 (With the menu settings 3/4).

AUTO: Recording level automatically controlled.

MAN: Recording level manually controlled.

4. AUDIO IN (audio input selector) switch

Use this switch to select the signals recorded through Audio Channels 1 - 4.

FRONT: Signal from the microphone connected to the 1.MIC IN (microphone input) jack is recorded.

W.L. (WIRELESS) :

Signal from the slot-in wireless receiver is recorded.

REAR: Signal from the audio device connected to the 5.AUDIO IN CH1/3 / CH2/4 (audio input channel 1/3 / 2/4) connectors is recorded.

◆ Note

When you use stereo microphone (AJ-MC900G optional), set both CH1 and CH2 (With the menu settings CH3, CH4) to [FRONT]. The signal from L CH is recorded to CH1 (With the menu settings CH3) and that from R CH to CH2 (With the menu settings CH4).

5. AUDIO IN CH1/3 / CH2/4 (audio input channel 1 / 3 / 2/4) connectors (XLR, 3-pin)

Audio devices or a microphone may be connected here.

→ [When Using Audio Devices] (page 115)

6. LINE/MIC (line input/mic input) selector switch

Used to select the audio signal input from the 5.AUDIO IN CH1/3 / CH2/4 (audio input channel 1/3 / 2/4) connectors.

LINE: Audio signal line-input from the audio device is input.

MIC: Audio signal from a self-powered (active) microphone is input. (The main unit does not supply power to the remote microphone).

7. Microphone input +48V ON/OFF switch

This is the ON/OFF switch providing power to the microphone connected to the 5.AUDIO IN CH1/3 / CH2/4 (audio input channel 1/3 / 2/4) connector.

+48V: Provides +48 V to the microphone.

OFF: Does not provide +48 V to the microphone.

◆ Note

If the **REAR MIC POWER** menu option is not set to "ON" then power is not supplied regardless of the switch position. Select the **REAR MIC POWER** menu option from the <MIC/AUDIO> screen of the **MAIN OPERATION** page.

8. Wireless slot

A Unislot wireless receiver (optional accessory) may be attached here.

9. F.AUDIO LEVEL (audio recording level adjustment) control

This control adjusts the recording levels for Audio Channels 1/3 and 2/4.

However, when the 3.AUDIO SELECT CH1/3 / CH2/4 (audio channel 1/3 / 2/4 automatic/manual level adjustment selector) switch is set to [AUTO], the level will adjust automatically and the 2.AUDIO LEVEL CH1/3 / CH2/4 (audio channel 1/3 / 2/4 recording level adjustment) controls and this knob will not be active.

The control can be enabled or disabled through the menu options **FRONT VR CH1** or **FRONT VR CH2** (With the menu settings **FRONT VR CH3** and **FRONT VR CH4**). These menu items can be found in the <MIC/AUDIO> screen on the **MAIN OPERATION** page.

Audio (output) Function Section

10. AUDIO OUT connector (XLR, 5-pin)

This connector outputs audio signals recorded on Channels 1/2 or 3/4. Output signals are selected with the 11.MONITOR SELECT (audio channel) CH1/2 / CH3/4 selector switch.

11. MONITOR SELECT (audio channel) CH1/2 / CH3/4 selector switch

Use this switch to select the audio channel whose signals are output to the speakers, earphones or AUDIO OUT connector.

CH1/2: Signals on Audio Channels 1 and 2 are output.

CH3/4: Signals on Audio Channels 3 and 4 are output.

The channel indications on the display window and on the audio level meter in the viewfinder are synchronised with this selector switch.

12. MONITOR SELECT (audio selection) CH1/3 / ST / CH2/4 selector switch

The MONITOR SELECT switch is synchronised with the audio signal output to the speakers and earphones, and from the AUDIO OUT connector.

CH1/3: Signal on Audio Channel 1 or 3 is output.

ST: Stereo audio signals on Audio Channels 1 and 2 or Audio Channels 3 or 4 are output. The stereo signals can be changed to mixed signals using a menu option.

CH2/4: Signal on Audio Channel 2 or 4 is output.

Monitor switch	MONITOR SELECT switch	
	CH1/2	CH3/4
CH1/3	Audio Channel 1	Audio Channel 3
ST	Stereo signals from Audio Channels 1 and 2*	Stereo signals from Audio Channels 3 and 4*
CH2/4	Audio Channel 2	Audio Channel 4

* You can select between stereo and mixed signal types using the menu option MONITOR SELECT. This menu option can be found in the <MIC/AUDIO> screen on the MAIN OPERATION page.

13. MONITOR (volume) control

Adjust the volume from earphones connected to the 15.Speakers, or 16. PHONES (earphones) jack.

14. ALARM (warning alarm volume adjustment)

Used to control the volume of the warning sound emitted from 15.Speakers or earphones connected to the 16.PHONES (earphones) jack.

If the control is minimised, no alarm is audible.

15. Speakers

The speakers output EE sound during recording, and reproduced sound during playback.

The speakers emit an alarm sound when the warning lamp blinks and/or the indicator activates.


When the 16.PHONES (earphones) jack is connected with earphones, sound from the speaker is automatically muted.

16. PHONES (earphones) jack (mini jack)

This connector is designed for audio monitoring (stereo) earphones.

Both the front and rear connectors output the same sound.

Shooting and Recording/Playback Functions Section

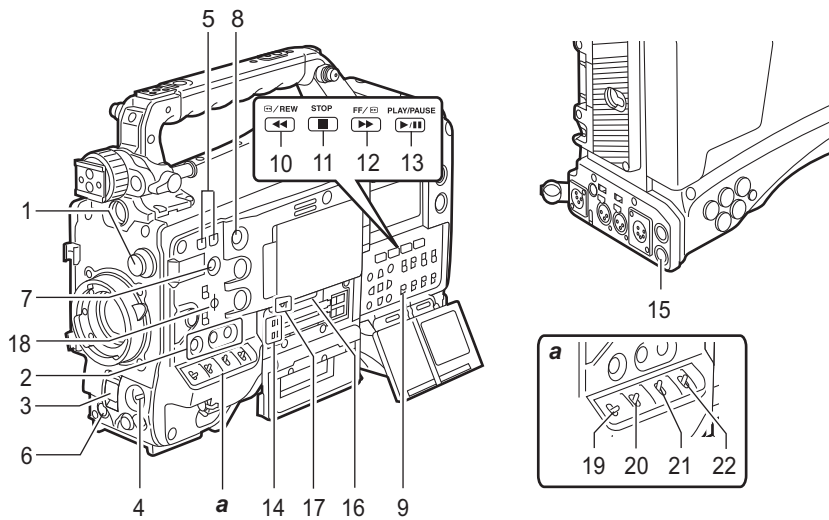

1. CC FILTER/ND FILTER (filter switching) controls

These are used to select the filter in accordance with the subject's brightness and color temperature.

CC FILTER knob (outside, large diameter)

- A : 3200K
- B : 4300K
- C : 5600K
- D : 6300K

ND FILTER knob (inside, small diameter)

- 1 : CLEAR (transparent)
- 2 : 1/4 ND
- 3 : 1/16 ND
- 4 : 1/64 ND

Shooting conditions	CC FILTER	ND FILTER
Sunrise, sunset, inside a studio	A (3200 K)	1 (CLEAR)
Outdoors under a clear sky	B (4300 K) or C (5600 K) or D (6300 K)	2 (1/4 ND) or 3 (1/16 ND)
Outdoors under cloudy or rainy skies	D (6300 K)	1 (CLEAR) or 2 (1/4 ND)
Snowscapes, high mountains, seashores or other perfectly clear scenery	B (4300 K) or C (5600 K) or D (6300 K)	3 (1/16 ND) or 4 (1/64 ND)

2. USER MAIN, USER 1 and USER 2 buttons

These buttons can be assigned user-selected functions, using a menu option. Each button, when pressed, performs the assigned function.

→ [Assigning Functions to USER Buttons] (page 55).

3. SHUTTER switch

Used to enable or disable the electronic shutter.

- OFF:** Electronic shutter disabled.
- ON:** Electronic shutter enabled.
- SEL:** Used to change the speed of the electronic shutter.

This dial switch returns to its original position. Each turn of the switch alters the shutter speed.

→ [Setting the Electronic Shutter] (page 53).

4. AUTO W/B (white/black) BAL switch

AWB: White balance is automatically adjusted.

When the WHITE BAL switch on the side is positioned at [A] or [B], the adjusted value is stored in the memory.

Note that when the switch is positioned at [PRST] this function does not work.

ABB: Black balance is automatically adjusted.

The automatic adjustment function of the black shading can be assigned to this switch by turning on the SHD.ABB SW CTL item. (Refer to page 184) The menu item SHD.ABB SW CTL is found in the <SW MODE> screen on the CAM OPERATION page.

◆ Note

To stop automatic adjustment of the white or black balance in progress, set the switch to either ([AWB] or [ABB]).

If automatic adjustment is cancelled, the value in effect before automatic adjustment will be used.

5. SYNCHRO SCAN ADJUSTMENT buttons

These buttons are enabled when the 3.SHUTTER switch is positioned at [ON] and synchro scan is selected.

They are used to adjust the speed of the synchro scan. The – button decreases shutter speed; the + button increases shutter speed.

If you shoot a PC monitor, for example, you should adjust shutter speed so that the horizontal bars in the viewfinder will produce less noise.

6. REC button

Pressing this button starts recording, pressing again stops recording.

This button has the same function as the 27.REC button on the handle and the VTR button at the lens.

7. SHOT MARKER button

Pressing this button while recording adds a shot mark to the thumbnail of that clip. This button also adds a shot mark to any thumbnail selected on the LCD monitor.

For more information on shot marks.

→ [Shot Mark Function] (page 46)

Also, you can use this button as the USER3 button for menu settings.

→ [Assigning Functions to USER Buttons] (page 55)

8. Text memo button

Records a text memo if pressed during recording or playback or when playback is paused.

→ [Text Memo Function] (page 45)

Also, you can use this button as the USER4 button for menu settings.

→ [Assigning Functions to USER Buttons] (page 55)

9. MON OUT CHARACTER switch

This switch controls the superimposition of characters onto the video output from the MON OUT connector.

ON: Characters are superimposed.

OFF: Characters are not superimposed.

→ [Settings of signals output from MON OUT connector] (page 89)

10. REW (rewind) button

During pause, this button performs a fast-reverse playback with the lamp blinking.

During playback, it performs an approximately 4× fast-reverse playback with the PLAY and REW lamps blinking.

If this button is pressed when playback is paused, the start of the clip being played back is located in pause mode.

11. STOP button

This button stops playback.

Also, press this button when you stop interval recording or one-shot recording, or when you quit consolidating clips once in ONE CLIP REC mode.

12. FF (fast forward) button

During pause, this button is used to perform fast playback with the lamp blinking.

During playback, it performs an approximately 4× fast playback with the PLAY and FF lamps blinking.

If this button is pressed when playback is paused, the start of the next clip is located in pause mode.

13. PLAY/PAUSE button

This button is used to view playback using the viewfinder screen or a color video monitor. The lamp comes on when playback starts.

In playback mode, this button pauses (PLAY/PAUSE) playback with the lamp blinking.

14. P2 CARD ACCESS LED

This LED indicates the recording and playback status of each card.

→ [P2 CARD ACCESS LED and Status of P2 cards] (page 33)

15. REMOTE (remote control) connector

Connect the AJ-RC10G remote control unit (optional).

→ [Connection of the remote control unit (AJ-RC10G)] (page 143)

You can also remote control part of the functions by connecting the AG-EC4G extension control unit (optional).

→ [Connection of the extension control unit (AG-EC4G)] (page 145)

16. SD memory card insertion slot

An SD memory card (optional accessory) is inserted here. Use the SD memory card for recording/calling the settings menu and lens files for this unit, and also uploading metadata, etc.

◆ Notes

<Cautions in using SD memory cards>

- Use the unit by inserting an SD memory card that is compliant with the SD standard or the SDHC standard.
- MMC (MultiMediaCards) cannot be used. (Bear in mind that taking pictures may no longer be possible if you do use them.)
- If you intend to use miniSD/microSD cards in camera-recorder, always install the adapter specially designed for miniSD/microSD cards. (The unit will not work properly if only the miniSD/microSD card adapter is installed. Make sure that the card has been installed in the adapter before using it.)
- Use of Panasonic's SD memory cards and miniSD/microSD cards is recommended. Be sure to format cards using camera-recorder.
- Any SD memory card with the following capacities (8 MB to 2 GB) and any 32 GB SDHC memory card can be used with the unit.
- For the latest information not available in the operating Instructions, visit the P2 Support Desk at the following Web sites.

<http://pro-av.panasonic.net/>

- The SDHC card conforms to a new standard for memory cards with a large capacity of more than 2 GB which was established by the SD Association in 2006.

17. BUSY (operation mode display) lamp

This lamp indicates the active status of the SD memory card.

It stays illuminated when the card is active.

◆ Note

While the lamp is on, do not insert or remove the card. The SD memory card might break.

18. Focal plane index (ϕ)

This symbol indicates the focal plane of the CCD sensor.

It provides a reference for making accurate focal distance measurements from the subject.

19. MARKER SEL, MODE CHK / MENU CANCEL switch

This is the dual purpose spring switch for MARKER selection and MODE CHECK/MENU CANCEL.

When you press this switch on the side of this unit, the marker displayed by the viewfinder changes. Press this button on the side of this unit to switch the information display screen for A and B, the two types of markers set with the menu, A (A marker display) → B (B marker display) → OFF (no marker display). When the power is turned on, the last selected indication before power-down appears.

→ [Marker Check Screen Displays (MARKER SELECT button function)] (page 86)]

When you pull this button toward you, a six screen display for camera setting status (STATUS screen display, !LED screen display, FUNCTION screen display, AUDIO screen display, CAC screen display, USER SW screen display) switch sequentially on the viewfinder.

The camera output signal is not affected. The display goes out in about 5 seconds. When the selected screen is displayed, the display will continue while you press the button.

While displaying the menu, this button works as a switch to cancel changed setting values.

20. Gain selector switch

Use this switch to select video amplifier gain, according to lighting conditions under which you are shooting. The values for L, M, and H can be preset using menu options.

These are factory-set to 0 dB for L, 6 dB for M, and 12 dB for H.

21. OUTPUT/AUTO KNEE selector switch

Used to select the video signals sent from the camera unit to the memory, viewfinder and video monitor.

CAM. AUTO KNEE ON:

Video being recorded through the camera is sent with the auto knee circuit activated.

It is also possible to assign the DRS (Dynamic Range Stretcher) function instead of the AUTO KNEE function.

CAM. AUTO KNEE OFF:

Video being recorded through the camera is sent in manual knee mode.

BARS:

Color bar signal is output. The AUTO KNEE circuit does not work.

You can select between four types of color bar signal. → [COLOR BARS] (page 184).

◆ Note

With the factory settings, TEST TONE is output to all 4 channels of audio when OUTPUT/AUTO KNEE switch is set to [BARS] and CH1 of AUDIO IN switch is set to [FRONT].

The output method of TEST TONE can be changed in the TEST TONE menu option.

→ [TEST TONE] (page 190)

Auto Knee function

Usually, when you adjust levels to shoot people or scenery against a strongly lit background, the background will be totally whited-out, with buildings and other objects blurred. In this case, the AUTO KNEE function reproduces the background clearly. This function is effective when:

- The subject is a person positioned in the shade under a clear sky.
- The subject is a person inside a car or building, and you also want to capture the background visible through a window.
- The subject is a high-contrast scene.

22. WHITE BAL (white balance memory selector) switch

Used to select the white balance adjustment method.

PRST: Use this when you have no time to adjust the white balance.

The value for the white balance is factory-set to 3200 K.


It can be changed to any color temperature using a menu option.

→ [Setting Color Temperature Manually] (page 51).

A or B: Pressing the 4. AUTO W/B BAL Switch toward [AWB] automatically adjusts the white balance, saving the adjusted value in Memory A or B.

Also, with menu settings you can assign B to auto tracking white balance (ATW) of the auto tracking mode.

→ [Adjusting the White Balance] (page 49).

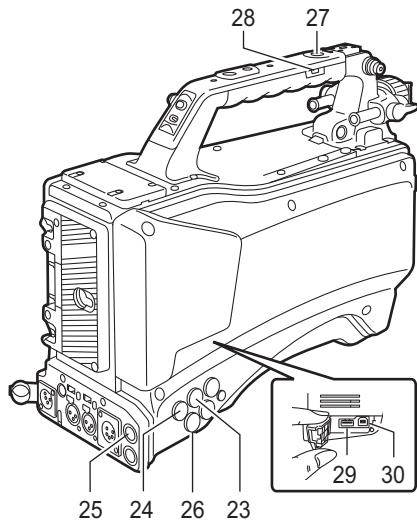

23. GENLOCK IN connector

When GENLOCK is set on the camera, or when the time code is externally locked, reference signals are input. Also, you can check the return video signal on the viewfinder screen by inputting an HD-Y signal, and selecting HD-Y with the RETURN SIGNAL menu option. You can select the RETURN SIGNAL menu option from the <GENLOCK> screen of the SYSTEM SETTING page.

→ [Setting External Reference Signal and GENLOCK] (page 61)]

24. SDI IN connector

You can input HD/SD SDI signals. By selecting "SDI" with the REC SIGNAL menu option, you can record signals from this input connector.

You can select the REC SIGNAL menu option from the <SYSTEM MODE> screen of the SYSTEM SETTING page.

Also, you can set GENLOCK on the menu based on this input signal.

→ [Setting External Reference Signal and GENLOCK] (page 61)]

◆ Note

When inputting HD SDI signals use a cable above 5C-FB.

25. SDI OUT connector

This is the dedicated SDI output connector. The same signal format as the SYSTEM MODE is output. Down convert and up convert are not supported.

You can independently set character superimposition with the 26.MON OUT (monitor output) connector.

→ [Settings of signals output from SDI OUT connector] (page 88)

◆ Note

When inputting HD SDI signals use a cable above 5C-FB.

26. MON OUT (monitor output) connector

This is the video output connector for the monitor.

According to the MONITOR OUT MODE menu option, images independent of SDI OUT can be output. Also, with the menu settings, HD-SDI or down converted SD-SDI or VBS can be selected. Up convert is not supported.

You can select the MONITOR OUT MODE menu option from the <OUTPUT SEL> screen of the SYSTEM SETTING page.

You can set character superimposition with the 9.MON OUT CHARACTER switch separately from the 25.SDI OUT connector.

→ [Settings of signals output from MON OUT connector] (page 89).

◆ Note

When inputting HD SDI signals use a cable above 5C-FB.

27. REC button

Pressing this button starts recording, and pressing again stops recording.

This button has the same function as 6.REC button and the VTR button at the lens.

It may be disabled with 28.REC protection button.

28. REC protection button

This button disables 27.REC button on the handle.

ON: The REC button is enabled.

OFF: The REC button is disabled.

29. USB 2.0 connector (HOST)

30. USB 2.0 connector (DEVICE)


A USB 2.0 cable is connected here.

When the menu option PC MODE is set to "ON", data can be transferred via USB 2.0. During such data transfer, recording, playback or operations of clips is permitted.

The menu item PC MODE is found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.

→ [Connection with external devices using the USB 2.0 port] (page 136)

Menu Operation Section

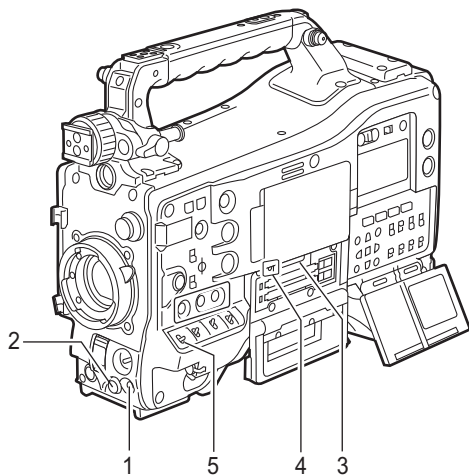

1. MENU button

Used to turn on/off the menu.

2. JOG dial button

With the menu open, this button is used to navigate through menu pages, select options and specify values.
→ [Setting Menu Options] (page 160)

3. SD memory card insertion slot

An SD memory card (optional accessory) is inserted here. It is used when writing or saving menu data or lens files on an SD memory card.

4. BUSY (operation mode display) lamp

This lamp indicates the active status of the SD memory card.
It stays illuminated when the card is active.



◆ **Note**

While the lamp is on, do not insert or remove the card. The SD memory card might break.

5. MARKER SEL, MODE CHK / MENU CANCEL switch

If you pull the button toward you while changing menu option settings, you can revert to values before the change.

Time Code Section

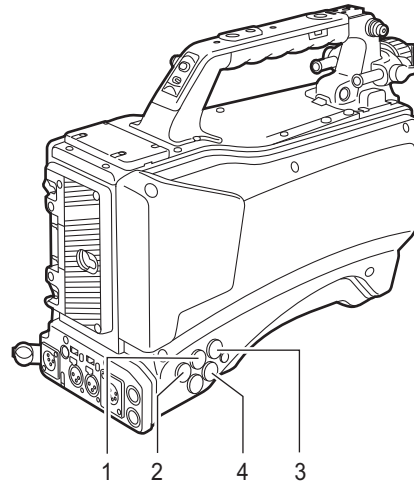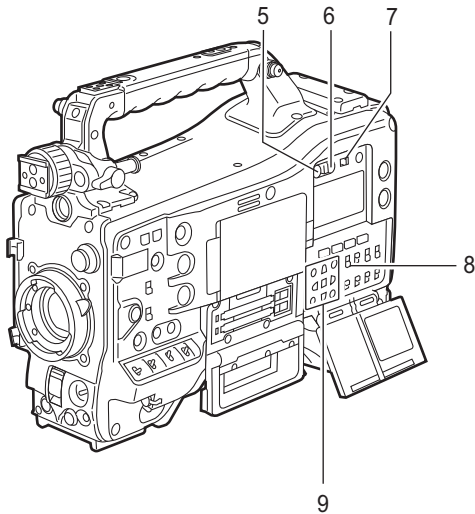

1. GENLOCK IN connector (BNC)

This connector is used to input a reference signal before the camera unit is gen-locked, or before the time code is externally locked.

→ [Externally Locking the Time Code] (page 68)

2. SDI IN connector (BNC)

When GENLOCK is set on the camera, or when the time code is externally locked, reference signals are input.

→ [Externally Locking the Time Code] (page 68)

◆ Note

Input SDI signal must be the same format selected on the system mode menu of this unit.

3. TC IN connector (BNC)

This connector is used to input a reference time code when you externally lock the time code.

→ [Externally Locking the Time Code] (page 68)

4. TC OUT connector (BNC)

When you inter-lock the time code of camera-recorder with that of an external device this must be connected with the time code input (TC IN) connector of the external device.

→ [Externally Locking the Time Code] (page 68)

5. HOLD button

Pressing this button freezes the time data indication on the counter. Note that time code generation continues. Pressing the button again reactivates the counter.

This function is used to ascertain the time code or CTL count of a particular recorded scene.

6. RESET button

This button resets the time data (CTL) on the counter to "00:00:00:00".

If this button is pressed when with the 8.TCG (time code selector) switch positioned at [SET], time code and user bits data are reset to 0, and real-time data is reset to the initial value.

7. DISPLAY (counter display selector) switch

Indications of the time code, CTL and user bits on the counter of the display window depend on the positions of this switch and the 8.TCG (time code selector) switch. Pressing the 5.HOLD button also displays Date/Time/Time Zone.

UB: User bits/DATE/TIME/Time zone indicated.

TC: Time code indicated.

CTL: CTL indicated.

8. TCG (time code selector) switch

This switch is used to specify the stepping mode for the built-in time code generator.

F-RUN: Select this position to continuously advance the time code independently of the P2 card recording status.

Use this mode to synchronise the time code with the time of day, or to externally lock the time code.

SET: Select this position to set the time code and/or user bits.

R-RUN: Select this position to advance the time code only during recording.

For spliced scenes recorded on P2 cards, the sequence of time codes is unbroken.



9. CURSOR and SET buttons

Use these buttons to set the time code and user bits.

The four triangular buttons are the CURSOR buttons, and the center rectangular one is the SET button.

→ [Setting Time Data] (page 62)

Warning and Status Display Functions

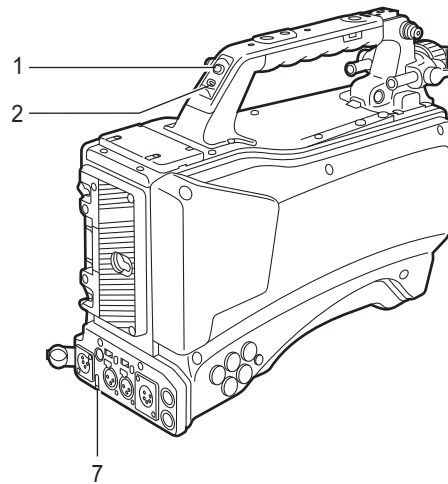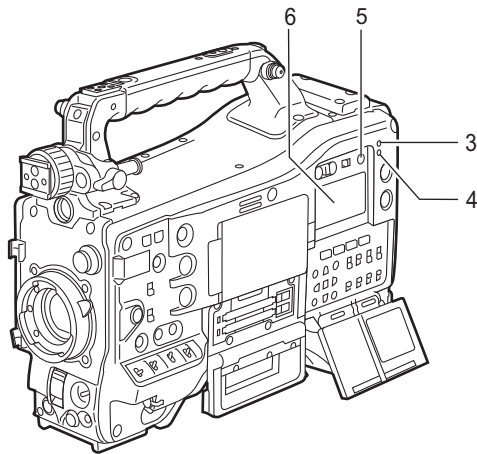

1. Back tally lamp

When the 2.BACK TALLY switch is set to [ON], the lamp behaves in the same way as the front tally lamp at the viewfinder.

2. BACK TALLY switch

This switch controls the action of the 1.back and 7.rear tally lamps.

ON: Back and rear tally lamps enabled.

OFF: Back and rear tally lamps disabled.

3. WARNING lamp

This lamp starts blinking or lights up if something unusual occurs in the memory.

4. USB lamp

Stays on when the camera-recorder is in USB mode.

5. LIGHT button

Use this button to control illumination of the display window.

Alternately pressing this button toggles illumination of the 6.Display window on or off.

6. Display window

This window displays warnings, battery-remaining level, sound volume, time data, and other information.

◆ Note

When the battery is installed, the camera-recorder indicates the data even if the power is turned off. To turn off the data indications to keep the battery from being discharged, specify OFF for the menu item P. OFF LCD DISPLAY. The menu item P. OFF LCD DISPLAY is found in the <TC/UB> screen on the MAIN OPERATION page.

7. Rear tally lamp


When the 2.BACK TALLY switch is set on [ON], the rear tally lamp behaves in the same way as the back tally lamp.

Display Window Functions

P2 card/battery-remaining level indications

Media-remaining space indication bar

The bar indicates the remaining free space on each P2 card, using a seven-segment display. Each segment can represent either three or five minutes of remaining free space, depending on the value set through the menu option CARD REMAIN/■. According to the set value, the segments disappear one-by-one. The menu option CARD REMAIN /■ can be found in the <BATTERY/P2CARD> screen on the MAIN OPERATION page.

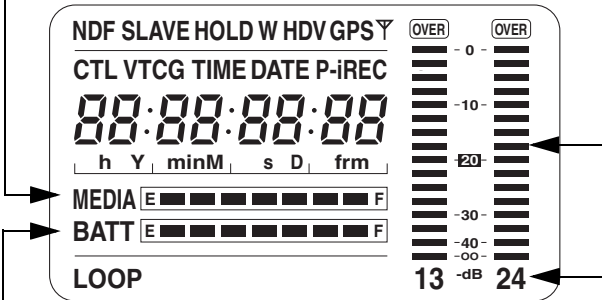

Battery-remaining level indication bar

For a battery with a digital indicator (percentage indication), if the remaining level of the battery is higher than 70%, all seven segments up to the "F" position are lit. When the remaining level falls below 70%, the segments go out one-by-one for each drop of 10%. All seven segments can be set to light up when the battery-remaining balance is 100%. To do so select "100%" for the menu item BATT REMAIN FULL. The menu item BATT REMAIN FULL is found in the <BATTERY/P2CARD> screen on the MAIN OPERATION page.


Audio channel level meter

When the MONITOR SELECT CH1/2 / CH3/4 switch is set to [CH1/2], the meter indicates 1 and 2 as the audio channel numbers, together with their audio levels. When the switch is set to [CH3/4], the meter indicates 3 and 4 as the audio channel numbers, together with their audio levels.

Memory action status indication

Error Code Indication

→ [Warning System] (page 153)

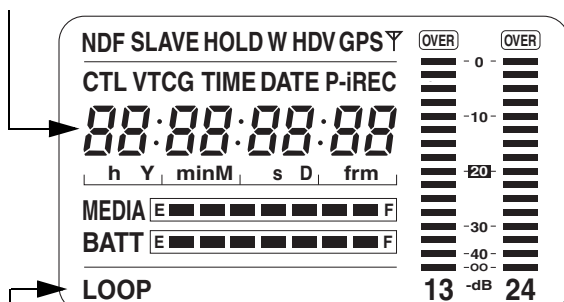


Information indication

LOOP: Stays illuminated in LOOP REC mode.
→ [Loop Recording] (page 39).

Mode indication

W: Stays illuminated when the camera-recorder operates in SD mode (480-59.94i, 576-50i) and is set to 16:9 mode.
HD: Stays illuminated when the camera-recorder is in HD mode (1080i).
DV: Stays illuminated when the recording/playback format is DV.
GPS: Stays illuminated when radio waves are not received during GPS operation.
GPS Y: Stays illuminated when radio waves are received during GPS operation.
P-REC: Stays illuminated when the PRE REC MODE is set to ON, and blinks when recording is continued after the recording tally lamp has gone out. The menu item PRE REC MODE is found in the <REC FUNCTION> screen on the SYSTEM SETTING page.
iREC: Remains illuminated during INTERVAL REC mode recording, and blinks during a pause.
i: Blinks when INTERVAL REC mode is selected.

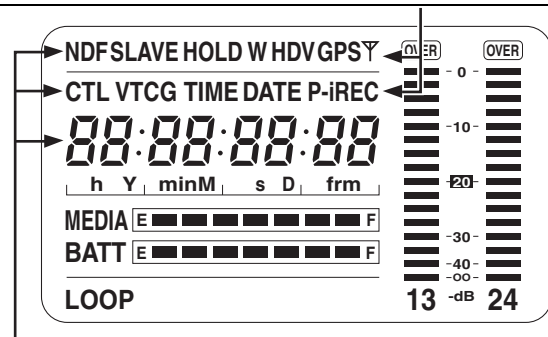

Time code indication

NDF: Stays illuminated when the time code is in non-drop frame mode.
DF: Stays illuminated when the time code is in drop frame mode.
SLAVE: Stays illuminated when the time code is externally locked.
HOLD: Stays illuminated when the time code generator/reader value is frozen.
CTL: Stays illuminated when the DISPLAY switch is positioned at [CTL] to display the CTL count.
TCG: Stays illuminated when the DISPLAY switch is positioned at [TC] (or [UB]) to display the TC (or UB) generator value.
TC: Stays illuminated when the DISPLAY switch is positioned at [TC] (or [UB]) to display the TC (or UB) reader value.
VTCG: Stays illuminated when the DISPLAY switch is positioned at [UB] to display the VIUB generator value.
VTC: Stays illuminated when the DISPLAY switch is positioned at [UB] to display the VIUB reader value.
TIME: Stays illuminated when the DISPLAY switch is positioned at [UB] to display the real-time hour, minute and second.
DATE: Stays illuminated when the DISPLAY switch is positioned at [UB] to display the real-time date.

No Indication:

The CTL, VTCG, TIME, and DATE stay off when the DISPLAY switch is positioned at [UB] to display real time, time zone, hour and minute.


Time count indication:

The time code, CTL, user bits and real time are shown.

◆ Note

When the DISPLAY switch is positioned at UB, each press of the HOLD button changes the indication through VTCG (VTC) → DATE → TIME → No Indication (Time Zone) → TCG (TC), in that order.

LCD Monitor

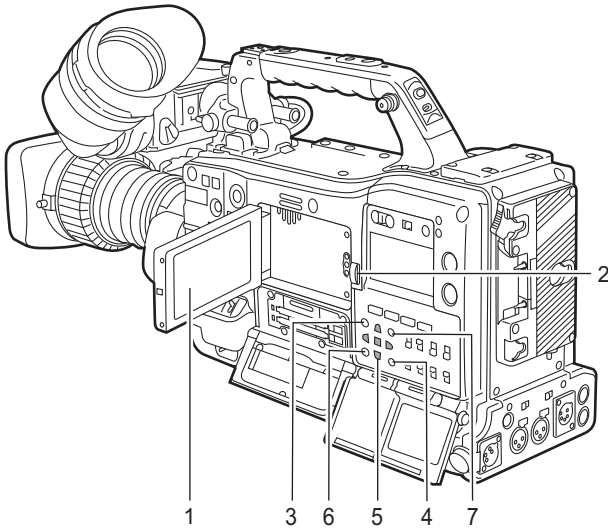

1. LCD monitor

The LCD monitor displays the video in the viewfinder. Alternatively, it can show clips on the P2 card in a thumbnail format. In thumbnail display mode, clips can be edited or deleted, or P2 cards can be formatted using the 4.THUMBNAIL MENU button and 5.CURSOR and SET buttons.

◆ Notes

- The image quality displayed with this monitor is different from the image quality actually recorded/output from this unit. Be careful especially when setting the menu item SYSTEM MODE of this unit to “480/59.94i” and “576/50i”. The menu item SYSTEM MODE is found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.
- The image in the monitor is disrupted momentarily when the SYSTEM MODE menu item is set to “480/59.94i” or “576/50i”, and the image is switched between the camera image and playback image, but this is not a malfunction.
- An image may freeze onto the LCD display for a while when the battery is removed or the external DC power supply is unplugged while the power is still on, but this is not a malfunction. It will disappear after a while if left as it is.
- Residual images may seem to increase when the temperature is low, but this is not a malfunction.

2. OPEN button

Used to open the LCD monitor.

3. THUMBNAIL button

This button switches the content on the 1.LCD monitor from the video in the viewfinder to clip thumbnails. Another press switches them back to the video from the viewfinder.

Note that this switchover is not performed during a recording or playback.

4. THUMBNAIL MENU button

In thumbnail display mode, this button allows you to manipulate the thumbnail menu (e.g., to delete clips).

5. CURSOR and SET buttons

The four triangular buttons are the CURSOR buttons, and the center rectangular one is the SET button. They are used to select a thumbnail and manipulate the thumbnail menu.

→ [Manipulating Clips with Thumbnails] (page 118).

6. EXIT/CANCEL button

Used to return the display to the previous state when the thumbnail menu or the property screen is displayed.

Also, when you press the button while pressing the SHIFT button, it cancels. It is convenient when canceling clip selection status for a batch.

7. SHIFT button

Use by pressing at the same time as other buttons.

- SHIFT button + cursor button (Δ/∇)
On the thumbnail screen, moves the pointer to the first or last thumbnail of the clip.
- SHIFT button +SET button
Selects all clips from the clip just selected up to the cursor position.
- SHIFT button +EXIT/CANCEL button
Operates the cancel function.
→ [EXIT/CANCEL button] (page 29)

Operations while pressing the SHIFT button are displayed below each button.

Viewfinder

An HD viewfinder can be used with this unit. It is recommended to use the optional AJ-HVF21KG or AJ-CVF100G (59.94/50 Hz switching). (●: the finder shows nothing on a black screen)

Mode	Video seen through viewfinder	HD viewfinder
HD	Video from camera	○
	Playback	○
	Return video (HD-Y)	○
	HD-SDI input (HD)	○
SD	Video from camera	○ ^{*1}
	Playback	○ ^{*2}
	Return video (VBS)	●
	HD-SDI input (SD ^{*3})	○

Each viewfinder shows return signals and SDI input signals in the recording formats assigned to the camera-recorder.


*1 HD Signals.

*2 The image in the viewfinder is disrupted momentarily when the SYSTEM MODE menu item is set to "480/59.94i" or "576/50i", and the image is switched between the camera image and playback image, but this is not a malfunction. The SYSTEM MODE menu option can be selected from the <SYSTEM MODE> screen on the SYSTEM SETTING page.

*3 Image may be disrupted in a vertical direction when the return video image of the SDI input signal is displayed on the viewfinder with the SYSTEM MODE menu option set to "480-59.94i" or "576-50i" and the GENLOCK menu item set to "INT". This is not a malfunction, but the disruption can be cleared by selecting "SDI IN" in the GENLOCK menu option. The GENLOCK menu option can be selected from the <GENLOCK> screen on the SYSTEM SETTING page.

For details, please refer to the operating instructions for each viewfinder.

AJ-HVF21KG

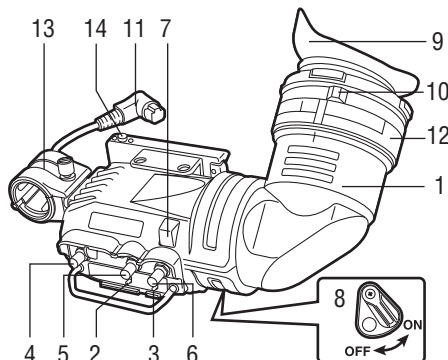

1. Viewfinder (optional accessory)

During recording or playback, the viewfinder displays the video image in monochrome. It also displays warnings, messages, zebra patterns, markers (safety zone and center markers), etc.

2. ZEBRA (zebra pattern) switch

This switch is used to display the zebra pattern in the viewfinder.

ON: Zebra pattern displayed.

OFF: No zebra pattern displayed.

3. TALLY switch

Used to control the 7.Front tally lamp.

HIGH: Front tally lamp brightly illuminated.

OFF: Front tally lamp stays off.

LOW: Front tally lamp dimly illuminated.

4. PEAKING control

Used to adjust the outlines of the video image in the viewfinder for easier focusing. This does not affect the signal output from the camera.

5. CONTRAST control

Used to adjust the contrast of the video image in the viewfinder. This does not affect the signal output from the camera.

6. BRIGHT control

Used to adjust the brightness of the video image in the viewfinder. This does not affect the signal output from the camera.

7. Front tally lamp

This lamp is activated when the 3.TALLY switch is positioned at [HIGH] or [LOW], and stays on during recording. It also blinks in synchronisation with the REC lamp in the viewfinder, and provides alerts.

Use the TALLY switch to change the intensity of the lamp to ([HIGH] or [LOW]).

8. Back tally lamp

This lamp stays illuminated during shooting. It also blinks in synchronisation with the REC lamp in the viewfinder, and provides alerts.

When the lever is positioned at [OFF], the back tally lamp is hidden.

9. Eyepiece

◆ Note

Do not leave the eyepiece aimed at the sun. Doing so may damage the internal components.

10. Diopter adjustment ring

Use this to make adjustments in line with your diopter, in order to obtain optimum clarity in the viewfinder image. The adjustable range of the viewfinder view angle is shown in the following table.

Product Number	Adjustable range
AJ-HVF21KG	-0.9 D to -4.4 D

For an eyepiece for presbyopia, consult the dealer.


11. Connecting plug

12. Locking ring

13. Microphone holder

14. Viewfinder stopper

Used to attach or remove the viewfinder.

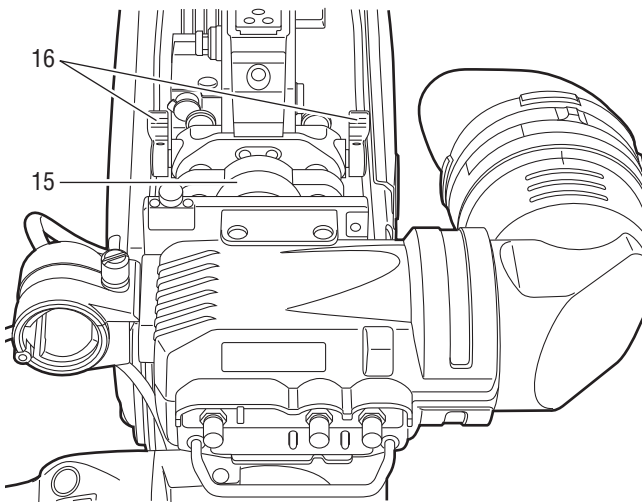

15. Viewfinder left-right position anchoring ring

Used to adjust the side-to-side position of the viewfinder.


16. Viewfinder front-back position anchoring lever

Used to adjust the fore-and-aft position of the viewfinder.

◆ Note

For more information, see the instruction manual for the viewfinder.

If, when fitting a large lens, there is insufficient space between the top of the lens and the bottom of the viewfinder, the positions of the slide rails can be shifted upwards slightly by repositioning the screws.

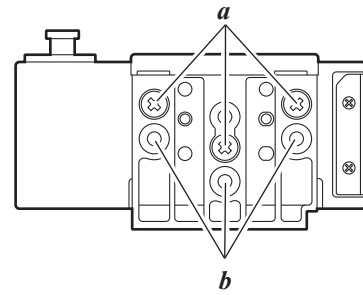

a. Conventional screw positions

b. Reposition and fix 3 screws here to raise the slide rail by approximately 8 mm.

Recording and Playback

P2 Cards


Inserting P2 Cards

◆ Note


When using the camera-recorder for the first time, be sure to set the time data beforehand.

→ On how the time data is set, see [Setting Time Data] (page 62).


1 Turn on the POWER switch.

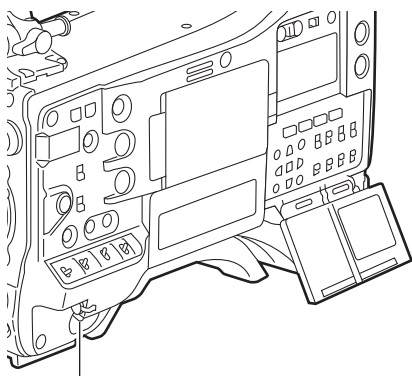

2 Open the card slot cover.

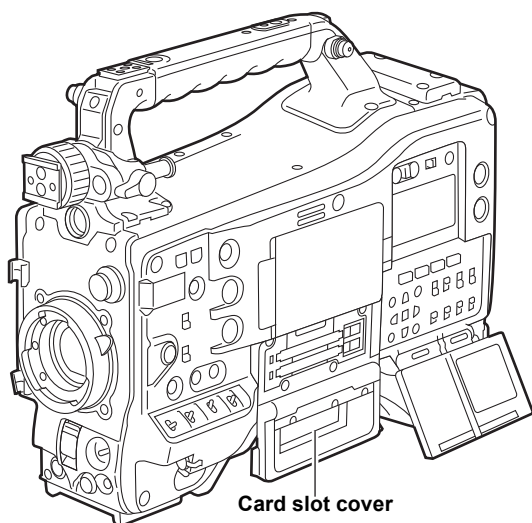


3 Insert a P2 card into the P2 card slot until the EJECT button pops up.

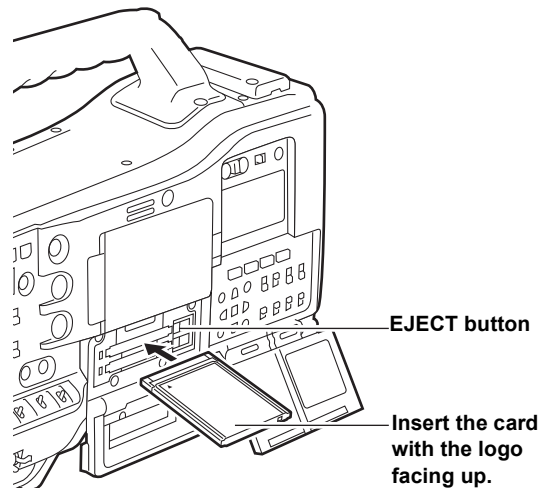

4 Push the eject button that pops up to the right.

Insert a P2 card into camera-recorder. The P2 CARD ACCESS LED for the appropriate slot indicates the status of the P2 card.

→ [P2 CARD ACCESS LED and Status of P2 cards] (page 33).

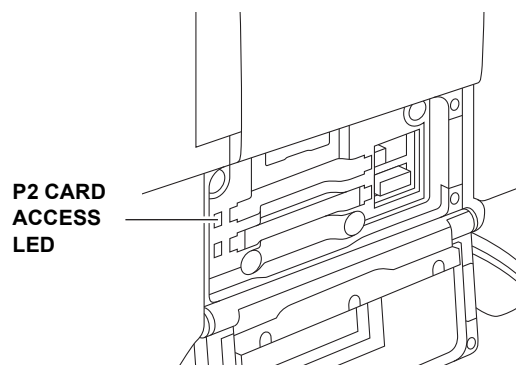


5 Close the slot cover.

◆ Notes

- To prevent cards from falling out, dust from entering and reduce the risk of exposure to static electricity, close the card slot cover before moving the camera.
- Format P2 cards only on a P2 card device.

Removing P2 Cards

- 1 Open the card slot cover.
- 2 Raise the EJECT button.
- 3 Then, depress the EJECT button to release the P2 card so that you can remove it.

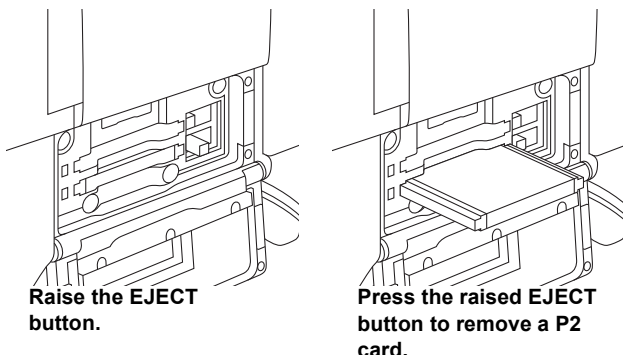

◆ Notes

- After insertion, do not remove the P2 card while it is being accessed or recognized (the P2 card access LED flashes orange), or the P2 card may fail. If your unit is not set to turn on the P2 CARD ACCESS LED, before removing the card ensure that PRE-RECORDING have finished after stopping recording or playback.
- If a P2 card being accessed is removed, the viewfinder displays "TURN POWER OFF" and camera-recorder gives a warning using an alarm and the WARNING LED. In addition, all P2 CARD ACCESS LEDs blink rapidly in green. If this is the case, turn the power off.
→ For more information on warning indications, see [Warning System] (page 153).
- If a P2 card is removed while being accessed, clips on it may become irregular. Check the clips and restore them if required.
→ For more information about how to restore clips, see [Restoring Clips] (page 126).
- If a P2 card being formatted is removed, it may be not be formatted properly. In this case, the viewfinder displays "TURN POWER OFF". If this message appears, turn off the power, then restart camera-recorder to reformat the card.
- If a P2 card is inserted while another P2 card is being played back, the inserted P2 card is not recognised and the P2 CARD ACCESS LED for that card does not come on. Card recognition starts when the playback ends.
- Even if a P2 card is inserted in a vacant slot while recording, the media may not be recognized during the following times:
 - ◆ Immediately after PRE-RECORDING
 - ◆ Immediately before or after switching from the first P2 card for recording to the second one, when data are recorded on multiple cards spanning from one to the other (hot-swap recording)

<For Your Information>


The P2 CARD ACCESS LEDs may be set to stay off using the menu option ACCESS LED. The menu item ACCESS LED is found in the <OPTION MODE> screen on the SYSTEM SETTING page.

To Prevent Accidental Erasure of P2 Card Content

To prevent the content of a P2 card being accidentally erased, position the write-protect switch on the P2 card at [Protect].

◆ Note

Write-protect switchover can be performed while the card is being accessed (during recording or playback), but does not take effect until access to the card ceases.

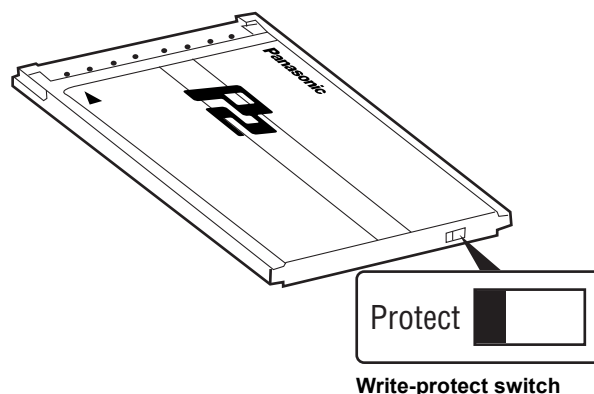

Write-protect switch

P2 CARD ACCESS LED and Status of P2 cards

P2 CARD ACCESS LED	MODE CHECK indication*	Status of P2 Card
Stays on in green	ACTIVE	Writing and reading enabled
Stays on in orange	ACTIVE	Writing and reading enabled. The card is recordable (LOOP REC also enabled).
Blinks in orange	ACCESSING	Writing or reading being performed.
Blinks rapidly in orange	INFO READING	Recognising the P2 card.
Blinks slowly in green	FULL	The P2 card has no free space. Only reading is enabled.
	PROTECTED	The write-protect switch on the P2 card is positioned at [PROTECT]. Only reading is enabled.
Stays off	NOT SUPPORTED	The card is not supported by your unit. Replace the card.
	FORMAT ERROR	The P2 card is not properly formatted. Reformat the card.
	NO CARD	No P2 card is inserted.


* The mode check indication is shown in the viewfinder.
→ [Viewfinder Status Indication Layout] (page 76).

How to handle data recorded on P2 cards

The P2 card is a semiconductor memory card that is used as the recording medium in the professional video production and broadcasting devices that make up the DVCPRO P2 Series.

- Since data recorded in the DVCPRO P2 format or AVC-Intra are in a file format, they have excellent compatibility with PCs. The file structure is a unique format, which in addition to video and audio data in MXF files contains various other important information items. The folder structure links the data as shown on the right.

Changing or deleting just one information component could make it impossible to recognize the data as P2 data or use the card in a P2 device

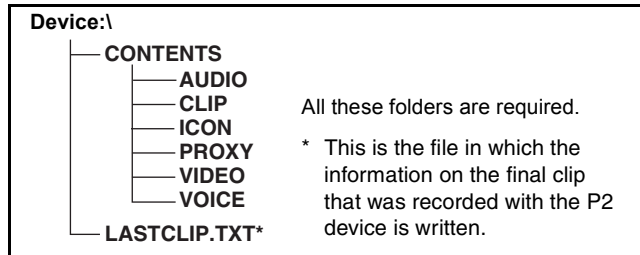

- When transferring data from a P2 card to a PC, or when rewriting data saved on a PC to a P2 card, to prevent data loss be sure to use the special P2 Viewer software. Download it from the following website. You can also visit the support desk at the following website for details on the system requirements of P2 Viewer.

<http://pro-av.panasonic.net/>

- When using regular IT tools such as Microsoft Windows Explorer or Apple Finder to transfer data to a PC, follow the instructions below. However, be sure to use the P2 Viewer when returning data to a P2 card.
 - ◆ Transfer the corresponding CONTENTS folder and LASTCLIP.TXT file together as a set. Do not transfer individual files from the CONTENTS folder. When copying, copy the LASTCLIP.TXT file at the same time as the CONTENTS folder.
 - ◆ When transferring multiple P2 cards to a PC, create a folder for each P2 card to prevent clips with the same name from being overwritten.
 - ◆ Do not delete data from the P2 card.
 - ◆ Before using a P2 card, be sure to format it with a P2 device.

Basic Procedures

This section describes the basic procedure for shooting and recording. Before you embark on a shoot, pre-inspect your system to ensure that it works properly.

* For directions on inspecting your memory card camera-recorder, see [Inspections Before Shooting] (page 146).

Battery Set-up to P2 card Insertion


- 1 Insert a charged battery pack.**
- 2 Turn on the POWER switch and ensure that more than four segments of the battery-remaining amount indication bar are illuminated.**

If the number of illuminated segments is fewer than five, first check the battery placement. If placement is not the problem, replace the battery with a fully charged one.
- 3 Insert a P2 card and ensure that the P2 CARD ACCESS LED stays on in orange or green. Then, close the card slot cover.**

When more than one P2 card slot contains a P2 card, the card in the slot with the lowest number is used first. However, regardless of slot number, a P2 card inserted later will not be accessed until the other cards have been used.

Example:

If all 2 slots contain P2 cards, the cards are used in order of slot numbers 1→2. However, if the P2 card in Slot 1 is removed and then re-inserted, the cards will be used in the following order: 2→1.

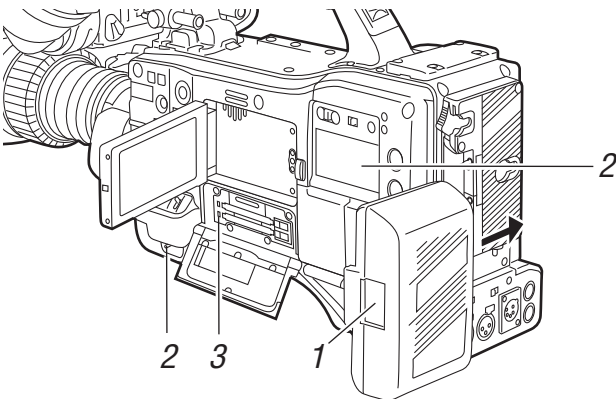

Note that the recording order is retained even if the power is turned off. When the power is next turned on, the last card written before powering-down will be the target card.

◆ Note

When "SLOT1" is selected for the menu option P.ON REC SLOT SEL, recording starts from the P2 card inserted in the smallest slot number, after the power is turned on. The menu item P.ON REC SLOT SEL is found in the <REC FUNCTION> screen on the SYSTEM SETTING page.

Switch Setting

When a battery and P2 cards are installed, set the switches as detailed below, before starting to use your unit.


Setting the switches before shooting and recording

USER MAIN:

This switch is factory-set to perform slot selection.

AUDIO SELECT

CH 1/3 / CH 2/4:
AUTO

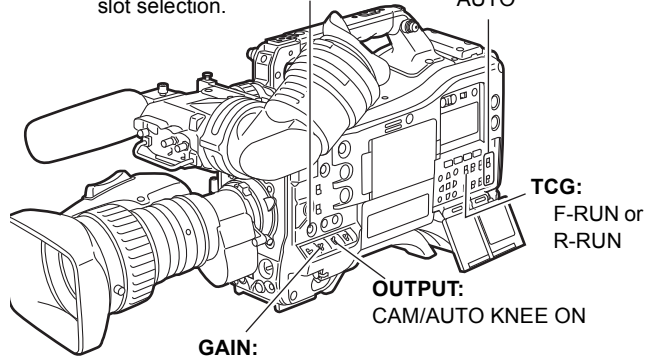

GAIN:

Normally, this should be set to 0 dB. If conditions are too dark, an appropriate gain level should be set.

◆ Notes

- The **USER MAIN** button is factory-set to perform the slot selection function, which selects the target card from among several P2 cards. When a new target P2 card is selected, the appropriate slot number appears on the P2 card remaining amount indicator in the viewfinder.
→ For more information about the indications in the viewfinder, see [Viewfinder Status Indication Layout] (page 76).
- **SLOT SEL** function is enabled during recording. Until the P2 card on which images are recorded has been switched completely, "SLOT SEL" blinks on the viewfinder. If the "SLOT SEL" operation cannot be executed for any reason, for instance immediately after starting recording or switching the P2 card on which images are recorded, "SLOT SEL INVALID" is displayed.

For shooting, follow the steps below.

1 Select a filter according to light conditions.

2 When the white balance is saved:
Position the WHITE BAL switch to [A] or [B].

When the white or black balance is not saved and you have no time to adjust the white balance:

Position the WHITE BAL switch to [PRST].
This adjusts the white balance against the filter according to the position of the FILTER control.

If the white balance is adjusted on the spot:
Position the WHITE BAL switch to [A] or [B] and shoot a white test subject so that it appears at the center of the screen. Then, follow the steps below to adjust the white balance.

1. Press the AUTO W/B BAL switch toward [AWB] to adjust the white balance.
2. Press the AUTO W/B BAL switch toward [ABB] to adjust the black balance.
3. Press the AUTO W/B BAL switch toward [AWB] to adjust the white balance again.

For directions on making adjustments, see [Adjusting the White Balance] (page 49) and [Adjusting the Black Balance] (page 52).

3 Point the camera at your subject to adjust the focus, and zoom.

4 To use the electronic shutter, set the shutter speed and operation mode.

For more information, see [Setting the Electronic Shutter] (page 53).

5 Press either the REC button to start recording.
During recording, the REC lamp in the viewfinder stays illuminated.


6 To stop recording, press either the REC button at the lens.

The REC lamp in the viewfinder goes out.

Operation Buttons

During recording, all operation buttons (REW, FF, PLAY/PAUSE, STOP) are disabled.

White/Black balance adjustment to recording completion

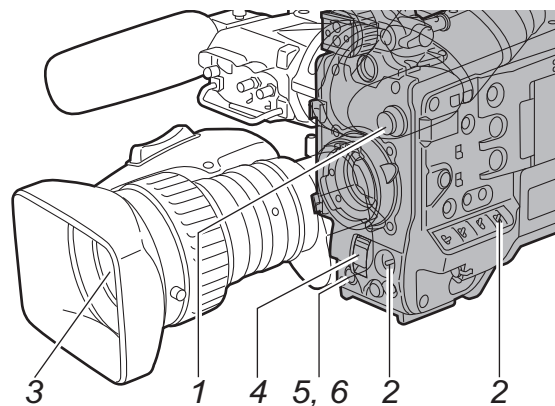

Normal Recording

REC button starts recording of video and sound on the P2 card. A cluster of data that consists of video and sound generated through a shooting action, together with such added information as meta data, is called a “clip”.

Normal Recording and Native Recording


In the unit, the camera’s recording method is selectable between the Native recording method with the frame rate unchanged and the normal recording method pulling the frame rate down to 59.94 or 50 frames.

Normal recording (Pull-down recording)

Images at 24P (23.98p: referred to as 24P) are pulled down in 2:3 mode. Images at 30P (29.97p: referred to as 30P) are pulled down in 2:2 mode and recorded as 59.94i (referred to as 60i). Images at 25P are recorded as 50i with 2:2 pulled down. 24PA (2:3:3:2 Advanced Pull down) is supported as well.

AVC-Intra does not support pull-down recording.


Example of 24P Over 60i

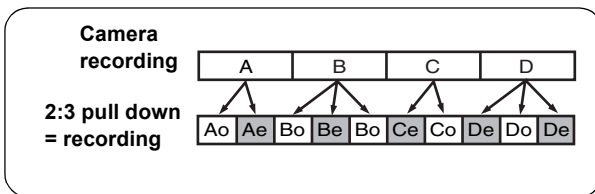

Native recording


This recording method extracts and records effective frames at the frame rates of the AVC-Intra recording in 1080i. Even in Native recording, the rate for outputting camera images and playback images is 59.94i or 50i that are pulled down.

Example of 1080-24PN (Native)

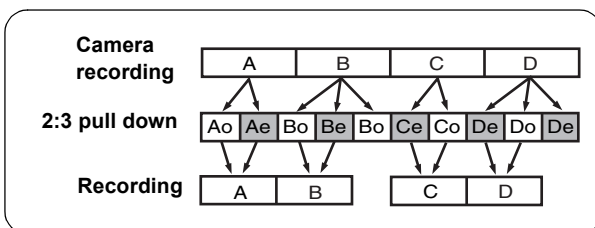

◆ Notes

- The recording will start from the top frame of a five-frame cycle for 24P/24PA recording or a four-frame cycle for 24P native recording, respectively. Therefore, the time code may be discontinued when recording clips continuously in different modes during the recording cycle.
- Even if a P2 card has just been inserted, or the power has been just turned on, you can start recording using the internal memory of camera-recorder. In this case, recording cannot be stopped until the P2 card is recognised. If the inserted card is not recognized as a recordable P2 card, the record in internal memory is instantly discarded, and the message “CANNOT REC” message is displayed on the viewfinder. Pull the MARKER SEL, MODE CHK / MENU CANCEL switch to check P2 card status (displayed in viewfinder).

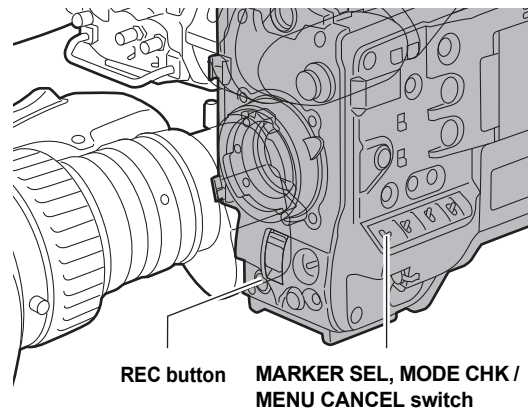

PRE-RECORDING function

The internal memory of your unit is capable of storing several seconds of video and sound data coming from the camera. This capability can be used to record video and sound several seconds before either the REC button is pressed to start recording. To use this function, the menu option PRE REC MODE must be set to "ON". The storage duration of the internal memory can be set from the menu option PRE REC TIME. These menu items are found in the <REC FUNCTION> screen on the SYSTEM SETTING page. The function of the menu option PRE REC MODE may be assigned to a desired user button by using any one of the menu options USER MAIN SW, USER1 SW, USER2 SW, SHOT MARK (USER3) SW or TEXTMEMO (USER4). These menu items are found in the <USER SW> screen on the CAM OPERATION page. These are the options for PRE REC TIME.


1-8 SEC

(When recording in DVCPRO50 in HD or SD mode)

1-15 SEC

(When recording in DVCPRO or DV in SD mode)

Specify the duration for which data may be recorded before either the REC button is pressed.

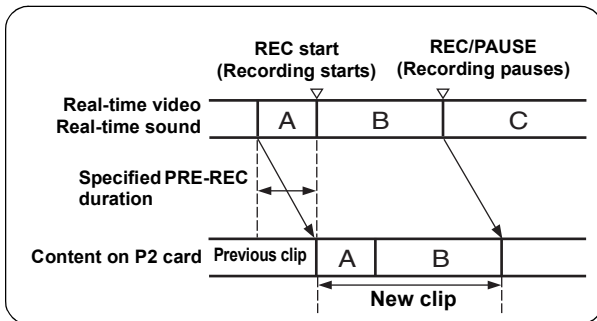


◆ Notes

- **"P-REC" indication when the "PRE REC MODE" menu option is set to OFF**
After recording is stopped, the "P-REC" indication remains displayed until all video and sound are recorded on the P2 card, even if the PRE REC MODE menu option is set to OFF.
 → For details of the [P-REC] display, refer to [29.INTERVAL REC/PRE RECORDING information display (page 81)].
In addition, this display can be turned off by configuring the P-REC/i-REC settings. The menu item P-REC/i-REC is found in the <VF INDICATOR> screen on the VF page.
- **Immediately after the power is turned on, the menu option PRE REC TIME is selected and/or the storage duration is changed, the content in internal memory will be undefined. In these situations, the video or sound will not be recorded for the duration specified, even if the REC button is pressed to start recording.**
- **A P2 card that has been just inserted takes some time to recognise. In this situation, video or sound may not be recorded for the duration specified, even if the REC button is pressed to start a recording.**
- **The internal memory does not store video or sound when a playback or recording review is being performed. For this reason, no video or sound can be recorded during such operation.**
- **When recording starts, the time code indication (TCG) may be shown as "HOLD" until the P2 card has been recognised.**
- **PRE RECORDING function does not work when recording SDI input signals and when INTERVAL REC and LOOP REC functions are working.**

Loop Recording

When two P2 card slots contain cards, this function allows the target P2 card to be switched in order. Even when the free space of a P2 card is used up, this function continues recording while erasing existing data.

To use this function, the menu option LOOP REC MODE must be set to "ON". The menu item LOOP REC MODE is found in the <REC FUNCTION> screen on the SYSTEM SETTING page.

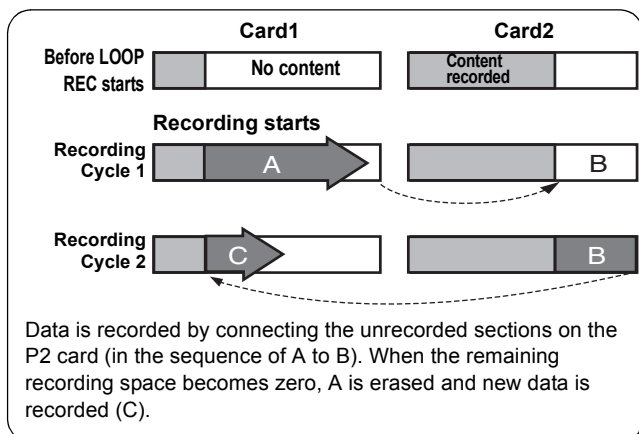

◆ Notes

- When the LOOP REC capability is used, each P2 card must have at least one minute of free space.
 - During LOOP REC, the P2 CARD ACCESS LEDs for all target P2 cards illuminate in orange. Note that if any of the target P2 card is removed, LOOP REC stops.
 - When the menu option LOOP REC MODE is set to ON, the viewfinder and display window both show "LOOP". However, when only one card is inserted, or when each card has less than one minute of free space, the LOOP REC capability does not work, even if the option LOOP REC MODE is set to ON. If this is the case, the indication "LOOP" flashes in the viewfinder and on the display window.
 - When the menu option LOOP REC MODE is set to "ON", the space remaining on the P2 card is displayed as an estimated recording time for the current recording format. When LOOP REC is stopped immediately after deleting an old recording, the actual time remaining may be shorter than the displayed time.
 - LOOP REC function does not work when:
 - ◆ the INTERVAL REC MODE menu option is set to "ON" or "ONE SHOT".
 - ◆ the ONE CLIP REC MODE menu option is set to "ON".
 - ◆ Native mode, 24P or 24PA mode is selected in the REC FORMAT or CAMERA MODE menu option.
 - ◆ the REC SIGNAL menu option is set to "SDI".
- [Recording Setting and Operation Mode] (page 46)

Terminating the LOOP REC Mode

You can terminate the LOOP REC mode by either:

- Turning off the POWER switch of camera-recorder; or
- Setting the menu option LOOP REC MODE to "OFF".

Interval Recording

It is possible to record in intervals of one frame as the shortest length by using the internal memory of the unit. To use this option, set the interval recording mode, REC TIME, PAUSE TIME and TAKE TOTAL TIME for the menu option INTERVAL REC MODE. When the settings are finalized, TOTAL REC TIME needed on the P2 card is automatically calculated and displayed. The menu item INTERVAL REC MODE is found in the <REC FUNCTION> screen on the SYSTEM SETTING page.

The following are the options for INTERVAL REC MODE:

- OFF:**
No interval recording performed.
- ON:**
Interval recording performed.
- ONE SHOT:**
Performs "one-shot" recording for the duration specified under the REC TIME option by pressing the REC button.

Shooting procedures when INTERVAL REC is ON


- 1 Following basic operations of shooting and recording according to “Basic Procedures”, lock the camera securely.**
- 2 Check that “i” is blinking in the display, and that the interval recording mode is selected.**
- 3 Press REC button.**

Interval recording starts. Recording automatically stops after the specified TAKE TOTAL TIME, and the entire recording is generated as one clip.

“i” starts blinking in the display when the interval recording mode is selected. “iREC” illuminates after recording starts. “iREC” blinks during a pause.

The display in the viewfinder is the same as that in the display window.

The tally lamp illuminates during recording. If PAUSE TIME is set at 2 minutes or longer, the tally lamp illuminates at 5-second intervals to indicate that it is paused. The tally lamp also blinks 3 seconds before recording starts.

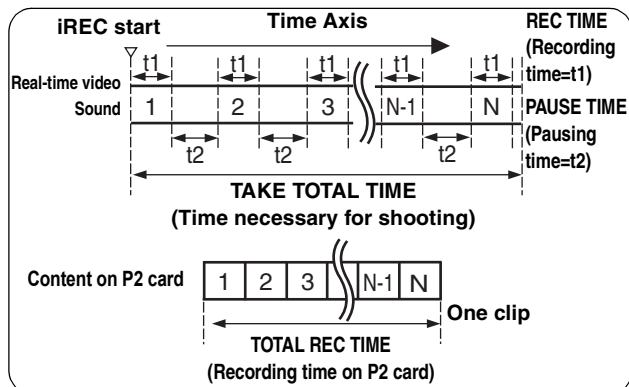

To stop recording

Press the STOP button. Recording stops. Then, the camera accesses the P2 card to record the video stored in memory before recording stops. The record from the beginning of the interval recording to the moment of pressing the STOP button is generated as one clip.

For continuous recording

Press the REC button, again. Interval recording resumes.

To stop the Interval recording mode

- Setting the menu option INTERVAL REC MODE to “OFF”.

When INTERVAL REC HOLD is set to “OFF”, the mode returns to ordinary recording mode if the POWER switch of the unit is turned OFF.

If INTERVAL REC HOLD is set to “ON”, the interval recording mode will not change even if the POWER switch is turned OFF.

Shooting procedures for the ONE SHOT mode of INTERVAL REC

After setting the ONE SHOT mode of INTERVAL REC, follow these steps:


1 Following basic operations of shooting and recording according to “Basic Procedures”, lock the camera securely.

2 Press the REC button.

- The AJ-HPX3100 automatically goes into ONE SHOT pause mode after the specified REC TIME.
- Performs recording for the duration specified under the REC TIME option by pressing the REC button, and returns to ONE SHOT pause mode.

3 Press the STOP button.

The video stored in memory are generated as one clip.

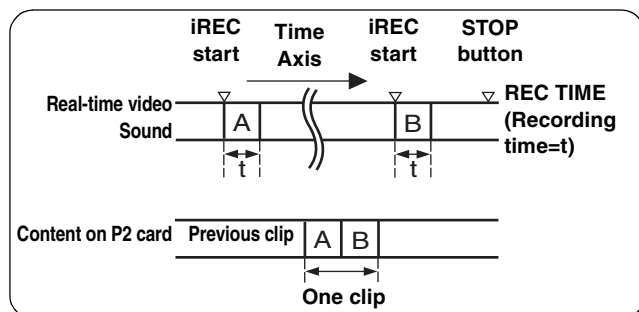

To divide clips or to change the P2 card used for recording

Even during ONE SHOT mode, clips will not be generated on the P2 card until the STOP button is pressed. Press the STOP button, and stop ONE SHOT mode operation. When replacing the P2 card, check the access LED, etc. to make sure that access has been terminated before removing the P2 card.

To stop the ONE SHOT mode of INTERVAL REC

- Set the menu option INTERVAL REC MODE to “OFF”.

When INTERVAL REC HOLD is set to [OFF], the mode returns to ordinary recording mode if the POWER switch of the unit is turned OFF.

If INTERVAL REC HOLD is set to [ON], the ONE SHOT mode will not change even if the POWER switch is turned OFF.

During INTERVAL REC mode general notes

● Sound

Interval recording does not record audio.

● Record/Playback Buttons

During interval recording, all operation buttons other than STOP (REW, FF, PLAY/PAUSE) are disabled.

● If the power is turned off during recording

If the AJ-HPX3100 is turned off during interval recording, the video stored in memory is recorded onto the P2 card, and then the camera automatically turns off.

● Time code indication

When recording starts, the time code (TCG) display may not update until the unit recognizes the P2 card.

● Removing cards

During INTERVAL REC mode operation, the P2 card access LED for the inserted P2 card blinks in orange. Do not remove the P2 card during this status. If you should remove the card accidentally, restore clips. However, even if the clips are restored, the last 3 to 4 seconds up to a maximum of about 10 seconds of the recording may be lost if the P2 card is removed while recording onto multiple P2 cards. For more information on how to fix clips, see [Restoring Clips] (page 126).

● Operating mode limitations

INTERVAL REC function does not work when:

- ♦ the LOOP REC MODE menu option is set to “ON”.
- ♦ the ONE CLIP REC MODE menu option is set to “ON”.
- ♦ Native mode, 24P or 24PA mode is selected in the REC FORMAT or CAMERA MODE menu option.
- ♦ The REC SIGNAL menu option is set to “SDI”.

→ [Recording Setting and Operation Mode] (page 46)

● Thumbnail operation and menu operation


Thumbnail operation does not work during the INTERVAL REC mode operation. Press the STOP button before operating thumbnails.

When standby time is set to 1 minute or more or when in ONE SHOT mode, the following restrictions apply even though the menu can be operated during stand-by mode.

- ♦ The respective settings or SYSTEM MODE, REC SIGNAL, REC FORMAT, CAMERA MODE, AUDIO SMPL RES, 25M REC CH SEL, and PC MODE cannot be changed.
- ♦ The respective settings for SD CARD READ/WRITE, LENS FILE CARD R/W, READ USER DATA, READ FACTORY DATA, reading SCENE FILE, and CAC FILE CARD READ cannot be executed.

ONE CLIP REC Function

This function compiles multiple recordings into a combined clip and does not isolate single recordings (from REC START to STOP) to single clips.

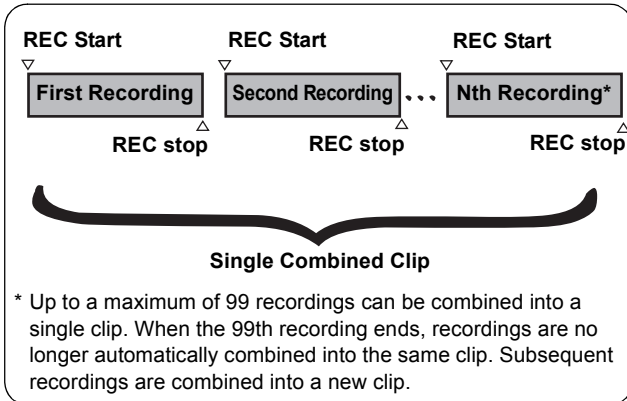

Use this function by setting the ONE CLIP REC MODE item to "ON". The menu item ONE CLIP REC MODE is found in the <REC FUNCTION> screen on the SYSTEM SETTING page.

When the ONE CLIP REC mode is selected, "1-CLIP" will display in the lower right of the viewfinder and the LCD monitor.

Start the first recording by pressing the REC button. "START 1*CLIP" will display.

Any subsequent recordings are automatically combined into the clip. Up to a maximum of 99 clips can be combined into a single clip.

Recording a New Clip

Follow the instructions below to use a new and separate clip and end combining to the clip.

- Press and hold the STOP button for about 2 seconds while recording is paused. (operating while recording is on standby)

Or

- Press and hold the REC button for about 2 seconds while recording to stop recording. (operating while recording)

Follow the instructions above to end combining to the clip. "END 1-CLIP" displays. Subsequent recordings use a new and separate clip.

◆ Notes

- In addition to the aforementioned steps, the following ends combining to the clip and subsequent recordings use a new clip.
 - ◆ When the power is turned off
 - ◆ When the P2 card with the previous recording is removed
 - ◆ When the P2 card is formatted or the clip is deleted (when the previous combined clip does not exist)
- The clip does not stop combining even when the STOP button is pressed in the Menu or on the thumbnail display.
- Pressing the STOP button of the remote control unit (AJ-RC10G) or the extension control unit (AG-EC4G) cannot quit consolidating clips.

Exiting ONE CLIP REC mode

Set the ONE CLIP REC MODE item to "OFF" in the Menu.

Cueing to the Start of the Combined Section of the Clip

A text memo can be automatically added to the start of the recording, the start of a section can be cued for playback, and the thumbnail of the location can be checked before each recording.

Automatically add a text memo to the start of the recording by setting the START TEXT MEMO item to "ON". The menu item START TEXT MEMO is found in the <OPTION MODE> screen on the SYSTEM SETTING page.

Check and playback the location of the added text memo by selecting THUMBNAIL → TEXT MEMO CLIPS from the Thumbnail Menu and moving the cursor over the desired clip.

→ [Playing back a clip at the position where a text memo is recorded] (page 124)

In addition, cue the location of the text memo for playback by setting the SEEK SELECT item to "CLIP&T". Press the FF or REW button while playback is paused. The menu item SEEK SELECT is found in the <OPTION MODE> screen on the SYSTEM SETTING page.

Precautions when in ONE CLIP REC mode

- The INTERVAL REC and LOOP REC functions cannot be used at the same time.
- This mode does not operate when the REC SIGNAL item is set to "SDI". The menu item REC SIGNAL is found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.
- The menu and thumbnail operations are restricted as follows when combining to the clip. Press and hold the STOP button for about 2 seconds to stop combining to the clip when switching to this mode.
 - ◆ The following menu items cannot be changed.
SYSTEM MODE, REC SIGNAL, REC FORMAT, CAMERA MODE, AUDIO SMPL RES, PC MODE, 25M REC CH SEL
 - ◆ The following Menu items, related to the reading/writing of the SD memory card and reading of the settings file, cannot be executed.
SD CARD READ/WRITE, LENS FILE CARD R/W, READ USER DATA, READ FACTORY DATA, Reading SCENE FILE, CAC FILE CARD READ
 - ◆ Selecting the OPERATION → COPY menu option of the thumbnail menu does not work.
- The processing time to complete the recording may take a little more time than normally to allow the clip to be combined with subsequent recordings.
- The fade process does not work on discontinuous audio during playback where the recordings are combined within the clip.
- If non-linear editing software is used on clips with multiple combined recordings, the software may not operate normally (present as of Oct 2010).
Refer to the P2 support page from the following web site for the most recent information on software that has been confirmed to work with these types of clips.

<http://pro-av.panasonic.net/>


Recording Review Function

When recording is paused, pressing the RET button automatically locates the last two seconds of video just recorded, and the viewfinder provides video playback. After playback, the camera-recorder is again ready to start recording.

The picture location/playback duration can be increased to up to 10 seconds by continuously pressing the RET button. For short clips, however, when the start of a clip is located, continuously pressing the RET button does not play back any clips before that clip.

The function of the RET button may be assigned to a desired user button by using one of the menu options USER MAIN SW, USER1 SW, USER2 SW, SHOT MARK (USER3) SW or TEXT MEMO (USER4) SW. These options can be found in the <USER SW> screen on the CAM OPERATION page.

When recording is paused, pressing the PLAY/PAUSE button plays back the last recorded clip, from the beginning. This unit enters the recording standby mode after the playback ends.

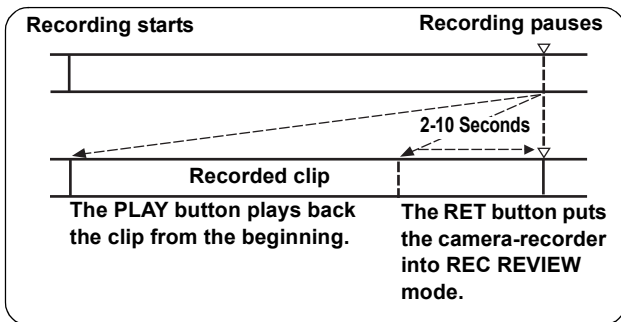

◆ Notes

- Set the menu option RET SW to "R. REVIEW". The menu item RET SW is found in the <SW MODE> screen on the CAM OPERATION page.
- When the SDI OUT MODE or MONITOR OUT MODE menu option is set to "MEM", the image of REC REVIEW is output not only to the viewfinder but also on the video output connector (SDI OUT connector, MON OUT connector) during REC REVIEW.
Note that when a backup device is connected to back up the video the pictures for REC REVIEW are backed up. These menu items are found in the <OUTPUT SEL> screen on the SYSTEM SETTING page.
- In ONE CLIP REC mode, the furthest rewind point using REC REVIEW and the start point for playback after pausing a recording is not at the start of the clip, but at the start of the most recent recording.

Normal and Variable Speed Playback

The PLAY/PAUSE button provides monochrome playback through the viewfinder and color playback on the LCD monitor. A color video monitor connected to the SDI OUT or MON OUT connector of camera-recorder also provides color playback.

You can also view playback with SDI from the SDI OUT connector, but the SDI OUT MODE menu option needs to be set to "MEM". The menu item SDI OUT MODE is found in the <OUTPUT SEL> screen on the SYSTEM SETTING page.

Variable speed playback

The FF and REW buttons provide 32× and 4× fast playbacks and fast reverse playbacks.

When playback is paused, the FF button locates the beginning of the next clip while maintaining the pause mode.

When playback is paused, the REW button locates the beginning of the current clip while maintaining the pause mode.


◆ Notes

- The camera-recorder cannot play back clips where the SYSTEM MODE differs. If this is the case, set the SYSTEM MODE of camera-recorder to the format of the desired clip before playing it back.
- When a P2 card has been just removed or inserted, or when the power has been just turned on for playback, it may take some time for camera-recorder to read clip information. If this is the case, the viewfinder displays "UPDATING". If data is played back when the P2 card is being recognized, the message "CANNOT PLAY" will be displayed.
- If a P2 card is inserted while another P2 card is being played back, the clips on the inserted P2 card will not be played back. A P2 card inserted during playback will be recognised after playback ends.

Text Memo Function

Text memos are time-coded thumbnails added to any video point when a clip is being recorded or played back. The Text Memo button adds text memo information at the appropriate point. You can edit added text memos using the P2 viewer. Through a thumbnail display, you can choose and play back the text memo point or copy any portion.

→ [Text Memo] (page 124)

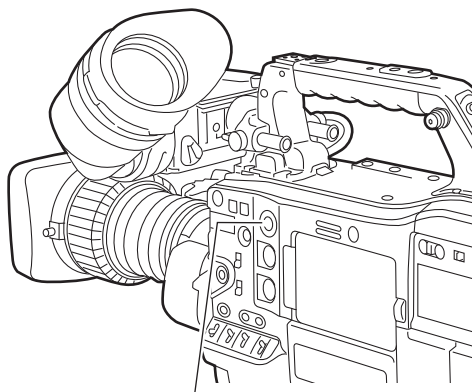

TEXT MEMO button

◆ Notes

- One clip can have up to 100 text memos.
- Text memos can also be recorded when the LCD monitor is in thumbnail mode. In this case, the text memo is added to the position on the clip where the cursor is set (normally at the beginning) only.
- For a clip with voice memos added through the AJ-SPX800 or any other camera-recorder, you can record up to 100 text and voice memos in combination. For information about voice memos, see the instruction manual for the AJ-SPX800.
- Text memos cannot be recorded when the color bar is output or the unit is in LOOP REC mode and INTERVAL REC mode.

Shot Mark Function

A shot mark is added to the thumbnail of a clip to distinguish that clip from others. With the LCD monitor, only clips that have shot marks can be viewed and/or played back.


Shot marks may also be added or erased using clip thumbnails.

→ [Shot Mark] (page 123)

Adding Shot Marks

To add a shot mark during recording, press the SHOT MARK button. The viewfinder displays "MARK ON" and adds a shot mark to the thumbnail of the appropriate clip. Another press of the button erases the shot mark.

When the SHOT MARK button is pressed during a recording pause, a shot mark is attached to the clip recorded immediately before. The shot mark can be deleted with another press.

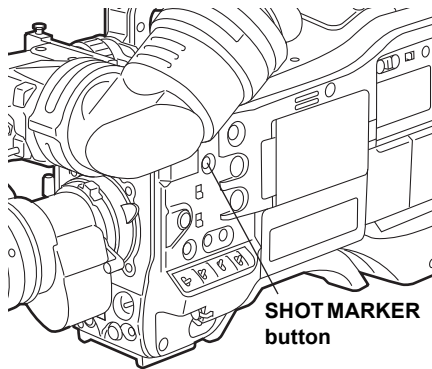

◆ Notes

- When the color bar is output or the unit is in LOOP REC mode and INTERVAL REC mode, it is impossible to add/delete shot marks.
- It is impossible to add shot marks to incomplete clips (refer page 120).
- For clips recorded on plural P2 cards or clips split on a P2 card (refer to Note on page 11), a shot mark is added to the top clip only.

Recording Setting and Operation Mode

AJ-HPX3100 recording mode works according to the priorities outlined in the following table, relative to the setting of the menus and switches.

Functional operation mode	Menu switches related to system/recording				Limitations on various functions			
	REC SIGNAL	INTERVAL REC MODE	LOOP REC MODE	ONE CLIP REC MODE	REC FORMAT CAMERA MODE	PRE RECORDING	Recording a Text Memo	Shot Mark
SDI input record	SDI	Disabled	Disabled	Disabled	Disabled (recording mode is 60i or 50i)	Disabled	Enabled	Enabled
INTERVAL REC	CAM	ON or ONE SHOT	OFF	OFF	Only 60i, 50i, 30P (Over60i), 25P (Over50i) are available	Disabled	Disabled	Disabled
LOOP REC		OFF	ON	OFF		Disabled	Disabled	Disabled
ONE CLIP REC		OFF	OFF	ON	All modes are available (no limitations)	Enabled 1s - 8s/15s	Enabled*	Enabled*
Normal Recording		OFF	OFF	OFF			Enabled*	Enabled*

* Disabled for color bars

Adjustments and Settings for Recording

Multi Format

Video system and Recording format

The unit uses an interlace/progressive scan (reading all pixels) switchable type CCD.

With combinations of the SYSTEM MODE and CAMERA MODE menu options, you can select a video system from among 12 types including HD (1080i) and SD. When selecting "SDI" on the REC SIGNAL menu option, you can record external signals input from the SDI IN connector.

These menu items are found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.

Selecting a recording signal and method

SYSTEM MODE menu option

Allows you to select a combination of system frequency (59.94 Hz or 50 Hz) and signaling system (1080i, 480i, or 576i). When a change has been made to the SYSTEM MODE option, the viewfinder indicates "TURN POWER OFF." Then, turn the POWER switch of the camera-recorder off and wait five seconds or longer before turning the camera-recorder on again.

REC SIGNAL menu option

CAM Signals from the camera are recorded. The CAMERA MODE option allows you to select a camera operation mode (frame mode).

SDI Signals from the SDI IN connector are recorded.

◆ Note

When SDI is selected, the time code or UMID superimposed on SDI input signals are not recorded.

CAMERA MODE menu option

Used to select a camera operation mode when the option REC SIGNAL is set to CAM.

→[Recording formats and output connector signal formats] (page 48).

◆ Notes

- When the camera has been switched from 60i or 30P to 24P or 24PA, video may produce noise for a moment because the pull-down five-frame cycle is adjusted. This is not an abnormal condition.
- When AVC-I 100 or AVC-I 50 is selected, the CAMERA MODE menu option cannot be selected.

REC FORMAT menu option

Used to select the recording mode. The menu item REC FORMAT is found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.

For HD mode (1080i)

AVC-I 100

The AVC-Intra100 format is used to record video. The native recording format applies to the 30PN, 24PN and 25PN modes.

AVC-I 50

The AVC-Intra50 format is used to record video. The native recording is applied to the 30PN, 24PN and 25PN modes.

DVCPRO HD

The DVCPRO HD format is used to record video.

For SD mode (480i, 576i)

DVCPRO50

The DVCPRO50 format (50 Mbps) is used to record video.

DVCPRO

The DVCPRO format (25 Mbps) is used to record video.

DV

The DV format is used to record video.

ASPECT menu option

Used to select the aspect ratio for the SD mode. (480i or 576i) The menu item ASPECT is found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.

16 : 9 The 16:9 aspect ratio is used to record video.

4 : 3 The 4:3 aspect ratio is used to record video.

AUDIO SMPL RES menu option

Used to select the number of bits of audio in HD mode (1080i). You can select the AUDIO SMPL RES menu option from the <SYSTEM MODE> screen of the SYSTEM SETTING page.

16BIT Records at 16 bits.

24BIT Records at 24 bits.

◆ Note

This menu option is not displayed in the DVCPRO HD mode, and a 16-bit recording is employed.

Recording formats and output connector signal formats

The table below shows the formats used to record signals from the CCD and externally input signals along with the formats for signals output from the output connectors.

Menu setting				Recording and output status						
SYSTEM MODE item	REC SIGNAL item	REC FORMAT item	CAMERA MODE item	Recording ^{*3}		OUTPUT HD SDI (1080) ^{*4}		OUTPUT SD SDI (480i, 576i) ^{*5}		
				Video	Audio	Video	Audio	Video	Audio	
1080-59.94i	CAM	AVC-I 100/60i AVC-I 50/60i	60i	1080-59.94i		1080-59.94i		480-59.94i		
		AVC-I 100/ 30PN AVC-I 50/ 30PN	30P	1080-29.97P Native	4ch 48 kbps 16 bit/24 bit ^{*1}	1080-29.97PsF Over59.94i 2:2	4ch 48 kbps 16 bit/24 bit ^{*1}	480-29.97PsF Over59.94i 2:2	4ch 48 kbps 16 bit	
		AVC-I 100/ 24PN AVC-I 50/ 24PN	24PN	1080i-23.98P Native		1080-23.98PsF Over59.94i 2:3		480-23.98PsF Over59.94i 2:3		
		DVCPRO HD/ 60i	60i	1080-59.94i		1080-59.94i		480-59.94i		
	30P		1080-29.97P Over59.94i 2:2	4ch 48 kbps	1080-29.97PsF Over59.94i 2:2	4ch 48 kbps	480-29.97PsF Over59.94i 2:2	4ch 48 kbps		
	24P		1080-23.98P Over59.94i 2:3	16 bit	1080-23.98PsF Over59.94i 2:3	16 bit	480-23.98PsF Over59.94i 2:3	16 bit		
	24PA		1080-23.98P Over59.94i 2:3:3:2		1080-23.98PsF Over59.94i 2:3:3:2		480-23.98PsF Over59.94i 2:3:3:2			
	SDI	All options	Unrelated	1080-59.94i	4ch 48 kbps 16 bit/24 bit ^{*1}	1080-59.94i	4ch 48 kbps 16 bit/24 bit ^{*1}	480-59.94i	4ch 48 kbps 16 bit	
	1080-50i	CAM	AVC-I 100/50i AVC-I 50/50i	50i	1080-50i		1080-50i		576-50i	
			AVC-I 100/ 25PN AVC-I 50/ 25PN	25P	1080-25P Native	4ch 48 kbps 16 bit/24 bit ^{*1}	1080-25PsF Over50i 2:2	4ch 48 kbps 16 bit/24 bit ^{*1}	576-25PsF Over50i 2:2	4ch 48 kbps 16 bit
DVCPRO HD/ 50i			50i	1080-50i	4ch	1080-50i	4ch	576-50i	4ch	
		25P	1080-25P Over50i 2:2	48 kbps 16 bit	1080-25PsF Over50i 2:2	48 kbps 16 bit	576-25PsF Over50i 2:2	48 kbps 16 bit		
SDI		All options	Unrelated	1080-50i	4ch 48 kbps 16 bit/24 bit ^{*1}	1080-50i	4ch 48 kbps 16 bit/24 bit ^{*1}	576-50i	4ch 48 kbps 16 bit	
480-59.94i	CAM	DVCPRO50/ 60i DVCPRO/60i DV/60i	60i	480-59.94i				480-59.94i		
			30P	480-29.97P Over59.94i 2:2	4ch (2ch) ^{*2}	-	-	480-29.97PsF Over59.94i 2:2	4ch (2ch) ^{*2}	
			24P	480-23.98P Over59.94i 2:3	48 kbps 16 bit			480-23.98PsF Over59.94i 2:3	48 kbps 16 bit	
			24PA	480-23.98P Over59.94i 2:3:3:2				480-23.98PsF Over59.94i 2:3:3:2		
	SDI	All options	Unrelated	480-59.94i	4ch (2ch) ^{*2} 48 kbps 16 bit	-	-	480-59.94i	4ch (2ch) ^{*2} 48 kbps 16 bit	
576-50i	CAM	DVCPRO50/ 50i DVCPRO/50i DV/50i	50i	576-50i	4ch (2ch) ^{*2} 48 kbps	-	-	576-50i	4ch (2ch) ^{*2} 48 kbps	
			25P	576-25P Over50i 2:2	16 bit			576-25PsF Over50i 2:2	16 bit	
	SDI	All options	Unrelated	576-50i	4ch (2ch) ^{*2} 48 kbps 16 bit	-	-	576-50i	4ch (2ch) ^{*2} 48 kbps 16 bit	

*1 You can select 16 bit or 24bit in the menu item AUDIO SMPL RES when the AVC-Intra format is selected.

*2 In the menu item 25M REC CH SEL, you can select 4ch when the DVCPRO50 format is selected, and can select 4ch or 2ch when the DVCPRO or DV format is selected when the AVC-Intra format is selected.

*3 The time code, user bits, and UMID are recorded.

*4 The time code, user bits, and UMID (selectable between ON and OFF) are output.

*5 EDH (ON/OFF enabled), UMID (ON/OFF enabled) are output. Time code, user bits are not output.

◆ Notes

● UMID is not output for recording or playing back in DV format.

● During playback, the formats for clips in the same system mode are switched automatically and played back.

Adjusting the White balance and Black Balance

To record high-quality video with the unit, the black and white balances must be adjusted according to conditions. For higher quality, it is recommended that the adjustments should be made in this order AWB (white balance adjustment) → ABB (black balance adjustment) → AWB (white balance adjustment).


Adjusting the White Balance

Whenever light conditions change, the white balance must be re-adjusted.

To adjust the white balance, follow the steps below.

1 Set the switches as illustrated below.

CC/ND FILTER control

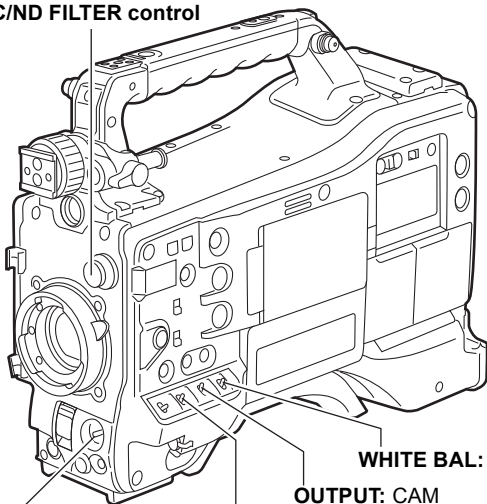

AUTO W/B BAL switch: Used to perform AWB.
GAIN: Under normal conditions, set to 0 dB. If it is too dark, an appropriate gain should be set.

2 Adjust the CC/ND FILTER control according to the light conditions.

→ For examples of CC/ND FILTER adjustments, see [Shooting and Recording/Playback Functions Section] (page 21).


3 Place a white pattern at a point where the light conditions match those for the light source of the subject.

- Then zoom-in on the white pattern so that white color appears in the screen. A white object (cloth or wall) may be used instead of a white pattern.
- The illustration below shows the required size for the white space.

◆ Notes

- Do not include a high-intensity spot in the screen.
- The white object must appear at the center of the screen.

1/4 or more of the screen in width

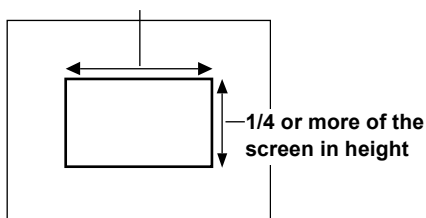

4 Adjust the lens iris.

5 Flip up the AUTO W/B BAL switch so that it is positioned at [AWB], then release it.

- The switch returns to the central position with the white balance automatically adjusted.

◆ Note

To cancel automatic white balance adjustment in process (the viewfinder displays "AWB ACTIVE"), re-position the AUTO W/B BAL switch at [AWB].

If automatic adjustment is cancelled, the value in effect before automatic adjustment will be used.

- During an adjustment, the viewfinder displays the following message:

AWB ACTIVE

- The adjustment will take effect in a few seconds, and the following message will appear:

The adjusted value is automatically stored in the memory specified in Step 1 ([A] or [B]).

AWB A OK 3.2K

- If the subject's color temperature is lower than 2300K or higher than 15000 K the following message appears:

If the arrow points down (↓) the actual color temperature is lower than the temperature indicated. If the arrow points up (↑) the actual temperature is higher than the temperature indicated.

Case 1: when lower than 2300K

AWB A OK 2.3K ↓

Case 2: when higher than 15000K


AWB A OK 15K ↑

Detection area for the white balance

The detection area for the white balance is selectable between 90%, 50% and 25%, using the menu option AWB AREA.

The detection area is factory-set to 25%.

The menu item AWB AREA is found in the <WHITE BALANCE MODE> screen on the CAM OPERATION page.

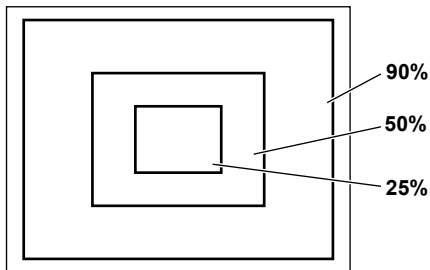

When you have no time to adjust the white balance

Position the WHITE BAL switch at [PRST]. This adjusts the white balance for the filter according to the position of the CC/ND FILTER control.

When the white balance has not been automatically adjusted

When the white balance has not been successfully adjusted, the viewfinder displays an error message.

If one of the error messages listed below appears, take the appropriate steps, then adjust the white balance again.

If the error message appears after repeated readjustments, the interior of the unit must be inspected. For more information, contact your distributor.

Error message	Description	Remedies
COLOR TEMP. HIGH	The color temperature is too high.	Select an appropriate filter.
COLOR TEMP. LOW	The color temperature is too low.	Select an appropriate filter.
LOW LIGHT	There is insufficient light.	Increase the light level or gain.
LEVEL OVER	There is too much light.	Decrease the light level or gain.
CHECK FILTER	The FILTER control is displaced.	Check the FILTER control.
TIME OVER	AWB was not completed within the time allowed.	Shooting conditions may be unstable. If flicker occurs, press the shutter and readjust the AWB under stable conditions.

Retaining white balances

Each value in memory is retained even if the camera-recorder is turned off; it will not be lost until the white balance is re-adjusted. White balances are stored in either of two systems: A or B.

When the menu option FILTER INH is set to "ON" (default), each system stores only one value. If this is the case, the values are not synchronised with the filters.

When the menu option FILTER INH is set to "OFF", the adjusted value for each filter can be automatically stored in the memory that corresponds to the position of the WHITE BAL switch (A or B). Your unit has four built-in filters; it stores eight (4 x 2) adjusted values.

The menu item FILTER INH is found in the <WHITE BALANCE MODE> screen on the CAM OPERATION page. Also, when the S. GAIN (super gain) function is operating, the AWB switch doesn't operate, and the message (AWB UNABLE/S.GAIN MODE) is displayed.

On settings for Auto-tracking white balance (ATW)

This unit is equipped with an auto tracking white balance (ATW) function that automatically tracks the white balance of images according to the lighting conditions.

You can set this ATW function to the [B] of the WHITE BAL switch. With the AWB B menu option, select "ATW".

You can select the AWB B menu option from the <WHITE BALANCE MODE> screen of the CAM OPERATION page.

You can also assign the ATW function to the USER MAIN/USER1/USER2 buttons.

→ [Assigning Functions to USER Buttons] (page 55)

To cancel auto tracking white balance

Press the USER button assigned to ATW again, or change the WHITE BAL switch. However, when ATW has been set to the [B] of the WHITE BAL switch, it cannot be cancelled with the USER button.

```

→ < WHITE BALANCE MODE >

FILTER INH      : ON
SHOCKLESS AWB  : NORMAL
AWB AREA       : 25%
AWB B          : MEM
ATW SPEED      : NORMAL
TEMP PRE SEL SW : 3. 2K/5. 6K

COLOR TEMP PRE : 3200K
AWB A TEMP     : 3200K
AWB B TEMP     : 3200K
    
```

◆ Note

This function does not provide a 100 % accurate white balance. The tracking performance relative to changes in ambient lighting and white balance performance have been given a degree of latitude.

Setting Color Temperature Manually

The white balance can be manually adjusted by setting the color temperature. Manual color temperature settings can be performed for each of the WHITE BAL switch positions: PRST, A and B.

The color temperature is set using the menu options COLOR TEMP PRE, AWB A TEMP, and AWB B TEMP.

These menu items are found in the <WHITE BALANCE MODE> screen on the CAM OPERATION page.

There are two types of color temperature adjustment for COLOR TEMP PRE: VAR or 3.2K/5.6K Switchable.

VAR: Selectable within the range from 2300K ↓ to 15000K ↑.

3.2K/5.6K: Switchable between 3200K and 5600K.

◆ Note

Even if the color temperature has been manually set, automatic adjustment of the white balance (AWB) records the color temperature at the time of AWB at the position where the WHITE BAL switch was located. When the CC filter position is switched, the value for the color temperature changes.

```

-> < WHITE BALANCE MODE >

FILTER INH      :ON
SHOCKLESS AWB  :NORMAL
AWB AREA       :25%
AWB B          :MEM
ATW SPEED      :NORMAL
TEMP PRE SEL SW :3.2K/5.6K

COLOR TEMP PRE :3200K
AWB A TEMP     :2600K
AWB B TEMP     :3200K
  
```

Viewfinder displays related to white balance


→ [Viewfinder Screen Status Displays] (page 75).

Adjusting the Black Balance

The black balance must be adjusted when:

- You use your unit the first time;
- Your unit has not been used for some time;
- The ambient temperature has changed substantially;
- The gain switchover value has been changed; or
- S.GAIN (super gain) has been set with the USER MAIN/USER1/USER2 button.
- When you are changing the assignment for DS.GAIN on the USER SW GAIN screen of the menu

1 Set the switches as illustrated below.

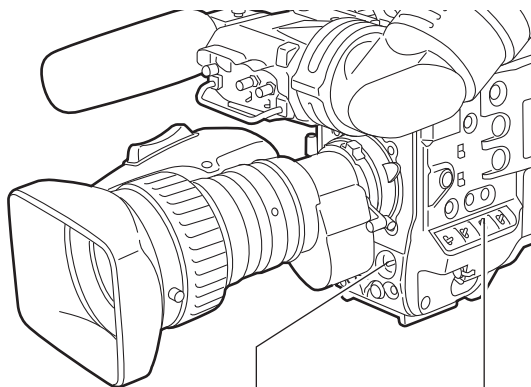

AUTO W/B BAL switch: Used to perform ABB.
OUTPUT/AUTO KNEE selector switch: CAM

2 Tilt the AUTO W/B BAL switch so that it is positioned at [ABB], then release it.

- The switch returns to the central position with the black balance automatically adjusted.
- During adjustment, the viewfinder displays the following message:

ABB ACTIVE

◆ Note

During adjustment, the lens iris automatically becomes CLOSE.

- The adjustment will take effect in a few seconds and the following message will appear:

ABB OK

The adjusted value is automatically stored in the memory.

◆ Notes

- Ensure that the lens connector is connected and the lens iris is CLOSE.
- During a black balance adjustment, light is automatically cut off.
- During a black balance adjustment, the gain switchover circuit is automatically switched. The viewfinder screen may flicker and/or display noise; this is not a failure.
- If you find the black shading annoying after performing an auto black balance adjustment, adjust the black shading. To do so, go to the menu option DETECTION (DIG), move the cursor (→), then press the JOG dial button. The menu item DETECTION (DIG) is found in the <BLACK SHADING> screen on the MAINTENANCE page. When you set the SHD.ABB SW CTL menu option to "ON" and press the AUTO W/B BAL switch for 8 seconds or longer, [B-SHD READY] is displayed in the viewfinder and black shading can be automatically adjusted after the automatic black balance operation. While the black shading is being adjusted, the "B-SHD ACTIVE" message is displayed in the viewfinder. Ensure that the lens iris is closed completely until the "B-SHD OK" message is displayed in the viewfinder. The menu item SHD. ABB SW CTL is found in the <SW MODE> screen on the CAM OPERATION page. However, when the remote control unit (AJ-RC10G: optional accessory) or extension control unit (AG-EC4G: optional accessory) is connected, automatic black shading cannot be executed even if the ABB switch is held down.
- To cancel the automatic black balance adjustment in process (the viewfinder displays "ABB ACTIVE"), flip the AUTO W/B BAL switch down to [ABB] again. If automatic adjustment is cancelled, the value in effect before automatic adjustment will be used.

Retaining black balances

Each value in memory is retained even if the camera-recorder is turned off.

Setting the Electronic Shutter

This section provides a description of the electronic shutter, together with setting and handling directions.

Shutter Modes

The table below lists the shutter modes in which the unit's electronic shutter can be used as well as the shutter speeds which can be selected.

To use the fixed shutter speed

- For eliminating flicker due to lighting
- For shooting fast moving subjects clearly

To use the shutter speed of SYNCHRO SCAN

- For shooting monitor screens in a way that minimizes the pattern of horizontal lines
- For shooting images when adding effects to the subjects' movement

To use the half shutter speed (HALF)

- For shooting images when adding effects as if taken with film

◆ Notes

- No matter in which mode the electronic shutter is used, the higher the shutter speed, the lower the camera's sensitivity.
- When the aperture is in the automatic mode, it will increasingly open and the depth of focus will become shallower as the shutter speed is increased.

Mode	Video system	CAMERA MODE	Shutter speed	Half shutter speed	Variable range for SYNCHRO SCAN	
HD	1080-59.94i	60i	1/100, 1/120, 1/250, 1/500, 1/1000, 1/2000, HALF 180deg, 172.8deg, 144.0deg, 120.0deg, 90.0deg, 45.0deg	1/120	1/61.7 - 1/7200	
	1080-29.97P	30P		1/60	1/30.9 - 1/3600	
	1080-23.98P	24P		1/48	1/24.7 - 1/2880	
	1080-23.98PA	24PA		1/48	1/24.7 - 1/2880	
SD	480-59.94i	60i	180deg, 172.8deg, 144.0deg, 120.0deg, 90.0deg, 45.0deg	1/120	1/61.7 - 1/7200	
	480-29.97P	30P		1/60	1/30.9 - 1/3600	
	480-23.98P	24P		1/48	1/24.7 - 1/2880	
HD	1080-50i	50i	1/60, 1/120, 1/250, 1/500, 1/1000, 1/2000, HALF	1/100	1/51.4 - 1/6000	
	1080-25P	25P		1/50	1/25.7 - 1/3000	
SD	576-50i	50i	180deg, 172.8deg, 144.0deg, 120.0deg, 90.0deg, 45.0deg	1/100	1/51.4 - 1/6000	
	576-25P	25P		1/50	1/25.7 - 1/3000	

3 deg - 350 deg
(1.0 deg step)

Setting the Shutter Mode and Speed

The shutter speed in any shutter mode is set using the SHUTTER switch.

In SYNCHRO SCAN mode, shutter speed can be switched easily, using the SYNCHRO SCAN ADJUSTMENT switches (+/-) on the side panel.

Note that the range of selectable shutter speeds may be pre-defined; whether or not to use the SYNCHRO SCAN mode may be determined through the <SHUTTER SPEED> and <SHUTTER SELECT> screens.

→ [CAM OPERATION] (page 181)

The selected shutter speed is retained even if the unit is turned off.

→ < SHUTTER SPEED >

```


SYNCHRO SCAN :ON
POSITION1    :ON
POSITION2    :ON
POSITION3    :ON
POSITION4    :ON
POSITION5    :ON
POSITION6    :ON
    
```

→ < SHUTTER SELECT >

```


POSITION1 SEL :1/100
POSITION2 SEL :1/120
POSITION3 SEL :1/250
POSITION4 SEL :1/500
POSITION5 SEL :1/1000
POSITION6 SEL :1/2000
    
```

- 1 Press the **SHUTTER** switch, positioned at [ON], towards [SEL].

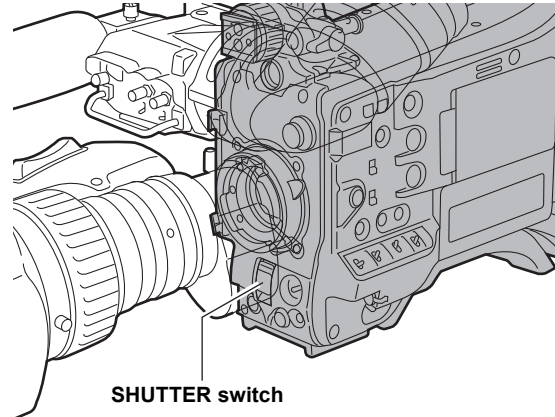

- 2 Once more, press the **SHUTTER** switch towards [SEL]. Repeat this switchover until the desired mode or speed appears in the viewfinder screen.

If all modes and speeds are available, the display changes in the following order:

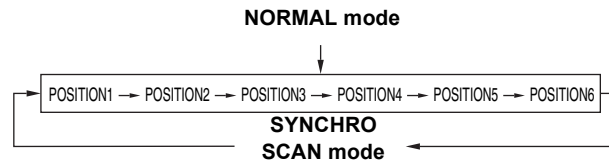

Viewfinder displays relating to the shutter

See [Viewfinder Screen Status Displays] (page 75).

◆ Note

SHUTTER mode turns off when operating the DS.GAIN.


Placing the Camera-recorder in SYNCHRO SCAN Mode

Press the SHUTTER switch positioned at [ON] towards [SEL], to place the camera-recorder in SYNCHRO SCAN mode.

- In the SYNCHRO SCAN mode, it is possible to change the shutter speed continuously by operating the SYNCHRO SCAN (+/-) buttons.
- The shutter speed display in synchro scan mode is switchable between second indication and angle indication.

→ [SYNCHRO SCAN DISP.] (page 177)

SYNCHRO SCAN ADJUSTMENT buttons (+/-)

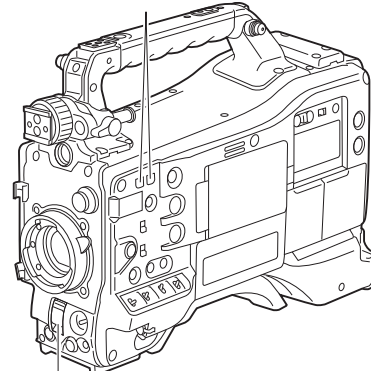


SHUTTER switch

Assigning Functions to USER Buttons

The USER MAIN SW, USER1 SW, USER2 SW, SHOT MARK SW (USER3 SW) and TEXT MEMO SW (USER4 SW) buttons can be assigned user-selected functions.

To select desired functions, use the menu items USER MAIN SW, USER1 SW, USER2 SW, SHOT MARK SW (USER3 SW) and TEXT MEMO SW (USER4 SW). These options can be found in the <USER SW> screen, which is accessible from the CAM OPERATION page.

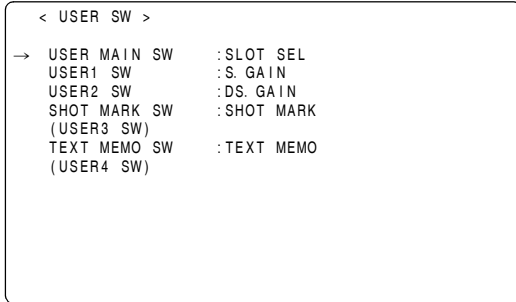

Selectable Functions

- INH:** No function assigned.
- S.GAIN:** S.GAIN function assigned. The AWB does not function while the S.GAIN function is ON.
- DS.GAIN:** DS.GAIN function assigned.
 - ◆ **Notes**
 - The DS.GAIN function only operates when shooting in 59.94i and 50i. Also, SHUTTER mode turns off when operating the DS.GAIN.
 - Image when the DS.GAIN function is turned ON or OFF will not be continuous.
- S.IRIS:** Super Iris function assigned. This is useful for backlight compensation.
- I.OVR:** Iris Override function assigned. The target (reference) value in Auto Iris mode must be changed. To change the target value, put the unit into this mode and press the JOG dial button. Turn the JOG dial button clockwise or anti-clockwise to change the value. The iris indication section of the viewfinder screen displays "+", "+ +", "-", or "- -". When the desired value is displayed, stop turning the JOG dial button. Then, press the dial button to accept that value. Note that once the mode is cancelled or the power is turned off the original reference value will be used again.
 - + : Iris opens up by 0.5.
 - + + : Iris opens up by 1.
 - : Iris closes down by 0.5.
 - - : Iris closes down by 1.

No indication: The reference value is used.
- S.BLK:** Super Black function assigned. This function lowers the black level to the pedestal level or below.
- B.GAMMA:** The BLACK GAMMA function is allocated. This function highlights the black gradations. Regardless of the value set in the BLACK GAMMA item, the BLACK GAMMA is set to

- “+3”. You can select the BLACK GAMMA menu option from either the <LOW SETTING> screen, the <MID SETTING> screen, or the <HIGH SETTING> screen of the PAINT page.
- D.ZOOM:** The digital zoom function is assigned. This function zooms up the angle of view at 2/3/4 vertical horizontal ratio.
- ATW:** The automatic tracking white balance function is assigned.
- ATW LOCK:** When you press while the ATW function is operating, the white balance value is set. When you press once again the ATW function resumes operation.
- Y GET:** Function of indicating the brightness level of the center marker assigned.
- DRS:** The function of the dynamic range stretcher is assigned. This function expands dynamic range by compressing the image level of high intensity components and extending the image level of low intensity components. The compression level is variable on the <KNEE LEVEL> screen on the PAINT page.
 - ◆ **Notes**
 - Because the DRS function compresses the image level of high intensity components and extends the image level of low intensity components, turning the DRS function ON/OFF sometimes causes slight differences in color.
 - When the DRS function is turned on, the Knee function and the BLACK GAMMA function are not available.
- ASSIST :** The function to turn on or off the assigned focus assist indication.
 - ◆ **Note**
 - When the ASSIST button is turned on, a graph is displayed on the viewfinder and the bottom right of the LCD monitor. Adjust the focus ring on the lens so that the graph comes further right.
- C.TEMP :** The function to switch to the mode that allows the JOG dial button to change the assigned color temperature. It is useful for intentionally changing the color temperature after adjusting the white balance. To change the color temperature, press the user button with this assigned function, and then press the JOG dial button. The color temperature indicated on the viewfinder display is highlighted and starts blinking, indicating that the color temperature can be changed. While the indication is blinking, the JOG dial button can be turned to change the color temperature. At this time, the value set for the position (PRST, A, or B) to which the WHITE BAL switch is set is also changed.
- AUDIO CH1/3:** The function to switch the input signal of audio

channel 1 or audio channel 3 (you can switch with the VR SELECT menu option on the <MIC/AUDIO> screen of the MAIN OPERATION page) is assigned.

Pressing the button switches the input signal in the following order: FRONT → REAR → W.L. Note that the AUDIO IN switch can also be used to change the input signal: later specification takes precedence.

AUDIO CH2/4:

The function to switch the input signal of audio channel 2 or audio channel 4 (you can switch with the VR SELECT menu option on the <MIC/AUDIO> screen of the MAIN OPERATION page) is assigned.

Pressing the button switches the input signal in the following order: FRONT → REAR → W.L. Note that the AUDIO IN switch can also be used to change the input signal: later specification takes precedence.

REC SW: Function of the REC START/STOP button assigned.

RET SW: Function of the RET button at the lens assigned.

PRE REC: PRE-RECORDING switch ON/switch OFF function assigned.

SLOT SEL: Function of switching the target P2 card among multiple cards assigned.

PC MODE: The function to turn on or off the assigned USB device or USB host mode. Switching between the USB device and USB host modes is set by selecting the PC MODE SELECT menu option. The menu item FRONT MIC POWER is found in the

<SYSTEM MODE> screen on the SYSTEM SETTING page.

SHOT MARK: Function to add a shot mark when you press, and delete the mark when you press again is assigned. For details on the Shot Mark function, see [Shot Mark Function] (page 46). This function can only be assigned to the SHOT MARK (USER3) button. It cannot be assigned to other USER buttons.

TEXT MEMO: The function to record a text memo in the frame for the point in time when you pressed is assigned. For details on the Text Memo function, see [Text Memo Function] (page 45). This function can only be assigned to the TEXT MEMO (USER4) button. It cannot be assigned to other USER buttons.

LCD B.L.: Switches the intensity of the LCD monitor back light. Interlocks with the set value of the BACK LIGHT menu option. You can select the BACK LIGHT menu option from the <LCD MONITOR> screen of the SYSTEM SETTING page.

◆ **Notes**

- When the remote control unit (AJ-RC10G: optional) or the extension control unit (AG-EC4G: optional) is connected, and I.OVR and C TEMP are assigned to the USER button on the AJ-RC10G or AG-EC4G, operation of this unit's JOG dial button is disabled.
- The functions below also go OFF when the power of this unit is turned OFF.
I.OVR/S.BLK/B GAMMA/Y GET/DRS/ASSIST/C.TEMP/ATW/ATW LOCK/D.ZOOM/S.GAIN/DS.GAIN
However for C.TEMP, variable color temperature will be retained.

Setting the Switchover of USER SW GAIN

AJ-HPX3100 allows three other modes to be used in addition to the L/M/H standard gain settings: the analog gain-up S.GAIN (super gain) mode to achieve a gain of 30 dB or more, the cumulative gain-up DS.GAIN (digital super gain) mode which uses progressive drive.

To select these functions, perform menu operations to select the S.GAIN item and DS.GAIN item, and preset the gain to be used for each item. These menu items are found in the <USER SW GAIN> screen on the CAM OPERATION page. For instance, if the S.GAIN and DS.GAIN functions have been allocated to the USER MAIN button, USER1 button or USER2 button, the gain can be increased by using these buttons in combination with the USER buttons.

1) To increase the gain without increasing noise:

The DS.GAIN function is used.

2) To increase the normal analog gain:

(noise is increased)

Use the S.GAIN feature alone.


◆ **Note**

Note that the accuracy of AUTO IRIS, White Balance, and Black Balance may be influenced by an increase in noise.

3) To achieve ultra-high sensitivity:

Use the S.GAIN function and DS.GAIN function in combination. However, exercise care during operation since image lag will become more conspicuous with moving subjects the more the gain is increased by using the DS.GAIN function.

When shooting moving subjects, keep the gain increase with the DS.GAIN function to under 12 dB ↑.

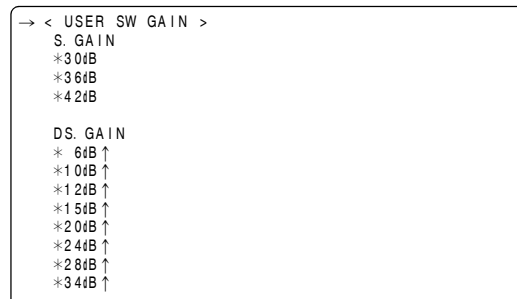

Settings Options and Usage

S.GAIN: An analog gain increase with an asterisk is one that is valid. One without an asterisk is invalid.

DS.GAIN: A cumulative gain increase with an asterisk is one that is valid. One without an asterisk is invalid.

Selecting Audio Input Signals and Adjusting Recording Levels

AJ-HPX3100 supports independent 4-channel sound recording in any recording format.


When the AUDIO SELECT CH1/3 / CH2/4 switches are set to [AUTO], the recording level of audio channel 1/2 (3/4 with the menu settings) is automatically adjusted. Also you can adjust manually by setting to [MAN] and using the AUDIO LEVEL CH1/3 / CH2/4 controls and the F.AUDIO LEVEL controls. Also from the menu you can select whether the recording level for audio channel 3/4 (1/2 with the menu settings) is automatic adjustment or manual adjustment (performing adjustment on the set values in the menu).

◆ Notes

- With this unit you can select whether with the AUDIO LEVEL CH1/3 / CH2/4 controls the channel 1/2 audio level is adjusted, or the channel 3/4 level is adjusted. With the factory settings, the level adjust controls are set to adjust the audio for channel 1/2.
- Even in HD mode (1080i), 4-channel sound is recorded on P2 cards.
- When SDI input signals connector are recorded, the settings above are overridden; audio signals from the SDI IN connector is always recorded.

Selecting Audio Input Signals

The input signals to be recorded on Audio Channels 1, 2, 3, and 4 are selected with the AUDIO IN switch.
→ [Audio (input) Function Section] (page 18)

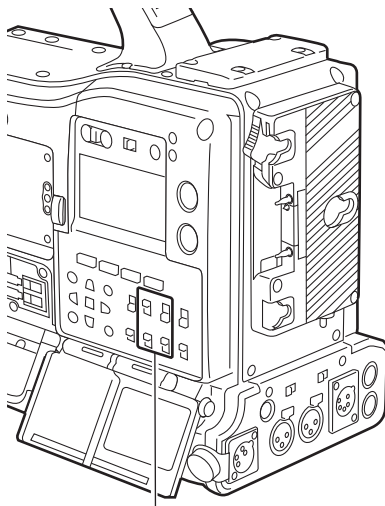

AUDIO IN switches

You can check input selection status with the MODE CHECK of the AUDIO screen.

-- AUDIO --				
SAMPLE RES	: 24 BIT			
→ MIC POWER (MENU)	FRONT : ON REAR : OFF			
VR SELECT	: CH3/4			
LEVEL	F. VR	R. XLR	A. IN	METER
MENU	---	---	FRNT : 1	-----■-----
AUTO	---	---	W. L. : 2	-----■-----
VR	ON	AUTO	REAR : 3	-----■-----
AUTO	---	AUTO	W. L. : 4	-----■-----

Displays whether REAR XLR AUTO (rear XLR connector input automatic switching) is selected.

Displays the system of each input signal CH1 - 4.

Also, when the REAR XLR AUTO CH1/2 and REAR XLR AUTO CH3/4 menu options are set to "ON", the selection of input signal automatically switches to [REAR] at the point when the XLR connector is inserted in the AUDIO IN CH1/3 / 2/4 connectors in the back. At this time, the AUDIO IN switch for the corresponding channel is disabled.

When using the DVCPRO or DV format of SD mode (480i, 576i), the factory settings are set to not record audio channels 3 and 4. When recording Channel 4, set the 25M REC CH SEL menu option to "4CH".

You can select each menu option from the <MIC/AUDIO> screen of the MAIN OPERATION page.

Recording level adjustment

You can select the recording level adjustment method from among three methods, the adjustment control/adjustment with menu options/automatic adjustment.

With the VR Select menu option, select the two channels, CH1/2 or CH3/4, to assign to the adjustment controls. The VR SELECT menu option can be selected from the <MIC/AUDIO> screen of the MAIN OPERATION page.

The two channels which are not selected become automatic adjustment, but it is also possible to select adjustment with the menu option.

The factory settings assign CH1/2 to the adjustment controls.

Selecting the level adjustment method

With the VR SELECT menu option, select either CH1/2 or CH3/4 to assign the AUDIO LEVEL CH1/3 / CH2/4 controls.

CH1/2: Assigns AUDIO LEVEL CH1/3 / CH2/4 controls to channels 1/2.


AUDIO SELECT CH1/3 / CH2/4 switches are enabled for channels 1/2.

The channels 3/4 become automatic adjustment, but the automatic adjustment is released by setting the AUTO LEVEL CH3 menu option and AUTO LEVEL CH4 menu option to "OFF", making it possible to adjust the level with the LVL CONTROL CH3 menu option and LVL CONTROL CH4 menu option. You can select each menu option from the <MIC/AUDIO> screen of the MAIN OPERATION page.


CH3/4: Assigns AUDIO LEVEL CH1/3 / CH2/4 controls to channels 3/4. AUDIO SELECT CH1/3 / CH2/4 switches are enabled for the channels 3/4. The channels 1/2 become automatic adjustment, but the automatic adjustment is released by setting the AUTO LEVEL CH1 menu option and AUTO LEVEL CH2 menu option to "OFF", making it possible to adjust the level with the LVL CONTROL CH1 menu option and LVL CONTROL CH2 menu option.

Audio level adjustment menu

Select CH1/2 on the VR SELECT menu option

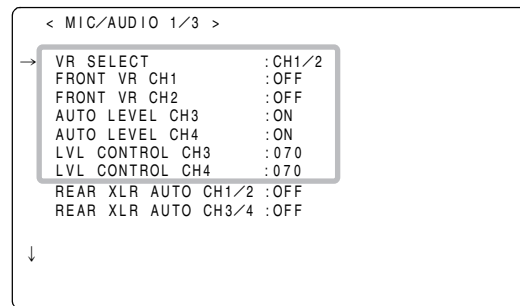

Select CH3/4 on the VR SELECT menu option

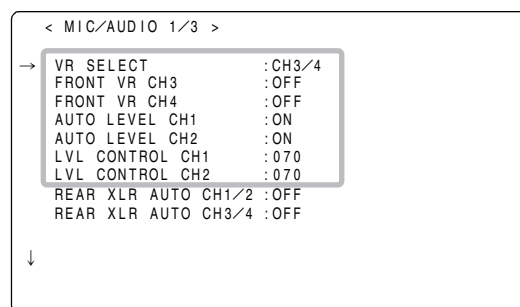


◆ Note

When the VR SELECT menu option is changed, the value of each menu option in the menu screens above is inherited. For example, the AUTO LEVEL CH1 menu option inherits the value of the AUTO LEVEL CH3 and vice versa.

When the level adjustment controls are assigned to CH1/2

Selection of level adjustment for channel 1 and 2

Level adjustment methods for channel 1 and 2 are selected with the AUDIO SELECT CH1/3 / CH2/4 switches, either [AUTO] (automatic adjustment) or [MAN] (manual adjustment with the adjustment knob). When [MAN] is selected, volume for channel 1 and 2 is controlled with the AUDIO LEVEL CH1/3 / CH2/4 knobs.

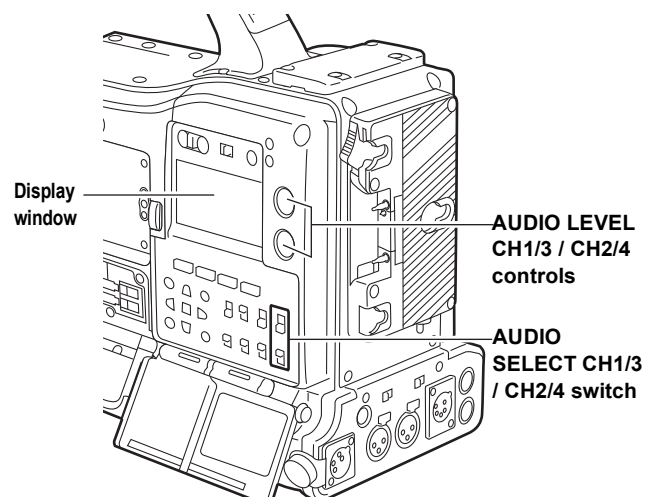


Adjustment with AUDIO LEVEL CH1/3 / CH2/4 knobs

Adjust the AUDIO LEVEL CH1/3 / CH2/4 knobs while looking at the audio channel level meter in the display window, or the audio level meter display in the LCD monitor. Also when the bar at the highest level (0dB) is passed, the OVER display lights up to indicate that the input volume is too great.

It is necessary to adjust such that 0 dB will not be displayed even at the maximum.

The audio level meter displayed in the display window

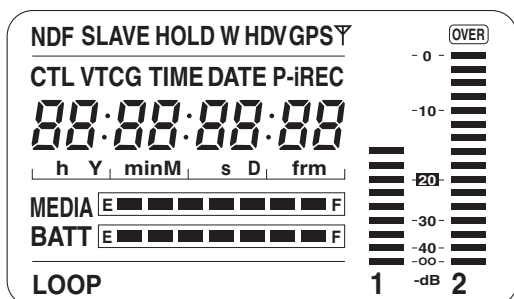

The audio level meter displayed inside the viewfinder





Adjustment with the F.AUDIO LEVEL control

When you operate this unit alone, we recommend you use the F.AUDIO LEVEL control for adjustment of audio level. Select the audio channel you want to adjust in advance, and while looking at the level meter in the viewfinder screen, adjust the F.AUDIO LEVEL control so that input does not become too great.

Furthermore, when the recording level is adjusted with the F.AUDIO LEVEL control, whether to enable for the selected input signal system of each channel is set with the FRONT VR CH1 menu option and FRONT VR CH2 menu option. You can select each menu option from the <MIC/AUDIO> screen of the MAIN OPERATION page.

FRONT VR CH1, CH2

- OFF:** disabled
- FRONT:** enabled when FRONT is selected for input signal
- W.L.:** enabled when wireless is selected for input signal
- REAR:** enabled when REAR is selected for input signal
- ALL:** enables all input systems

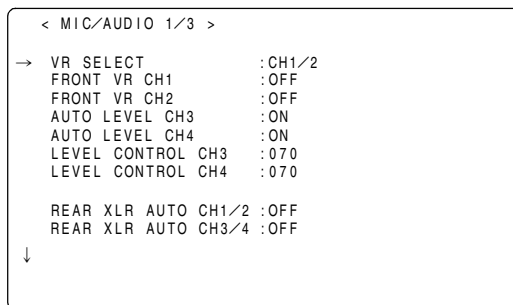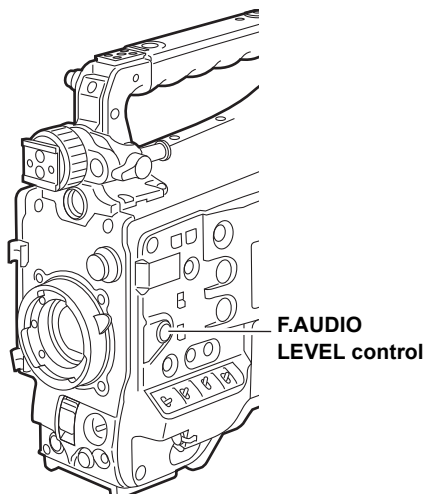

Level adjustment of channel3/4

Automatic adjustment is enabled when the AUTO LEVEL CH3 menu option and AUTO LEVEL CH4 menu option are turned "ON".

Also when these menu options are turned "OFF", operation of automatic adjustment stops, and audio level adjustment is possible with the LVL CONTROL CH3 and LVL CONTROL CH4 menu options. You can select each menu option from the <MIC/AUDIO> screen of the MAIN OPERATION page.

When the level adjustment knobs are assigned to CH3/4

Selection of level adjustment for channel 3 and 4

Level adjustment method for channel 3 and 4 are selected with the AUDIO SELECT CH1/3 / CH2/4 switches, either [AUTO] (automatic adjustment) or [MAN] (manual adjustment with the adjustment knob).

When [MAN] is selected, volume for channel 3 and 4 is controlled with the AUDIO LEVEL CH1/3 / CH2/4 controls.

Adjustment with AUDIO LEVEL CH1/3 / CH2/4 controls

In the same way as when the level adjustment knob is assigned to CH1/2, adjustment is possible with the AUDIO LEVEL CH1/3 / CH2/4 controls.

Level adjustment of channel1/2

Automatic adjustment is enabled when the AUTO LEVEL CH1 menu option and AUTO LEVEL CH2 menu option are turned "ON".

Also when these menu options are turned "OFF", operation of automatic adjustment stops, and audio level adjustment is possible with the LVL CONTROL CH1 and LVL CONTROL CH2 menu options. You can select each menu option from the <MIC/AUDIO> screen of the MAIN OPERATION page.

Selection table of adjustment methods


When selecting "CH1/2" with the VR SELECT menu option

CH1、CH2		CH3、CH4	
AUDIO SELECT CH1/3 switch AUDIO SELECT CH2/4 switch	Adjustment methods	AUTO LEVEL CH3 menu item AUTO LEVEL CH4 menu item	Adjustment methods
MAN	Manual adjustment with the adjustment controls	OFF	Manual adjustment with the LVL CONTROL CH3 menu option, LVL CONTROL CH4 menu option
AUTO	Automatic adjustment	ON	Automatic adjustment

When selecting "CH3/4" with the VR SELECT menu option

CH1、CH2		CH3、CH4	
AUTO LEVEL CH1 menu item AUTO LEVEL CH2 menu item	Adjustment methods	AUDIO SELECT CH1/3 switch AUDIO SELECT CH2/4 switch	Adjustment methods
OFF	Manual adjustment with the LVL CONTROL CH1 menu option, LVL CONTROL CH2 menu option	MAN	Manual adjustment with the adjustment controls
ON	Automatic adjustment	AUTO	Automatic adjustment

You can check selection status of the audio level adjustment method with the MODE CHECK of the AUDIO screen.

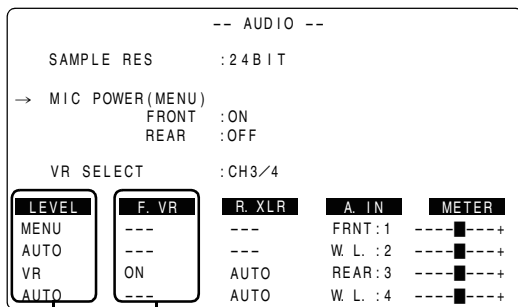

Displays selection status of level adjustment.

VR: adjustment with the adjustment knob
MENU: adjustment with the menu
AUTO: automatic adjustment

Displays whether F.AUDIO LEVEL is enabled for each channel.

OFF: the F.AUDIO LEVEL control is disabled.
ON: the F.AUDIO LEVEL control is enabled.
---: level adjustment with the knob is not selected. (Automatic adjustment or adjustment with the menu is selected)

Setting External Reference Signal and GENLOCK

Locking video signal to external reference signal

You can lock the video signals output from this unit to a reference signal provided externally.

This unit can receive external reference signals from the following two connectors.

- GENLOCK IN connector (for analog signals only)
- SDI IN connector (for SDI signals only)

GENLOCKing to standard signals provided from the GENLOCK IN connector

An HD-Y signal that matches system frame frequency or a composite signal is provided to the GENLOCK IN connector. To enable reference signals input to the GENLOCK IN connector, you need to select "GL IN" with the GENLOCK menu option. Select the output signal to lock the input reference signal with the GL PHASE menu option. (Only when 1080-59.94i, 1080-50i)

Perform horizontal phase adjustment of the reference signal and output signal with the H PHASE COARSE menu option and the H PHASE FINE menu option. You can select each menu option from the <GENLOCK> screen of the SYSTEM SETTING page.

◆ Note

The sub-carrier of the composite signals of this unit is not locked to the sub-carrier of the reference signal.

GENLOCKing to standard signals provided from the SDI IN connector

Provides SDI signals matching system frame frequency to the SDI IN connector.

To enable reference signals input to the SDI IN connector, you need to select "SDI IN" with the GENLOCK menu option. In addition, when "SDI" is selected with the REC SIGNAL menu option, the reference signal input to the SDI IN connector is synchronized regardless of the state selected with the GENLOCK menu option. The phase of the output signal at this time becomes the same as the reference signal provided to the SDI IN connector.

Perform horizontal phase adjustment of the reference signal and output signal with the H PHASE COARSE menu option and the H PHASE FINE menu option. You can select the REC SIGNAL menu option from the <SYSTEM MODE> screen of the SYSTEM SETTING page.

The following output states result from selection of external reference signals and GENLOCK setting.

Selection of external reference signal			Setting of GENLOCK	State of output signal (phase relation with external reference signal)
Recording format	GENLOCK *	Input signal and Input connector	GL PHASE *	
1080i	SDI IN	HD SDI: SDI IN connector	HD SDI	HD SDI output matches HD SDI input signal. For the HD SDI input signal, the VBS output delays by about 90 H.
			COMPOSIT	VBS output matches HD SDI input signal. For the HD SDI input signal, the HD SDI output gains by about 90 H.
		SD SDI: SDI IN connector	HD SDI	HD SDI output is non-synchronous with HD SDI input signal. VBS output is non-synchronous with HD SDI input signal.
			COMPOSIT	
	GL IN	HD-Y: GENLOCK IN connector	HD SDI	HD SDI output matches HD-Y input signal. For the HD-Y input signal, the VBS output delays by about 90 H.
			COMPOSIT	VBS output matches HD-Y input signal. For the HD-Y input signal, the HD SDI output gains by about 90 H.
		VBS: GENLOCK IN connector	HD SDI	HD SDI output matches VBS input signal. For the VBS input signal, the VBS output delays by about 90 H.
			COMPOSIT	VBS output matches VBS input signal. For the VBS input signal, the HD SDI output gains by about 90 H.
	INT	-	-	Output is non-synchronous with input signal
	480i/576i	SDI IN	SD SDI: SDI IN connector	-
HD SDI: SDI IN connector			-	SD SDI output is not locked to SD SDI input signal. VBS output is not locked to SD SDI input signal.
GL IN		VBS: GENLOCK IN connector	-	SD SDI output matches SD SDI input signal. VBS output matches SD SDI input signal.
		HD-Y: GENLOCK IN connector	-	SD SDI output is not locked to HD-Y input signal. VBS output is not locked to HD-Y input signal.
INT		-	-	Output is non-synchronous with input signal

* The GENLOCK menu option and the GL PHASE menu option are selected from the <GENLOCK> screen of the SYSTEM SETTING page.

Setting Time Data

This unit provides time codes, user bits, and day-hour (real time) data as time data, and they are recorded in frames synchronous with images, and are also recorded as data for clip metadata files. It also includes a CTL counter and camera ID.

Description of time data

Time code

The TCG switch can be used to switch between Rec run and free run.

Free run: The time code always advances even when the power is turned off. It can be handled as time. It can be slaved to the time code input through the TC IN connector.

Rec run: The time code is recorded as sequential values regenerated as the time code for a clip recorded on a P2 card.

User bits

The following two types of user bits are built in.

LTC UB: recorded as LTC, and output from the TC OUT connector. Also, output as LTC of HD SDI signals.

VITC UB: recorded as VITC (with DVCPRO, recorded in the VIDEO AUX zone). Also, output as VITC of HD SDI signals.

You can select and record each respective user set values, time, year month day, with the same value as time codes, camera photo frame rate information, input value of external signals from the TC IN connector.

◆ Notes

- Only one type of user set value can be recorded.
- For recording 24P/24PA in 1080i or 480i mode, VITC UB is fixed to frame rate information.
- In Native mode, VITC UB is fixed to frame rate information.

Date and time (real time)

The built-in clock maintains the date and time. When the GPS unit AJ-GPS910G is installed, the built-in clock is corrected with accurate date and time information from the GPS. This clock is used to store the date and time while the power is turned off and as the time for the user bits and date data, as well as the reference for file generation times during clip recording, which determine the sorting order of thumbnails and the order of playback. It is also used to generate clip metadata and UMIDs (Unique Material Identifiers).

CTL counter

The CTL counter will measure total recording time after resetting in the recording operation. On the other hand, this value is the count time and sets the start point of a clip that can be played back. This can be used to find the current playback position.

Camera ID

The camera ID can be set with 10 characters × 3 lines, which can be superimposed on the color bar video. It can be also superimposed along with date and time data.

Recording time code and user bits

The number of frames for TC varies with the settings for the input signal, system mode, and camera mode as follows.

REC SIGNAL	SYSTEM MODE	Recording frame MODE*8	LTC	VITC	No. of frames of TC during recording and presetting	No. of frames of the output TC	No. of frames of the displayed TC	LTC UB	VITC UB
CAM	1080-59.94i	60i, 30P (Over 60i)	As per the TC mode*3	As per the TC mode*3	30	30	30/24 switchable	As per the UB mode*5	As per the VITC UB mode
		24P (Over 60i) 24PA (Over 60i)	Always non-drop frame*4	Always non-drop frame*4					Always frame rate information*2
		30PN (Native)	As per the TC mode*3	As per the TC mode*3	24	30	Recording: 24 fixed Playback: 30/24 switchable	As per the UB mode*5,7	Always frame rate information*6
		24PN (Native)	Always non-drop frame*4	Always non-drop frame*4					
	1080-50i	50i, 25P (Over 50i)	—*3	—*3	25	25	25	As per the UB mode*5	As per the VITC UB mode
		25PN (Native)							Always frame rate information*6
	480-59.94i	60i 30P (Over 60i)	As per the TC mode*3	As per the TC mode*3	30	30	30/24 switchable	As per the UB mode*5	As per the VITC UB mode
		24P (Over 60i) 24PA (Over 60i)	Always non-drop frame*4	Always non-drop frame*4					Always frame rate information*2
	576-50i	50i, 25P (Over 50i)	—*3	—*3	25	25	25	As per the UB mode*5	As per the VITC UB mode
	SDI*1	1080-59.94i 480-59.94i	—	As per the TC mode*3	As per the TC mode*3	30	30	30/24 switchable	As per the UB mode*5
1080-50i 576-50i		—*3		—*3	25	25	25		

*1 It will not be slaved to a TC or UB value that is input in the SDI IN connector.

*2 If the option menu FRAME RATE UB is set to "MENU", then recording is performed as per the UB or VITC UB mode. If this is the case, however, edit tools (e.g. PC edit software) cannot record the required information. The menu item FRAME RATE UB is found in the <OPTION> screen on the OPTION MENU page.

*3 For free run, the time code is slaved to the time code input through the TC IN connector.

*4 For free run, the time code is slaved to the time code input through the TC IN connector if it is a non-drop frame.

*5 When the option UB MODE is set to EXT, then the bits are slaved to the user bits input through the TC IN connector. The menu item UB MODE is found in the <TC/UB> screen on the MAIN OPERATION page.

*6 Regardless of the menu settings, frame rate information is always recorded. During playback, the information is output after being converted into pull-down frame rate information.

*7 When the UB MODE is set to "FRM RATE", the pull-down frame rate information read out from the VITC UB area is output during playback.

*8 For details on this item, refer to [Recording formats and output connector signal formats] (page 48)

Setting of the User bits

LTC UB is selected with the UB MODE menu option, and VITC UB is selected with the VITC UB MODE menu option. You can select each menu option from the <TC/UB> screen of the MAIN OPERATION page.

USER (UB MODE only)

The included user value is recorded. A user value is input through the display window. The recorded user value is retained even if the power is turned off.

→For more information about how to input a user value, see [Inputting a user value] (page 64).

TIME

The time kept by the built-in clock is recorded.

DATE

The hour digits for date and time kept by the built-in clock are recorded.

EXT (UB MODE only)

The user bits value input through the TC IN connector is recorded. The included user's value will also be this input value.

TCG

The time code value is recorded.

FRM RATE

The frame rate information for camera shooting is recorded.

→[Frame rate information recorded in user bits] (page 64)


REGEN

The user bits last recorded on the current target P2 card is read and recorded as is.

USER/EXT (VITC UB MODE only)

The included user's value is recorded as the VITC UB area. It is the same value as the user bits indicated when the option UB MODE is set to "USER" or "EXT".

Inputting a user value

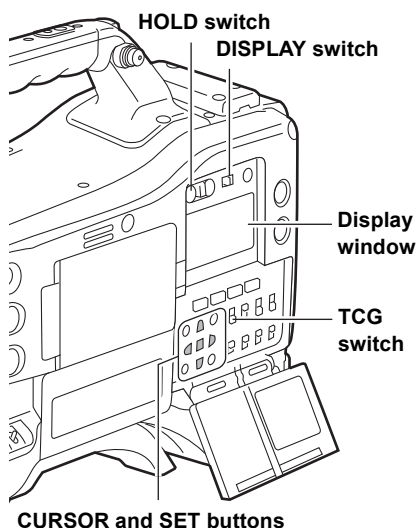

1 Position the DISPLAY switch at [UB].

2 Position the TCG switch at [SET].

When the left digit starts blinking you can change the value.

3 Use CURSOR buttons to set the user bits.

- ▷ button: Shifts the target (blinking) digit to the right.
- ◁ button: Shifts the target (blinking) digit to the left.
- △ button: Advances the blinking number by one digit.
- ▽ button: Winds back the blinking number by one digit.

4 Position the TCG switch at [F-RUN] or [R-RUN].

5 Go to the <TC/UB> screen from the MAIN OPERATION page, and set the menu option UB MODE to "USER".

◆ Notes

- When the TCG switch is positioned at [SET], thumbnails cannot be manipulated.
- To confirm VITC UB, press the HOLD switch to display VTCG on the display window.

Retaining the user bits


The data set for the user bits are automatically saved and retained even if the camera-recorder is turned off.

Frame rate information recorded in user bits

If video information to be recorded based on the frame rate set through the menu option CAMERA MODE is recorded in the user bits, it can be edited with editing tools (e.g. PC editing software). In 1080i and SD mode, the frame rate information for the VITC UB recorded are used usually. The menu item CAMERA MODE is found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.

Frame rate information

The frame rate and video pull-down menu are linked to the time code and user bits as follows:

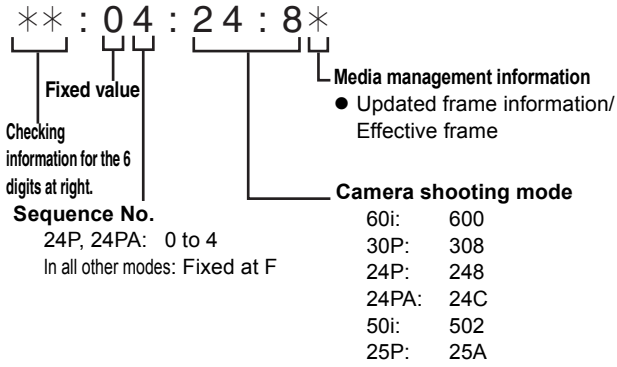

Frame rate: 24P Over 60i (2:3)

Starting field for the updated frame

Time code frame digit

00	01	02	03	04	05	06	...	23	24	25	26	27	28	29
----	----	----	----	----	----	----	-----	----	----	----	----	----	----	----

Image

Ao	Ae	Bo	Be	Co	Ce	Do	De	Ao	Ae	Bo	Be	...	Co	Ce	Do	De	Ao	Ae	Bo	Be	Co	Ce	Do	De
----	----	----	----	----	----	----	----	----	----	----	----	-----	----	----	----	----	----	----	----	----	----	----	----	----

Sequence No.

0	1	2	3	4	0	1	...	3	4	0	1	2	3	4
---	---	---	---	---	---	---	-----	---	---	---	---	---	---	---

Updated frame information

10	10	01	01	00	10	10	...	01	00	10	10	01	01	00
----	----	----	----	----	----	----	-----	----	----	----	----	----	----	----

Frame rate: 24PA Over 60i (2:3:3:2)

Time code frame digit

00	01	02	03	04	05	06	...	23	24	25	26	27	28	29
----	----	----	----	----	----	----	-----	----	----	----	----	----	----	----

Image

Ao	Ae	Bo	Be	Co	Ce	Do	De	Ao	Ae	Bo	Be	...	Co	Ce	Do	De	Ao	Ae	Bo	Be	Co	Ce	Do	De
----	----	----	----	----	----	----	----	----	----	----	----	-----	----	----	----	----	----	----	----	----	----	----	----	----

Sequence No.

0	1	2	3	4	0	1	...	3	4	0	1	2	3	4
---	---	---	---	---	---	---	-----	---	---	---	---	---	---	---

Updated frame information

10	10	01	00	10	10	10	...	00	10	10	10	01	00	10
----	----	----	----	----	----	----	-----	----	----	----	----	----	----	----

Frame rate: 30P Over 60i (2:2) 25P Over 50i (2:2)

Time code frame digit

00	01	02	...
----	----	----	-----


Image

Ao	Ae	Bo	Be	Co	Ce	...
----	----	----	----	----	----	-----

Updated frame information

10	10	10	...
----	----	----	-----

The frame rate information of user bits in Native recording is as follows.

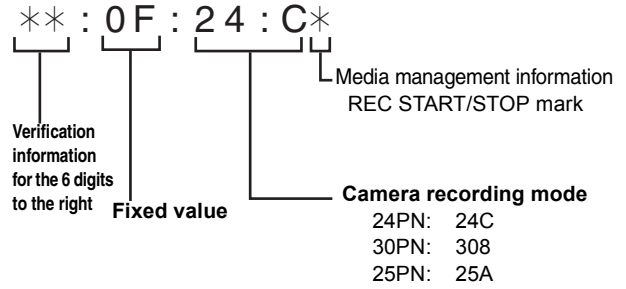

◆ Note

During playback of clips recorded in Native recording frame rate information of user bits is converted according to the image pull down and then output.

Example: Recording

**** : 0 F : 2 4 : C ***

Playback

**** : 0 # : 2 4 : 8 ***

indicates sequence No. 0 to 4.

Setting the Internal Clock's Date and Time

- 1** Position the DISPLAY switch at [UB].
- 2** Press the HOLD button to display a date in the display window.
- 3** Position the TCG switch at [SET].
- 4** Use the CURSOR and SET buttons to set the year, month and day (Y/M/D).
Note that any later than 2037 cannot be set.
 - ▷ button: Shifts the target (blinking) digit to the right.
 - ◁ button: Shifts the target (blinking) digit to the left.
 - △ button: Advances the blinking number by one digit.
 - ▽ button: Winds back the blinking number by one digit.
- 5** Press the HOLD button to display a time in the display window.
- 6** Use the CURSOR buttons to set the hour, minute and second (h/min/s).
- 7** Position the TCG switch at [F-RUN] or [R-RUN]. The internal clock starts at the moment the switch position is changed.
- 8** Press the HOLD button to display a time zone (time difference between local time and Greenwich Mean Time) in the display window.
- 9** Position the TCG switch at [SET].
- 10** Use the △ and ▽ buttons to set the desired hours and minutes ahead of (no sign) or behind (– sign) the Greenwich Mean Time.

Example: If the local time is five hours behind Greenwich Mean Time (New York), set the time zone to "05:00 –".

The time zone is always recorded, together with the date and time, as metadata.
See the table at right to set the time zone according to your local time.

- 11** Position the TCG switch at [F-RUN] or [R-RUN] to accept the time zone.

◆ Notes

- When using the camera-recorder for the first time, be sure to perform this setting beforehand. Do not change the setting during use of the camera-recorder.
- When the TCG switch is positioned at [SET], thumbnails cannot be manipulated.

Time difference	Area	Time difference	Area
00:00	Greenwich	–12:00	Kwajalein
+ 00:30		–11:30	
+ 01:00	Central Europe	–11:00	Midway Island
+ 01:30		–10:30	
+ 02:00	Eastern Europe	–10:00	Hawaii
+ 02:30		–09:30	Marquesas Islands
+ 03:00	Moscow	–09:00	Alaska
+ 03:30	Tehran	–08:30	
+ 04:00	Abu Dhabi	–08:00	Los Angeles
+ 04:30	Kabul	–07:30	
+ 05:00	Islamabad	–07:00	Denver
+ 05:30	Bombay	–06:30	
+ 06:00	Dacca	–06:00	Chicago
+ 06:30	Rangoon	–05:30	
+ 07:00	Bangkok	–05:00	New York
+ 07:30		–04:30	
+ 08:00	Beijing	–04:00	Halifax
+ 08:30		–03:30	Newfoundland Island
+ 09:00	Tokyo	–03:00	Buenos Aires
+ 09:30	Darwin	–02:30	
+ 10:00	Guam	–02:00	Mid-Atlantic
+ 10:30	Lord Howe Island	–01:30	
+ 11:00	Solomon Islands	–01:00	Azores Islands
+ 11:30	Norfolk Island	–00:30	
+ 12:00	New Zealand		
+ 12:45	Chatham Islands		
+ 13:00			

◆ Notes

- In Step 4, if the TCG switch is positioned at [F-RUN] or [R-RUN], this also activate the internal clock.
To cancel date, time and time zone settings in process, hold down the SET button and position the TCG switch at [F-RUN] or [R-RUN].
- Clock accuracy fluctuates between about ± 30 seconds per month when the power is turned off. If more accurate timekeeping is required, check the time when the power is turned on and, if necessary, reset the clock.
When the GPS unit AJ-GPS910G is installed, and if it successfully receives time information, the internal clock keeps accurate (local) time based on the received time (Greenwich Mean Time) and the time zone. If the date and time differ from the actual local time, the time zone may not be set correctly. Check again, to see if the time zone is set correctly. (The date and time need not be set again.)
- The built-in clock operates for several years on a lithium battery built into the camera-recorder. When the lithium battery is exhausted, the viewfinder indicates the message "BACKUP BATT EMPTY" when the power is turned on.
→ [Maintenance] (page 148)

1 Position the **DISPLAY** switch at **[TC]**.

2 Position the **TCG** switch at **[SET]**.

3 Set the menu option **TC MODE** to “**DF**” or “**NDF**”.

“DF” steps the time code in drop frame mode, and “NDF” steps it in non-drop frame mode. However, the camera always operates in “NDF” for 24P, 24PA and 24PN (Native) modes. The menu item TC MODE is found in the <TC/UB> screen on the MAIN OPERATION page.

◆ **Note**

Switching between DF and NDF is operative only when the system frequency of the camera-recorder is set to 59.94 Hz.

4 Use the **CURSOR** buttons to set the time code.

The time code setting range extends from 00:00:00:00 to 23:59:59:29 (59.94 Hz), 23:59:59:23 (24PN) or to 23:59:59:24 (50 Hz).

- ▷ **button**: Shifts the target (blinking) digit to the right.
- ◁ **button**: Shifts the target (blinking) digit to the left.
- △ **button**: Advances the blinking number by one digit.
- ▽ **button**: Winds back the blinking number by one digit.

5 Change the position of the **TCG** switch.

[F-RUN] steps the time code in free run mode, and [R-RUN] set it in recording run mode.

◆ **Notes**

- When the unit is in the 24P or 24PA mode, time code settings are adjusted to the five-frame unit. For 24PN (Native) mode, it is adjusted for counting by the four-frame unit. The time code cannot be set when recording in the 24P, 24PA, and 24PN (Native) formats.
- When the TCG switch is positioned at [SET], thumbnails cannot be manipulated.

Regeneration of Time Code

When the TGC switch is positioned to R-RUN, the time code recorded on the last frame of the last recorded clip (with the latest recording date) on the P2 card is read, and this time code can be used again.

When the menu option FIRST REC TC is set to REGEN and a P2 card is removed or inserted or the target recording card is changed with the USER button for the SLOT SEL function, the same time code is added to the last recorded clip on the target P2 card. When there is no recorded clip, the time code is recorded on the new recording target P2 card, from the value generated by the TC generator built into the camera-recorder. The menu item FIRST TC REC is found in the <TC/UB> screen on the MAIN OPERATION page.

Regeneration function using REC REVIEW

If the menu option FIRST REC TC is set to PRESET, if the time code has been set or reset, or if the time code has been switched from free run to Rec run, it is possible to regenerate the time code as the last time code of a clip recorded on the P2 card.

This action requires you to preset the RET SW menu option to “R. REVIEW” and the REC REVIEW REGEN menu option to “ON”. The menu item RET SW is found in the <SW MODE> screen on the CAM OPERATION page, and the menu item REC REVIEW REGEN is found in the <TC/UB> screen on the MAIN OPERATION page.

1 Make sure the P2 card to record the data.

To regenerate the time code of the last recorded clip when more than one P2 card is inserted, press the Thumbnail button to open the thumbnail screen.

2 Be sure a P2 card is inserted for recording the clip displayed at the end of the screen, and then switch the slot with the USER button assigned the SLOT SEL function so that data will be recorded on the P2 card.

3 Press the RET button on the lens.

- The message “TC REGEN” is displayed in the viewfinder.
- During the next recording, the time code of the last recorded clip on the card will be regenerated.

◆ **Notes**

- When a card with recorded data is changed, the time code of the last recorded clip on the changed P2 card will be regenerated.
- This function is disabled during recording or free-run.

Time code function during battery replacement

Even during battery replacement, the backup mechanism functions, allowing the camera-recorder to operate continuously.

If SYSTEM MODE is changed, a free-run time code may shift. After turning on the power again, confirm the time code and reset if necessary.

◆ **Note**

When the POWER switch has been switched ON → OFF → ON, the backup accuracy of the time code in free run mode is about ±2 frames.

Externally Locking the Time Code


The unit's internal time code generator can be locked to an external generator. In addition, the external time code generator can be locked to the unit's internal generator.

Example of connections for external locking


As the figure shows, connect both the reference video signal and reference time code.

For more information about the reference video signal and GENLOCK, see [Setting External Reference Signal and GENLOCK] (page 61).

Example 1: When locking onto an external signal

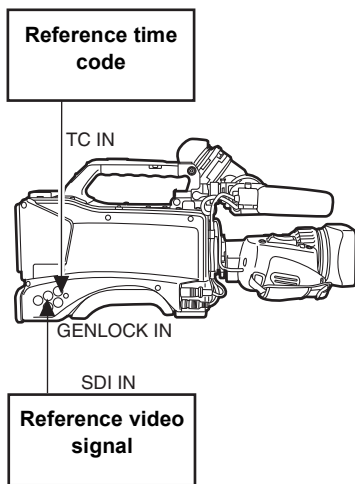

Example 2: When connecting a multiple number of units and using one of them as the reference unit

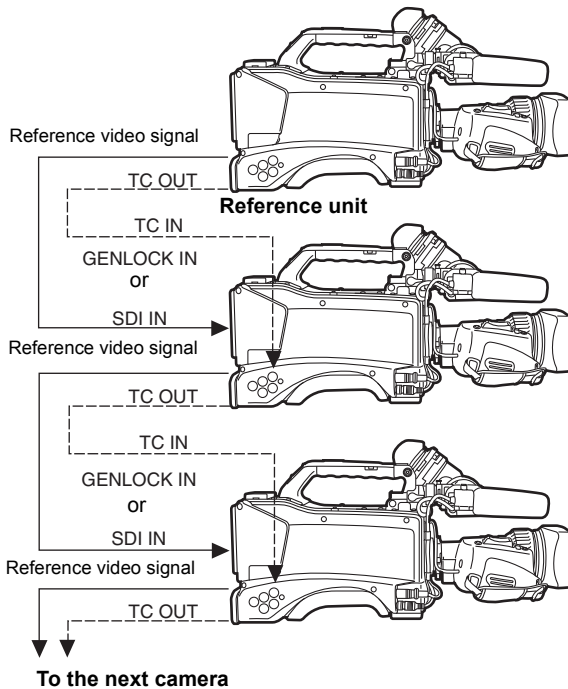

◆ Note

If you make a system with more than one unit, use the same settings for all cameras for input and output. When different settings are mixed, the image timing will not match.

In the unit, there is a video signal delay in the camera, which is required or the process of converting video images taken with the image-shooting element from the progressive signals to the interlace signals. Since time is required for making the 2:3 pull-down from the 24P frame, there is a video signal delay in the camera. When recording from a device that can record images without a delay and the unit is connected in parallel, it is necessary to synchronize the time code. To set this timing, set it in the TC VIDEO SYNCHRO item. The menu item TC VIDEO SYNCHRO is found in the <TC UB> screen on the MAIN OPERATION page. Set by referring to the connection example.

Setting of the TC VIDEO SYNCHRO item


Item	Variable range	Remarks
TC VIDEO SYNCHRO	0 1 2 3	For setting to correct the time code according to the delay of video signals. 0: Do not correct. 1: To delay the time code to be input according to the timing of the video images. 2: To forward the time code to be output according to the timing of the video images. 3: To delay the time code to be input and forward the time code to be output, respectively, according to the timing of the video images.

◆ Note

This setting is enabled during progressive shooting (when CAMERA MODE is 24P, 30P, 25P), and when the Scan Reverse function is operating. This setting is unnecessary during normal recording (when CAMERA MODE is 60i, 50i).


Example 3:

When the unit and an external device are locked to the external time code generator, which is connected externally, and when simultaneous recording is made by using the TC OUT output signals.

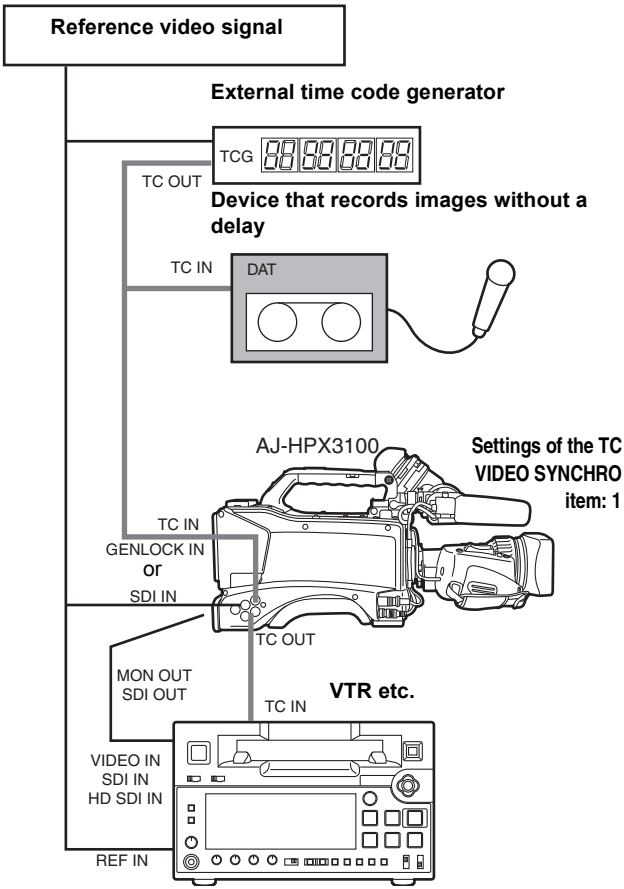


Example 4:

When the unit and an external device are locked to the external time code generator and when several units of the camera are connected in a cascade configuration.

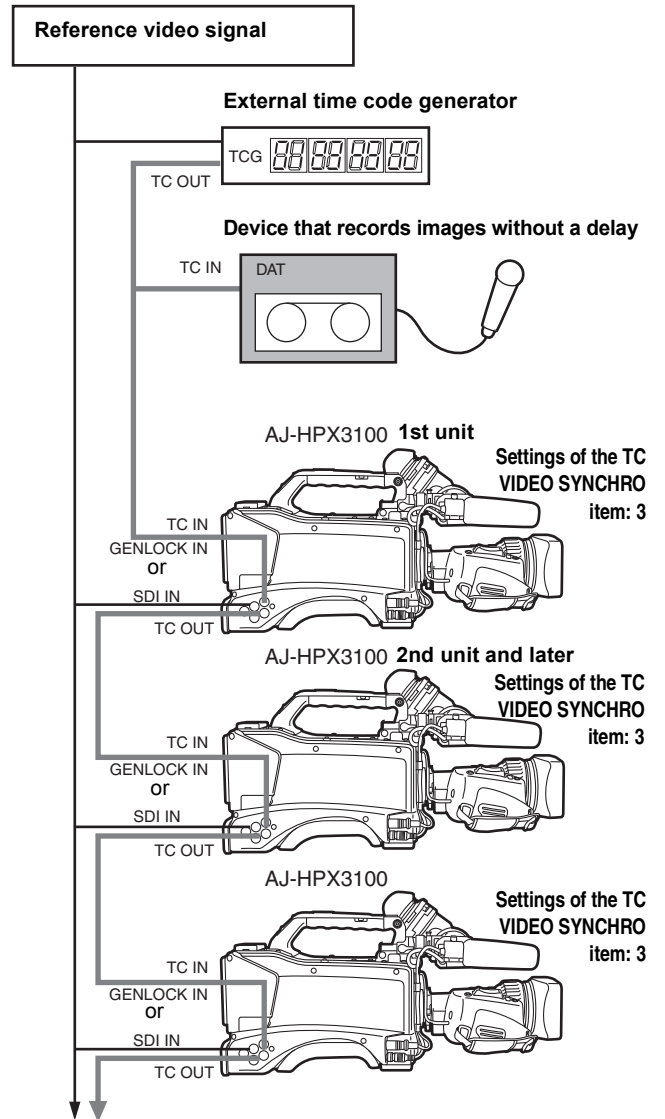


Example 5:

When an external device is locked to the time code generator of the unit.

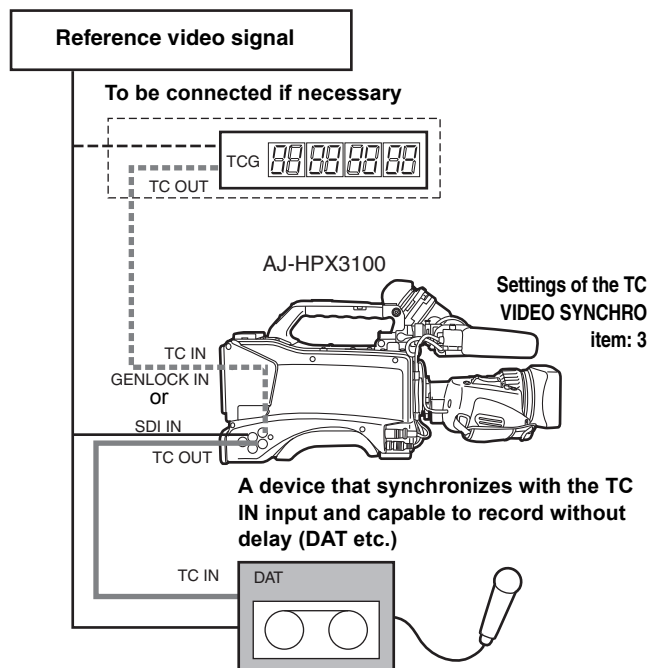

Example 6:

When an external device is locked to the time code generator of camera-recorder, which is connected in a cascade configuration.

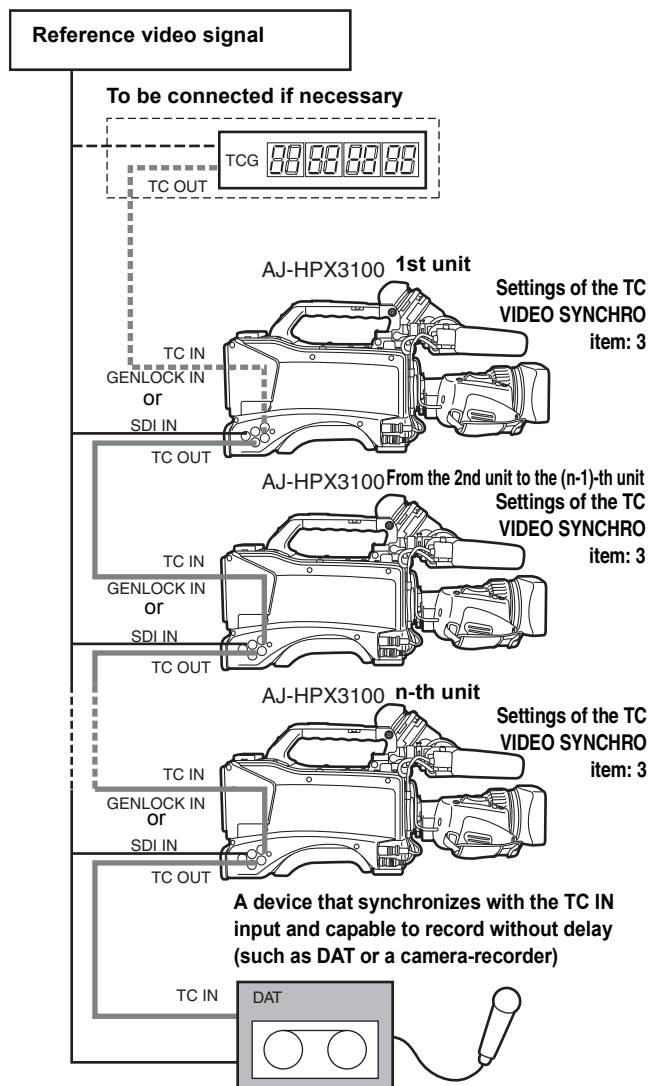

To externally lock the time code

Follow the steps below.

- 1 Turn on the POWER switch.**
- 2 Position the TCG switch at [F-RUN].**
- 3 Position the DISPLAY switch at [TC].**
- 4 Set the menu option GENLOCK to “GL IN” or “SDI IN”.**
This option can be found in the <GENLOCK> screen, which is accessible from the SYSTEM SETTING page.
- 5 Supply a phase-relationship reference time code (that conforms to the time code requirements) and reference video signals to the GENLOCK IN or SDI IN connectors, respectively.**

Now the built-in time code generator is locked with the reference time code.

From about 10 seconds after locking the time code generator stays locked even if the supply of external reference time code is discontinued.

◆ Notes

- When the time code generator is externally locked, the time code instantly becomes locked with the external time code, and the counter displays the external time code value. Do not put the unit in recording mode before the sync generator stabilises. Additionally, time codes lock on TC IN connector signals. Time codes of HD SDI signals input from the SDI IN connector are not locked.
- Be sure to enter the non-drop-frame time code to externally lock the time code in the 24P, 24PA or 24PN (Native) mode. Externally locking the drop-frame time code is not permitted. Video quality may be degraded momentarily while externally locking to adjust the 5-frame cycle. This is not abnormal.
- While recording data in the 24P, 24PA, or Native modes, it is impossible to lock the time code externally. Lock it before recording.
When the unit PRE REC MODE is set to [ON] in these modes, corrupt images or stopped time codes may be recorded if the time code is switched from REC RUN to FREE RUN immediately before recording or when using slave lock.

Setting the user bits when the time code is externally locked

When the TCG switch is positioned to F-RUN, only the time code is locked to an external time code. To lock the user bits to an externally input value, the UB MODE and VITC UB MODE menu options must be set to “EXT” and “USER/EXIT”, respectively.

These menu items are found in the <TC/UB> screen on the MAIN OPERATION page.

To unlock the externally locked time code

Discontinue external time code supply, then position the TCG switch at [R-RUN].

Cautions in switching the power source from battery to external power supply

Connect the DC IN socket with the external power supply before removing the battery pack, in order to keep the time code generator energised. If the battery pack is removed first, there is no guarantee that the time code will stay externally locked.

External synchronisation of the camera when the time code is externally locked

When the time code is externally locked, the reference video signals input through the GENLOCK IN or SDI IN connector gen-lock the camera.

◆ Notes

- To externally lock the unit, as the master device, with more than one unit, the mode must be the same as that of the camera. Note that in a system using both interlaced and progressive scanning, there may be breaks in the video and time code.
- When this unit’s MON OUT connector and SDI OUT connector are used as reference video signals, set the MONITOR OUT MODE menu option or the SDI OUT MODE menu option to “CAM”. These menu items are found in the <OUTPUT SEL> screen on the SYSTEM SETTING page.

Superimpose of time codes

To display the time code in the viewfinder or the LCD monitor when recording or during playback, set TC in <VF INDICATOR3/3> to “TCG”, “TCR”, or “TCG/TCR”.

To display these time code displays in MONITOR OUT and SDI OUT output, set the MON OUT CHARACTER switch on the side panel to [ON], set the MONI OUT CHARA menu option to “ON”, and set the SDI OUT CHARACTER switch to [ON]. You can select the MONI OUT CHARA menu option from the <OUTPUT SEL> screen of the SYSTEM SETTING page.

Additionally, to display time codes while displaying the color bar, set the TC ON COLOR BAR menu option to “ON”. You can select the TC ON COLOR BAR menu option from the <VF INDICATOR> screen of the VF page.


Providing an ID to the Camera

The camera ID is specified through the <CAMERA ID> screen. The ID can include up to 10 alphanumeric characters, symbols, and/or spaces.

◆ Note

When the settings menu is displayed, outputting color bar signals does not indicate the camera ID.

- 1 Go to the <CAMERA ID> screen from the CAM OPERATION page and turn the JOG dial button to move the cursor to options [ID1:] - [ID3:].**

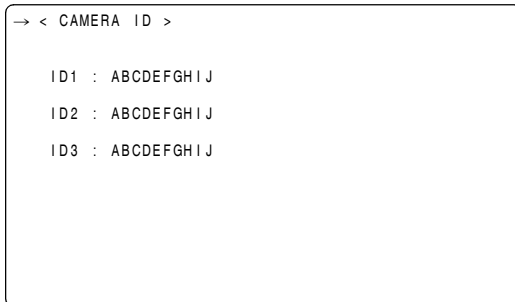

- 2 Press the JOG dial button.**

The cursor moves to the ID entry area, allowing you to enter an ID.

- 3 Turn the JOG dial button until a desired character appears.**

The characters that appear are switched in the following order:

Space:
↓
Alphabetical characters: A to Z
↓
Numerals: 0 to 9
↓
Symbols: ', >, <, /, -

- 4 Press the JOG dial button to accept a desired character.**

- 5 Turn the JOG dial button to move cursor to the next digit (clockwise), and repeat Steps 3 - 4 to set characters.**

- To change an input character, turn the JOG dial button to move the arrow (cursor) to the appropriate character and carry out steps 3 and 4.
- When all the characters are set, turn the JOG dial button to move the cursor to [:].
- Pressing the JOG dial button brings the cursor back to the options [ID1:] - [ID3:].

- 6 To exit the menu, press the MENU button.**

◆ Notes


- When the menu option CAMERA ID is set to "BAR", the camera ID is recorded together with color bar signals. The menu item CAMERA ID is found in the <VF INDICATOR> screen on the VF page.
- The ID POSITION menu option can be used to select a position where the camera ID is superimposed on the color bar. The menu item ID POSITION is found in the <VF INDICATOR> screen on the VF page.
- When the TIME/DATE menu option is set to ON, the camera ID along with the data and time information are superimposed on the color bar. The menu item TIME/DATE is found in the <VF INDICATOR> screen on the VF page.
- When the TC ON COLOR BAR is turned ON, the time code is displayed when the color bar is output, but the time code is not recorded. The menu item TC ON COLOR BAR is found in the <VF INDICATOR> screen on the VF page.

Setting UMID Information

The unit supports UMID (Unique Material Identifier) metadata. You need to specify as UMID information the country where you live (using up to three characters), organisation or company (up to four characters) and user name (up to four characters). For the country name, you must use abbreviations prescribed in the ISO3166 Country Code*1.

Here are some examples of the correct method for specifying a user name:

*1 Examples: China CHN
U.S.A. USA
Canada CAN
Japan JPN

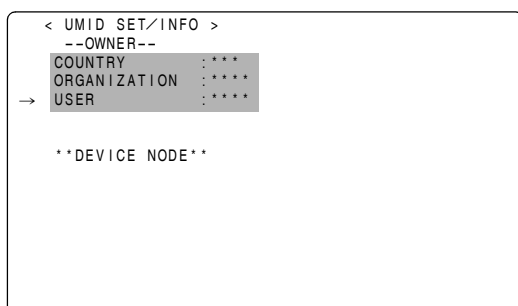

1 Go to the <UMID SET/ INFO> screen from the MAIN OPERATION page and turn the JOG dial button to move the cursor to the option [USER].

2 Press the JOG dial button.

The cursor moves to the user entry area, allowing you to enter a user name.

3 Turn the JOG dial button until a desired character appears.

The characters appear in the following order:

Space:
↓
Alphabetical characters: A to Z
↓
Numerals: 0 to 9
↓
Symbols: ', >, <, /, -

◆ **Note**

The COUNTRY entry can only include alphabetical characters and spaces.

4 Press the JOG dial button to accept a desired character.

5 Turn the JOG dial button to move the cursor to the next digit (clockwise), and repeat Steps 3 to 4 to set characters.

- To change an input character, go back to step 2.
- When the last character is set, press the JOG dial button to bring the cursor back to the option [USER].

6 To exit the menu, press the MENU button.

CTL Count Setting and Display

By setting the DISPLAY switch to "CTL", CTL count is displayed on the time count indication of the LCD display window.

The CTL count is displayed in ± 12 hours with non-drop-frame.

The playback order of clips recorded on a P2 card is not linear as for VTRs. It is organized according to thumbnail operations or exchanging P2 cards, and the priority of recorded clips will be altered. Therefore, different CTL counts are displayed for recording mode and playback mode, respectively.

CTL count for recording mode (recording CTL)

Recording CTL count is displayed during recording mode (REC, REC/PAUSE, STOP and REC REVIEW), and the count continues from the end point of the previous recording. Recording CTL count is retained even if the power is turned off. When the power is next turned on, the count continues from the previous value.

◆ Notes


- If the RESET button is pressed while the recording CTL count is being displayed, only the recording CTL count is reset. Note that reset is disabled during the REC REVIEW operation.
- 24 frames are counted in the 24PN (Native) mode.

CTL count for the playback mode (playback CTL)

During playback mode (PLAY, FF, REW, PLAY/PAUSE), playback CTL count is displayed.

Whenever the playback order of clips is altered (clips are sorted by shooting dates), previous playback CTL count is disabled. The first frame of the first clip is used as a reference value for recalculation, and the new playback CTL count is displayed.

Example:

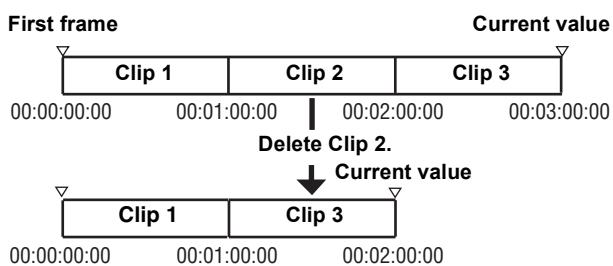


The playback order of clips is altered when either of the following occurs:

- Clips are deleted, copied or restored, or the P2 card is formatted.
- The thumbnail display is switched (for more information, see [Switching the Thumbnail Display] (page 122)).
- A P2 card is inserted or removed.

The reference value (value of the first frame of the first clip) is changed when either of the following occurs:

- The power is turned on, the first frame becomes 0.
- When the playback CTL count is reset, the current playback position is set as 0, and the previous reference value becomes a negative value.

Example:

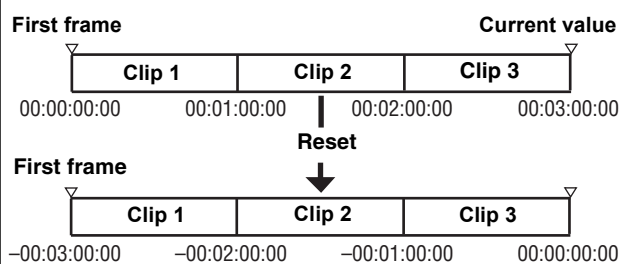


◆ Notes

- If the RESET button is pressed while the playback CTL count is being displayed, only the playback CTL count is reset.
- For playback in 24PN (Native) mode, 30 frames are counted in accordance with the pull-down images.

Viewfinder Screen Status Displays

In addition to video images, the viewfinder displays lamps and text that indicate the settings and operating status of the unit, together with messages, a center marker, a safety zone marker and the camera ID.

Lamps in the Viewfinder Screen

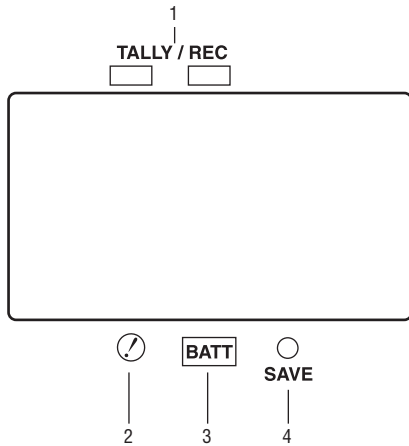

The above viewfinder is the AJ-HVF21KG (for further information on your optional viewfinder model, see the relevant instruction manual).

1. TALLY/REC (recording) Lamp

This lamp stays illuminated during recording, and starts blinking if any abnormal action occurs.

→[Warning System] (page 153)

2. Abnormal Operating Status Warning Lamp

This lamp comes on when the unit is in any of the abnormal operating statuses specified through the menu sub-option !LED.

→For statuses that activate the lamp, see the options in the <!LED> screen in [!LED] (page 180).

3. BATT (battery) Lamp

This lamp starts blinking a few minutes before the battery charge starts to run out, and stays illuminated after the battery is completely flat. The battery should be replaced before it is nearly flat, so that operation will not be interrupted.

→[Warning System] (page 153)

4. SAVE Lamp

In the normal setting:

The lamp stays OFF.

When the menu option SAVE LED is set to “P2 CARD”:

The lamp starts blinking when the P2 card remaining free space is getting low.

The menu item SAVE LED is found in the <VF INDICATOR> screen on the VF page.

→[Warning System] (page 153)

Mode Check Screen Displays (MODE CHK function)

The viewfinder can display a screen that allows you to check the settings and status of the unit.

When you pull the MARKER SEL or MODE CHK/MENU CANCEL switch of this unit toward you, 6 screen displays switch.

STATUS screen → !LED screen → FUNCTION screen → AUDIO screen → CAC screen → USER SW STATUS screen → No indication

Each screen is displayed for about five seconds. When you pull the MARKER SEL or MODE CHK/MENU CANCEL switch toward you while displaying a screen, it moves to the next screen.

Whether or not to display each screen is specified through the <MODE CHECK IND> screen, which is accessible from the VF page.

```
→ < MODE CHECK IND >
STATUS           :ON
! LED            :ON
FUNCTION         :ON
AUDIO            :ON
CAC              :ON
USER SW STATUS  :ON
P. ON IND       :ON
```

Selecting Viewfinder Display Information

To select the information items you want to have displayed in the viewfinder screen, go to the <VF INDICATOR> screens from the VF page, and turn on or off the appropriate options, or specify desired values.

→ For directions on setting the options, see [Setting Menu Options] (page 160).

```

→ < VF INDICATOR1/3 >
EXTENDER      :ON
SHUTTER       :ON
FILTER        :ON
WHITE         :ON
GAIN          :ON
IRIS          :S+IRIS
CAMERA ID     :BAR
ID POSITION    :UPPER L
DATE/TIME     :OFF
ZOOM LVL     :ON
SYSTEM MODE   :ON
REC FORMAT    :ON
CAMERA MODE   :ON
↓
    
```

```


→ ↑ < VF INDICATOR2/3 >
COLOR TEMP    :ON
CAC           :OFF
GAMMA MODE    :ON
DRS          :ON
↓
    
```

```

→ ↑ < VF INDICATOR3/3 >
P2CARD REMAIN :TOTAL
BATTERY       :ON
AUDIO LVL     :ON
TC ON COLOR BAR :OFF
TC            :OFF
SYSTEM INFO   :NORMAL
SAVE LED      :OFF
REC STATUS    :OFF
P-REC/I-REC   :ON
    
```

Viewfinder Status Indication Layout

The indications are arranged as illustrated below.

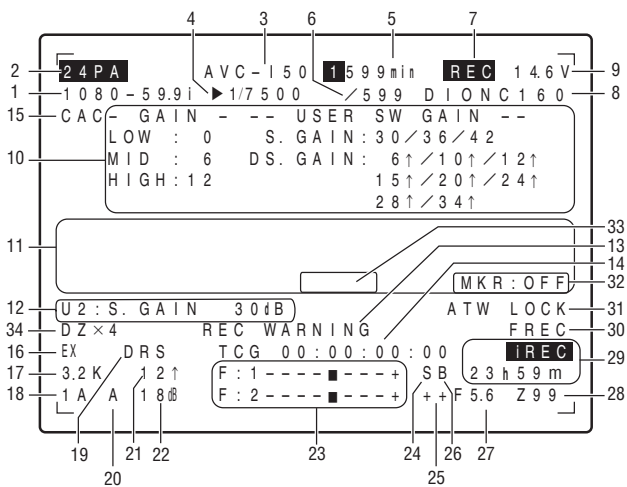


For more information, see the following pages:

Information Item	Indication	Status
1. System mode	1080-59.9i 1080-50i 480-59.9i 576-50i	This indicates the mode that the unit operates in. 1080-59.94 interlace mode 1080-50 interlace mode 480-59.94 interlace mode 576-50 interlace mode
2. Camera mode	60i 30P 24P 24PA 50i 25P	This indicates the video system when signals output from CCD are recorded on a P2 card or output as video signals. 1080-59.94i or 480-59.94i 1080-29.97P or 480-29.97P 1080-23.98P or 480-23.98P (2-3 Pull-down) 1080-23.98P or 480-23.98P (2-3-3-2 Pull-down) 1080-50i or 576-50i 1080-25P or 576-25P ◆ Note In AVC-Intra format, it becomes Native recording for 30P, 24P, and 25P.
3. REC FORMAT	AVC-I 100 AVC-I 50 DVCPRO HD DVCPRO50 DVCPRO DV	This indicates the recording mode.
4. Shutter speed/mode	▶1/**.*/*▶***.*d 1/60 (1/100) - 1/2000, HALF, ***.*d	This indicates that the shutter speed is set to SYNCHRO SCAN. This indicates that a fixed shutter speed has been set.
5. P2 card remaining free space	***min END WP LOOP INFO P2 */*	The indication “***min” stays illuminated under normal conditions or blinks when the remaining level is near zero. When the card space is used up, “END” blinks. The P2 card is write-protected. The camera-recorder is in LOOP REC mode. When loop recording cannot be performed, for example because the P2 card has no free space, the indication blinks. P2 card being recognised. Total free space/capacities of the P2 cards (when MODE CHECK is being performed). ◆ Note When the menu item P2 CARD REMAIN is set to “ONE CARD”, the number of the P2 card slot that contains the target card is indicated, together with the remaining space. The menu item P2 CARD REMAIN is found in the <VF INDICATOR> screen on the VF page. → [P2 Card Remaining Free Space/capacity Indication] (page 83).
6. P2 card remaining free space (MODE CHECK)	1 ***min	The number of the P2 card slot that contains the target card and the remaining free space (when MODE CHECK is being performed) are indicated. This item displays the estimated recording time (Refer to [Loop Recording] (page 39)) when in LOOP REC mode. This indication also appears when the target P2 card has been switched with a user button.
7. Camera-recorder REC indication	REC	This is displayed when the menu item REC TALLY of the is set to “CHAR”. The menu item REC TALLY is found in the <OPTION MODE> screen on the SYSTEM SETTING page. This is displayed when the menu item REC STATUS is set to “ON”. The menu item REC TALLY is found in the <VF INDICATOR> screen on the VF page.
8. Battery type (MODE CHECK)	DIONIC90 - AC ADPT	Battery type, selected through a menu option. “AC ADPT” indicates when an external DC power supply has been input.
9. Battery remaining level/voltage	**.*V ***% EMP MAX	Battery remaining level in tenths of a volt The remaining battery level is indicated in percentage. This indicates that the battery level is empty. This indicates the battery is fully charged.

Information Item	Indication	Status
10. GAIN switch assignment information (during MODE CHECK)	LOW/MID/HIGH -6 to 30 S.GAIN 30/36/42 DS.GAIN 6 ↑ /10 ↑ /12 ↑ / 15 ↑ /20 ↑ /24 ↑ / 28 ↑ /34 ↑	Value set for the master gain Example: LOW: 0 Gain value to which S.GAIN and DS.GAIN are assigned These are displayed only during MODE CHCK.
11. Camera Warning and Report Area (related to AWB, ABB and switch settings)	AWB A ACTIVE AWB B ACTIVE AWB A OK *.*K AWB B OK *.*K AWB BREAK *.*K AWB NG COLOR TEMP LOW COLOR TEMP HIGH LEVEL OVER LOW LIGHT TIME OVER ATW MODE AWB PRESET *.*K AWB UNABLE S.GAIN MODE CHECK FILTER ABB ACTIVE ABB OK ABB BREAK ABB NG B-SHD READY B-SHD ACTIVE B-SHD OK B-SHD BREAK B-SHD NG	AWB being performed on Ch A. AWB being performed on Ch B. AWB successful on Ch A. AWB successful on Ch B. AWB action aborted by user. AWB action failed. The second line indicates the status. Color temperature too low. Color temperature too high. Brightness too high. Brightness too low. Action timed-out. This is indicated when AWB cannot be executed since ATW is being operated. AWB cannot operate because the WHITE BAL switch is set to PRST. AWB cannot operate. The status is displayed on the second line. Super gain is operating. Recheck the location of the filter switching tab when turning the power on and operating AWB. ABB being performed. ABB action successful. ABB action aborted by user. ABB action failed. Black shading accepted (by holding down the AUTO W/B BAL switch during ABB adjustment). Black shading being adjusted. Black shading adjustment successful. Black shading adjustment aborted by user. Black shading adjustment failed.
(Switch changeover indication)	WHITE: # *.*K ATW MODE AUTO KNEE: ON/OFF DRS: ON/OFF GAIN: **dB+** ↑ SS: 1/***** or ***.**deg SS: ► 1/***** or ► ***.**d CC: **** **K ND: * EXTENDER: ON/OFF IRIS: ** F *.*	The WHITE BAL switch has been switched. # is replaced with A, B or PRST. The set color temperature. ATW is set. Displayed when the OUTPUT/AUTO KNEE switch is assigned to ON or OFF and the AUTO KNEE switch is turned ON/OFF. Displayed when the OUTPUT/AUTO KNEE switch is assigned to DRS and the AUTO KNEE switch is turned ON/OFF. Gain has been switched with the GAIN selector switch or a user button. When DS GAIN is operating, the value is also displayed. When the shutter speed has been switched, the shutter speed is indicated. Shutter speed is in SYNCHRO SCAN mode. This appears when the CC filter setting has been selected. This appears when the ND filter setting has been selected. Lens extender has been turned on or off. Indicated when the iris override correction value is to be changed.
(Low light warning)	LOW LIGHT	Brightness too low.

Information Item	Indication	Status
12. User button functions UM: USER MAIN button U1: USER1 button U2: USER2 button U3: SHOT MARK (USER3) button U4: TEXT MEMO (USER4) button	INH S.GAIN **dB/OFF DS.GAIN **↑/OFF S.IRIS ON/OFF I.OVR ON/OFF S.BLK -**/OFF B.GAMMA ON/OFF D.ZOOM ×2/×3/×4/OFF ATW ON/OFF ATW LOCK ON/OFF AUD CH1/3 AUD CH2/4 REC SW Y GET ON RET SW SLOT SEL PRE REC USB HOST/DEVICE/OFF DRS ON/OFF ASSIST ON/OFF C.TEMP ON/OFF LCD B.L SHOT MARK TEXT MEMO	User buttons disabled. Selected S.GAIN Selected DS.GAIN Whether S.IRIS is ON or OFF. Iris override can be set (the IRIS OVERRIDE setting is ON). Status of SUPER BLACK (ON or OFF). When it is ON, the set value is also indicated. Status of BLACK GAMMA (shade correction for the black level): ON or OFF Digital zoom magnification. Indicates whether ATW is ON or OFF. Indicates ATW lock is ON or OFF. Input signal to be recorded on Audio Channel 1 has been switched. Input signal to be recorded on Audio Channel 2 has been switched. USER button acts as REC switch. Y GET function ON. USER button acts as RET switch. Switch that changes the target card is set. Indicates that PRE-RECORDING mode has been switched ON or OFF. USB action status has been switched. Indicates whether the dynamic range stretcher function is ON or OFF. Indicates whether the focus assist function is ON or OFF. Indicates the mode for changing the color temperature with the JOG dial button is ON or OFF. Displayed when intensity of the LCD monitor back light is switched. Displayed when a shot mark is added/erased. Displayed when text memos are recorded.

Information Item	Indication	Status
13. System information and warnings	SYSTEM ERROR-** TURN POWER OFF CARD ERR * REC WARNING OVER MAX# CLIPS TEMPORARY PAUSE BACKUP BATT EMPTY FAN STOP WIRELESS-RF EOM BOS EOS CANNOT REC CANNOT PLAY COMM ERROR TEXT MEMO TEXT MEMO INVALID MARK ON/OFF SHOT MARK INVALID UPDATING USB DEVICE USB HOST THUMBNAIL OPEN CLIP DISCONTINUED TC REGEN SLOT SELECT SLOT SELECT INVALID DIR NG CARD SLOT1/2 RUN DOWN CARD SLOT1/2 REAR XR AUTO	Something abnormal is happening to the internal computer communications or reference signal. No further recording or playback can be performed. ** is replaced with an error code. For more information, see [Error Codes] (page 155). P2 card has been removed while being accessed (recorded, played back, or formatted), and subsequent operation is disabled. An error has occurred while recording data to or playing data from a P2 card. In the actual indication the * is replaced by the slot number of the P2 card that triggered the error. Something abnormal is happening to video and/or audio being recorded. Displayed when the maximum number of clips (1000) recorded to the P2 card is exceeded. There is a temporary halt in recording due to distortion in reference signals such as during GENLOCK input. Backup battery needs replacing. The fan is locked and halted. RF signal from the wireless receiver is degraded. P2 card has no free space. Playback position is at the start of all the clips. Playback position is at the end of all the clips. The P2 card is not recordable. Detailed information is provided on the FUNCTION screen of MODE CHECK. → [Displays in mode check only] (page 82) Clip cannot be played back perhaps because no P2 card is loaded, or the P2 card contains no clips. Displayed when disconnection between microcomputers continues for a specified period or longer. Text memo has been added. Text memo has not been successfully added. Shot mark been added or deleted. For information on shot marks, see [Shot Mark Function] (page 46). This is displayed when shot marks cannot be added. Clip information is being updated. Playback operation disabled. AJ-HPX3100 is in USB DEVICE mode. When communication is disabled, the indication blinks. Indicates that the camera-recorder is set to the USB HOST mode. When the external hard disk is not successfully recognized, then the indication blinks. Thumbnail is being manipulated. Displayed when the consistency of the combined clip is disrupted and subsequent recordings cannot be combined in the clip when recording in ONE CLIP REC mode. The RET button was pressed to regenerate the time code as the time code for the last clip recorded on a P2 card. This blinks while the recording slots of P2 cards are switched after pressing the USER switch where the SLOT SEL function is assigned. This is displayed if the recording slots of P2 cards cannot be switched when the USER switch where the SLOT SEL function is assigned is pressed. This is displayed when the recording starts or completes while a P2 card with an irregular directory arrangement is inserted or data are recorded after inserting an irregular P2 card. This is displayed when the recording starts or completes with a P2 card on which the maximum number of overwrites has been exceeded, or when data is recorded after inserting such a P2 card. The AUDIO IN switch is disabled because audio input automatically goes to the rear XLR connector.
14. Time code indication	TCG 12:59:59:20 TCR 12:59:59:20 (V)UBG AB CD EF 00 (V)UBR 12 34 56 78 CTL -1:59:59:20	TCG (time code generator value) TCR (time code reader value) UBG VUBG (User bits generator value) UBR VUBR (User bits reader value) Displays CTL count.
15. Chromatic aberration compensation	CAC	Displayed when chromatic aberration compensation is activated
16. Extender	EX	Lens extender used.
17. Color temperature	*.*K	Color temperature assigned to A, B, and PRST of the WHITE BAL switch (this is a value stored at AWB performance or a value set through the menu option). The indication is not provided in ATW mode.
18. Filter position	1 - 4 A - D  (blink)	This indicates the position of the ND filter. This indicates the position of the CC filter. This indicates that the filter has not been set to a proper position.
19. Dynamic range stretcher mode	DRS	This appears when the video level of a part with high brightness is compressed, and the function stretching the dynamic range is selected.

Information Item	Indication	Status
20. WHITE BAL switch position	A B P T	WHITE BAL switch positioned at [A]. WHITE BAL switch positioned at [B]. WHITE BAL switch positioned at [PRST]. ATW mode is set. However it flashes when intensity and color are outside the operation range
21. Stored gain indication	6 ↑ /10 ↑ /12 ↑ /15 ↑ /20 ↑ /24 ↑ /28 ↑ /34 ↑	Storage gain (DS.GAIN) value (when active)
22. Gain value	* * dB	Current gain value.
23. Audio input channel and level meter	- - - - ■ - - - - + F W R	Selected channel together with its audio level. AUDIO IN switch is positioned at FRONT. AUDIO IN switch is positioned at W.L.(WIRELESS) AUDIO IN switch is positioned at REAR.
24. Super iris ON	S	Super iris ON.
25. Iris override indication	+ + + - - - (No indication)	Correction phase of the iris override (when active) + + : On the open side by 1 +: On the open side by 0.5 - - : On the closed side by 1 -: On the closed side by 0.5 No indication : Standard status
26. Super black ON	B	Super black ON. ◆ Note This is displayed when "S+IRIS" or "S" is selected in the IRIS menu option. You can select the IRIS menu option from the <VF INDICATOR> screen of the VF page.
27. Iris, F value	NC OPEN F1.7 - F16 CLOSE	Lens cable is not connected. Lens iris is at maximum. Lens iris value Lens iris closed. ◆ Note These indications are provided when the lens is capable of indicating the iris value. When the iris is being overridden, they blink.
28. Zoom indication	Z00 - Z99	Zoom degree is indicated. This indication is not provided for a lens that does not return the zoom position, even if the indication is set to ON.
29. INTERVAL REC/PRE RECORDING information display	i i REC (blink) i REC (blink) * * h * * m / * * s P-REC (blink) P-REC (lit) 1-CLIP 1 * CLIP START 1 * CLIP END 1-CLIP	Displayed before and after operation during INTERVAL REC mode. Displayed during INTERVAL REC operation. Displays the pause time before the next recording during INTERVAL REC. Displayed until images/audio are completely recorded to the P2 card after stopping recording. Do not remove the P2 card or turn the power off until the flashing display completely turns off. ◆ Note "P-REC" flashes regardless of the PRE RECORDING function settings. When the PRE RECORDING function is set to ON, lights when you pull the MARKER SEL, MODE CHK / MENU CANCEL switch toward you. In addition, this displays when the mode switches to PRE RECORDING mode by pressing the PRE REC assigned USER switch. Displayed when a recording is about to be recorded to a new clip while ONE CLIP REC mode is on. Displayed when a recording can be compiled and recorded to the previous clip while ONE CLIP REC mode is ON. ◆ Note If the P2 card is removed or the clip is deleted, subsequent recordings are recorded to a new clip when the previous combined clip does not exist. In this case, "1 * CLIP" may remain displayed. Displayed when recording of a new clip has started in ONE CLIP REC mode. Displayed when a combined clip is complete in ONE CLIP REC mode.
30. Gamma mode display	HD/SD/FLK1/FLK2/FLK3/ FREC/VREC	Gamma mode selected with the GAMMA MODE SEL menu option. You can select the GAMMA MODE SEL menu option from the <GAMMA> screen of the PAINT page.
31. ATW lock status	ATW LOCK	Displayed when the color temperature is fixed by pressing the USER switch to which the ATW LOCK function is assigned while ATW is operating.
32. Types of markers	MKR: A/B/OFF	Types of markers currently displayed.
33. Y GET value	* * * . * %	While Y GET is ON, displays output intensity level adjacent to the center marker as a percentage.
34. Digital zoom	DZ × 2 / × 3 / × 4	During digital zoom mode, displays the magnification.

Displays in mode check only

Display screens and menu options		Status when displayed
!LED screen		Displays menu options that become !LED lighting factors. <ul style="list-style-type: none"> ● Indications selected through the menu option !LED are marked with [!]. ● Indications which may activate the !LED are marked with [■].
	GAIN (0 dB) DS.GAIN SHUTTER WHITE PRE. EXTENDER B.GAMMA MATRIX COLOR COR. FILTER ATW	Gain status DS. GAIN value Shutter status White balance status Extender status (EX2 or OFF) BLACK GAMMA status (ON or OFF) MATRIX status (A, B, or OFF) Color correction status (ON or OFF) Filter status ATW status
FUNCTION screen		Displays video output status and recording media information.
SDI OUT	OUTPUT TYPE CHAR	Displays status of signals output from the SDI OUT connector Displays MEM/CAM status displayed with the SDI OUT MODE menu option. You can select the SDI OUT MODE menu option from the <OUTPUT SEL> screen of the SYSTEM SETTING page. Displays format of signals output from the SDI OUT connector with HD-SDI/SD-SDI. Displays superimposition status of characters selected with the SDI OUT CHAR menu option as ON/OFF. You can select the SDI OUT CHAR menu option from the <OUTPUT SEL> screen of the SYSTEM SETTING page.
MON OUT	OUTPUT SELECT CHAR	Displays status of signals output from the MON OUT connector Displays status of MEM/CAM selected with the MONITOR OUT MODE menu option. The MONITOR OUT MODE item can be selected from the <OUTPUT SEL> screen on the SYSTEM SETTING page. Displays signal format set with the MONITOR OUT menu option as HD-SDI/SD-SDI/VBS. The MONITOR OUT item can be selected from the <OUTPUT SEL> screen on the SYSTEM SETTING page. Displays the position of the MON OUT CHARACTER switch as ON/OFF.
P2CARD STATUS	TOTAL SLOT1 SLOT2	Displays the status of a P2 card inserted into the P2 card slot, and total space and remaining space for recording. The card status is indicated as: ACTIVE/ACCESSING/INFO READING/FULL/PROTECTED/ NOT SUPPORTED/FORMAT ERROR/NO CARD → [P2 CARD ACCESS LED and Status of P2 cards] (page 33). Displays the total space and remaining space for recording of a P2 card inserted into the P2 card slot 1 and 2. Displays the status of a P2 card inserted into the P2 card slot 1, and total space and remaining space for recording. Displays the status of a P2 card inserted into the P2 card slot 2, and total space and remaining space for recording.
AUDIO screen		Displays audio settings and selection status of each recording channel
SAMPLE RES		Displays the number of audio recording bits.
MIC POWER (MENU)	FRONT REAR	Displays menu setting status for power provided to the microphone. Displays status of power supplied to the front microphone, selected with the FRONT MIC POWER menu option, as ON/OFF. You can select the FRONT MIC POWER menu option from the <MIC/AUDIO> screen of the MAIN OPERATION page. Displays whether the rear AUDIO IN connector is set to not supply power to the microphone with the REAR MIC POWER menu option. OFF: power is not supplied. ON: supplies power when the switch is at MIC +48 V ON.
VR SELECT		VR SELECT Displays whether the audio level adjustment knob is selected to enable either CH1/2 or CH3/4 with the VR SELECT menu option. You can select the VR SELECT menu option from the <MIC/AUDIO> screen of the MAIN OPERATION page.
LEVEL	CH1/2/3/4	Displays the recording level adjustment method selected for each channel. VR: manual adjustment with the adjustment knob MENU: manual adjustment with the menu LVL CONTROL CH# menu option (# is the channel number) AUTO: automatic adjustment
F.VR	CH1/2/3/4	Displays with ON/OFF whether the F.AUDIO LEVEL control is enabled for channels to which VR (manual adjustment with the adjustment knob) is selected above.
R.XLR	CH1/2/3/4	Displays with ON/OFF the selection status of the REAR XLR AUTO CH1/2 and REAR XLR AUTO CH3/4 menu options that automatically select rear input when a connector is connected to the rear AUDIO IN XLR connector. You can select each menu option from the <MIC/AUDIO> screen of the MAIN OPERATION page.
A. IN	CH1/2/3/4	Displays the input status of each channel as FRONT (front)/REAR (rear)/W.L. (wireless).
METER	CH1/2/3/4	Displays the recording level of each channel.

Display screen	Indication	Status
CAC INFO Screen		Displays the CAC active status and information.
	CAC CONT	Displays the CAC operation mode as ON/STOP/OFF. ON: CAC CONTROL in <CAC ADJ> is set to "ON", and CAC is operating. STOP: "ON" is selected in the menu, but data or lens conditions stop CAC from operating. OFF: "OFF" is selected in the menu, and CAC is not operating.
	CAC MODE	Displays the CAC operating mode. AUTO: CAC files are selected automatically. MANUAL: A CAC file number is selected from the menu.
	CONNECT LENS TYPE	Displays the lens ID of the connected digital lens.
	SELECT FILE TYPE	Displays the file name of the currently operated CAC. When CAC operation is "OFF", the file name of the number selected in the CAC FILE NAME is displayed. The CAC FILE NAME can be selected from the <CAC ADJ> screen on the MAINTENANCE page.
	CAC WARNING	Indicates that the CAC operation is in a stop state. CAC LENS DATA INVALID: Displayed when the unit cannot respond to the return data from the lens. LENS INITIALIZE NOT COMPLETED: Displayed when initialization of the lens has not yet completed.
USER SW Screen		Displays the assignment of USER switches. → [User button functions] (page 79)
	USER MAIN (UM)	Displays the assignment for USER MAIN (UM).
	USER1 (U1)	Displays the assignment for USER1 (U1).
	USER2 (U2)	Displays the assignment for USER2 (U2).
	SHOT MARK (U3)	Displays the assignment for SHOT MARK (U3).
	TEXT MEMO (U4)	Displays the assignment for TEXT MEMO (U4).

P2 Card Remaining Free Space/capacity Indication

Status of unit	Recording status	Menu option P2 CARD REMAIN *	5.P2 card remaining free space indication	6.P2 card remaining free space indication (during MODE CHECK)
Under normal conditions	Other than LOOP REC mode	TOTAL	The total remaining free space of all P2 cards loaded in the P2 card slots is indicated in minutes. Example: 30min	Not provided
		ONE CARD	The number of the P2 card slot holding the target P2 card, together with that card's remaining free space indicated in minutes. Example: 1 8min	Not provided
		OFF	Not provided	Not provided
	LOOP REC mode	TOTAL/ONE CARD	Indicated as [LOOP]	Not provided
		OFF	Not provided	Not provided
During MODE CHECK	Other than LOOP REC mode	TOTAL/ONE CARD/ OFF	The total remaining free space and capacities of all P2 cards loaded in the P2 card slots are indicated in minutes. Example: 20/40	The number of the P2 card slot holding the target P2 card, together with that card's remaining free space, indicated in minutes. Example: 1 8min
	LOOP REC mode		Indicated as [LOOP]	The estimated recording time is indicated in minutes. Example: 7min

* The menu option P2CARD REMAIN can be found in the <VF INDICATOR> screen, which is accessible from the VF page.

Indications Available in the Viewfinder Screen

	Selectable between on and off through menu options	Provided when the appropriate status is encountered.	Provided during MODE CHECK*	Selectable	Provided during playback
1. System mode	○	–	●	○	–
2. Camera mode	○	–	●	○	–
3. REC FORMAT	○	–	●	○	–
4. Shutter speed/mode	○	○	●	○	–
5. P2 card remaining free space	○	–	●	○	–
6. P2 card remaining free space (MODE CHECK)	–	–	●	○	–
7. Camera-recorder REC indication	○	○	–	○	–
8. Battery type (MODE CHECK)	–	–	●	○	–
9. Battery remaining level/voltage	○	–	●	○	–
10. GAIN switch assignment information (during MODE CHECK)	–	–	○	○	–
11. Camera warning and report area	–	○	○	○	–
12. User button functions	–	○	○	○	–
13. System information and warnings	○	○	●	○	○
14. Time code indication	○	–	●	○	○
15. Chromatic aberration compensation	○	○	●	○	–
16. Extender	○	○	●	○	–
17. Color temperature	○	○	●	○	–
18. Filter position	○	–	●	○	–
19. Dynamic range stretcher mode	○	–	●	○	–
20. WHITE BAL switch position	○	–	●	○	–
21. Stored gain indication	○	–	●	○	–
22. Gain value	○	–	●	○	–
23. Audio input channel and level meter	○	–	All 4ch input information	○	–
24. Super iris ON	○	○	●	○	–
25. Iris override indication	○	○	●	○	–
26. Super black ON	○	○	●	○	–
27. Iris, F value	○	–	●	○	–
28. Zoom indication	○	–	●	○	–
29. INTERVAL REC/PRE RECORDING information display	○	○	●	–	–
30. Gamma mode display	○	○	●	○	–
31. ATW lock status	○	○	●	○	–
32. Types of markers	–	–	●	○	–
33. Y GET value	–	○	●	○	–
34. Digital zoom	–	○	●	○	–

* ○: Not provided when the menu option STATUS is set to OFF, which can be found in the <MODE CHK IND> screen, accessible from the VF page.

●: Provided regardless of the menu option setting.

Display Modes and Setting Changes/adjustment Result Messages

The messages that appear on the viewfinder screen to indicate changes to settings and adjustment results may be limited, or set not to appear, through the menu option DISP MODE. This menu option can be found in the <VF DISPLAY> screen, which is accessible from the VF page.
 → For directions on navigating the menu, see [Setting Menu Options] (page 160).

```

    → < VF DISPLAY >

    DISP CONDITION : NORMAL
    DISP MODE      : 3
    VF OUT         : Y
    VF DTL         : 05
    ZEBRA1 DETECT  : 070%
    ZEBRA2 DETECT  : 085%
    ZEBRA2         : SPOT
    LOW LIGHT LVL  : 35%
    RC MENU DISP. : OFF
    MARKER/CHAR LVL : 50%
    SYNCHRO SCAN DISP. : s e c
    
```

Setting change/adjustment result messages and DISP MODE settings

Message appears when:	Message	DISP MODE settings		
		1	2	3
CC/ND filter changed.	FILTER: n (n=1, 2, 3, 4), m (m=A, B, C, D)	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
Gain changed.	GAIN: n dB (n=-6, -3, 0, 3, 6, 9, 12, 15, 18, 21, 24, 27, 30)	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
WHITE BAL switch re-positioned.	WHITE: n (n=A, B, PRE)	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
OUTPUT/AUTO KNEE switch positioned at [AUTO KNEE] or [OFF].	AUTO KNEE: ON (or OFF)	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Shutter speed/mode changed.	SS: 1/100 (or 1/60, 1/120, 1/250, 1/500, 1/1000, 1/2000, ►1/**.* or ►***.0d)	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
White balance adjusted (AWB performed).	Example: AWB A OK 3.2 K	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Black balance adjusted (ABB performed).	Example: ABB OK	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Extender selected.	Example: EXTENDER ON	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
USER button selected.	Example: UM: S.GAIN 30 dB	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
MARKER SELECT function selected	Example: MKR: A	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
Iris being overridden.	Example: ++ F 5.6	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
The CAC lens is connected or removed.	Example: CAC LENS DATA INVALID	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>

●: Message appears.
 ○: Message does not appear.

Setting the Marker Displays

The center, safety zone, safety zone area and frame markers may be set to ON or OFF, along with specifications of the marker types. To set and select markers, go to the <VF MARKER> screen from the VF page and select the appropriate options.

→ For directions on navigating the menu, see [Setting Menu Options] (page 160).

→ < VF MARKER >		MKR: A
TABLE	: A	
CENTER MARK	: 1	
SAFETY MARK	: 2	
SAFETY AREA	: 90%	
FRAME MARK	: OFF	
FRAME SIG	: 4:3	
FLAME LVL	: 15	

◆ Note

The indication MKR:A at the upper right of the screen shows the current indication status. To view TABLE B, press the MARKER SEL, MODE CHK / MENU CANCEL switch on the unit. This changes the indication to MKR:B, allowing you to view the set conditions.


Marker Check Screen Displays (MARKER SELECT button function)

The viewfinder can display a screen that allows you to view the marker settings of the unit.

When you press the MARKER SEL, MODE CHK / MENU CANCEL switch on the side of this unit, the marker displayed by the viewfinder changes.


Marker A → Marker B → No marker

If the menu item FRAME SIG is set to 16:9 as the information of Marker A and 4:3 as the information of Marker B, then the 16:9 and 4:3 view angles can easily be checked with the button, as required. The menu item FRAME SIG is found in the <VF MARKER> screen on the VF page.

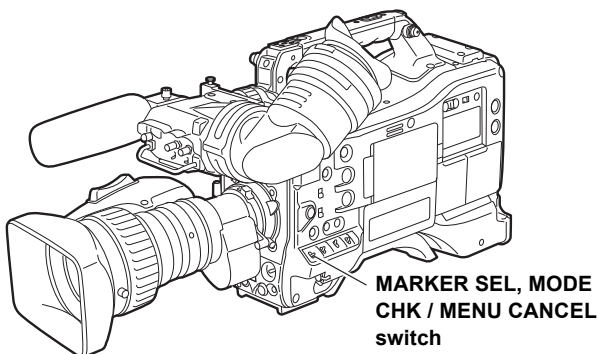

Markers

Center marker Safety zone

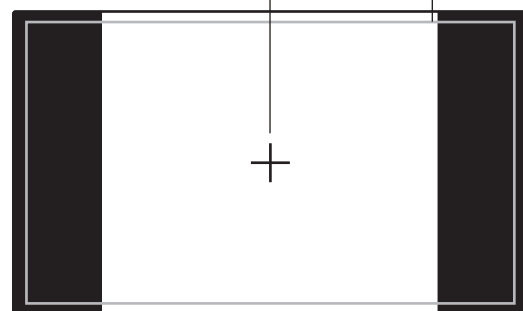

The view angle specified through the menu option FRAME SIG is displayed.

Checking Return Video Signal in the Viewfinder

The viewfinder displays the return video signal input to the GENLOCK IN or SDI IN connector while the RET button at the lens is held down. To enable this function, select "CAM RET" for the menu option RET SW.

In HD (1080i) mode, either the HD SDI signal from the SDI IN connector, or the HD-Y signal from the GENLOCK IN connector in the RETURN SIGNAL item can be selected. In SD mode, only the SD SDI signal from the SDI IN connector can be viewed.

The menu item RETURN SIGNAL is found in the <GENLOCK> screen on the SYSTEM SETTING page, and


the menu item RET SW is found in the <SW MODE> screen on the CAM OPERATION page.

< SW MODE >	
→ RET SW	: R. REVIEW
S. BLK LVL	: -10
AUTO KNEE SW	: ON
SHD. ABB SW CTL	: ON
COLOR BARS	: SMPTE
S. GAIN OFF	: L/M/H
DS. GAIN OFF	: DS. GAIN
D. ZOOM ×2	: ON
D. ZOOM ×3	: ON
D. ZOOM ×4	: ON
RC CHECK SW	: R. REVIEW

Adjusting and setting the LCD monitor

Using the LCD Monitor

- 1 Turn on the **POWER** switch of the unit.
- 2 Slide the **OPEN** button in the arrow ① direction to open the LCD monitor in the arrow ② direction.

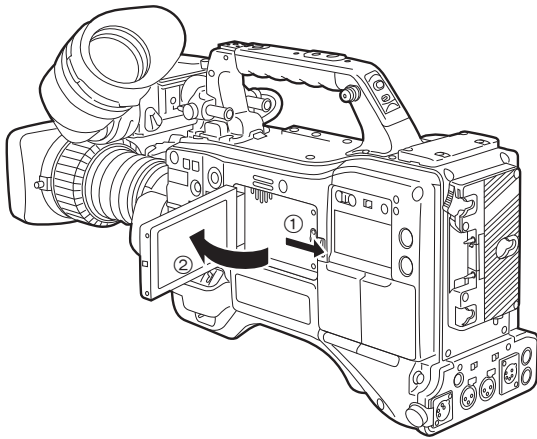


- 3 Adjust the angle of the LCD monitor for most convenient viewing.

The monitor can turn up to 180 degrees towards the lens and up to 90 degrees towards you.


◆ Note

To prevent camera-recorder failure, do not allow undue force to be applied to the monitor (when it is open).

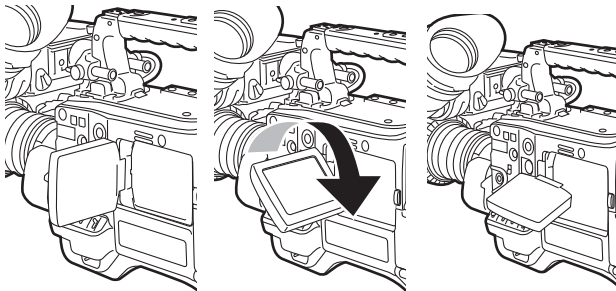


- 4 The options **BRIGHTNESS**, **COLOR LEVEL**, and **CONTRAST** show respectively the brightness, color level and contrast of the screen.

These menu items are found in the <LCD MONITOR> screen on the SYSTEM SETTING page.

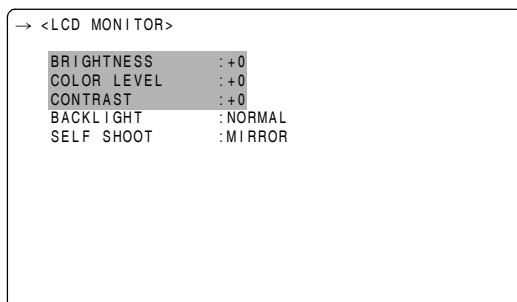

- 5 Through the menu option **VF/LCD CHAR**, specify whether or not the LCD should display the same characters as the viewfinder.

The menu item VF/LCD CHAR is found in the <OUTPUT SEL> screen on the SYSTEM SETTING page.

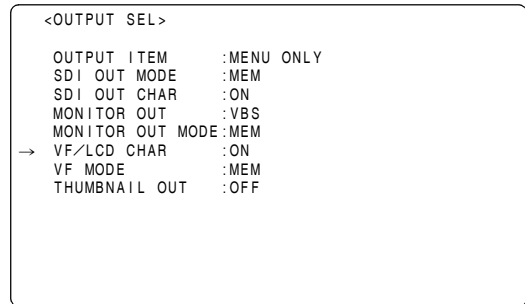

◆ Notes

- When closing the LCD monitor make sure that it is shut tight.
- In an environment with sudden temperature changes, condensation may form on the liquid crystal surface of the monitor. If this happens, wipe off the moisture with a soft, dry cloth.
- When the camera-recorder is very cold, the video image in the LCD monitor will appear slightly darker immediately after the power is turned on. Once the interior of the camera-recorder warms up, the LCD monitor delivers normal brightness.

Self-portrait Shooting

When shooting with the LCD display angled 180 degrees towards the lens, you can set the menu item SELF SHOOT to "MIRROR", to horizontally flip the video image on the LCD display, and allow you to view a mirror image while shooting. Note that only the video image on the LCD monitor is horizontally flipped, not the actual video being recorded. The menu item SELF SHOOT is found in the <LCD MONITOR> screen on the SYSTEM SETTING page.

◆ Note

When the LCD monitor is angled 180 degrees towards you with the menu option SELF SHOOT to "MIRROR", the LCD monitor does not provide the same status indication as the viewfinder, regardless of the setting for the menu option VF/LCD CHAR.

Selection of video output signals

The unit employs the SDI OUT connector and the MON OUT connector as connectors for outputting video signals.

Settings of signals output from SDI OUT connector

The type of output signal from the SDI OUT connector is in accordance with the SYSTEM MODE item. Additionally, the signal output from the SDI OUT connector is switched from the SDI OUT MODE item.

The SYSTEM MODE can be selected from the <SYSTEM MODE> screen on the SYSTEM SETTING page, and the SDI OUT MODE can be selected from the <OUTPUT SEL> screen on the SYSTEM SETTING page.

Item	Variable range	Remarks
SDI OUT MODE	MEM CAM	MEM: During EE such as recording, video images taken by the camera are output. Meanwhile, signals on the P2 card are output during playback. CAM: Camera images are output at all times.

Set the characters to be superimposed on the signals output from the SDI OUT connector in the OUTPUT ITEM and SDI OUT CHAR items. Items can be selected from the <OUTPUT SEL> screen on the SYSTEM SETTING page.

Item	Variable range	Remarks
OUTPUT ITEM	MENU ONLY TC STATUS	Set the characters to be superimposed on the output signals from the VIDEO OUT connector. MENU ONLY: The menu screen is superimposed only when the menu is accessed. This normally displays nothing. TC: Time codes are superimposed (when the menu is accessed, the menu screen is superimposed.) STATUS: The characters that are the same as the characters superimposed in the viewfinder screen are superimposed. (When the menu is accessed, the menu screen is superimposed.)
SDI OUT CHAR	OFF ON	Select whether to superimpose characters on the image output from the SDI OUT connector. OFF: Do not superimpose. ON: Superimpose. ◆ Note The content of the superimposed characters is the same as that superimposed on video output from the MON OUT connector

Settings of signals output from MON OUT connector

The MON OUT connector outputs HD SDI signals, down-converted SD SDI signals, and analog signals.

In the MONITOR OUT item, set the video signal output from the MON OUT connector. The MONITOR OUT item can be selected from the <OUTPUT SEL> screen on the SYSTEM SETTING page.

Item	Variable range	Remarks
MONITOR OUT	HD SDI SD SDI VBS	Select the output signal format for the MON OUT connector. HD SDI : output an HD SDI signal. (1080i mode only) SD SDI : output an SD SDI signal. VBS : output a composite signal.

Set the signals output from the MON OUT connector in the MONITOR OUT MODE item. The MONITOR OUT MODE item can be selected from the <OUTPUT SEL> screen on the SYSTEM SETTING page.


Item	Variable range	Remarks
MONITOR OUT MODE	MEM CAM	Select the output signal for the MON OUT connector. MEM : During EE such as recording, video images taken by the camera are output. In playback mode, this is the playback image. CAM : always the camera image.

Use the MON OUT CHARACTER switch to set whether to superimpose characters on the signals output from the MON OUT connector.

ON:
Superimpose.

OFF:
Do not superimpose.

→ [MON OUT CHARACTER switch] (page 22)

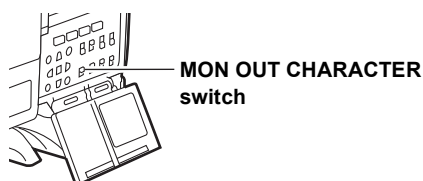

However, the OUTPUT ITEM item sets details of the characters to superimpose both on the output from the SDI OUT connector, and that from the MON OUT connector. The OUTPUT ITEM item can be selected from the <OUTPUT SEL> screen on the SYSTEM SETTING page.

Handling data

Set data file configuration

The unit employs 6 sets for the file data area.

FACTORY data:

The area for storing factory settings.
Data cannot be revised with menu operations.

USER data:

The area for storing the data set by menu operations
The FACTORY data is stored as the factory setting.

CURRENT data:

The area for storing the operating status of the unit
The set value in this area is revised by menu operations.

SCENE file:

Four sets of scene files are provided.

LENS file:

Eight sets of lens files are provided.


CAC file:

32 chromatic aberration compensation data area sets are provided.

→ For menu items that can be read from or stored in the respective areas, refer to [Menu] (page 158)

◆ Notes

- For information about how to navigate through the menu for this section, see [Setting Menu Options] (page 160).
- Access the respective data settings files after switching the PC MODE to "OFF". If the respective data settings files are accessed when the unit is in USB DEVICE mode, an error may occur. The menu item PC MODE is found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.

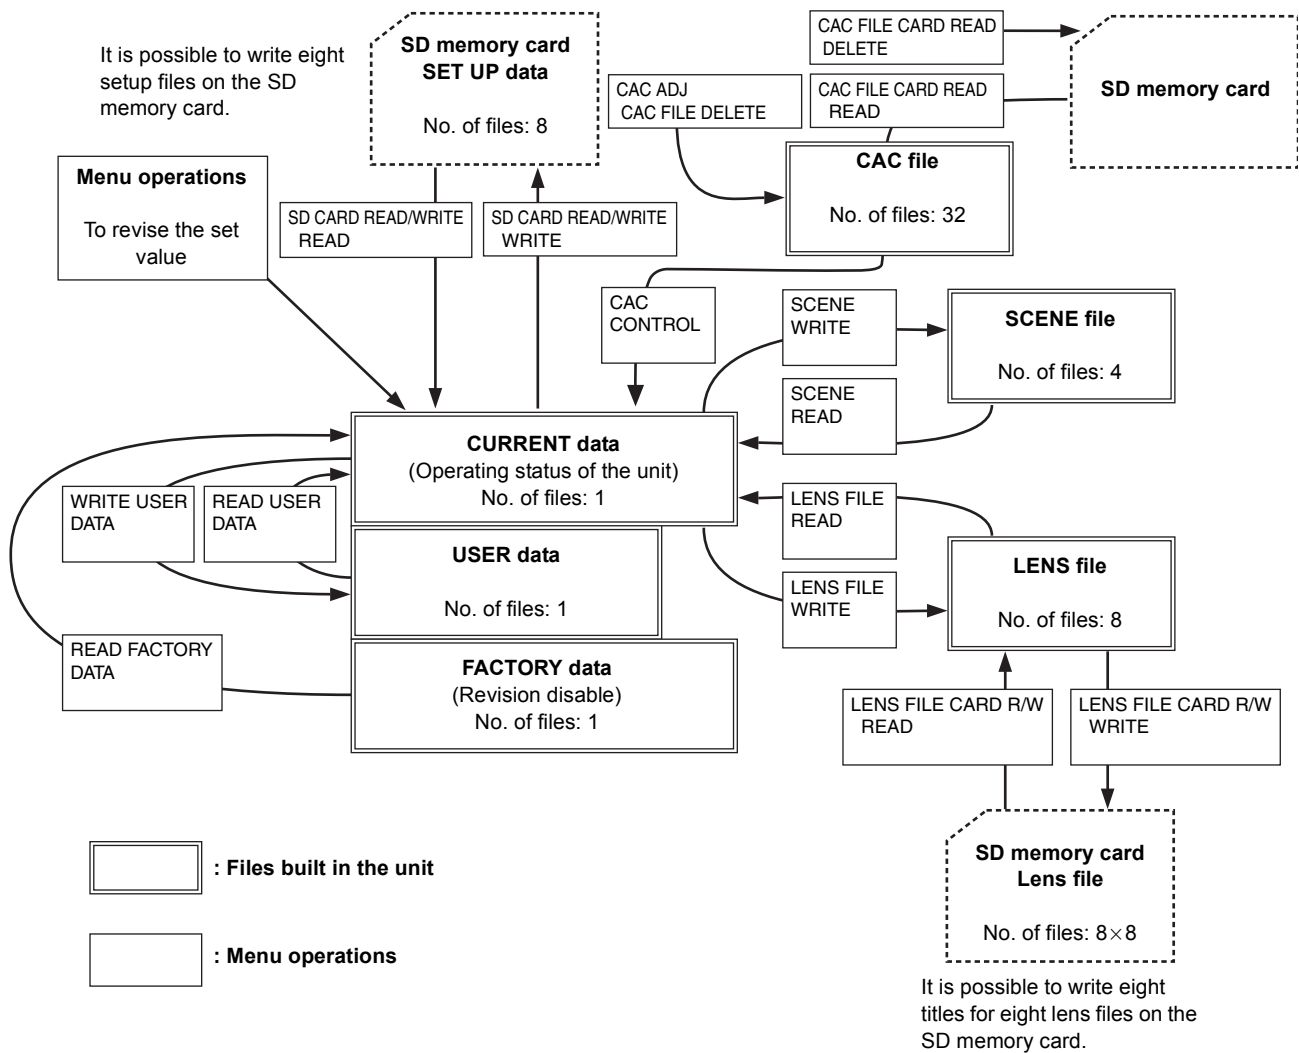

Setting Data Using an SD memory card

An SD memory card (optional accessory) can be used as a setup card that stores up to eight files of settings menu specifications.


This data allows you to quickly reproduce an optimum state.
→ <Cautions in using SD memory cards> (page 22).

Handling SD memory cards

An SD memory card may be inserted or removed, either before or after the power is turned on.

To insert an SD memory card

Open the slot cover, and insert an SD memory card (optional accessory) into the SD memory card slot with the notch upward. Close the slot cover.

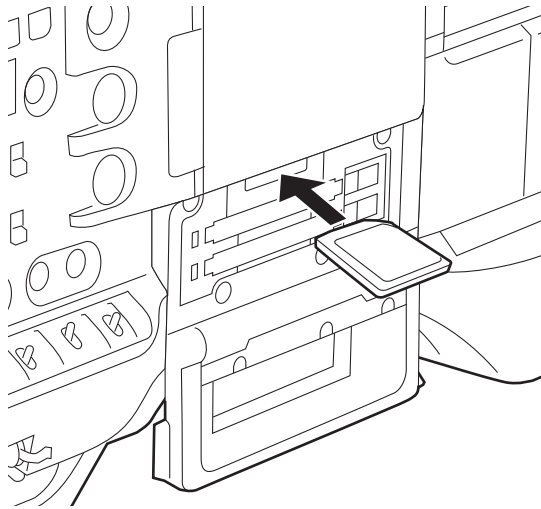

◆ Note

An SD memory card must be inserted with the right side facing the slot. If the card is hard to insert, it may be reversed or upside down. Do not force it into the slot. Check the card before re-inserting it.

To remove the SD memory card

Open the slot cover, and ensure that the BUSY lamp is not illuminated. Then, further depress the SD memory card towards the main unit. This releases the SD memory card from the insertion slot. Take hold of the SD memory card and remove it. Close the slot cover.


SD memory cards must not be used or stored in an environment where they may be

- Exposed to high temperatures/humidities;
- Exposed to water droplets; or
- Electrically charged.

For storage, the SD memory card must be kept inserted into the unit with the lid closed.

Formatting, Writing and Reading an SD memory card

To format an SD memory card, write settings data or read data on an SD memory card, navigate the menu to the <SD CARD READ/ WRITE> screen from the FILE page.

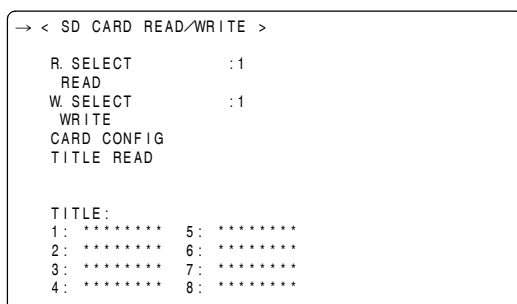


If an SD memory card that is formatted in a standard other than the SD standards and SDHC standards, [FORMAT ERROR] is displayed in the top right section of the window. In this case, reformat the card as follows. Note that the indication “FORMAT ERROR” does not disappear if the SD memory card is replaced with this menu page open. When the SD memory card is replaced, perform TITLE READ.

To format an SD memory card


◆ Note

SD memory cards may be formatted via the thumbnail screen.
→ [Formatting SD memory cards] (page 131).

- 1 **Navigate the menu to the <SD CARD READ/ WRITE> screen.**
- 2 **Turn the JOG dial button to move the cursor to the menu option CARD CONFIG.**
- 3 **Press the JOG dial button.**
The following message is displayed.

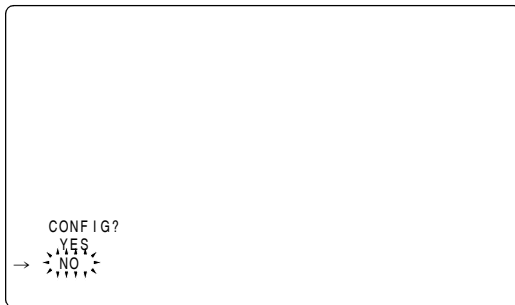

- To format the SD memory card, turn the JOG dial button to move the cursor to YES. Then, press the dial button.
- When the SD memory card has been formatted, the following message appears:

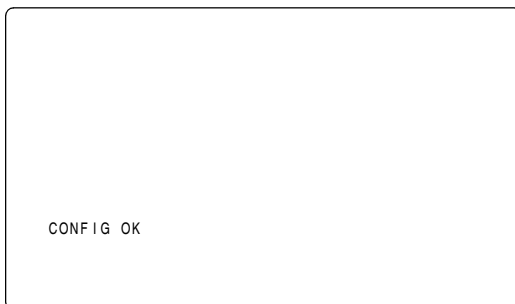

The card will not be formatted if the following message appears when the JOG dial button is pressed:

Error message	Remedy
CONFIG NG NO CARD (No SD memory card inserted.)	insert an SD memory card.
CONFIG NG ERROR (SD memory card cannot be formatted.)	The card may be defective. Replace the card.
CONFIG NG WRITE PROTECT (SD memory card is write-protected.)	Remove the card and cancel the protect.
CONFIG NG CANNOT ACCCESS (SD memory card not accessible).	Example: The SD memory card is not accessible because it is being played back. After the operation in process, format the card.

4 To exit the menu, press the MENU button.

The settings menu disappears and the status of the unit is indicated at the top and bottom of the viewfinder screen.

◆ Notes

- Data erased by formatting cannot be restored, so be sure to perform the format after first confirming the data.
- If an SD memory card is inserted or removed with the <SD CARD READ/WRITE> screen open, the data title cannot be edited.
Move the cursor to the option TITLE READ and press the JOG dial button. Edit the data title.


To write set data on an SD memory card

Select the type of the menu to write to the <SD CARD R/W SELECT> screen in advance, and then perform the writing to the SD memory card via the following procedure.

1 Navigate the menu to the <SD CARD READ/ WRITE> screen.

To select a file number


2 Turn the JOG dial button to move the cursor to the option W. SELECT. Then, press the dial button.

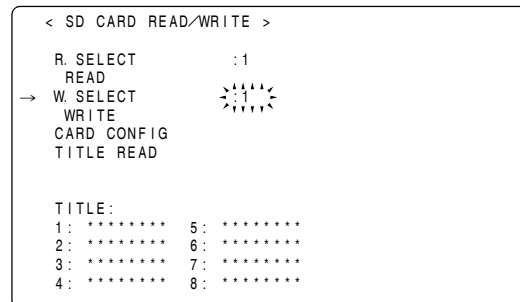

3 Turn the JOG dial button to select a desired number (1 - 8). Then, press the dial button.

To give the selected file a title

4 Turn the JOG dial button to move the cursor to the option TITLE:.

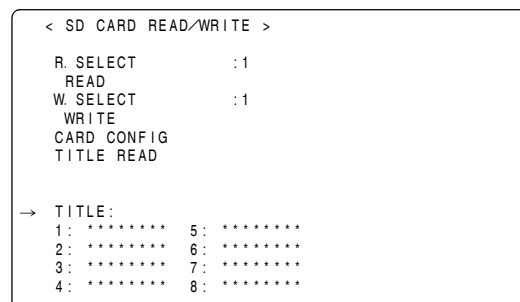

5 Press the JOG dial button.

This moves the cursor to the entry area, putting the unit in entry mode.

```

< SD CARD READ/WRITE >

R. SELECT      :1
  READ
W. SELECT      :1
  WRITE
CARD CONFIG
TITLE READ

↓
TITLE:
1: ***** 5: *****
2: ***** 6: *****
3: ***** 7: *****
4: ***** 8: *****

```

6 Turn the JOG dial button until a desired character appears.

The characters that appear are switched in the following order:

```

Space:          □
↓
Alphabetical characters: A to Z
↓
Numerals:       0 to 9
↓
Symbols:        ', >, <, /, -

```

7 Press the JOG dial button to accept a desired character.**8 Turn the JOG dial button to move the cursor to the next digit (clockwise), and repeat Steps 6 - 7 to set characters (up to eight characters).**

To write data on a selected file

9 When the title is set, turn the JOG dial button to move the cursor to [:].

```

< SD CARD READ/WRITE >

R. SELECT      :1
  READ
W. SELECT      :1
  WRITE
CARD CONFIG
TITLE READ

↓
TITLE:
1: ***** 5: *****
2: ***** 6: *****
3: ***** 7: *****
4: ***** 8: *****

```

10 Press the JOG dial button to return the cursor to the option TITLE:.**11 Turn the JOG dial button to move the cursor to the option WRITE.****12 Press the JOG dial button to display the following message:**

```

WRITE?
→ YES
  NO
TITLE:

```

The data will not be written if any of the following messages appears when the JOG dial button is pressed:

Error message	Remedy
WRITE NG NO CARD (No SD memory card inserted.)	Insert an SD memory card.
WRITE NG FORMAT ERROR (SD memory card not properly formatted.)	The card has not been formatted using the unit. Replace the card.
WRITE NG ERROR (SD memory card not writable.)	The card may be defective. Replace the card.
WRITE NG WRITE PROTECT (SD memory card write-protected.)	Remove the card and disable the protect.
WRITE NG CANNOT ACCESS (SD memory card not accessible.)	Example: The SD memory card is not accessible because it is being played back. After the operation in process, format the card.
WRITENG CARD FULL (SD memory card has no free space.)	The card is not writable because it has no free space. Delete unwanted files or replace the card with a new one.

13 Turn the JOG dial button to move the cursor to YES. Then, press the dial button.

When the data has been written, the following message appears:

```

WRITE OK

```

14 To exit the menu, press the MENU button.

The settings menu disappears and the status of the unit is indicated at the top and bottom of the viewfinder screen.

◆ Notes

- It is possible to overwrite the setup file on the unit with a setup file from another device. Note that if the file is overwritten, the original setup file from the other device will be lost.
- We recommend managing the respective SD memory cards on the respective devices independently.


To read data on an SD memory card

Select the type of the menu to read from the <SD CARD R/W SELECT> screen in advance, and then perform the reading from the SD memory card via the following procedure.

1 Navigate the menu to the <SD CARD READ/WRITE> screen.

To select a file number


2 Turn the JOG dial button to move the cursor to the menu option R. SELECT. Then, press the dial button.

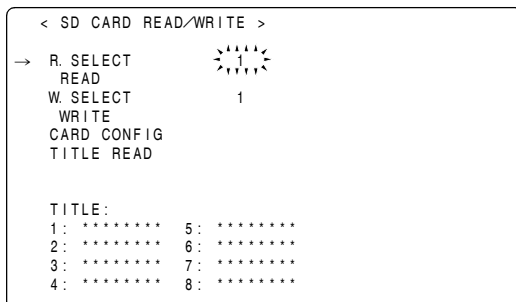

3 Turn the JOG dial button to select a desired number (1 - 8). Then, press the dial button.

To read data on a selected file

4 Turn the JOG dial button to move the cursor to the option READ.

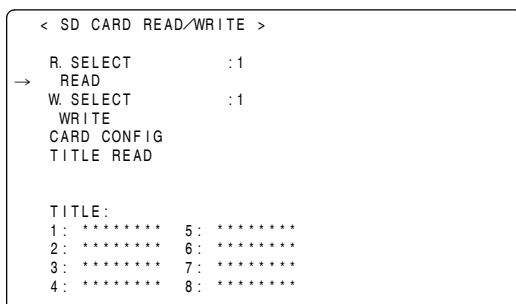


5 Press the JOG dial button to display the following message:



6 Turn the JOG dial button to move the cursor to YES. Then, press the dial button.

When the data has been read, the following message appears:

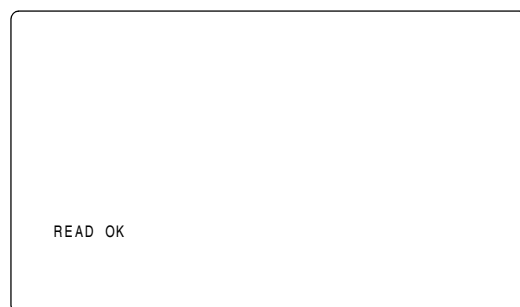

The data will not be read if any of the following messages appears when the JOG dial button is pressed:

Error message	Remedy
READ NG NO CARD (No SD memory card inserted.)	Insert an SD memory card.
READ NG FORMAT ERROR (SD memory card not properly formatted.)	The card has not been formatted using the unit. Replace the card.
READ NG NO FILE (No file found.)	Write file data.
READ NG ERROR (SD memory card not readable.)	Only data written with the unit is readable.
READ NG CANNOT ACCCESS (SD memory card not accessible.)	Example: The SD memory card is not accessible because it is being played back. After the operation in process, read data.

7 To exit the menu, press the MENU button.

The settings menu will be replaced by status indications for the unit.


How to Use the User Data

It is possible to transfer settings and other data to the user area of the internal memory of the unit. This data allows you to quickly reproduce an optimum setup state.

To write data, go to the <INITIALIZE> screen from the FILE page. To read the written user data, go to the <SCENE> screen from the FILE page.

To write settings data in the user area

- 1 Navigate the menu to the <INITIALIZE> screen.
- 2 Turn the JOG dial button to move the cursor to the option WRITE USER DATA.

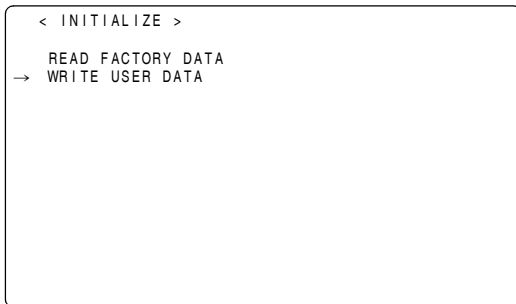

- 3 Press the JOG dial button. The following message is displayed.




- 4 Turn the JOG dial button to move the cursor to YES. Then, press the dial button. This writes the settings data into the user area of the internal memory of the unit.
- 5 To exit the menu, press the MENU button.

To read written user data

- 1 Navigate the menu to the <SCENE> screen.

- 2 Turn the JOG dial button to move the cursor to the option READ USER DATA.

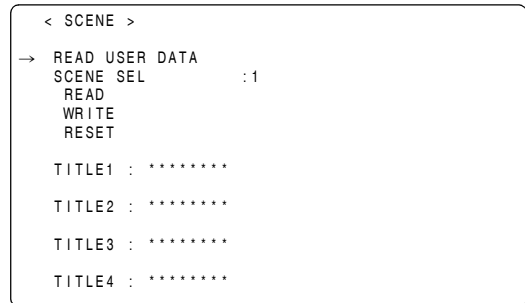

- 3 Press the JOG dial button to display the following message:




- 4 Turn the JOG dial button to move the cursor to YES. Then, press the dial button.

The data written in the user area of the internal memory of the unit is read to complete the setting.

- 5 To exit the menu, press the MENU button.

The set user data may be also read without navigating the menu.

- 1 Turn off the POWER switch.
- 2 Position the WHITE BAL switch at [PRST].

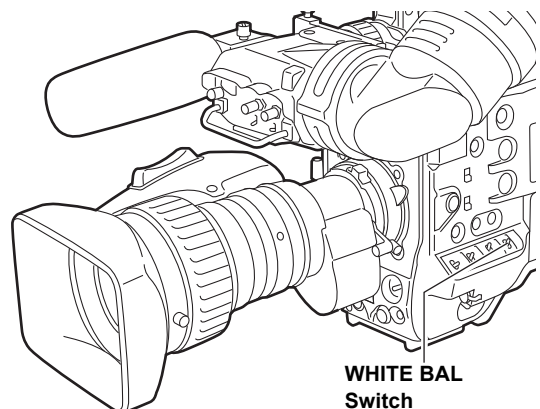

- 3 With the AUTO W/B BAL switch flipped up, turn on the POWER switch. This resets all settings for USER menu options to their defaults.

How to Use Scene File Data

It is possible to write the settings data into the scene file area of the internal memory of the unit, or to read data written in this area. Four types of scene files are available. This data allows you to quickly reproduce an optimum setup state.

To change the settings, go to the <SCENE> screen from the FILE page.

To write settings data for scene files

- 1** Navigate the menu to the **SCENE** screen.
- 2** Turn the **JOG** dial button to move the cursor to the **SCENE SEL** option.
- 3** Press the **JOG** dial button to blink scene file numbers. Then, turn the dial button to select a desired scene file number.

```
< SCENE >
  READ USER DATA
  → SCENE SEL      :1
    READ
    WRITE
    RESET

  TITLE1 : *****
  TITLE2 : *****
  TITLE3 : *****
  TITLE4 : *****
```

- 4** Press the **JOG** dial button to accept the scene file.
- 5** Turn the **JOG** dial button to return the cursor to the option **WRITE**.

```
< SCENE >
  READ USER DATA
  SCENE SEL      :1
  → READ
  WRITE
  RESET

  TITLE1 : *****
  TITLE2 : *****
  TITLE3 : *****
  TITLE4 : *****
```

- 6** Press the **JOG** dial button to display the following message:

```
WRITE?
  YES
  → NO
  TITLE:
```

- 7** Turn the **JOG** dial button to move the cursor to **YES**. Then, press the dial button.

This writes the setting data into the scene file area of the unit internal memory.

- 8** To exit the menu, press the **MENU** button.

To read settings data for scene files

- 1 Navigate the menu to the <SCENE> screen.
- 2 Turn the JOG dial button to move the cursor to the option SCENE SEL.
- 3 Press the JOG dial button to blink scene file numbers. Then, turn the dial button to select a desired scene file number.

```

< SCENE >
READ USER DATA
SCENE SEL      :1
  →  READ
    WRITE
    RESET

TITLE1 : *****
TITLE2 : *****
TITLE3 : *****
TITLE4 : *****

```

- 4 Press the JOG dial button to accept the scene file.
- 5 Turn the JOG dial button to move the cursor to the READ option.

```

< SCENE >
READ USER DATA
SCENE SEL      :1
  →  READ
    WRITE
    RESET

TITLE1 : *****
TITLE2 : *****
TITLE3 : *****
TITLE4 : *****

```

- 6 Press the JOG dial button to display the following message:

```

READ?
  YES
  →  NO
  YES

```

- 7 Turn the JOG dial button to move the cursor to YES. Then, press the dial button.
The data in the scene file area of the internal memory of the unit is read to complete the setting.
- 8 To exit the menu, press the MENU button.

To return data for scene files to their defaults

- 1 Navigate the menu to the <SCENE> screen.
- 2 Turn the JOG dial button to move the cursor to the option SCENE SEL.
- 3 Press the JOG dial button to blink scene file numbers. Then, turn the dial button to select the scene file that you want to reset.

```

< SCENE >
READ USER DATA
SCENE SEL      :1
  →  READ
    WRITE
    RESET

TITLE1 : *****
TITLE2 : *****
TITLE3 : *****
TITLE4 : *****

```

- 4 Press the JOG dial button to accept the scene file.
- 5 Turn the JOG dial button to move the cursor to the option RESET.

```

< SCENE >
READ USER DATA
SCENE SEL      :1
  →  READ
    WRITE
    RESET

TITLE1 : *****
TITLE2 : *****
TITLE3 : *****
TITLE4 : *****

```

- 6 Press the JOG dial button.
The following message is displayed.

```


RESET?
  YES
  →  NO
  YES

```

- 7 Turn the JOG dial button to move the cursor to YES. Then, press the dial button.
The data stored in the scene file area of the internal memory of the unit is reset to the defaults.
- 8 To exit the menu, press the MENU button.


1 Navigate the menu to the <SCENE> screen.

2 Turn the JOG dial button to move the cursor to the option [TITLE 1 - 4] for the appropriate scene file.

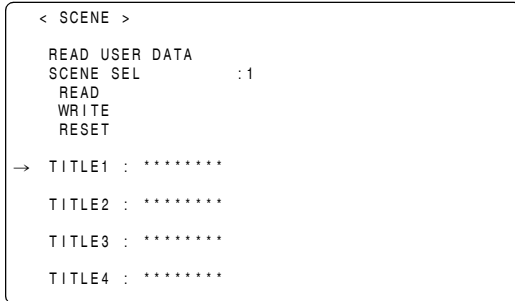

3 Press the JOG dial button.

The cursor moves to the title entry area, putting the unit in entry mode.

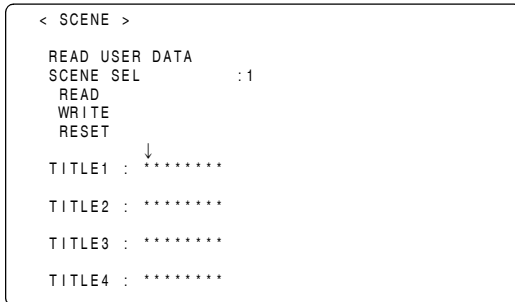

4 Turn the JOG dial button until a desired character appears.

The characters that appear are switched in the following order:

- Space:
- ↓
- Alphabetical characters: A to Z
- ↓
- Numerals: 0 to 9
- ↓
- Symbols: ', >, <, /, -

5 Press the JOG dial button to accept a desired character.

6 Turn the JOG dial button to move the cursor to the next digit (clockwise), and repeat Steps 4 - 5 to set characters (up to eight characters).

7 When the title is set, turn the JOG dial button to move the cursor to [:].

8 Press the JOG dial button,
The cursor returns to the options TITLE 1 - 4.

9 Turn the JOG dial button to return the cursor to the option WRITE.

10 Press the JOG dial button.

The following message is displayed.



11 Turn the JOG dial button to move the cursor to YES. Then, press the dial button.

This writes the title into the scene file area of the unit internal memory.

12 To exit the menu, press the MENU button.

Resetting Menu Option Settings to Defaults

The menu settings can be reset to their defaults.
To reset the settings to their defaults, select the menu option READ FACTORY DATA in the <INITIALIZE> screen, which is accessible from the FILE page.
All settings will be reset to their defaults.

◆ Note

This operation does not delete the scene file, lens file, and the information stored as the user data.

```
< INITIALIZE >
→ READ FACTORY DATA
  WRITE USER DATA
```

Lens file

The built-in memory of the unit stores eight sets of lens files. On the SD memory card, eight titles for eight sets of lens files in a table (total 64 sets) can be written. The following data are recorded on the lens file.

- Title name
- White shading correction value
- Flare compensation value
- RB gain offset correction value

How to provide lens files

Adjustment of white shading

For the white shading adjustment, refer to [Adjusting the Lens White Shading] (page 112)


Adjustment of the flare

Using the menu operations, adjust the flare in the LENS R FLARE item, the LENS G FLARE item and the LENS B FLARE item. These menu items are found in the <LENS FILE ADJ> screen on the MAINTENANCE page.

```
→ < LENS FILE ADJ >
LENS FILE ADJ MODE: ON
LENS R GAIN OFFSET: +000
LENS B GAIN OFFSET: +000

LENS R FLARE      : 000
LENS G FLARE      : 000
LENS B FLARE      : 000
```

Example of the chart for flare adjustment

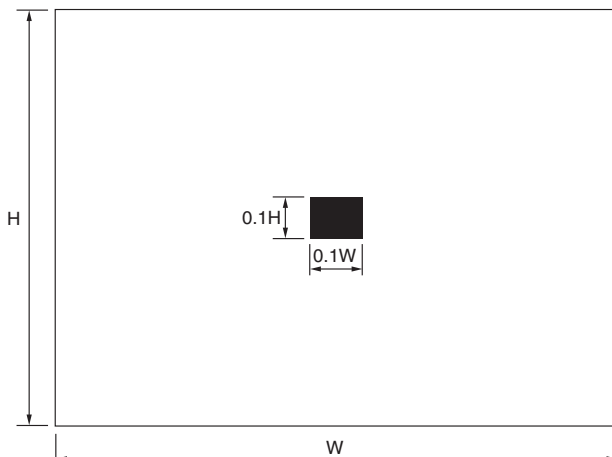

Adjustment of gain offset

For correcting changes in white balance that may occur when replacing the lens.

- 1 Mount the lens to memory the lens file on the unit.**
- 2 Shoot the grayscale chart with appropriate lighting (2000 lx, 3200 K are preferable).**
- 3 Set the WHITE BAL switch to the “A” position.**
- 4 Adjust the lens aperture so that the white window at the center of the grayscale chart is about 80%.**
- 5 Push the AUTO W/B BAL switch to “AWB” to adjust the white balance automatically.**
- 6 Measure the signal level of RGB by using the waveform monitor (WFM).**
- 7 Adjust the lens aperture so that the signal level of Gch is the same signal level as the one obtained in 6 above.**
- 8 Set the LENS FILE ADJ MODE to ON.**
The menu item LENS FILE ADJ MODE is found in the <LENS FILE ADJ> screen on the MAINTENANCE page.
- 9 Adjust the signal level of Rch to be the same as Gch in the LENS R GAIN OFFSET item.**
- 10 In the same way, adjust the signal level of Bch to be the same as Gch in the LENS B GAIN OFFSET item.**

To save the lens file into the built-in memory

Select the file No.

- 1 Using the menu operations, open the <LENS FILE> screen from the FILE page.
- 2 Turn the JOG dial button to move the arrow (cursor) to the FILE NO. item.
- 3 Press the JOG dial button and the file number will flash. Turn the JOG dial button to select the file (1 to 8) to be recorded.

```

< LENS FILE >
→ FILE NO.      ☼
  READ
  WRITE
  RESET ALL

TITLE:

1:      5:
2:      6:
3:      7:
4:      8:
    
```

- 4 Press the JOG dial button to enter the file number.

Give a title to the selected file.

- 5 Turn the JOG dial button to move the arrow (cursor) to the TITLE : item.

```

< LENS FILE >
FILE NO.      :1
  READ
  WRITE
  RESET ALL
→ TITLE:
1:      5:
2:      6:
3:      7:
4:      8:
    
```

- 6 Press the JOG dial button. The arrow (cursor) moves to the title input area, and the input mode is established.

```

< LENS FILE >
FILE NO.      :1
  READ
  WRITE
  RESET ALL
TITLE: ↓
1:      5:
2:      6:
3:      7:
4:      8:
    
```

- 7 Press the JOG dial button again and turn it until the character to be set is displayed.

When the button is turned, the character displayed is switched in the following sequence:

```

Space:      □
↓
Alphabetical characters:  A to Z
↓
Numerals:      0 to 9
↓
Symbols:      ', >, <, /, -, ., x
    
```

- 8 Press the JOG dial button to enter the character.
- 9 Turn the JOG dial button to move the arrow (cursor) to the next position (right), and repeat steps 7 and 8 to set the characters (maximum of 12).
- 10 When the title has been input, turn the JOG dial button to move the arrow (cursor) to the ":" position.

```

< LENS FILE >
FILE NO.      :1
  READ
  WRITE
  RESET ALL
↓
TITLE:*****
1:      5:
2:      6:
3:      7:
4:      8:
    
```

- 11 Press the JOG dial button. The arrow (cursor) returns to the "TITLE : " item.

```

< LENS FILE >
FILE NO.      :1
  READ
  WRITE
  RESET ALL
→ TITLE:*****
1:      5:
2:      6:
3:      7:
4:      8:
    
```

- 12 Turn the JOG dial button to move the arrow (cursor) to the WRITE position.


```

< LENS FILE >
FILE NO.      :1
→  READ
  WRITE
  RESET ALL

TITLE:*****
1:      5:
2:      6:
3:      7:
4:      8:
    
```

13 Press the JOG dial button.

The following message is displayed.

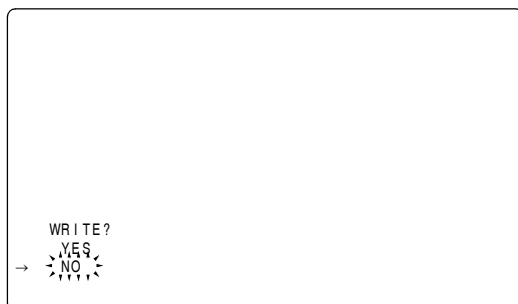**14 Turn the JOG dial button to move the arrow (cursor) to YES, and press the JOG dial button.**

The current white shading correction value, the flare compensation value, and the RB gain offset correction value are stored in the built-in memory of the unit.



◆ Note

The values will not be stored in the unit's internal memory if another menu screen is selected without executing WRITE or if the menu is exited.

15 Press the MENU button.

The setting menu is cleared, and the displays showing the unit's current statuses appear at the top and bottom of the viewfinder screen.

To read the lens file from the builtin memory

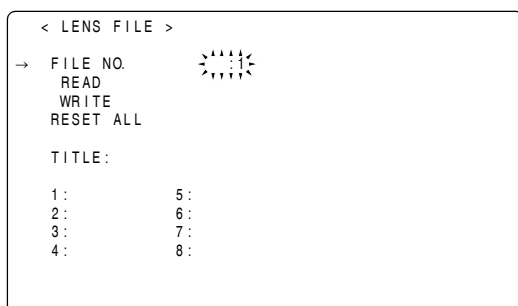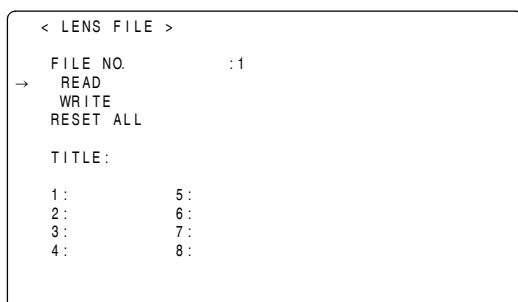1 Using menu operations, open the <LENS FILE> screen from the FILE page.**2 Turn the JOG dial button to move the arrow (cursor) to the FILE NO. item.****3 Press the JOG dial button and the file number will flash. Turn the JOG dial button to select the file (1 to 8) to be read.****4 Press the JOG dial button to enter the file number.****5 Turn the JOG dial button to move the arrow (cursor) to the READ item.****6 When the JOG dial button is pressed, the following message appears.****7 Turn the JOG dial button to move the arrow (cursor) to YES, and press the JOG dial button.**

The recorded correction values for the white shading, flare, and RB gain offset are read.

8 Press the MENU button.


The setting menu is cleared, and the displays showing the unit's current statuses appear at the top and bottom of the viewfinder screen.

To write in and read out the lens file to/from the SD memory card

The contents of the eight lens files stored in the unit's internal memory can be saved onto an SD memory card as card files under a single title. A total of eight titles can be saved on an SD memory card.


Furthermore, the eight lens files saved under one title on an SD memory card can be loaded into the unit's internal memory.

The correlation between the lens files stored in the internal memory and lens files saved on an SD memory card is shown below.

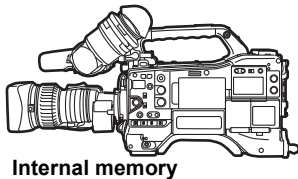

Internal memory

8 lens files

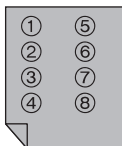


Up to 8 sets of the lens file can be stored in the built-in memory.



The contents of 8 lens files can be saved onto an SD memory card as card files under one title or they can be loaded from the SD memory card.

Card files

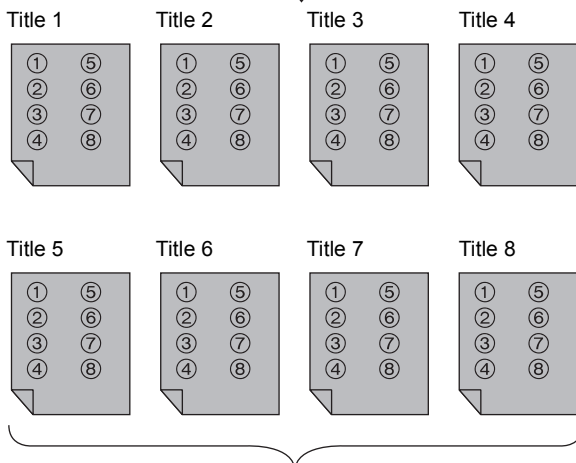

A total of 64 lens files (8 lens files × 8 titles) can be saved on an SD memory card.

Saving lens files on the SD memory card

Select the card file No.


1 Using menu operations, open the <LENS FILE CARD R/W> screen from the FILE page.

When the message "FORMAT ERROR" appears in the upper right corner, format the SD memory card with the camera-recorder. SD cards can be formatted through the CARD CONFIG menu. The menu item CARD CONFIG is found in the <SD CARD READ/WRITE> screen on the FILE page.

→ [Handling SD memory cards] (page 91).

2 Turn the JOG dial button to move the arrow (cursor) to the CARD FILE SELECT item.


3 Press the JOG dial button and the card file number will flash. Turn the JOG dial button to select the file (1 to 8) to be recorded.

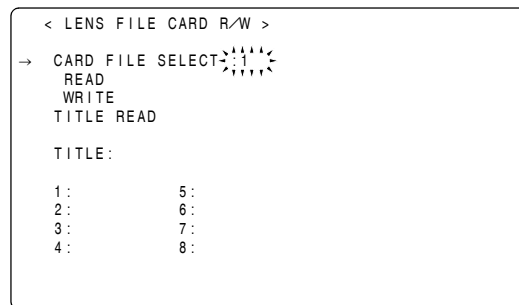

4 Press the JOG dial button to enter the file number.

Give a title to the selected card file.

5 Turn the JOG dial button to move the arrow (cursor) to the TITLE : item.

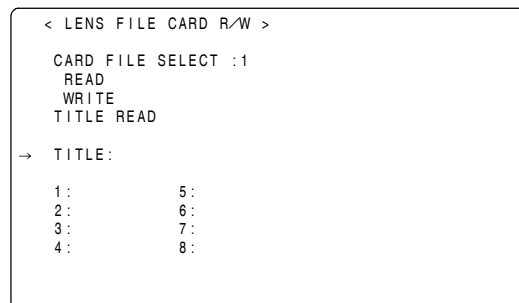


6 Press the JOG dial button.

The arrow (cursor) moves to the title input area, and the input mode is established.

Now perform step 7 on page 100 through step 15 on page 101.

Loading lens files from the SD memory card

- 1** Using menu operations, open the <LENS FILE CARD R/W> screen from the FILE page.
- 2** Turn the JOG dial button to move the arrow (cursor) to the CARD FILE SELECT item.
- 3** Press the JOG dial button and the card file number will flash. Turn the JOG dial button to select the file (1 to 8) to be read.

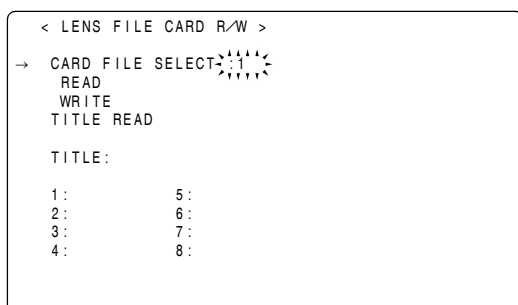

- 4** Press the JOG dial button to enter the file number.

Now perform steps **5** through **8** on page 101.

◆ Note

The card file titles on the SD memory card are displayed on the <LENS FILE CARD R/W> screen, but the titles of the lens files contained in the card files are not shown on this screen.

To display these titles, load the files, and check the titles on the <LENS FILE> screen.


The lens files in the unit's internal memory will be rewritten as the loaded lens files at this time. For this reason, save the lens files in the internal memory onto the SD memory card first to back them up before loading them on the SD memory card.

Chromatic Aberration Compensation (CAC)

CAC is a function that automatically corrects registration errors mainly caused by slight chromatic aberration, which cannot be corrected with lenses, and minimizes color weepage on the images.

What is the chromatic aberration?

Chromatic aberration means magnification ratio chromatic aberration. Magnification ratio chromatic aberration is caused by differences in the in red (R), green (G), and blue (B) refractive indexes of a lens. The lens itself corrects chromatic aberration but the astigmatism remains in the surrounding area in particular. The zooming ratio, iris, and focal distance involves complicated chromatic aberration phenomena in a zoom lens. Images have registration errors.

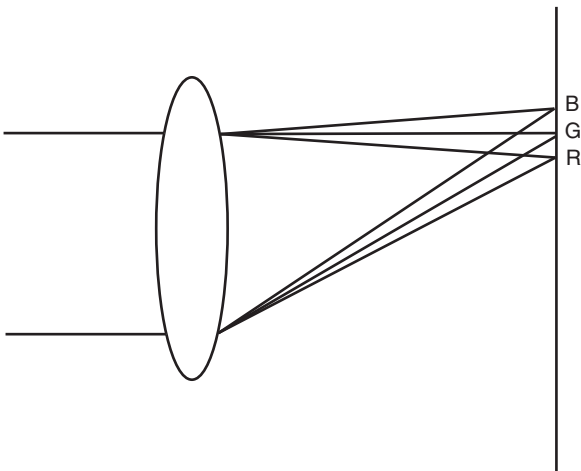

Chromatic aberration compensation function

To correct the chromatic aberration, record the chromatic aberration characteristics of the lens for the zooming ratio, iris, and focal distance in the main unit of the camera-recorder and connect a lens suitable for these characteristics. Then perform the correction in accordance with the zooming ratio, iris, and focus distance of the lens. The CAC data for the following four kinds of lenses are stored in the unit at the time of shipment from the factory.

Indication on the unit	Supporting lens model No.
HA16X 6.3BERM-M58	HA16x 6.3BERM-M58
HA22X 7.8BERM-M58	HA22x 7.8BERM-M58
HJ17EX 7.6B IASE	HJ17ex 7.6B IASE
HJ22EX 7.6B IASE	HJ22ex 7.6B IASE

◆ Note

Visit our Web site at the address given below for details on additions or changes to lenses supporting CAC.

<http://pro-av.panasonic.net/>

CAC operation

For the four lenses listed on the left

- 1 **Install the lens on the unit and connect the lens connector.**
- 2 **Open the CAC ADJ MENU on the MAINTENANCE MENU screen.**
- 3 **Turn "ON" the CAC CONTROL.**

If the lens product number recorded on the unit coincides with the product number of the connected lens, the CAC data stored in the unit are read out automatically.

```

< CAC ADJ >
→ CAC CONTROL      :ON
  CAC FILE DELETE  :
  CAC FILE NO.     :01

  TITLE SCROLL    :01
  01:HA22X7. 8BERM-M58
  02:HA16X6. 3BERM-M58
  03:HJ17EX7. 6B IASE
  04:HJ22EX7. 6B IASE
  05:NO FILE
  06:NO FILE
  07:NO FILE
  08:NO FILE
    
```

Confirmation of the CAC operation status

- 1 **When the MENU is not displayed on the VF screen, pull the MARKER SEL, MODE CHK / MENU CANCEL switch.**

If letters of the CAC are indicated at the left top of the viewfinder screen, the CAC is operating properly. If the letters of CAC are not indicated, the CAC is not operating.

- 2 **Turn "On" the CAC item.**

- The menu item CAC is found in the <VF INDICATOR> screen on the VF page.
- The letters of CAC are indicated in the left top of the viewfinder screen.

```

601          AVC-I 100
1080-59.9
CAC

3. 2K
1 A P 0dB
    
```


To read the CAC FILE from an SD memory card

1 Insert the SD memory card with the CAC FILE downloaded from our support website.

For downloading, refer to the following URL.

<http://pro-av.panasonic.net/>

2 Open the <CAC FILE CARD READ> screen from the FILE page via the menu operation.

3 Select "TITLE READ" using the JOG dial button and then press the JOG dial button.

The lens product number is indicated in the TITLE column.

```

→ < CAC FILE CARD READ >

CARD FILE SELECT:1
  READ
  DELETE
  TITLE READ

TITLE SCROLL :01
01:HA22X7. 8BERM-M58
02:HA16X6. 3BERM-M58
03:HJ17EX7. 6B IASE
04:HJ22EX7. 6B IASE
05:NO FILE
06:NO FILE
07:NO FILE
08:NO FILE
  
```

4 Select CARD FILE SELECT using the JOG dial button and then press the JOG dial button.

5 Select the TITLE NO to be read and press the JOG dial button.

6 Select READ using the JOG dial button and then press the JOG dial button.

The following screen is displayed.

```

FILE READ?
→ YES
  NO(CANCEL)

MEM STORE NO. :EMPTY
TITLE SCROLL :01
01:HA22X7. 8BERM-M58
02:HA16X6. 3BERM-M58
03:HJ17EX7. 6B IASE
04:HJ22EX7. 6B IASE
05:NO FILE
06:NO FILE
07:NO FILE
08:NO FILE
  
```

7 Select YES using the JOG dial button and then press the JOG dial button.

The CAC FILE for the lens selected in step 4 is recorded in memory on the unit.

If "EMPTY" is selected in MEM STORE NO: EMPTY/1/2 --- at this time, data are recorded in available space of the CAC FILE numbers on the unit. If "1" is selected, the data will overwrite the contents of CAC FILE No. 1.

If the following messages are displayed when the JOG dial button is pressed, the data cannot be read out.

Error message	Measures
READ NG NO CARD (No SD memory card is inserted)	Insert an SD memory card.
READ NG NO FILE (No file is available)	Select a file containing data and perform the read operation again.
READ NG ERROR (Data cannot be read out)	Insert an SD memory card again, and then perform the read operation again.
READ NG CANNOT ACCESS (It is impossible to access the data)	It is impossible to access the SD memory card while the card is in use. After completion of the respective operations, perform the read operation again.
READ NG FILE DATA INVALID (File data are abnormal)	The written file data have errors. Use the proper file data.
READ NG FILE MEMORY FULL (Memory is full)	The memory card is full, and new data cannot be written on it. Delete unnecessary CAC data and then perform the read operation again.

8 To store multiple CAC files in the unit, repeat Steps 3 to 7.

9 To close the menu operation, press the MENU button.

The setting menu disappears, and the current state of the unit is displayed.

◆ Note

The unit is capable of recording 32 CAC files. When the CAC FILE is full, delete any of the CAC Files.

To delete the CAC FILE from the unit

- 1 Open <CAC ADJ> from the MAINTENANCE page using the menu operation.

The following screen is displayed.

```
< CAC ADJ >
→ CAC CONTROL      :ON
  CAC FILE DELETE
  CAC FILE NO      :01

TITLE SCROLL      :01
01:HA22X7. 8BERM-M58
02:HA16X6. 3BERM-M58
03:HJ17EX7. 6B IASE
04:HJ22EX7. 6B IASE
05:NO FILE
06:NO FILE
07:NO FILE
08:NO FILE
```

- 2 Select "OFF" in CAC CONTROL.
- 3 Select the lens product number to be deleted in CARD FILE NO using the JOG dial button.
- 4 Press the JOG dial button to fix the selected operation.
- 5 Select "CARD FILE DELETE" using the JOG dial button and then press the JOG dial button.

The following screen is displayed.

```
DELETE?
→ YES
  NO
```

- 6 Move the arrow (cursor) to YES by turning the JOG dial button and then press the JOG dial button.

To delete the CAC FILE from the SD memory card

- 1 Open <CAC FILE CARD READ> from the FILE page using the menu operation.

The following screen is displayed.

```
→ < CAC FILE CARD READ >

CARD FILE SELECT:01
  READ
  DELETE
  TITLE READ

TITLE SCROLL      :01
01:HA22X7. 8BERM-M58
02:HA16X6. 3BERM-M58
03:HJ17EX7. 6B IASE
04:HJ22EX7. 6B IASE
05:NO FILE
06:NO FILE
07:NO FILE
08:NO FILE
```

- 2 Select "TITLE READ" using the JOG dial button and then press the JOG dial button.
The lens product number is displayed in the TITLE part.
- 3 Select "CARD FILE SELECT" using the JOG dial button and then press the JOG dial button.
- 4 Select the "TITLE NO" of the CAC FILE to be deleted, and then press the JOG dial button.
- 5 Select "DELETE" using the JOG dial button and then press the JOG dial button.

The following screen is displayed.

```
DELETE?
→ YES
  NO
```


- 6 Move the arrow (cursor) to YES by turning the JOG dial button and then press the JOG dial button.

If the following messages are displayed when the JOG dial button is pressed, the data cannot be deleted.

Error message	Measures
DELETE NG NO CARD (No SD memory card is inserted)	Insert an SD memory card.
DELETE NG ERROR (Data cannot be deleted)	It is assumed that the SD memory card is defective. Replace the card.
DELETE NG WRITE PROTECT (The SD card is write protected)	Eject the SD memory card and release write protection.
DELETE NG CANNOT ACCESS (It is impossible to access the data)	It is impossible to access the SD memory card while the card is in use. After completion of the respective operations, perform the read operation again.
DELETE NG NO FILE (No file is available)	Select the FILE NO. containing astigmatism files and perform the delete operation.

7 Move the arrow (cursor) to YES by turning the JOG dial button and then press the JOG dial button.

When the write operation is completed, the following message is displayed.

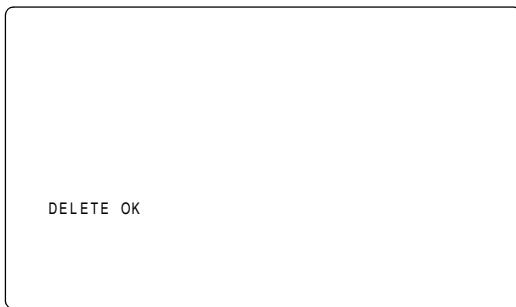

When CAC FILE does not operate properly

The following error messages are displayed in the viewfinder when CAC does not operate properly or CAC files cannot be read properly.

Error message	Meanings	Measures
FILE MEMORY FULL	When the CAC FILE is read from the SD memory card to memory in the unit in EMPTY mode, the built-in memory is full.	Read the CAC FILE in a mode other than EMPTY mode.
CAC FILE DATA NOT FOUND	When the CAC function is set to ON and no CAC FILE applicable to the connected lens is available. This is displayed when the power of the unit is turned on.	Read the CAC FILE that is applicable for the lens to be used.
CAC LENS DATA INVALID	When the unit cannot respond to the return data from the lens, or when any responses other than ones as defined in the CAC FILE are returned.	This lens does not support CAC correction. Although it cannot execute CAC correction, using this lens presents no problems.
LENS INITIALIZE NOT COMPLETED	Initialization of the lens position detection (focus/zoom) in the encoder type is not completed yet.	Turn the focus/zoom ring to through the intermediate point of the operation range.

◆ Notes

- When lens optical accessories (converter lens, attachment) are installed, the CAC may not operate properly due to changes in the optical characteristics of the lens. In this case, turn off the CAC function.
- When focus support is used with CANON lenses, data must be recorded after initialization in the automatic initialization mode. The state where the focus ring is moving may be recorded.
- When the CAC does not operate and no error message is displayed, the version of the software for the lens may be out of date and invalid. Please contact the lens manufacturer.

Preparation

Power Supply

A battery pack or an external DC power supply can be used as AJ-HPX3100's power supply.


Using a Battery Pack

Battery packs from the following manufacturers can be used:

- Anton/Bauer
- IDX

The type of the battery can be checked or changed through the viewfinder or menu screen on the monitor.

- Pull the MARKER SEL, MODE CHK / MENU CANCEL switch on the camera-recorder to display at the upper right of the viewfinder screen the currently set battery type.
- Through the BATTERY SELECT menu option, you can check and change the battery type. The menu item BATTERY SELECT is found in the <BATTERY/P2CARD> screen on the MAIN OPERATION page.

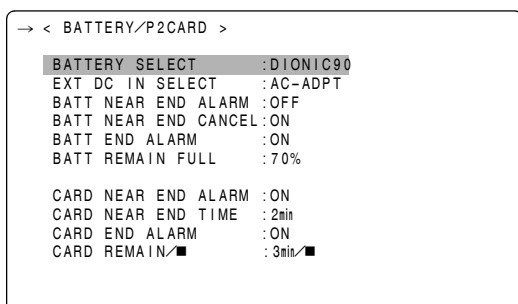


◆ Notes

- Other batteries may be used by changing the menu setting (TYPE A item, TYPE B item, TYPE C item), but system compatibility is not guaranteed. These menu items are found in the <BATTERY SETTING> screen on the MAIN OPERATION page.
- Charge the battery pack with the battery charger before using it. (Please refer to the battery charger's instruction manual for information about charging.)
- When using a light (Ultralight 2), a battery of 90 Wh or higher is recommended.
- When using studio systems (AG-BS300P/E, AG-CA300G) for lighting, affix an AG-CA300G to the battery plate, mount the battery, and supply the light with power from the battery plate. If the power for lighting is provided from the light socket on this unit, the excessive current draw from the AG-BS300P/E and AG-CA300G during lighting may result in this unit not starting.


Mounting the Battery and Setting the Battery Type

Using an Anton/Bauer Battery Pack

1 Mount the Anton/Bauer battery pack.

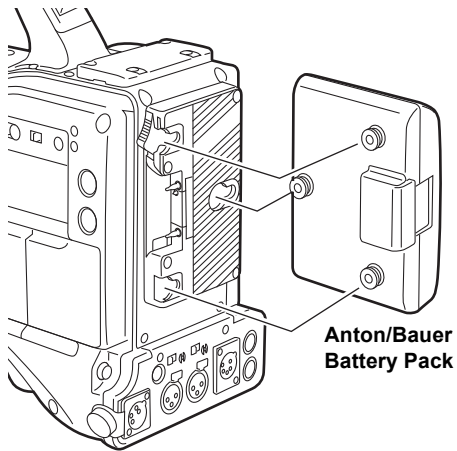

Insert the battery and slide it in the direction of the arrow.

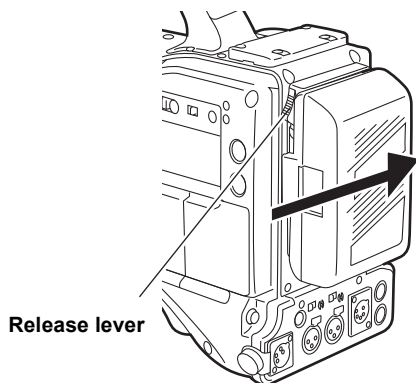

<For your information>

Removing the battery pack

Completely push down and hold the release lever on the battery holder. Then, slide the battery pack in the opposite direction to the arrow while holding the lever down.

2 Setting the battery type.



Select the battery type listed under BATTERY SELECT. The menu item BATTERY SELECT is found in the <BATTERY/P2CARD> screen on the MAIN OPERATION page.

The following Anton/Bauer batteries can be used:

- HYTRON140
- DIONIC90
- DIONIC160

When using a V-mount type battery pack

1 Mount the V-mount adapter plate.

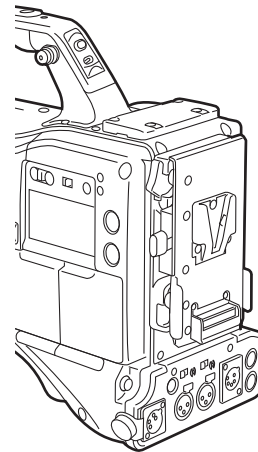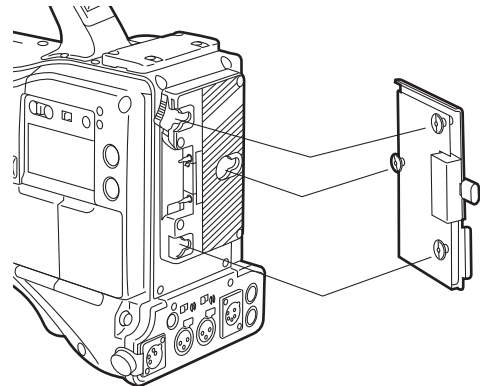

2 Setting the battery type.


Select the battery type listed under BATTERY SELECT. When using another battery which cannot be selected using the BATTERY SELECT item setting, select TYPE A, TYPE B or TYPE C, and set the items that correspond to the characteristics of the battery. These menu items are found in the <BATTERY SETTING> screen on the MAIN OPERATION page.

◆ Note

For information about the V-mount adapter plate, please contact the store where you purchased the camera-recorder.

Use of the external DC power supply

- 1** Connect the external DC power supply to the DC IN socket on the unit.

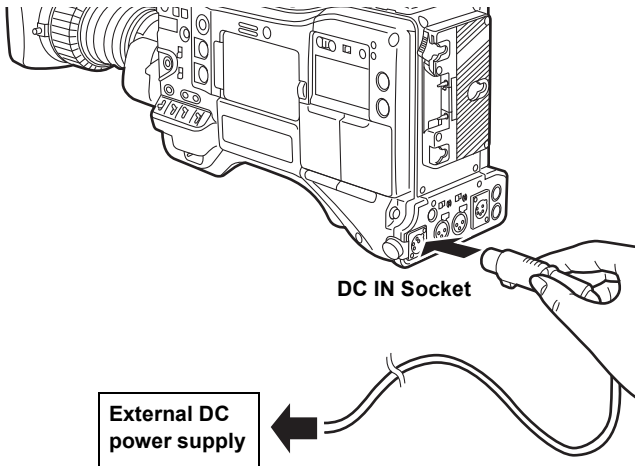

- 2** Turn “ON” the power switch of the external DC power supply.


(If the power switch is available on the external DC power supply)

- 3** Turn ON the POWER switch on the unit.

Inrush current is generated when the power of the unit is turned on. Insufficient power supply when turning on the power may cause a malfunction. We recommend using an external DC power supply with double the capacity of the total power consumption of the unit and any other connected device that is turned by interlocking with the power on of the unit (the viewfinder). For the DC cord, please use a dual-core, balanced type shielded wire of at least AWG18 gauge (nominal cross section 0.824 mm²).

Confirm the pin arrangements of the DC output connector of the external DC power supply and the DC IN socket on the unit, and connect the proper polarities to each other.

If the 12 V power supply is connected to the GND connector in error, it may cause a fire or failure of the unit.

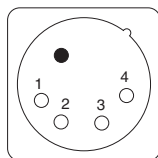

Pin No.	Signal
1	GND
2, 3	—
4	+12V
CASE	FRAME GND


◆ Notes

- If both the battery pack and the external DC power supply are connected, the electric power is supplied from the external DC power supply. While the external DC power supply is used, the battery can be mounted and removed on/from the unit.
- When the external DC power supply is used, ensure that the power switch of the external DC power supply is turned on first and then the POWER switch on the unit is turned on. In the case of the reverse operation, a malfunction may occur on the unit since the output voltage of the external DC power supply is raised slowly.
- When using a power supply from the DC IN socket, the light circuitry will not operate. The light circuitry can only be operated when powered from an Anton/Bauer battery plate.


Mounting the Lens and Performing the Flange Back and White Shading Adjustments

Mounting the Lens


- 1 **Raise the lens clamping lever and remove the mount cap.**

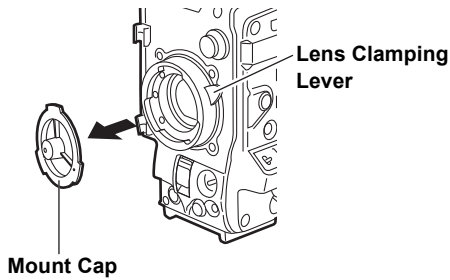


- 2 **To mount the lens, align the indentation at the top center of the lens mount with the center mark of the lens.**

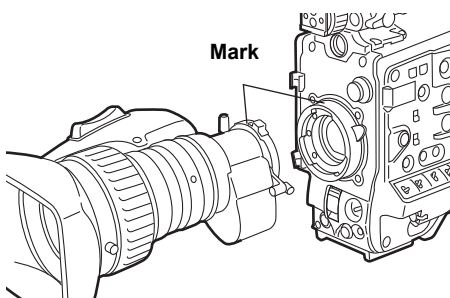

- 3 **Lower the lens clamping lever to clamp the lens.**

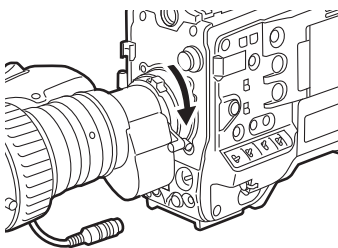

- 4 **Secure the cable through the cable clamp, and plug it into the LENS connector.**

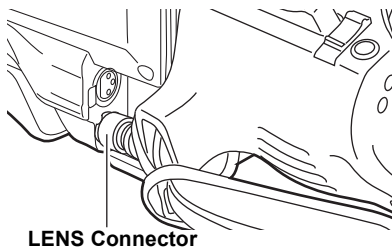

- 5 **Adjust the lens flange back.**

◆ Notes

- Please refer to the lens instruction manual for guidance on lens handling.
- When the lens is removed, install the mount cap to protect the device.

Adjusting the Lens Flange Back


If images are not clearly focused at both telephoto and wide-angle positions during zoom operations, adjust the flange back (distance from the lens mounting surface to the image formation surface).

Once adjusted, the flange back does not need to be re-adjusted as long as the same lens is mounted on the camera.

◆ Note

Please also refer to the lens instruction manual for directions on adjustment and locations of individual lens parts.

- 1 **Mount the lens on the camera.**
Make sure you connect the lens cable.
- 2 **Set the lens iris to manual, and fully open the iris.**

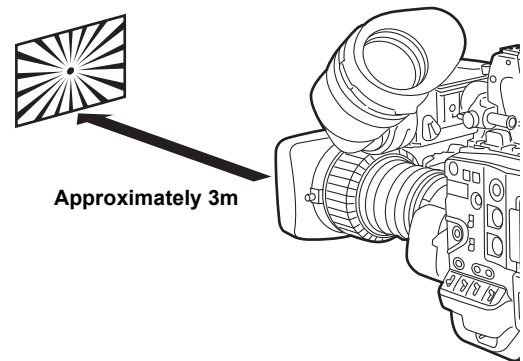

- 3 **Place the flange back adjustment chart about 3 m from the lens and adjust the lighting on the chart to obtain an appropriate video output level.**

If the video level is too high, use the filters or the shutter.

- 4 **Loosen the F.f (Flange focus) ring clamping screw.**

◆ Note

F.b (Flange back) may be indicated on some lenses.

- 5 **Set the zoom ring to the telephoto position, either manually or by electric drive.**
- 6 **Aim the lens at the flange back adjustment chart and turn the distance ring to bring the chart into focus.**

- 7 **Set the zoom ring to the wide-angle position and turn the F.f ring to bring the chart into focus.**

While focusing, take care not to move the distance ring.

8 Repeat Steps 5 to 7 until the lens is in focus at both the telephoto and wide-angle positions.

9 Firmly tighten the F.f ring clamping screw.

Adjusting the Lens White Shading

Method to correct the waveform to be more flat by combining the sawtooth-shaped waveform and the parabola waveform when watching the respective waveforms of R, G and B of the video signals.

Adjust the white shading in the following manner after turning OFF the DS. GAIN and D.ZOOM.

◆Note

Coloring may occur in the vertical direction near where the lens aperture is open even when the white shading has been adjusted. This is something that is inherent to lenses and optical systems and is therefore not indicative of a failure or malfunctioning.

1 Attach the lens to the camera.

At this stage, do not forget to connect the lens cable.

2 Set the electronic shutter to OFF and the gain to “L (0 dB)”.

3 If the extender is attached to the lens, release the extender function.

4 Open the <GAMMA> screen from the PAINT page using the menu operation to confirm that GAMMA MODE SEL is set to “HD”. Then, open <VF DISPLAY> from the VF page to confirm that ZEBRA1 DETECT and ZEBRA2 DETECT are the same as shown in the following illustration. If they are not the same, revise the settings and close the menu screen.

→ < VF DISPLAY >	
DISP CONDITION	: NORMAL
DISP MODE	: 3
VF OUT	: Y
VF DTL	: 05
ZEBRA1 DETECT	: 070%
ZEBRA2 DETECT	: 085%
ZEBRA2	: SPOT
LOW LIGHT LVL	: 35%
RC MENU DISP.	: OFF
50M INDICATOR	: OFF
MARKER/CHAR LVL	: 50%
SYNCHRO SCAN DISP.	: sec

5 Set the ZEBRA switch on the viewfinder to ON.

6 Shoot a white sheet of paper with no unevenness of color.

◆Note

Since fluorescent lights, mercury lamps and other such kinds of lighting tend to flicker, use a light source which is free from flicker such as sunlight or a halogen lamp.

7 Set the lens aperture control to manual, and adjust it so that the zebra pattern covers the whole screen.

Check that the lens aperture is between F4 and F11.

◆Notes

- The zebra pattern will not cover the whole screen if there is any unevenness in the lighting. In this case, make adjustments to the position of the lighting, etc.
- Make adjustments to the position of the lighting, etc. also when the lens aperture is not between F4 and F11.
- Be absolutely sure to leave the electronic shutter at OFF.

8 ① Set the WHITE BAL selector switch to “A” or “B,” and use the AUTO W/B BAL switch to adjust the white balance automatically (AWB).


② Use the AUTO W/B BAL switch to adjust the black balance automatically (ABB).

③ Again, use the AUTO W/B BAL switch to adjust the white balance automatically (AWB).

9 Repeat step 7.

10 Using the menu operation, open the <WHITE SHADING> screen from the MAINTENANCE page and a range of items from R H SAW item to B V PARA item, so that the waveform is more flat.

< WHITE SHADING >	
CORRECT	: ON
→ R H SAW	: +000
R H PARA	: +000
R V SAW	: +000
R V PARA	: +000
G H SAW	: +000
G H PARA	: +000
G V SAW	: +000
G V PARA	: +000
B H SAW	: +000
B H PARA	: +000
B V SAW	: +000
B V PARA	: +000

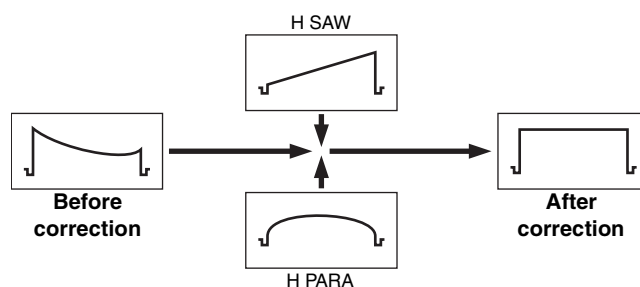

11 When the lens has an extender, repeat steps 7 - 9 to enable the extender function.

The camera-recorder stores, as one lens file data item, two different correction values for the following: a lens with an extender, a lens with no extender.

When making the white shading correction, make the adjustment while observing the R, G, and B waveforms in the horizontal and vertical directions with the waveform monitor.

This now completes the white shading adjustments. The adjustment values are now stored in the non-volatile memory so that even when the unit's power is turned off, there will be no further need to perform the white shading adjustment.


Preparing for Audio Input

Take the following steps to prepare the camera for connecting audio input devices.

When Using the Front Microphone


AJ-HPX3100 can be equipped with the AJ-MC900G stereo microphone kit (an extra-cost option).

- 1 Open the microphone holder.

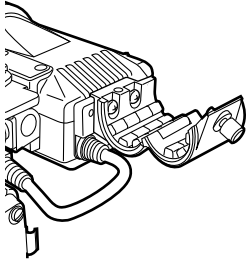


- 2 Mount the microphone and tighten the clamping screw.


The microphone must be attached with the UP mark on the microphone facing up.

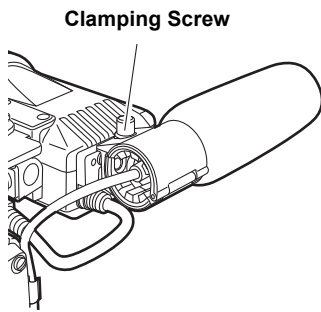

- 3 Connect the microphone cable to the MIC IN jack on the camera.

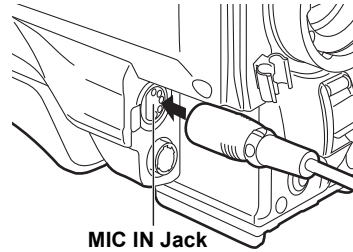


- 4 Set the AUDIO IN switch to [FRONT] depending on the audio channel to be recorded.

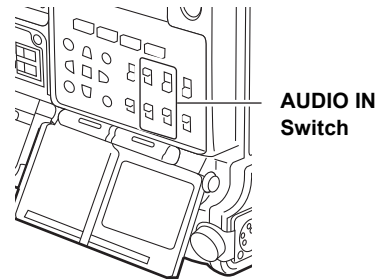

When Using a Wireless Receiver

When Using the Unislot Wireless Receiver

- 1 Remove the cover to insert the wireless receiver and secure it with the screws.

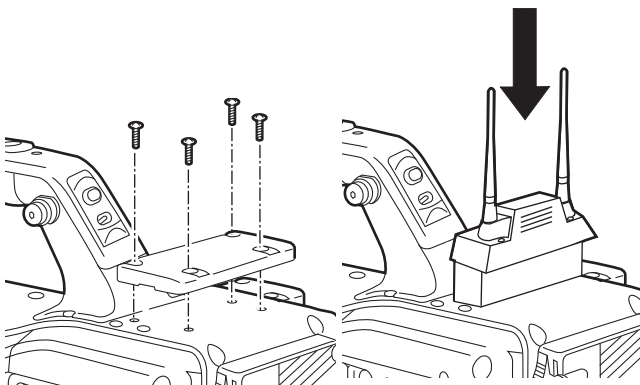

- 2 Set the AUDIO IN switch to [W.L.] depending on the audio channel to be recorded.

- 3 When using a 2-channel wireless receiver, select "DUAL" in the WIRELESS TYPE menu item.

The menu item is found in the <MIC/AUDIO> screen on the MAIN OPERATION page.


When Using Audio Devices

- 1 Connect the audio device to the AUDIO IN jack with the XLR cable.
- 2 Set the AUDIO IN switch to [REAR] for the channel to which the XLR cable is connected.
- 3 Set the LINE/MIC selector switch on the rear panel to [LINE].

◆ Note

This can be set to detect when a connector is inserted into the AUDIO IN terminal, and automatically switch between signals input to CH1/CH2 and to CH3/CH4.


→ [REAR XLR AUTO CH1/2], [REAR XLR AUTO CH3/4] (page 189)

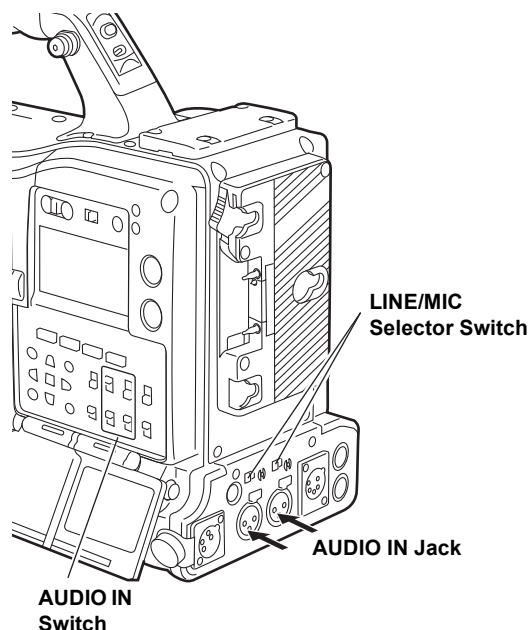

Mounting the Camera on a Tripod

When mounting the camera on a tripod, use the tripod adapter supplied with the camera.

- 1 Mount the tripod adapter on the tripod.

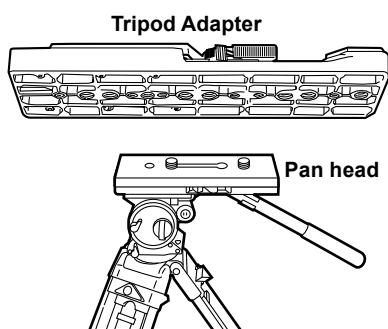


◆ Note

Select an appropriate hole in the adapter, taking into account the center of gravity of the camera and tripod adapter combined.


Also, make sure that the diameter of the selected hole matches the diameter of the pan head screw.

- 2 Mount the camera on the tripod adapter.

Slide the camera forward along the grooves until you hear a "click".

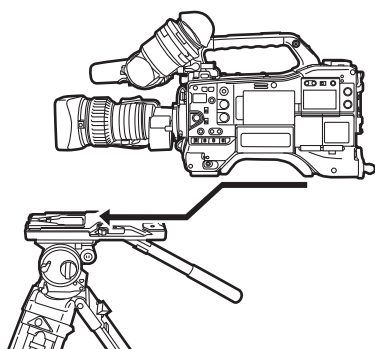

Removing the Camera from the Tripod Adapter

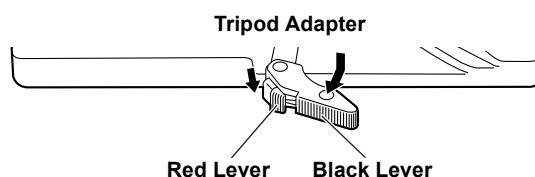

While holding the red lever down, move the black lever in the direction of the arrow, and slide the camera backward to remove it.

◆ Note

If the tripod adapter pin does not return to its original position after the camera has been removed, hold the red lever down and move the black lever in the direction of the arrow again, in order to return the pin to its original position.


Please note that the camera cannot be mounted if the pin remains in the center.

Attaching the Shoulder Strap

To detach the shoulder strap, first open the hooks, then detach the strap.


◆ **Note**

Make sure that the shoulder strap is securely attached.

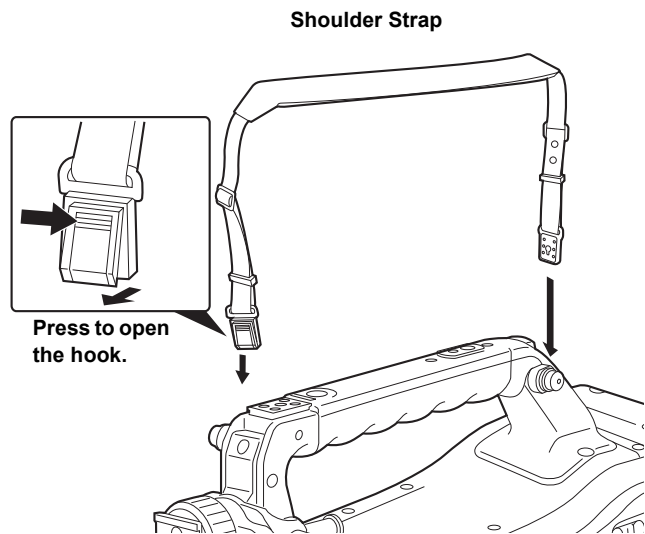


Attaching the Rain Cover

When using the SHAN-RC700 Rain Cover

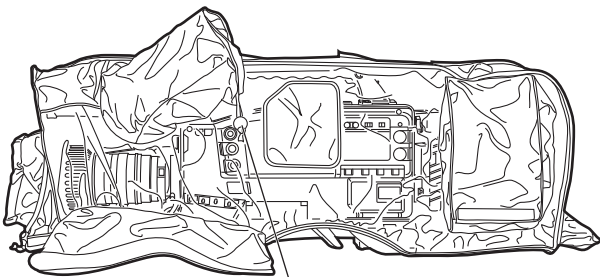

Tighten the cord

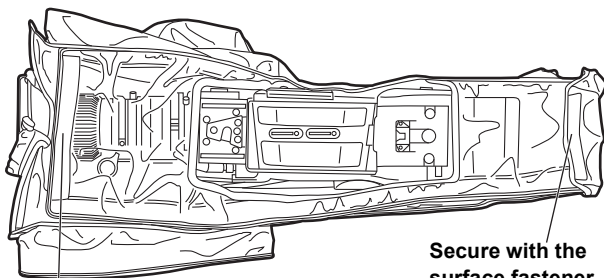


Secure with the surface fastener

Secure with the surface fastener

Attaching the F.AUDIO LEVEL control Knob

If you use the F.Audio Level control frequently, attach the accessory knob so that it can be easily operated.

Remove the screw in the center of the F.Audio Level control, and attach the accessory knob using the screw (included). When attaching the knob, be sure to align the marks on the control with the marks on the knob.

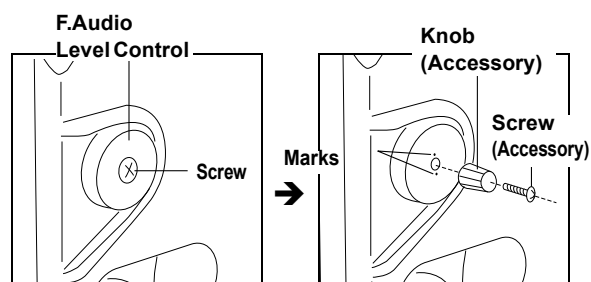


Connection of the DC OUT connector and the external REC start/stop switch


It is possible to draw 1.5 A current from the DC OUT connector of the unit.

REC start/stop can be controlled by connecting an external switch to this connector.

Since a tally lamp can be used by connecting an LED to this connector, it is useful for shooting video when fixing the camera on a crane.

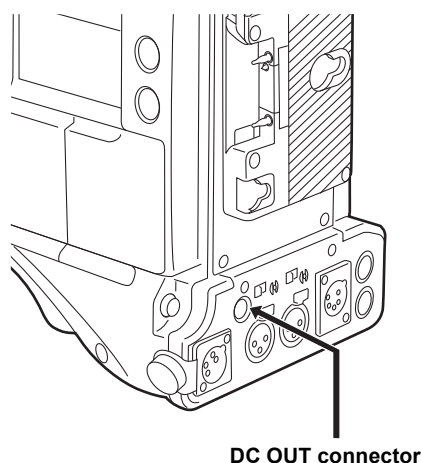

(Reference connection example)

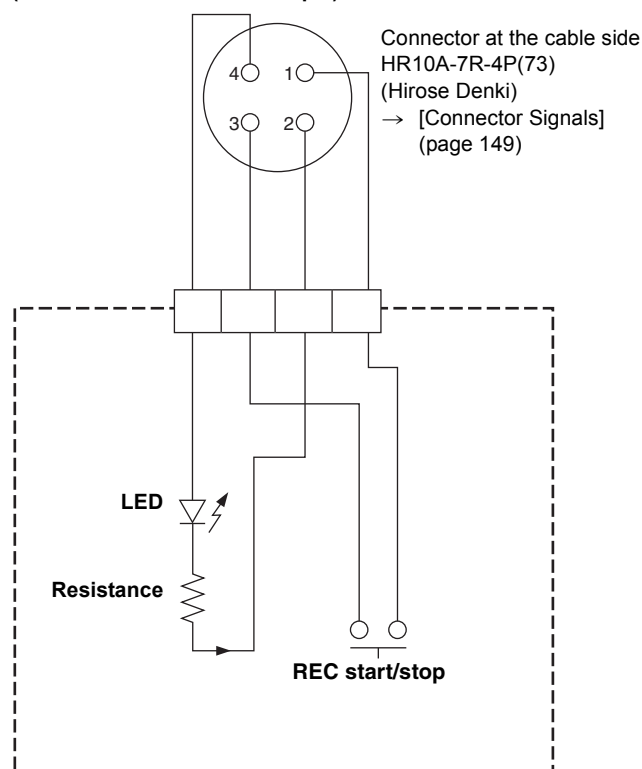

- 1: GND
- 2: TALLY OUT
Open collector output on the unit side
TALLY ON: Low impedance
TALLY OFF: High impedance
- 3: REC start/stop switch (DC 11 V - 17 V)
This is connected in parallel to the REC START button on the unit or the VTR button on the lens
- 4: 12 V

◆ **Note**

Ensure that polarity is correct before connecting an external device, as failure to do so may result in damage.


Manipulating Clips with Thumbnails

A clip is a data group that includes the images and voices created from one shooting session, together with additional information such as text memos and meta data. The following manipulations can be performed using the cursor and SET buttons, while checking the images displayed on the LCD monitor:

- Playback, delete, copy or restore the clip.
- Add or delete a shot mark and a text memo on the clip thumbnail.
- Copy part of a clip by using the text memo.
- Change the thumbnail image by using the text memo.
- Format P2 cards and SD memory cards.
- Uploading and editing clip metadata from the SD memory card

Thumbnail Manipulations Overview

Thumbnail screens are configured as follows:

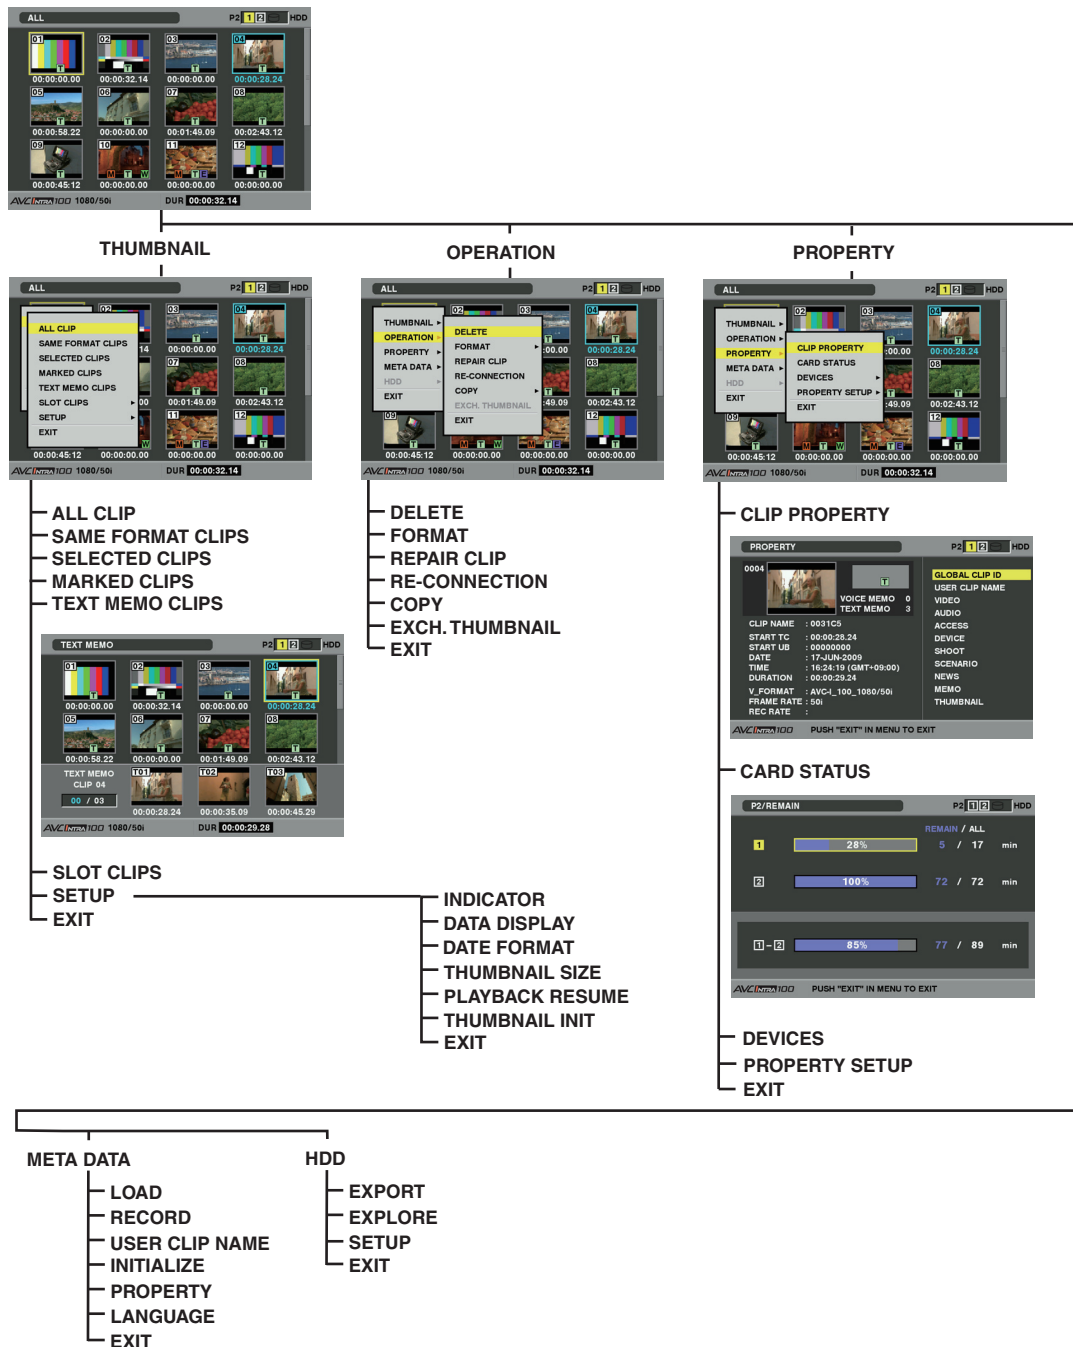


Thumbnail Screen

Press the THUMBNAIL button to display the thumbnail screen on the LCD monitor. Pressing the THUMBNAIL button again returns the display to the regular display. When switching is done from the regular screen display to the thumbnail screen display, all the clips will be displayed on the thumbnail screen.

Pressing the MENU button allows you to navigate the thumbnail menu.

Note

When the TCG switch is set to [SET] to set the time code and user bits or when the camera menu is open, the THUMBNAIL button does not work.

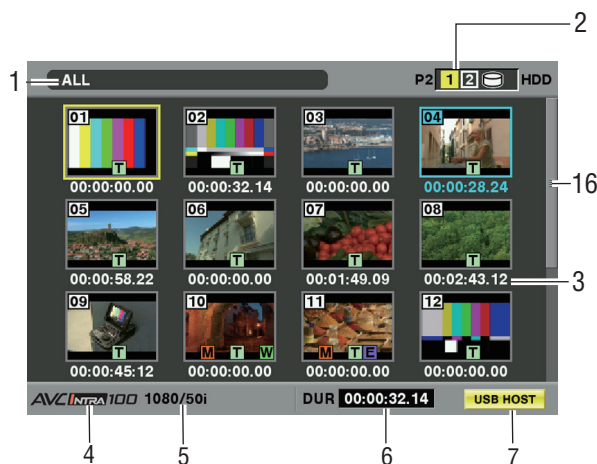

Thumbnail screen



1. Display Mode

The type of the thumbnail indicated on the display and the types of the other information screens are indicated.

ALL: Display all clips.

SAME FORMAT:

Clips in the same format as the system format (SYSTEM MODE item, REC FORMAT item, AUDIO SMPL RES item) are shown.

→ [Selecting a recording signal and method] (page 47)

SELECT: The clips selected with the SET button are shown.


MARKER: Display clips with shot marks.

TEXT MEMO:

Display clips with text memo data.

SLOT n: Display clips in the specified P2 card. (n: 1 or 2, which indicates Slots 1 or 2.)

UPDATING..:

Indicated when the camera-recorder is updating the screen or reading data. When the screen is being updated, the rotating icon  is indicated.

→ [Switching the Thumbnail Display] (page 122)

2. Slot numbers and HDD status

This section indicates on which P2 card the pointed clip is recorded. The number of the slot that contains the appropriate P2 card is indicated in yellow. If the clip is recorded on more than one P2 card, then the numbers of all slots that contain the appropriate cards are indicated. The numbers of the other slots are shown in white if they contain P2 cards.

When the following P2 card is inserted, the slot number is displayed with a pink frame.

● RUN DOWN CARD

(A P2 card on which the maximum number of overwrites has been exceeded.)

● DIR ENTRY NG CARD

(A P2 card on which the directory structure is not supported.)

The USB HDD section is indicated as follows:

● Other than the USB HOST mode: gray

● Not connected in USB HOST mode: gray

● HDD recognized and usable in USB HOST mode: white

● HDD recognized and thumbnails shown in USB HOST mode: yellow

● HDD recognized and not usable in USB HOST: red

3. Time Display

You can set this to display the time code at the start of clip recording (TC), the user bits at the start of clip recording (UB), the shooting time (TIME), the shooting date (DATE), the shooting time date and time (DATE TIME), or the user clip name (USER CLIP NAME).

4. Recording mode

The recording mode for the clip on which the pointer is located is indicated.

5. System format

The format for the clip on which the pointer is located is indicated.

6. Duration

The duration of the clip on which the pointer is located is indicated.

7. USB HOST mode indicator

Indicated when the mode has been switched to USB HOST.

8. Clip Number

The numbers set by the camera for all the clips recognised correctly by the P2 card. These numbers are allocated in chronological order, by shooting dates and times.

If clips cannot be played because of different recording formats, they are displayed in red.


9. Defective Clip Indicator and Unknown Clip indicator

This marker is displayed for defective clips, which may result from a variety of causes, e.g., powering-down during recording.

Clip with yellow defective clip indicators can be restored in some cases.

→[Restoring Clips] (page 126)

A clip displayed with a red corrupt marker cannot be restored and must be deleted. If the clip cannot be deleted, format the P2 card.

 is displayed for clips such as those which differ in format from the P2 standard.

10. Incomplete Clip Indicator

Indicates that although a clip is recorded across multiple P2 cards, one of these cards is not inserted into a P2 card slot.

11. Shot Mark Indicator

This marker is displayed for a clip with a shot mark attached.

→[Shot Mark] (page 123)

12. Indicator for clips with proxy

This marker is displayed for clips with proxy attached.

13. Text Memo Indicator

This marker is displayed for a clip with a text memo attached.

14. Edit Copied Clip Indicator

This marker is displayed on a clip when the model supports edit copy, such as the AJ-HPM200. For more information about edit copying, see the instruction manual for a mode that supports edit copying.

15. Wide Clip Indicator

This marker is displayed for clips recorded with the 16:9 aspect ratio. However, it does not accompany clips in HD format.

16. Thumbnail Scroll Bar

Indicates which part of the whole thumbnail is currently being viewed.

Selecting Thumbnails

Multiple thumbnails can be randomly selected in the thumbnail screen.

1 Use the cursor buttons to move the pointer (yellow frame) to the desired clip and press the SET button.

The frame around the selected thumbnail changes to a blue frame. Press the SET button again to deselect the clip.


2 Additional clips can be selected by repeating Step 1.

It is possible to display only the selected thumbnails in the thumbnail screen for playback.

→ [Switching the Thumbnail Display] (page 122)

◆ Notes

- While holding down the SHIFT button, use the cursor buttons up/down (Δ/∇) to move the pointer to the first or last clips.
- After selecting the clip, move the pointer to another clip, and while holding down the SHIFT button, press the SET button. This will select all clips from the previously set position to the current position.
- While holding down the SHIFT button, press the EXIT button to collectively deselect the selected clips.

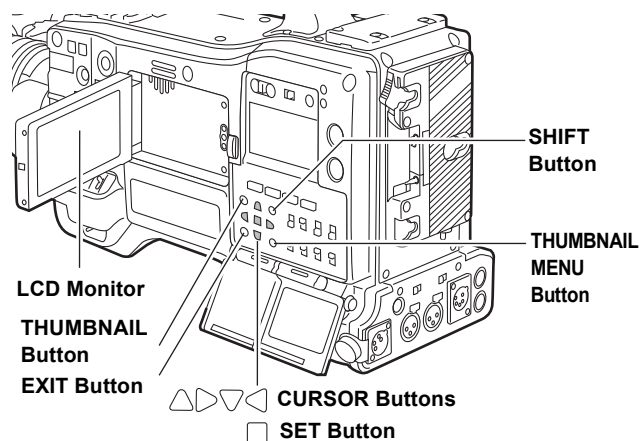

Playing back Clips

1 Press the THUMBNAIL button.

The thumbnail screen appears on the LCD monitor.

2 Use the cursor buttons to move the pointer over the desired clip.

3 Press the PLAY/PAUSE button.

- The clip under the pointer will be played back on the LCD monitor.
- After playback of the clip selected with the cursor has completed, subsequent clips are played back in order. After the last clip has been played back, this returns to the thumbnail screen.

◆ Notes

- When playing back clips, it is not necessary to “select” the clips (blue frames around the thumbnails).
- Clips with clip numbers displayed in red cannot be played.
- During playback, pressing the REW button starts 4x speed reverse playback, and the FF button starts 4x speed fast playback. Press the PLAY/PAUSE button to return to normal playback.
- During clip playback, pressing the PLAY/PAUSE button will temporarily stop (pause) the process. During a pause, pressing the REW button moves the pause position to the beginning of the clip. Pressing the REW button again moves the pause position to the beginning of the previous clip. During a pause, pressing the FF button moves the pause position to the beginning of the next clip.
- Pressing the STOP button during clip playback stops the playback and returns the display to the thumbnail screen.


◆ Notes

- When playback is stopped, the position of the pointer moves to the clip that was being played back, regardless of where the playback started.
- Press the PLAY/PAUSE button again to start playback from the beginning of the clip under the pointer. To continue playing from where previously stopped, turn the PLAYBACK RESUME setting “ON” in [Setting the Thumbnail Display Mode] (page 132).

Switching the Thumbnail Display

The display can be switched so that only those clips matching the specified conditions are displayed in the thumbnail screen.

- 1 Press the THUMBNAIL button.**
The thumbnail screen appears on the LCD monitor.
- 2 Press the THUMBNAIL MENU button.**
The thumbnail menu appears.

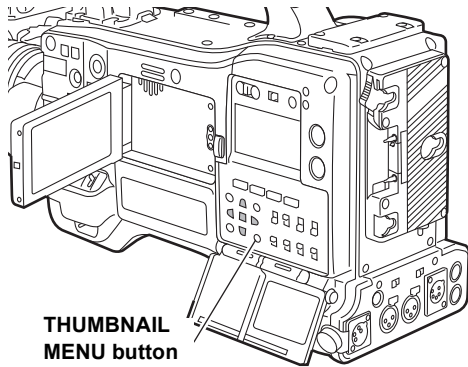

3 Select THUMBNAIL from the thumbnail menu.

Switch the thumbnail display by selecting one of the following items:



ALL CLIP:

Display all clips.

SAME FORMAT CLIPS:

Displays clips of the current system format.

SELECTED CLIPS:

Display randomly selected clips.

MARKED CLIPS:

Display clips with shot marks attached. At this time the thumbnails appear in selected order.

TEXT MEMO CLIPS:

Display clips with text memo data attached.

SLOT CLIPS:

Display clips recorded in the P2 card inserted in the specified slot.

When this item is selected, SLOT1 to SLOT2 are displayed as a sub-menu. Select the desired slot to display the clips.

SETUP:

Please refer to [Setting the Thumbnail Display Mode] (page 132) for information about this item.


EXIT:

Close the sub-menu.

Changing Thumbnails

It is possible to replace thumbnails with images that include previously attached text memos while images are recorded or played back.

- 1 Add text memos to images that you intend to change.**
Refer to [Text Memo Function] (page 45) for the method to add text memos.
- 2 Select THUMBNAIL → TEXT MEMO CLIPS to display thumbnails of the clips with text memos.**
- 3 Place the pointer on the clip of the thumbnail that you intend to change, and then press SET. Move the pointer to the text memo display on the lower row.**
- 4 Select the thumbnail that you intend to replace, place the pointer on it, and then select OPERATION → EXCH. THUMBNAIL on the thumbnail menu.**

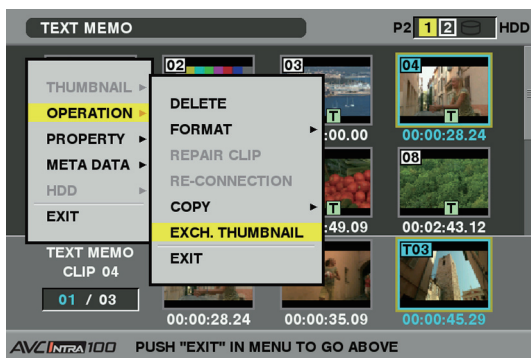

- 5 Press SET button. When the YES/NO confirmation window is displayed, select YES by using the cursor button and the SET button.**

The menu closes and the thumbnail for the clip is replaced.




◆ Note

Display clip properties by selecting PROPERTY → CLIP PROPERTY on the thumbnail menu to confirm the position of the thumbnail (the number of frames from the top of the clip). Since thumbnails come generally from the top of the clip, [0] is displayed.

Shot Mark

A shot mark can be added to a clip thumbnail to distinguish this clip from the others.

- 1 Press the THUMBNAIL button.**
The thumbnail screen appears on the LCD monitor.
- 2 Use the cursor buttons to move the pointer over the clip to which you want to attach a shot mark.**
- 3 Press the SHOT MARKER button or button to which the shot mark function has been assigned (RET button of the lens).**
 - This adds a shot mark to the thumbnail of the clip at the pointer position.
 - To delete a shot mark, place the pointer on the clip a second time and press the SHOT MARKER button or button to which the shot mark function has been assigned (RET button of the lens).

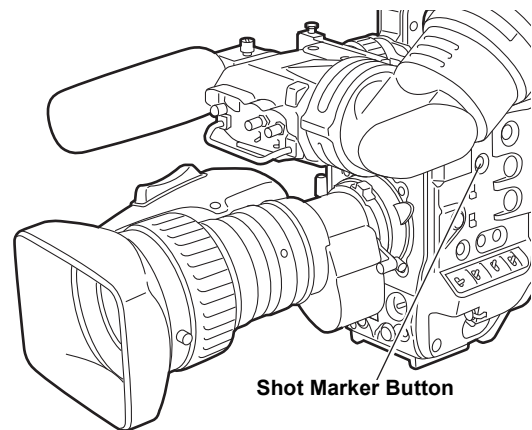

◆ Notes

- A shot mark can be attached during recording.
- Adding shot marks after recording stops, attaches the shot mark to the most recently recorded clip.
→ [Shot Mark Function] (page 46)
- When adding a shot mark to (or deleting the shot mark from) a clip recorded across multiple P2 cards, do this with all these P2 cards inserted into P2 card slots.

Text Memo

During recording or playback, you can add text memos to clips. Text memos can be used to play back clips at some point or break clips into chunks and copy the necessary portions.


Adding a text memo

Text memos can be added in one of the following ways.

- Press the TEXT MEMO button or button to which the shot mark function has been assigned (RET button of the lens) has been assigned during recording or playback. This adds text memos where respective button was pressed.
- Pressing the TEXT MEMO button or button to which the shot mark function has been assigned (RET button of the lens) when a thumbnail screen is open, adds a text memo at the beginning of a clip.

◆ Note

One clip can have up to 100 text and voice memos in combination. Note that camera-recorder is not capable of adding or showing voice memos.

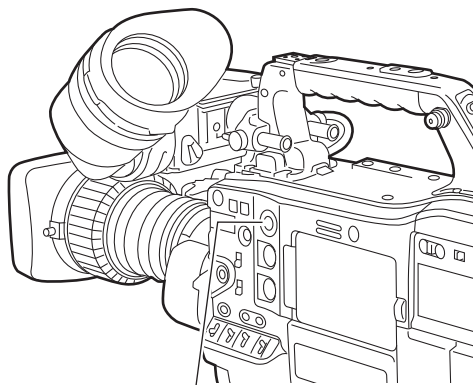

TEXT MEMO Button

Playing back a clip at the position where a text memo is recorded

- 1 Press the THUMBNAIL button.**
The thumbnail screen appears on the LCD monitor.

- 2 Press the THUMBNAIL MENU button and select THUMBNAIL → TEXT MEMO CLIPS from the thumbnail menu.**

The clip thumbnails with text memos attached are displayed in the upper section of the LCD monitor. The lower section of the LCD monitor shows information about the text memo on the clip selected by the pointer.




Thumbnail Display

Shows the still image that the text memo is related to.

Selected text memo clips (blue) and total clips (white)

- 3 Move the pointer over the clip that contains the desired text memo to playback and press the SET button.**

The pointer moves to the lower part of the LCD monitor.

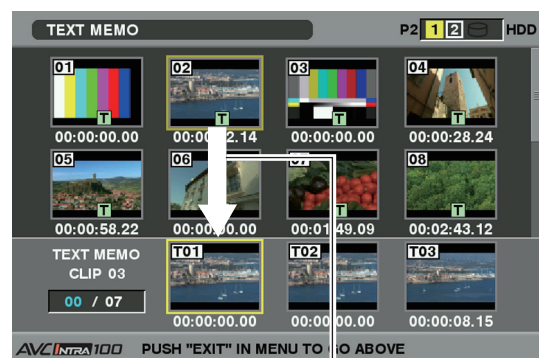


The pointer moves down.

4 With the pointer located in the lower part, move the pointer to the desired text memo number using the cursor right and left buttons (◀▶). Then, press the PLAY button.

- Playback will start from the time code position of the text memo where the pointer is located. If the STOP button is pressed during playback or the playback has finished at the end of the clip, then the thumbnail screen appears again with the pointer replaced with the text memo where the playback started.
- While holding down the SHIFT button, use the cursor buttons up/down (△/▽) to move the pointer to the first or last text memos.
- Press the THUMBNAIL MENU button to select EXIT or press the EXIT button to return the pointer to the upper part of the thumbnail screen.

◆ Note

- Pressing the REC button in the text memo screen will not start recording.
- For AVC-Intra format clips that cannot be played back, text memo thumbnails cannot be displayed, and may be shown as a  icon.

Deleting a text memo

1 Select the desired text memo by carrying out steps 1-3 for [Playing back a clip at the position where a text memo is recorded] (page 124).

2 Move the pointer to the desired text memo, and then press the SET button.

3 Press the THUMBNAIL MENU button to select OPERATION → DELETE from the thumbnail menu.

YES and NO appear to confirm deletion. Use the cursor buttons and the SET button to select YES. The text memo is deleted.

Using a text memo to break a clip and copy the necessary portion

1 Select a desired text memo in a clip by carrying out steps 1-3 for [Playing back a clip at the position where a text memo is recorded] (page 124).

2 Move the pointer to the desired text memo, and then press the SET button.

You can select more than one text memo.

3 Press the THUMBNAIL MENU button to select OPERATION → COPY.

4 Use the cursor buttons and SET buttons to select the destination slot. Then, select YES


- Copying starts.
- The portion between the selected text memo and the next one is copied.
If no text memo is found after the selected one, then all part after the selected text memo is copied.
- If multiple text memos are selected, the selected sections are copied.
- When the clip is being copied, the camera-recorder indicates the progress of the copy process and cancellation status. To discontinue the copy process, press the SET button. Then, a YES/NO confirmation screen is displayed. Use the cursor buttons and SET button to select YES.

◆ Note

In clip division and copying using the text memo function, the area copied may be automatically modified depending on the recording format of the clip.

Deleting Clips

- 1 Press the THUMBNAIL button.**
The thumbnail screen appears on the LCD monitor.
- 2 Use the cursor buttons to move the pointer over the clip you want to delete and press the SET button to select the clip.**
- 3 Press the THUMBNAIL MENU button and select OPERATION → DELETE from the thumbnail menu.**
- 4 The following screen appears. Use the cursor buttons and the SET button to select YES.**

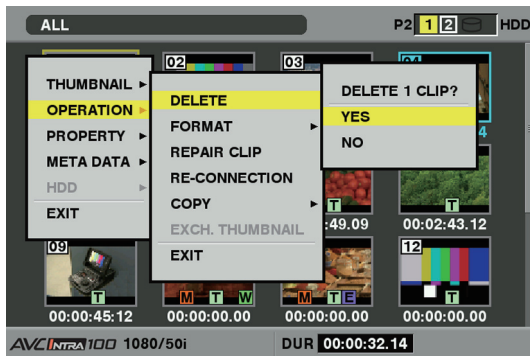

The clip is deleted. All selected clips (in blue-green frames) are deleted by this operation.

◆ Note

To interrupt deleting, press the SHIFT and EXIT buttons or the SET button to cancel the operation. Partially deleted clips cannot be restored by canceling.

Restoring Clips

Restores clips that are defective as a result of sudden powering-down during recording, or removal of the P2 card being accessed.

◆ Note

Only those clips with yellow corrupt clip markers can be restored. Delete the clips with red corrupt clip markers. If the clip cannot be deleted, format the P2 card.

During restoration of the clips, however, the defective-clip indicator may change from yellow to red, resulting in inability to restore the clips.

- 1 Press the THUMBNAIL button.**
The thumbnail screen appears on the LCD monitor.
- 2 Use the cursor buttons to move the pointer over the clip you want to restore (defective clips are indicated by corrupt clip marks) and press the SET button to select the clip.**
- 3 Press the THUMBNAIL MENU button, and select OPERATION → REPAIR CLIP from the thumbnail menu.**

When a confirmation screen asks you to confirm that you want to repair the clip, use a cursor button and the SET button to select YES if you want to restore the clip.

Reconnection of Incomplete Clips

Incomplete clips may be generated when clips recorded on multiple P2 cards (connected clips) are separately copied to different cards. Reconnection function generates one clip (the original, connected clip) from incomplete clips.

1 Press the THUMBNAIL button.
The thumbnail screen appears on the LCD monitor.

2 Use the cursor and SET button to select incomplete clips to reconnect.

Usually, thumbnails of incomplete clips (clips with **!** marker) are displayed in line.

3 Press the THUMBNAIL MENU button and select OPERATION → RE-CONNECTION from the thumbnail menu.

When a confirmation screen asks you to confirm that you want to reconnect the clip, use a cursor button and the SET button to select YES if you want to reconnect the clip.

◆ Notes

Clips that are connected as a group must be grouped together or they will be displayed as incomplete clips.

Copying Clips

Selected clips can be copied to the P2 card or SD memory card in the desired slot.

1 Press the THUMBNAIL button.
The thumbnail screen appears on the LCD monitor.


2 Use the cursor buttons to move the pointer to the desired clip and press the SET button.

◆ Notes


If recording using the one-clip REC function in which the clip can be combined with the previous clip (when "1*CLIP" is displayed), then copying of clips is not possible. Close the menu, hold down the STOP button for 2 seconds to end this connection, and try again.

3 Press the THUMBNAIL MENU button and select OPERATION → COPY from the thumbnail menu.

- Select Slot 1-2 or SD memory card as the destination.

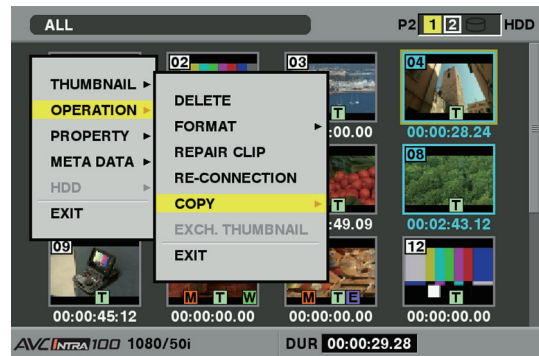

- When a confirmation screen asks you to confirm that you want to copy the clip, use a cursor button and the SET button to select YES if you want to copy the clip.

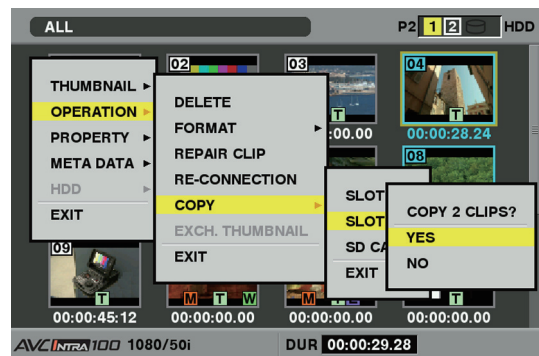

◆ Notes

- Do not turn off the power or remove a P2 card while data is being copied. Doing so may cause the P2 card to fail. If you should accidentally perform one of the above operations, defective clips will be generated. Delete them, and then copy them again.
- When clips are copied to P2 cards, all the information on the clips is copied. However, when they are copied to the SD memory card *, video and sound information is not copied, only thumbnails, clip metadata, icons, Voice Memo, proxy, and real-time metadata.
- When there is insufficient recording capacity on the destination, the message "LACK OF REC CAPACITY!" is displayed, and copying will not proceed. When clips to be copied include some with defects, the message "CANNOT ACCESS!" is displayed, and copying will not proceed. If selected clips include any that are already recorded on the destination P2 card, copying will not proceed.
- To interrupt copying, press the SHIFT button + EXIT button, or the SET button. Clips currently being copied to the destination will be deleted.
- When identical clips exist on the destination card, the "OVERWRITE?" is displayed. Select "YES" or "NO".

* Regarding SD memory cards to be used, see <Cautions in using SD memory cards> (page 22).

Setting of Clip Meta Data

Information such as the name of person who shot the video, the name of the reporter, the shooting location, or a text memo can be read from the SD memory card, and can be recorded as Clip Meta Data.

Reading Clip Meta Data (metadata upload)

1 Insert the SD memory card that contains the Clip Meta Data (metadata upload file).

2 Press the THUMBNAIL button.

The thumbnail screen appears on the LCD monitor.

◆ Note

Press the thumbnail button while pulling MARKER SEL, MODE CHK / MENU CANCEL switch when a thumbnail is displayed to move to Step 4.

3 Press the THUMBNAIL MENU button and Select META DATA → LOAD from the thumbnail menu, and press the SET button.



4 Names of metadata upload files stored on the SD memory card are displayed. Select the desired files using the cursor buttons, and choose YES.

- Upload starts.
- Uploaded metadata is retained even if the power is turned off.
- For confirmation of uploaded data, see [Checking and modifying read metadata] (page 129).

◆ Notes

- During display of names of metadata, press the cursor buttons (▶) to switch to display of file names. Press the cursor button (◀) to return to display of metadata names.
- Even if set to display Japanese, other than ASCII characters in the names of metadata in the file list display will not be displayed, and will instead be shown as “*”. However, move the cursor over the file to display the Japanese on the right.

Clip Meta Data items

Clip Meta Data includes the following items: Underlined items can be set by reading the metadata upload file on the SD memory card. Other items are set automatically during shooting. Using the latest update version of P2 viewer, metadata upload files can be written to SD memory cards using a PC. Download the latest version of the P2 viewer from the following URL and install it to your PC.

<http://pro-av.panasonic.net/>

Regarding SD memory cards to be used, see <Cautions in using SD memory cards> (page 22).

◆ Note

The file which was edited by except P2 viewer is displayed as “UNKNOWN DATA”, and may not be read.

GLOBAL CLIP ID:

Displays the global clip ID, which indicates the shooting status of the clip.

USER CLIP NAME:

Displays the clip name specified by the user.*1

VIDEO: Displays [FRAME RATE] (frame rate of the clip), [PULL DOWN], and [ASPECT RATIO].

AUDIO: [SAMPLING RATE] (sampling frequency of recorded sound) and [BITS PER SAMPLE] (digitized bit[s] of recorded sound).

ACCESS: Displays [CREATOR] (person who recorded the clip), [CREATION DATE] (date when the clip was recorded), [LAST UPDATE DATE] (date of the latest update of the clip), and [LAST UPDATE PERSON] (person who made the latest update of the clip).

DEVICE: Displays [MANUFACTURER] (name of the device manufacturer), [SERIAL NO.] (serial number of the device) and [MODEL NAME] (model name of the device).

SHOOT: Displays [SHOOTER] (name of the person who shot the video), [START DATE] (start date of shooting), [END DATE] (end date of shooting), and [LOCATION] ALTITUDE/LONGITUDE/LATITUDE/SOURCE/PLACE NAME (altitude, longitude, latitude, and source of the information and name of the location).

SCENARIO:

Displays [PROGRAM NAME], [SCENE NO.], and [TAKE NO.].

NEWS: Displays [REPORTER] (name of the reporter), [PURPOSE] (purpose of shooting), and [OBJECT] (object of shooting).

MEMO*2: Displays [NO.] (the number of the text memo), [OFFSET] (location of the frame where the text memo is added), [PERSON] (person who recorded the text memo added to the clip), and [TEXT] (contents of the text memo).

THUMBNAIL:


Displays the location of the frame (frame offset) and the size (height and width) of the image selected as the thumbnail image.

- *1 The USER CLIP NAME recording method is selectable. For details, refer to [Selecting the USER CLIP NAME recording method] (page 130).
- *2 Be sure to enter TEXT when entering MEMO. It is not possible to record only PERSON or OFFSET.

Checking and modifying read metadata


The camera-recorder allows you to check the details of read metadata.

- 1 Press the THUMBNAIL button.**
The thumbnail screen appears on the LCD monitor.
- 2 Press the THUMBNAIL MENU button to select METADATA → PROPERTY from the thumbnail menu.**
The screen like this is displayed:

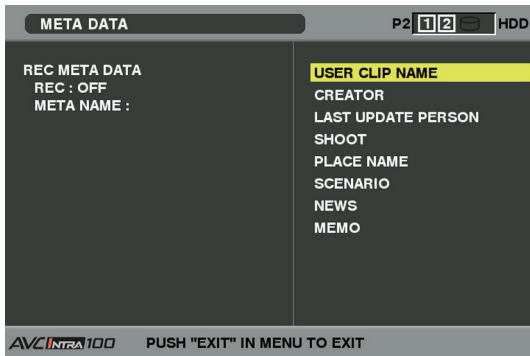


- 3 Use the cursor buttons to move the pointer. Then, press the SET button.**

This allows you to view the settings of the read metadata.

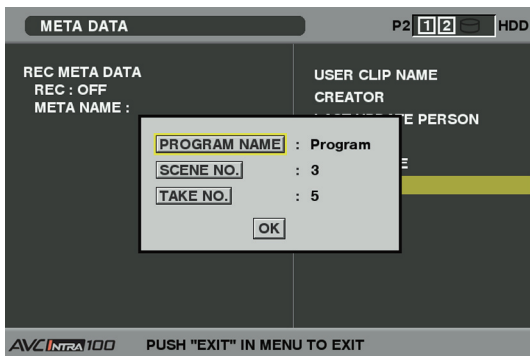

- 4 While viewing the settings for the metadata, use the cursor buttons to move the pointer to the desired option. Then, press the SET button.**

- A software keyboard screen is displayed, allowing you to modify the setting.

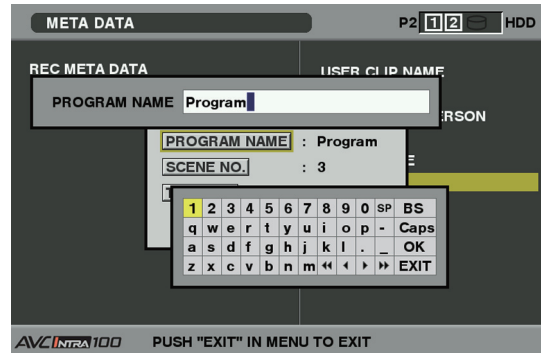

- While holding down the SHIFT button, use the cursor buttons up/down (Δ/▽) to move to the start or end of the content to change.

To set whether or not the uploaded metadata is recorded

Set ON/OFF in META DATA → RECORD from the thumbnail menu. The factory setting is OFF.

Selecting the USER CLIP NAME recording method

Select META DATA → USER CLIP NAME from the thumbnail menu to select the recording method. Two options are available: TYPE1 and TYPE2.


● TYPE1 (Factory setting)

	USER CLIP NAME to be recorded
If clip metadata has been read in	Uploaded data
If no clip metadata has been read in or if the setting for recording clip metadata has been turned off	Same as GLOBAL CLIP ID (UMID data)

● TYPE2

	USER CLIP NAME to be recorded
If clip metadata has been read in	Uploaded data + COUNT value*
If no clip metadata has been read in or if the setting for recording clip metadata has been turned off	Same as CLIP NAME


* The COUNT value is indicated as a four-digit number. The COUNT value is incremented each time a new clip is captured if clip metadata has been read in and TYPE2 has been selected as the recording method. The COUNT value can be reset using the following procedure. Select META DATA → PROPERTY from the thumbnail menu, then select USER CLIP NAME to display the menu shown below. Select "COUNT RESET" with the cursor and press the SET button to reset the COUNT value to 1.

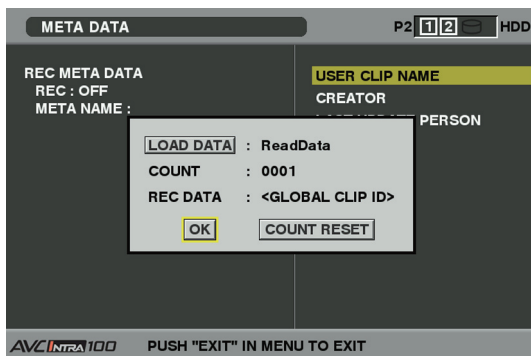


◆ Note

When a P2 card with a memory capacity of 8 GB or more is used in camera-recorder and a one-time continuous recording exceeds the prescribed duration (DVCPRO HD and the AVC-Intra 100: about 5 minutes; DVCPRO50 and the AVC-Intra 50: about 10 minutes; DVCPRO or for DV: about 20 minutes) or when a one-time recording extends over more than one P2 card, the recording concerned will automatically be undertaken as a separate clip. At this time, each clip will be provided with its own COUNT value.

Example of recording (DVCPRO HD) a clip on one P2 card:

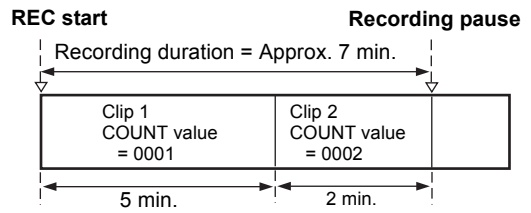

Example of recording a clip on two P2 cards:

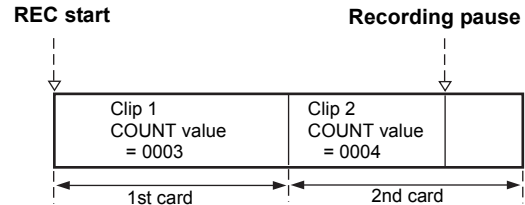

If the clip thumbnails are displayed as shown in the example above or their properties are indicated using a P2 device, the thumbnail and COUNT value of clip 1 will be displayed.

Clear the uploaded metadata

Select META DATA → INITIALIZE from the thumbnail menu, and press the SET button. Select "YES" when the confirmation screen is displayed.


◆ Notes

- Japanese or Chinese characters indicated in English or other characters that cannot be indicated in English will not display properly; they will be indicated as *.
- The letters which can be input with AJ-HPX3100 are only the alphanumeric. AJ-HPX3100 cannot input Japanese and Chinese.


Formatting a P2 Card

1 Press the THUMBNAIL button.
The thumbnail screen appears on the LCD monitor.

- 2 Press the THUMBNAIL MENU button and select OPERATION → FORMAT from the thumbnail menu.**
- When the screen shown below appears, select the slot number of the P2 card you want to format and press the SET button.
 - Select EXIT if formatting is not required.

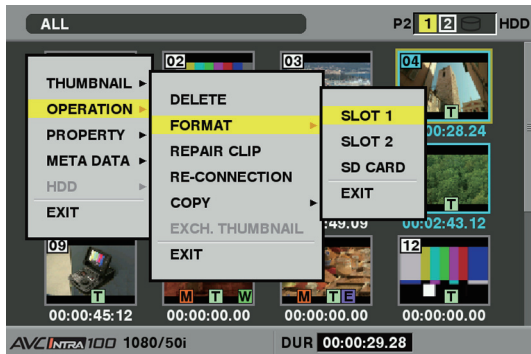

- 3 The following screen appears. Use the cursor buttons and the SET button to select YES.**

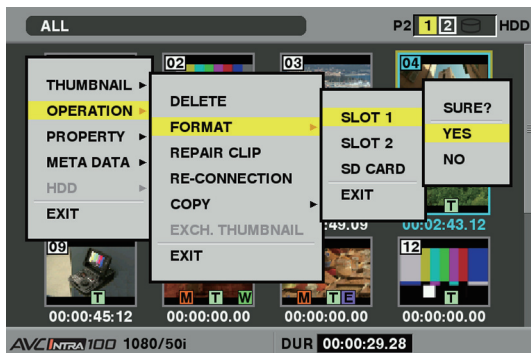

The selected P2 card is formatted.

◆ Note


Check that no important data remains on a card before formatting since data erased by formatting cannot be recovered.

Formatting SD memory cards


SD memory cards can also be formatted from the thumbnail screen. With an SD memory card inserted into the camera-recorder, perform the following operation:

1 Press the THUMBNAIL button.
The thumbnail screen appears on the LCD monitor.

- 2 Press the THUMBNAIL MENU button and select OPERATION → FORMAT from the thumbnail menu.**
- The following screen appears. Select "SD CARD".
 - Select "EXIT" if formatting is not required.

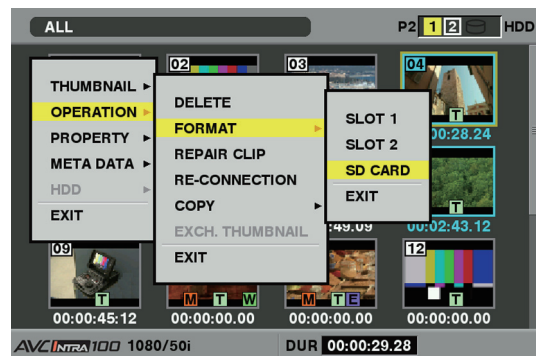

- 3 The following screen appears. Use the cursor buttons and the SET button to select YES.**

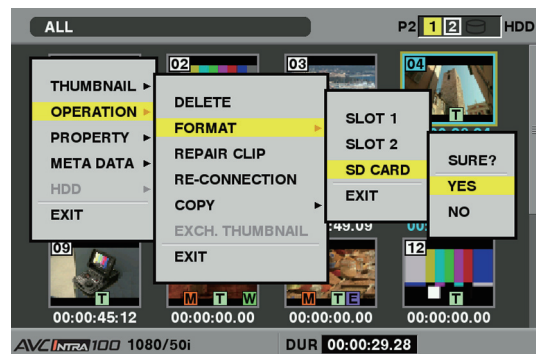

The SD memory card is formatted.

◆ Notes

- SD memory cards can also be formatted from the menu screen.
→ [To format an SD memory card] (page 92).
- Check that no important data remains on a card before formatting since data erased by formatting cannot be recovered.

Setting the Thumbnail Display Mode


The thumbnail display mode can be customised to suit your preferences.

1 Press the THUMBNAIL button.

The thumbnail screen appears on the LCD monitor.

2 Press the THUMBNAIL MENU button and select THUMBNAIL → SETUP from the thumbnail menu.

The following screen appears.

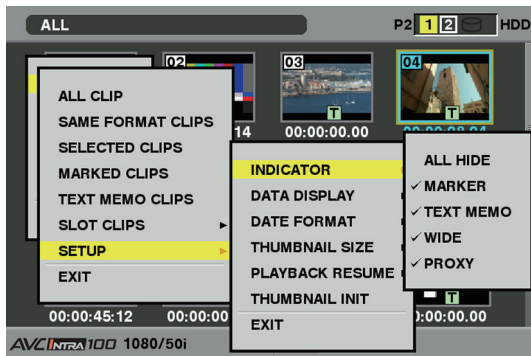

INDICATOR:

Select which indicators you want to show on thumbnails and which you want to hide.

• ALL HIDE:

ON: All indicators (MARKER, TEXT MEMO, WIDE, PROXY) are not displayed.

OFF: Indication/No indication will be set depending on the following menu. The factory settings are as follows.

• MARKER:

Switches the shot mark marker between indication and no indication (ON/OFF). The factory setting is ON (indication).

• TEXT MEMO:

Switches the text memo marker between indication and no indication (ON/OFF). The factory setting is ON (indication).

• WIDE:

Switches the wide marker between indication and no indication (ON/OFF). The factory setting is ON (indication).

• PROXY:

Switches the proxy marker between indication and no indication (ON/OFF). The factory setting is ON (indication).

DATA DISPLAY:

The time display field of the clip offers a choice of Time Code (TC), User Bits (UB), Shooting Time (TIME), Shooting Date (DATE), Shooting Time and Date (DATE TIME) or USER CLIP NAME. The factory setting is Time Code.

DATE FORMAT:

You can specify the display order for the shooting date as either Year/Month/Day (Y-M-D), Month/Day/Year (M-D-Y) or Day/Month/Year (D-M-Y). The factory setting is Month/Day/Year. This setting is reflected in the recording date shown in the clip property and the shooting date shown when DATE is selected under the item DATA DISPLAY.

THUMBNAIL SIZE:

For the size of thumbnails displayed on one screen, either LARGE (3 × 2 thumbnails displayed) or NORMAL (4 × 3 thumbnails displayed) can be selected. The factory default value is NORMAL.

PLAYBACK RESUME:

Selecting a position to restart playback after stopping playback on the thumbnails screen using the STOP button.

ON: Playback starts from the stop position.

OFF: Playback starts from the beginning of the clip indicated by the pointer.

Note that if the pointer is moved after stopping playback, the playback will restart from the beginning of the clip indicated by the pointer regardless of this setting. Also, attempting to play back from the end of all the available clips will cause the screen to flash momentarily, indicating that there are no more clips which can be played back.

THUMBNAIL INIT:

Return the above thumbnail display settings to default. Move the cursor to this option, and press the SET button. Select "YES" when the confirmation screen is displayed.

EXIT:


Returns to the previous menu.

Properties

The clip's properties and the P2 card's status are displayed. It is possible to edit and rewrite recorded clip metadata while clip properties are displayed.

Clip Property

From the thumbnail menu, select PROPERTY → CLIP PROPERTY. The following screen appears.

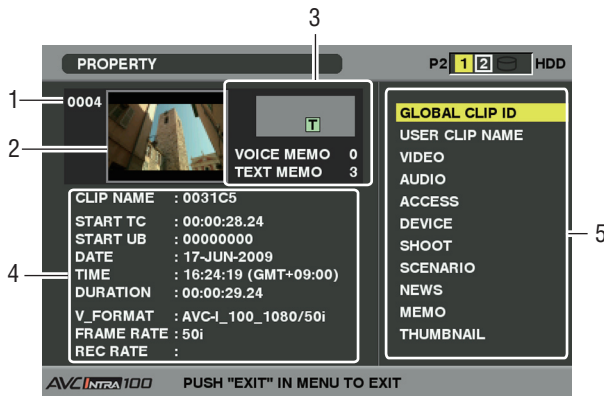

1. Clip Number

2. Thumbnail

3. Clip Information

Indicates the indicators added to the clip and the number of text and voice memos added to the clip. The **T** mark appears if the clip is recorded on a write-protected P2 card.

◆ Note

AJ-HPX3100 is not capable of recording or playing back voice memos.

4. Clip Information

Displays detailed information about the clip.

CLIP NAME:

Display clip names.

START TC:

The time code value at the start of the recording.

START UB:

The user bit value at the start of the recording.

DATE: The date of the recording.

TIME: The time at the start of the recording.

DURATION:

The time length of the clip.

V-FORMAT:

The recording format for the clip.

FRAME RATE:

The frame rate for the playback.

REC RATE:

The recording frame rate is displayed. (Only displayed when using the VFR function to record in Native mode)

5. Clip Meta Data

Displays more detailed data about the clip. Use the cursor buttons to move the pointer, and press the SET button to check the detailed content. The underlined items are automatically set during shooting.
→[Setting of Clip Meta Data] (page 128)

Modification of recorded clip metadata

1 Display the window for detailed clip metadata that you intend to modify in the clip properties window.


2 Place the cursor on the item to be modified using the cursor button.

The metadata that can be modified are shown like [CREATOR] in the following figure.



3 Press the SET button


- The input window (soft keyboard) for modifying metadata is displayed.
- Use the keyboard to modify the metadata.

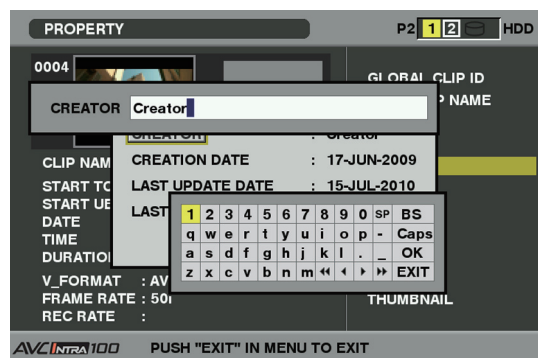

The keyboard operation is the same as [Checking and modifying read metadata] (page 129).

4 Press OK on the keyboard to write the modified metadata on the clip and return to the metadata window.

◆ Notes

- Deleting only the respective items of LOCATION (recording location data) in SHOOT is not possible. By setting ALTITUDE to empty, other LONGITUDE/LATITUDE items are collectively deleted.
- The metadata for a clip with the  incomplete clip indicator cannot be modified. For the clips recorded on multiple P2 cards, modify the metadata while all P2 cards are inserted.
- Any MEMO with 101 characters or more cannot be modified.

P2 Card Status Display

■ P2 Card Status Display Settings

Select PROPERTY → CARD STATUS from the thumbnail menu to set the desired indication mode (remaining free space or used memory capacity) for the P2 card status display.

- 1 Press the THUMBNAIL button.**
The thumbnail screen appears on the LCD monitor.
- 2 Press the MENU button and select PROPERTY → PROPERTY SETUP → P2 CARD CAP from the thumbnail menu.**
The following screen appears. Select the P2 card status display settings from the P2 CARD CAP menu option.



REMAIN:

Show remaining free space on the P2 card as the P2 card status display. (Factory setting)


USED:



Show used memory capacity on the P2 card as the P2 card status display.

Contents of P2 Card Status Display Settings


From the thumbnail menu, select PROPERTY → CARD STATUS. The following screen appears.

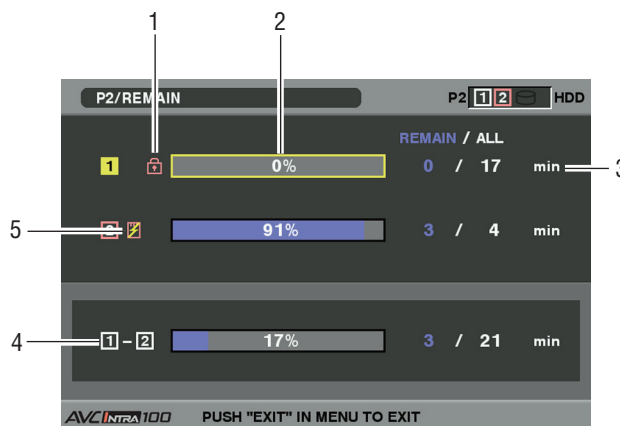When “REMAIN” is selected:



- 1. Write-protect Mark**
The  mark appears if the P2 card is write-protected.
- 2. P2 Card Status (remaining free space)**
The remaining memory capacity of the P2 card is indicated by a bar graph and percentage. The bar graph indicator moves to the left as the remaining free space decreases.
The following indications may appear, depending on the card status:
FORMAT ERROR:
An unformatted P2 card is inserted.
NOT SUPPORTED:
An unsupported card is inserted in the camera.
NO CARD:
P2 cards are not inserted.
Use the cursor button to place the cursor on the P2 card for data you want to access and press the SET button to display detailed information about the P2 card to check individual information such as the serial number and the user ID.
- 3. P2 Card Remaining Capacity/Total Capacity**
Displays the P2 card remaining capacity and total capacity in minutes. The total of the remaining memory capacity for each P2 card that is displayed may not match the actual total remaining memory capacity for the P2 cards because only the figure in minute is displayed.
- 4. Total remaining free space for the slot**
Displays the total remaining free space for all 2 slots. Please note that the remaining capacity of a write-protected P2 card is not included in the total remaining capacity.
- 5. Warning symbol**
When the following P2 card is detected, the  symbol is displayed.
RUN DOWN CARD:
The maximum number of overwrites on the P2 card has been exceeded.
DIR ENTRY NG CARD:
The directory structure on the P2 card is not supported.
The warning can be confirmed on the P2 card detailed information indication in [2.P2 Card Status (remaining free space)].

When “USED” is selected:

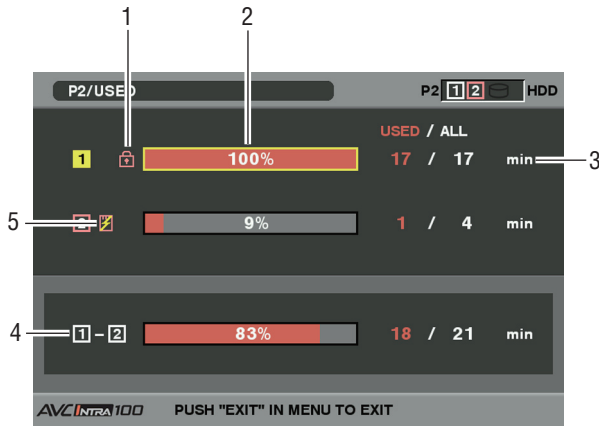

1. Write-protect Mark

The mark appears if the P2 card is write-protected.

2. P2 Card Status (used memory capacity)

The used memory capacity of the P2 card is indicated by a bar graph and a percentage figure. The bar graph indicator moves to the right as the used memory capacity increases. The following indications may appear, depending on the card status:

FORMAT ERROR:

An unformatted P2 card is inserted.

NOT SUPPORTED:

An unsupported card is inserted in the camera.

NO CARD:

P2 cards are not inserted.

Use the cursor button to place the cursor on the P2 card for data you want to access and press the SET button to display detailed information about the P2 card to check individual information such as the serial number and the user ID.

3. P2 Card memory capacity/Total Capacity

Displays the used memory capacity on a P2 card and the total capacity, in minutes. Because fractions are truncated, the figure shown for used memory capacity on a P2 card may differ from the figure for total capacity. The used memory capacity of a write-protected P2 card is displayed as 100%.

4. Total used memory capacity for all slots

Displays the total used memory capacity for all 2 slots.

5. Warning symbol

When the following P2 card is detected, the symbol is displayed.

RUN DOWN CARD:

The maximum number of overwrites on the P2 card has been exceeded.

DIR ENTRY NG CARD:

The directory structure on the P2 card is not supported.

The warning can be confirmed on the P2 card detailed information indication in [2.P2 Card Status (used memory capacity)].

SD memory card Status Display

The status display enables a confirmation of the SD memory card formatted condition, available memory capacity etc. From the thumbnail menu, select PROPERTY → DEVICES → SD CARD.

SD STANDARD:

Indicates that an SD memory card is formatted according to the SD/SDHC standard.

SUPPORTED: Complies with SD/SDHC

NOT SUPPORTED: Does not comply with SD/SDHC

USED: Used capacity (bytes)

BLANK: Free space (bytes)

TOTAL: Total capacity (bytes)

NUMBER OF CLIPS:

The number of clips on an SD memory card when clips have been copied to an SD memory card.

PROTECT:

Write protected

Connection with external device

Connection with external devices using the USB 2.0 port

Connection with a PC in the USB DEVICE mode


By connecting AJ-HPX3100 with an external PC using USB 2.0, the P2 card connected to AJ-HPX3100 can be used as a mass storage device.

Procedures for establishing a connection with a PC

1 Connect the USB 2.0 cable to the USB 2.0 port.

◆ Notes

- The USB 2.0 cable is not included with the camera-recorder. Please use a commercially available USB 2.0 cable (shield with a ferrite core).
- The camera supports USB 2.0 cable lengths up to 5 meters. However, we recommend use of a USB cable shorter than 3 meters.

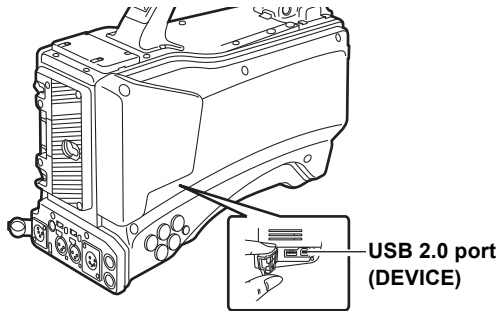

2 Navigate the menu to open the <SYSTEM MODE> screen on the SYSTEM SETTING page.

Set the PC MODE SELECT menu option to USB DEV. and the PC MODE option to ON.

```
→ < SYSTEM MODE >
SYSTEM MODE : 1080i-59.94i
REC SIGNAL : CAM
REC FORMAT : AVC-I100/60i
CAMERA MODE : 60i
SCAN REVERSE : OFF
AUDIO SMPL RES : 16BIT
PC MODE SEL : USB HOST
→ PC MODE : OFF
```

◆ Note

The function of the menu option USB may be assigned to a desired user button by using any one of the menu options USER MAIN SW, USER1 SW, USER2 SW, SHOT MARK (USER3) or TEXT MEMO (USER4). These menu items are found in the <USER SW> screen on the CAM OPERATION page.



To make a USB connection, you must first install the P2 software on the supplied CD-ROM on the computer. Select the "AJ-HPX3100" driver. This USB driver supports only the Windows operating system. Refer to the Installation Manual for the details.

◆ Notes

- A USB driver must be installed on the PC.
- AJ-HPX3100 is only applicable to USB 2.0. Use a personal computer that supports USB 2.0.
- Only one unit at a time must be connected to the PC via USB.
- The P2 card must not be removed when it is connected via USB.
- While a USB connection is established, the P2 card's access LED should not be lit except when access is being carried out.
- When a USB device is active, recording, playback, or navigation through clip thumbnails is disabled.

During a USB connection, the USB LED on the side panel stays illuminated. Also, "USB DEVICE" is displayed in the system information/warning area in the viewfinder.

When the connection is not correctly established, both of these indications blink.

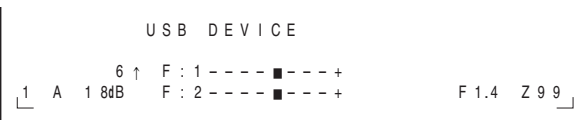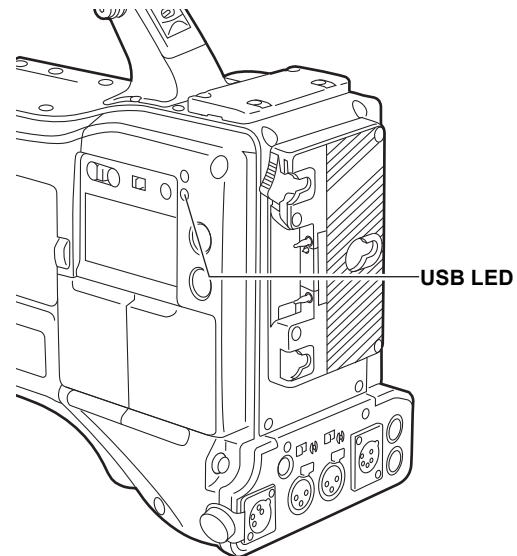

3 Terminating USB mode.

Use one of the following three methods.

- Turn the POWER switch of this unit OFF.
- Set the PC MODE item to "OFF" from the menu operations.
- Press the USER button to which PC MODE has been assigned.

USB HOST mode

In this mode, it is possible to connect to a hard disk drive (HDD), store card data (EXPORT: Refer to "Writing data on a hard disk drive" (page 140)), view thumbnails of stored clips (EXPLORE: Refer to "Viewing hard disk drive information" (page 137)), and write data back to P2 cards (IMPORT: Refer to "Writing data back to P2 cards" (page 140)).

Switching to the USB HOST mode

- 1** By navigating the menu, set the **PC MODE SELECT** menu option on the **<SYSTEM MODE>** screen to "USB HOST", then the **PC MODE** option to "ON".
 - This will place the camera-recorder in USB HOST mode.
 - When the camera-recorder is in USB HOST mode, the viewfinder indicates "USB HOST" and the USB LED on the side panel stays illuminated. If the hard disk drive is not properly connected, both indications blink.
 - When a user button is assigned the PC MODE on/off switching capability, you can press that user button to switch between the normal and USB HOST modes.
→ [Assigning Functions to USER Buttons] (page 55)

- 2** Press the **THUMBNAIL** button.
 - Go to the thumbnail screen. Check to see that the screen indicates "USB HOST" in the lower right corner.
 - When a hard disk drive is connected, the HDD indication in the upper right corner stays illuminated. However, if this indicator illuminates red, it means that the hard disk drive is not in a usable state.



◆ Notes

- In USB HOST mode, clips on P2 cards can be displayed but video from the camera or an external device cannot be recorded. Clips written to a hard disk must be written back to a P2 card before it can be played back.
→ [Writing data back to P2 cards] (page 140).
- To return to normal mode from USB HOST mode, turn OFF the **PC MODE** item or press the **USER** button so that the **PC MODE ON/OFF** function is assigned to a state where the thumbnail screen is closed.

Using the USB HOST mode

Usable hard disk drives


- Hard disk drives connectable via USB 2.0
 - The units compatible with the storage unit that has Panasonic USB I/F
Refer to the support site at the following Website for the compatible units.
<http://pro-av.panasonic.net/>
- ### ◆ Notes
- While the USB HOST mode supports USB bus power (5V, 0.5 A), some hard disk drives may not activate. If this is the case, power must be supplied in a different way.
 - Do not connect more than one drive even through a hub or any other device.
Even with devices other than a hard disk drive, do not connect to the drive together with the hard disk drive through a hub.
 - The unit does not support a hard disk drive of 2 TB (2048 GB) or more.
 - To prevent copying or formatting problems from occurring during connection to a hard disk drive, be sure that the camera's battery is sufficiently charged or use the AC adapter.
 - Versions 2.** and later of the P2 STORE (AJ-PCS060G) support USB host mode for this unit.
Versions 1.** cannot connect. Please upgrade.

Viewing hard disk drive information

You can view the information on the hard disk drive connected via USB with the following steps.

- 1** Switch the mode to **USB HOST**.
→ [Switching to the USB HOST mode] (page 137)
- 2** Connect the hard disk drive to the camera-recorder via **USB 2.0**.
- 3** Press the **THUMBNAIL** button.
The thumbnail screen is displayed.
- 4** Press the **MENU** button and select **HDD** → **EXPLORE** from the thumbnail menu.
The screen provides the information about the hard disk drive.


For Type S or P2 STORE

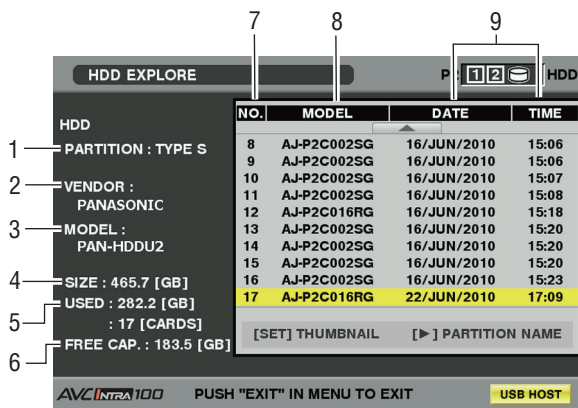

Press the EXIT button. ↑ ↓ Press the SET button.



For the FAT

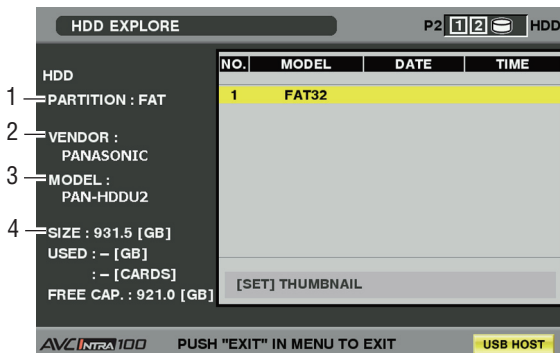

Press the EXIT button. ↑ ↓ Press the SET button.



1. PARTITION

This section indicates the type of the hard disk drive. The available functions depend on the type of hard disk drive.

HDD type	Feature	Available functions
TYPE S	A special format that allows high-speed writing and writing back on a card-by-card basis. A drive formatted with the camera-recorder uses this format.	Thumbnail viewing, writing and writing back on a card basis, writing back on a clip basis, and formatting
P2 STORE	P2 STORE (AJ-PCS060G). No writing can be performed.	Thumbnail viewing, writing back on a card basis, and writing back on a clip basis
FAT	For a hard disk drive with the first primary partition formatted in FAT 16 or 32, as seen on personal computers, etc., which requires a CONTENTS directory at its root.	Thumbnail viewing, reading on a clip basis, and formatting * Once formatted, the hard disk drive can be treated as a TYPE-S HDD.
OTHER	Hard disk drives not described above. * They are hard disk drives that have no CONTENTS directory or use the NTFS and any other file system instead of FAT 16 or 32.	Formatting * Once formatted, they can be treated as a TYPE-S HDD.

2. VENDOR

This section indicates the vendor for the hard disk drive.

3. MODEL

This section indicates the model of the hard disk drive.

4. SIZE

This section indicates the total storage on the hard disk drive.

5. USED

This section indicates the used space on the hard disk drive (in GB) and the number of P2 cards in use.

6. FREE CAP.

This section indicates the remaining free space on the hard disk drive in GB.

7. PARTITION

This section indicates the partition number (one P2 card is used as a unit) on the hard disk drive.

◆ Note


The screen indicates up to 10 partitions. When the number of partitions exceeds 10, scroll down the indication with the cursor button (▽) to view the hidden partitions.

8. MODEL

This section indicates the model of the P2 card that originally contained data on the partition.

◆ Note

Press the cursor button (▷) to switch to the **PARTITION NAME**. Press the cursor button (◀) button to return to the original model name display.

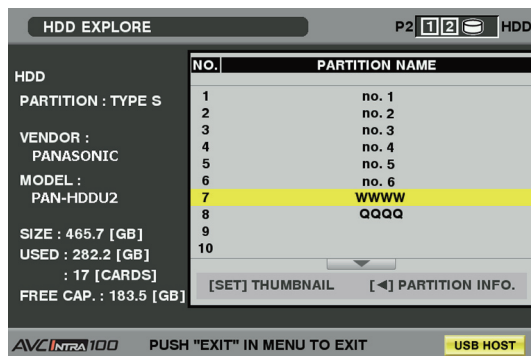

9. DATE/TIME

This section indicates the date and time the data on the partition was recorded.

10. SERIAL

This section indicates the serial number of the P2 card that originally contained the data on the partition.

11. VERIFY

This section indicates the verification setting and results at the time the data on the partition was recorded.

ON:FINISHED :

Verification was performed and the results agreed.

ON:FAILED :

Verification was performed and the results did not agree.

OFF :

No verification was performed.

- - - :


No verification information is available.

◆ Notes

- Even for a FAT-type hard disk drive, the 1001st or later clips are not shown.
- For a FAT-formatted hard disk drive, the information about only the first partition is shown.
- For a P2 STORE (AJ-PCS060G) that has an invalid partition, that partition information is shown in gray.

12. NAME

This section indicates the PARTITION NAME. Enter the PARTITION NAME from the software keyboard by selecting [CHANGE PARTITION NAME] in the OPERATION MENU while the thumbnail of the hard disk drive is displayed. (Max. 20 characters)

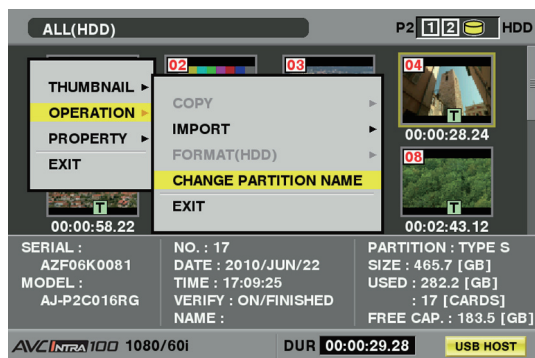

Formatting a hard disk drive

- 1 **Switch the mode to USB HOST.**
→ [Switching to the USB HOST mode] (page 137)
- 2 **Connect the hard disk drive via USB.**
- 3 **Press the THUMBNAIL button to display the thumbnail screen.**
- 4 **Press the THUMBNAIL MENU button and select HDD → EXPLORE from the thumbnail menu.**
- 5 **From the menu, select OPERATION → FORMAT (HDD) and select YES using the cursor buttons and SET button. Then, the confirmation message is displayed again. Select YES.**

The camera-recorder starts formatting the hard disk drive. Once formatted, the hard disk drive can be treated as a TYPE-S HDD.

◆ Notes

- Formatting a hard disk drive erases all contents of it. Note that you cannot erase the contents of certain partitions by specifying them.
- Operation of the hard disk drive with this unit, and the data in the hard disk drive are not guaranteed if a hard disk drive formatted by this unit is rewritten using another PC or similar.
- Data erased by formatting cannot be restored, so be sure to perform the format after first confirming the data.

- 1 Switch the mode to USB HOST.**
→ [Switching to the USB HOST mode] (page 137)
- 2 Connect a hard disk drive via USB.**
A hard disk drive that has not been formatted with the camera-recorder must be formatted as directed in [Formatting a hard disk drive] (page 139).
- 3 Insert a P2 card.**
- 4 Press the THUMBNAIL button.**
The thumbnail screen is displayed.
- 5 Press the THUMBNAIL MENU button and select HDD → EXPORT from the thumbnail menu.**
Specify the slot that contains the P2 card bearing the data to be written to the hard disk drive.
- 6 Select YES.**
 - This starts the write process.
 - When the data is being written, a progress bar is displayed. To discontinue writing, press the SET button and select YES instead of cancellation confirmation.
 - When the writing is completed, the message “COPY COMPLETED!” is displayed.

◆ Notes

- To disable verification at the time of writing, select HDD → SETUP from the thumbnail menu and set the option VERIFY to OFF. This speeds up writing without verifying data writing.
- Select “ALL SLOT” to write data collectively onto all P2 cards currently inserted in the unit to the hard disk drive.

◆ Notes

- For a Type-S hard disk drive, data can be written on a card basis. The data on up to 23 P2 cards can be stored on the hard disk drive. The data set on each P2 card is recognized as a separate drive by the PC.
- If data on a P2 card that contains a defective clip must be written to a hard disk drive, then we recommend fixing that clip before writing the data.
- When the process is discontinued during verification, the data on the P2 card has been written to the hard disk drive.

You can select clips on the hard disk drive to be written back to P2 cards.

- 1 Switch the mode to USB HOST.**
→ [Switching to the USB HOST mode] (page 137)
- 2 Connect a hard disk drive via USB.**
- 3 Insert the target P2 card in a slot.**
- 4 Press the THUMBNAIL MENU button and select HDD → EXPLORE from the thumbnail menu. Move to the appropriate partition and select it with the SET button.**
- 5 From among the thumbnails, select the clips to be written to the P2 card.**
- 6 Press the THUMBNAIL MENU button and select OPERATION → COPY. Then, specify the slot that contains the target P2 card.**
- 7 Select YES.**
 - This starts the data write to the P2 card.
 - When the writing is completed, the message “COPY COMPLETED!” is displayed.

◆ Notes

- When only selected files are written, no verification is performed.
- Import data in clip units from cards with a different model number as data cannot be imported by the partition between such cards.

For a Type-S or P2 STORE hard disk drive, you can write data back to a P2 card with the same model number on a card basis. The target P2 cards must be preformatted.

- 1 Switch the mode to USB HOST.**
→ [Switching to the USB HOST mode] (page 137)
- 2 Connect a hard disk drive via USB.**
- 3 Insert the target P2 cards in slots.**
- 4 Press the THUMBNAIL MENU button and select HDD → EXPLORE. Then, move to the appropriate partition and select it with the SET button.**
- 5 From the thumbnail menu, select OPERATION → IMPORT. Then, specify the slots that contain the empty target P2 cards.**

6 Select YES.

- This starts the write process.
- When the writing is completed, the message "COPY COMPLETED!" is displayed.

<For your information>

To disable verification during writing, select HDD → SETUP from the thumbnail menu and set the option VERIFY to OFF. This speeds up writing without verifying data writing.

◆ Note

If a clip is written back to a P2 card different from the original card that contained that clip, then the clip may be incomplete. If this is the case, reconnect the clip.

→ [Reconnection of Incomplete Clips] (page 127).

Direction for using a hard disk drive

- A hard disk drive (including the P2 STORE (AJ-PCS060G)) must be used under the following conditions:
 - ◆ It must meet the operating requirements (e.g. temperature).
 - ◆ It must not be placed in an instable place or a place exposed to vibrations.
- Some hard disk drives and cables do not operate properly.
- Some hard disk drives with the SATA (Serial ATA) interface or the PATA (Parallel ATA) interface connected by a USB conversion cable may not be recognized.
- When copying data, a hard disk drive must have sufficient free space.
- Do not remove the cable or the target P2 card or turn off the camera-recorder or hard disk drive during formatting or copying. Doing so requires the camera-recorder and the hard disk drive to be reactivated. Furthermore, ensure that the unit is fully charged, or use an external DC power source.
- Since hard disk drives are high precision devices, there is a high possibility that they may become incapable of writing data depending on the conditions of use.
- **Take note that we will not be liable for loss of data caused by failed hard disk drives or any other problem as well as direct or indirect damages resulting from the loss of data.**
- We do not guarantee that hard disk drives will operate properly with the camera-recorder or that the data on them will be properly retained if data copied to them from the camera-recorder has been replaced with other data using a PC.
- By using the drive mount converter distributed on the following URL, the hard disk drive can be mounted in the designated folder when connected.

<http://pro-av.panasonic.net/>

Connection using the SDI IN connector

- 1** Confirm that the connected device has the same signal format as camera-recorder.
- 2** When signals are input from the SDI IN connector, set the REC SIGNAL in the setting menu to “SDI”.
The menu item REC SIGNAL is found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.

◆ Notes

- When nothing is connected to the SDI IN connector or there is no input signal, images to be recorded will be black and no sound will be recorded. Input the same signals as the format set in the SYSTEM MODE item in the setting menu through the SDI IN connector. If the formats are different, data will not be properly recorded on the P2 card. The menu item SYSTEM MODE is found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.
- Note the following points when the REC SIGNAL of the setting menu is set to “SDI”.
 - ◆ Audio signals are input from the SDI IN connector.
 - ◆ Audio signals must be input synchronized with video images. Data will be recorded on the P2 card as 48 kHz/4CH (16 bit or 24 bit). To record in 24 bit, the REC FORMAT item must be set to AVC-I 100 or AVC-I 50, and the AUDIO SMPL RES item to 24BIT. These menu items are found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.
 - ◆ When the REC SIGNAL item is set to “SDI”, signals input from the GENLOCK IN connector are disabled even if nothing is connected to the SDI IN connector.
- UMID information, time code and user bits cannot be recorded on a P2 card using the SDI IN connector.

Connection of the remote control unit (AJ-RC10G)

It is possible to control some of the functions remotely by connecting the remote control unit AJ-RC10G (optional accessory).

When AJ-RC10G is connected to the REMOTE connector on the unit and the power switches of both of the unit and AJ-RC10G are turned on, the unit automatically enters the remote control mode.

The remote control mode is released when AJ-RC10G is removed or the power for the AJ-RC10G is turned OFF.

Switch functions in the remote control mode

In the remote control mode, the following switches and buttons on the unit are disabled.

- SHUTTER switch
- MENU button
- JOG dial button
- GAIN switch
- OUTPUT/AUTO KNEE switch
- WHITE BAL switch
- USER MAIN button
- USER 1 button
- USER 2 button


Recording and playback Operations in the remote control mode

When the remote control is connected, recording and playback can be controlled through both the camera-recorder and the AJ-RC10G.

◆ Notes

- The state that was adjusted by connecting AJ-RC10G is stored in the unit. Not to store the adjusted state in the unit, open the FUNCTION MENU of AJ-RC10G to set the RC DATA SAVE item to "OFF".
- When the dedicated cable is connected or removed, ensure that the POWER switches on both the main unit and AJ-RC10G are turned "OFF".
- For software of the AJ-RC10G, use Version 1.20 or higher.
- For instructions on updating of the AJ-RC10G, refer to the support page on the following website.

<http://pro-av.panasonic.net/>

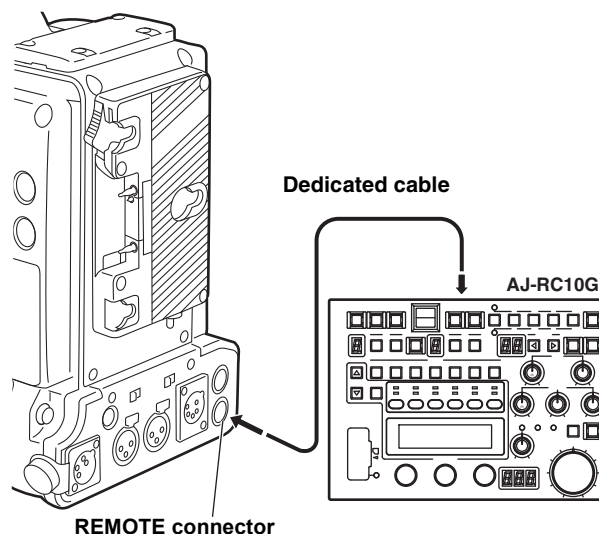

Notes for the remote control unit

When this unit and AJ-RC10G are connected, the following functions differ from those described in the operating instructions that accompany AJ-RC10G.

A. KNEE ON button

When "DRS" has been selected in the AUTO KNEE SW menu option of this unit, this button can be used to switch DRS on/off. This button is lit when DRS is on and not lit when DRS is off.

The menu option AUTO KNEE SW can be found in the <SW MODE> screen on the CAM OPERATION page.

CHARA ON button

This button is used to select whether to superimpose characters on the video signal output to the MON OUT connector of this unit. Note that the MON OUT CHARACTER switch of this unit does not function when the AJ-RC10G is connected.

Scene file

Scene files created on other types of device cannot be read. When an attempt is made to read such a file, AJ-RC10G displays "NG" on the liquid crystal screen.

Menu option

GAMMA menu

- The options available in GAMMA-MODE-SEL are as follows.
HD, SD, F-LIKE1, F-LIKE2, F-LIKE3, FILM-REC, VIDEO REC
- DYMC-LVL and BSR-LVL are added to the 4th layer.
The variable ranges for these are as follows.
DYMC-LVL: 200% - 600%
BSR-LVL: 00% - 30%
Note, however, that these values can only be changed when "FILM-REC" has been selected in GAMMA-MODE-SEL.
- V-KNSLP and V-KNPNT are added to the 5th layer.
The variable ranges for these are as follows.
V-KNSLP: 150% - 500%
V-KNPNT: 30% - 107%
Note, however, that these values can only be changed when "VIDEO REC" has been selected in GAMMA-MODE-SEL.

WHITE menu

- The variable range of COLR-TEMP-PRE, TEMP-A and TEMP-B is 2300K↓ - 15000K↑.

KNEE menu

- CHROMA LEVEL is added to the 5th layer.
The variable range for this is OFF/–99% - 40%.
- HI-COLOR-LVL is added to the 6th layer.
The variable range for this is 1 - 32.
- DRS MODE is added to the 7th layer.
The variable range for this is MODE1/MODE2.
- DRS EFFECT DEPTH is added to the 8th layer.
The variable range for this is 1/2/3.

SHUTTER menu

- When "FIX" has been selected in MODE, the options available in SPED are as follows.
1/60, 1/100, 1/120, 1/250, 1/500, 1/1000,
1/2000, HALF, 180.0d, 172.8d, 144.0d, 120.0d,
90.0d, 45.0d
The values that can be selected in SPED differ depending on the settings of the SYSTEM MODE menu option in this unit. The menu item SYSTEM MODE is found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.
- SYNCRO SCAN DISP is added to the 2nd layer.
When "S.S" has been selected in MODE, it is possible to select between SEC and DEG as units for the values displayed in SPED. The changes to the units are reflected in this unit.
- When "S.S" has been selected in MODE, the variable ranges of SPED are as follows.
For SEC: 1/24.7 - 1/7200 (selectable values differ depending on the settings of this unit)
For DEG: 3.0d - 350.0d

SKIN DTL menu

- The options available in OUTPUT are as follows.
MONI, SDI
- A zebra is added to the colors of the table selected in SDTL.
- SCORG of the 3rd layer changes to SKIN-DTL-EFFECT. The variable range for this is 0 - 31.

FUNC menu

- The options available in SELECT of the 4th layer are as follows.
INH, S.GAIN, DS.GAIN, S.IRIS, I.OVR, S.BLK, B.GAMMA, D.ZOOM, ATW, ATW LOCK, Y GET, DRS, ASSIST, C.TEMP, AUD CH1/3, AUD CH2/4, REC SW, RET SW, PRE REC, SLOT SEL, PC MODE, LCD B.L
Note, however, that the C.TEMP function will not work when assigned to a user button on AJ-RC10G.
- The variable range of BLK-GAMMA of the 5th layer is –8 - OFF - 8.
- RANGE is added next to BLK-GAMMA of the 5th layer. The variable range for this is 1 - 3.

Connection of the extension control unit (AG-EC4G)

It is possible to control some of the functions remotely by connecting the extension control unit AG-EC4G (optional accessory).

When AG-EC4G is connected to the REMOTE connector on the unit and the power switches of both of the unit and AG-EC4G are turned on, the unit automatically enters the remote control mode.

The remote control mode is released when AG-EC4G is removed or the power for the AG-EC4G is turned OFF.

Switch functions in the remote control mode

In the remote control mode, the following switches and buttons on the unit are disabled.


- SHUTTER switch
- MENU button
- JOG dial button
- GAIN switch
- OUTPUT/AUTO KNEE switch
- WHITE BAL switch
- USER MAIN button
- USER 1 button
- USER 2 button

Recording and playback Operations in the remote control mode

When the remote control is connected, recording and playback can be controlled through both the camera-recorder and the AG-EC4G.

◆ Notes

- Turning the AG-EC4G DATA SAVE switch to "ON" enables recording of the configured status of the AG-EC4G on the unit. In order to not record this configured status, turn the AG-EC4G DATA SAVE switch to "OFF".
- When the dedicated cable is connected or removed, ensure that the POWER switches on both the main unit and AG-EC4G are turned "OFF".
- For details, refer to the operating instructions for the AG-EC4G.

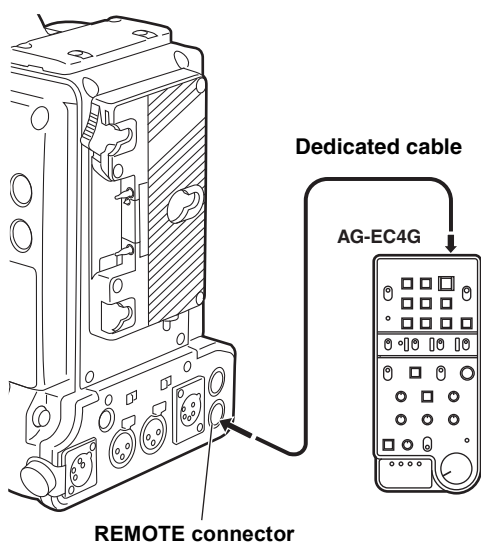


Maintenance and Inspections

Inspections Before Shooting

Make sure you check that the system is operating normally before embarking on a shoot. We recommend using a color video monitor to check the image.

Preparing for Inspections


- 1 Mount a charged battery pack.**
- 2 Turn the power switch ON and check that 5 or more BATT indication marks appear.**
 - If fewer than 5 BATT indication marks appear, replace the battery with a fully-charged battery.

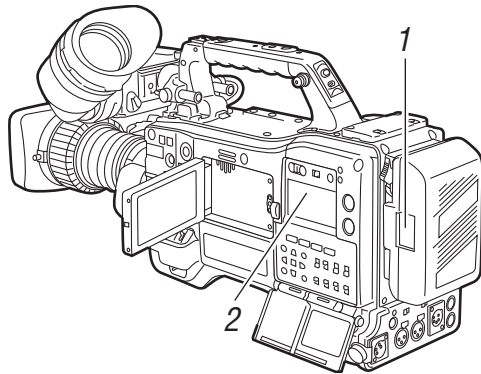

- 3 Insert a P2 card into the slot cover and close the slide cover.**

Confirm that the P2 card access LED for the inserted card slot lights up in orange. If P2 cards are inserted into multiple card slots, only the P2 card access LED for the first-inserted P2 card lights up in orange. Then, the other P2 card access LEDs light up in green when P2 cards are inserted.

If the access LED for the P2 card slot in which a P2 card is inserted keeps blinking in green, or if there is no display, recording is not possible on that particular P2 card.

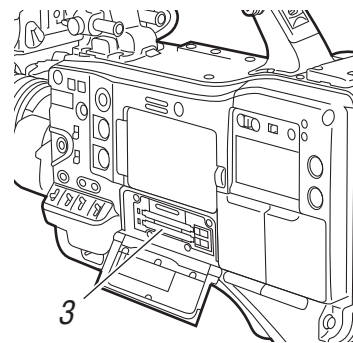

Inspecting the Camera Unit

- 1 Set the zoom to electric zoom mode and check the zoom operation.**

Check that the image changes to telephoto and wide angle.
- 2 Set the zoom to manual zoom mode and check the zoom operation.**

Turn the manual zoom lever to check that the image changes to telephoto and wide angle.
- 3 Set the iris to automatic adjustment mode and aim the lens at objects with different degrees of brightness, to check that the automatic iris adjustment operates normally.**
- 4 Set the iris to manual adjustment mode and turn the iris ring, to check the manual iris adjustment.**
- 5 While holding down the instant iris automatic adjustment button, aim the lens at objects with different degrees of brightness, to check that the instant iris automatic adjustment operates properly.**
 - ◆ **Note**
Some lenses do not have an instant iris automatic adjustment function.
- 6 Return the iris to automatic adjustment mode and change the GAIN switch setting to L, M, and H, to check the following items:**
 - The iris is adjusted for objects with the same brightness according to the switch setting.
 - The gain value displayed on the viewfinder screen changes according to the switch setting.
- 7 When a lens with an extender is mounted, set the extender to the operating position to check that the extender operates properly.**

Inspecting the Memory Recording Functions

Make sure you successively carry out the inspections from [1. Inspecting the P2 Card Recording] to [4. Inspecting the Earphone and Speaker].

1. Inspecting the P2 Card Recording

- 1 Check on the display inside the viewfinder that the remaining P2 card recording capacity is sufficient.

→ [P2 Card Remaining Free Space/capacity Indication] (page 83)

- 2 Set the TCG switch to [R-RUN].

- 3 Set the DISPLAY switch to [TC].

- 4 Press the camera's REC button to check the following items:

- The P2 access LED blinks in orange.
- The REC lamp inside the viewfinder lights up.
- System warnings do not appear inside the viewfinder.

- 5 Press the camera's REC button again.

This step confirms that the P2 access LED is on and showing orange, and the REC lamp in the viewfinder is turned off.

- 6 Using the REC button on the handle, repeat Steps 4 to 5 to check the same operation. Check the VTR button on the lens in the same way.

- 7 Press the LIGHT button to check that the screen brightness in the display window increases.

- 8 Press the THUMBNAIL button to switch the thumbnail screen to play back currently recorded clip from thumbnail.

Check that recording and playback operate properly.

- 9 When multiple P2 cards are inserted into the P2 card slots, press the USER MAIN button to select the P2 card used for recording.

Repeat the operations in Steps 4 to 5 and 8 to check that recording and playback operate properly.

2. Inspecting the Audio Level Automatic Adjustment

- 1 Set the AUDIO SELECT CH1/3 and CH2/4 switches to [AUTO].

- 2 Set the AUDIO IN CH1 and CH2 switches to [FRONT].

- 3 Aim the microphone connected to the MIC IN jack at an appropriate sound source. Then, check that the level displays for both CH1 and CH2 change according to the sound level.

3. Inspecting the Audio Level Manual Adjustment

- 1 Set the AUDIO IN CH1 and CH2 switches to [FRONT].

- 2 Set the AUDIO SELECT CH1/3 and CH2/4 switches to [MAN].

- 3 Turn the AUDIO LEVEL CH1/3 and CH2/4 controls.

Check that the level display increases when the controls are turned to the right.

4. Inspecting the Earphone and Speaker

- 1 Turn the MONITOR control to check that the speaker volume changes.

- 2 Connect an earphone to the PHONES jack. Check that the speaker is turned off and the microphone sound can be heard from the earphone.

- 3 Turn the MONITOR control to check that the earphone volume changes.

5. Inspection for Using an External Microphone

- 1 Connect an external microphone to the AUDIO IN CH1/3 and CH2/4 connectors.

- 2 Set the AUDIO IN CH1 and CH2 switches to [REAR].

- 3 Set the Microphone input +48V ON/OFF switch on the rear panel to [OFF] or [+48V], depending on the power supply type of the external microphone.

OFF: For a microphone with internal power supply.
+48V: For a microphone with external power supply.

- 4 Aim the microphone at a sound source. Then check that the audio level meter in the display window and the audio level display inside the viewfinder change according to the sound level.

The channels can also be checked separately by connecting a single microphone to each channel.

6. Inspection of the clock, time code, and user bits

- 1 Set the user's bit as required.**
→ [Setting of the User bits] (page 64)
- 2 Set the time code.**
→ [Setting the Time Code] (page 67)
- 3 Set the TCG switch to [R-RUN].**
- 4 Press the REC button.**
Check that the counter display number changes as recording progresses.
- 5 Press the REC button again.**
Check that recording stops and the counter display number stops changing.

6 Set the TCG switch to [F-RUN].
Check that the counter display number changes regardless of recording status.

7 Set the DISPLAY switch to [UB].
Each time the HOLD button is pressed, make sure that the displayed value changes in the following sequence: VTCG → DATE → TIME → No display (time zone) → TCG; and also verify that the displayed value is correct. If DATE, TIME, or time zone is not correct, refer to [Setting the Internal Clock's Date and Time] (page 66) for guidance on setting the correct values.

◆ **Note**

Note that date and time data set for DATE, TIME, and time zone is recorded in clips, and affects the playback sequence, etc. at the time of thumbnail manipulations.

Maintenance

Cleaning Inside the Viewfinder

- Do not use thinner or other solvents to remove dirt.
- Wipe the lens with a commercially available lens cleaner.
- Do not wipe the mirror. If dirt or rubbish is sticking on the mirror, remove it with a commercially available air blower.

◆ **Note**

When outdoors, never carry or set up the camera with the eyepiece facing up to prevent sunlight, which could damage the camera, from entering.

Phenomenon Inherent to CCD Cameras

Smears

Smears may appear when shooting an object with very high brightness.

This phenomenon becomes more obvious as the electronic shutter speed becomes faster.

Replacing the Backup Battery

The camera is shipped from the factory with a backup battery already mounted.

When the battery runs out, the [BACK UP BATT EMPTY] display appears on the viewfinder screen for 5 seconds after the power switch is turned ON.

The internal clock stops operating when the battery runs out. Also, the TCG time code value returns to [00:00:00:00], and the time code backup is disabled. The battery must be replaced.

Please consult your distributor for replacement with a new battery (CR2032).

The backup battery is visible when the panel on the LCD monitor side is removed (right side when viewed from the front).


◆ **Note**

Please contact the store where you purchased the camera when replacing the battery.

Connector Signals

DC IN	
1	GND
2	NC
3	NC
4	12V


Panasonic part number K1AA104H0038
 Maker part number HA16RX-4P (SW1)
 (Hirose Denki)

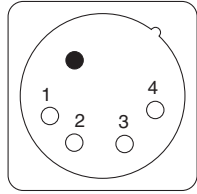

DC OUT	
1	GND
2	R TALLY (Open collector)
3	REC START SW
4	12V OUT DC (11 V - 17 V) (Max. 1.5 A)

Panasonic part number K1AY104J0001
 Maker part number HR10A-7R-4SC(73)
 (Hirose Denki)

Connector at the cable side
 Maker part number HR10A-7P-4P(73)
 (Hirose Denki)

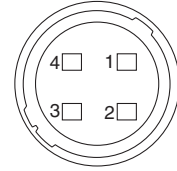


◆ Note

Ensure that the polarities are used correctly for a power supply from an external source.


FRONT MIC IN	
1	GND
2	L CH IN (H)
3	L CH IN (C)
4	R CH IN (H)
5	R CH IN (C)

Panasonic part number K1AB105B0002
 Maker part number NC5FBH
 (NEUTRIK)

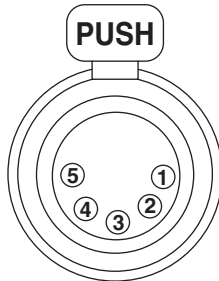


AUDIO IN	
1	GND
2	AUDIO IN(H)
3	AUDIO IN(C)

Panasonic part number K1AB103A0011
 Maker part number HA16PRM-3SG
 (Hirose Denki)

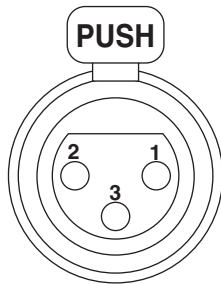

AUDIO OUT	
1	GND
2	L CH OUT (H)
3	L CH OUT (C)
4	R CH OUT (H)
5	R CH OUT (C)


Panasonic part number K1AA105H0016
 Maker part number HA16RD-5P(76)
 (Hirose Denki)

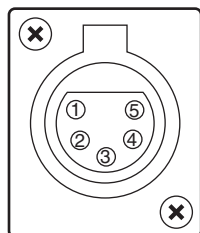

REMOTE		
1	CAM DATA (H)	Data from the camera to the remote control (H)
2	CAM DATA (C)	Data from the camera to the remote control (C)
3	CAM CONT (H)	Control signals from the remote control to the camera (H)
4	CAM CONT (C)	Control signals from the remote control to the camera (C)
5	RC-ON	Identification signals of the remote control Low: ON
6	RC VIDEO OUT	Video signals output to the remote control
7	RC VIDEO GND	GND of the video signals to the remote control
8	NC	Not used
9	UNREG 12V	DC 12 V power supply (AJ-RC10G: Max. 0.75 A)
10	GND	GND


Panasonic part number K1AY110JA001
 Maker part number HR10A-10R-10SC(71)
 (Hirose Denki)

Connector at the cable side
 Maker part number HR10A-10P-10P(73)
 (Hirose Denki)

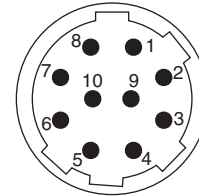


VF		
1	UNREG-12V	DC 12 V power supply (AJ-HVF21KG: About 0.35 A)
2	UNREG-12V	DC 12 V power supply
3	A9.0V	DC 9 V power supply (not used)
4	VF-PB-GND	GND for the viewfinder P _B signals
5	VF-PR-GND	GND for the viewfinder P _R signals
6	VF-Y	Viewfinder Y signals output
7	VF-Y-GND	GND for the viewfinder Y signals
8	VF-CLK	Serial data clock pulse signals
9	VF-WR	Pulse signals for reading serial-parallel conversion data
10	VF-DATA	Serial data signals for serial-parallel conversion
11	UNREG-GND	GND
12	ZEBRA-SW	ON/OFF of the zebra signals
13	PEAKING	Control of the peaking (not used)
14	SPARE	Standby (not used)
15	VF-PR	Viewfinder P _R signal output
16	VF-PB	Viewfinder P _B signal output
17	MARKER-SW	ON/OFF of the marker (not used)
18	FRONT-VR	FRONT AUDIO LEVEL adjustment (not used)
19	VR-GND	GND for the FRONT AUDIO LEVEL (not used)
20	UNREG-GND	GND

Panasonic part number K1AB120H0001
 Maker part number HR12-14RA-20SC
 (Hirose Denki)

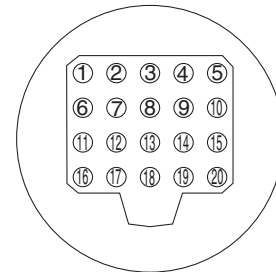


◆ **Caution**

Total amount of current from the respective connectors for DC OUT, REMOTE, VF, and LENS should not exceed 2.5 A.

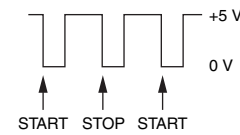
LENS		
1	RET-SW	ON/OFF of the return video RETURN ON: GND RETURN OFF: OPEN
2	REC-START/STOP	Control for recording start/stop 
3	GND	GND
4	IRIS-AUTO	ON/OFF of the forced iris servo SERVO ON: 5V±0.5V SERVO OFF: OPEN
5	IRIS-CONT	Control output for the lens iris F2.8: -6.2 V, F16: 3.4 V, CLOSE: 2.5 V
6	UNREG-12V	+12V power supply for the lens (Max. 1.5 A)
7	IRIS-POSI	Iris position signals 3.4 V (F16) to 6.2 V (F2.8)
8	IRIS-G-MAX	IRIS REMOTE/LOCAL (AUTO) signals REMOTE: 5V±0.5V LOCAL (AUTO): GND
9	EXT-POSI	ON/OFF of the built-in extender EXTENDER ON: GND EXTENDER OFF: OPEN
10	ZOOM-POSI	Zoom position signals
11	FOCUS-POSI	Focus position signal
12	SPARE	Standby (not used)

Panasonic part number K1AY112JA001
Maker part number HR10A-10R-12SC(71)
(Hirose Denki)

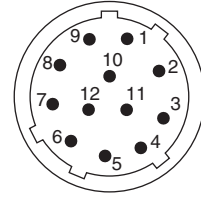


GPS		
1	GPS TXA	Transmission data from the GPS unit to the camera
2	GPS RXA	Transmission data from the camera to the GPS unit
3	GPS VBAT	Backup power supply connector for the GPS unit (DC 3.3 V)
4	REC START SW	Control signals of REC start/stop
5	GPS VCC	Power supply connector for the GPS unit (DC 3.3 V)
6	GPS GND	GND

Panasonic part number K1AY106J0001
Maker part number HR10A-7R-6SC(73)
(Hirose Denki)

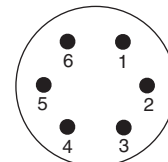


Unislot		
1	CH-1 SHIELD	GND
2	CH-1 HOT	Audio input from the wireless receiver: CH1 HOT
3	CH-1 COLD	Audio input from the wireless receiver: CH1 COLD
4	GND	GND
5	12V UNREG	Power supply to the wireless receiver
6	RX ON	Power supply remote output to the wireless receiver
7	RF WARN	RF warning input from the wireless receiver
8	RM5	Not used
9	RM4	Not used
10	SPARE 1	Not used
11	SPARE 2	Not used
12	EXT CLK	Not used
13	CLK SHIELD	Not used
14	CH-2 SHIELD	GND
15	CH-2 HOT	Audio input from the wireless receiver: CH2 HOT
16	CH-2 COLD	Audio input from the wireless receiver: CH2 COLD
17	5.6V	Power supply to the wireless receiver
18	VIDEO OUT	Not used
19	VIDEO RET	Not used
20	VIDEO EN	Not used
21	RM 1 (RM CLK)	Not used
22	RM 2 (RM DATA)	Not used
23	RM 3 (RM WR)	Not used
24	RM 5V	Not used
25	RM GND	Not used

Panasonic part number K1GB25A00010
 Maker part number HDBB-25S(05)
 (Hirose Denki)



LIGHT		
1	12 V UNREG	Power supply for the light, etc. (supplied from the battery)
2	GND	GND

Panasonic part number VJS4444



Warning System

Warning Description Tables

If a problem is detected immediately after the power is turned on, or during operation, this will be indicated by the WARNING lamp, lamps inside the viewfinder and a warning tone.

◆ Note

The WARNING lamp has the highest priority, followed by the tally lamp, and then the warning tone. When multiple errors occur simultaneously a higher priority indication will be triggered. The [9. Low Wireless Signal Reception], however, may not be indicated, depending on the menu setting.

1. System Errors

Display window indication	The error code lights up.
WARNING lamp	Blinks 4 times per second.
Tally lamp	Blinks 4 times per second.
Viewfinder	The SYSTEM ERROR indication and the error code light up.
Warning tone	Beeps continuously.
Warning description	An error in the reference signal or the communication.
Recording/playback operation	The operation stops.
Countermeasures	Please confirm [Error Codes] (page 155) and consult your distributor.

2. Card removal error

Display window indication	Error code E-30 blinks.
WARNING lamp	Blinks 4 times per second.
Tally lamp	Blinks 4 times per second.
Viewfinder	The "TURN POWER OFF" indicator lights up.
Warning tone	Continues to beep.
Warning description	The P2 card being accessed has been removed, resulting in an error in the internal memory of the camera-recorder.
Recording/playback operation	Cannot be performed.
Countermeasures	Turn off the power to the camera-recorder. If there is an error in a clip on the removed P2 card, repair the clip.

3. Battery Empty

Display window indication	All 7 bar indicators for battery remaining capacity start blinking.
WARNING lamp	Lights up.
Tally lamp	Blinks once per second.
Viewfinder	The BATT LED lights up.
Warning tone	Beeps continuously.
Warning description	The battery has run out.
Recording/playback operation	The operation stops.
Countermeasures	Replace the battery.

4. P2 Card Fully Recorded

Display window indication	All 7 bar indicators for remaining MEDIA capacity start blinking.
WARNING lamp	This lamp will illuminate continuously until an operation is made after recording.
Tally lamp	This lamp will flash 4 times every second until an operation is made after recording.
Viewfinder	The END indicator blinks.
Warning tone	This tone will sound continuously until an operation is made after recording.
Warning description	The P2 cards are recorded to maximum capacity.
Recording/playback operation	The recording stops.
Countermeasures	Delete the clips in the P2 card or insert a new P2 card.

5. Image Sequence Error

Display window indication	"E-40" appears in the time code display field.
WARNING lamp	Blinks 4 times per second.
Tally lamp	Blinks 4 times per second while recording continues.
Viewfinder	The REC WARNING indicator lights up.
Warning tone	Beeps 4 times per second.
Warning description	There are abnormal conditions in the image sequence of the 24P, 30P, or 25P mode.
Recording/playback operation	Images can be recorded and played back, but some frames may be dropped or the sequences of TC and UB may shift.
Countermeasures	Confirm the recording/playback operation after turning OFF the power supply once and then turning it on again. If the error is not corrected after executing this procedure, contact the dealer.

6. Corruption of Standard Signal

Display window indication	"E-40" appears in the time code display field.
WARNING lamp	Blinks 4 times per second.
Tally lamp	Blinks 4 times per second.
Viewfinder	The TEMPORARY PAUSE indicator lights up.
Warning tone	Beeps 4 times per second while recording continues.
Warning description	Corruption in the input signals from the standard GENLOCK IN and SDI IN connectors means correct recording is not possible, and this has stopped. The clip will be divided.
Recording/playback operation	When the signal returns to normal, recording will automatically start again. However, this will not automatically start when in INTERVAL REC mode or LOOP REC mode.
Countermeasures	Please check the input signal from the GENLOCK IN connector or SDI IN connector. If errors continue, please contact your dealer.

7. Recording Error

Display window indication	"00:00:00:11" appears in the time code display field. Even after recording is stopped, this display continues to blink until the next operation is performed.
WARNING lamp	Blinks 4 times per second while recording continues.
Tally lamp	Blinks 4 times per second while recording continues.
Viewfinder	The REC WARNING indicator lights up.
Warning tone	Beeps 4 times per second while recording continues.
Warning description	This indicates a failure either in the P2 card recording or the recording circuit.
Recording/playback operation	The recording may stop or continue.
Countermeasures	Restart recording. Or, turn the power OFF and turn it ON again, before starting recording. If the recording cannot be performed normally, change the P2 card.

8. Number of Clips Exceeded

Display window indication	"00:00:00:11" appears in the time code display field. Even after recording is stopped, this display continues to blink until the next operation is performed.
WARNING lamp	Blinks 4 times per second while recording continues.
Tally lamp	Blinks 4 times per second while recording continues.
Viewfinder	The OVER MAX# CLIPS indicator lights up.
Warning tone	Beeps 4 times per second while recording continues.
Warning description	This is displayed when attempting to record clips where the total quantity exceeds the upper limit (1000 pieces) for a single P2 card.
Recording/playback operation	Cannot record. Stops while recording.
Countermeasures	Insert a new P2 card or delete the unwanted clips in the P2 card.

9. Low Wireless Signal Reception

Display window indication	No display.
WARNING lamp	Blinks 4 times per second. (During pause and recording)
Tally lamp	Blinks 4 times per second while recording continues.
Viewfinder	The WIRELESS RF indicator lights up while recording continues.
Warning tone	Beeps 4 times per second while recording continues.
Warning description	This error indicates poor wireless audio reception conditions.
Recording/playback operation	Continues to operate without receiving the wireless microphone signal.
Countermeasures	Check the microphone power supply and the reception status of the wireless receiver.

10. Battery Nearly Empty

Display window indication	One of the bars in the battery remaining indicator starts blinking.
WARNING lamp	Blinks once per second.
Tally lamp	Blinks once per second.
Viewfinder	The BATT LED blinks.
Warning tone	Beeps 4 times per second.
Warning description	The battery is about to run out.
Recording/playback operation	Continues to operate.
Countermeasures	Replace the battery as required.

11. P2 Card Nearly Full

Display window indication	One of the bars for remaining MEDIA capacity starts blinking.
WARNING lamp	Blinks once per second while recording continues.
Tally lamp	Blinks once per second while recording continues.
Viewfinder	The P2 card remaining capacity indicator blinks.
Warning tone	Beeps once per second while recording continues.
Warning description	The total remaining capacity of all the P2 cards is two minutes or less.
Recording/ playback operation	Continues to operate.
Countermeasures	Replace the cards. If there is an empty card slot, insert a new card.

12. P2 Card Error

Display window indication	Displays "00:00:00:11" in the time code display. The window continues to flash until the next operation, even after stopping record and playback.
WARNING lamp	If the error occurs during recording, the lamp flashes four times per second for a period of about three seconds. The lamp does not light if the error occurs during playback.
Tally lamp	If the error occurs during recording, the lamp flashes four times per second for a period of about three seconds. The lamp does not light if the error occurs during playback.
Viewfinder	A flashing "CARD ERR *" appears. In the actual indication the * is replaced by the slot number of the P2 card that triggered the error.
Warning tone	If the error occurs during recording, the tone sounds four times per second for a period of about three seconds. The tone does not sound if the error occurs during playback.
Warning description	An error has occurred while recording data to or playing data from a P2 card.
Recording/ playback operation	Stop recording or playback. After recording is stopped, the P2 card where error occurs is write protected.
Countermeasures	Replace the affected P2 card.

13. FAN STOP

Display window indication	No display.
WARNING lamp	Blinks 4 times per second.
Tally lamp	No display.
Viewfinder	The FAN STOP indicator blinks while recording continues.
Warning tone	It does not sound.
Warning description	The fan is at rest because something is wrong with it. Alternatively, the FAN MODE item is set to "OFF". The menu item FAN MODE is found in the <OPTION> screen on the OPTION MENU page.
Recording/ playback operation	If the camera-recorder operates with the fan stopped, then the temperature inside rises. While the camera-recorder continues to operate, clips may not be recorded or played back properly.
Countermeasures	Immediately stop using the camera-recorder and consult your distributor.

Error Codes

The following error codes are displayed in the display window if an error occurs in the camera:

Confirm the type of warning and refer to the details in the [Warning Description Tables] (page 153) for countermeasures.

Code No.	Description	Type of warnings
E-11	Video initialisation error	1. System Errors
E-27	Recording control error	1. System Errors
E-30	P2 card removal error	2. Card removal error
E-34	LCD microcontroller error	1. System Errors
E-38	P2 streaming microcontroller error	1. System Errors
E-3F	Microprocessor error in the camera control circuit.	1. System Errors
E-40	Image sequence, GENLOCK input signal or SDI input signal error	5. Image Sequence Error, 6. Corruption of Standard Signal
E-63	Something is wrong with the system control microprocessor.	1. System Errors
E-6F	Reference signal error.	1. System Errors
00:00:00:11	Errors such as recording to P2 card error	7. Recording Error, 8. Number of Clips Exceeded, 12. P2 Card Error

Card Warning Code

Code No.	Description	Recording	Indication in display window
E-70	The directory structure on the P2 card is not supported. ([DIR NG CARD (Slot No.)] is indicated on the viewfinder.)	Operation continues. However, back up data on the P2 card as soon as possible, and format the card before using it again.	A warning code blinks once every 2 seconds on the time code display section of the display window.
E-71	The maximum number of overwrites on the P2 card has been exceeded. ([RUN DOWN CARD (Slot No.)] is indicated on the viewfinder.)	Operation continues. However, recording or playback may not operate correctly. It is recommended that you replace the P2 card with another one.	


Warning and Error Display for Thumbnail Operation and USB HOST MODE

Item	Message	Description	Measure
Thumbnails	CANNOT ACCESS!	Data cannot be accessed because it is corrupted or for other reasons.	Restore media and clips to normal state before access.
	CANNOT CHANGE!	With the AVC-Intra100 or AVC-Intra50, clips for which thumbnails cannot be created, and for which the [] mark is displayed cannot have the thumbnail for their text memo position changed.	Please set the SYSTEM MODE item to match the clip. The menu item SYSTEM MODE is found in the <SYSTEM MODE> screen on the SYSTEM SETTING page.
	CANNOT COPY!	Images cannot be copied.	Check the conditions for copying.
	CANNOT DELETE !	Contents version mismatch prevents deletion.	Match devices and contents version.
	CANNOT FORMAT!	P2 card problem prevents formatting.	Check P2 card.
	CANNOT RE-CONNECT!	A clip that does not span multiple cannot be reconnected.	Check selected content.
	CANNOT REPAIR!	Data cannot be repaired since content that cannot be repaired is selected.	Check selected content.
	LACK OF REC CAPACITY!	There is not enough recording capacity left on the card.	Insert a card with sufficient recording capacity.
	MISSING CLIP!	A shot mark will be added to the clips recorded on multiple P2 cards when all P2 cards are not inserted yet.	Insert all P2 cards with recorded clips, and confirm that the [] incomplete clip indicators disappear, and then add shot marks.
	NO CARD!	No P2 or SD card is inserted.	Insert compatible media.
	NO COPY TO SAME CARD!	A clip cannot be copied to the card storing the original clip.	Copy the selected clip to a card that does not contain the original clip.
	NO FILE!	The designated file is not found.	Check the file.
	SAME CLIP IS SELECTED!	Images cannot be copied since the clip has already been copied from the original clip.	Confirm the selected clip and release either the source clip or the destination clip and then execute the copy operation.
	TOO MANY CLIPS!	Too many clips are selected.	Reduce the number of selected clips.
	UNKNOWN CONTENTS FORMAT!	Warning displayed to indicate contents version mismatch.	Match devices and contents version.
	UNKNOWN DATA!	The metadata character code is invalid.	Use UTF-8 for the metadata character code. Use the viewer to enter correct characters.
	USER CLIP NAME MODIFIED!	Characters in the clip name had to be deleted in adding the counter value.	The user clip name plus the counter value can only contain up to 100 bytes. Characters in the clip name are automatically deleted when the total exceeds 100 bytes.
	WRITE PROTECTED!	The P2 or SD card is write protected.	Insert write-enabled media.
Soft keyboard	CANNOT CHANGE!	[PERSON] will be entered while the text memo is not available.	Enter [TEXT] before entering [PERSON].
	CANNOT SET! INVALID VALUE!	The entered value is incorrect.	Change the value.

Item	Message	Description	Measure
HDD (USB HOST MODE)	CANNOT ACCESS CARD!	An error occurred during P2 card access.	Check P2 card.
	CANNOT ACCESS TARGET!	An error occurred during hard disk access.	Check hard disk status and connection.
	CANNOT FORMAT!	The hard disk cannot be initialized.	Connect another hard disk drive.
	CANNOT RECOGNIZE HDD!	The destination target cannot be properly recognized.	Reboot the hard disk or connect a different hard disk.
	CARD IS EMPTY! CANNOT COPY!	The P2 selected for copying is empty.	Copying is not performed since the card is empty.
	FORMAT P2 CARD!	This warning indicates that data could not be imported from a hard disk to a P2 card because the P2 card contained recorded data.	You cannot copy to a P2 card that contains data. Format the card on a P2 device and copy again.
	HDD CAPACITY FULL!	Not enough space left on the hard disk.	There is not enough space on the connected hard disk. Use a new hard disk or formatted hard disk.
	HDD DISCONNECTED!	The unit is not connected to a hard disk.	Reconnect the USB cable. If the hard disk does not operate normally, turn it off and turn it back on again.
	MISMATCH COMPONENT!	Copying is not possible since the model number of the destination card does not match that of the source card.	Use a P2 card with the same model number or import video in clip units.
	TOO MANY PARTITIONS!	There are too many partitions.	Hard disks can handle up to 23 partitions. Use a new hard disk or formatted hard disk.
	TOO MANY TARGETS!	Multiple devices are connected.	Disconnect devices, turn off the unit and turn it back on again.
	UNKNOWN DEVICE CONNECTED!	The connected DVD drive is not compatible.	Disconnect devices, turn off the unit and turn it back on again.
VERIFICATION FAILED!	The compare check after copying failed.	Copy the data again.	

Menu

Menu Configuration

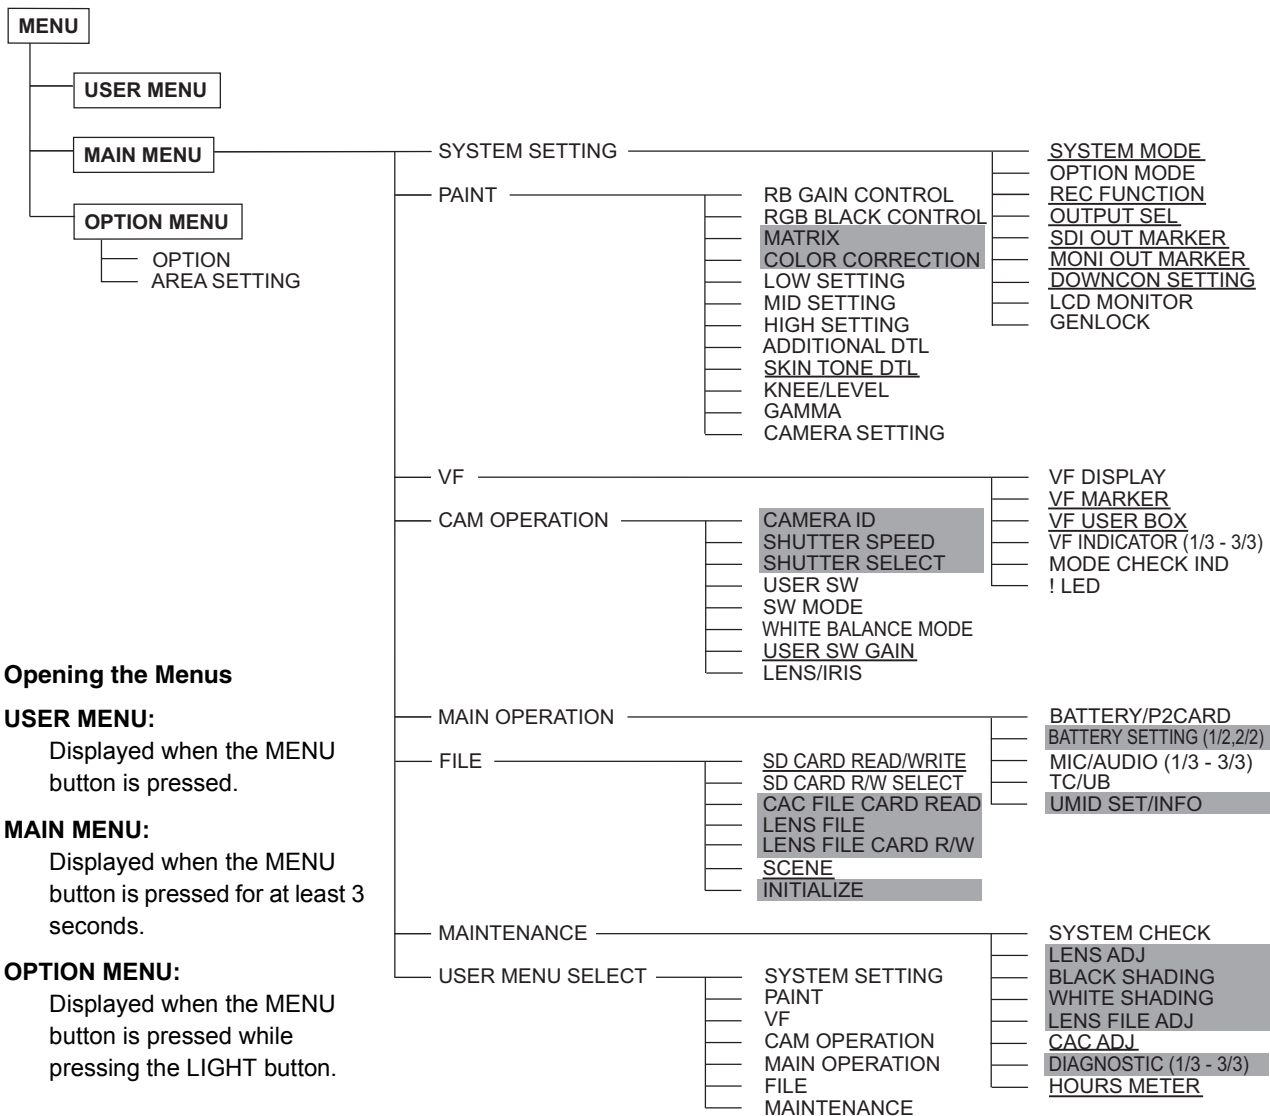

Opening the Menus

USER MENU:

Displayed when the MENU button is pressed.

MAIN MENU:

Displayed when the MENU button is pressed for at least 3 seconds.

OPTION MENU:

Displayed when the MENU button is pressed while pressing the LIGHT button.

◆ Notes

- The items highlighted in grey cannot be selected by <USER MENU SELECT>.
- The underlined items can only be selected by <USER MENU SELECT> as one whole page (with all sub-items). Individual sub-items cannot be selected separately.

About Menu Description Tables

The following letters indicate whether the modified menu data is saved to or read out from the memory. The – indicates that the data cannot be saved or read.

- S** = Can be saved and read as scene data file.
- C** = Can be saved or read using SD CARD READ/WRITE.
- U** = Can be saved and read as user data.
→ [SCENE] (page 195) and [INITIALIZE] (page 195)
- F** = Can be read using READ FACTORY DATA.
Please refer to [INITIALIZE] (page 195).
- R** = Can be saved using RC DATA SAVE.
→ [Connection of the remote control unit (AJ-RC10G)] (page 143) and [Connection of the extension control unit (AG-EC4G)] (page 145)

Items/ Data Saved	Adjustable Range	Remarks
REC SIGNAL	CAM SDI	Select video input signals. CAM: Record the signal from the camera SDI: Records input to the SDI IN connector (optional).
- C U F R		This section shows the adjustable range of the set value, and available options for this item.
		About the settings available for this item.


USER MENU: USER MENU is factory-set. The menu can be configured to suit your preferences by specifying each option according to your purposes and frequency of use, through the <USER MENU SELECT> screen, which is accessible from the MAIN MENU page.
→[Selecting Options for USER MENU] (page 161).

To display USER MENU, press the MENU button.

MAIN MENU: Allows you to set all options on the settings menu.

This menu has a category-by-category structure, layered according to purposes and frequency of use.

To display MAIN MENU, press the MENU button for three seconds or longer.

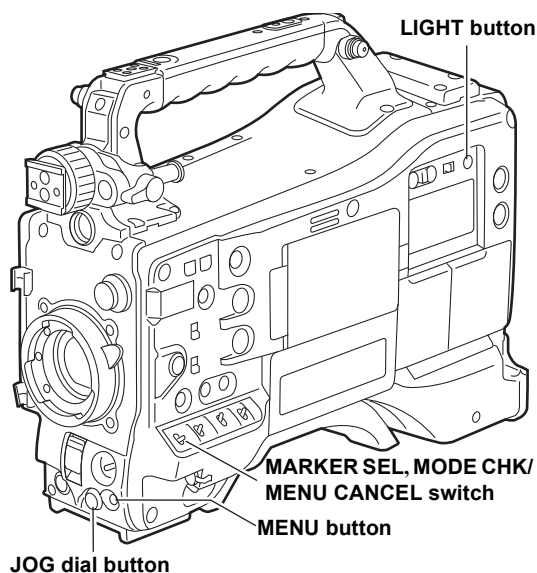

SYSTEM SETTING:

This option is used to specify recording signal, recording system, etc.

PAINT: This option is used to fine-adjust images while monitoring the output waveform of the camera, using the waveform monitor. Normally, this adjustment requires assistance from a video engineer.

This menu option may be set with an external remote controller, and is useful when using the unit without a sound recordist.

VF: Used to select the information items to be displayed in the viewfinder screen.

CAM OPERATION:

Used to change settings according to the conditions for the subject.

MAIN OPERATION:

Used to specify recording-related items, such as audio settings, time code, battery and P2 card remaining amounts.

FILE: Used to specify file-related items such as SD memory card reading/writing and lens file settings.

MAINTENANCE:

Used to specify maintenance-related items.

USER MENU SELECT:

Used to edit USER MENU.

OPTION MENU: Provides options which may be needed if functions are added in the future.
To display OPTION MENU, hold down the LIGHT button and press the MENU button.
For more information, contact your distributor.

Setting Menu Options

The menu options are set with the MENU and JOG dial buttons.

The menu comprises main menu, sub-menus and options menus.

The data specified through menu options are written and saved in the internal memory of the unit.

This section describes how to set options in MAIN MENU.

The other menus can be configured in the same manner (the method of displaying the menu screen depends on the particular menu).

◆ Note

When the unit is in thumbnail mode, the viewfinder displays "THUMBNAIL OPEN", disabling navigation through the menu.

1 Press the MENU button for three seconds or longer.

The MAIN MENU screen appears, together with its options.

```
→ **** MAIN MENU ****  
  
SYSTEM SETTING  
PAINT  
VF  
CAM OPERATION  
MAIN OPERATION  
FILE  
MAINTENANCE  
  
USER MENU SELECT
```

2 Turn the JOG dial button to move the mark (→) to a desired menu option. Then, press the JOG dial button.

The sub-menu screen appears.

```
**** MAIN MENU ****  
  
SYSTEM SETTING  
PAINT  
VF  
→ CAM OPERATION  
MAIN OPERATION  
FILE  
MAINTENANCE  
  
USER MENU SELECT
```

3 Turn the JOG dial button to move the mark (→) to a desired menu option. Then, press the JOG dial button.

The options screen appears.

```
< CAM OPERATION >  
  
CAMERA ID  
SHUTTER SPEED  
SHUTTER SELECT  
→ USER SW  
SW MODE  
WHITE BALANCE MODE  
USER SW GAIN  
IRIS
```

4 Turn the JOG dial button to move the mark (→) to a desired option. Then, press the JOG dial button.

The value starts blinking.

```
< USER SW >  
  
→ USER MAIN SW :S.GAIN  
USER1 SW :S.GAIN  
USER2 SW :DS.GAIN  
SHOT MARK SW :SHOT MARK  
(USER3 SW)  
TEXT MEMO SW :TEXT MEMO  
(USER4 SW)
```

5 Turn the JOG dial button to change the value.

To increase the value:

Turn the JOG dial button clockwise, as seen from the front of the camera.

To decrease the value:

Turn the JOG dial button anti-clockwise, as seen from the front of the camera.

To return the changed set value to the previous one:

Pull the MARKER SEL, MODE CHK / MENU CANEL switch toward you to display the message "PUSH CANCEL BACK TO PREV".

Pull the MARKER SEL, MODE CHK / MENU CANEL switch again toward you to return the set value to the value before the change.

◆ Note

The following menu items cannot be cancelled using the MARKER SEL, MODE CHK/MENU button.

- Pages on the USER MENU SELECT screen
- Pages on the FILE screen
- CAMERA ID
- USER SW GAIN
- Part of the WHITE BALANCE MODE pages
- BATTERY SETTING
- UMID SET/INFO

6 Press the JOG dial button.

- The value stops blinking and is accepted.
- To change the settings for other options on the same page, repeat Steps 4 - 6.

7 When the settings are finalised, press the MENU button.

This terminates the menu option setting mode and returns the unit to normal operation mode.

◆ NOTE:

If the settings menu screen spans more than 4, the top of the screen ↑ at the bottom of the screen ↓ are displayed. In this case, turn the JOG dial button, the screen scrolls from the ↑ item to the previous page, from the ↓ item to the next page.

```
< MIC/AUDIO 1/3 >
→ VR SELECT           :CH1/2
FRONT VR CH1         :OFF
FRONT VR CH2         :OFF
AUTO LEVEL CH3       :OFF
AUTO LEVEL CH4       :OFF
LVL CONTROL CH3      :070
LVL CONTROL CH4      :070
REAR XLR AUTO CH1/2  :OFF
REAR XLR AUTO CH3/4  :OFF
↓
```



Turn the JOG dial button.

```
↑ < MIC/AUDIO 2/3 >
→ MIC LOWCUT CH1     :OFF
MIC LOWCUT CH2       :OFF
MIC LOWCUT CH3       :OFF
MIC LOWCUT CH4       :OFF
LIMITER CH1         :OFF
LIMITER CH2         :OFF
LIMITER CH3         :OFF
LIMITER CH4         :OFF
25M REC CH SEL       :OFF
TEST TONE            :NORMAL
↓
```



Selecting Options for USER MENU

Go to the <USER MENU SELECT> page from MAIN MENU. Then, open relevant options menu screens to select options to add to USER MENU.

Only the selected options are displayed as options in USER MENU.

→ [Setting Menu Options] (page 160)

```
< USER MENU SELECT >
                (SELECT MODE)
→ SYSTEM SETTING
  PAINT
  VF
  CAM OPERATION
  MAIN OPERATION
  FILE
  MAINTENANCE
```

◆ Note

Options with [*] are effective. The number of options that can be added to USER MENU is $14 \times 3 = 42$ (three pages of options) for camera-related options, and 14 (one page of options) for memory-related options.

Menu Description Tables

SYSTEM SETTING

The ____ in the Adjustable Range column indicates the preset mode.

SYSTEM MODE

Items/ Data Saved	Adjustable Range	Remarks
SYSTEM MODE	1080-59.94i 1080-50i 480-59.94i 576-50i	For setting the system frequency and the recording format of the unit. When this item is switched, turn "OFF" the POWER switch on the unit and then turn it "ON" again. ◆ Notes ● When the remote control unit (AJ-RC10G) or the extension control unit (AG-EC4G) is connected, this item is not displayed. To switch this item, operate the main unit independently. ● When the time code is in free run mode and a change is made to the SYSTEM MODE menu option, the time may not be correctly recorded. After turning on the camera-recorder, check the time code and make a change to the setting if required. ● When USB DEVICE mode is selected, no change can be made to this option.
- C U F -		
REC SIGNAL	CAM SDI	Select video input signals. CAM: Record the signal from the camera SDI: Records input to the SDI IN connector. ◆ Notes ● After the power has been turned OFF, this setting defaults to CAM when the power is turned ON again. ● If "SDI" is selected, then this will be recorded at 60i or 50i regardless of settings in the REC FORMAT item.
- C U F -		
REC FORMAT	1080-59.94i: DVCPROHD/60i AVC-I100/60i AVC-I100/30PN AVC-I100/24PN AVC-I50/60i AVC-I50/30PN AVC-I50/24PN 1080-50i: DVCPROHD/50i AVC-I100/50i AVC-I100/25PN AVC-I50/50i AVC-I50/25PN 480-59.94i: DVCPRO50/60i DVCPRO/60i DV/60i 576-50i: DVCPRO50/50i DVCPRO/50i DV/50i	Select the recording codec and recording mode. DVCPRO HD: Recorded using the DVCPRO HD codec. In the CAMERA MODE item, further shooting modes can be selected. AVC-I 100: AVC-I 50: Recorded using the AVC-Intra100 or AVC-Intra50 codecs. With these AVC-Intra codecs, recording from 60i, 50i, 30PN, 24PN, and 25PN (Native recording) can be selected. DVCPRO50: DVCPRO: DV: These are the codecs that can be selected in SD mode. In the CAMERA MODE item, further shooting modes can be selected.
- C U F R		

Items/ Data Saved	Adjustable Range	Remarks
CAMERA MODE	(1080-59.94i /480-59.94i) 60i 30P 24P 24PA (1080-50i /576-50i) 50i 25P	For setting the video system for shooting. ◆ Note In AVC-Intra mode, 24PA cannot be selected.
- C U F R		
ASPECT	16:9 4:3	Select the aspect ratio for recording. (In SD mode only.) 16:9: Record in <16:9> aspect ratio. 4:3: Record in <4:3> aspect ratio.
- C U F R		
SCAN REVERSE	OFF ON	Specify whether image correction is used or not, when an anamorphic lens or a lens for film applications is used. OFF: Images are not corrected. ON: Images are corrected. The vertical and horizontal orientations are inverted.
- C U F R		
SETUP	0% 7.5%A	Switch the setup. (For 480-59.94i only) 0%: Setup is switched to 0% for both the camera output and the recording. 7.5%A: Setup is switched to 7.5% for the camera output and 0% for the recording.
- C U F R		
AUDIO SMPL RES	16BIT 24BIT	Select the bit-rate for the recorded audio. (Only when using the AVC-Intra codec) 16BIT: Records in 16-bit. 24BIT: Records in 24-bit. ◆ Notes ● Playback clips recorded in 24 bits on a 24 bit compatible P2 device or with a P2 Viewer. Clip number is displayed in red and cannot be played on P2 devices that are not 24 bit compatible. Audio is not played back correctly on P2 Viewers that are not 24 bit compatible. Please use the latest version of the P2 Viewer. ● For the latest information on 24 bit compatible P2 devices and the P2 Viewer, see the support page for P2 at the following Website. http://pro-av.panasonic.net/
- C U F R		

Items/ Data Saved	Adjustable Range	Remarks
PC MODE SELECT	USB HOST USB DEV.	Specify the operation mode of the camera-recorder when an external device is connected via USB. USB HOST: Sets the camera-recorder to the mode that allows an external hard disk drive to be connected. USB DEV.: Sets the camera-recorder to the USB device mode, which allows a PC to be connected via USB 2.0 for use with P2 cards as mass storage. ◆ Note When the PC MODE menu option is set to ON, no change can be made to this option.
- - - F -		
PC MODE	ON OFF	Used to enable or disable the mode that allows the camera-recorder to be connected to a PC or an external hard disk drive via USB 2.0. ON: Sets the camera-recorder to the mode selected through the PC MODE SELECT menu option. OFF: Disables the PC MODE for normal operation. ◆ Note Once the power is turned off, the option is always set to OFF when the power is turned on next time.
- - - F -		

OPTION MODE

Items/ Data Saved	Adjustable Range	Remarks
REC TALLY	RED GREEN CHAR	Select the method for displaying the recording status of camera-recorder. RED: The red tally lamp lights up. GREEN: The green tally lamp lights up. CHAR: The VF displays [REC] in characters. ◆ Note Setting to "GREEN" or "CHAR" means that the front tally lamp, back tally lamp, and rear tally lamp on the unit's viewfinder will not light up during recording.
- C U F -		
ACCESS LED	OFF ON	Specify whether or not to enable the P2 card access LEDs. OFF: The LEDs stay OFF. ON: The LEDs light up.
- C U F -		
P.OFF GPS DATA	HOLD CLEAR	Select whether or not to hold the UMID GPS position information while the power is turned off, thereby keeping this information as status data holding the previous value until the power is turned on again, which enables a new measurement to start. HOLD: Hold and save the data. CLEAR: Clear the data when the power is turned off, and save zero (No-Info) from the next power-on until a new measurement is completed.
- C U F -		
SDI METADATA	ON OFF	Used to specify whether or not to output metadata (UMID) to SDI.
- C U F -		
SDI EDH	ON OFF	Select whether or not to add an error detection flag to the SD SDI output.
- C U F -		

Items/ Data Saved	Adjustable Range	Remarks
AUTO REC	OFF TYPE1 TYPE2	Select the method for detecting REC START/STOP marks from the frame rate information in the user bits added through HD SD IN in HD mode in order to automatically start or stop recording. OFF: No automatic recording is performed. TYPE1: REC START/STOP marks are detected from LTC input through HD SDI for automatic recording. TYPE2: REC START/STOP marks are detected from VITC input through HD SDI for automatic recording. ◆ Note Set the menu option REC SIGNAL to SDI to input HD SDI signals to the SDI IN connector. For information about user bits frame rate information, see [Setting of the User bits] (page 64). In INTERVAL REC mode and the LOOP REC mode, the AUTO REC function is not available.
- C U F -		
START TEXT MEMO	ON OFF	Select the function that automatically adds a text memo to the start of the recording before each recording. ON: Add a text memo before each recording. OFF: Do not add a text memo. ◆ Note When this item is ON, the added text indicates the start of the recording. Refer to [Setting of Clip Meta Data] (page 128) to record a text memo as textual information.
- C U F -		
SEEK SELECT	CLIP CLIP&T	Press the FF/REW buttons while playback is paused to move to the location. CLIP: Cue to the start of the clip CLIP&T: Cue to the start of the clip and add a text memo
- C U F -		

REC FUNCTION

Items/ Data Saved	Adjustable Range	Remarks
INTERVAL REC MODE	OFF ON ONE SHOT	Sets INTERVAL REC function. OFF: INTERVAL REC is not performed. ON: Uses internal memory to perform interval recording. ONE SHOT: Performs "one-shot" recording for the duration specified under REC TIME, and then stops. ◆ Note This item cannot be changed when "ON" is selected for the LOOP REC MODE item or for the ONE CLIP REC MODE item. In addition, this does not work in Native mode or in 24P and 24PA modes.
- C U F -		
INTERVAL REC HOLD	ON OFF	Selects whether INTERVAL REC MODE settings are retained or not when the power is turned off once. ON: Retain OFF: Do not retain. The INTERVAL REC MODE is OFF whenever the power is turned on again.
- C U F -		
REC TIME *	00s01f : 59s29f	Set REC TIME (1 cut). ◆ Note However, the settings can be made frame by frame, and the numbers of the cut-off unit frames for the shortest time period and the set time on the actual operation may vary with the recording method. For details, refer to [Interval Recording] (page 39).
- C U F -		
PAUSE TIME *	00h00m00s01f : 00h04m59s29f : 23h59m59s29f	Specify PAUSE time for recording. ◆ Note However the settings can be made frame by frame, and the numbers of the cut-off unit frames for the shortest time period and the set time on the actual operation may vary with the recording method. For details, refer to [Interval Recording] (page 39).
- C U F -		
TAKE TOTAL TIME	NONE : 5day	Specify the time needed for shooting. Select from NONE (continue until operation is manually stopped) to 5 days.
- C U F -		
TOTAL REC TIME *	00m00s01f : 99m59s29f OVER100min NONE	Display total recorded time. The setting cannot be changed using this option. Displays the recording time (recording time needed for the P2 card) calculated using REC TIME, PAUSE TIME, and TAKE TOTAL TIME. ◆ Note A value based on actual processing is displayed.
- - - - -		
START DELAY	0SEC : 10SEC	Set the delay after pressing REC button to start recording in INTERVAL REC.
- C U F -		
PRE REC MODE	ON OFF	Select whether or not to enable PRE-RECORDING. ON: PRE-RECORDING enabled. OFF: PRE-RECORDING disabled. ◆ Note Specify the PRE-RECORDING time by using the menu option PRE REC TIME.
- C U F -		

* This variable range is the numerical values for 59.94 Hz. For 50 Hz, the frame rate is up to 24f.

Items/ Data Saved	Adjustable Range	Remarks
PRE REC TIME	1SEC : 8SEC : 15SEC	Set PRE RECORDING. 1-15SEC: Set the length of time that can be retrospectively recorded before the REC button is pressed. ◆ Note When the SYSTEM MODE menu option on the SYSTEM MODE screen is set to 1080-59.94i or 1080-50i, or when it is set to 480-59.94i or 576-50i and the REC MODE menu option is set to DVCPRO50, the upper limit of the above recording time is 8 seconds.
- C U F -		
LOOP REC MODE	ON OFF	Select whether or not to enable LOOP REC. This setting can be used with PRE-RECORDING features. ON: Enable LOOP REC. OFF: Disable LOOP REC. ◆ Notes ● After the power is turned off, this item will default to OFF the next time the power is turned on. ● This item cannot be changed in the following cases. ◆ When "ON" or "ONE SHOT" is selected for the INTERVAL REC MODE item ◆ When "ON" is selected for the ONE CLIP REC MODE item ● This does not work in Native mode or in 24P and 24PA modes.
- - - F -		
REC START	ALL NORMAL	Select operating modes that allow recording to start. ALL: Allow recording to start during stop, recording pause, and playback. NORMAL: Allow recording to start during stop and recording pause. ◆ Note Even if this is set to "ALL", the operation is "NORMAL", when "ON" or "ONE SHOT" is selected in INTERVAL REC MODE.
- C U F -		
P.ON REC SLOT SEL	HOLD SLOT1	Select the recording order of the slot when the power is turned on. HOLD: The recording order starts with the card previously selected when the power was turned off. SLOT1: The recording order starts with the card that is inserted in Slot 1 when the power is turned on.
- C U F -		

◆ Note

Displayed REC TIME, PAUSE TIME and TOTAL REC TIME are translated into either drop-frame or non-drop-frame according to the mode of operation. TAKE TOTAL TIME is actual time. Therefore, TOTAL REC TIME may incorporate fractions, depending on the settings.

Example of drop-frame

REC TIME	02s00f
PAUSE TIME	02s00f
TAKE TOTAL TIME	40min
TOTAL REC TIME	19m59s06f

Items/ Data Saved	Adjustable Range	Remarks
ONE CLIP REC MODE	ON OFF	Select the ONE CLIP REC mode. ON: Operate in ONE CLIP REC mode. OFF: Do not operate in ONE CLIP REC mode. ◆ Note This item cannot be changed in the following cases. ● When "ON" or "ONE SHOT" is selected for the INTERVAL REC MODE item. ● When "ON" is selected for the LOOP REC MODE item.
- C U F -		



OUTPUT SEL

Items/ Data Saved	Adjustable Range	Remarks
OUTPUT ITEM	MENU ONLY TC STATUS	Set the character contents superimposed onto the output signals for the SDI OUT connector and MON OUT connector. MENU ONLY: Displays only when the menu characters are superimposed. No display appears when other characters are superimposed. TC: Display the time code. (Displays the menu when menu characters are superimposed.) ◆ Note The TC display position moves up and down depending on the camera ID position. STATUS: Display the same characters superimposed on the viewfinder signal. (Displays the menu when menu characters are superimposed.)
- C U F -		
SDI OUT MODE	MEM CAM	Select the output signal for the SDI OUT connector. MEM: in playback mode, this is the playback image. CAM: always the camera image. ◆ Note This item is effective if "CAM" is set for the REC SIGNAL item in the <SYSTEM MODE> screen. If "SDI", then in playback mode, this will be the playback video regardless of this setting.
- C U F -		
SDI OUT CHAR	OFF ON	Select whether to superimpose characters on the image output from the SDI OUT connector. OFF: Do not superimpose. ON: Superimpose. ◆ Note The content of the superimposed characters is the same as that superimposed on video output from the MON OUT connector
- C U F -		
MONITOR OUT	HD (1080i): HD SDI SD SDI VBS SD (480i/576i): SD SDI VBS	Select the output signal format for the MON OUT connector. HD SDI: output an HD SDI signal. SD SDI: output an SD SDI signal. VBS: output a composite signal. ◆ Note Settings values for HD and SD are stored separately.
- C U F -		

Items/ Data Saved	Adjustable Range	Remarks
MONITOR OUT MODE	MEM CAM	Select the output signal for the MON OUT connector. This operates separately from SDI OUT. MEM: in playback mode, this is the playback image. CAM: always the camera image. ◆ Note This item is effective if "CAM" is set for the REC SIGNAL item in the <SYSTEM MODE> screen. If "SDI", then in playback mode, this will be the playback video regardless of this setting.
- C U F -		
VF/LCD CHAR	VF-OFF LCD-OFF ON	Select whether to superimpose characters on the video displayed on the LCD monitor or in the viewfinder. VF-OFF: do not superimpose in the viewfinder, instead superimpose on the LCD monitor. LCD-OFF: do not superimpose on the LCD monitor, instead superimpose in the viewfinder. ON: superimpose in both the viewfinder, and on the LCD monitor.
- C U F -		
VF MODE	MEM CAM	Select the viewfinder image. MEM: in playback mode, this is the playback image. CAM: always the camera image. ◆ Note This item is effective if "CAM" is set for the REC SIGNAL item in the <SYSTEM MODE> screen. If "SDI", then in playback mode, this will be the playback video regardless of this setting.
- C U F -		
THUMBNAI OUT	ON OFF	Select whether or not to output clip thumbnails displayed on the LCD monitor to the video output and monitor output signals. ON: Enable output. OFF: Disable output. ◆ Note HD SDI signals are being output, thumbnails are not output.
- C U F -		

SDI OUT MARKER

Items/ Data Saved	Adjustable Range	Remarks
MARKER SW	OFF ON	Switches the marker on and off. OFF: The characters are not superimposed. ON: The characters are superimposed.
- C U F R		
CENTER MARK	OFF 1 2 3 4	Switch the center mark. OFF: Do not display center mark. 1: + (large) 2: Hollow (large) 3: + (small) 4: Hollow (small)
- C U F R		



Items/ Data Saved	Adjustable Range	Remarks
SAFETY MARK	OFF 1 2	Select the frame type for the safety zone marker. OFF: Do not display frame. 1: Box  2: Corner frame 
- C U F R		
SAFETY AREA	80% 90% 100%	For setting the size of the safety marker. It is possible to set the size by units of 1% with a fixed ratio between of width and height.
- C U F R		
FRAME MARK	ON OFF	Set the frame marker to "ON" or "OFF".
- C U F R		
FRAME SIG	4:3 13:9 14:9 VISTA CNSCO	Set the frame marker. The VISTA ratio is 16:8.65. The CNSCO ratio is 16:6.81.
- C U F R		
USER BOX	ON OFF	For setting whether to include the user box in the signal from the SDI connector.
- C U F R		
USER BOX WIDTH	001 013 100	For setting the width of the user box.
- C U F R		
USER BOX HEIGHT	001 013 100	For setting the height of the user box.
- C U F R		
USER BOX H POS	-50 +00 +50	For setting the horizontal position of the user box center.
- C U F R		
USER BOX V POS	-50 +00 +50	For setting the vertical position of the user box center.
- C U F R		

Items/ Data Saved	Adjustable Range	Remarks
SAFETY AREA	80% 90% 100%	For setting the size of the safety marker. It is possible to set the size by units of 1% with a fixed ratio between of width and height.
- C U F R		
FRAME MARK	ON OFF	Set the frame marker to "ON" or "OFF".
- C U F R		
FRAME SIG	4:3 13:9 14:9 VISTA CNSCO	Set the frame marker. The VISTA ratio is 16:8.65. The CNSCO ratio is 16:6.81.
- C U F R		
USER BOX	ON OFF	For setting whether to include the user box in the signal from the MON OUT connector.
- C U F R		
USER BOX WIDTH	001 013 100	For setting the width of the user box.
- C U F R		
USER BOX HEIGHT	001 013 100	For setting the height of the user box.
- C U F R		
USER BOX H POS	-50 +00 +50	For setting the horizontal position of the user box center.
- C U F R		
USER BOX V POS	-50 +00 +50	For setting the vertical position of the user box center.
- C U F R		

◆ **Note**

In HD mode, the safety zone marker and the safety zone area are not displayed on the SD SDI output and VBS output from the MON OUT connector if "LT-BOX" or "S-CROP" is selected in DOWNCON MODE.

MON OUT MARKER

Items/ Data Saved	Adjustable Range	Remarks
CENTER MARK	OFF 1 2 3 4	Switch the center mark. OFF: Do not display center mark. 1: + (large) 2: Hollow (large) 3: + (small) 4: Hollow (small)
- C U F R		
SAFETY MARK	OFF 1 2	Select the frame type for the safety zone marker. OFF: Do not display frame. 1: Box  2: Corner frame 
- C U F R		

DOWNCON SETTING

Items/ Data Saved	Adjustable Range	Remarks
DOWNCON MODE	SQUEEZE LT-BOX S-CROP	For setting the mode of the down converter output signals. ◆ Note Part of the down converter output image at the top or bottom may be disrupted when "LT-BOX" is selected in this menu option, but this is not a malfunction.
- C U F R		
DETAIL	ON OFF	For setting the detail function for the down converter output signals ON/OFF. The down converter output signals contain detailed components that are set during HD signal processing. In this setting, these signals overlap the detailed components dedicated to the down converter outputs. Even if this setting is turned off, it is impossible to turn off the detailed components set during HD signal processing.
- C U F R		
H.DTL LEVEL	00 : 08 : 31	For setting the horizontal detail correction level for the down converter output signals.
- C U F R		
V.DTL LEVEL	00 : 04 : 31	For setting the vertical detail correction level for the down converter output signals.
- C U F R		
DTL CORING	00 : 01 : 15	For setting the noise elimination level of the details.
- C U F R		
H.DTL FREQ.	1 : 3 : 5	For selecting the horizontal detail frequencies. 1: 2.5 MHz 4: 4 MHz 2: 3 MHz 5: 4.5 MHz 3: 3.5 MHz
- C U F R		
2D LPF	ON OFF	For setting the 2-D low path filter reducing cross colors. ON: Cross colors are reduced. OFF: Cross colors are not reduced.
- C U F R		
SETUP	0% 7.5%	For setting the setup level for the down converter output signals. (Only for 1080-59.94i) ◆ Note When the system frequency is set to 50 Hz, the setup level will be 0%.
- C U F R		

◆ Note

The <DOWNCON SETTING> screen is displayed when SYSTEM MODE is set to 1080-59.94i, 1080-50i (HD mode).

LCD MONITOR

Items/ Data Saved	Adjustable Range	Remarks
BRIGHTNESS	-7 : +0 : +7	Adjust the LCD monitor brightness.
- C U F R		
COLOR LEVEL	-7 : +0 : +7	Adjust the LCD monitor chroma level.
- C U F R		
CONTRAST	-7 : +0 : +7	Adjust the LCD monitor contrast.
- C U F R		
BACKLIGHT	OFF LOW NORMAL HIGH	Turn the backlight off, or adjust its brightness. OFF: turns the backlight OFF. LOW: turns the backlight to lower than NORMAL. NORMAL: Mode normally used HIGH: This is brighter than NORMAL
- C U F R		
SELF SHOOT	NORMAL MIRROR	Select whether or not to change the LCD monitor to mirror image. NORMAL: Do not change to mirror image. MIRROR: Change to mirror image.
- C U F R		

GENLOCK

Items/ Data Saved	Adjustable Range	Remarks
GENLOCK	INT GL IN SDI IN	Switch the camera synchronising signal. INT: Synchronise with the internal reference signal regardless of the reference signal input to the GENLOCK IN or SDI IN connector. GL IN: synchronizes with the reference signal input into the GENLOCK IN connector. SDI IN: synchronizes with the reference signal input into the SDI IN connector. ◆ Note If "SDI" is set for the REC SIGNAL item in the <SYSTEM MODE> screen, then this will synchronize with the reference signal input into the SDI IN connector regardless of this setting.
- C U F R		
GL PHASE	HD SDI COMPOSIT	For selecting the output signals that lock phases to the signals that are input in the GENLOCK IN connector. (Only for 1080-59.94i, 1080-50i) HD SDI: For locking the HD SDI signals to the GENLOCK input. For the down converter output signals, the start position of the video delays by about 90 lines. COMPOSIT: For locking the down converter output signals to the GENLOCK input. For the HD SDI output signals, the start position of the video gains by about 90 lines.
- C U F R		
H PHASE COARSE	-100 : +000 : +100	Perform coarse phase adjustment for horizontal hold when configuring a system.
- - - - -		
H PHASE FINE	-100 : +000 : +100	Perform fine phase adjustment for horizontal hold when configuring a system.
- - - - -		
RETURN SIGNAL	HD SDI HD-Y	Select the return video displayed on the viewfinder and LCD monitor during HD mode. HD SDI: Displays the HD SDI input signal input to the SDI IN connector. HD-Y: Displays the HD-Y signal input to the GENLOCK IN connector. ◆ Note In SD mode, this item is not displayed.
- C U F R		

PAINT

The ____ in the Adjustable Range column indicates the preset mode.

RB GAIN CONTROL

Items/ Data Saved	Adjustable Range	Remarks
R GAIN AWB PRE *	-200 : +000	For setting the Rch gain when the WHITE BAL switch is in the PRST position.
S C U F R	+200	
B GAIN AWB PRE *	-200 : +000	For setting the Bch gain when the WHITE BAL switch is in the PRST position.
S C U F R	+200	
R GAIN AWB A *	-200 : +000	For setting the Rch gain when the WHITE BAL switch is in the A position.
S C U F R	+200	
B GAIN AWB A *	-200 : +000	For setting the Bch gain when the WHITE BAL switch is in the A position.
S C U F R	+200	
R GAIN AWB B *	-200 : +000	For setting the Rch gain when the WHITE BAL switch is in the B position.
S C U F R	+200	
B GAIN AWB B *	-200 : +000	For setting the Bch gain when the WHITE BAL switch is in the B position.
S C U F R	+200	
AWB A GAIN OFFSET *	ON OFF	For setting the values of the Rch gain and the Bch gain when the auto white balance is executed as the WHITE BAL switch is in the A position. ON: To retain the values set in the items of R GAIN AWB A and B GAIN AWB A OFF: The values of the Rch gain and the Bch gain is set to "0".
S C U F R		
AWB B GAIN OFFSET *	ON OFF	For setting the values of the Rch gain and the Bch gain when the auto white balance is executed as the WHITE BAL switch is in the B position. ON: To retain the values set in the items of R GAIN AWB B and B GAIN AWB B OFF: The values of the Rch gain and the Bch gain is set to "0".
S C U F R		

RGB BLACK CONTROL

Items/ Data Saved	Adjustable Range	Remarks
MASTER PED *	-200 : +015	For setting the level of the master pedestal.
S C U F R	+200	
R PEDESTAL *	-100 : +000	For setting the pedestal level of the Rch.
S C U F R	+100	
G PEDESTAL *	-100 : +000	For setting the pedestal level of the Gch.
S C U F R	+100	
B PEDESTAL *	-100 : +000	For setting the pedestal level of the Bch.
S C U F R	+100	
PEDESTAL OFFSET *	ON OFF	For setting the pedestal levels of the Rch, the Gch and the Bch when the auto black balance is adjusted. ON: To retain the values set in the respective items of R PEDESTAL, G PEDESTAL, and B PEDESTAL OFF: The pedestal levels of the Rch, the Gch and the Bch are set to "0".
S C U F R	-	
R FLARE *	-100 : +000	For adjusting the flare level of the Rch. Adjustment values in this item are added to the flare adjustment value that is adjusted on <LENS FILE ADJ> screen.
S C U F R	+100	
G FLARE *	-100 : +000	For adjusting the flare level of the Gch. Adjustment values in this item are added to the flare adjustment value that is adjusted on <LENS FILE ADJ> screen.
S C U F R	+100	
B FLARE *	-100 : +000	For adjusting the flare level of the Bch. Adjustment values in this item are added to the flare adjustment value that is adjusted on <LENS FILE ADJ> screen.
S C U F R	+100	

* If the remote control unit or the extension controlunit is connected, settings made from the menu are disabled. (The set value is displayed.)

MATRIX

Items/ Data Saved	Adjustable Range	Remarks
■MATRIX TABLE S C U F R	A B	For selecting the color correction table for the linear matrix.
MATRIX R-G S C U F R	A B -63 -63 +31 +24 +63 +63	For performing the linear matrix adjustment. (red/green)
MATRIX R-B S C U F R	-63 -63 -04 +09 +63 +63	For performing the linear matrix adjustment. (red/blue)
MATRIX G-R S C U F R	-63 -63 -01 +03 +63 +63	For performing the linear matrix adjustment. (green/red)
MATRIX G-B S C U F R	-63 -63 +04 +14 +63 +63	For performing the linear matrix adjustment. (green/blue)
MATRIX B-R S C U F R	-63 -63 +01 +05 +63 +63	For performing the linear matrix adjustment. (blue/red)
MATRIX B-G S C U F R	-63 -63 -01 +18 +63 +63	For performing the linear matrix adjustment. (blue/green)
■L MATRIX TABLE S C U F R	OFF A B	For selecting the color correction table when the GAIN switch is in the L position.
■M MATRIX TABLE S C U F -	OFF A B	For selecting the color correction table when the GAIN switch is in the M position.
■H MATRIX TABLE S C U F -	OFF A B	For selecting the color correction table when the GAIN switch is in the H position.

◆ Note

The items indicated by ■ are the setting items for PAINT MENU SW(■) R/W in the <SD CARD R/W SELECT> screen. The items without ■ are the setting items for PAINT MENU LEVEL R/W. → [SD CARD R/W SELECT] (page 193)

COLOR CORRECTION

Items/ Data Saved	Adjustable Range	Remarks
R (SAT) S C U F R	-63 +50 +63	For performing the color saturation correction of red.
R-Mg (SAT) S C U F R	-63 +25 +63	For performing the color saturation correction between red and magenta.
Mg (SAT) S C U F R	-63 +08 +63	For performing the color saturation correction of magenta.
Mg-B (SAT) S C U F R	-63 +00 +63	For performing the color saturation correction between magenta and blue.
B (SAT) S C U F R	-63 +00 +63	For performing the color saturation correction of blue.
B-Cy (SAT) S C U F R	-63 +00 +63	For performing the color saturation correction between blue and cyan.
Cy (SAT) S C U F R	-63 -10 +63	For performing the color saturation correction of cyan.
Cy-G (SAT) S C U F R	-63 -10 +63	For performing the color saturation correction between cyan and green.
G (SAT) S C U F R	-63 +00 +63	For performing the color saturation correction of green.
G-YI (SAT) S C U F R	-63 +00 +63	For performing the color saturation correction between green and yellow.
YI (SAT) S C U F R	-63 +19 +63	For performing the color saturation correction of yellow.
YI-R (SAT) S C U F R	-63 +34 +63	For performing the color saturation correction between yellow and red.

LOW SETTING

Items/ Data Saved	Adjustable Range	Remarks
R (PHASE)	-63 : -01 : +63	For performing the hue correction for red.
S C U F R		
R-Mg (PHASE)	-63 : +00 : +63	For performing the hue correction between red and magenta.
S C U F R		
Mg (PHASE)	-63 : -06 : +63	For performing the hue correction for magenta.
S C U F R		
Mg-B (PHASE)	-63 : +00 : +63	For performing the hue correction between magenta and blue.
S C U F R		
B (PHASE)	-63 : +00 : +63	For performing the hue correction for blue.
S C U F R		
B-Cy (PHASE)	-63 : +00 : +63	For performing the hue correction between blue and cyan.
S C U F R		
Cy (PHASE)	-63 : +06 : +63	For performing the hue correction for cyan.
S C U F R		
Cy-G (PHASE)	-63 : +06 : +63	For performing the hue correction between cyan and green.
S C U F R		
G (PHASE)	-63 : +09 : +63	For performing the hue correction for green.
S C U F R		
G-YI (PHASE)	-63 : +13 : +63	For performing the hue correction between green and yellow.
S C U F R		
YI (PHASE)	-63 : +09 : +63	For performing the hue correction for yellow.
S C U F R		
YI-R (PHASE)	-63 : +13 : +63	For performing the hue correction between yellow and red.
S C U F R		
■COLOR CORRECT	ON OFF	For switching ON/OFF of the 12-axis independent color correction of the position selected with the GAIN switch (L, M, H).
S C U F R		

Items/ Data Saved	Adjustable Range	Remarks
■MASTER GAIN	-6dB : 0dB : 30dB	Select the master gain from -6, -3, 0, 3, 6, 9, 12, 15, 18, 21, 24, 27, or 30dB.
S C U F R		
H.DTL LEVEL	00 : 10 : 63	For performing the horizontal detail correction level setting.
S C U F R		
V.DTL LEVEL	00 : 15 : 31	For performing the vertical detail correction level setting.
S C U F R		
DTL CORING	00 : 04 : 15	For performing the noise elimination level setting for detail.
S C U F R		
H.DTL FREQ.	00 : 18 : 31	For performing the horizontal detail frequency selection.
S C U F R		
LEVEL DEPEND.	0 1 : 5	For setting the LEVEL DEPEND. When the Y-detail is emphasized, details of dark sections are compressed. If the numerical value is larger, details of bright sections are also compressed.
S C U F R		
MASTER GAMMA	0.30 : 0.45 : 0.75	For setting the master gamma. (0.01 step)
S C U F R		
BLACK GAMMA	-8 : OFF : +8	For setting the gamma curve for the dark portion. -8 to -1: The dark portion is compressed. OFF: Standard state +1 to +8: The dark portion is extended.
S C U F R		
B.GAMMA RANGE	1 2 : 3	Select the limits for compression and extension. 1: ~20% 2: ~30% 3: ~40%
S C U F R		
■MATRIX TABLE	OFF A : B	For selecting the color correction table for the linear matrix.
S C U F R		
■COLOR CORRECT	ON OFF	For switching ON/OFF of the 12-axis independent color correction.
S C U F R		

◆ Notes

- The items indicated by ■ are the setting items for PAINT MENU SW(■) R/W in the <SD CARD R/W SELECT> screen. The items without ■ are the setting items for PAINT MENU LEVEL R/W.
→ [SD CARD R/W SELECT] (page 193) for more information.

- When shooting with the MASTER GAIN set to “-6dB” or “-3dB”, coloring phenomena may occur in portions of the video with high brightness.

The coloring phenomena can be reduced by switching the OUTPUT/AUTO KNEE switch to [CAM/AUTO KNEE OFF], setting the MANUAL KNEE menu option of the <KNEE/LEVEL> screen to “ON”, and then changing the following menu options.

- When “HD”, “SD”, “FILMLIKE1”, “FILMLIKE2” or “FILMLIKE3” has been selected in the GAMMA MODE SEL menu option of the <GAMMA> screen, reduce the value in the KNEE MASTER SLOPE menu option of the <KNEE/LEVEL> screen.
- When “FILM-REC” has been selected in the GAMMA MODE SEL menu option of the <GAMMA> screen, reduce the value in the F-REC DYNAMIC LVL menu option of the <GAMMA> screen.
- When “VIDEO-REC” has been selected in the GAMMA MODE SEL menu option of the <GAMMA> screen, reduce the value in the V-REC KNEE SLOPE menu option of the <GAMMA> screen.

MID SETTING

Items/ Data Saved	Adjustable Range	Remarks
■MASTER GAIN	-6dB : 6dB	Select the master gain from -6, -3, 0, 3, 6, 9, 12, 15, 18, 21, 24, 27, or 30dB.
S C U F -	30dB	
H.DTL LEVEL	00 : 08	For performing the horizontal detail correction level setting.
S C U F -	63	
V.DTL LEVEL	00 : 12	For performing the vertical detail correction level setting.
S C U F -	31	
DTL CORING	00 : 08	For performing the noise elimination level setting for detail.
S C U F -	60	
H.DTL FREQ.	00 : 18	For performing the horizontal detail frequency selection.
S C U F -	31	
LEVEL DEPEND.	0 : 1 : 5	For setting the LEVEL DEPEND. When the Y-detail is emphasized, details of dark sections are compressed. If the numerical value is larger, details of bright sections are also compressed.
S C U F -		
MASTER GAMMA	0.30 : 0.45	For setting the master gamma. (0.01 step)
S C U F -	0.75	
BLACK GAMMA	-8 : OFF : +8	For setting the gamma curve for the dark portion. -8 to -1: The dark portion is compressed. OFF: Standard state +1 to +8: The dark portion is extended.
S C U F -		
B.GAMMA RANGE	1 : 2 : 3	Select the limits for compression and extension. 1: ~20% 2: ~30% 3: ~40%
S C U F R		
■MATRIX TABLE	OFF : A : B	For selecting the color correction table for the linear matrix.
S C U F -		
■COLOR CORRECT	ON : OFF	For switching ON/OFF of the 12-axis independent color correction.
S C U F -		

HIGH SETTING

Items/ Data Saved	Adjustable Range	Remarks
■MASTER GAIN	-6dB : 12dB : 30dB	Select the master gain from -6, -3, 0, 3, 6, 9, 12, 15, 18, 21, 24, 27, or 30dB.
S C U F -		
H.DTL LEVEL	00 : 06 : 63	For performing the horizontal detail correction level setting.
S C U F -		
V.DTL LEVEL	00 : 10 : 31	For performing the vertical detail correction level setting.
S C U F -		
DTL CORING	00 : 12 : 60	For performing the noise elimination level setting for detail.
S C U F -		
H.DTL FREQ.	00 : 18 : 31	For performing the horizontal detail frequency selection.
S C U F -		
LEVEL DEPEND.	0 : 3 : 5	For setting the LEVEL DEPEND. When the Y-detail is emphasized, details of dark sections are compressed. If the numerical value is larger, details of bright sections are also compressed.
S C U F -		
MASTER GAMMA	0.30 : 0.55 : 0.75	For setting the master gamma. (0.01 step)
S C U F -		
BLACK GAMMA	-8 : OFF : +8	For setting the gamma curve for the dark portion. -8 to -1: The dark portion is compressed. OFF: Standard state +1 to +8: The dark portion is extended.
S C U F -		
B.GAMMA RANGE	1 2 3	Select the limits for compression and extension. 1: ~20% 2: ~30% 3: ~40%
S C U F R		
■MATRIX TABLE	OFF A B	For selecting the color correction table for the linear matrix.
S C U F -		
■COLOR CORRECT	ON OFF	For switching ON/OFF of the 12-axis independent color correction.
S C U F -		

◆ Note

The items indicated by ■ are the setting items for PAINT MENU SW(■) R/W in the <SD CARD R/W SELECT> screen. The items without ■ are the setting items for PAINT MENU LEVEL R/W.
→ [SD CARD R/W SELECT] (page 193)


ADDITIONAL DTL

Items/ Data Saved	Adjustable Range	Remarks
KNEE APE LVL	OFF 1 : 5	For changing the detail level of the high brightness portion.
S C U F R		
DTL GAIN(+)	-31 : +00 : +31	Adjust the detail level toward + (upwards).
S C U F R		
DTL GAIN(-)	-31 : +00 : +31	Adjust the detail level toward the - (downwards).
S C U F R		
DTL CLIP	00 : 63	For setting the level for clipping the detail signals.
S C U F R		
DTL SOURCE	(R+G)/2 (G+B)/2 2G+R+B /4 (3G+R)/4 R G	For setting the proportion of the RGB signal components that provide the detail.
S C U F R		
MASTER DTL	-31 : +00 : +31	For revising the master detail level.
S C U F R		

SKIN TONE DTL

Items/ Data Saved	Adjustable Range	Remarks
■SKIN TONE DTL	OFF A B AB	For selecting the skin color table for enabling the skin tone detail. The skin color table is provided in the DETECT TABLE item. By enabling the skin tone detail, it is possible to shoot human skin more accurately.
S C U F R		
■ZEBRA VF	ON OFF	For the setting to display the zebra pattern in the skin tone area displayed in the viewfinder screen. The zebra pattern is displayed when this item is turned "ON" and the <SKIN TONE DTL> screen is opened. The zebra pattern indicates the area which is selected in the SKIN TONE DTL item.
S C U F R		
■ZEBRA SDI OUT	ON OFF	For setting to include the skin tone zebra in the SDI OUT signal. The zebra pattern is displayed when this item is turned "ON" and the <SKIN TONE DTL> screen is opened. The zebra pattern indicates the area which is selected in the SKIN TONE DTL item.
S C U F R		
■ZEBRA MONI	ON OFF	For setting to include the skin tone zebra in the MON OUT signal. The zebra pattern is displayed when this item is turned "ON" and the <SKIN TONE DTL> screen is opened. The zebra pattern indicates the area which is selected in the SKIN TONE DTL item.
S C U F R		
DETECT TABLE	A B	For selecting the skin color table for subjects to which the skin tone table applies.
S C U F R		
SKIN TONE GET		For fetching the color information of A or B, which is selected in the DETECT TABLE item, near the center marker. When this function is executed, data from I CENTER to Q PHASE are fetched automatically. The fetched data will be the table data of A or B, which is selected in the DETECT TABLE item. It is impossible to obtain color information of both A and B at the same time.
- - - - -		
SKIN DTL EFFECT	0 : 16 : 31	For setting the effect level of the skin tone detail.
S C U F R		
Y MAX	000 : 190 : 255	For setting the maximum value of brightness for enabling the skin tone.
S C U F R		
Y MIN	000 : 010 : 255	For setting the minimum value of brightness for enabling the skin tone.
S C U F R		
I CENTER	000 : 035 : 255	For setting the center position on the I axis (for setting an area that enables skin tone.)
S C U F R		
I WIDTH	000 : 055 : 255	For setting the area width for enabling the skin tone on the I-axis of which the center is the I CENTER.
S C U F R		

Items/ Data Saved	Adjustable Range	Remarks
Q WIDTH	00 : 10 : 90	For setting the area width for enabling the skin tone on the Q-axis of which the center is the I CENTER.
S C U F R		
Q PHASE	-180 : +000 : +179	For setting phases of the area for enabling skin tone as setting the standard to the Q-axis.
S C U F R		

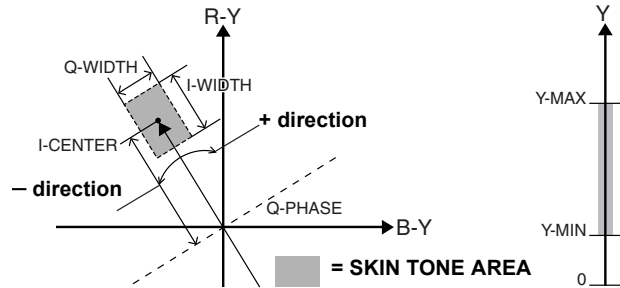

◆ Note

- The items indicated by ■ are the setting items for PAINT MENU SW(■) R/W in the <SD CARD R/W SELECT> screen. The items without ■ are the setting items for PAINT MENU LEVEL R/W.
→ [SD CARD R/W SELECT] (page 193)
- The ■ SKIN TONE DTL item operates separately from the details set in the LOW SETTING, MID SETTING, HIGH SETTING, ADDITION DTL, and CAMERA SETTING items.

KNEE/LEVEL

Items/ Data Saved	Adjustable Range	Remarks
MASTER PED	-200 : +015 : +200	Set the master pedestal.
S C U F R		
■MANUAL KNEE	ON OFF	Set the mode when the AUTO KNEE switch is OFF. The KNEE MASTER POINT/SLOPE set value is enabled when this setting is ON.
S C U F R		
KNEE MASTER POINT	70.0% : 93.0% : 107.0%	For setting the knee point position in increments of 0.5% steps.
S C U F R		
KNEE MASTER SLOPE	00 : 85 : 99	For setting the inclination of the knee.
S C U F R		
■WHITE CLIP	ON OFF	Set the WHITE CLIP feature to ON or OFF. The WHITE CLIP LVL set value is enabled when this setting is ON.
S C U F R		
WHITE CLIP LVL	90% : 109%	Set WHITE CLIP LEVEL.
S C U F R		


GAMMA

Items/ Data Saved	Adjustable Range	Remarks
A.KNEE POINT : 93% S C U F R	80% : 93% : 107%	Set the AUTO KNEE POINT position in 1% steps. This setting is enabled when the OUTPUT/AUTO KNEE selector switch is set to CAM/AUTO KNEE ON.
A.KNEE LVL : S C U F R	100 : 107 : 109	Set the AUTO KNEE LEVEL.
A.KNEE RESPONSE : S C U F R	1 : 4 : 8	Set the AUTO KNEE response speed. The smaller the setting value, the faster the response speed.
CHROMA LEVEL : S C U F R	OFF : -99% : +00% : +40%	For setting the chroma level of the Pr signals and the Pb signals. If this is set to OFF, the color elements of video signals are eliminated.
DRS MODE : S C U F R	MODE1 : MODE2	For setting the effectiveness of DRS color preservation. MODE1: Set to make the colors of bright areas more natural. MODE2: Set to make the colors of bright areas more vibrant.
DRS EFFECT DEPTH : S C U F R	1 : 2 : 3	Set the compression level of the high-brightness component of DRS. If the numerical value is larger, the compression level of the high-brightness component increases.
HI-COLOR SW : S C U F R	ON : OFF	For switching the mode on/off which enables the dynamic color range to be expanded.
HI-COLOR LVL : S C U F R	1 : 32	For selecting the level of the dynamic color range when in the mode which allows expansion of the dynamic color range.

◆ Notes

- The items indicated by ■ are the setting items for PAINT MENU SW(■) R/W in the <SD CARD R/W SELECT> screen. The items without ■ are the setting items for PAINT MENU LEVEL R/W. Please refer to [SD CARD R/W SELECT] (page 193) for more information.
- Setting of the KNEE MASTER SLOPE menu item and the KNEE MASTER POINT menu item is disabled when the GAMMA MODE SEL menu item of the <GAMMA> screen is set to "FILM-REC" or "VIDEO-REC".

Items/ Data Saved	Adjustable Range	Remarks
MASTER GAMMA : S C U F R	0.30 : 0.45 : 0.75	Set the master gamma in 0.01% steps.
R GAMMA : S C U F R	-15 : +00 : +15	Set the Rch gamma.
B GAMMA : S C U F R	-15 : +00 : +15	Set the Bch gamma.
GAMMA MODE SEL : S C U F R	HD SD FILMLIKE1 FILMLIKE2 FILMLIKE3 FILM-REC VIDEO-REC	For selecting the gamma mode. HD: Video gamma characteristics for HD (High Definition) SD: The gain in the dark section is higher than the HD gamma. FILMLIKE1: In this setting gradations in highlight areas can be expressed better than the HD gamma. FILMLIKE2: In this setting gradations in highlight areas can be expressed better than when FILMLIKE1 is selected. FILMLIKE3: In this setting gradations in highlight areas can be expressed better than when FILMLIKE2 is selected. FILM-REC: The cinema gamma characteristics for film applications. VIDEO-REC: The cinema gamma characteristics for video applications.

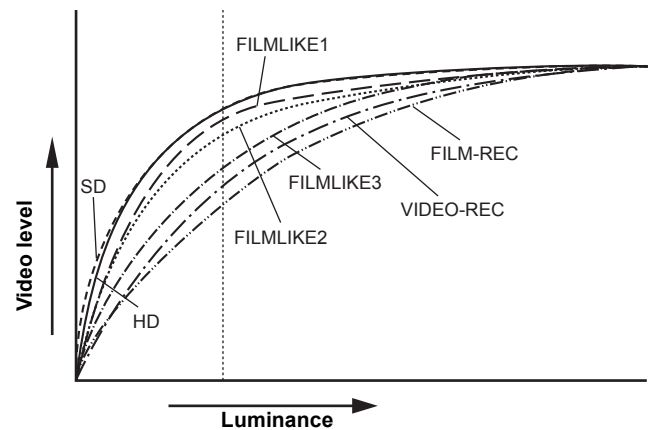

- When the GAMMA MODE SEL item is used for FILMLIKE3, the following settings are recommended.
MANUAL KNEE : ON
KNEE MASTER POINT : 85.0%
KNEE MASTER SLOPE : 50
- AUTO KNEE is not performed when the GAMMA MODE SEL menu option is set to "FILM-REC" or "VIDEO-REC". AUTO KNEE is not performed when AJ-RC10G is connected, but the LED of the AJ-RC10G button is lit by pressing the A.KNEE ON button.

■CAMERA SETTING

Items/ Data Saved	Adjustable Range	Remarks
F-REC DYNAMIC LVL	200% 300% 400% 500% 600%	For setting the dynamic range when GAMMA MODE SEL has been set to "FILM-REC". When GAMMA MODE SEL has not been set to "FILM-REC", this setting cannot be changed.
S C U F R		
F-REC BLACK STR LVL	00% : 30%	For setting the amount of black stretch when GAMMA MODE SEL has been set to "FILM-REC". When GAMMA MODE SEL has not been set to "FILM-REC", this setting cannot be changed.
S C U F R		
V-REC KNEE SLOPE	150% 200% 250% 300% 350% 400% 450% 500%	For setting the amount of knee-slope when GAMMA MODE SEL has been set to "VIDEO-REC". When GAMMA MODE SEL has not been set to "VIDEO-REC", this setting cannot be changed.
S C U F R		
V-REC KNEE POINT	30% : 107%	For setting knee point when GAMMA MODE SEL has been set to "VIDEO-REC". When GAMMA MODE SEL has not been set to "VIDEO-REC", this setting cannot be changed.
S C U F R		

Items/ Data Saved	Adjustable Range	Remarks
DETAIL	ON OFF	For switching ON/OFF of the detail signals.
S C U F R		
2D LPF	ON OFF	For specifying whether or not to enable or disable the 2-dimension LPF, which reduce the cross color. ◆ Note In 480-59.94i, the 2-dimension LPF is enable.
- C U F R		
GAMMA	ON OFF	For switching on/off of the gamma correction.
S C U F R		
TEST SAW	ON OFF	Switch the test signal ON or OFF.
S C U F R		
FLARE	ON OFF	Set the flare correction to ON or OFF.
S C U F R		
H-F COMPE.	ON OFF	For switching ON/OFF of the aperture correction.
S C U F R		
DNR	ON OFF	For switching ON/OFF of the DNR (Digital Noise Reduction).
S C U F R		

◆**Note**

All items in CAMERA SETTING are setting targets of the item PAINT MENU SW(■) R/W in the <SD CARD R/W SELECT> screen.


The ____ in the Adjustable Range column indicates the preset mode.

VF DISPLAY



Items/ Data Saved	Adjustable Range	Remarks
DISP CONDITION	<u>NORMAL</u> HOLD	NORMAL: Display status constantly. HOLD: Display status only when the MARKER SEL, MODE CHK / MENU CANCEL switch is pulled.
- C U F R		
DISP MODE	1 2 3	Set the DISP MODE. Switch the camera's Warning/Message indication. Please refer to [Display Modes and Setting Changes/adjustment Result Messages] (page 85) for more information.
- C U F R		
VF OUT	Y NAM R G B	For selecting the video signals to display in the viewfinder screen. Y: Brightness signal NAM: Output signal with the highest level among R, G, and B signals. R: Rch signal G: Gch signal B: Bch signal
- C U F R		
VF DTL	00 : 05 : 10	For setting the detail level of the viewfinder screen. The details of the signals for the viewfinder are further enhanced. If 00 is selected, then the detail is the same as that for the main line.
- C U F R		
ZEBRA1 DETECT	0% : <u>70%</u> : 109%	Set the ZEBRA1 detection level (IRE value).
- C U F R		
ZEBRA2 DETECT	0% : 85% : 109%	Set the ZEBRA2 detection level (IRE value).
- C U F R		
ZEBRA2	ON <u>SPOT</u> OFF	Set the ZEBRA2 to ON, OFF, or SPOT.
- C U F R		
LOW LIGHT LVL	OFF 10% 15% 20% 25% 30% 35%	Set the camera incoming light volume at which to display LOW LIGHT.
- C U F R		
RC MENU DISP.	ON OFF	For the setting to display the menu in the viewfinder screen when the remote control unit or the extension control unit is connected to the unit.
- C U F R		
MARKER CHAR LVL	50% 60% 70% 80% 90% 100%	Adjust the brightness of markers and characters displayed on the VF.
- C U F R		
SYNCHRO SCAN DISP.	sec deg	For setting the unit to indicate SYNCHRO SCAN mode. sec: indicates time deg: indicates the opening angle of the shutter.
- C U F R		

ZEBRA Pattern Display

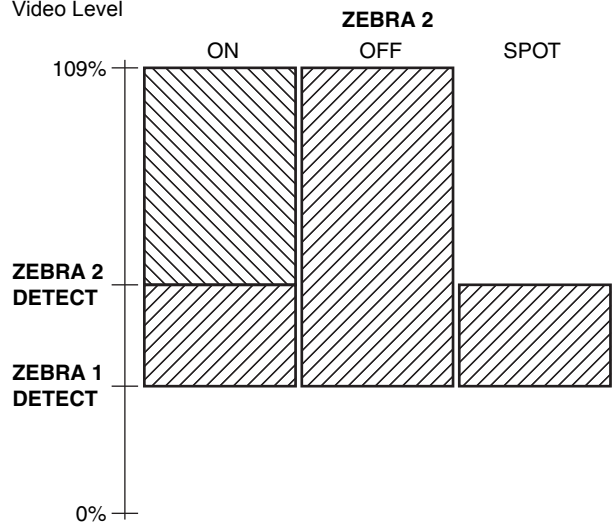Video Level



VF MARKER

Items/ Data Saved	Adjustable Range	Remarks
TABLE	A B	Select the VF MARKER setting table. First, select table A or B, then set the items below for each table.
- C U F R		
CENTER MARK	OFF 1 2 3 4	Switch the center mark. OFF : Do not display center mark. 1 : + (large) 2 : Hollow (large) 3 : + (small) 4 : Hollow (small)
- C U F R		
SAFETY MARK	OFF 1 2	Select the frame type for the safety zone marker. OFF : Do not display frame. 1 : Box  2 : Corner frame 
- C U F R		
SAFETY AREA	80% : 90% : 100%	For setting the size of the safety zone marker. It is possible to set the size by units of 1% with a fixed ratio between of width and height.
- C U F R		
FRAME MARK	ON OFF	Set the frame marker to ON or OFF.
- C U F R		
FRAME SIG	4:3 13:9 14:9 VISTA CNSCO	Set the frame marker. The VISTA ratio is 16:8.65. (1.85:1) The CNSCO ratio is 16:6.81 (2.35:1).
- C U F R		
FRAME LVL	0 : 15	Set the level outside the frame marker. 0 : Equivalent to signal OFF. (Blanking status) 15 : Same brightness as center area.
- C U F R		

VF USER BOX

Items/ Data Saved	Adjustable Range	Remarks
USER BOX	ON OFF	For setting whether the user box is displayed in the viewfinder or not.
- C U F R		
USER BOX WIDTH	001 : 013 : 100	For setting the horizontal width of the user box.
- C U F R		
USER BOX HEIGHT	001 : 013 : 100	For setting the vertical height of the user box.
- C U F R		
USER BOX H POS	-50 : +00 : +50	For setting the horizontal position of the user box center.
- C U F R		
USER BOX V POS	-50 : +00 : +50	For setting the vertical position of the user box center.
- C U F R		

- The user box can be displayed in any position as a boxtype cursor.

VF INDICATOR (1/3)

Items/ Data Saved	Adjustable Range	Remarks
EXTENDER	ON OFF	For selecting ON or OFF for the extender display.
- C U F R		
SHUTTER	ON OFF	Set the shutter speed indication to ON or OFF.
- C U F R		
FILTER	ON OFF	Set the filter No. indication to ON or OFF.
- C U F R		
WHITE	ON OFF	Set the AWB PRE/A/B indication to ON or OFF.
- C U F R		
GAIN	ON OFF	For selecting ON/OFF of the gain currently selected, S.GAIN and DS. GAIN displays.
- C U F R		
IRIS	OFF IRIS S+IRIS S	OFF: Disable indications of the super iris ON status, super black ON status and the iris value. IRIS: Enable only the iris value indication. S+IRIS: Enables indications of the super iris ON status, super black ON status and the iris value. S: Enable indication of the super iris ON status and super black ON status. ● The display of the aperture value and the display of the iris override are interlinked. When the iris override is changed, it is forcibly displayed for 3 seconds.
- C U F R		
CAMERA ID	BAR OFF	For setting to record the camera ID. BAR: The camera ID is recorded when the color bar signals are recorded. OFF: Disable ID mix.
- C U F R		
ID POSITION	UPPER R UPPER L LOWER R LOWER L	For setting the position to display the camera ID. UPPER R: Upper right. UPPER L: Upper left. LOWER R: Lower right. LOWER L: Lower left.
- C U F R		
DATE/TIME	ON OFF	For selecting an option to display year/month/day and hour/minute/second simultaneously when the camera ID is displayed.
- C U F R		
ZOOM LVL	ON OFF	Set the zoom position indication to ON or OFF.
- C U F R		
SYSTEM MODE	ON OFF	For selecting ON or OFF for the SYSTEM MODE display.
- C U F R		
REC FORMAT	ON OFF	For selecting ON or OFF for the REC FORMAT display.
- C U F R		
CAMERA MODE	ON OFF	For selecting ON or OFF of the CAMERA MODE display.
- C U F R		

VF INDICATOR (2/3)

Items/ Data Saved	Adjustable Range	Remarks
COLOR TEMP	ON OFF	Set the color temperature indication to ON or OFF.
- C U F R		
CAC	ON OFF	For selecting ON or OFF for the color astigmatism correction display
- C U F R		
GAMMA MODE	ON OFF	Select whether the gamma mode is to be displayed or not.
- C U F R		
DRS	ON OFF	For selecting "ON" or "OFF" for the dynamic range stretcher function display.
- C U F R		

VF INDICATOR (3/3)

Items/ Data Saved	Adjustable Range	Remarks
P2CARD REMAIN	OFF ONE-CARD TOTAL	Select the indication mode for the P2 card's remaining capacity. OFF: Disable the remaining capacity indication. ONE-CARD: Display the remaining capacity of the P2 card currently used for recording. TOTAL: Display the total remaining capacity of all P2 cards in slots.
- C U F R		
BATTERY	ON OFF	Set the battery voltage indication to ON or OFF.
- C U F R		
AUDIO LVL	ON OFF	Set the audio lever meter indication to ON or OFF.
- C U F R		
TC ON COLOR BAR	ON OFF	Select whether the time code is to be displayed or not on the color bar. Note The time code is displayed on the color bar but it is not recorded.
- C U F R		
TC	OFF TCG TCR TCG/TCR	Select the time code to display. OFF: Disable the time code display. TCG: Display the time code generator value in recording mode. TCR: Display the time code reader value in playback mode. TCG/TCR: Display the time code generator value in recording mode, and the time code reader value in playback mode.
- C U F R		
SYSTEM INFO	OFF ALWAYS NORMAL	Select the method of displaying system information and warnings. OFF: Display no warnings other than "TURN POWER OFF" and "SYSTEM ERROR". ALWAYS: Always display warnings. NORMAL: Display warnings for 3 seconds only when problems occur.
- C U F R		

Items/ Data Saved	Adjustable Range	Remarks
SAVE LED	OFF P2CARD	Set the SAVE lamp function. OFF: The lamp always stays off and not used. P2CARD: The lamp blinks in synch with the warning message when the P2 card's remaining recording capacity is getting low.
- C U F R		
REC STATUS	ON OFF	Select whether or not to enable "REC" indication in the viewfinder and on the LCD monitor during recording. ON: REC indication enabled. OFF: REC indication not enabled. ◆ Note Even if this item is "OFF", the "REC" indicator will be shown if "CHA" is selected in the REC TALLY item in the <OPTION MODE> screen
- C U F R		
P-REC/i-REC	ON OFF	Switches the display ON/OFF for INTERVAL REC and PRE RECORDING. ON: Flash the status of i-REC (INTERVAL REC), 1-CLIP (ONE CLIP REC) and P-REC (access connection status). OFF: Do not flash the status of i-REC, 1-CLIP, and P-REC. Pull the MARKER SEL, MODE CHK / MENU CANCEL switch to check the status of i-REC and 1-CLIP. ◆ Note PRE RECORDING switch information and START/END information of ONE CLIP REC are displayed without being configured in the menu settings.
- C U F R		

MODE CHECK IND

Items/ Data Saved	Adjustable Range	Remarks
STATUS	ON OFF	For the setting to display the status screen when the MARKER SEL, MODE CHK / MENU CANCEL switch is pulled.
- C U F R		
ILED	ON OFF	For the setting to indicate causes for turning on the \odot lamp on the viewfinder is displayed when the MARKER SEL, MODE CHK / MENU CANCEL switch is pulled. The causes for turning on the \odot lamp are displayed with \blacksquare .
- C U F R		
FUNCTION	ON OFF	For the setting to display the FUNCTION screen when the MARKER SEL, MODE CHK / MENU CANCEL switch is pulled.
- C U F R		
AUDIO	ON OFF	For the setting to display the AUDIO screen when the MARKER SEL, MODE CHK / MENU CANCEL switch is pulled.
- C U F R		
CAC	ON OFF	The setting to display the CAC screen when the MARKER SEL, MODE CHK / MENU CANCEL switch is pulled.
- C U F R		

Items/ Data Saved	Adjustable Range	Remarks
USER SW STATUS	ON OFF	Set whether to display the functions assigned to each user switch when the MARKER SEL, MODE CHK / MENU CANCEL switch is pulled.
- C U F R		
P.ON IND	ON OFF	For the setting to display the status screen immediately after turning on the power of the unit. ◆ Note Even if it is set to "ON" in this item, the status screen is not displayed immediately after turning on the power of the unit when the STATUS item is set to OFF.
- C U F R		

ILED

Items/ Data Saved	Adjustable Range	Remarks
GAIN(0dB)	ON OFF	For the setting to turn the \odot lamp on the viewfinder on when the GAIN is set to a value other than 0 dB.
- C U F R		
DS.GAIN	ON OFF	For the setting to turn the \odot lamp on the viewfinder on when the DS. GAIN (cumulative gain) is activated.
- C U F R		
SHUTTER	ON OFF	For the setting to turn the \odot lamp on the viewfinder on when the electronic shutter is activated.
- C U F R		
WHITE PRESET	ON OFF	For the setting to turn the \odot lamp on the viewfinder on when the WHITE BAL switch is set to the PRST position.
- C U F R		
EXTENDER	ON OFF	For the setting to turn the \odot lamp on the viewfinder on when the lens extender is activated.
- C U F R		
B.GAMMA	ON OFF	For the setting to turn the \odot lamp on the viewfinder on when the BLACK GAMMA is activated.
- C U F R		
MATRIX	ON OFF	For the setting to turn the \odot lamp on the viewfinder on when the color correction table for the linear matrix is selected.
- C U F R		
COLOR CORRECTION	ON OFF	For the setting to turn the \odot lamp on the viewfinder on when the 12-axis independent color correction is selected.
- C U F R		
FILTER	ON OFF	For the setting to turn the \odot lamp on the viewfinder on when the filter combination is anyone other than 3200K and CLEAR.
- C U F R		
ATW	ON OFF	For the setting to turn the \odot lamp on the viewfinder on when the ATW (Auto tracking white balance) is activated.
- C U F R		

CAM OPERATION

The ____ in the Adjustable Range column indicates the preset mode.

CAMERA ID

Items/ Data Saved	Adjustable Range	Remarks
ID1 - C U F -	***** ***	Setting 1 for the CAMERA ID recorded on color bars. Up to 10 characters are allowed for this setting.
ID2 - C U F -	***** ***	Setting 2 for the CAMERA ID recorded on color bars. Up to 10 characters are allowed for this setting.
ID3 - C U F -	***** ***	Setting 3 for the CAMERA ID recorded on color bars. Up to 10 characters are allowed for this setting.

◆ Note

This setting is canceled when READ FACTORY DATA is selected.

SHUTTER SPEED

Items/ Data Saved	Adjustable Range	Remarks
SYNCHRO SCAN - C U F -	ON OFF	Allocate SYNCHRO SCAN as a shutter speed selectable by the shutter switch.
POSITION1 - C U F -	ON OFF	Allocate the shutter speed set by POSITION1 SELECT in the <SHUTTER SELECT> screen as the shutter speed selectable by the shutter switch.
POSITION2 - C U F -	ON OFF	Allocate the shutter speed set by POSITION2 SELECT in the <SHUTTER SELECT> screen as the shutter speed selectable by the shutter switch.
POSITION3 - C U F -	ON OFF	Allocate the shutter speed set by POSITION3 SELECT in the <SHUTTER SELECT> screen as the shutter speed selectable by the shutter switch.
POSITION4 - C U F -	ON OFF	Allocate the shutter speed set by POSITION4 SELECT in the <SHUTTER SELECT> screen as the shutter speed selectable by the shutter switch.
POSITION5 - C U F -	ON OFF	Allocate the shutter speed set by POSITION5 SELECT in the <SHUTTER SELECT> screen as the shutter speed selectable by the shutter switch.
POSITION6 - C U F -	ON OFF	Allocate the shutter speed set by POSITION6 SELECT in the <SHUTTER SELECT> screen as the shutter speed selectable by the shutter switch.

SHUTTER SELECT

Items/ Data Saved	Adjustable Range	Remarks
POSITION1 SEL	1/100 * 1/120 1/250 1/500 1/1000 1/2000 HALF 180.0deg 172.8deg 144.0deg 120.0deg 90.0deg 45.0deg	For setting the shutter speed for POSITION 1.
- C U F -		
POSITION2 SEL	1/100 * 1/120 1/250 1/500 1/1000 1/2000 HALF 180.0deg 172.8deg 144.0deg 120.0deg 90.0deg 45.0deg	For setting the shutter speed for POSITION 2.
- C U F -		
POSITION3 SEL	1/100 * 1/120 1/250 1/500 1/1000 1/2000 HALF 180.0deg 172.8deg 144.0deg 120.0deg 90.0deg 45.0deg	For setting the shutter speed for POSITION 3.
- C U F -		
POSITION4 SEL	1/100 * 1/120 1/250 1/500 1/1000 1/2000 HALF 180.0deg 172.8deg 144.0deg 120.0deg 90.0deg 45.0deg	For setting the shutter speed for POSITION 4.
- C U F -		

Items/ Data Saved	Adjustable Range	Remarks
POSITION5 SEL	1/100 * 1/120 1/250 1/500 1/1000 1/2000 HALF 180.0deg 172.8deg 144.0deg 120.0deg 90.0deg 45.0deg	For setting the shutter speed for POSITION 5.
- C U F -		
POSITION6 SEL	1/100 * 1/120 1/250 1/500 1/1000 1/2000 HALF 180.0deg 172.8deg 144.0deg 120.0deg 90.0deg 45.0deg	For setting the shutter speed for POSITION 6.
- C U F -		

◆ Note

In remote control mode when the remote control unit (AJ-RC10G) or the extension control unit (AG-EC4G) is connected, the settings for the shutter are set to the value recorded on the AJ-RC10G or AG-EC4G.

* 1/100 is set when the settings value for the system frequency is 59.94 Hz. When the system frequency is 50 Hz, this is set to 1/60.

USER SW

Items/ Data Saved	Adjustable Range	Remarks
USER MAIN SW	INH S.GAIN DS.GAIN S.IRIS I.OVR S.BLK B.GAMMA D.ZOOM ATW ATW LOCK Y GET DRS ASSIST C.TEMP AUD CH1/3 AUD CH2/4 REC SW RET SW PRE REC SLOT SEL PC MODE LCD B.L	Allocate the USER MAIN button. For descriptions of the functions, see [Assigning Functions to USER Buttons] (page 55).
- C U F R		
USER1 SW	INH S.GAIN DS.GAIN S.IRIS I.OVR S.BLK B.GAMMA D.ZOOM ATW ATW LOCK Y GET DRS ASSIST C.TEMP AUD CH1/3 AUD CH2/4 REC SW RET SW PRE REC SLOT SEL PC MODE LCD B.L	Allocate the USER1 button. For descriptions of the functions, see [Assigning Functions to USER Buttons] (page 55).
- C U F R		
USER2 SW	INH S.GAIN DS.GAIN S.IRIS I.OVR S.BLK B.GAMMA D.ZOOM ATW ATW LOCK Y GET DRS ASSIST C.TEMP AUD CH1/3 AUD CH2/4 REC SW RET SW PRE REC SLOT SEL PC MODE LCD B.L	Allocate the USER2 button. For descriptions of the functions, see [Assigning Functions to USER Buttons] (page 55).
- C U F R		

Items/ Data Saved	Adjustable Range	Remarks
SHOT MARK SW (USER3 SW)	INH Y GET ASSIST REC SW RET SW PRE REC SLOT SEL PC MODE LCD B.L SHOT MARK	Allocate the SHOT MARK button. For descriptions of the functions, see [Assigning Functions to USER Buttons] (page 55).
- C U F R		
TEXT MEMO SW (USER4 SW)	INH Y GET ASSIST REC SW RET SW PRE REC SLOT SEL PC MODE LCD B.L TEXT MEMO	Allocate the TEXT MEMO button. For descriptions of the functions, see [Assigning Functions to USER Buttons] (page 55).
- C U F R		

SW MODE

Items/ Data Saved	Adjustable Range	Remarks
RET SW	INH R.REVIEW CAM RET D.ZOOM TEXT MEMO SHOT MARK	For setting the function when the USER button on the unit, to which the RET button of the lens or the RET SW function is allocated, is pressed. INH: The RET button function is disabled. R.REVIEW: REC view function It is possible to check a last few seconds of the records taken. CAM RET: Return video function It is possible to confirm the return video signals (analog HD-Y signals, SDI signals) supplied to the GENKLOCK IN connector or SDI IN connector on the unit by using the viewfinder. ◆ Notes ● When video signals in a format different from that for the video mode of the camera-recorder, return video is not properly displayed. ● When the GENLOCK item (the GENLOCK screen on the SYSTEM SETTING page) is set to INT, the return video image may be displayed as slightly shaking horizontally. ● The image is disrupted momentarily in the viewfinder and the LCD monitor when the image is switched between the camera image and playback image, but this is not a malfunction. D.ZOOM: Digital zoom function Switch the digital zoom ON/OFF. TEXT MEMO: Text Memo function Record a text memo on the frame at the moment this is pressed. SHOT MARK: Shot Mark function Press to add a shot mark, and press again to delete.
- C U F R		

WHITE BALANCE MODE

Items/ Data Saved	Adjustable Range	Remarks
S.BLK LVL	OFF -10 -20 -30	For setting the super black level.
- C U F R		
AUTO KNEE SW	OFF ON DRS	For selecting ON/OFF of the AUTO KNEE function and DRS function. When it is set to OFF, the AUTO KNEE may not function even if the AUTO KNEE switch is turned ON. When the DRS function is enabled and the AUTO KNEE switch is positioned to ON, the DRS function turns on.
S C U F R		
SHD.ABB SW CTL	ON OFF	For the setting to adjust the black shading automatically when the AUTO W/B BAL switch is held to the ABB side for 8 seconds or more.
- C U F R		
COLOR BARS	SMPTE FULL BARS SPLIT ARIB	For selecting the color bar to be used. SMPTE: Color bar complied with the SMPTE standards FULL BARS: Full color bar SPLIT: SPLIT color bar for SNG (Satellite News Gathering) ARIB: Color bar complied with the ARIB standards
- C U F R		
S.GAIN OFF	L/M/H S.GAIN	For selecting the method used to release the super gain mode. L/M/H: The mode is released by making a change in the L/M/H switch position and the S.GAIN switch (USER switch). S.GAIN: Disabled only with the S.GAIN switch (USER button).
- C U F -		
DS.GAIN OFF	L/M/H DS.GAIN	For selecting the method used to release the digital super gain mode (cumulative gain). L/M/H: The mode is released by making a change in the L/M/H switch position and the DS.GAIN switch (USER switch). DS.GAIN: The mode is released using only the DS.GAIN switch (USER switch).
- C U F R		
D.ZOOM x2	ON OFF	For specifying whether to enable or disable 2× when a user button on the camera-recorder is assigned the digital zoom function.
- C U F R		
D.ZOOM x3	ON OFF	For specifying whether to enable or disable 3× when a user button on the camera-recorder is assigned the digital zoom function.
- C U F R		
D.ZOOM x4	ON OFF	For specifying whether to enable or disable 4× when a user button on the camera-recorder is assigned the digital zoom function.
- C U F R		
RC CHECK SW	R.REVIEW PLAY	For specifying what the camera-recorder does when the REC check button on the remote control unit or the extension control unit is pressed. R.REVIEW: The camera-recorder performs rec review. PLAY: The camera-recorder performs playback.
- C U F R		

Items/ Data Saved	Adjustable Range	Remarks
FILTER INH	ON OFF	For selecting independently whether memory data for white balance (Ach, Bch) is retained or not for the respective CC filters. ON: Regardless of the CC filter, data for the memories (2 memories) for Ach and Bch is retained. OFF: The memory data (8 memories) for Ach and Bch is retained for the respective CC filters.
- C U F R		
SHOCKLESS AWB	OFF FAST NORMAL SLOW1 SLOW2 SLOW3	For setting the length of time for transiting to the switched position of white balance, when the position of the WHITE BAL switch is changed. OFF: To transit instantly FAST: About 1 second NORMAL: About 2 seconds SLOW1: About 3 seconds SLOW2: About 10 seconds SLOW3: About 20 seconds
- C U F R		
AWB AREA	25% 50% 90%	For switching the detection area for executing the automatic adjustment of white balance. 25%: An area near the screen center equivalent to 25% of the screen is detected. 50%: An area near the screen center equivalent to 50% of the screen is detected. 90%: An area equivalent to 90% of the screen is detected.
- C U F R		
AWB B	MEM ATW	For selecting the function to be assigned to the B position of the WHITE BAL switch. MEM: The value set when the white balance is automatically adjusted is saved, which is used each time the WHITE BAL switch is set to B. ATW: The auto-tracking white balance function is assigned.
- C U F R		
ATW SPEED	NORMAL SLOW FAST	Select the control speed for the auto-tracking white balance.
- C U F R		
TEMP PRE SEL SW	VAR 3.2K/5.6K	For selecting whether the PRESET color temperature is variable or switchable between 3200K and 5600K. Immediately after revising the value, the color temperature for PRESET is set to 3200K (For Filter A). VAR: Selectable within the range from 2300K ↓ to 15000K ↑. 3.2K/5.6K: Switchable between 3200K and 5600K.
- - - F -		

USER SW GAIN

Items/ Data Saved	Adjustable Range	Remarks
COLOR TEMP PRE	2300K ↓ 3200K 15000K ↑ 3200K 5600K	For setting the color temperature when the WHITE BAL switch is set to the PRST position. The PRESET color temperature selected in TEMP PRE SEL SW is set. 2300K ↓ - 15000K ↑ : When VAR was selected in TEMP PRE SEL SW. 3200K/5600K: When 3200K/5600K was selected in TEMP PRE SEL SW. ● Since the range of color temperatures that can be set will vary with the CC filter position, a numerical value cannot be changed even if the color temperature is changed when a high color temperature is set.
-	-	- F -
AWB A TEMP	2300K ↓ 3200K 15000K ↑	For setting the color temperature when the WHITE BAL switch is set to the A position. If the automatic adjustment of white balance is executed in the A position, the color temperature at that time is memorized in the position of the WHITE BAL switch A.
-	-	- F -
AWB B TEMP	2300K ↓ 3200K 15000K ↑	For setting the color temperature when the WHITE BAL switch is set to the B position. If the automatic adjustment of white balance is executed in the B position, the color temperature at that time is memorized in the position of the WHITE BAL switch B.
-	-	- F -

Items/ Data Saved	Adjustable Range	Remarks
S.GAIN 30 dB	* •	Select whether or not to enable 30dB for SUPER GAIN. *: Enable. •: Disable.
- C U F R		
36 dB	* •	Select whether or not to enable 36dB for SUPER GAIN. *: Enable. •: Disable.
- C U F R		
42 dB	* •	Select whether or not to enable 42dB for SUPER GAIN. *: Enable. •: Disable.
- C U F R		
DS.GAIN 6 dB ↑	* •	Select whether or not to enable 6 dB ↑ for DS.GAIN. *: Enable. •: Disable.
- C U F R		
10 dB ↑	* •	Select whether or not to enable 10 dB ↑ for DS.GAIN. *: Enable. •: Disable.
- C U F R		
12 dB ↑	* •	Select whether or not to enable 12 dB ↑ for DS.GAIN. *: Enable. •: Disable.
- C U F R		
15 dB ↑	* •	Select whether or not to enable 15 dB ↑ for DS.GAIN. *: Enable. •: Disable.
- C U F R		
20 dB ↑	* •	Select whether or not to enable 20 dB ↑ for DS.GAIN. *: Enable. •: Disable.
- C U F R		
24 dB ↑	* •	Select whether or not to enable 24 dB ↑ for DS.GAIN. *: Enable. •: Disable.
- C U F R		
28 dB ↑	* •	Select whether or not to enable 28 dB ↑ for DS.GAIN. *: Enable. •: Disable.
- C U F R		
34 dB ↑	* •	Select whether or not to enable 34 dB ↑ for DS.GAIN. *: Enable. •: Disable.
- C U F R		

◆ Note

When the DS.GAIN function is active, the shutter mode is set to OFF.

LENS/IRIS

Items/ Data Saved	Adjustable Range	Remarks
A.IRIS LEVEL : 045 : - C U F R	000 : 045 : 100	Set the target value for auto iris.
A.IRIS PEAK/ AVE : 030 : - C U F R	000 : 030 : 100	Determine the peak-to-standard ratio for the auto iris. A larger value sets the auto iris to respond to the peak in the IRIS detection window, while a smaller value sets it to respond to the average value in the window.
A.IRIS WINDOW : - C U F R	NORM1 NORM2 CENTR	Select the auto iris detection window. NORM1: The window closer to the center of the screen. NORM2: The window closer to bottom of the screen. CENTR: The spot window in the center of the screen.
S.IRIS LEVEL : 080 : - C U F R	000 : 080 : 100	Set the target value for the super iris (Backlight correction function).
IRIS GAIN : - C U F R	CAM LENS	Select which unit controls IRIS GAIN. ◆ Note Lenses with an extender, such as ×2, ×0.8 sold before FUJINON DIGI POWER, perform IRIS compensation while enabling the extender. Therefore, if this setting is switched to CAM, the camera's iris control will not operate properly.
IRIS GAIN VALUE : - C U F R	01 : 10 : 20	Set the adjustable value for IRIS GAIN. This setting is effective when CAM is selected for IRIS GAIN.

MAIN OPERATION

The ____ in the Adjustable Range column indicates the preset mode.

BATTERY/P2CARD

Items/ Data Saved	Adjustable Range	Remarks
BATTERY SELECT	HYTRON140 DIONIC90 DIONIC160 ENDURA10 PAG L95 TYPE A TYPE B TYPE C	Select the battery to use. Battery-remaining detection matched to the battery is performed when HYTRON 140, DIONIC 90, or DIONIC 160 from Anton/Bauer, ENDURA 10 (E-10) from IDX, or PAG L95 from PAG is selected. Select TYPE A, TYPE B, or TYPE C for batteries other than those mentioned above. At this time, set FULL (full voltage), NEAR END (near end warning voltage), and END (end voltage) for the selected battery type in the [BATTERY SETTING] (page 188). The initial values for TYPE A are set matching the IDX ENDURA ELITE-S, and TYPE B is set matching the Anton/Bauer HYTRON 140.
- C U F -		
EXT DC IN SELECT	AC ADPT HYTRON140 DIONIC90 DIONIC160 ENDURA10 PAG L95 TYPE A TYPE B TYPE C	Set the remaining capacity detection type when a battery is connected to the DC IN connector. Remaining capacity detection is also performed according to the selected battery type. Selection of battery types is similar to the above mentioned BATTERY SELECT menu option. Analog voltage is displayed on the viewfinder screen.
- C U F -		
BATT NEAR END ALARM	ON OFF	Select whether or not to set the alarm to beep for BATT NEAR END ALARM.
- C U F -		
BATT NEAR END CANCEL	ON OFF	If set to ON, the warning tone and indication can be canceled by pulling the MARKER SEL, MODE CHK/MENU CANCEL switch when BATT NEAR END ALARM is triggered.
- C U F -		
BATT END ALARM	ON OFF	Select whether or not to set the alarm to beep for BATT END ALARM.
- C U F -		
BATT REMAIN FULL	70% 100%	Set the display of the remaining battery level indicator bar in the display window when a battery with this function is used. 70%: Indicate FULL at 70% capacity. 100%: Indicate FULL at 100% capacity.
- C U F -		

Items/ Data Saved	Adjustable Range	Remarks
CARD NEAR END ALARM	ON OFF	Select whether or not to set the alarm to beep for P2 CARD NEAR END ALARM.
- C U F -		
CARD NEAR END TIME	2min 3min	Set the remaining time to indicate the P2 CARD NEAR END TIME alarm.
- C U F -		
CARD END ALARM	ON OFF	Select whether or not to set the alarm to beep for P2 CARD END ALARM.
- C U F -		
CARD REMAIN/■	3min/■ 5min/■	Set the length of time for one segment (■) of the P2 card's remaining capacity indicator bars. 3min/■: One segment represents 3 minutes. 5min/■: One segment represents 5 minutes.
- C U F -		

BATTERY SETTING (1/2)

Items/ Data Saved	Adjustable Range	Remarks
HYTRON140	* •	Enable selection under BATTERY SELECT. *: Enable selection. •: Disable selection.
	AUTO MANUAL	Select auto or manual to set the NEAR END voltage. AUTO : Set voltage automatically. MANUAL : Set voltage manually.
	11.0 : 13.5 : 15.0	When MANUAL is selected in the menu above, set the NEAR END voltage in 0.1 V steps.
- C U F -		
DIONIC90	* •	Enable selection under BATTERY SELECT. *: Enable selection. •: Disable selection.
	AUTO MANUAL	Select auto or manual to set the NEAR END voltage. AUTO : Set voltage automatically. MANUAL : Set voltage manually.
	11.0 : 13.4 : 15.0	When MANUAL is selected in the menu above, set the NEAR END voltage in 0.1 V steps.
- C U F -		
DIONIC160	* •	Enable selection under BATTERY SELECT. *: Enable selection. •: Disable selection.
	AUTO MANUAL	Select auto or manual to set the NEAR END voltage. AUTO : Set voltage automatically. MANUAL : Set voltage manually.
	11.0 : 13.6 : 15.0	When MANUAL is selected in the menu above, set the NEAR END voltage in 0.1 V steps.
- C U F -		
ENDURA10	* •	Enable selection under BATTERY SELECT. *: Enable selection. •: Disable selection.
	AUTO MANUAL	Select auto or manual to set the NEAR END voltage. AUTO : Set voltage automatically. MANUAL : Set voltage manually.
	11.0 : 13.4 : 15.0	When MANUAL is selected in the menu above, set the NEAR END voltage in 0.1 V steps.
- C U F -		
PAG L95	* •	Enable selection under BATTERY SELECT. *: Enable selection. •: Disable selection.
	AUTO MANUAL	Select auto or manual to set the NEAR END voltage. AUTO : Set voltage automatically. MANUAL : Set voltage manually.
	11.0 : 13.6 : 15.0	When MANUAL is selected in the menu above, set the NEAR END voltage in 0.1 V steps.
- C U F -		

BATTERY SETTING (2/2)

Items/ Data Saved	Adjustable Range	Remarks	
TYPE A	* •	Enable selection under BATTERY SELECT. *: Enable selection. •: Disable selection.	
	FULL	12.0 : 15.3 : 17.0	Set the voltage to display the FULL indication in 0.1 V steps.
	NEAR END	11.0 : 13.6 : 15.0	Set the NEAR END voltage in 0.1 V steps.
END	11.0 : 13.2 : 15.0	Set the END voltage in 0.1 V steps.	
- C U F -			
TYPE B	* •	Enable selection under BATTERY SELECT. *: Enable selection. •: Disable selection.	
	FULL	12.0 : 15.5 : 17.0	Set the voltage to display the FULL indication in 0.1 V steps.
	NEAR END	11.0 : 13.5 : 15.0	Set the NEAR END voltage in 0.1 V steps.
END	11.0 : 13.1 : 15.0	Set the END voltage in 0.1 V steps.	
- C U F -			
TYPE C	* •	Enable selection under BATTERY SELECT. *: Enable selection. •: Disable selection.	
	FULL	12.0 : 15.6 : 17.0	Set the voltage to display the FULL indication in 0.1 V steps.
	NEAR END	11.0 : 13.9 : 15.0	Set the NEAR END voltage in 0.1 V steps.
END	11.0 : 13.6 : 15.0	Set the END voltage in 0.1 V steps.	
- C U F -			

- The remaining battery level is indicated in percentage when a battery with this function is installed on the unit.

Items/ Data Saved	Adjustable Range	Remarks
VR SELECT	CH1/2 CH3/4	Select the channels to assign to the AUDIO LEVEL controls and F.AUDIO LEVEL control. CH1/2: Assign level adjustments for channels 1/2. Adjust channel 3/4 automatically, or through the LVL CONTROL CH3 and LVL CONTROL CH4 items in the menu. CH3/4: Assign level adjustments for channels 3/4. Adjust channel 1/2 automatically, or through the LVL CONTROL CH1 and LVL CONTROL CH2 items in the menu.
- C U F -		
FRONT VR CH1 (CH3)	OFF FRONT W.L. REAR ALL	Select whether or not to enable the F.AUDIO LEVEL control for the signal selected as the input signal to AUDIO CH1 (CH3). OFF: Disabled for any input selected. Recording level does not change by turning the volume control. FRONT: Only enabled when FRONT is selected. W.L.: Only enabled when the wireless mic receiver is selected. REAR: Only enabled when REAR is selected. ALL: Enabled for any input selected.
- C U F -		
FRONT VR CH2 (CH4)	OFF FRONT W.L. REAR ALL	Select whether or not to enable the F.AUDIO LEVEL control for the signal selected as an input signal to AUDIO CH2 (CH4). OFF: Disabled for any input selected. Recording level does not change by turning the volume control. FRONT: Only enabled when FRONT is selected. W.L.: Only enabled when the wireless mic receiver is selected. REAR: Only enabled when REAR is selected. ALL: Enabled for any input selected.
- C U F -		
AUTO LVL CH3 (CH1)	ON OFF	Select whether to use automatic adjustment for the audio CH3 (CH1) level adjustment method. ON: Enables automatic adjustment. OFF: Disables automatic adjustment. In these cases, adjust using the LVL CONTROL CH3 (CH1) item in the menu
- C U F -		
AUTO LVL CH4 (CH2)	ON OFF	Select whether to use automatic adjustment for the audio CH4 (CH2) level adjustment method. ON: Enables automatic adjustment. OFF: Disables automatic adjustment. In these cases, adjust using the LVL CONTROL CH4 (CH2) item in the menu
- C U F -		

Items/ Data Saved	Adjustable Range	Remarks
LVL CONTROL CH3 (CH1)	000 : 070 : 100	When the audio CH3 (CH1) level automatic adjustment is "OFF", this item can be manually adjusted.
- C U F -		
LVL CONTROL CH4 (CH2)	000 : 070 : 100	When the audio CH4 (CH2) level automatic adjustment is "OFF", this item can be manually adjusted.
- C U F -		
REAR XLR AUTO CH1/2	ON OFF	Set to apply to CH1 and CH2 the function to automatically detect whether a connector is connected to the rear AUDIO IN connector XLR. ON: Automatically detects. When connected to the rear AUDIO IN CH1/3 connector, CH1 will automatically be selected for the rear, and when connected to the AUDIO IN CH2/4 connector, CH2 will automatically be selected for the rear. OFF: Disables automatic detection.
- C U F -		
REAR XLR AUTO CH3/4	ON OFF	Set to apply to CH3 and CH4 the function to automatically detect whether a connector is connected to the rear AUDIO IN connector XLR. ON: Automatically detects. When connected to the rear AUDIO IN CH1/3 connector, CH3 will automatically be selected for the rear, and when connected to the AUDIO IN CH2/4 connector, CH4 will automatically be selected for the rear. OFF: Disables automatic detection.
- C U F -		

◆ Note

When "CH3/4" is selected in the VR SELECT item, the following 6 items will also be swapped for channels 1/2 and 3/4. The channel indicated in parentheses () indicates the channels used during replacement. Furthermore, settings values from menu items are inherited between these channels.

- FRONT VR CH1 → (CH3)
- FRONT VR CH2 → (CH4)
- AUTO LEVEL CH3 → (CH1)
- AUTO LEVEL CH4 → (CH2)
- LVL CONTROL CH3 → (CH1)
- LVL CONTROL CH4 → (CH2)

→ [Recording level adjustment] (page 58)

Items/ Data Saved	Adjustable Range	Remarks
MIC LOWCUT CH1	OFF FRONT W.L. REAR	Select the microphone low cut filter for Input Channel 1. OFF: The microphone low cut filter is disabled for any input. FRONT: The microphone low cut filter is enabled when the front microphone is selected. W.L.: The microphone low cut filter is enabled only when the wireless microphone is selected. REAR: The microphone low cut filter is enabled only when the rear microphone is selected.
- C U F -		
MIC LOWCUT CH2	OFF FRONT W.L. REAR	Select the microphone low cut filter for Input Channel 2. OFF: The microphone low cut filter is disabled for any input. FRONT: The microphone low cut filter is enabled when the front microphone is selected. W.L.: The microphone low cut filter is enabled only when the wireless microphone is selected. REAR: The microphone low cut filter is enabled only when the rear microphone is selected.
- C U F -		
MIC LOWCUT CH3	OFF FRONT W.L. REAR	Select the microphone low cut filter for Input Channel 3. OFF: The microphone low cut filter is disabled for any input. FRONT: The microphone low cut filter is enabled when the front microphone is selected. W.L.: The microphone low cut filter is enabled only when the wireless microphone is selected. REAR: The microphone low cut filter is enabled only when the rear microphone is selected.
- C U F -		
MIC LOWCUT CH4	OFF FRONT W.L. REAR	Select the microphone low cut filter for Input Channel 4. OFF: The microphone low cut filter is disabled for any input. FRONT: The microphone low cut filter is enabled when the front microphone is selected. W.L.: The microphone low cut filter is enabled only when the wireless microphone is selected. REAR: The microphone low cut filter is enabled only when the rear microphone is selected.
- C U F -		
LIMITER CH1	ON OFF	Select the limiter. Disabled when automatic adjustment for the recording level is selected.
- C U F -		
LIMITER CH2	ON OFF	Select the limiter. Disabled when automatic adjustment for the recording level is selected.
- C U F -		
LIMITER CH3	ON OFF	Select the limiter. Disabled when automatic adjustment for the recording level is selected.
- C U F -		
LIMITER CH4	ON OFF	Select the limiter. Disabled when automatic adjustment for the recording level is selected.
- C U F -		

Items/ Data Saved	Adjustable Range	Remarks
25M REC CH SEL	2CH 4CH	Select the audio channels to be recorded in the DVCPRO and DV formats. 2CH: Only recorded in CH1 and CH2. 4CH: Recorded in all channels from CH1 to CH4.
- C U F -		
TEST TONE	OFF NORMAL ALWAYS CHSEL	Select the test signal. OFF: Disable test tone output. NORMAL: Test tone signals are output to all of Channels 1 - 4 when the OUTPUT/AUTO KNEE selector switch has been switched to BARS and CH1 of the AUDIO IN switch has been switched to FRONT. ALWAYS: Test tone signals are always output to all of Channels 1 - 4 when the OUTPUT/AUTO KNEE selector switch has been switched to BARS. CHSEL: Output test tone to the channels where the AUDIO IN switch CH1 or CH2 is set to FRONT when OUTPUT/AUTO KNEE selector switch is set to BARS. The test tone is not output to CH3 and CH4.
- C U F -		

◆ Note

The frequency characteristics when the microphone low cut filter is applied are 200 Hz to 10 kHz.

MIC/AUDIO (3/3)

Items/ Data Saved	Adjustable Range	Remarks
FRONT MIC POWER - C U F -	ON OFF	Select the phantom power supply for the front microphone.
REAR MIC POWER - C U F -	ON OFF	Select the phantom power supply for the rear microphone. When OFF is selected, no phantom power is supplied even if the REAR AUDIO CH1 or CH2 switch is set to +48 V.
MONITOR SELECT - C U F -	STEREO MIX	When the MONITOR switch is set to ST (stereo), select the signal format for the monitor output.
FRONT MIC LEVEL - C U F -	-40dB -50dB	Select the front microphone input level.
REAR MIC CH1/3 LVL - C U F -	-50dB -60dB	Select the rear microphone input level.
REAR MIC CH2/4 LVL - C U F -	-50dB -60dB	Select the rear microphone input level.
REAR LINE IN LVL - C U F -	+4dB 0dB -3dB	Select the rear line input level.
AUDIO OUT LVL - C U F -	+4dB 0dB -3dB	Select the audio output level.
HEADROOM - C U F -	18dB 20dB	Set the headroom (standard level).
WIRELESS WARN - C U F -	ON OFF	Select whether or not to enable the alarm to trigger for poor wireless receiver reception.
WIRELESS TYPE - C U F -	SINGLE DUAL	Select the type of wireless receiver. SINGLE: Select a single channel wireless receiver. DUAL: Select a 2-channel wireless receiver.

TC/UB

Items/ Data Saved	Adjustable Range	Remarks
TC MODE - C U F -	DF NDF	Set the time code mode. DF: Drop frame. NDF: Non drop frame. ◆ Note When the camera-recorder operates at 50 Hz or in 24P or 24PA mode, the non-drop frame is always used.
UB MODE - C U F -	USER TIME DATE EXT TCG FRM RATE REGEN	Select the user bits mode. USER: Select UB value set in the LCD section. TIME: Select local time (hours, minutes, seconds). DATE: Select local date and time (2 last digits of year, month, date, time). EXT: The user bits input to the TC IN connector are recorded. TCG: TCG value enters UB. FRM RATE: Select the shooting information (e.g. frame rate) for the camera. For more information, see [Frame rate information recorded in user bits] (page 64). When clips recorded in Native mode are played back, the frame rate information recorded in VITC users bits is output. REGEN: Read out value stored in the card and record value continuously.

Items/ Data Saved	Adjustable Range	Remarks
VITC UB MODE	USER/EXT TIME DATE TCG FRM RATE REGEN	Select the user bits mode for VITC. USER/EXT: If UB MODE is set to EXT, the EXT value is recorded. If not, USER value set by UB is recorded. TIME: Select local time (hours, minutes, seconds). DATE: Select local date and time (2 last digits of year, month, date, time). TCG: TCG value enters UB. FRM RATE: Select camera shooting information (frame rate, etc.). For more information, see [Frame rate information recorded in user bits] (page 64). REGEN: Read out value stored in card and record value continuously. ◆ Note When the camera-recorder operates in 24P, 24PA, 30P (AVC-I) or 25P (AVC-I) mode, FRM RATE is always selected.
- C U F -		
TCG SET HOLD	ON OFF	ON/OFF switching for the feature that always starts recording (when the power is turned ON again) the TCG value that was set before the power is turned OFF.
- C U F -		
FIRST REC TC	PRESET REGEN	For the first recording after the power is turned on, a P2 card is inserted and then switching from this P2 card to another recording-target P2 card is performed, select whether or not to regenerate the time code as the value on the new P2 card. PRESET: Use the camera-recorder's internal time code. REGEN: For clips recorded on the recording-target P2 card, regenerate the time code as the time code of the clip that has the most recent date and time. ◆ Notes ● Set the date and time accurately. For guidance on setting, see [Setting the Internal Clock's Date and Time] (page 66). ● During operation in either 24P or 24PA mode, regeneration of the value of the card recorded in drop-frame is not permitted.
- C U F -		
P.OFF LCD DISPLAY	ON OFF	Select whether or not to display the time code setting and counter indication on the LCD monitor when the power is turned OFF. ON: Display setting and indication while the power is turned OFF. OFF: Power-down LCD monitor while camera power is turned OFF. Setting and indication disabled.
- C U F -		
TC OUT	TCG TCG/TCR	Select the time code to be output to the time code output connector. TCG: Always output time code generator value. TCG/TCR: Display time code generator value in recording mode, and time code reader value in playback mode.
- C U F -		

Items/ Data Saved	Adjustable Range	Remarks
TC DISP SEL	30F 24F	Select the display format for the time code frame digits. (For 1080-59.94i or 480-59.94i only) For details, refer to [Recording time code and user bits] (page 63). 30F: Display time code frame digits in 30 frames. 24F: Convert time code frame digits into 24 frames for display.
- C U F -		
TC VIDEO SYNCHRO	0 1 2 3	For setting to correct the time code according to the delay of video signals. 0: Do not correct. 1: To delay the time code to be input according to the timing of the video images. 2: To forward the time code to be output according to the timing of the video images. 3: To delay the time code to be input and forward the time code to be output, respectively, according to the timing of the video images. For details, refer to [Externally Locking the Time Code] (page 68).
- C U F -		
REC REVIEW REGEN	ON OFF	For selecting whether the time code is regenerated to the value on the P2 card or not, when subsequent recording starts after setting the RET SW item on the SW MODE screen to R.REVIEW and pressing the RET button on the lens or the USER button on the unit on which the RET SW function is assigned. ON: The time code is regenerated. OFF: The time code is not regenerated.
- C U F -		

UMID SET/INFO

Items/ Data Saved	Adjustable Range	Remarks
COUNTRY	NO-INFO	Input the user's country. NO-INFO is displayed until the input completes.
- C U F -		
ORGANIZATION	NO-INFO	Input the user's organisation or company name. NO-INFO is displayed until the input completes.
- C U F -		
USER	NO-INFO	Input the user name. NO-INFO is displayed until the input completes.
- C U F -		
DEVICE NODE		Indicate the product ID number.
- - - -		

◆ Note

Please refer to [Setting UMID Information] (page 73) for the UMID information setting.

FILE

The ____ in the Adjustable Range column indicates the preset mode.

SD CARD READ/WRITE

Items/ Data Saved	Adjustable Range	Remarks
R.SELECT	1 : 8	Select the file number to read out.
- - - F -		
READ		Read out the data from the SD memory card.
- - - - -		
W.SELECT	1 : 8	Select the file number to write in.
- - - F -		
WRITE		Write the camera-recorder's menu data to the SD memory card.
- - - - -		
CARD CONFIG		Format the SD memory card.
- - - - -		
TITLE READ		Read out the title of the data recorded on the SD memory card.
- - - - -		
TITLE1 - 8	**** ****	Up to 8 letters can be set for the title name.
- - - - -		

◆ Notes

- For a **USB DEVICE** mode, errors occur even if the respective items for **SD CARD READ/WRITE** are executed, since it does not access an SD memory card. Set **PC MODE** to "OFF" and then execute the operation again.
- In **ONE CLIP REC** mode, when a clip can be recorded combined with the previous clip (when "1*CLIP" is displayed in the viewfinder or lower right of the LCD monitor), items on the **SD CARD READ/WRITE** screen cannot be manipulated. Close the menu, hold down the **STOP** button for 2 seconds to end this connection, and try again.
- During **INTERVAL REC** standby, items on the **SD CARD READ/WRITE** screen cannot be manipulated. Press the **STOP** button to stop **INTERVAL REC** and try again.

SD CARD R/W SELECT

Items/ Data Saved	Adjustable Range	Remarks
SYSTEM MODE R/W	ON OFF	Specify whether or not to use the settings for the options on the SYSTEM MODE screen when data is read or written from or to SD memory cards.
- - - F -		
ID READ/ WRITE	ON OFF	Select whether or not to include the CAMERA ID when reading out or writing to the SD memory card.
- - - F -		
USER MENU SELECT R/W	ON OFF	Select whether or not to include the USER MENU SELECT settings when reading out or writing to the SD memory card.
- - - F -		
SYSTEM MENU R/W	ON OFF	Specify whether or not to use the settings on all screens except the SYSTEM MODE screen on the SYSTEM SETTING page and the settings on the OPTION MENU page when data is read or written from or to SD memory cards.
- - - F -		
PAINT MENU LEVEL R/W	ON OFF	Select whether or not to include the adjusted values on the PAINT page when reading out or writing to the SD memory card.
- - - F -		
PAINT MENU SW(■) R/W	ON OFF	Select whether or not to include the set values on the PAINT MENU page when reading out or writing to the SD memory card.
- - - F -		
VF MENU R/W	ON OFF	Select whether or not to include the set values on the VF page when reading out or writing to the SD memory card.
- - - F -		
CAM OPE MENU R/W	ON OFF	Select whether or not to include the set values on the CAM OPERATION page when reading out or writing to the SD memory card.
- - - F -		
MAINTE MENU R/W	ON OFF	Select whether or not to include the set values on the MAINTENANCE page when reading out or writing to the SD memory card.
- - - F -		
MAIN OPE MENU R/W	ON OFF	Select whether or not to include the set values on the MAIN OPERATION page when reading out or writing to the SD memory card.
- - - F -		

CAC FILE CARD READ

Items/ Data Saved	Adjustable Range	Remarks
CARD FILE SELECT - - - F -	1 : 32	For selecting the number for performing the color astigmatism correction data operation (READ/DELETE) that is recorded on the SD memory card.
READ - - - - -		For reading the CAC FILE from the SD memory card. When this is selected, the display moves to the FILE READ screen.
DELETE - - - - -		For deleting the CAC FILE on the SD memory card
TITLE READ - - - - -		For reading the name of the CAC FILE on the SD memory card
TITLE SCROLL - - - - -	1 : 25	For scrolling the CAC files on the SD memory card. Select this with the cursor, press the JOG dial button, and then turn the JOG dial button to scroll the CAC files.
01 - 32 - - - - -		For indicating the file names of 01 to 32 up to 27 characters

FILE READ screen

Items/ Data Saved	Adjustable Range	Remarks
TITLE		The name of the CAC File selected in the READ item of the CAC FILE CARD is displayed.
YES		The CAC files that are read from the SD memory card are recorded in the built-in memory of the unit.
NO (CANCEL)		The CAC files read from the SD memory card are not recorded in the built-in memory of the unit.
MEM STORE NO	EMPTY 1 : 32	EMPTY: When data are recorded in built-in memory of the unit, the system searches vacant spaces to record the data. 1 - 32: Data are recorded with the selected number. If any CAC FILE has already been recorded with that number, data are overwritten.
TITLE SCROLL - - - - -	1 : 25	The CAC files in built-in memory of the unit are scrolled. Select this item using the cursor, and press the JOG dial button and then turn the JOG dial button to scroll the CAC files.
01 - 32		The file names from 01 to 32 are displayed with up to 27 characters.

LENS FILE

Items/ Data Saved	Adjustable Range	Remarks
FILE NO. - - - F -	1 : 8	Select the lens file number.
READ - - - - -		Read the lens file data.
WRITE - - - - -		Write the lens file data.
RESET ALL - - - - -		For resetting the all data of the lens file.
TITLE1 - 8 - - - - -	***** *****	Up to 12 letters can be set for the title name.

LENS FILE CARD R/W

Items/ Data Saved	Adjustable Range	Remarks
CARD FILE SELECT - - - F -	1 : 8	For selecting the number of the lens file in the SD memory card.
READ - - - - -		For reading the lens file data from the SD memory card.
WRITE - - - - -		For writing the lens file data into the SD memory card.
TITLE READ - - - - -		For reading the title of the lens file in the SD memory card.
TITLE1 - 8 - - - - -	***** *****	For setting a title consisting of not more than 12 characters.

◆ Notes

- For a USB DEVICE mode, errors occur even if the respective items of LENS FILE CARD R/W are executed, since it does not access an SD memory card. Set PC MODE to "OFF" and then execute the operation again.
- In ONE CLIP REC mode, when a clip can be recorded combined with the previous clip (when "1*CLIP" is displayed in the viewfinder or lower right of the LCD monitor), items on the CAC FILE CARD READ screen and LENS FILE CARD READ screen cannot be manipulated. Close the menu, hold down the STOP button for 2 seconds to end this connection, and try again.
- During INTERVAL REC standby, items on the CAC FILE CARD READ screen and LENS FILE CARD READ screen cannot be manipulated. Press the STOP button to stop INTERVAL REC and try again.

SCENE

Items/ Data Saved	Adjustable Range	Remarks
READ USER DATA - - - - -		Read out the data from the user area in the memory.
SCENE SEL - - - F - -	1 : 4	Select the scene file.
READ - - - - -		Read the scene file.
WRITE - - - - -		Write the scene file.
RESET - - - - -		Reset the scene file values to the initial values.
TITLE 1-4 - - - - -		Create the scene file title.

◆ Notes

- For a USB DEVICE mode, errors occur even if the READ USER DATA item is executed, since it does not access an SD memory card. Set PC MODE to "OFF" and then execute the operation again.
- In ONE CLIP REC mode, when a clip can be recorded combined with the previous clip (when "1*CLIP" is displayed in the viewfinder or lower right of the LCD monitor), READ USER DATA item and READ item on the SCENE screen cannot be manipulated. Close the menu, hold down the STOP button for 2 seconds to end this connection, and try again.
- During INTERVAL REC standby, READ USER DATA item and READ item on the SCENE screen cannot be manipulated. Press the STOP button to stop INTERVAL REC and try again.

INITIALIZE

Items/ Data Saved	Adjustable Range	Remarks
READ FACTORY DATA - - - - -		The menu (MAIN MENU, OPTION MENU) values are all reset to factory settings. ◆ Note The settings for the following are not reset to the factory-set values. <ul style="list-style-type: none"> ● Scene file ● User data ● Lens file ● Black shading data
WRITE USER DATA - - - - -		Save the user preference menu data in the camera's internal memory.

◆ Notes

- For a USB DEVICE mode, errors occur even if the READ FACTORY DATA item is executed, since it does not access an SD memory card. Set PC MODE to "OFF" and then execute the operation again.
- In ONE CLIP REC mode, when a clip can be recorded combined with the previous clip (when "1*CLIP" is displayed in the viewfinder or lower right of the LCD monitor), READ FACTORY DATA item on the INITIALIZE screen cannot be manipulated. Close the menu, hold down the STOP button for 2 seconds to end this connection, and try again.
- During INTERVAL REC standby, READ FACTORY DATA item on the INITIALIZE screen cannot be manipulated. Press the STOP button to stop INTERVAL REC and try again.

MAINTENANCE

The ____ in the Adjustable Range column indicates the preset mode.

SYSTEM CHECK

Items/ Data Saved	Adjustable Range	Remarks
COLOR CHECK	ON OFF	ON/OFF switching for checking proper operation of the camera-recorder. The RGB level in the area around the center of the screen is indicated in the viewfinder to show whether each signal is successfully communicated from the optical channel to the digital channel and processed.
- - - - -		

LENS ADJ

Items/ Data Saved	Adjustable Range	Remarks
F2.8 ADJ	ON OFF	The iris is only set to F2.8 when this item set to ON. (Adjustment to F2.8 will be executed on the lens)
- - - - -		
F16 ADJ	ON OFF	The iris is only set to F16 when this item set to ON. (Adjustment to F16 will be executed on the lens)
- - - - -		

BLACK SHADING

Items/ Data Saved	Adjustable Range	Remarks
CORRECT	ON OFF	ON/OFF switching for digital black shading compensation.
- C U F R		
DETECTION (DIG)	-	Execute digital black shading compensation.
- - - - -		

WHITE SHADING

Items/ Data Saved	Adjustable Range	Remarks
CORRECT	ON OFF	ON/OFF switching for white shading compensation.
- C U F R		
R H SAW R H PARA R V SAW R V PARA G H SAW G H PARA G V SAW G V PARA B H SAW B H PARA B V SAW B V PARA	-255 : +000 : +255	For executing the white shading compensation manually. The sawteeth-shaped waveform and the parabola waveform of the respective RGB channels are adjusted in the horizontal direction and the vertical direction.
- - - F -		

LENS FILE ADJ

Items/ Data Saved	Adjustable Range	Remarks
LENS FILE ADJ MODE	ON OFF	ON: The gains of Rch and Bch adjusted in <RB GAIN CONTROL> screen are reset. Furthermore, the flare levels of Rch, Gch and Bch that are adjusted on <RGB BLACK CONTROL> screen are reset. OFF: The gains of Rch and Bch adjusted in <RB GAIN CONTROL> screen are enabled. Furthermore, the flare levels of Rch, Gch and Bch that are adjusted on <RGB BLACK CONTROL> screen are enabled.
- - - F -		
LENS R GAIN OFFSET	-200 : +000 : +200	For compensating Rch sensitivity of the lens used.
- - - F -		
LENS B GAIN OFFSET	-200 : +000 : +200	For compensating Bch sensitivity of the lens used.
- - - F -		
LENS R FLARE	000 : 100	For adjusting the flare level of Rch.
- - - F -		
LENS G FLARE	000 : 100	For adjusting the flare level of Gch.
- - - F -		
LENS B FLARE	000 : 100	For adjusting the flare level of Bch.
- - - F -		

- Data adjusted on the LENS FILE ADJ screen can be stored on an SD memory card as a lens file.

CAC ADJ

Items/ Data Saved	Adjustable Range	Remarks
CAC CONTROL	ON OFF	ON: The color astigmatism correction is performed. OFF: The color astigmatism correction is not performed.
- - U F R		
CAC FILE DELETE	-	The color astigmatism correction file that is recorded in built-in memory of the unit and selected in the CAC FILE No item is deleted.
- - - - -		
CAC FILE NO.	1 : 32	To delete the color astigmatism correction file from the CAC FILE DELETE item, select the color astigmatism correction file to be deleted.
- - - - -		
TITLE SCROLL	1 : 25	The color astigmatism correction files are scrolled. Select this item by using the cursor, and press the JOG dial button and then turn the JOG dial button to scroll the CAC files.
- - - - -		
01 - 32		The first 27 characters of the names of the color astigmatism correction files 01 to 32 are displayed.
- - - - -		

DIAGNOSTIC (1/3)

Items/ Data Saved	Adjustable Range	Remarks
VERSION		Displays the version of all firmwares in the unit.
- - - - -		
MODEL NAME		Displays the model name of the unit.
- - - - -		
SERIAL NO.		Displays the model number of the unit.
- - - - -		

DIAGNOSTIC (2/3)

Items/ Data Saved	Adjustable Range	Remarks
CAM SOFT		Displays the version of the camera microprocessor software.
- - - - -		
CAM TABLE		Display the table version.
- - - - -		
PULSE FPGA		Displays the version of the program for driving the CCD.
- - - - -		
FMUC FPGA		Displays the version of the program for the frame memory control and the microprocessor interface FPGA.
- - - - -		
CHAR FPGA		Displays the versions of the character generator, and of the signal input control FPGA program.
- - - - -		

DIAGNOSTIC (3/3)

Items/ Data Saved	Adjustable Range	Remarks
SYSCON SOFT		Display the software version for the system control microprocessor.
- - - - -		
LCD SOFT		Display the software version for the LCD microprocessor.
- - - - -		
P2CS BL2-1		Displays the version of the P2 control microprocessor boot program 1.
- - - - -		
P2CS BL2-2		Displays the version of the P2 control microprocessor boot program 2.
- - - - -		
P2CS KR		Displays the version of the P2 control microprocessor kernel.
- - - - -		
P2CS AP		Displays the version of the P2 control microprocessor application program.
- - - - -		
VUP		Displays the software version of the system for updating the firmware of this unit.
- - - - -		
VUP FS		Displays the version of the file system for updating the unit.
- - - - -		
PQCNT FPGA		Displays the version of the backend PQ control FPGA.
- - - - -		

HOURS METER

Items/ Data Saved	Adjustable Range	Remarks
OPERATION		Display total hours the camera power has been turned ON.
- - - - -		
P.ON TIMES		Display total number of times the power switch has been turned ON.
- - - - -		

OPTION MENU

The ____ in the Adjustable Range column indicates the preset mode.

OPTION

Items/ Data Saved	Adjustable Range	Remarks
ENG SECURITY	ON OFF	Select whether or not to prohibit opening the menu screen. ON: Menu screen cannot be opened. Please consult your distributor to release the setting. OFF: Menu screen can be opened.
- - - - -		
FRAME RATE UB	FRM RATE MENU	For setting the user bits to record when the video system is set to 24P or 24PA. For details, refer to [Recording time code and user bits] (page 63). FRM RATE: For recording the shooting information (frame rate etc.) of the camera. MENU: This follows the settings in the UB MODE item and the VITC UB MODE item of <TC/UB> screen. However, the camera recording information is always recorded when recording in Native mode.
- C - - -		
FAN MODE	OFF AUTO	For setting the operation mode of the fan OFF: The fan always stops. Displays the FAN STOP warning. AUTO: The fan will run automatically when the temperature in the unit increases. ◆Note Once the power is turned off, this will always be set to "AUTO" whenever the power is turned on. If the unit is operated as the fan stops, the temperature in the unit will increase, and data may not record or play back properly. Use the unit after setting this item to "AUTO" for normal operation.
- - - - -		

AREA SETTING

Items/ Data Saved	Adjustable Range	Remarks
AREA SELECT	NTSC NTSC (J) PAL	NTSC: Any NTSC color TV standard other than Japan is selected. NTSC (J): Japan color TV standard is selected. PAL: PAL color TV standard is selected.
- - - - -		
■AREA SET	-	The settings for the area selected in the AREA SELECT item are applied. For details, refer to [Color TV Standard Settings (Settings for frame frequency)] (page 14).
- C - - -		

Updating the Firmware incorporated into the unit

The firmware can be updated using either of the following two methods.

1. Checking the current version of firmware and performing the update using the dedicated tool (P2_Status_Logger)

PASS (P2 Asset Support System) is only available to customers who have completed customer registration with Panasonic.

Log in to PASS and use the dedicated tool (P2_Status_Logger) to check the version information of the firmware on the unit and download links to pages containing the necessary firmware. For further information about downloading and using P2_Status_Logger, log in to PASS and refer to the relevant pages. Besides access to PASS, completing customer registration has a number of other benefits. For further details, refer to the PASS (P2 Asset Support System) website (<http://pro-av.panasonic.net/>).

2. Checking the current version of the firmware using the unit and performing the update

Check firmware version of the camera in the DIAGNOSTIC screen. Then access the site listed in the NOTE below to check the most recent firmware information and download any firmware you require.


◆ Notes

- The update is completed by loading the downloaded file onto the unit via an SD memory card. For details on updating, visit the support desk at the following website.
<http://pro-av.panasonic.net/>
- Be sure to use a compatible SD memory card. The unit is compatible with SD memory cards based on the SD and SDHC standards. Also, be sure to format the memory card using the unit before use.

Specifications

General

Power supply:
DC 12 V (11.0 V - 17.0 V)
Power consumption:
34 W (main unit only)

 indicates safety information.

Operating temperature:
0 °C to 40 °C (32 °F to 104 °F)

Storage temperature:
-20 °C to 60 °C (-4 °F to 140 °F)

Operating humidity:
10% to 85% (relative humidity)

Maximum continuous operation:
Approximately 150 minutes (using an Anton/Bauer DIONIC90 battery)

Dimensions (W × H × D):
140 mm × 270.5 mm × 335.8 mm
(5-1/2 inches × 10-5/8 inches × 13-1/4 inches)

(Excluding protrusion)
Weight: Approx. 3.9 kg (8.6 lb) (Excluding accessories)

Camera Unit

Pickup devices: 2/3-type 2.2-million pixels,
IT CCD × 3

Image pickup scheme:
RGB 3CCD

Total pixels: 2010 (H) × 1120 (V)

CC Filter:
A: 3200K
B: 4300K
C: 5600K
D: 6300K

ND Filter:
1: CLEAR
2: 1/4ND
3: 1/16ND
4: 1/64ND

Quantizing: 14-bit

Horizontal drive frequency:
74.1758 MHz (59.94 Hz)
74.25 MHz (50 Hz)

Sampling frequencies:
74.1758 MHz (59.94 Hz)
74.25 MHz (50 Hz)

Digital signal processing:
74.1758 MHz (59.94 Hz)
74.25 MHz (50 Hz)

Programmable gain:
-6/-3/0/3/6/9/12/15/18/ 21/24/27/30 dB

Digital Super Gain (DS.GAIN):
Selectable from 6/10/12/15/20/24/28/
34 dB

Super Gain (S.GAIN):
Selectable from 30/36/42 dB

Shutter speeds: 1/60 (50 Hz), 1/100 (59.94 Hz), 1/120,
1/250, 1/500, 1/1000, 1/2000, HALF
180.0 deg, 172.8 deg, 144.0 deg,
120.0 deg, 90.0 deg, 45.0 deg

Synchro-scan shutter:
1/61.7 to 1/7200
(1080/59.94i, 480/59.94i)
1/30.9 to 1/3600
(1080/29.97p, 480/29.97p)
1/24.7 to 1/2880
(1080/23.98p, 480/23.98p)
1/51.4 to 1/6000
(1080/50i, 576/50i)
1/25.7 to 1/3000
(1080/25p, 576/25p)

Lens mount: 2/3-type bayonet

Color separation optical system:
Optical prism (F1.4)

Sensitivity: F11 (1080/59.94i),
F12 (1080/50i)
(2000 lx, 89.9% reflection)

Minimum object illuminance:
0.005 lx
(For F1.4, 42 dB (S. GAIN), 34 dB (DS. GAIN))

Video S/N: 54 dB (DNR OFF) (standard)
59 dB (DNR ON) (standard)

Registration error: 0.03% or less (all areas, excluding lens distortion)

Horizontal resolution:
1000 TV lines or more (center)

Memory Card Unit

Record media: P2 card

Video recording signals:

1080/59.94i, 1080/50i, 1080/29.97p,
1080/29.97pN, 1080/23.98p, 1080/
23.98pN, 1080/23.98pA, 1080/25p,
1080/25pN
480/59.94i, 480/29.97p, 480/23.98p,
480/23.98pA, 576/50i, 576/25p

Video recording formats:

Selectable from AVC-Intra100/
AVC-Intra50/DVCPRO HD/
DVCPRO50/DVCPRO/DV

Audio recording signals:

AVC-Intra 100/AVC-Intra 50:

Selectable from 48 kHz 16-bit 4ch/
48 kHz 24-bit 4ch

DVCPRO HD/DVCPRO50:

48 kHz/16-bit, 4ch

DVCPRO/DV:

Selectable from 48 kHz 16-bit 4ch/2ch

Recording/playback time:

AVC-Intra 100/DVCPRO HD:

8 GB × 1 Approximately 8 minutes
16 GB × 1 Approximately 16 minutes
32 GB × 1 Approximately 32 minutes
64 GB × 1 Approximately 64 minutes

AVC-Intra 50/DVCPRO50:

8 GB × 1 Approximately 16 minutes
16 GB × 1 Approximately 32 minutes
32 GB × 1 Approximately 64 minutes
64 GB × 1 Approximately 128 minutes

DVCPRO/DV:

8 GB × 1 Approximately 32 minutes
16 GB × 1 Approximately 64 minutes
32 GB × 1 Approximately 128 minutes
64 GB × 1 Approximately 256 minutes

Digital Video System

Frequency range: Y: 74.1758 MHz (59.94 Hz)
74.2500 MHz (50 Hz)
(AVC-Intra100/DVCPRO HD)

PB/PR: 37.0879 MHz (59.94 Hz)
37.1250 MHz (50 Hz)
(AVC-Intra100/DVCPRO HD)

Y: 13.5 MHz (DVCPRO50)

PB/PR: 6.75 MHz (DVCPRO50)

Y: 13.5 MHz (DVCPRO)

PB/PR: 3.375 MHz (DVCPRO)

Quantization: 10 bits (AVC-Intra100/AVC-Intra50)

8 bits (DVCPRO HD/DVCPRO50/
DVCPRO/DV)

Compression method:

MPEG-4 AVC/H.264 Intra Profile

(AVC-Intra100/AVC-Intra50)

DV base (SMPTE370M) (DVCPRO HD)

DV base (SMPTE314M)

(DVCPRO50/DVCPRO)

DV (IEC61834-2) (DV)

Digital Audio System

Frequency response:

20 Hz - 20 kHz ± 1.0 dB
(at standard level)

Dynamic range: Minimum 85 dB (1 kHz, AWTD, 16 bits)
Minimum 93 dB (1 kHz, AWTD, 24 bits)

Distortion factor: 0.1% or less (1 kHz, standard level,
16 bits)
0.05% or less (1 kHz, standard level
24 bits)

Headroom: 18/20 dB (selectable with menu)

◆ Note

Time mentioned above is for when recording continuously as one clip. Total recording time may be shorter than the above mentioned time depending on the number of clips recorded.

For the latest information on P2 cards not available in the operating Instructions, visit the P2 Support Desk at the following Web sites.

<http://pro-av.panasonic.net/>

Input/output Unit

<p>GENLOCK IN: BNC×1, 1.0 V [p-p], 75 Ω (This is available as the return video input connector, which can be switched in the menu.)</p> <p>SDI OUT : BNC×1</p> <p>HD: 0.8 V [p-p], 75 Ω (Compliant with the SMPTE292M/299M standards)</p> <p>SD: 0.8 V [p-p], 75 Ω (Compliant with the SMPTE259M-C/272M-A/ITU-R. BT656-4 standards)</p> <p>MON OUT: BNC×1 (It can be switched among HD-SDI/SD-SDI/Composite.)</p> <p>HD: 0.8 V [p-p], 75 Ω</p> <p>SD: 0.8 V [p-p], 75 Ω (Compliant with the SMPTE259M-C/272M-A/ITU-R. BT656-4 standards)</p> <p>Composite: 1.0 V [p-p], 75 Ω</p> <p>TC IN: BNC×1, 0.5 V [p-p] to 8 V [p-p], 10 kΩ</p> <p>TC OUT: BNC×1, low impedance, 2.0 ± 0.5 V [p-p]</p> <p>SDI-IN : BNC×1 (This is available as the VIDEO IN connector/the return video input connector/the GENLOCK IN connector, which can be switched in the menu.)</p> <p>HD: 0.8 V [p-p], 75 Ω (SMPTE292M/299M standards)</p> <p>SD: 0.8 V [p-p], 75 Ω (SMPTE259M-C/272M-A/ITU-R. BT656-4 standards)</p>	<p>AUDIO IN CH1/CH2:</p> <p>XLR × 2, 3 pins LINE, MIC, and MIC +48 V switch-selectable</p> <p>LINE: 4 dBu (-3/0/4 dBu selectable with menu)</p> <p>MIC: -60 dBu (-60/-50 dBu selectable with menu)</p> <p>MIC + 48V: Compatible with +48V phantom power supply -60 dBu (-60/-50 dBu selectable with menu)</p> <p>MIC IN: XLR × 1, 5 pins +48 V phantom (ON/OFF selectable with menu) -40 dBu (-50/-40 dBu selectable with menu)</p> <p>WIRELESS IN: 25 pin D-SUB, -40 dBu</p> <p>AUDIO OUT CH1/CH2:</p> <p>XLR × 1, 5 pins, 4 dBu (-3/0/4 dBu selectable with menu) Balanced low-impedance output</p> <p>Headphones : Stereo mini jack × 2</p> <p>DC IN: XLR × 1, 4 pins, DC 12 V (DC 11 V - 17 V)</p> <p>DC OUT: 4 pins, DC 12 V (DC 11 V - 17 V) Maximum rated current: 1.5 A</p> <p>LENS: 12 pins</p> <p>LIGHT: 2 pins, DC 12 V (DC 11 V - 17 V) Maximum rated current: 4.5 A (Equivalent to 50 W)</p> <p>EVF: 20 pins</p> <p>REMOTE: 10 pins</p> <p>GPS: 6 pins</p> <p>USB version 2.0 : HOST: 4-pin, Type-A connector DEVICE: 4-pin, Type-B connector</p> <p>LCD monitor: 81.28 mm (3.2 inches) LCD color monitor, approximately 921,000 dots, (16:9)</p>
---	--

Accessories

Shoulder Strap
 F.AUDIO LEVEL control knob (with screw)
 CD-ROM
 Mount cap *
 AUDIO connector cap *
 XLR connector cap *
 GPS connector cap *

* These are initially attached to the product.

Weight and dimensions when shown are approximately.
 Specifications are subject to change without notice.

Information on software for this product

1. Included with this product is software licensed under the GNU General Public License (GPL) and GNU Lesser General Public License (LGPL), and users are hereby informed that they have the right to obtain, change and redistribute the source codes of this software.

To obtain the source codes, go to the following home page:

<http://pro-av.panasonic.net/>

The manufacturer asks users to refrain from directing inquiries concerning the source codes they have obtained and other details to its representatives.

2. Included with this product is software which is licensed under MIT-License.

3. This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org>).

4. This product includes software which is licensed under OpenBSD License.

5. This product includes PHP, freely available from <http://www.php.net/>.

6. This software is based in part on the work of the Independent JPEG Group.

Details on the above software can be found on the installation CD provided with the unit. Refer to the folder called "LDOC". (Details are given in the original (English language) text.)

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC.

See <http://www.mpegla.com>.

Index

Symbols

MENU !LED 180

Numerics

MENU 01 - 32 194, 197

MENU 25M REC CH SEL 190

MENU 2D LPF 167, 176

A

MENU A.IRIS LEVEL 186

MENU A.IRIS PEAK/AVE 186

MENU A.IRIS WINDOW 186

MENU A.KNEE LVL 175

MENU A.KNEE POINT 175

MENU A.KNEE RESPONSE 175

ABB 52

MENU ACCESS LED 163

MENU AREA SELECT 198

MENU AREA SET 198

MENU ASPECT 162

ATW 50

MENU ATW 180

MENU ATW SPEED 184

MENU AUDIO 180

MENU AUDIO LVL 179

MENU AUDIO OUT LVL 191

MENU AUDIO SMPL RES 162

MENU AUTO KNEE SW 184

MENU AUTO LVL CH3 (CH1) 189

MENU AUTO LVL CH4 (CH2) 189

MENU AUTO REC 163

Auto-tracking white balance 50

MENU AWB A GAIN OFFSET 169

MENU AWB A TEMP 185

MENU AWB AREA 184

MENU AWB B 184

MENU AWB B GAIN OFFSET 169

MENU AWB B TEMP 185

B

MENU B (PHASE) 171

MENU B (SAT) 170

MENU B FLARE 169

MENU B GAIN AWB A 169

MENU B GAIN AWB B 169

MENU B GAIN AWB PRE 169

MENU B GAMMA 175

MENU B PEDESTAL 169

MENU B.GAMMA 180

MENU B.GAMMA RANGE 171, 172, 173

MENU BACKLIGHT 167

MENU BATT END ALARM 187

MENU BATT NEAR END ALARM 187

MENU BATT NEAR END CANCEL 187

MENU BATT REMAIN FULL 187

MENU BATTERY 179

Battery Pack 108

MENU BATTERY SELECT 187

MENU B-Cy (PHASE) 171

MENU B-Cy (SAT) 170

Black Balance 52

MENU BLACK GAMMA 171, 172, 173

MENU BRIGHTNESS 167

C

CAC 104

MENU CAC 179, 180

MENU CAC CONTROL 197

MENU CAC FILE DELETE 197

MENU CAC FILE NO. 197

MENU CAM OPE MENU R/W 193

MENU CAM SOFT 197

MENU CAM TABLE 197

MENU CAMERA ID 179

MENU CAMERA MODE 162, 179

MENU CARD CONFIG 193

MENU CARD END ALARM 187

MENU CARD FILE SELECT 194

MENU CARD NEAR END ALARM 187

MENU CARD NEAR END TIME 187

MENU CARD REMAIN/■ 187

MENU CENTER MARK 165, 166, 178

MENU CHAR FPGA 197

MENU CHROMA LEVEL 175

Clip 118

Copying Clips 127

Deleting Clips 126

Playing back Clips 121

Reconnection of Incomplete Clips 127

Restoring Clips 126

MENU COLOR BARS 184

MENU COLOR CHECK 196

MENU COLOR CORRECT 171, 172, 173

MENU COLOR CORRECTION 180

MENU COLOR LEVEL 167

MENU COLOR TEMP 179

MENU COLOR TEMP PRE 185

MENU CONTRAST 167

MENU CORRECT 196

MENU COUNTRY 192

MENU Cy (PHASE) 171

MENU Cy (SAT) 170

MENU Cy-G (PHASE) 171

MENU Cy-G (SAT) 170

D

MENU D.ZOOM x2 184

MENU D.ZOOM x3 184

MENU D.ZOOM x4 184

MENU DATE/TIME 179

DC power supply 110

MENU DETAIL 167, 176

MENU DETECT TABLE 174

MENU DETECTION (DIG) 196

MENU DEVICE NODE 192

MENU DIONIC160 188

MENU DIONIC90 188

MENU DISP CONDITION 177

MENU DISP MODE 177

Display Window 28

MENU DNR 176

MENU DOWNCON MODE	167
DRS	55
MENU DRS	179
MENU DRS EFFECT DEPTH	175
MENU DRS MODE	175
MENU DS.GAIN	180, 185
MENU DS.GAIN OFF	184
MENU DTL CLIP	173
MENU DTL CORING	167, 171, 172, 173
MENU DTL GAIN(+).	173
MENU DTL GAIN(-).	173
MENU DTL SOURCE	173

E

MENU ENDURA10	188
MENU ENG SECURITY	198
Error Codes	155
MENU EXT DC IN SELECT	187
MENU EXTENDER	179

F

F.AUDIO LEVEL control	59, 117
MENU F16 ADJ	196
MENU F2.8 ADJ	196
MENU FAN MODE	198
MENU FILE NO.	194
MENU FILTER	179, 180
MENU FILTER INH	184
Firmware	199
MENU FIRST REC TC	192
MENU FLARE	176
MENU FMUC FPGA	197
MENU FRAME LVL	178
MENU FRAME MARK	166, 178
MENU FRAME RATE UB	198
MENU FRAME SIG	166, 178
MENU F-REC BLACK STR LVL	176
MENU F-REC DYNAMIC LVL	176
MENU FRONT MIC LEVEL	191
MENU FRONT MIC POWER	191
MENU FRONT VR CH1 (CH3)	189
MENU FRONT VR CH2 (CH4)	189
MENU FUNCTION	180

G

MENU G (PHASE)	171
MENU G (SAT)	170
MENU G FLARE	169
MENU G PEDESTAL	169
MENU GAIN	179
MENU GAIN(0dB)	180
MENU GAMMA	176
MENU GAMMA MODE	179
MENU GAMMA MODE SEL	175
GENLOCK	61
MENU GENLOCK	168
MENU GL PHASE	168
MENU G-YI (PHASE)	171
MENU G-YI (SAT)	170

H

MENU H MATRIX TABLE	170
MENU H PHASE COARSE	168

MENU H PHASE FINE	168
MENU H.DTL FREQ	167, 171, 172, 173
MENU H.DTL LEVEL	167, 171, 172, 173
MENU HEADROOM	191
MENU H-F COMPE	176
MENU HI-COLOR LVL	175
MENU HI-COLOR SW	175
Hot-Swap recording	10
MENU HYTRON140	188

I

MENU I CENTER	174
MENU I WIDTH	174
MENU ID POSITION	179
MENU ID READ/WRITE	193
MENU ID1	181
MENU ID2	181
MENU ID3	181
MENU INTERVAL REC HOLD	164
MENU INTERVAL REC MODE	164
Interval Recording	39
MENU IRIS	179
MENU IRIS GAIN	186
MENU IRIS GAIN VALUE	186

K

MENU KNEE APE LVL	173
MENU KNEE MASTER POINT	174
MENU KNEE MASTER SLOPE	174

L

MENU L MATRIX TABLE	170
MENU LCD SOFT	197
Lens	111
MENU LENS B FLARE	196
MENU LENS B GAIN OFFSET	196
Lens file	99
MENU LENS FILE ADJ MODE	196
MENU LENS G FLARE	196
MENU LENS R FLARE	196
MENU LENS R GAIN OFFSET	196
MENU LEVEL DEPEND	171, 172, 173
MENU LIMITER CH1	190
MENU LIMITER CH2	190
MENU LIMITER CH3	190
MENU LIMITER CH4	190
MENU LOOP REC MODE	164
Loop Recording	39
MENU LOW LIGHT LVL	177
MENU LVL CONTROL CH3 (CH1)	189
MENU LVL CONTROL CH4 (CH2)	189

M

MENU M MATRIX TABLE	170
MENU MAIN OPE MENU R/W	193
MENU MAINTEN MENU R/W	193
MENU MANUAL KNEE	174
MENU MARKER SW	165
MENU MARKER CHAR LVL	177
MENU MASTER DTL	173
MENU MASTER GAIN	171, 172, 173
MENU MASTER GAMMA	171, 172, 173, 175
MENU MASTER PED	169, 174

MENU MATRIX.....	180
MENU MATRIX B-G.....	170
MENU MATRIX B-R.....	170
MENU MATRIX G-B.....	170
MENU MATRIX G-R.....	170
MENU MATRIX R-B.....	170
MENU MATRIX R-G.....	170
MENU MATRIX TABLE.....	170, 171, 172, 173
MENU MEM STORE NO.....	194
Menu Options.....	160
Meta Data.....	128
MENU Mg (PHASE).....	171
MENU Mg (SAT).....	170
MENU Mg-B (PHASE).....	171
MENU Mg-B (SAT).....	170
MENU MIC LOWCUT CH1.....	190
MENU MIC LOWCUT CH2.....	190
MENU MIC LOWCUT CH3.....	190
MENU MIC LOWCUT CH4.....	190
Microphone.....	114
MODE CHK.....	75
MENU MODEL NAME.....	197
MENU MONITOR OUT.....	165
MENU MONITOR OUT MODE.....	165
MENU MONITOR SELECT.....	191

N

Native Recording.....	37
-----------------------	----

O

ONE CLIP REC.....	42
MENU ONE CLIP REC MODE.....	165
ONE SHOT mode.....	41
MENU OPERATION.....	197
MENU ORGANIZATION.....	192
MENU OUTPUT ITEM.....	165

P

MENU P.OFF GPS DATA.....	163
MENU P.OFF LCD DISPLAY.....	192
MENU P.ON IND.....	180
MENU P.ON REC SLOT SEL.....	164
MENU P.ON TIMES.....	197
P2 Cards.....	32
Formatting a P2 Card.....	131
Inserting P2 Cards.....	32
P2 Card Status Display.....	134
Removing P2 Cards.....	33
Status of P2 cards.....	33
Writing data back to P2 cards.....	140
MENU P2CARD REMAIN.....	179
MENU P2CS AP.....	197
MENU P2CS BL2-1.....	197
MENU P2CS BL2-2.....	197
MENU P2CS KR.....	197
MENU PAG L95.....	188
MENU PAINT MENU LEVEL R/W.....	193
MENU PAINT MENU SW(■) R/W.....	193
MENU PAUSE TIME.....	164
MENU PC MODE.....	163
MENU PC MODE SELECT.....	163
MENU PEDESTAL OFFSET.....	169
Playback.....	45
MENU POSITION1.....	181

MENU POSITION1 SEL.....	182
MENU POSITION2.....	181
MENU POSITION2 SEL.....	182
MENU POSITION3.....	181
MENU POSITION3 SEL.....	182
MENU POSITION4.....	181
MENU POSITION4 SEL.....	182
MENU POSITION5.....	181
MENU POSITION5 SEL.....	182
MENU POSITION6.....	181
MENU POSITION6 SEL.....	182
MENU PQCNT FPGA.....	197
MENU PRE REC MODE.....	164
MENU PRE REC TIME.....	164
MENU P-REC/i-REC.....	180
PRE-RECORDING.....	38
Pull-down recording.....	37
MENU PULSE FPGA.....	197

Q

MENU Q PHASE.....	174
MENU Q WIDTH.....	174

R

MENU R (PHASE).....	171
MENU R (SAT).....	170
MENU R FLARE.....	169
MENU R GAIN AWB A.....	169
MENU R GAIN AWB B.....	169
MENU R GAIN AWB PRE.....	169
MENU R GAMMA.....	175
MENU R PEDESTAL.....	169
MENU R.SELECT.....	193
MENU RC CHECK SW.....	184
MENU RC MENU DISP.....	177
MENU READ FACTORY DATA.....	195
MENU READ USER DATA.....	195
MENU REAR LINE IN LVL.....	191
MENU REAR MIC CH1/3 LVL.....	191
MENU REAR MIC CH2/4 LVL.....	191
MENU REAR MIC POWER.....	191
MENU REAR XLR AUTO CH1/2.....	189
MENU REAR XLR AUTO CH3/4.....	189
MENU REC FORMAT.....	162, 179
MENU REC REVIEW REGEN.....	192
MENU REC SIGNAL.....	162
MENU REC START.....	164
MENU REC STATUS.....	180
MENU REC TALLY.....	163
MENU REC TIME.....	164
Recording formats.....	48
Recording level.....	58
Recording Review.....	44
MENU RET SW.....	183
MENU RETURN SIGNAL.....	168
MENU R-Mg (PHASE).....	171
MENU R-Mg (SAT).....	170

S

MENU S.BLK LVL.....	184
MENU S.GAIN.....	185
MENU S.GAIN OFF.....	184
MENU S.IRIS LEVEL.....	186
MENU SAFETY AREA.....	166, 178

MENU SAFETY MARK	166, 178
MENU SAVE LED	180
MENU SCAN REVERSE	162
Scene File	96
MENU SCENE SEL	195
SD memory cards	91
To format an SD memory card	92
To insert an SD memory card	91
To remove the SD memory card	91
MENU SDI EDH	163
MENU SDI METADATA	163
MENU SDI OUT CHAR	165
MENU SDI OUT MODE	165
MENU SEEK SELECT	163
MENU SELF SHOOT	167
MENU SERIAL NO.	197
MENU SETUP	162, 167
MENU SHD.ABB SW CTL	184
MENU SHOCKLESS AWB	184
Shot Mark	46
MENU SHOT MARK SW (USER3 SW)	183
MENU SHUTTER	179, 180
Shutter Modes	53
MENU SKIN DTL EFFECT	174
MENU SKIN TONE DTL	174
MENU SKIN TONE GET	174
MENU START DELAY	164
MENU START TEXT MEMO	163
MENU STATUS	180
MENU SYNCHRO SCAN	181
MENU SYNCHRO SCAN DISP.	177
SYNCHRO SCAN Mode	54
MENU SYSCON SOFT	197
MENU SYSTEM INFO	179
MENU SYSTEM MENU R/W	193
MENU SYSTEM MODE	162, 179
MENU SYSTEM MODE R/W	193

T

MENU TABLE	178
MENU TAKE TOTAL TIME	164
MENU TC	179
MENU TC DISP SEL	192
MENU TC MODE	191
MENU TC ON COLOR BAR	179
MENU TC OUT	192
MENU TC VIDEO SYNCRO	192
MENU TCG SET HOLD	192
MENU TEMP PRE SEL SW	184
MENU TEST SAW	176
MENU TEST TONE	190
Text Memo	45
MENU TEXT MEMO SW (USER4 SW)	183
Thumbnail	119
Changing Thumbnails	123
Selecting Thumbnails	121
Switching the Thumbnail Display	122
MENU THUMBNAIL OUT	165
Time code	62
Time zone	66
MENU TITLE	194
MENU TITLE 1-4	195
MENU TITLE READ	193, 194
MENU TITLE SCROLL	194, 197
MENU TITLE1 - 8	193, 194
MENU TOTAL REC TIME	164
MENU TYPE A	188

MENU TYPE B	188
MENU TYPE C	188

U

MENU UB MODE	191
Updating	199
USB	136
MENU USER	192
User bits	64
MENU USER BOX	166, 178
MENU USER BOX H POS	166, 178
MENU USER BOX HEIGHT	166, 178
MENU USER BOX V POS	166, 178
MENU USER BOX WIDTH	166, 178
MENU USER MAIN SW	183
MENU USER MENU SELECT R/W	193
MENU USER SW STATUS	180
MENU USER1 SW	183
MENU USER2 SW	183

V

MENU V.DTL LEVEL	167, 171, 172, 173
Variable speed playback	45
MENU VERSION	197
MENU VF DTL	177
MENU VF MENU R/W	193
MENU VF MODE	165
MENU VF OUT	177
MENU VF/LCD CHAR	165
Viewfinder Display	76
MENU VITC UB MODE	192
MENU VR SELECT	189
MENU V-REC KNEE POINT	176
MENU V-REC KNEE SLOPE	176
MENU VUP	197
MENU VUP FS	197

W

MENU W.SELECT	193
MENU WHITE	179
MENU WHITE CLIP	174
MENU WHITE CLIP LVL	174
MENU WHITE PRESET	180
Wireless Receiver	114
MENU WIRELESS TYPE	191
MENU WIRELESS WARN	191
MENU WRITE USER DATA	195
Write-protect	33

Y

MENU Y MAX	174
MENU Y MIN	174
MENU YI (PHASE)	171
MENU YI (SAT)	170
MENU YI-R (PHASE)	171
MENU YI-R (SAT)	170

Z

MENU ZEBRA MONI	174
MENU ZEBRA SDI OUT	174
MENU ZEBRA VF	174
MENU ZEBRA1 DETECT	177
MENU ZEBRA2	177
MENU ZEBRA2 DETECT	177
MENU ZOOM LVL	179

Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.



Information on Disposal in other Countries outside the European Union

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Panasonic Corporation

Web Site: <http://panasonic.net>

Panasonic Solutions Company

3 Panasonic Way, Secaucus, NJ 07094 Tel: 877-803-8492

www.panasonic.com/broadcast e-mail: MediaProServices.PSC@us.panasonic.com

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3 Tel: 905-624-5010

Panasonic de México S.A. De C.V.

Casa Matriz: Moras No.313 Col. Tlacoquemecatl Del Valle Del.Benito Juárez México, D.F., C.P.03200

Tel: 55-5488-1000 Fax: 55-5575-6783

Panasonic Latin America, S.A.

P.O.Box 0816-03164 Panama, Republic of Panama Tel: +507-229-2955 Fax: 507-229-5352

Panasonic do Brasil Ltda.

Rua Cubatão, 320-6º andar-Paraíso CEP 04013-001- São Paulo -SP Tel: 11-3889-4000 Fax: 11-3889-4004

파나소닉 코리아 주식회사 (PKL)

서울특별시 서초구 서초동 1553-5 오피런스 17 층

서비스 문의 : 02-533-8452

<http://panasonic.kr>

パナソニック株式会社 AVCネットワークス社 システム事業グループ

〒 571-8503 大阪府門真市松葉町 2 番 15 号 ☎ (06) 6901-1161